 




# Mini Home Theater OWNER'S MANUAL

MODEL: FB162

FB162-A0U/D0U/X0U  
FBS162V

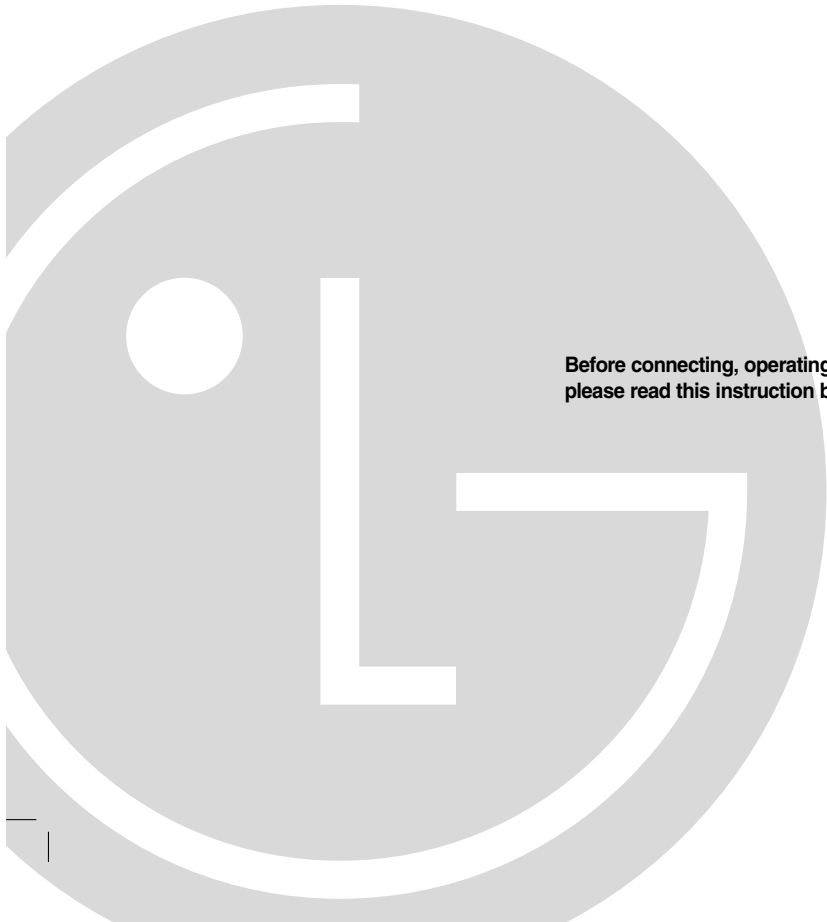

Before connecting, operating or adjusting this product,  
please read this instruction booklet carefully and completely.



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

 
**WARNING:** TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**WARNING:** Do not install this equipment in a confined space such as a book case or similar unit.

**CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating.

The openings should be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction have been adhered to.



**CAUTION:**

This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Should the unit require maintenance, contact an authorized service center.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM.

**CAUTION:** The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

**CAUTION concerning the Power Cord**

**Most appliances recommend they be placed upon a dedicated circuit;**

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire.

Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord

exits the appliance.

To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

This device is equipped with a portable battery or accumulator.

**Safe way to remove the battery or the battery from the equipment:** Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.



**Disposal of your old appliance**

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



LG Electronics hereby declares that this/ these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC, 2006/95/EC, and 2009/125/EC.

European representative:

LG Electronics Service Europe  
B.V.Veluwezoom 15, 1327 AE Almere, The Netherlands  
(Tel : +31-(0)36-547-8888)

|                         |    |
|-------------------------|----|
| <b>Introduction</b>     |    |
| Maintenance and Service | .3 |
| Before use              | .4 |
| Front Panel/Back Panel  | .5 |
| Remote Control          | .6 |

|                                       |     |
|---------------------------------------|-----|
| <b>Installation and Setup</b>         |     |
| TV Connection                         | .7  |
| Antenna (Aerial) Connections          | .7  |
| Auxiliary Function                    | .8  |
| Headphone Jack                        | .8  |
| Using Microphone                      | .8  |
| To Adjust ECHO Volume                 | .8  |
| USB Function                          | .9  |
| Compatible Devices                    | .9  |
| Speaker System Connection             | .9  |
| Setting the Clock                     | .10 |
| Timer Function                        | .10 |
| Sleep Timer Function                  | .10 |
| Displaying Disc Information on-screen | .11 |
| Initial Settings                      | .11 |
| General Operation                     | .11 |
| Language                              | .11 |
| Display                               | .12 |
| Audio                                 | .13 |
| Lock (Parental Control)               | .13 |
| Others                                | .14 |

|                                     |     |
|-------------------------------------|-----|
| <b>Operation</b>                    |     |
| General features                    | .15 |
| Additional features                 | .16 |
| Playing an Audio CD or MP3/WMA file | .17 |
| Programmed Playback                 | .17 |
| Viewing a JPEG file                 | .18 |
| Playing a DivX Movie file           | .19 |
| Presetting the Radio Stations       | .20 |
| Listening to the Radio              | .20 |
| RDS Operation - Optional            | .21 |
| Dimmer                              | .22 |
| Mute                                | .22 |
| Sound Mode                          | .22 |
| EQUALIZER Effect                    | .22 |
| DEMO                                | .22 |
| DISPLAY MODE                        | .22 |
| XDSS                                | .22 |
| MP3 Optimizer                       | .22 |
| XTS Pro                             | .22 |
| VIRTUAL sound                       | .22 |

|                  |        |
|------------------|--------|
| <b>REFERENCE</b> |        |
| Language Codes   | .23    |
| Area Codes       | .23    |
| Troubleshooting  | .24-25 |
| Specifications   | .26    |

## Maintenance and Service

Refer to the information in this chapter before contacting a service technician.

### Handling the unit

#### When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

#### Keeping the exterior surfaces clean

- Do not use volatile liquids such as insecticide spray near the unit.
- Do not leave rubber or plastic products in contact with the unit for a long period of time. since they leave marks on the surface.

#### Cleaning the unit

To clean the player, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution.

Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.

#### Maintaining the Unit

The unit is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality could be diminished.

Depending on the operating environment, regular inspection and maintenance are recommended after every 1,000 hours of use.

For details, please contact your nearest authorized service center.

**The manual largely contains detailed explanation items about how to operate the unit with the remote control.**

#### Precautions in using the touch buttons

- Use the touch buttons with clean and dry hands.
  - In a humid environment, wipe out any moisture on the touch buttons before using.
- Do not press the touch buttons hard to make it work.
  - If you apply too much strength, it can damage the sensor of the touch buttons.
- Touch the button that you want to work in order to operate the function correctly.
- Be careful not to have any conductive material such as metallic object on the touch buttons. It can cause malfunctions.


# Introduction

## Before use

To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference.

This manual provides information on the operation and maintenance of your unit. Should the unit require service, contact an authorized service location.

### About the Symbol Display

“” may appear on your TV display during operation and indicates that the function explained in this owner's manual is not available on that specific DVD video disc.

### Symbol Used in this Manual

#### Note:

Indicates special notes and operating features.







#### Tip:

Indicates tips and hints for making the task easier.

A section whose title has one of the following symbols is applicable only to the disc represented by the symbol.





Indicates hazards likely to cause harm to the unit itself or other material damage.

-  DVD and finalized DVD±R/RW
-  Audio CDs
-  MP3 files
-  WMA files
-  JPEG files
-  DivX files

*Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished works. Copyright 1992-1997 Dolby Laboratories. All rights reserved.*

## Types of Playable Discs

|  |                                 |
|--|---------------------------------|
|  | DVD<br>(8 cm / 12 cm disc)      |
|  | Audio CD<br>(8 cm / 12 cm disc) |

In addition, this unit can play a DVD±R/RW and CD-R or CD-RW that contains audio titles, MP3, WMA, JPEG or DivX files.

### Note:

- Depending on the conditions of the recording equipment or the CD-R/RW (or DVD±R/RW) disc itself, some CD-R/RW (or DVD±R/RW) discs may not be played on the unit.
- Do not attach any seal or label to either side (the labeled side or the recorded side) of a disc.
- Do not use irregularly shaped CDs (e.g., heart-shaped or octagonal). It may result in malfunctions.

 
### Regional Code

This unit has a regional code printed on the bottom of the unit. This unit can play only DVD discs labelled as the same as the rear of the unit or "ALL".


### Note on Regional Codes

- Most DVD discs have a globe with one or more numbers in it clearly visible on the cover. This number must match your DVD player's regional code or the disc cannot play.
- If you try to play a DVD with a different regional code from your player, the message "Check Regional Code" appears on the TV screen.

## Front Panel/ Back Panel

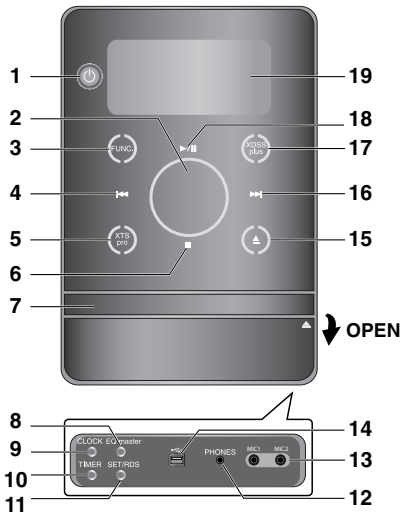


1. ⏻ (POWER)
2. VOLUME\*
3. FUNC. (FUNCTION)  
(FM, AM, DVD/CD, USB, AUX)
4. ⏮ (SKIP)  
TUN. (-) (TUNER)
5. XTS pro
6. ■ (STOP)  
MO./ ST. (MONO/ STEREO)
7. DISC TRAY
8. EQ master/ DEMO button
9. CLOCK button
10. TIMER button
11. SET/ RDS(OPTIONAL) button
12. PHONES  
(Headphone jack :  $\varnothing$  3.5mm)
13. MIC1/ MIC2 (MIC Jacks)
14. USB connector
15. ▲ (OPEN/CLOSE)
16. ⏭ (SKIP)  
TUN. (+) (TUNER)
17. XDSS plus / (MP3 Optimizer)
18. ▶|| (PLAY/PAUSE)
19. Display window
20. Power cord

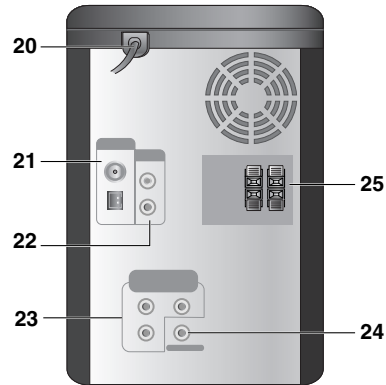 


21. Antenna terminal
22. AUX IN (Auxiliary input) connector
23. COMPONENT VIDEO OUT  
(PROGRESSIVE SCAN) connector (Y Pb Pr)
24. VIDEO OUT Jack
25. Speaker terminal

### \*VOLUME Adjustment

 

## Remote Control

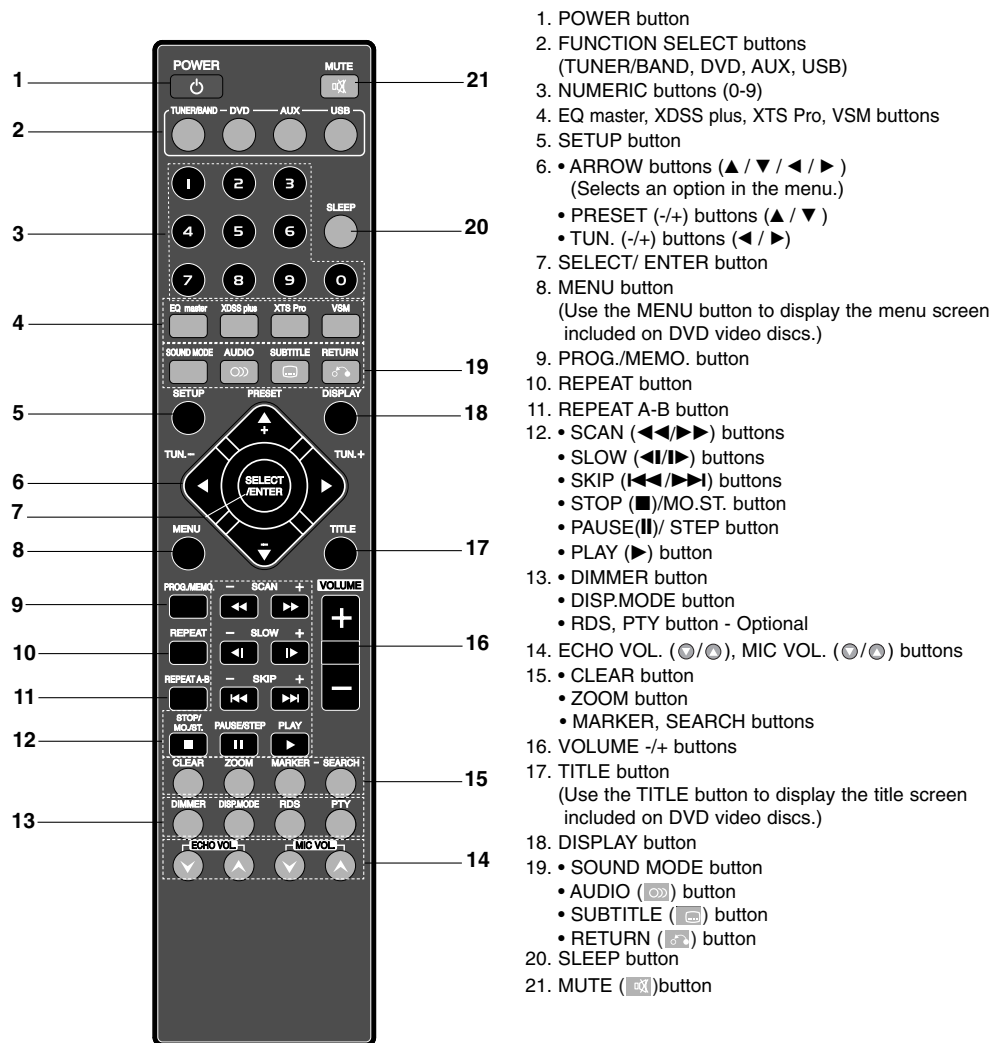 


1. POWER button
2. FUNCTION SELECT buttons (TUNER/BAND, DVD, AUX, USB)
3. NUMERIC buttons (0-9)
4. EQ master, XDSS plus, XTS Pro, VSM buttons
5. SETUP button
6. • ARROW buttons (▲ / ▼ / ◀ / ▶)  
(Selects an option in the menu.)
- PRESET (-/+) buttons (▲ / ▼)
- TUN. (-/+) buttons (◀ / ▶)
7. SELECT/ ENTER button
8. MENU button  
(Use the MENU button to display the menu screen included on DVD video discs.)
9. PROG./MEMO. button
10. REPEAT button
11. REPEAT A-B button
12. • SCAN (◀◀/▶▶) buttons
- SLOW (◀|▶) buttons
- SKIP (◀◀|▶▶) buttons
- STOP (■)/MO.ST. button
- PAUSE(⏸)/ STEP button
- PLAY (▶) button
13. DIMMER button
- DISP.MODE button
- RDS, PTY button - Optional
14. ECHO VOL. (◉/◉), MIC VOL. (◉/◉) buttons
15. CLEAR button
- ZOOM button
- MARKER, SEARCH buttons
16. VOLUME +/- buttons
17. TITLE button  
(Use the TITLE button to display the title screen included on DVD video discs.)
18. DISPLAY button
19. • SOUND MODE button
- AUDIO (🔊) button
- SUBTITLE (📄) button
- RETURN (🏠) button
20. SLEEP button
21. MUTE (🔇) button

### Remote Control Operation Range

 Point the remote control at the remote sensor and press the buttons.

- **Distance:** About 23 ft (7 m) from the front of the remote sensor
- **Angle:** About 30° in each direction in front of the remote sensor



### Remote control battery installation

Remove the battery cover on the rear of the remote control, and insert two R03 (size AAA) batteries with + and - aligned correctly.



### Caution

Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.).

# Installation and Setup

## TV Connection

Make one of the following connections, depending on the capabilities of your existing equipment.

### Tip:

- Depending on your TV and other equipment you wish to connect, there are various ways you could connect the unit. Use one of the connections described below.
- Please refer to the manuals of your TV, VCR, Stereo System or other devices as necessary to make the best connections.

### Caution:

 
- Make sure the unit is connected directly to the TV. Select the correct AV input on your TV.
- Do not connect your unit to TV via your VCR. The DVD image could be distorted by the copy protection system.

### Video connection

Connect the VIDEO OUT jack from the unit to the VIDEO IN jack on the TV using the video cable supplied (V).

### Component Video connection

Connect the COMPONENT VIDEO OUT jacks from the unit to the corresponding jacks on the TV using an Y Pb Pr cable (C).

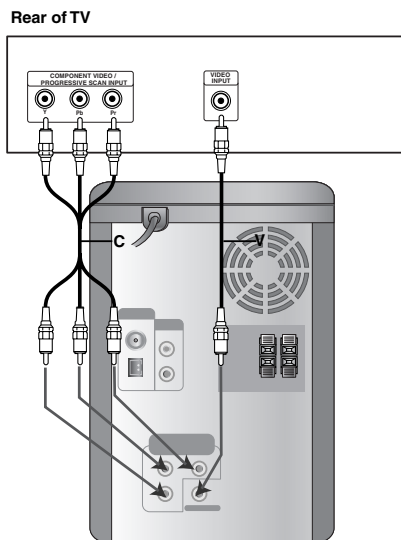


## Antenna (Aerial) Connections

Connect the supplied FM/AM antennas for listening to the radio.

### Note:

 - To prevent noise pickup, keep the AM loop antenna away from the unit and other components.
- Be sure to fully extend the FM wire antenna.
- After connecting the FM wire antenna, keep it as horizontal as possible.

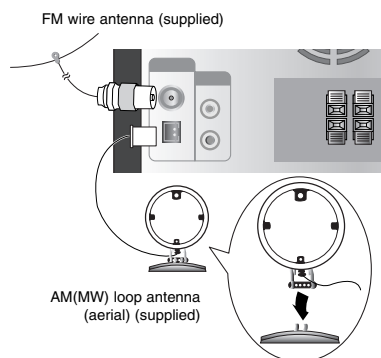


For AM(MW) reception, connect the loop antenna (aerial) to the terminal marked AM

## Auxiliary Function

 Connect an auxiliary device such as a TV or VCR via the rear mounted AUX connector and press **AUX** [Refer to the example image(1) shown below].

When you connect each end of the bundled portable in cable with both the AUX connector and the headphone jack of a portable device (like MP3 player, cassette tape player, CD player, etc.), you can hear the sound of the device through the speakers [Refer to the example image(2) shown below].

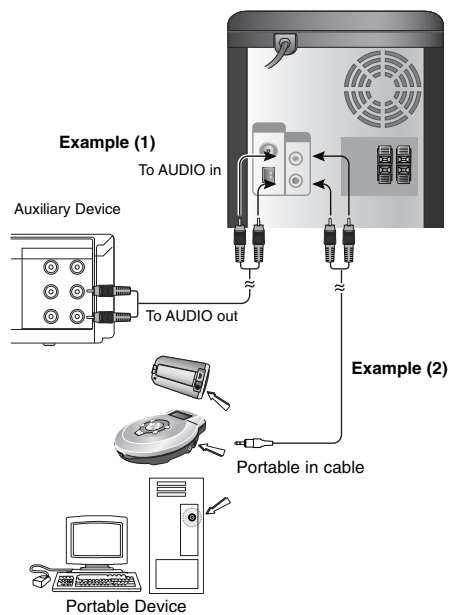

### Note:

Turn the unit off and then connect an auxiliary device before you connect an auxiliary device. Because it may be made a noise.

## Headphone Jack

Connect a stereo headphone plug (#3.5mm) into the headphone jack.

The speakers are automatically disconnected when you plug in the headphones (not supplied).

## Using Microphone

You can sing to a music source by connecting a microphone to the unit.

1. Connect your microphone to the MIC1/ MIC 2 Jacks.  
"🎤" will be shown in the display window.
2. Play a music you want.
3. Sing along with the accompaniment.  
Adjust the microphone volume by pressing **MIC VOL.** button. (MIN, 1 - 14, MAX steps)

### Note:

- When not using the microphone, set the **MIC VOL.** to minimum or turn off the MICs and remove the microphone from the MIC Jacks.
- If the microphone is set too near the speaker, a howling sound may be produced. In this case, move the microphone away from the speaker or decrease the sound level by using **MIC VOL.**
- If sound through the microphone is extremely loud, it may be distorted. In this case, decrease MIC volume.

## To Adjust ECHO Volume

 
You can give an echo effect to the sound from the microphones.

Press **ECHO VOL.** (🔊/🔇) on the remote control to increase the echo volume or decrease it. (MIN, 1 - 14, MAX steps)



## USB Function

You can enjoy the media files such as tunes (MP3/WMA/PHOTO/VIDEO file) saved in an MP3 player or USB memory by connecting the storage device to the USB port of this unit.

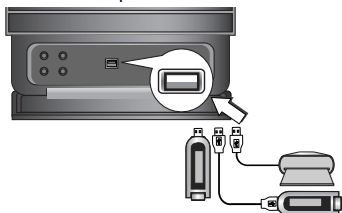

## Compatible Devices

1. Devices which require additional program installation when you have connected it to a computer, are not supported.
2. MP3 Player : Flash type MP3 player.
  - The MP3 player requiring installation of a driver is not supported.
3. USB Flash Drive : Devices that support USB2.0 or USB1.1.

### To Remove the USB from the unit

1. Choose the other functions except USB function in order to remove the USB.
2. Remove the USB from the unit.

#### **Note:**

If you want to operate other functions, see the CD Playback section. Refer to the page 15, 16, and 17.

#### **Note:**

 
- Do not extract the USB device in operating.
- A back up demands to prevent a data damage.
- If you use a USB extension cable or USB hub, the USB device might not be recognized.
- A device using NTFS file system is not supported. (Only FAT (16/32) file system is supported.)
- The USB function of this unit does not support all USB devices.
- Digital camera and mobile phone are not supported.
- This unit is not supported when the total number of files is 1000 or more.
- If the drive of USB device is two or more, a drive folder is displayed on the screen. If you want to move to the previous menu after you select a folder, press RETURN.

## Speaker System Connection

Connect the speaker cable to the speaker terminal.


#### **Note:**

- Be sure to match the speaker cable to the appropriate terminal on the components: + to + and - to -. If the cords are reversed, the sound will be distorted and will lack base.
- Connect the Left/ Right speaker correctly. If it reversed, the sound may be distorted.

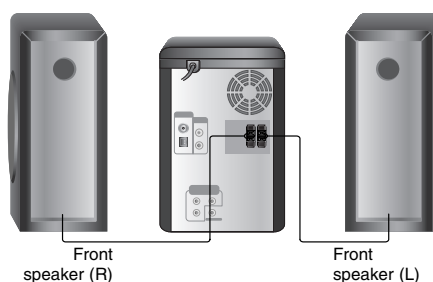

## Setting the Clock

 1. Turn the power on.
2. Press **CLOCK**.
3. Select a 24 hour time system or a 12 hour time system by tapping **◀◀/▶▶**.



4. Press **SET** to confirm the selected hour time system.
5. Tap **◀◀/▶▶** on the front panel to set the correct hours.
6. Press **SET**.
7. Tap **◀◀/▶▶** on the front panel to set the correct minutes.
8. Press **SET** and the correct time is shown on the display window.
9. Press **CLOCK** at any time to display the time for about 5 seconds.

### Note:

If you want to reset the clock, press and hold **CLOCK** for more than 2 seconds.

## Timer Function

With the **TIMER** function, you can have the radio reception, CD play and USB play turned on and off at the desired time.

1. Turn the power on.
2. Press **CLOCK** to check the current time. (If you don't set clock, the timer function doesn't work.)
3. Press **TIMER** to enter the timer setting mode. If you want to correct the previous memorized **TIMER** setting, press and hold the **TIMER** for more than 2 seconds.
  - The previously memorized timer on the time and "Ⓞ" indicator appears in the display window.
4. Each function (**TUNER** → **DVD/CD** → **USB**) flashes in the display window in turn. Press **SET** when the desired function is flashing.
5. a. When you select the **TUNER** function, select the previously memorized preset number by tapping **◀◀/▶▶** on the front panel and press **SET**.
  - "ON TIME" indicator appears for about 0.5 seconds in the display window and then disappears.
- b. When you select the **DVD/CD** or **USB** function,
  - "ON TIME" indicator appears for about 0.5 seconds in the display window and then disappears.
6. Set the hour to switch on by tapping **◀◀/▶▶** on the front panel.
7. Press **SET**.

8. Set the minute to switch on by tapping **◀◀/▶▶** on the front panel.
9. Press **SET**.
  - "OFF TIME" indicator appears for about 0.5 seconds in the display window and then disappears.
10. Set the hour to switch off by tapping **◀◀/▶▶** on the front panel.
11. Press **SET**.
12. Set the minute to switch off by tapping **◀◀/▶▶** on the front panel.
13. Press **SET**.
14. Adjust the volume level by tapping **◀◀/▶▶** on the front panel.
15. Press **SET**.
  - "Ⓞ" appears in the display window and the timer setting has been completed.
16. Press **TIMER** button 2times. You can check the setting status.

### Note:

- If you insert the DVD or DivX except audio CD/MP3/WMA on the unit, the timer function will be operated to the **TUNER**.
- If you set the clock time, you can check the time by pressing **CLOCK** even when the player is turned off.
- If you set the clock time and alarm, you can check the alarm icon by pressing **CLOCK** even when the player is turned off.

### To cancel or check the timer

Each time the **TIMER** is pressed you can select the timer set or cancel. You can also check the timer setting status.

To activate or check the timer, press the **TIMER** that "Ⓞ" appears in the display window.

To cancel the **TIMER**, press the **TIMER** that "Ⓞ" disappears in the display window.

## Sleep Timer Function

When the sleep timer is used, the power is automatically turned off after the specified time has elapsed.

1. Press **SLEEP** to set the desired sleep time. The **SLEEP** indicator and sleep time appears in the display window.
2. Each time you press **SLEEP** the setting changes in the following order.  
SLEEP 180 → 150 → 120 → 90 → 80 → 70 → 60 → 50 → 40 → 30 → 20 → 10 → OFF (No display)

### Note:

If you press **SLEEP** while the sleep time is displayed, the **SLEEP** time is reset.

### To cancel the sleep timer mode

If you have to stop the function, press the **SLEEP** repeatedly until "SLEEP 10" appears, and then press **SLEEP** once again while "SLEEP 10" is displayed.

## Displaying Disc Information On - screen

You can display various information about the disc loaded on-screen.

1. Press **DISPLAY** to show various playback information.  
The displayed items differ depending on the disc type or playing status.
2. You can select an item by pressing **▲ / ▼** and change or select the setting by pressing **◀ / ▶**.
  - Title (Track) – Current title (or track) number/ total number of titles (or tracks).
  - Chapter – Current chapter number/total number of chapters.
  - Time – Elapsed playing time.
  - Audio – Selected audio language or channel.
  - Subtitle – Selected subtitle.
  - Angle – Selected angle/ total number of angles.
  - Sound – Selected sound mode.

### Note:

If any button is not pressed for a few seconds, the on-screen display disappears.

## Initial Settings

By using the Setup menu, you can make various adjustments to items such as picture and sound. You can also set a language for the subtitles and the Setup menu, among other things. For details on each Setup menu item, see the pages 11 to 14.

### To display and exit the Menu:

Press **SETUP** to display the menu. A second press of **SETUP** will take you back to initial screen.

**To go to the next level:** Press **▶**.

**To go back to the previous level:** Press **◀**.

## GENERAL OPERATION

1. Press **SETUP**. The Setup menu appears.
2. Use **▲ / ▼** to select the desired option then press **▶** to move to the second level. The screen shows the current setting for the selected item, as well as alternate setting(s).
3. Use **▲ / ▼** to select the second desired option and then press **▶** to move to the third level.
4. Use **▲ / ▼** to select the desired setting then press **SELECT/ENTER** to confirm your selection. Some items require additional steps.
5. Press **SETUP** or **PLAY** to exit the Setup menu.

## LANGUAGE



### OSD

Select a language for the Setup menu and the on-screen display.

### Disc Audio / Subtitle / Menu

Select the language you prefer for the audio track (disc audio), subtitles, and the disc menu.

**Original** – Refers to the original language in which the disc was recorded.

**Other** – To select another language, press numeric buttons and then **SELECT/ENTER** to enter the corresponding 4-digit number according to the language code list on the page 23. If you enter the wrong language code, press **CLEAR**.

## DISPLAY



### TV Aspect

- 4:3** – Select when a standard 4:3 TV is connected.
- 16:9** – Select when a 16:9 wide TV is connected.

### Display Mode

The display Mode setting works only when the TV Aspect mode is set to "4:3".

- Letterbox** – Displays a wide picture with bands on the upper and lower portions of the screen.
- Panscan** – Automatically displays the wide picture on the entire screen and cuts off the portions that do not fit.

### Progressive Scan

Progressive Scan Video provides the highest quality pictures with less flickering.

If you are using the COMPONENT VIDEO OUT jacks, but are connecting the unit to a standard (analog) television, set Progressive Scan to Off.

If you are using the Component Video jacks for connection to a TV or monitor that is compatible with a progressive scan signal, set Progressive Scan to On.

#### To Turn ON progressive scan:

Connect component out of the unit to the input of your monitor/television, set your television or monitor to Component Input.

 
1. Select "Progressive Scan" on the DISPLAY menu then press **▶**.
2. Select "On" using **▲ / ▼**.
3. Pressing **SELECT/ENTER** will set the player to Progressive scan mode.

#### Caution:

Once the setting for progressive scan output is entered, an image will only be visible on a progressive scan compatible TV or monitor. If you set Progressive Scan to On in error, you must reset the unit. First, remove the disc in the unit. Next, press **STOP (■)** and hold it for five seconds before releasing it. The video output will be restored to the standard setting, and a picture will once again be visible on a conventional analog TV or monitor.

## AUDIO

Each DVD disc has a variety of audio output options. Set the unit's AUDIO options according to the type of audio system you use.

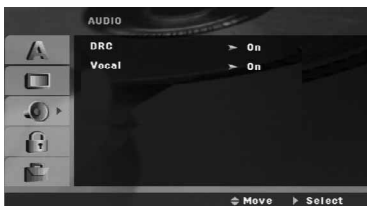

### Dynamic Range Control (DRC)

 
With the DVD\*1 format, you can hear a program's soundtrack in the most accurate and realistic presentation, thanks to digital audio technology. However, you may wish to compress the dynamic range of the audio output (the difference between the loudest sounds and the quietest ones). Then, you may listen to a movie at a lower volume without losing clarity of sound. Set DRC to On for this effect.

\*1: Dolby Digital only

### Vocal

Set Vocal to On only when a multi-channel karaoke DVD is playing. The karaoke channels on the disc will mix into normal stereo sound.

### LOCK (Parental Control)

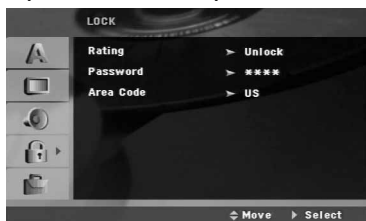

### Rating

Blocks playback of rated DVDs based on their contents. Not all discs are rated.

1. Select "Rating" on the LOCK menu then press **▶**.
2. To access the LOCK options, you must input the password you have created. If you have not yet entered password, you are prompted to do so. Input a password and press **SELECT/ENTER**. Enter it again and press **SELECT/ENTER** to verify. If you make a mistake before pressing **SELECT/ENTER**, press **CLEAR**.

3. Select a rating from 1 to 8 using **▲ / ▼**.

**Rating 1-8:** Rating one (1) has the most restrictions and rating eight (8) is the least restrictive.

**Unlock:** If you select unlock, parental control is not active and the disc plays in full.

4. Press **SELECT/ENTER** to confirm your rating selection, then press **SETUP** to exit the menu.

### Password

You can enter or change password.

1. Select "Password" on the LOCK menu and then press **▶**.
2. Follow the step 2 as shown above (Rating). To change the password, press **SELECT/ENTER** when the "Change" option is highlighted. Input a password and press **SELECT/ENTER**. Enter it again and press **SELECT/ENTER** to verify.
3. Press **SETUP** to exit the menu.

*If you forget your password*

If you forget your password, you can clear it using the following steps:

 
1. Press **SETUP** to display the Setup menu.
2. Input the 6-digit number "210499" and press **SELECT/ENTER**. The password is cleared.

### Area Code

Enter the code of the area whose standards were used to rate the DVD video disc, based on the list on page 23.

1. Select "Area Code" on the LOCK menu then press **▶**.
2. Follow the step 2 as shown previous paragraph (Rating).
3. Select the first character using **▲ / ▼**.
4. Press **▶** and select the second character using **▲ / ▼**.
5. Press **SELECT/ENTER** to confirm your Area code selection.

## OTHERS

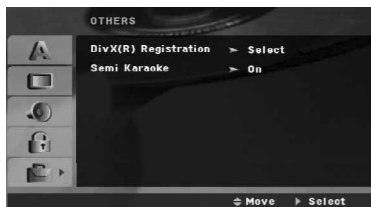

### DivX(R) Registration

We provide you the DivX® VOD (Video On Demand) registration code that allows you to rent and purchase videos based on the DivX® VOD service. For more information, visit [www.divx.com/vod](http://www.divx.com/vod).

1. Select "DivX(R) Registration" option and then press ►.
2. Press **SELECT/ENTER** while "Select" is selected and the registration code will appear. Use the registration code to purchase or rent the videos from DivX® VOD service at [www.divx.com/vod](http://www.divx.com/vod). Follow the instructions and download the video onto a disc for playback on this unit.
3. Press **SELECT/ENTER** to exit.

### **Note:**

All the downloaded videos from DivX® VOD can only be played back on this unit.

### Semi Karaoke

When a chapter/ title / track is fully finished ,this function shows the score in the screen with a fanfare sound.

- on** : Turn the "Semi Karaoke"function on. When you finished singing a score will appear on the screen.
- off** : Turn the " Semi Karaoke" function off. Fanfare and score do not appears on the screen

Available discs for the Semi Karaoke function:

- DVD discs
- DVD Karaoke Discs

### **Note:**

- This function operate on the DVD/CD mode.
- The Semi Karaoke function is available only when a microphone is connected.
- Watching movies, "off" the Semi Karaoke or enjoy it without connecting the MIC at the SET UP menu if the fanfare or score appears during changing a chapter.

# Operation

## General features

| Buttons            | Operations  | Discs                   |
|--------------------|---|-------------------------|
| ▲ (OPEN / CLOSE)   | Opens or closes the disc tray.  | ALL                     |
| ⏸ (PAUSE)          | During playback, press <b>⏸</b> to pause playback.<br>Press <b>⏸</b> repeatedly to play Frame-by-Frame.   | ALL<br>DVD DivX         |
| SKIP (⏮ / ⏭)       | During playback, press <b>SKIP</b> (⏮ or ⏭) to go to the next chapter/track or to return to the beginning of the current chapter/track.<br><br>Press <b>SKIP</b> ⏮ twice briefly to step back to the previous chapter/track.  | ALL                     |
| SCAN (◀ / ▶)       | During playback, press <b>SCAN</b> (◀ or ▶) repeatedly to select the required scan speed.<br>DVD : ◀◀, ◀◀◀, ◀◀◀◀, ◀◀◀◀◀, ◀◀◀◀◀◀ or<br>▶▶, ▶▶▶, ▶▶▶▶, ▶▶▶▶▶, ▶▶▶▶▶▶ or<br>DivX disc : ◀◀, ◀◀◀, ◀◀◀◀, ◀◀◀◀◀ or<br>▶▶, ▶▶▶, ▶▶▶▶, ▶▶▶▶▶ or<br>WMA/MP3, Audio CD : ◀◀(X2, X4, X8) or ▶▶(X2, X4, X8) | DVD MP3 DivX<br>ACD WMA |
| REPEAT             | During playback, press <b>REPEAT</b> repeatedly to select a desired repeat mode.<br>DVD Video discs: Chapter/Title/Off<br>Audio CD, DivX/MP3/WMA discs: Track/All/Off   | DVD MP3 DivX<br>ACD WMA |
| REPEAT A-B         | During playback, press <b>REPEAT A-B</b> to select a point A and a point B and repeats a sequence from point A (Starting point) to point B (End point).<br>Press <b>REPEAT A-B</b> to exit.   | DVD                     |
| ZOOM               | During playback or in the pause mode, press <b>ZOOM</b> to the video image (3 steps).<br>You can move through the zoomed picture using ◀▶▲▼.  | DVD                     |
| TITLE              | If the current DVD title has a menu, the title menu appears on the screen. Otherwise, the disc menu may appear.   | DVD                     |
| MENU               | The disc menu appears on the screen.  | DVD                     |
| ⏴ (SUBTITLE)       | During playback, press <b>SUBTITLE</b> repeatedly to select a desired subtitle language.  | DVD DivX                |
| ⏵ (AUDIO language) | During playback, press <b>AUDIO</b> repeatedly to hear a different audio language or audio track.   | DVD DivX                |
| SLOW               | In the pause mode, press <b>SLOW</b> (◀ or ▶) to select required speed.<br>DVD : ◀ (1/2, 1/4, 1/8, 1/16) or ▶ (1/2, 1/4, 1/8, 1/16)   | DVD                     |

### Notes on general features:

- Zoom may not work on some DVDs.
- The A-B repeat function is available only in the current title.

## Additional features

### Time Search **DVD** **DivX**

To start playing at any chosen time on the disc:

1. Press **DISPLAY** during playback.
2. Press **▲** / **▼** to select the time clock icon and "--:--:--" appears.
3. Input the required start time in hours, minutes, and seconds from left to right. If you enter the wrong numbers, press **CLEAR** to remove the numbers you entered. Then input the correct numbers.
4. Press **SELECT/ENTER** to confirm. Playback starts from the selected time.

### Marker Search **DVD** **DivX**

#### To enter a Marker

You can start playback from up to nine memorized points. To enter a marker, press **MARKER** at the desired point on the disc. The Marker icon appears on the TV screen briefly. Repeat to enter up to nine markers.

#### To Recall or Clear a Marked Scene

1. During disc playback, press **SEARCH**. The marker search menu appears on the screen.
2. Within 10 seconds, press **◀** / **▶** to select a marker number that you want to recall or clear.
3. Press **SELECT/ENTER** and playback starts from the marked scene. Or press **CLEAR** and the marker number is erased from the list.
4. You can play any marker by inputting its number on the marker search menu.

#### Screen Saver

The screen saver appears when you leave the unit in Stop mode for about five minutes.

### Last Scene Memory **DVD**

This unit memorizes the last scene from the last disc that is viewed. The last scene remains in the memory even if you remove the disc from the unit or switch off the unit. If you load a disc that has the scene memorized, the scene is automatically recalled.

#### Note:

This unit does not memorize the scene of a disc if you switch off the unit before commencing to play the disc.

### 1.5 speed playback

#### **DVD** **MP3** **WMA** **ACD**

You can quickly enjoy a music and movie.

The 1.5 speed allows you to watch the pictures and listen to the sound quicker than playing at a normal speed on the disc.

1. Press **PLAY** during the normal playback. The screen will appear at 1.5 speed with sound .
2. To return to the normal **PLAY**, press **PLAY**.

### System Select

You must select an appropriate system mode for your TV system. If NO DISC appears in the display window, press and hold **PAUSE/STEP** remote control for more than 5 seconds to be able to select a system (NTSC, PAL or AUTO).

- When the selected system is not compatible with the system of your TV, normal color picture may not be displayed.

**NTSC:** Select when the unit is connected with NTSC-TV.

**PAL:** Select when the unit is connected with PAL-TV.

**AUTO:** Select when the unit is connected with Multi system TV.



## Playing an Audio CD or MP3/WMA file

This unit can play Audio CDs or MP3/WMA files.

### MP3/ WMA/ Audio CD

Once you insert an MP3/WMA files recording media Audio CD, a menu appears on the TV screen.

Press ▲ / ▼ to select a track/file and then press **PLAY** or **SELECT/ENTER**, and playback starts. You can use variable playback functions. Refer to the page 15, 16.

### ID3 TAG

When playing a file containing information such as track titles, you can see the information by pressing **DISPLAY** repeatedly. The information [ Folder and file name, Song, Artist, Album, Genre, Comment, Time information ] of the MP3/WMA file will be shown in the display window and TV screen.

To move next or previous files, press the **SKIP** (◀◀ / ▶▶) button.

### Tip:

- Press **MENU** to move to the next page.
- On a CD with MP3/WMA and JPEG, you can switch MP3/WMA and JPEG. Press **TITLE**, and **MUSIC** or **PHOTO** word on top of the menu is highlighted.

### MP3 / WMA disc compatibility with this player is limited as follows:

- Sampling frequency: within 32 - 48 kHz (MP3), within 24 - 48kHz (WMA)
- Bit rate: within 32 - 320kbps (MP3), 40 - 192kbps (WMA)
- The unit cannot read an MP3/WMA file that has a file extension other than ".mp3" / ".wma".
- CD-R physical format should be ISO 9660
- If you record MP3 / WMA files using software that cannot create a file system (eg. Direct-CD) it is impossible to playback MP3 / WMA files. We recommend that you use Easy-CD Creator, which creates an ISO 9660 file system.
- File names should have a maximum of 8 letters and must incorporate an .mp3 or .wma extension.
- They should not contain special letters such as / ? \* : " < > | etc.
- The total number of files on the disc should be less than 999.

This unit requires discs and recordings to meet certain technical standards in order to achieve optimal playback quality. Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3 or WMA files) and these require certain pre-existing conditions (see above) to ensure compatible playback.

**Customers should note that permission is required in order to download MP3 / WMA files and music from the Internet. Our company has no right to grant such permission. Permission should always be sought from the copyright owner.**

## Programmed Playback

The program function enables you to store your favorite tracks from any disc in the unit memory. A program can contain 300 tracks.

1. Insert a disc.  
Audio CD and MP3/WMA discs:
2. Select a track on the "List", and then press **PROG.MEMO.** or select "⊕" (Add) icon and then press **SELECT/ENTER** to place the selected track on the "Program" list. Repeat to place additional tracks on the list.

### Note:

You can add all tracks in the disc. Select "⊕" (Add All) icon then press **SELECT/ENTER**.

3. Select the track you want to start playing on the "Program" list. Press **MENU** to move to the next page.
4. Press **PLAY** or **SELECT/ENTER** to start. Playback begins in the order in which you programmed the tracks. Playback stops after all of the tracks on the "Program" list have played once.
5. To resume normal playback from programmed playback, select a track of AUDIO CD (or MP3/WMA) list and then press **PLAY**.

### Repeat Programmed Tracks

1. Press **REPEAT** when playing a disc. The repeat icon appears.
2. Press **REPEAT** to select a desired repeat mode.
  - **TRACK**: repeats the current track
  - **ALL**: repeats all the tracks on programmed list.
  - **Off**(No display): does not play repeatedly.

### Erasing a Track from "Program" List

1. Use ▲ ▼ to select the track that you wish to erase from the Program list.
2. Press **CLEAR**. Alternatively, select "⊖" (Delete) icon then press **SELECT/ENTER** to place the selected track on the Program list. Repeat to erase additional tracks on the list.

### Erasing the Complete Program List

Use ▲ / ▼ to select "⊖" (Del all)" and then press **SELECT/ENTER**.

 
### Note:

The programs are also cleared when the disc is removed.

## Viewing a JPEG file

This unit can play discs with JPEG files.  
Before playing JPEG recordings, read the notes on JPEG Recordings on the right.

1. Insert a disc and close the tray.  
The PHOTO menu appears on the TV screen.

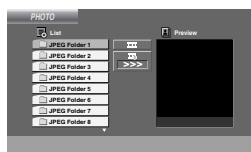

2. Press **▲** / **▼** to select a folder, and then press **SELECT/ENTER**. A list of files in the folder appears.  
If you are in a file list and want to return to the previous Folder list, use **▲** / **▼** to highlight **⏪**, and press **SELECT/ENTER** or **PLAY**.
3. If you want to view a particular file, press **▲** / **▼** to highlight a file and press **SELECT/ENTER** or **PLAY**. While viewing a file, you can press **STOP** to move to the previous menu (JPEG menu).

### Slide Show

Use **▲** **▼** **◀** **▶** to highlight the **⏮** (Slide Show) then press **SELECT/ENTER** or **PLAY**.

#### Tip:

- There are four Slide Speed options **⏮** :  
> (Slow), >> (Normal), >>> (Fast) and II (off).  
Use **▲** / **▼** / **◀** / **▶** to highlight the Speed. Then, use **◀** / **▶** to select the option you want to use and then press **SELECT/ENTER**.
- If you set Speed option to Off, the slide is not active.

### Still Picture

1. Press **PAUSE/STEP** during the slide show.  
The unit will now go into the PAUSE mode.
2. To return to the slide show, press **PLAY** or press **PAUSE/STEP** again.

### Moving to another File

Press **SKIP** (**⏮** or **⏭**) once during viewing a picture to advance to the next or previous file.

### Rotating the picture

Press **▲** / **▼** / **◀** / **▶** during showing a picture to rotate the picture clockwise or counter-clockwise.

### Zoom

Press the **ZOOM** repeatedly.

Zoom on **↔** Zoom off

Press **▲**, **▶** or **▶▶** to enlarge the video image.

Press **▼**, **◀** or **◀◀** to reduce the video image.

 
### JPEG file compatibility with this player is limited as follows:

- Depending upon the size and the number of JPEG files, it could take a long time for the unit to read the disc's contents. If you don't see an on-screen display after several minutes, some of the files may be too large — reduce the resolution of the JPEG files to less than 2M pixels as 2760 x 2048 pixels and burn another disc.
- The total number of files and folders on the disc should be less than 999.
- Some discs may not operate due to a different recording format or the condition of disc.
- Ensure that all the selected files have the ".jpg" extensions when copying into the CD layout.
- If the files have ".jpe" or ".jpeg" extensions, please rename them as ".jpg" file.
- File names without ".jpg" extension will not be able to be read by this unit. Even though the files are shown as JPEG image files in Windows Explorer.

## Playing a DivX Movie file

Using this unit you can play DivX file.

1. Insert a disc and close the tray. The MOVIE menu appears on the TV screen.

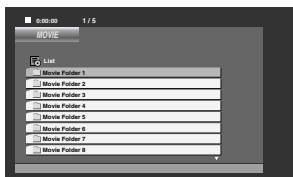

2. Press **▲** / **▼** to select a folder and then press **SELECT/ENTER**. A list of files in the folder appears. If you are in a file list and want to return to the Folder list, use **▲** / **▼** to highlight **Back** and press **SELECT/ENTER** or **PLAY**.
3. If you want to view a particular file, press **▲** / **▼** to highlight a file and press **SELECT/ENTER** or **PLAY**.
4. Press **STOP** to exit.

### Tip:

- Press **MENU** to move to the next page.
- On a CD with MP3/WMA, JPEG and MOVIE file, you can switch MUSIC, PHOTO and MOVIE menu. Press **TITLE** and MUSIC, PHOTO and MOVIE word on top of the menu is highlighted.

### Note:

- Be sure to select "SUBTITLE ON" mode by pressing the subtitle file every time before playing a DivX file .
- When the subtitle has more than two languages in the file, original subtitle is only available.
- You can not adjust sound mode and VIRTUAL sound during the DivX file playing.
- The DivX subtitle file name has to be identified with the DivX file name to display by this unit.

### Notice for displaying the Divx subtitle

If the subtitle does not display properly during playback, press and hold **SUBTITLE** for about 3 seconds then press **SUBTITLE** to select another language code until the subtitle is displayed properly

### DivX file compatibility with this player is limited as follows:

- Available resolution size of the DivX file is under 800x600 (W x H) pixel.
- The file name of the DivX subtitle is available by 45 characters.
- If there is impossible code to express in the DivX file, it may be displayed as " \_ " mark on the display.
- **If the number of the screen frame is over 30 per 1 second, this unit may not operate normally.**
- **If the video and audio structure of recorded files is not interleaved, either video or audio is outputted.**

### Playable DivX file

- ".avi ", ".mpg ", ".mpeg ", ".divx"

### Playable Subtitle format

SubRip(\*.srt/\*.txt)  
SAMI(\*.smi)  
SubStation Alpha(\*.ssa/\*.txt)  
MicroDVD(\*.sub/\*.txt)  
SubViewer 2.0(\*.sub/\*.txt)  
VobSub(\*.sub)

### Playable Codec format

- "DIVX3.xx ", "DIVX4.xx ", "DIVX5.xx ", "MP43 ", "3IVX "

### Playable Audio format

- "AC3 ", "PCM ", "MP3 ", "WMA "
- Sampling frequency: within 32 - 48 kHz (MP3), within 24 - 48kHz (WMA)
- Bit rate: within 32 - 320kbps (MP3), 40 - 192kbps (WMA)

## Presetting the Radio Stations

You can preset 50 stations for FM and AM. Before tuning, make sure that you have turned down the volume to the minimum.

1. Press **TUNER/BAND** to select the frequency (AM or FM) you want.
2. Select a station you want by pressing **TUN. (-/+)**.  
**Tuning in automatically**  
- Press **TUN. (-/+)** for more than 0.5 second. Scanning stops when the unit tunes in a stations.  
**Tuning in manually**  
- Press **TUN. (-/+)** briefly and repeatedly.
3. Press **PROG./MEMO.**  
A preset number will flash in the display window.
4. Press **PRESET (▲/▼)** to select the preset number you want.
5. Press **PROG./ MEMO.** again.  
The station is stored.
6. Repeat the steps 1 (or 2) to 5 to store other stations.

### To delete all the memorized stations

Press and hold **PROG./ MEMO.** for about two seconds, "ERASE ALL" appears in the display window and then **PROG./ MEMO.** again, the stations are deleted.

### For your reference

If all stations have already been entered, "FULL" message will appear in the display window for a moment and then a preset number will flash. To change the preset number, follow the steps 4-5.

### To recall presets

Press and hold **PRESET (▲/▼)** until the desired preset number appears or press it repeatedly.

## Listening to the Radio

1. Press **TUNER/BAND** to select the frequency (AM or FM) you want.  
The last received station is tuned in.
2. Press **PRESET (▲/▼)** repeatedly to select the preset station you want.  
- Each time you press the button, the unit tunes in one preset station at a time.
3. Adjust the volume by pressing **VOLUME (-/+)** repeatedly.

### To listen to non-preset radio stations

- For manual tuning, see "Tuning in manually" in the step 2 on left.
- For automatic tuning, see "Tuning in automatically" in the step 2 on left.

### To turn off the radio

Press **POWER** to turn the unit off or select another function mode (DVD/CD, USB, AUX).

### For your reference

- If an FM program is noisy;  
Press **MO./ ST.** that "MONO" appears in the display window. There will be no stereo effect, but the reception will be improved.  
Press **MO./ ST.** again to restore the stereo effect.
- To improve reception;  
Reposition the supplied antennas.

## RDS Operation - Optional

This unit is equipped with RDS (Radio Data System), which brings a wide range of information to FM radio. Now in use in many countries, RDS is a system for transmitting station call signs or network information, a description of station programme type text message about the station or specifics of musical selection and the correct time.

### RDS TUNING

When a FM station is tuned in and it contains RDS data, the unit will automatically display the station's call sign and the RDS indicator will light in the Display Window as well as indicators for the RDS services programme (PS), programme type recognition (PTY), Radiotext (RT) and Clock Time (CT) if transmitted by the station.

### RDS DISPLAY OPTIONS

The RDS system is capable of transmitting a wide variety of information in addition to the initial call sign that appears when a station is first tuned. In normal RDS operation the display will indicate the station name, broadcast network or call letters. Pressing **RDS** enables you to cycle through the various data types in the sequence:

**(PS → FREQUENCY → PTY → RT → CT)**

- **PS (Programme Service name)**- The name of the channel is shown in the Display Window.
- **PTY (Programme type recognition)**- The name of the programme type is shown in the Display Window.
- **RT (Radiotext)**- A "text" message contains special information from the broadcast station. Note that this message may scroll across the display to permit message.
- **CT (Time controlled by the channel)**- Enables the unit to receive the actual time and show it in the Display Window.

#### **Note:**

Some RDS stations may not choose to include some of these additional features. If the data required for the selected mode is not being transmitted, the Display Window will show a **PTY NONE, RT NONE, CT NONE, PS NONE** message.

## Programme Search (PTY)

A major benefit of RDS is its ability to encode broadcasts with Programme Type (PTY) codes that indicate the type of material being broadcast. The following list shows the abbreviations used to indicate each PTY along with an explanation of the PTY.

|          |                                 |
|----------|---------------------------------|
| NEWS     | News                            |
| AFFAIRS  | Current Affairs                 |
| INFO     | Information                     |
| SPORT    | Sports                          |
| EDUCATE  | Educational                     |
| DRAMA    | Drama                           |
| CULTURE  | Culture                         |
| SCIENCE  | Science                         |
| VARIED   | Varied Speech Programme         |
| POP M    | Popular Music                   |
| ROCK M   | Rock Music                      |
| EASY M   | Easy Listening Music            |
| LIGHT M  | Light Music                     |
| CLASSICS | Classical Music                 |
| OTHER M  | Other Music                     |
| WEATHER  | Weather Information             |
| FINANCE  | Financial Programmes            |
| CHILDREN | Children's Programmes           |
| SOCIAL   | Social Affairs Programmes       |
| RELIGION | Religious Broadcasts            |
| PHONE IN | Phone-In Programmes             |
| TRAVEL   | Travel and Touring              |
| LEISURE  | Leisure and Hobby               |
| JAZZ     | Jazz Music                      |
| COUNTRY  | Country Music                   |
| NATION M | National Music                  |
| OLDIES   | Oldies Music                    |
| FOLK M   | Folk Music                      |
| DOCUMENT | Documentary Programmes          |
| TEST     | Station Alarm Test Message      |
| ALARM !  | Emergency Broadcast Information |

You may search for a specific Programme Type (PTY) by following these steps:

1. Press **TUNER/BAND** to select FM mode.
2. Press **PTY**, the display will show the last PTY in use.
3. Press **PTY** repeatedly to select a desired PTY.
4. When the PTY is selected, press **TUN.(+/)**. The unit will go into an automatic search mode. When a station is tuned, the search will stop.

## Dimmer

This function will change the brightness of the display window on the front panel during in power-on status. Press the **DIMMER** repeatedly.

## Mute

Press **MUTE** to mute your unit. You can mute your unit in order, for example, to answer the telephone.

## Sound Mode

You can enjoy surround sound simply by selecting one of the pre-programmed sound fields according to the program you want to listen to (2 ch. sound only).

Press **SOUND MODE** repeatedly.  
BYPASS → ON STAGE → STUDIO → CLUB → HALL  
→ THEATER 1 → CHURCH → BYPASS...

### Note:

Initial sound mode is BYPASS.

## EQUALIZER Effect

You can choose 7 fixed sound impressions and adjust the BASS, MIDDLE and TREBLE.

- You can select a desired sound mode by using **EQ master**.

NORMAL → USER EQ → POP → CLASSIC  
↑ ↓  
JAZZ ← DRAMA ← ROCK

- Press **EQ master** to select USER EQ.
1. When USER EQ is displayed, press **SET**. "BASS 0" will appear the display window.
  2. Tap the **◀▶** on the front panel to select the setting you want (MIN, -4 ~ +4, MAX steps).
  3. Select the BASS, MIDDLE or TREBLE you want by tapping **▶/II** or **■** on the front panel.
  4. Adjust the MIDDLE and TREBLE as shown above.

## DEMO

Press **EQ master** on the front panel in power off state to demonstrate the function in the display window. To cancel it, press **POWER** or **EQ master** again.

## DISPLAY MODE

Whenever you press **DISP. MODE** (DISPLAY MODE), you can enjoy the spectrum change with 6 types in the display window.

## XDSS (Extreme Dynamic Sound System)

Press **XDSS plus** to reinforce treble, bass and the surround effect. The "XDSS ON" or "NORMAL" indicator lights.

DVD/DivX/Audio CD : XDSS ON ↔ NORMAL

MP3/WMA : XDSS ON → MP3 -- OPT ON  
→ NORMAL → XDSS ON ...

## MP3 Optimizer

This function is optimized for compressible MP3 file. It improves the bass sound to make sweet sound.

Each time you press **XDSS Plus**.

The setting changes in the following order.

XDSS ON → MP3 -- OPT ON → NORMAL

## XTS Pro

This unique sound quality developed by our technology creates the optimum sound for you to play the perfect playback of the original sound and to feel the living sound source.

Each time you press **XTS Pro** the setting changes in the following order.

XTS -- P ON ↔ NORMAL

### Note:

The XTS Pro function will not be operated when a headphone has been connected.

## VIRTUAL sound

Press **VSM** to set the VIRTUAL sound.

| Source  | Display | Effect        |
|---------|---------|---------------|
| 2.1 ch. | VIRTUAL | 3D STEREO     |
| 5.1 ch  | VIRTUAL | VIRTUAL sound |

### ● 3D STEREO

Realtime 3D positioned sound rendering technology with stereo sources, optimized for stereo speakers. Listeners may experience amazing virtual surround effects with their own multimedia players.

### ● VIRTUAL sound

A pending downmix technology converts 5.1 channel to 2 channel sound having directional information of audio. And it makes a 2 channel or 2.1 channel feel 5.1 channel sound.

# Reference

## Language Codes

Use this list to input your desired language for the following initial settings:  
Disc Audio, Disc Subtitle, Disc Menu.

| Language        | Code | Language         | Code | Language       | Code | Language   | Code |
|-----------------|------|------------------|------|----------------|------|------------|------|
| Abkhazian       | 6566 | Fiji             | 7074 | Lingala        | 7678 | Singhalese | 8373 |
| Afar            | 6565 | Finnish          | 7073 | Lithuanian     | 7684 | Slovak     | 8375 |
| Afrikaans       | 6570 | French           | 7082 | Macedonian     | 7775 | Slovenian  | 8376 |
| Albanian        | 8381 | Frisian          | 7089 | Malagasy       | 7771 | Somali     | 8379 |
| Ameharic        | 6577 | Galician         | 7176 | Malay          | 7783 | Spanish    | 6983 |
| Arabic          | 6582 | Georgian         | 7565 | Malayalam      | 7776 | Sudanese   | 8385 |
| Armenian        | 7289 | German           | 6869 | Maltese        | 7784 | Swahili    | 8387 |
| Assamese        | 6583 | Greek            | 6976 | Maori          | 7773 | Swedish    | 8386 |
| Aymara          | 6588 | Greenlandic      | 7576 | Marathi        | 7782 | Tagalog    | 8476 |
| Azerbaijani     | 6590 | Guarani          | 7178 | Moldavian      | 7779 | Tajik      | 8471 |
| Bashkir         | 6665 | Gujarati         | 7185 | Mongolian      | 7778 | Tamil      | 8465 |
| Basque          | 6985 | Hausa            | 7265 | Nauru          | 7865 | Tatar      | 8484 |
| Bengali; Bangla | 6678 | Hebrew           | 7387 | Nepali         | 7869 | Telugu     | 8469 |
| Bhutani         | 6890 | Hindi            | 7273 | Norwegian      | 7879 | Thai       | 8472 |
| Bihari          | 6672 | Hungarian        | 7285 | Oriya          | 7982 | Tibetan    | 6679 |
| Breton          | 6682 | Icelandic        | 7383 | Panjabi        | 8065 | Tigrinya   | 8473 |
| Bulgarian       | 6671 | Indonesian       | 7378 | Pashto, Pushto | 8083 | Tonga      | 8479 |
| Burmese         | 7789 | Interlingua      | 7365 | Persian        | 7065 | Turkish    | 8482 |
| Byelorussian    | 6669 | Irish            | 7165 | Polish         | 8076 | Turkmen    | 8475 |
| Cambodian       | 7577 | Italian          | 7384 | Portuguese     | 8084 | Twi        | 8487 |
| Catalan         | 6765 | Japanese         | 7465 | Quechua        | 8185 | Ukrainian  | 8575 |
| Chinese         | 9072 | Javanese         | 7487 | Rhaeto-Romance | 8277 | Urdu       | 8582 |
| Corsican        | 6779 | Kannada          | 7578 | Rumanian       | 8279 | Uzbek      | 8590 |
| Croatian        | 7282 | Kashmiri         | 7583 | Russian        | 8285 | Vietnamese | 8673 |
| Czech           | 6783 | Kazakh           | 7575 | Samoan         | 8377 | Volapük    | 8679 |
| Danish          | 6865 | Kirghiz          | 7589 | Sanskrit       | 8365 | Welsh      | 6789 |
| Dutch           | 7876 | Korean           | 7579 | Scots Gaelic   | 7168 | Wolof      | 8779 |
| English         | 6978 | Kurdish          | 7585 | Serbian        | 8382 | Xhosa      | 8872 |
| Esperanto       | 6979 | Laotian          | 7679 | Serbo-Croatian | 8372 | Yiddish    | 7473 |
| Estonian        | 6984 | Latin            | 7665 | Shona          | 8378 | Yoruba     | 8979 |
| Faroese         | 7079 | Latvian, Lettish | 7686 | Sindhi         | 8368 | Zulu       | 9085 |

## Area Codes

Choose a area code from this list.

| Area           | Code | Area                       | Code | Area                 | Code | Area            | Code |
|----------------|------|----------------------------|------|----------------------|------|-----------------|------|
| Afghanistan    | AF   | Ethiopia                   | ET   | Malaysia             | MY   | Saudi Arabia    | SA   |
| Argentina      | AR   | Fiji                       | FJ   | Maldives             | MV   | Senegal         | SN   |
| Australia      | AU   | Finland                    | FI   | Mexico               | MX   | Singapore       | SG   |
| Austria        | AT   | France                     | FR   | Monaco               | MC   | Slovak Republic | SK   |
| Belgium        | BE   | Germany                    | DE   | Mongolia             | MN   | Slovenia        | SI   |
| Bhutan         | BT   | Great Britain              | GB   | Morocco              | MA   | South Africa    | ZA   |
| Bolivia        | BO   | Greece                     | GR   | Nepal                | NP   | South Korea     | KR   |
| Brazil         | BR   | Greenland                  | GL   | Netherlands          | NL   | Spain           | ES   |
| Cambodia       | KH   | Heard and McDonald Islands | HM   | Netherlands Antilles | AN   | Sri Lanka       | LK   |
| Canada         | CA   | Hong Kong                  | HK   | New Zealand          | NZ   | Sweden          | SE   |
| Chile          | CL   | Hungary                    | HU   | Nigeria              | NG   | Switzerland     | CH   |
| China          | CN   | India                      | IN   | Norway               | NO   | Taiwan          | TW   |
| Colombia       | CO   | Indonesia                  | ID   | Oman                 | OM   | Thailand        | TH   |
| Congo          | CG   | Israel                     | IL   | Pakistan             | PK   | Turkey          | TR   |
| Costa Rica     | CR   | Italy                      | IT   | Panama               | PA   | Uganda          | UG   |
| Croatia        | HR   | Jamaica                    | JM   | Paraguay             | PY   | Ukraine         | UA   |
| Czech Republic | CZ   | Japan                      | JP   | Philippines          | PH   | United States   | US   |
| Denmark        | DK   | Kenya                      | KE   | Poland               | PL   | Uruguay         | UY   |
| Ecuador        | EC   | Kuwait                     | KW   | Portugal             | PT   | Uzbekistan      | UZ   |
| Egypt          | EG   | Libya                      | LY   | Romania              | RO   | Vietnam         | VN   |
| El Salvador    | SV   | Luxembourg                 | LU   | Russian Federation   | RU   | Zimbabwe        | ZW   |

## Troubleshooting

Check the following guide for the possible cause of a problem before contacting service.

| Symptom  | Cause   | Correction   |
|--|---|--|
| No power.  | <ul style="list-style-type: none"> <li>The power cord is disconnected.</li> </ul>   | <ul style="list-style-type: none"> <li>Plug the power cord securely into the wall outlet.</li> </ul>   |
| The power is on, but the unit does not work.               | <ul style="list-style-type: none"> <li>No disc is inserted.</li> </ul>  | <ul style="list-style-type: none"> <li>Insert a disc. (Check that the DVD or, audio CD indicator in the DVD display is lit.)</li> </ul>                    |
| No picture.  | <ul style="list-style-type: none"> <li>The TV is not set to receive DVD signal output.</li> </ul>                                       | <ul style="list-style-type: none"> <li>Select the appropriate video input mode on the TV so the picture from the unit appears on the TV screen.</li> </ul> |
|  | <ul style="list-style-type: none"> <li>The video cable is not connected securely.</li> </ul>  | <ul style="list-style-type: none"> <li>Connect the video cable into the jacks securely.</li> </ul>   |
|  | <ul style="list-style-type: none"> <li>The connected TV power is turned off.</li> </ul>   | <ul style="list-style-type: none"> <li>Turn on the TV.</li> </ul>  |
| There is no sound or only a very low-level sound is heard. | <ul style="list-style-type: none"> <li>The equipment connected with the audio cable is not set to receive DVD signal output.</li> </ul> | <ul style="list-style-type: none"> <li>Select the correct input mode of the audio receiver so you can hear the sound from the unit.</li> </ul>             |
|  | <ul style="list-style-type: none"> <li>The audio cables are not connected securely.</li> </ul>  | <ul style="list-style-type: none"> <li>Connect the audio cable into the jacks securely.</li> </ul>   |
|  | <ul style="list-style-type: none"> <li>The power of the equipment connected with the audio cable is turned off.</li> </ul>              | <ul style="list-style-type: none"> <li>Turn on the equipment connected with the audio cable.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>The audio connecting cable is damaged.</li> </ul>  | <ul style="list-style-type: none"> <li>Replace it with new one.</li> </ul>   |
| The playback picture is poor.                              | <ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>  | <ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>  |
| The unit does not start playback.                          | <ul style="list-style-type: none"> <li>No disc is inserted.</li> </ul>  | <ul style="list-style-type: none"> <li>Insert a disc. (Check that the DVD, or audio CD indicator in the DVD display is lit.)</li> </ul>                    |
|  | <ul style="list-style-type: none"> <li>An unplayable disc is inserted.</li> </ul>   | <ul style="list-style-type: none"> <li>Insert a playable disc. (Check the disc type, color system and Regional code.)</li> </ul>                           |
|  | <ul style="list-style-type: none"> <li>The disc is placed upside down.</li> </ul>   | <ul style="list-style-type: none"> <li>Place the disc with the playback side down.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>The disc is not placed within the guide.</li> </ul>  | <ul style="list-style-type: none"> <li>Place the disc on the disc tray correctly inside the guide.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>  | <ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>A menu is on the TV screen.</li> </ul>   | <ul style="list-style-type: none"> <li>Press the SETUP button to turn off the menu screen.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>The Rating level is set.</li> </ul>  | <ul style="list-style-type: none"> <li>Cancel the Rating function or change the rating level.</li> </ul>   |
| Loud hum or noise is heard.                                | <ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>  | <ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>The speakers and components are connected poorly.</li> </ul>                                     | <ul style="list-style-type: none"> <li>Connect the speakers and components securely.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>The unit is located too close to the TV.</li> </ul>  | <ul style="list-style-type: none"> <li>Move your TV away from the audio components.</li> </ul>   |



| Symptom                                    | Cause  | Correction   |
|--|--|--|
| Radio stations cannot be tuned in.         | <ul style="list-style-type: none"> <li>The antenna is positioned or connected poorly.</li> </ul>   | <ul style="list-style-type: none"> <li>Connect the antenna securely.</li> <li>Adjust the antennas and connect an external antenna if necessary.</li> </ul> |
|  | <ul style="list-style-type: none"> <li>The signal strength of the stations is too weak (when tuning in with automatic tuning).</li> </ul>                      | <ul style="list-style-type: none"> <li>Tune in the station manually.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>No stations have been preset or preset stations have been cleared (when tuning by scanning preset stations).</li> </ul> | <ul style="list-style-type: none"> <li>Preset the stations (page 20).</li> </ul>   |
| The remote control does not work properly. | <ul style="list-style-type: none"> <li>The remote control is not pointed at the remote sensor of the unit.</li> </ul>  | <ul style="list-style-type: none"> <li>Point the remote control at the remote sensor of the unit.</li> </ul>   |
|  | <ul style="list-style-type: none"> <li>The remote control is too far from the unit.</li> </ul>   | <ul style="list-style-type: none"> <li>Use the remote control within about 23 ft (7 m).</li> </ul>   |
|  | <ul style="list-style-type: none"> <li>There is an obstacle in the path of the remote control and the unit.</li> </ul>   | <ul style="list-style-type: none"> <li>Remove the obstacle.</li> </ul>   |
|  | <ul style="list-style-type: none"> <li>The batteries in the remote control are flat.</li> </ul>  | <ul style="list-style-type: none"> <li>Replace the batteries with new ones.</li> </ul>   |
| The front panel display is too dim.        | <ul style="list-style-type: none"> <li>Nothing is displayed on the front panel display.</li> </ul>   | <ul style="list-style-type: none"> <li>Press <b>DIMMER</b>.</li> </ul>   |

## Specifications

|                   |                                 |   |  |
|-------------------|---------------------------------|---|--|
| <b>General</b>    | Power supply                    | 200 - 240 V, 50/ 60 Hz  |  |
|                   | Power consumption               | 50 W  |  |
|                   | Net Weight                      | 3.31 kg   |  |
|                   | External dimensions (W x H x D) | 170 x 253 x 265 mm  |  |
|                   | Operating conditions            | Temperature: 5°C to 35°C, Operation status: Horizontal  |  |
|                   | Operating humidity              | 5 % to 85 %   |  |
| <b>CD/DVD</b>     | Laser                           | Semiconductor laser, wavelength 650 nm  |  |
|                   | Signal system                   | PAL 625/50, NTSC 525/60   |  |
|                   | Frequency response (audio)      | 40 Hz to 2 kHz  |  |
|                   | Signal-to-noise ratio (audio)   | More than 75 dB (1 kHz, NOP -3 dB, 20 kHz LPF/A-Filter)   |  |
|                   | Dynamic range (audio)           | More than 75 dB   |  |
|                   | Harmonic distortion (audio)     | 0.5 % (1 kHz, at 1W position) (20 kHz LPF)  |  |
| <b>Video</b>      | Video output                    | 1.0 V (p-p), 75 Ω, negative sync./ RCA jack x 1   |  |
|                   | COMPONENT VIDEO OUT             | (Y) 1.0 V (p-p), 75 ohms, negative sync, RCA jack x 1<br>(Pb)/(Pr) 0.7 V (p-p), 75 ohms, RCA jack x 1 |  |
| <b>Tuner</b>      | <b>FM</b>                       | Tuning Range  | 87.5 MHz to 108.0 MHz or 65.0 MHz to 74.0 MHz, 87.5 MHz to 108.0 MHz |
|                   |                                 | Intermediate Frequency  | 10.7 MHz   |
|                   |                                 | Signal-to Noise Ratio   | 60/55 dB (Mono)  |
|                   |                                 | Frequency Response  | 50 Hz to 10,000 Hz   |
| <b>AM</b><br>[MW] | Tuning Range                    | 522 kHz to 1,620 kHz or 520 kHz to 1,720 kHz  |  |
|                   | Intermediate Frequency          | 450 kHz   |  |
| <b>Amplifier</b>  | Stereo mode                     | 80 W + 80 W   |  |
|                   | Output Power                    | 80 W + 80 W   |  |
|                   | T.H.D                           | 0.5 %   |  |
|                   | Frequency Response              | 40 Hz to 20000 Hz   |  |
|                   | Signal-to-noise ratio           | 75 dB   |  |
| <b>Speakers</b>   | Type                            | 3 Way 3 Speaker   |  |
|                   | Impedance                       | 4 Ω   |  |
|                   | Frequency Response              | 70 Hz to 20,000 Hz  |  |
|                   | Sound Pressure Level            | 83 dB/W (1m)  |  |
|                   | Rated Input Power               | 80 W  |  |
|                   | Max. Input Power                | 160 W   |  |
|                   | Net Dimensions (W x H x D)      | 128 x 295 x 240 mm  |  |
| Net Weight        | 4.1 kg                          |   |  |

\* Designs and specifications are subject to change without notice.

P/NO : MFL37200111