



LG

Life's Good

OWNER'S MANUAL LCD TV / LED LCD TV

Please read this manual carefully before operating your set and retain it for future reference.

 


HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Separate purchase


Wall Mounting Bracket

LSW100B or
LSW100BG




(22/26/32LD3**,
32LD4**, 32LD5**, 32LD6**,
22/26/32LE5***,
32LE7***, 22/26LE6***,
32LE4***, 26/32LE3***)

 LSW200B or
LSW200BG




(37/42/47LD4**,
42/46LD5**, 37/42/47LD6**,
37/42/47LE5***, 37/42/47LE7***,
42/47LE8***, 42/47LE4***,
42/47LX6***)

 LSW200BX or
LSW200BXG



(47LX9***)

LSW400B or
LSW400BG or
DSW400B or
DSW400BG

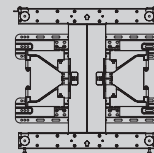

(52/60LD5**, 55LD6**,
55/60LE5***, 55LE7***,
55LE8***, 55LE4***,
55LX6***, 55LX9***)

Optional extras can be changed or modified for quality improvement without any notification. Contact your dealer for buying these items.

This device only works with compatible LG LED LCD TV or LCD TV.

Wireless Media Box



(Only 32/42/46/52/60LD5**,
32/37/42/47/55LD6**,
32/37/42/47/55LE53**,
32/37/42/47/55/60LE55**,
32/37/42/47/55LE7***, 42/47/55LE8***,
32/42LE45**, 42/47/55LX6**,
47/55LX9**, 32LE3**)

Wireless LAN for Broadband/ DLNA Adaptor



(Only 32/42/52LD56*,
32/37/42/47/55LD6**,
32/37/42/47/55/60LE55**,
32/37/42/47/55LE7***,
42/47/55LE8***, 42/47/55LX6**,
47/55LX9**)

CONTENTS

PREPARATION

Accessories	A-1
Front Panel Controls	A-4
Back Panel Information	A-10
Stand Installation	A-18
Woofer Installation :When Using the Wall Mount	A-23
Back Cover for Wire Arrangement	A-24
Attaching the TV to a Desk	A-25
Not Using the Desk-Type Stand	A-26
Swivel Stand	A-26
Positioning your Display	A-26
Connection of TV	A-27
Kensington Security System	A-27
Careful Installation Advice	A-28
Desktop Pedestal Installation	A-28
Wall Mount: Horizontal Installation	A-29
Remote Control Key Functions	A-30

EXTERNAL EQUIPMENT SETUP

Antenna Connection	1
Connecting with a Component Cable	2
Connecting with an HDMI Cable	3
Connecting with an HDMI to DVI Cable	4
Connecting with an RCA Cable	5
Connecting with an RF Cable	6
Headphone Setup	6
Digital Audio Out Setup	7
Connecting with a D-sub 15 Pin Cable	8
Usb Setup	8
External Equipment Wireless Connection	9
Supported Display Resolution	10
Screen Setup for PC mode	12
Network Setup	16

WATCHING TV / PROGRAMME CONTROL

Turning on the TV	26
Initializing Setup	26
Programme Selection	26
Volume Adjustment	26
Quick Menu	27
On Screen Menus Selection and Adjustment	28
Auto Programme Tuning	30
Manual Programme Tuning	31
Programme Edit	34
Software Update	38
Picture/Sound Test	42

Signal Test	43
Product/Service Information	44
Network Test	45
Simple Manual	46
Selecting the Programme List	47
Input List	49
Input Label	50
Data Service	51
SIMPLINK	52
AV Mode	55
Initializing(Reset to original factory settings)	56

NETCAST

Legal Notice	57
Netcast Menu	59
Movie Online	60
Weather info	62
Photo Album	63

TO USE THE BLUETOOTH

Bluetooth?	64
Setting the Bluetooth	65
Bluetooth headset	66
Remove the Bluetooth device	69
My Bluetooth Information	70
Receiving photos from external Bluetooth device	71
Listening to the Musics from external Bluetooth device	71

3D IMAGING

3D TECHNOLOGY	72
Viewing 3D Imaging	72
When using 3D Glasses	73
3D Imaging viewing range	73
Watching 3D Imaging	74

TO USE A USB DEVICE

When connecting a USB device	76
DLNA	78
Movie list	82
Photo list	93
Music list	100
DivX Registration Code	106
Deactivation	107

GAME

Game	108
------------	-----

CONTENTS

EPG(ELECTRONIC PROGRAMME GUIDE)(IN DIGITAL MODE)

Switch on/off EPG	110
Select a programme.....	110
Button Function in NOW/NEXT Guide Mode .	110
Button Function in 8 Day Guide Mode	111
Button Function in Date Change Mode	111
Button Function in Extended Description Box	112
Button Function in Remind Setting Mode	112
Button Function in Schedule List Mode	112

MHEG (MULTIMEDIA AND HYPERMEDIA INFORMATION CODING EXPERT GROUP)(IN DIGITAL MODE)

Teletext within Digital Service	113
Teletext in Digital Service.....	113
Switch on MHEG	114
Select a Programme	114
Button Function in Listing Mode	115
Button Function in NOW/NEXT Mode	115

PICTURE CONTROL

Picture Size (Aspect Ratio) Control	116
Picture Wizard.....	118
Energy Saving.....	119
Preset Picture Settings	120
Manual Picture Adjustment	121
Picture Improvement Technology.....	123
Expert Picture Control.....	124
Picture Reset.....	127
Trumotion	128
LED Local Dimming	129
Power Indicator	130
Mode Setting	131
Demo Mode.....	132

SOUND & LANGUAGE CONTROL

Auto Volume Leveler.....	133
Clear Voice II.....	134
Preset Sound Settings-Sound Mode	135
Sound Setting Adjustment -User Mode	136
Infinite Sound	136
Balance	137
TV Speakers On/ Off Setup	138

DTV Audio Setting (in digital mode only)	139
Selecting Digital Audio out	140
Audio Reset.....	141
I/II	
Stereo/Dual Reception (In Analogue Mode Only)	142
NICAM Reception (In Analogue Mode Only) ..	143
Speaker Sound Output Selection	143
On-Screen Menu Language / Country Selection...	144
Language Selection (In digital mode only)	145

TIME SETTING

Clock Setup.....	147
Auto on/off time setting	148
Sleep Timer setting	149

PARENTAL CONTROL / RATINGS

Set Password & Lock System.....	150
Block Programme.....	151
Parental Control (In Digital Mode only).....	152
External Input Blocking	153
Key Lock.....	154

TELETEXT

Switch on/off	155
SIMPLE Text.....	155
TOP Text.....	156
FASTEXT	156
Special Teletext Functions	157

APPENDIX


Troubleshooting.....	158
Maintenance.....	160
Product Specifications.....	161
IR Codes	175
External Control Device Setup.....	176
Open Source Software Notice	183

PREPARATION


ACCESSORIES

Ensure that the following accessories are included with your TV. If an accessory is missing, please contact the dealer where you purchased the TV.

Image shown may differ from your TV.

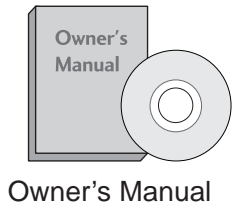

Owner's Manual

 

Batteries (AAA)



Remote Control

This item is not included for all models.



Polishing Cloth
Polishing cloth for use on the screen.

* Lightly wipe any stains or fingerprints on the surface of the TV with the polishing cloth.

Do not use excessive force. This may cause scratching or discolouration.



Power Cord

(Except for 32/37/42/47/55/60LE5***, 32/37/42/47/55LE7***, 42/47/55LE8***, 42/47/55LX6***, 47/55LX9***, 32/42/47/55LE4***, 32LE3***)




1-screw for stand fixing
(Refer to p. A-25)

(Only 26/32LD3**, 32/37/42LD4**, 32/42LD5**, 32/37/42LD6**, 32LE45**, 32/42/47/55LE46**, 32LE5***, 32LE7***, 32LE3***)

Only 22LD3**



Cable Tie
(Refer to p. A-24)

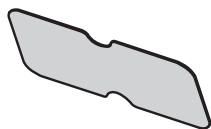


Protection Cover
(Refer to p. A-26)

 Only 26/32LD3**




 



x 8
(M4 X 20)

 Bolts for stand assembly
(Refer to p. A-18)


 





Protection Cover
(Refer to p. A-26)





 

 
 
PREPARATION

<p>Only 32/37/42/47LD4**</p>  x 8 (M4 X 20) Bolts for stand assembly (Refer to p. A-18)		 Protection Cover (Refer to p. A-26)	
<p>Only 32/42/46/52/60LD5**</p>  x 8 (M4 X 20) Bolts for stand assembly (Refer to p. A-18)		<p>(Only 32/42/52LD56*)</p>  Protection Cover (Refer to p. A-26)	
 Nero MediaHome 4 Essentials CD			


Only 22/26LE53**, 26LE3***

 x 4 (M4x14) Bolts for stand assembly (Refer to p. A-19)	 x 4 (M4x20) (Only 26LE53**, 26LE3***) Bolts for stand assembly (Refer to p. A-19)	 Cable Holder (Refer to p. A-25)	 AC/DC Adaptor (Refer to p. A-27)	 4-Ring spacers (Only 26LE53**, 26LE3***) (Refer to p. A-27)
---	--	--	--	--

Only 32/37/42/47/55LE53**, 32/42/47/55LE4**, 32LE3***

 x 4 (M4x22) (Only 32LE53**, 32LE45**, 32/42/47/55LE46**, 32LE3***)	 x 4 (M4x24) (Only 37/42LE53**, 42LE45**)	 x 4 (M4x26) (Only 47/55LE53**)	 x 4 (M4x16)	 x 2 Component gender cable, AV gender cable
Bolts for stand assembly (Refer to p. A-19 or A-22)				 Cable Holder (Refer to p. A-25)
<p>(Only 32/42/47/55LE46**)</p>  x 2 Woofer Pemnut (Refer to p. A-23)		 x 2 Woofer Fixing Screw (Refer to p. A-23)		


Only 32/37/42/47/55LD6**

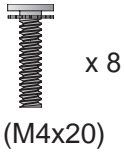

Bolts for stand assembly
(Refer to p. A-18)



 
Protection cover
(Refer to p. A-26)



Nero MediaHome
4 Essentials CD


Only 32/37/42/47/55/60LE55**, 32/37/42/47/55LE7***, 42/47/55LE8***, 42/47/55LX6***, 47/55LX9***

(Only 32/37/42/47LE55**,
32/37/42/47LE7***,
42/47LX6***)

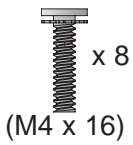


Bolts for stand assembly (Refer to p. A-20)

 
(Only 42/47/55LE8***)



(Only 55LE55**,
55LE7***, 55LX6***)

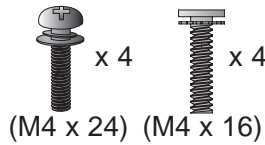


(Only 47/55LX9***)

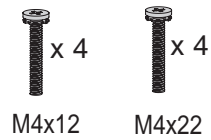

Bolts for stand assembly
(Refer to p. A-21)



cleansing cloths(mitt)
(Only 32/37/42/47/55LE7***)

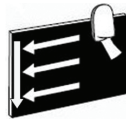


Slightly wipe stained spot on the exterior only with the cleansing cloths(mitt) for the product exterior if there is stain or fingerprint on surface of the exterior.


For cleaning front frame, please slowly wipe in one direction after spraying water 1~2 times on cleansing cloths. Please remove excessive moisture after cleaning. Excessive moisture may cause water stains on the frame.



 Cable Holder
(Refer to p. A-25)



Nero MediaHome
4 Essentials CD

 

Component gender cable,
AV gender cable

(Only 42/47/55LX6***)

 


3D Glasses

(Only 47/55LX9***)




3D Glasses




Stand Rear Cover

 Only 22/26LE6***



 Bolts for stand assembly
(Refer to p. A-21)



Cable Tie
(Refer to p. A-24)



AC/DC Adaptor
(Refer to p. A-27)

