



ENGLISH

DEUTSCH

FRANÇAIS

ITALIANO

NEDERLANDS

SLOVENŠČINA

# OWNER'S MANUAL

## DVD Player with Full HD up-scaling

Please read this manual carefully before operating your set and retain it for future reference.

DVX692H

P/NO : MFL63266735



# Safety Information



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**WARNING:** TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**WARNING:** Do not install this equipment in a confined space such as a book case or similar unit.

**CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.



**CAUTION:** This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center. Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. **DO NOT STARE INTO BEAM.**

### CAUTION concerning the Power Cord

Most appliances recommend they be placed upon a dedicated circuit;

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

This device is equipped with a portable battery or accumulator.

**Safety way to remove the battery or the battery from the equipment:** Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

**CAUTION:** The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

### Notes on Copyrights

- This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited.
- Under the U.S. Copyright laws and Copyright laws of other countries, unauthorized recording, use, display, distribution, or revision of television programs, videotapes, DVDs, CDs and other materials may subject you to civil and/or criminal liability.

### Disposal of your old appliance



1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

**CE** LG Electronics hereby declares that this/ these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC, 2006/95/EC, and 2009/125/EC.

European representative: LG Electronics Service Europe B.V. Veluwezoom 15, 1327 AE Almere. The Netherlands (Tel : +31-(0)36-547-8888)

### Notes on Discs

- Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints do not get on the surface. Never stick paper or tape on the disc.
- After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

### Notes on the Unit

- Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.
- To clean the unit, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzene, or thinner, as these might damage the surface of the unit.
- The unit is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality could be diminished. For details, please contact your nearest authorized service center.

# Table of Contents

## 1 Getting Started

---

- 3 Safety Information
- 6 Introduction
  - 6 – About the “Q” Symbol Display
  - 6 – Symbols Used in this Manual
  - 6 – Supplied Accessories
  - 6 – Playable Discs
- 7 – File compatibility
- 7 – Regional Code
- 8 Remote control
- 9 Front panel
- 9 Rear panel

## 2 Connecting

---

- 10 Connecting to your TV
  - 10 – Connecting Video / Audio cable
  - 10 – Connecting SCART cable
  - 10 – Connecting Component Video cable
  - 10 – Connecting HDMI cable
- 11 – Resolution Setting
- 12 Connecting to an Amplifier
  - 12 – Connecting Audio cable
  - 12 – Connecting COAXIAL or OPTICAL (digital audio) cable
- 12 – Connecting HDMI cable

## 3 System Setting

---

- 13 Settings
  - 13 – Adjust the Setup Settings
  - 13 – [LANGUAGE] Menu
  - 13 – [DISPLAY] Menu
  - 14 – [AUDIO] Menu
  - 14 – [LOCK] Menu
  - 14 – [OTHERS] Menu

## 4 Operating

---

- 15 General Playback
  - 15 – Playing a Disc
  - 15 – Playing a file
  - 15 – On-Screen display
- 16 – General operation
- 16 Advanced Playback
  - 16 – Movie
  - 17 – Music
  - 18 – Photo

## 5 Troubleshooting

---

- 19 Troubleshooting

## 6 Appendix

---

- 20 Area Code List
- 21 Language Code List
- 22 Specifications
- 22 Trademarks and Licenses

1

2

3

4

5

6

7

8






# Introduction

## About the “⊘” Symbol Display

 
“⊘” may appear on your TV display during operation and indicates that the function explained in this owner’s manual is not available on that specific media.

## Symbols Used in this Manual


A section whose title has one of the following symbols are applicable only to the disc or file represented by the symbol.

|   |                                       |
|---|---------------------------------------|
|  | DVD-Video, DVD±R/RW                   |
|  | Audio CDs                             |
|  | Video files contained in the USB/Disc |
|  | Audio files contained in the USB/Disc |
|  | Photo files contained in the USB/Disc |


## Supplied Accessories

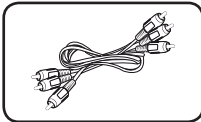

RCA Video/Audio cable (1)

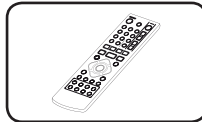 



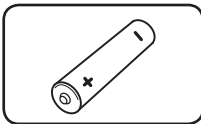 




Remote control (1)



Battery (1)

## Playable Discs

|   |   |
|---|---|
|  | DVD-VIDEO (8 cm / 12 cm disc)<br>Discs such as movies that can be purchased or rented.  |
|  | <ul style="list-style-type: none"> <li>- DVD±R (8 cm / 12 cm disc)</li> <li>- Video mode and finalized only</li> <li>- Supports the dual layer disc also</li> </ul>                     |
|  | <ul style="list-style-type: none"> <li>- DVD±R discs that contain Video, Audio or Photo files.</li> </ul>   |
|  | DVD-RW (8 cm / 12 cm disc) <ul style="list-style-type: none"> <li>- VR mode, Video mode and finalized only</li> <li>- DVD-RW discs that contain Video, Audio or Photo files.</li> </ul> |
|  | DVD+RW (8 cm / 12 cm disc) <ul style="list-style-type: none"> <li>- Video mode and finalized only</li> <li>- DVD+RW discs that contain Video, Audio or Photo files.</li> </ul>          |
|  | Audio CD (8 cm / 12 cm disc)  |
|  | CD-R/RW (8 cm / 12 cm disc) <ul style="list-style-type: none"> <li>- CD-R/RW discs that contain audio titles, Video, Audio or Photo files.</li> </ul>                                   |

### ! Note

You have to set the disc format option to [Mastered] in order to make the discs compatible with the players when formatting rewritable discs. When setting the option to Live System, you cannot use it on player. (Mastered/Live File System: Disc format system for windows Vista)

## File compatibility

### Overall

**Available File extensions:** “.avi”, “.mpg”, “.mpeg”, “.mp3”, “.wma”, “.jpg”, “.jpeg”

- The file name is limited to 35 characters.
- Depending on the size and number of the files, it may take several minutes to read the contents on the media.

**Maximum Files/Folder:** Less than 600 (total number of files and folders)

**CD-R/RW, DVD±R/RW Format:** ISO 9660

### Video Files

**Available resolution size:** 720 x 576 (W x H) pixels

**Playable subtitle:** SubRip (.srt/.txt), SAMI (.smi), SubStation Alpha (.ssa/.txt), MicroDVD (.sub/.txt), SubViewer 2.0 (.sub/.txt), TMPlayer (.txt), DVD Subtitle System (.txt)

**Playable Codec format:** “DIVX3.xx”, “DIVX4.xx”, “DIVX5.xx”, “MP43”, “XviD”, “3iVX”

**Playable Audio format:** “Dolby Digital”, “DTS” “PCM”, “MP3”, “WMA”

**Sampling frequency:** within 8 to 48 kHz (MP3), within 32 to 48 kHz (WMA)

**Bit rate (MP3/WMA/DivX):** within 8 to 320 kbps (MP3), within 32 to 192 kbps (WMA), less than 4 Mbps (DivX)

#### ! Note

This unit does not support files that are recorded with GMC<sup>1</sup> or Qpel<sup>2</sup>. Those are video encoding techniques in MPEG4 standard, like DivX have.

\*1 GMC – Global Motion Compensation

\*2 Qpel – Quarter pixel

### Audio Files

**Sampling frequency:** within 8 to 48KHz (MP3), within 32 to 48KHz (WMA)

**Bit rate:** within 8 to 320 kbps (MP3), within 32 to 192kbps (WMA)

## Photo Files

**Photo size:** Less than 2M recommended.

- Progressive and lossless compression photo image files are not supported.

#### ! Note of USB Device

- Do not extract the USB device during operation (play, etc.).
- A USB device which requires additional program installation when you have connected it to a computer, is not supported.
- USB device: USB device that supports USB1.1 and USB2.0.
- Movie, music and photo files can be played. For details of operations on each file, refer to relevant pages.
- Regular back up is recommended to prevent data loss.
- If you use a USB extension cable, USB HUB or USB Multi-reader, the USB device may not be recognized.
- Some USB device may not work with this unit.
- Digital camera and mobile phone are not supported.
- USB Port of the unit cannot be connected to PC. The unit cannot be used as a storage device.

 
## Regional Code

This unit has a regional code printed on the rear of the unit. This unit can play only DVD discs labeled same as the rear of the unit or “ALL”

1

Getting Started

# Remote control

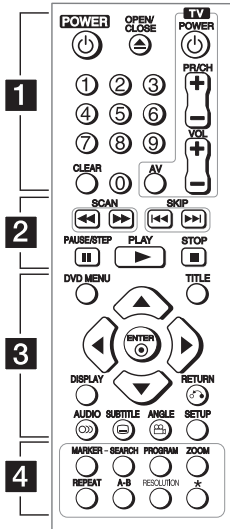

..... 1 .....

- POWER** (⏻): Switches the unit ON or OFF.
- OPEN/CLOSE** (⏮): Opens and closes the disc tray.
- Numerical buttons**: Selects numbered items in a menu.
- CLEAR**: Removes a track number on the Program List or the Marker Search menu.
- TV Control Buttons**: Control the sound volume, channel, sources, and power On/Off on TV.

..... 2 .....

- SCAN** (◀◀/▶▶): Searches backward or forward.
- SKIP** (◀◀◀/▶▶▶): Goes to the next or previous chapter / track / file.
- PAUSE/STEP** (⏸): Pauses playback.
- PLAY** (▶): Starts playback.
- STOP** (■): Stops playback.

..... 3 .....

- DVD MENU**: Accesses or exits the DVD menu.
- TITLE**: Accesses the disc's title menu, if available.
- ▲/▼/◀/▶**: Navigates the menus.

- ENTER** (⊙): Confirms menu selection.
- DISPLAY**: Accesses or exits On-Screen Display.
- RETURN** (↶): Moves backward or exit the menu.
- AUDIO** (🔊): Selects an audio language or audio channel.
- SUBTITLE** (🗣️): Selects a subtitle language.
- ANGLE** (📷): Selects a DVD camera angle, if available.
- SETUP**: Accesses or exits the setup menu.

..... 4 .....

- MARKER**: Marks any point during playback.
- SEARCH**: Displays MARKER SEARCH menu.
- PROGRAM**: Enters the program edit mode.
- ZOOM**: Enlarges video image
- REPEAT**: Repeats a chapter, track, title or all.
- A-B**: Repeats a section.
- RESOLUTION**: Sets the output resolution for HDMI OUTPUT and COMPONENT/PROGRESSIVE SCAN OUTPUT jack.
- \***: This button is not available.

## Battery Installation

Remove the battery cover on the rear of the Remote Control, and insert R03 (size AAA) battery with **+** and **-** matched correctly.

 
## Code number to control TVs:

While holding down TV POWER button, press the number buttons to select the Maker code for your TV (see the table below). Release TV POWER button.

| Maker    | Code Number   |
|----------|---------------|
| LG       | 1(Default), 2 |
| Zenith   | 1, 3, 4       |
| GoldStar | 1, 2          |
| Samsung  | 6, 7          |
| Sony     | 8, 9          |
| Hitachi  | 4             |




## Front panel

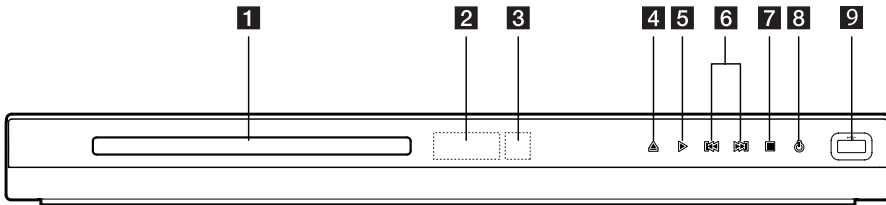

- |                         |                         |
|-------------------------|-------------------------|
| <b>1</b> Disc Tray      | <b>6</b> I◀◀/▶▶I (Skip) |
| <b>2</b> Display Window | <b>7</b> ■ (Stop)       |
| <b>3</b> Remote Sensor  | <b>8</b> ⏻ (Power)      |
| <b>4</b> ▲ (Open/Close) | <b>9</b> USB Port       |
| <b>5</b> ▶ (Play)       |                         |

## Rear panel

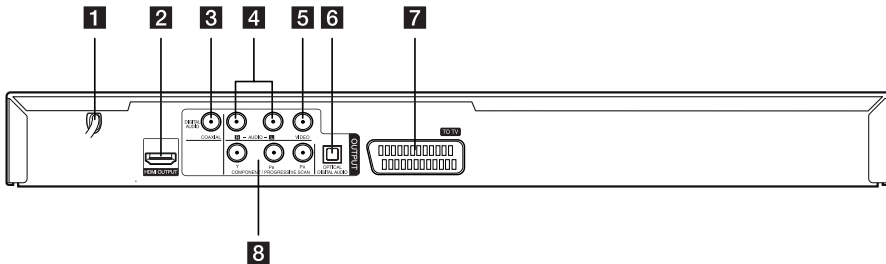 


- |   |  |
|---|--|
| <b>1</b> AC power cord                  | <b>5</b> VIDEO OUTPUT                                  |
| <b>2</b> HDMI OUTPUT                    | <b>6</b> DIGITAL AUDIO OUTPUT (OPTICAL)                |
| <b>3</b> DIGITAL AUDIO OUTPUT (COAXIAL) | <b>7</b> SCART (TO TV)                                 |
| <b>4</b> AUDIO OUTPUT (Left/Right)      | <b>8</b> COMPONENT / PROGRESSIVE SCAN OUTPUT (Y Pb Pr) |

## Connecting to your TV
 
### Connecting Video / Audio cable


Connect the VIDEO/AUDIO OUTPUT on the unit to VIDEO/AUDIO IN on TV with A/V cable, such as VIDEO with yellow, AUDIO Left/Right with white/red.

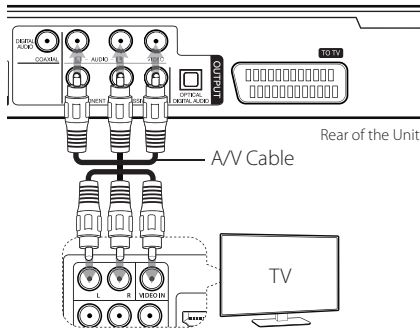

### Connecting SCART cable

Connect the TO TV jack on the unit and your TV using the SCART cable.

 
For SCART connections, resolution must be set to 576i(480i) by pressing RESOLUTION button.

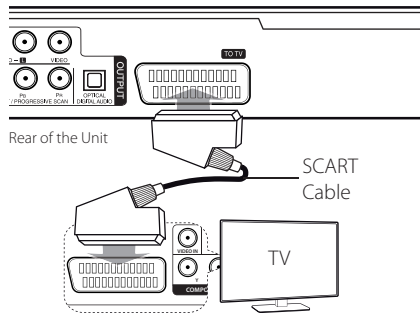

- You must set the [TV Output Select] option to [RGB] on the setup menu to use this connection.

### Connecting Component Video cable

 
Connect the COMPONENT/PROGRESSIVE SCAN OUTPUT jacks on the unit to the corresponding input jacks on the TV using Component video cable, such as Y with green, Pb with blue, and Pr with red.

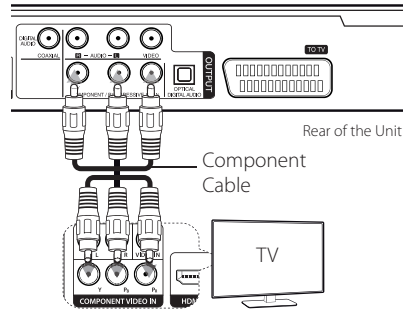

- You must set the [TV Output Select] option to [YPbPr] on the setup menu to use this connection.
- You should still connect the AUDIO cable between the unit and TV.

### Connecting HDMI cable

 Connect the HDMI OUTPUT on the unit to the HDMI IN on compatible TV with HDMI cable. (Type A, High Speed HDMI™ Cable)

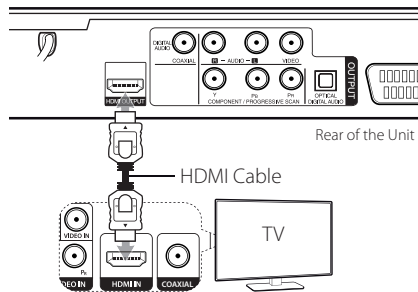

## Additional Information for HDMI

- When you connect a HDMI or DVI compatible device, make sure of the following:
  - Try switching off the HDMI/DVI device and this unit. Next, switch on the HDMI/DVI device and leave it for around 30 seconds, then switch on this unit.
  - The connected device's video input is set correctly for this unit.
  - The connected device is compatible with 720x576i(480i), 720x576p(480p), 1280x720p, 1920x1080i or 1920x1080p video input.
  - The 1080p, 720p and 576p(480p) resolutions are the progressive scan applied resolution.
- Not all HDCP-compatible DVI devices will work with this unit.
  - The picture will not be displayed properly with non-HDCP device.

## Resolution Setting

 
The unit provides several output resolutions for HDMI OUTPUT and COMPONENT / PROGRESSIVE SCAN OUTPUT jacks. You can change the resolution using RESOLUTION button.

- The unit is able to provide a 1080p full HD image to most 1080p-capable TVs in the market today. However, there are some 1080p TVs available from certain companies that are limited in the types of 1080p images that can be accepted. Specifically, 1080p-capable TVs that don't accept images in 60Hz can't display an image from this unit.
- For 720p, 1080p and 1080i resolution on the component / progressive scan output, only non-copy protected discs can be played back. If the disc is copy protected, it will be displayed at the 576p(480p) resolution.
- Depending on your TV, some of the resolution settings may result in the picture disappearing or an abnormal picture appearing. In this case, press RESOLUTION repeatedly until the picture re-appears.

## Connecting to an Amplifier


### Connecting Audio cable

Connect the AUDIO OUTPUT on the unit to 2CH AUDIO IN on amplifier with Audio cable, such as AUDIO Left/Right with white/red.

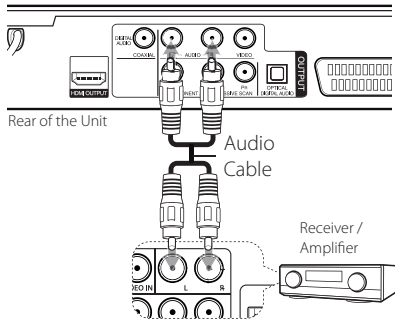

### Connecting COAXIAL or OPTICAL (digital audio) cable

 Connect one of the unit's DIGITAL AUDIO OUTPUT (COAXIAL or OPTICAL) jacks to the corresponding jack on your amplifier.

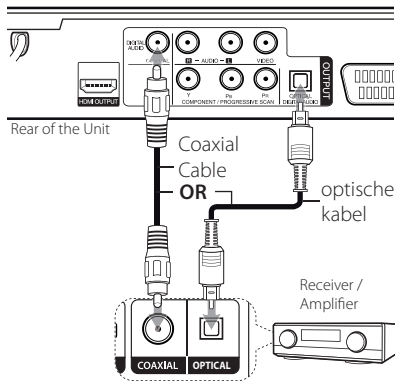

- If your TV is not capable of handling 96 kHz sampling frequency, set the [Sample Freq.] option to [48 kHz] on the setup menu.
- If your TV is not equipped with Dolby Digital and MPEG decoder, set the [Dolby Digital] and [MPEG] options to [PCM] on the setup menu.
- Changing the resolution when the unit is connected with HDMI connector may result in malfunctions. To solve the problem, turn off the unit and then turn it on again.

#### ! Note

 
- If the audio format of the digital output does not match the capabilities of your amplifier, the amplifier will produce a strong, distorted sound or no sound at all.
- To see the audio format of the current disc in the on-screen display, press AUDIO.
- This unit does not perform internal (2 channel) decoding of a DTS sound track. To enjoy DTS multi channel surround, you must connect this unit to a DTS compatible amplifier via one of this unit's digital audio outputs.

### Connecting HDMI cable

Connect the HDMI OUTPUT on the unit to the HDMI IN on amplifier with HDMI cable.

(Type A, High Speed HDMI™ Cable)

Connect the HDMI OUT jack on amplifier to HDMI IN jack on TV with HDMI cable, if the amplifier has HDMI OUTPUT jack.

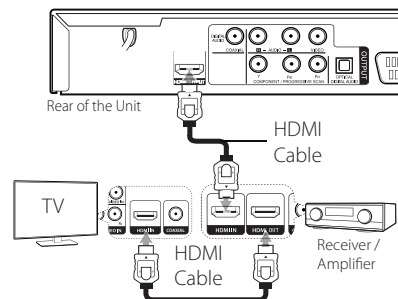

## Settings

When the unit is turned-on at the first time, you have to select the desired language.

### Adjust the Setup Settings

You can change the settings of the unit in the [Setup] menu.

1. Press SETUP.
2. Use ▲/▼ to select the first setup option, and press ► to move to the second level.
3. Use ▲/▼ to select a second setup option, and press ► to move to the third level.
4. Use ▲/▼ to select a desired setting, and press ENTER (⊙) to confirm your selection.

### [LANGUAGE] Menu

#### Menu Language

Select a language for the Setup menu and on-screen display.

#### Disc Audio/Subtitle/Menu

Select a language for the Disc Audio/Subtitle/Menu.

---

**[Original]:** Refers to the original language in which the disc was recorded.

---

**[Other]:** To select another language, press number buttons then ENTER (⊙) to enter the corresponding 4-digit number according to the language code list. (See page 21) If you make a mistake while entering number, press CLEAR to delete numbers then correct it.

---

**[Off]** (for Disc Subtitle): Turn off Subtitle.

---

### [DISPLAY] Menu

#### TV Aspect

Select which screen aspect to use based on the shape of your TV screen.

---

**[4:3]:** Select when a standard 4:3 TV is connected.

---

**[16:9]:** Select when a 16:9 wide TV is connected.

---

#### Display Mode

If you selected 4:3, you'll need to define how you would like widescreen programs and films to be displayed on your TV screen.

---

**[Letterbox]:** This displays a widescreen picture with black bands at the top and bottom of the screen.

---

**[Panscan]:** This fills the entire 4:3 screen, cropping the picture as necessary.

---

#### TV Output Select

Select an option according to the TV connection type.

---

**[RGB]:** When your TV is connected with the TO TV (SCART) jack.

---

**[YPbPr]:** When your TV is connected with the COMPONENT/PROGRESSIVE SCAN OUTPUT jacks on the unit.

---

## [AUDIO] Menu

### Dolby Digital / DTS / MPEG

Set the unit's Audio options according to various disc output type you use.

### Sample Freq. (Frequency)

Selects the sampling frequency of the audio signal between [48 kHz] and [96 kHz].

### DRC (Dynamic Range Control)

Make the sound clear when the volume is turned down (Dolby Digital only). Set to [On] for this effect.

### Vocal

Set to [On] only when a multi-channel karaoke DVD is playing. The karaoke channels on the disc mix into normal stereo sound.

## [LOCK] Menu

Firstly, you have to create the 4-digit password on [Area Code] to use the LOCK menu.

If you forget your password you can reset it. First, remove the disc in the unit. Display setup menu then input the 6-digit number "210499". The "P CLr" appear in the display window and the password is deleted.

### Rating

Select a rating level. The lower the level, the stricter the rating. Select [Unlock] to deactivate the rating.

### Password

Sets or changes the password for lock settings.

### Area Code

To input the standardized area code referring the Area Code List on page 20.

## [OTHERS] Menu

### B.L.E (Black Level Expansion)

To select the black level of playback pictures, set your preference and monitor's ability.

### REC Bitrate

You can choose a bit rate for USB direct recording. Higher bit rate gives the better sound quality but uses more space on the USB Flash Drive. For USB direct recording, see page 17.

### DivX(R) VOD

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit [divx.com](http://divx.com) for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.

---

**[Register]:** Displays the registration code of your unit.

---

**[Deregister]:** Deregister your unit and display the deregister code.

---

## General Playback

### Playing a Disc **DVD ACD**

1. Press OPEN/CLOSE (▲), and place a disc on the disc tray.
2. Press OPEN/CLOSE (▲) to close the disc tray  
For the most DVD-ROM discs, playback starts automatically.

For the Audio CD, select a track using ▲/▼/◀/▶, and press PLAY (▶) or ENTER (⊙) to play the track.

### Playing a file **MOVIE MUSIC PHOTO**







1. Press OPEN/CLOSE (▲) to place a disc on the disc tray, or connect the USB device.
2. Select a file using ▲/▼/◀/▶, and press PLAY (▶) or ENTER (⊙) to play the file.

|            |   |
|------------|---|
| RETURN (↶) | Changes between Disc and USB Device.      |
| TITLE      | Changes the mode. (Music → Photo → Movie) |

### On-Screen display **DVD MOVIE**

You can display and adjust various information and settings about the content.

1. While playback, press DISPLAY to show various playback information.
2. Select an option using ▲/▼.
3. Use ◀/▶ and numerical button to adjust the selected option value.
4. Press RETURN (↶) to exit the On-Screen display.

|  |   |
|--|---|
|  2/6                          | Current title number/total number of titles                       |
|  01/33                        | Current chapter number/total number of chapters                   |
|  C 0:01:44<br>T 1:51:39       | Elapsed playing time<br>Selected total time of current title/file |
|  1. ENG<br>D/C/D<br>3/2. 1 CH | Selected audio language or channel                                |
|  1. KOR                       | Selected subtitle   |
|  1/1                          | Selected angle/total number of angles                             |

## General operation

| To   | Do this  |
|--|--|
| <b>Playback</b>  | Press PLAY (▶)   |
| <b>Pause</b>   | Press PAUSE/STEP (⏸)   |
| <b>Stop</b>  | Press STOP (■)   |
| <b>Skip to the next or previous</b>                            | Press ◀◀ or ▶▶ during playback   |
| <b>Fast forward or fast reverse</b>                            | Press ◀◀ or ▶▶ during playback. (Press and hold ◀◀ or ▶▶ on the front panel)   |
| <b>Resume playback</b>   | <p>Press STOP (■) during playback to save the stopped point.</p> <ul style="list-style-type: none"> <li>• Press STOP (■) once:<br/>Displayed ⏸ on the screen (Resume Stop)</li> <li>• Press STOP (■) twice:<br/>Displayed ■ on the screen (Complete Stop)</li> </ul> |
| <b>Playback disc or USB device with several kinds of files</b> | Select the proper menu by continuously pressing TITLE as [MUSIC], [PHOTO], and [MOVIE].  |
| <b>System Select</b>   | You must select the appropriate system mode for your TV system. Remove any disc that might be in the unit, press and hold PAUSE/STEP (⏸) for more than five seconds to be able to select a system (PAL, NTSC).   |
| <b>Screen Saver</b>  | Leave the unit in Stop mode for about five minutes, then the screen saver appears. If the Screen Saver is displayed for five minutes, the unit automatically turns itself off.   |
| <b>Last Scene Memory</b>                                       | Turn off the unit, then the unit memorize the lastly viewed scene even if disc is inserted again after removal or unit is turned on after off with same disc. (DVD/ Audio CD only)   |

4

Operating

## Advanced Playback

### Movie **DVD** **MOVIE**

| To   | Do this   |
|--|---|
| <b>Display disc menu</b>                               | Press DVD MENU. (DVD Only)  |
| <b>Play repeatedly</b>                                 | <p>Press REPEAT during playback. To select an option to be repeated, Press REPEAT repeatedly.</p> <ul style="list-style-type: none"> <li>• DVD: Chapter/ Title/ Off</li> <li>• MOVIE: Track/ All/ Off</li> </ul>  |
| <b>Play frame-by-frame</b>                             | Press PAUSE/STEP (⏸) while Video file playback and press PAUSE/STEP (⏸) repeatedly to play Frame-by-Frame playback.   |
| <b>Repeat a specific portion</b>                       | Press A-B at the beginning of the portion you wish to repeat and again at the end of the portion. To return to normal playback, press A-B to select [Off].  |
| <b>Set the desired starting time of playback</b>       | <p>Searches for the starting point of entered time code. Press DISPLAY then select clock icon. Enter a time then press ENTER(⊙).</p> <p>For example, to find a scene at 1 hour, 10 minutes, and 20 seconds, enter "11020" and press ENTER(⊙).</p> <p>If you enter the wrong number, press CLEAR to enter again.</p> |
| <b>Mark a favorite scene</b>                           | Press MARKER at the desired position up to nine markers. Press SEARCH to recall or clear position. Use ◀ or ▶ to select a desired marker, then press ENTER(⊙) to recall it or CLEAR to clear it.  |
| <b>Change the subtitle code page (Video file only)</b> | <p>Press and hold SUBTITLE for 3 seconds during playback. The language code will appear.</p> <p>Press ◀ or ▶ to select another language code until the subtitle is displayed properly and then press ENTER (⊙)</p>  |



**Slow down the playing speed (Forward only)** While the playback is paused, press ►► repeatedly to play various speeds of slow motion. Press PLAY (▶) to continue play at normal speed.

**Watch an enlarged video** During playback or pause mode, press ZOOM repeatedly to select zoom mode.  
 ZOOM: 100% → 200% → 300% → 400% → 100%  
 ▲/▼/◀/▶: Move through the zoomed picture.

**Music** **ACD** **MUSIC**

| To   | Do this  |
|--|--|
| <b>Play repeatedly</b>                     | Press REPEAT during playback. To select an item to be repeated, Press REPEAT repeatedly.<br>• TRACK / ALL  |
| <b>Create or delete your own program</b>   | Press the PROGRAM to select desired file and then, <b>E</b> mark appears on screen.<br>Using ▲/▼ and ENTER (⊙) to add a music file(s) on the program list,<br>If you add desired music file(s), press PROGRAM to end edit program list.<br>To clear a music file(s) from the program list, select the music file you want to clear then press CLEAR in program edit mode.<br>To clear all music file(s) from the program list, select [Clear All] then press ENTER (⊙) in program edit mode. |
| <b>Display file information (ID3 TAG).</b> | While playing a MP3 file containing file information, you can display the information by pressing DISPLAY repeatedly.<br>• Depending on the MP3 files, information may not be displayed on the screen.   |

**Record the Audio CD to USB device** Connect USB Flash Drive to the unit before recording.  
 Insert an Audio CD, and then select a track using ▲/▼, DVD MENU, or numerical buttons.

- For track recording: Press AUDIO(⊙) in play, pause or resume stop mode.
- For all track recording: Press AUDIO(⊙) in complete stop mode.
- For program list recording: In stop mode, press AUDIO(⊙) after selecting a track on the program list.

**Note**

- If you use this function, the "CD\_REC" folder will be created automatically in the USB Flash Driver then the music file(s) is saved in it.
- If you remove USB Flash Drive, turn off or open the unit while recording, it can make a malfunction.
- If the remaining space on the USB Flash Drive is insufficient, the recording is not available. To increase the free space, delete files in it using your PC.
- CD-G disc and Audio CDs encoded in DTS cannot be recorded.
- External HDD, Multi Card reader, Multi Partition USB, Locked device and MP3 player are not supported.
- You can set the recording speed pressing AUDIO during USB direct recording.
  - X1 Track: While normal speed recording, you can listen to the music.
  - X4 Track: While 4X speed recording, you can not listen to the music.
- Recording format: MP3 file
- Encoding Bit rate: 128 Kbps / 160 Kbps / 192 Kbps / 256 Kbps / 320 Kbps

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

**Be responsible**  
**Respect copyrights**

## Photo **PHOTO**

| To                                       | Do this  |
|--|--|
| <b>View photo files as a slide show</b>  | Use ▲/▼/◀/▶ to highlight (III) icon then press ENTER (⊙) to start slide show.  |
| <b>Adjust slide show speed</b>           | You can change slide show speed using ◀/▶ when (III) icon is highlighted.  |
| <b>Rotate a photo</b>                    | Use ▲/▼ to rotate the photo in full screen counterclockwise or clockwise while viewing a photo in full screen.   |
| <b>Watch an enlarged Photo</b>           | While viewing a photo in full screen, press ZOOM repeatedly to select zoom mode.<br>ZOOM: 100% → 200% → 300% → 400% → 100%<br>▲/▼/◀/▶: Move through the zoomed photo.        |
| <b>Listen to music during slide show</b> | You can listen to music during slide show, if the disc contain music and photo files together. Use ▲/▼/◀/▶ to highlight (III) icon then press ENTER (⊙) to start slide show. |

# Troubleshooting

| Symptom                                      | Cause  | Solution  |
|--|--|---|
| No power                                     | The power cord is disconnected.  | Plug the power cord into the wall outlet securely.  |
| The power is on, but the unit does not work. | No disc is inserted.   | Insert a disc.  |
| The unit does not start playback.            | An unplayable disc is inserted.  | Insert a playable disc. (Check the disc type and regional code.)  |
|  | The rating level is set.   | Change the rating level.  |
| The remote control does not work properly.   | The remote control is not pointed at the remote sensor on the unit.                          | Point the remote control at the remote sensor of the unit.  |
|  | The remote control is too far from the unit.   | Operate the remote control closer to the unit.  |
| Poor picture quality and sound distortion    | Fingerprints and dust are stained on the disc.   | Wipe the disc from the center to out with a clean cloth. Do not use strong solvents. (alcohol, benzine, thinner, commercially available cleaners) |
| No picture                                   | The TV is not set to receive the signal from the unit.                                       | Select the appropriate video input mode on the TV.  |
|  | The video cable is not connected securely.   | Connect the video cable securely.   |
|  | The TV does not accept the resolution that is set on the unit.                               | Press RESOLUTION repeatedly to select appropriate resolution.   |
| No sound                                     | The equipment connected with the audio cable is not set to receive the signal from the unit. | Select the correct input mode of the audio amplifier.   |
|  | The AUDIO options are set to the wrong position.   | Set the AUDIO settings to the correct position.   |

## Area Code List

Choose an area code from this list.


| Area           | Code | Area          | Code | Area               | Code | Area            | Code |
|----------------|------|---------------|------|--------------------|------|-----------------|------|
| Afghanistan    | AF   | Fiji          | FJ   | Monaco             | MC   | Singapore       | SG   |
| Argentina      | AR   | Finland       | FI   | Mongolia           | MN   | Slovak Republic | SK   |
| Australia      | AU   | France        | FR   | Morocco            | MA   | Slovenia        | SI   |
| Austria        | AT   | Germany       | DE   | Nepal              | NP   | South Africa    | ZA   |
| Belgium        | BE   | Great Britain | GB   | Netherlands        | NL   | South Korea     | KR   |
| Bhutan         | BT   | Greece        | GR   | Antilles           | AN   | Spain           | ES   |
| Bolivia        | BO   | Greenland     | GL   | New Zealand        | NZ   | Sri Lanka       | LK   |
| Brazil         | BR   | Hong Kong     | HK   | Nigeria            | NG   | Sweden          | SE   |
| Cambodia       | KH   | Hungary       | HU   | Norway             | NO   | Switzerland     | CH   |
| Canada         | CA   | India         | IN   | Oman               | OM   | Taiwan          | TW   |
| Chile          | CL   | Indonesia     | ID   | Pakistan           | PK   | Thailand        | TH   |
| China          | CN   | Israel        | IL   | Panama             | PA   | Turkey          | TR   |
| Colombia       | CO   | Italy         | IT   | Paraguay           | PY   | Uganda          | UG   |
| Congo          | CG   | Jamaica       | JM   | Philippines        | PH   | Ukraine         | UA   |
| Costa Rica     | CR   | Japan         | JP   | Poland             | PL   | United States   | US   |
| Croatia        | HR   | Kenya         | KE   | Portugal           | PT   | Uruguay         | UY   |
| Czech Republic | CZ   | Kuwait        | KW   | Romania            | RO   | Uzbekistan      | UZ   |
| Denmark        | DK   | Libya         | LY   | Russian Federation | RU   | Vietnam         | VN   |
| Ecuador        | EC   | Luxembourg    | LU   | Saudi Arabia       | SA   | Zimbabwe        | ZW   |
| Egypt          | EG   | Malaysia      | MY   | Senegal            | SN   |                 |      |
| El Salvador    | SV   | Maldives      | MV   |                    |      |                 |      |
| Ethiopia       | ET   | Mexico        | MX   |                    |      |                 |      |

## Language Code List

Use this list to input your desired language for the following initial settings: [Disc Audio], [Disc Subtitle] and [Disc Menu].

| Language        | Code | Language         | Code | Language       | Code | Language   | Code |
|-----------------|------|------------------|------|----------------|------|------------|------|
| Afar            | 6565 | French           | 7082 | Lithuanian     | 7684 | Sindhi     | 8368 |
| Afrikaans       | 6570 | Frisian          | 7089 | Macedonian     | 7775 | Singhalese | 8373 |
| Albanian        | 8381 | Galician         | 7176 | Malagasy       | 7771 | Slovak     | 8375 |
| Ameharic        | 6577 | Georgian         | 7565 | Malay          | 7783 | Slovenian  | 8376 |
| Arabic          | 6582 | German           | 6869 | Malayalam      | 7776 | Spanish    | 6983 |
| Armenian        | 7289 | Greek            | 6976 | Maori          | 7773 | Sudanese   | 8385 |
| Assamese        | 6583 | Greenlandic      | 7576 | Marathi        | 7782 | Swahili    | 8387 |
| Aymara          | 6588 | Guarani          | 7178 | Moldavian      | 7779 | Swedish    | 8386 |
| Azerbaijani     | 6590 | Gujarati         | 7185 | Mongolian      | 7778 | Tagalog    | 8476 |
| Bashkir         | 6665 | Hausa            | 7265 | Nauru          | 7865 | Tajik      | 8471 |
| Basque          | 6985 | Hebrew           | 7387 | Nepali         | 7869 | Tamil      | 8465 |
| Bengali; Bangla | 6678 | Hindi            | 7273 | Norwegian      | 7879 | Telugu     | 8469 |
| Bhutani         | 6890 | Hungarian        | 7285 | Oriya          | 7982 | Thai       | 8472 |
| Bihari          | 6672 | Icelandic        | 7383 | Panjabi        | 8065 | Tonga      | 8479 |
| Breton          | 6682 | Indonesian       | 7378 | Pashto, Pushto | 8083 | Turkish    | 8482 |
| Bulgarian       | 6671 | Interlingua      | 7365 | Persian        | 7065 | Turkmen    | 8475 |
| Burmese         | 7789 | Irish            | 7165 | Polish         | 8076 | Twi        | 8487 |
| Byelorussian    | 6669 | Italian          | 7384 | Portuguese     | 8084 | Ukrainian  | 8575 |
| Chinese         | 9072 | Japanese         | 7465 | Quechua        | 8185 | Urdu       | 8582 |
| Croatian        | 7282 | Kannada          | 7578 | Rhaeto-Romance | 8277 | Uzbek      | 8590 |
| Czech           | 6783 | Kashmiri         | 7583 | Rumanian       | 8279 | Vietnamese | 8673 |
| Danish          | 6865 | Kazakh           | 7575 | Russian        | 8285 | Volapük    | 8679 |
| Dutch           | 7876 | Kirghiz          | 7589 | Samoan         | 8377 | Welsh      | 6789 |
| English         | 6978 | Korean           | 7579 | Sanskrit       | 8365 | Wolof      | 8779 |
| Esperanto       | 6979 | Kurdish          | 7585 | Scots Gaelic   | 7168 | Xhosa      | 8872 |
| Estonian        | 6984 | Laotian          | 7679 | Serbian        | 8382 | Yiddish    | 7473 |
| Faroese         | 7079 | Latin            | 7665 | Serbo-Croatian | 8372 | Yoruba     | 8979 |
| Fiji            | 7074 | Latvian, Lettish | 7686 | Shona          | 8378 | Zulu       | 9085 |
| Finnish         | 7073 | Lingala          | 7678 |                |      |            |      |

## Specifications

|  |  |
|--|--|
| <b>Power requirements</b>                  | AC 200-240 V, 50 / 60Hz  |
| <b>Power consumption</b>                   | 8 W  |
| <b>Dimensions (W x H x D)</b>              | (430 x 35 x 195) mm  |
| <b>Net Weight (Approx.)</b>                | 1.6 kg   |
| <b>Operating temperature</b>               | 5 °C to 35 °C  |
| <b>Operating humidity</b>                  | 5 % to 90 %  |
| <b>Laser</b>                               | Semiconductor laser  |
| <b>Signal system</b>                       | PAL / NTSC   |
| <b>Bus Power Supply (USB)</b>              | DC 5V  200 mA |
| <b>VIDEO OUTPUT</b>                        | 1.0 V (p-p), 75 Ω, sync negative, RCA jack x 1 / SCART (TO TV)                                 |
| <b>COMPONENT / PROGRESSIVE SCAN OUTPUT</b> | (Y) 1.0 V (p-p), 75 Ω, sync negative, RCA jack x 1, (Pb)/ (Pr) 0.7 V (p-p), 75 Ω, RCA jack x 2 |
| <b>HDMI OUTPUT (video/audio)</b>           | 19 pin (Type A, HDMI™ Connector)   |
| <b>ANALOG AUDIO OUTPUT</b>                 | 2.0 Vrms (1 kHz, 0 dB), 600 Ω, RCA jack (L, R) x 1 / SCART (TO TV)                             |
| <b>DIGITAL OUTPUT (COAXIAL)</b>            | 0.5 V (p-p), 75 Ω, RCA jack x 1  |
| <b>DIGITAL OUTPUT (OPTICAL)</b>            | 3 V (p-p), Optical jack x 1  |

Design and specifications are subject to change without prior notice.

## Trademarks and Licenses



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.



"DVD Logo" is a trademark of DVD Format/Logo Licensing Corporation.



DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under license.





