


OWNER'S MANUAL

Please read this manual carefully before operating your set and retain it for future reference.

www.lg.com

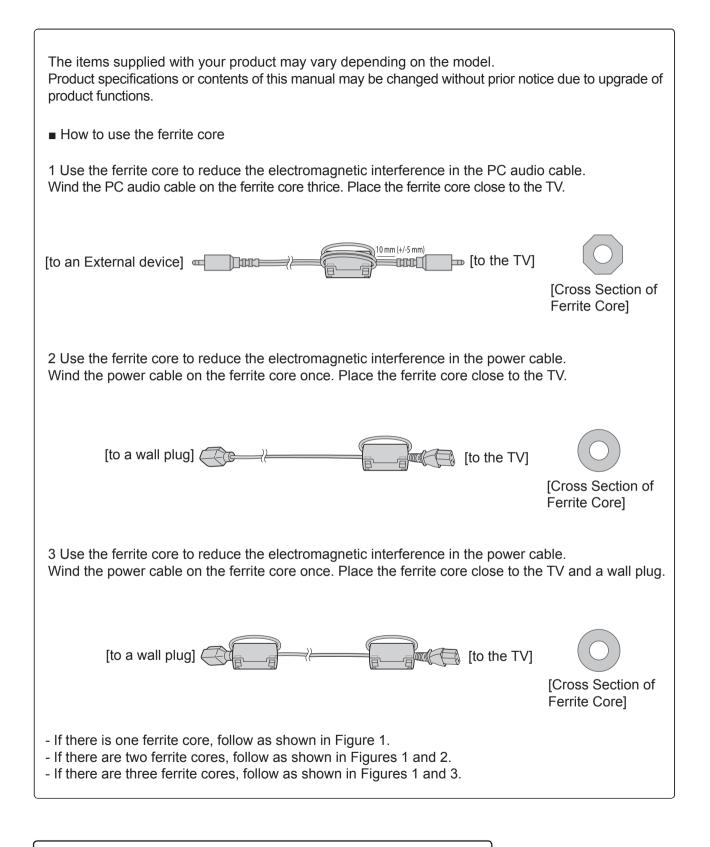

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

CONTENTS

PREPARATION

| AccessoriesA | -1 | |
|--------------|----|--|
|--------------|----|--|

EXTERNAL EQUIPMENT SETUP

| Antenna Connection | 1 |
|--------------------------------------|---|
| Connecting with a Component cable | 2 |
| Connecting with a HDMI cable | 3 |
| Connecting with a HDMI to DVI cable | 4 |
| Usb setup | 4 |
| Connecting with a RCA cable | 5 |
| Connecting with a RF Cable | 6 |
| External stereo setup | 6 |
| Connecting with a D-sub 15 pin cable | 7 |
| Supported Display Resolution | 8 |
| Screen Setup for PC mode | 9 |
| | |

WATCHING TV / PROGRAMME CONTROL

| Turning on the TV | 13 |
|---------------------------------------------------|-----|
| Initializing Setup | 13 |
| Programme Selection | 13 |
| Volume Adjustment | 13 |
| Quick Menu | |
| On Screen Menus Selection and adjustmen | t15 |
| Auto programme tuning | 16 |
| Manual programme Tuning | 17 |
| Programme Edit | 19 |
| Selecting the Programme List | |
| Favourite programme setup | 22 |
| Input List | 23 |
| Input Label | 24 |
| SIMPLINK | 25 |
| AV Mode | 28 |
| Initializing (Reset to original factory settings) | 29 |
| Key Lock | 30 |
| | |

TO USE A USB DEVICE

| When connecting a USB device | 31 |
|------------------------------|----|
| Photo list | 33 |
| Music list | 39 |
| Movie list | 42 |
| DivX Registration Code | 48 |
| Deactivation | 49 |

PICTURE CONTROL

| Picture Size (Aspect Ratio) Control | 50 |
|------------------------------------------|----|
| Energy Saving | 52 |
| Preset Picture Settings | 53 |
| Manual Picture Adjustment | 54 |
| Picture Improvement Technology | 55 |
| Advanced - Black(Darkness) Level | 56 |
| Advanced - Film Mode | 57 |
| Picture Reset | 58 |
| Image Sticking Minimization (ISM) Method | 59 |
| Demo Mode | 60 |
| Mode Setting | 61 |

SOUND & LANGUAGE CONTROL

| Auto Volume Leveler Clear Voice II Preset Sound Settings-Sound Mode Sound Setting Adjustment -User Mode Infinite Surround Balance TV Speakers On/ Off Setup Audio Reset | 63 64 65 65 66 67 |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------|
| I/II Stereo/Dual ReceptioN NICAM Reception Speaker Sound Output Selection On-Screen Menu Language Selection | 69 70 70 |

CONTENTS

TIME SETTING

| Clock Setup | 72 |
|--------------------------|----|
| Auto on/off time setting | 73 |
| Sleep Timer setting | 73 |

TELETEXT

| Switch on/off | 74 |
|----------------------------|----|
| SIMPLE Text | 74 |
| TOP Text | 74 |
| FASTEXT | 75 |
| Special Teletext Functions | 75 |

APPENDIX

| Troubleshooting | 76 |
|-------------------------------|----|
| Maintenance | 78 |
| Product Specifications | 79 |
| IR Codes | 81 |
| External Control Device Setup | 82 |


A-1


PREPARATION

ACCESSORIES

Ensure that the following accessories are included with your TV. If an accessory is missing, please contact the dealer where you purchased the TV.

Image shown may differ from your TV.

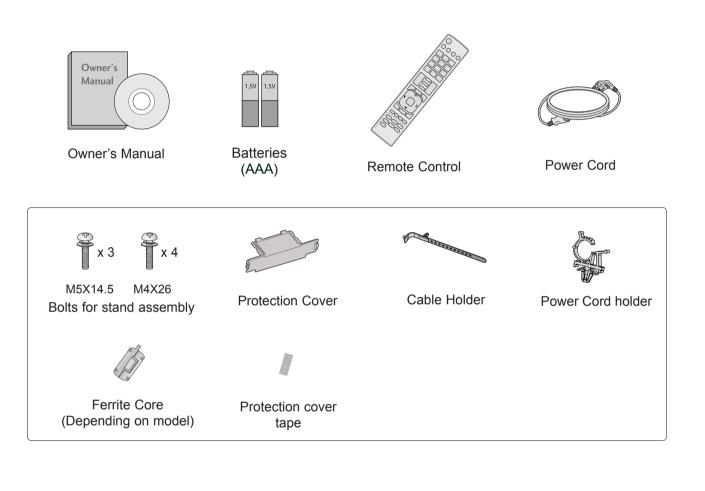

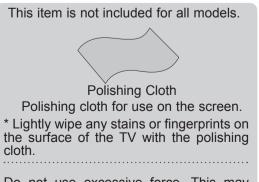

Do not use excessive force. This may cause scratching or discolouration.

Wall Mounting Bracket (Separate purchase)

PSW400BG or PSW400B or DSW400BG




PREPARATION

FRONT PANEL CONTROLS


► The energy consumed during use can be significantly reduced if the level of brightness of the picture is reduced, and this will reduce the overall running cost.

- Do not step on the glass stand or subject it to any impact. It may break, causing possible injury from fragments of glass, or the TV may fall.
- ► Do not drag the TV. The floor or the product may be damaged.

Image shown may differ from your TV. 42/50PT2***, 50PV2***, 42/50PT3***

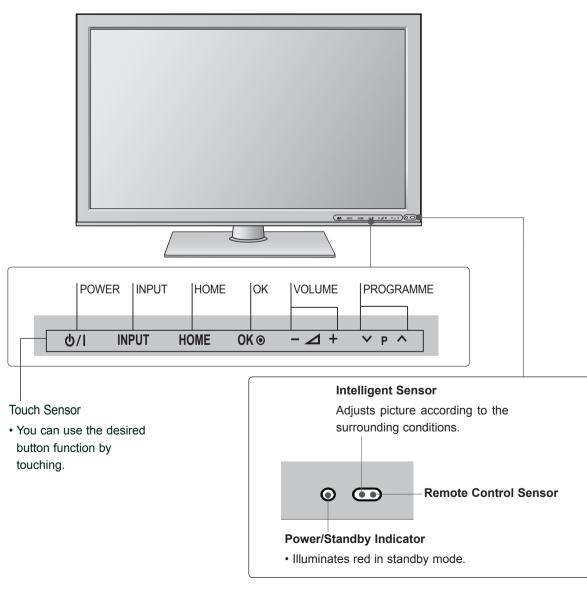

42/50PT5***

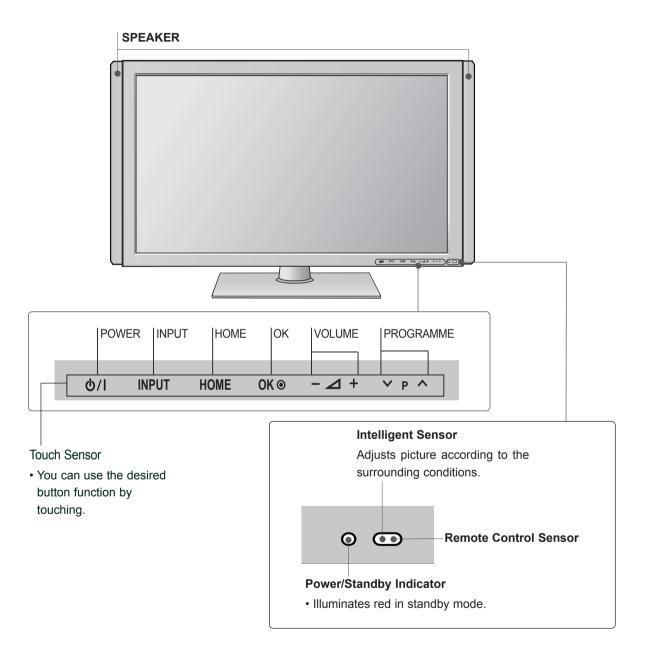

PREPARATION

PREPARATION

BACK PANEL INFORMATION

Image shown may differ from your TV. 42/50PT2***, 50PV2*** 10 2 0 6 AV IN2 4 3 8 AV IN 1 AUDIO IN (RGB/DVI) ٩ ٩ AUDIO O \bigcirc \bigcirc \bigcirc 5 1 ANTENNA HEIMI/DVI IN RGB IN (PC) \bigcirc ····· -232C IN 2 5 7 9

Power Cord Socket


This TV operates on an AC power. The voltage is indicated on the Specifications page. Never attempt to operate the TV on DC power.

2 HDMI Input

Connect an HDMI signal to HDMI IN. Or DVI(VIDEO)signal to HDMI/DVI port with DVI to HDMI cable.

- **8 RGB/DVI Audio Input** Connect the audio from a PC.
- RGB Input
 Connect the output from a PC.
- 6 RS-232C Input (CONTROL&SERVICE) Port Connect to the RS-232C port on a PC. This port is used for Service or Hotel mode.
- 6 Audio/Video Input Connect audio/video output from an external device to these jacks.

- Variable Audio Output Connect an external amplifier or add a subwoofer to your surround sound system.
- Component Input Connect a component video/audio device to these jacks.
- Onternal Input Connect RF antenna to this jack.
- USB Input Connect USB storage device to this jack.

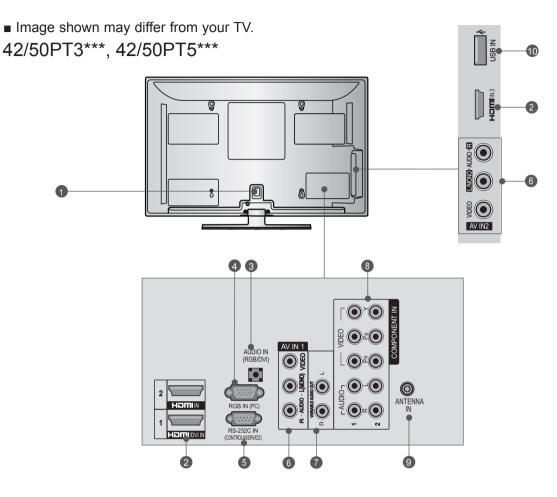

- Power Cord Socket This TV operates on an AC power. The voltage is indicated on the Specifications page. Never attempt to operate the TV on DC power.
- 2 HDMI Input

Connect an HDMI signal to HDMI IN. Or DVI(VIDEO)signal to HDMI/DVI port with DVI to HDMI cable.

- **3 RGB/DVI Audio Input** Connect the audio from a PC.
- RGB Input
 Connect the output from a PC.
- Section 2017 Se
- 6 Audio/Video Input Connect audio/video output from an external device to these jacks.

- Variable Audio Output Connect an external amplifier or add a subwoofer to your surround sound system.
- Component Input
 Connect a component video/audio device to these
 jacks.
- Antenna Input
 Connect RF antenna to this jack.
- USB Input
 Connect USB storage device to this jack.

PREPARATION


STAND INSTALLATION

- Image shown may differ from your TV.
- When assembling the desk type stand, check whether the bolt is fully tightened. (If not tightened fully, the product can tilt forward after the product installation.) If you tighten the bolt with excessive force, the bolt can deviate from abrasion of the tightening part of the bolt.



Carefully place the TV screen side down on a cushioned surface to protect the screen from damage.



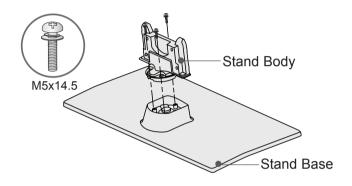




 $\label{eq:semble} \mbox{Assemble the TV as shown}.$

Rear

Fix the 4 bolts securely using the holes in the back of the TV.

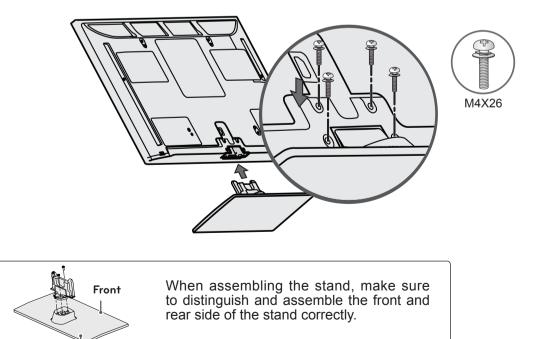


BACK COVER FOR WIRE ARRANGEMENT

■ Image shown may differ from your TV.




Install the **Power Cord Holder** and **Power Cord**. It will help prevent the power cable from being removed by accident.

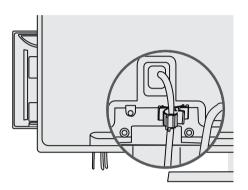



Gather and bind the cables with the Cable Holder.

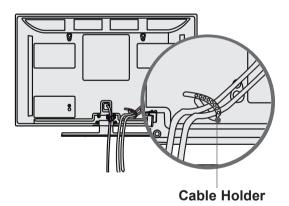

► Do not move the TV by holding the Cable Holder & Power Cord Holder, as the Cable Holders may break, and injuries and damage to the TV may occur.

PREPARATION

TYPE STAND

- Image shown may differ from your TV.
- * This will protect the opening from accumulating dust and dirt. When installing the wall mounting bracket, use the Protection cover.
- Insert the Protection cover into the TV until clicking sound.


Attach the protection cover tape.

Protection cover

SWIVEL STAND

- Image shown may differ from your TV.
- This feature is not available for all models.

After installing the TV, you can adjust the TV set manually to the left or right direction by 20 degrees to suit your viewing position.

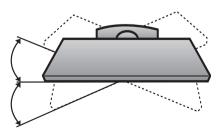

NOT USING THE DESK- KENSINGTON SECURITY **SYSTEM**


- Image shown may differ from your TV.
- This feature is not available for all models.

The TV is equipped with a Kensington Security System connector on the back panel. Connect the Kensington Security System cable as shown below.

For the detailed installation and use of the Kensington Security System, refer to the user's guide provided with the Kensington Security System.


For further information, contact http://www.kensington.com, the internet homepage of the Kensington company. Kensington sells security systems for expensive electronic equipment such as notebook PCs and LCD projectors.

- The Kensington Security System is an optional accessory.
- ▶ If the TV feels cold to the touch, there may be a small "flicker" when when it is turned on. This is normal, there is nothing wrong with TV.
- ► Some minute dot defects may be visible on the screen, appearing as tiny red, green, or blue spots. However, they have no adverse effect on the monitor's performance.
- Avoid touching the screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary distortion effects on the screen.

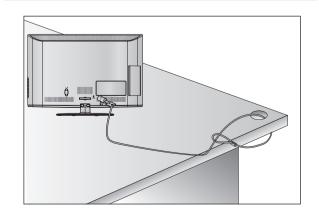

CAREFUL INSTALLATION ADVICE


- You should purchase necessary components to fix the TV safety and secure to the wall from the market.
- Position the TV close to the wall to avoid the possibility of it falling when pushed.
- The instructions shown below are a safer way to set up the TV, by fixing it to the wall, avoiding the possibility of it falling forwards if pulled. This will prevent the TV from falling forward and causing injury. This will also prevent the TV from damage. Ensure that children do not climb or hang from the TV.

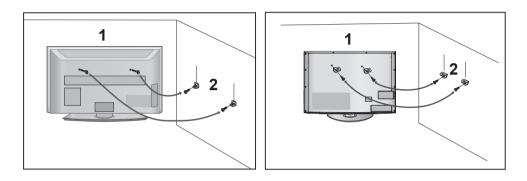

Use the eye-bolts or TV brackets/bolts to fix the product to the wall as shown in the picture. (If your TV has bolts in the eyebolts, loosen then bolts.)

* Insert the eye-bolts or TV brackets/bolts and tighten them securely in the upper holes.

Secure the wall brackets with the bolts on the wall. Match the height of the bracket that is mounted on the wall.

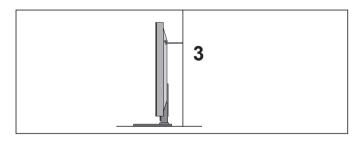

Use a sturdy rope to tie the product for alignment. It is safer to tie the rope so it becomes horizontal between the wall and the product.

NOTE

 
- ▶ When moving the TV undo the cords first.
- ▶ Use a platform or cabinet strong and large enough to support the size and weight of the TV.
- ▶ To use the TV safely make sure that the height of the bracket on the wall and on the TV is the same.

PREPARATION

EARTHING

Ensure that you connect the earth wire to prevent possible electric shock. If grounding methods are not possible, have a qualified electrician install a separate circuit breaker.


Do not try to earth the TV by connecting it to telephone wires, lightening rods or gas pipes.



- The TV can be installed in various ways such as on a wall, or on a desktop etc.
- The TV is designed to be mounted horizontally.


DESKTOP PEDESTAL INSTALLATION

For adequate ventilation allow a clearande of 10 cm (4 Inches) all around the TV.

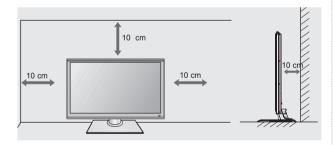


WALL MOUNT : HORIZONTAL INSTALLATION

- We recommend the use of a LG Brand wall mounting bracket when mounting the TV to a wall.
- We recommend that you purchase a wall mounting bracket which supports VESA standard.
- LG recommends that wall mounting be performed by a qualified professional installer.

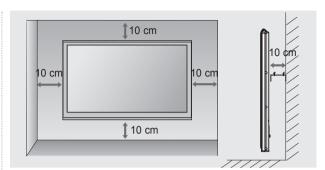

- Should Install wall mount on a solid wall perpendicular to the floor.
- Should use a special wall mount, if you want to install it to ceiling or slanted wall.
- The surface that wall mount is to be mounted on should be of sufficient strength to support the weight of TV set; e.g. concrete, natural rock, brick and hollow block.
- Installing screw type and length depends on the wall mount used. Further information, refer to the instructions included with the mount.
- LG is not liable for any accidents or damage to property or TV due to incorrect installation:
 - Where a non-compliant VESA wall mount is used.
 - I Incorrect fastening of screws to surface which may cause TV to fall and cause personal injury
 - Not following the recommended Installation method.

 


| Model | VESA (A * B) | Standard Screw | Quantity |
|----------|-----------------|-------------------|----------|
| 42PT2*** | 400 * 400 | M6 | 4 |
| 50PT2*** | 400 * 400 | M6 | 4 |
| 50PV2*** | 400 * 400 | M6 | 4 |
| 42PT5*** | 400 * 400 | M6 | 4 |
| 50PT5*** | 400 * 400 | M6 | 4 |
| 42PT3*** | 400 * 400 | M6 | 4 |
| 50PT3*** | 400 * 400 | M6 | 4 |

REMOTE CONTROL KEY FUNCTION


When using the remote control, aim it at the remote control sensor on the TV.

Image shown may differ from your TV.

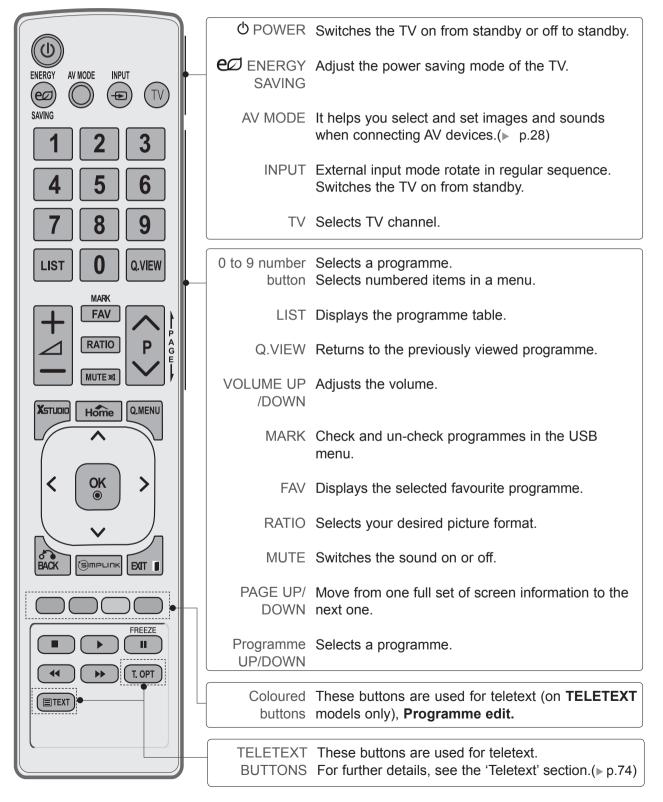

PREPARATION

Image shown may differ from your TV.

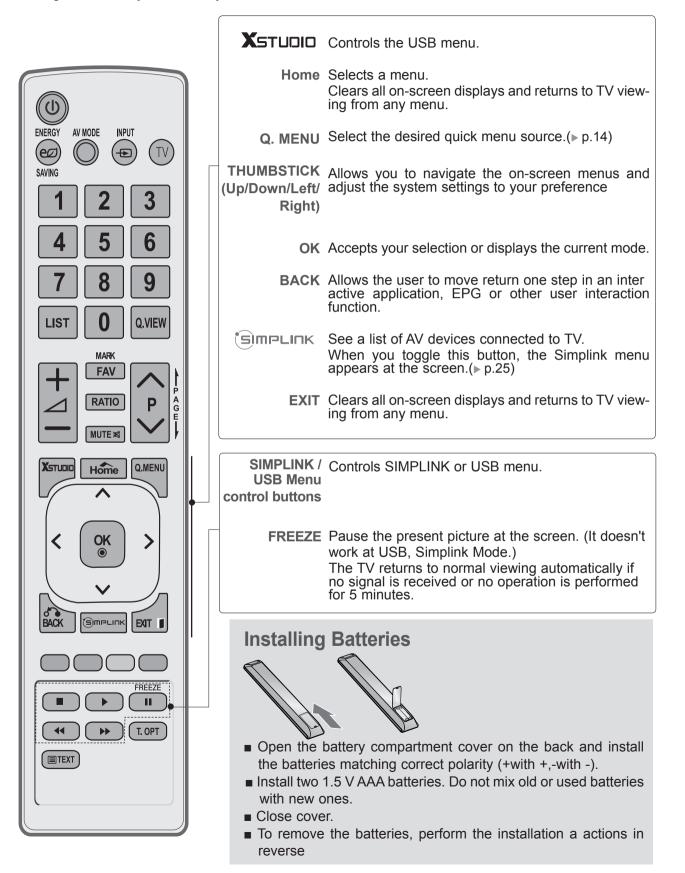


EXTERNAL EQUIPMENT SETUP

• To prevent damage do not connect to the mains outlet until all connections are made between the devices.

ANTENNA CONNECTION

- For optimum picture quality, adjust antenna direction.
- An antenna cable and converter are not supplied.

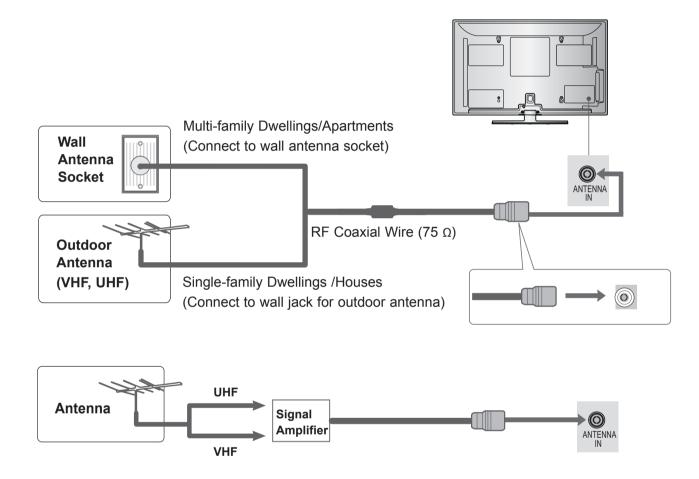


- In poor signal areas, to achieve better picture quality it may be necessary to install a signal amplifier to the antenna as shown above.
- If signal needs to be split for two TVs, use an antenna signal splitter for connection.

EXTERNAL EQUIPMENT SETUP

- To avoid damaging any equipment, never plug in any power cord until you have finished connecting all equipment.
- This section on EXTERNAL EQUIPMENT SETUP mainly uses diagrams for the 42/50PT2*** models.
- Image shown may differ from your TV.

CONNECTING WITH A COMPONENT CABLE

- Connect the video outputs (Y, PB, PR) of the external equipment (digital set-top box, DVD, etc.) to the **COMPONENT IN VIDEO** jacks on the TV.
- 2 Connect the audio outputs (Y, PB, PR) of the external equipment (digital set-top box, DVD, etc.) to the **COMPONENT IN AUDIO** jacks on the TV.
 - Turn on the external equipment. (Refer to the external equipment's manual for operating instructions.)
 - Select **Component 1** input source using the **INPUT** button on the remote control. If connected to **COMPONENT IN 2**, select **Component 2** input source.

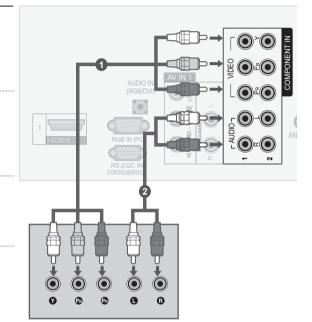

| Signal | Component | HDMI |
|------------|---------------------|----------------------------|
| 480i/576i | 0 | Х |
| 480p/576p | 0 | 0 |
| 720p/1080i | 0 | 0 |
| 1080p | O (50/60Hz only) | O (24Hz/30Hz/50Hz/60Hz) |

Component Input ports

To achieve better picture quality, connect a DVD player to the component input ports as shown below.

| Component ports on the TV | Y | Рв | PR |
|---------------------------|---|-----|-----|
| | Y | Рв | PR |
| Video output ports | Y | B-Y | R-Y |
| on DVD player | Y | Cb | Cr |
| | Y | Pb | Pr |

3

4

CONNECTING WITH A HDMI CABLE

1


Connect the HDMI output of the external equipment (digital set-top box, DVD, etc.) to **HDMI/DVI IN 1**, **HDMI IN 2** or **HDMI IN 3** (Except for 42/50PT2***, 50PV2***) jack on the TV.



3

Turn on the external equipment.


Select **HDMI1**, **HDMI2** or **HDMI3** (Except for 42/50PT2***, 50PV2***) input source using the **INPUT** button on the remote control.

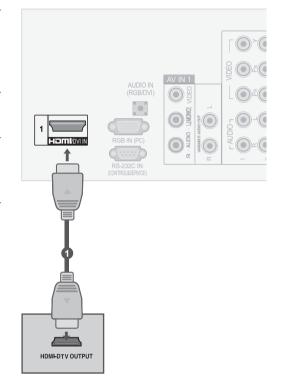


- Check that your HDMI cable is High Speed HDMI Cable. If the HDMI cables are not High Speed HDMI Cable, flickering or no screen display can result. Please use the High Speed HDMI Cable.
- ► HDMI mode supports PCM audio format only.
- Audio format was reseted to Dolby/DTS/Bitstrem in DVD Player or STB, it should be changed to PCM.
- We recommend using under 10m of the HDMI cable. When using over the length, connect an amplifier or repeater.
- ▶ If the DVD does not support Auto HDMI, you must set the output resolution appropriately.

EXTERNAL EQUIPMENT SETUP

CONNECTING WITH A HDMI TO DVI CABLE

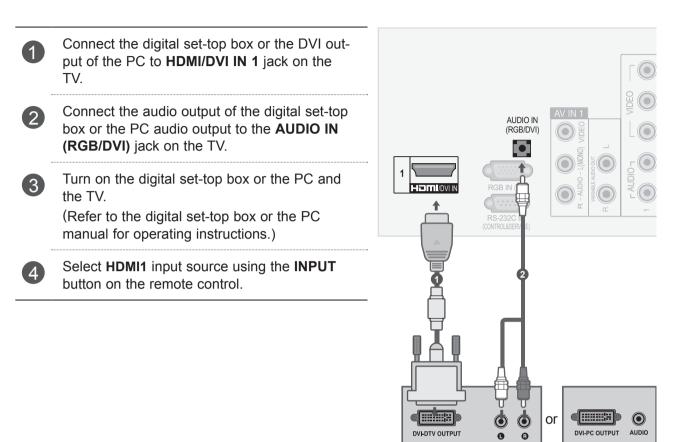

USB SETUP

 



Connect the USB device to the USB IN jack on the TV.

2

After connecting the USB IN jack, you use the USB function. (\blacktriangleright p.31)

CONNECTING WITH A RCA CABLE


- Connect the **AUDIO/VIDEO** jacks between TV and VCR or external equipment. Match the jack colours (Video = yellow, Audio Left = white, and Audio Right = red)
- 2 Insert a video tape into the VCR and press PLAY on the VCR. (Refer to the VCR owner's manual.)

Or, Operate the corresponding external equipment.

(Refer to external equipment operating guide.)

Select **AV1** input source using the **INPUT** button on the remote control.

If connected to **AV IN2**, select **AV2** input source.

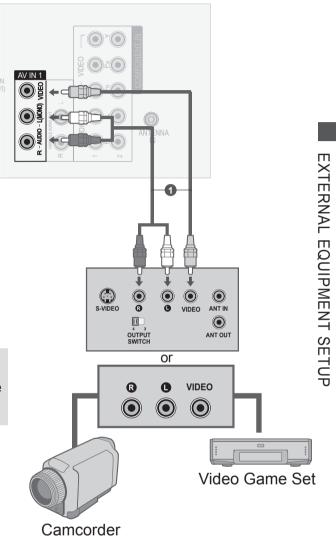

NOTE

3

► If you have a mono VCR, connect the audio cable from the VCR to the AUDIO L/MONO jack of the TV.

EXTERNAL EQUIPMENT SETUP

CONNECTING WITH A RF CABLE

To avoid picture noise (interference), allow adequate distance between the VCR and TV.




Connect the **ANT OUT** socket of the VCR to the **ANTENNA IN** socket on the TV.



Connect the antenna cable to the **ANT IN** socket of the VCR.

Press the PLAY button on the VCR and match the appropriate programme between the TV and VCR for viewing.

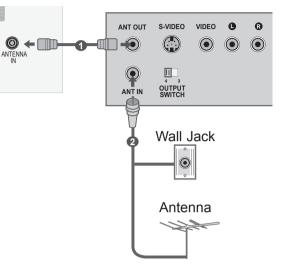


EXTERNAL STEREO SETUP

Use to connected either an external amplifier, or add a subwoofer to your surround sound system.



Connect the input jack of the stereo amplifier to the **VARIABLE AUDIO OUT** jacks on the TV.

2 Set up your speakers through your analog stereo amplifier, according to the instructions provided with the amplifier.

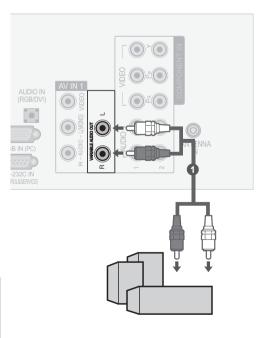

When connecting with external audio equipments, such as amplifiers or speakers, please turn the TV speakers off.(▶ p.67)

CONNECTING WITH A D-SUB 15 PIN CABLE

This TV provides Plug and Play capability, meaning that the PC adjusts automatically to the TV's settings.

| 1 | Connect the RGB output of the PC to the RGB IN (PC) jack on the TV. | |
|---|------------------------------------------------------------------------------------------|-----|
| 2 | Connect the PC audio output to the AUDIO IN (RGB/DVI) jack on the TV. | |
| 3 | Turn on the PC and the TV. | |
| 4 | Select RGB input source using the INPUT but- ton on the remote control. | |
| | | 0 2 |

₽

() AUDIO

ł

RGB OUTPUT

EXTERNAL EQUIPMENT SETUP

SUPPORTED DISPLAY RESOLUTION

RGB-PC mode

| Resolution | Horizontal Frequency(kHz) | Vertical Frequency(Hz) |
|------------|------------------------------|---------------------------|
| 640x350 | 31.468 | 70.09 |
| 720x400 | 31.469 | 70.09 |
| 640x480 | 31.469 | 59.94 |
| 800x600 | 37.879 | 60.317 |
| 1024x768 | 48.363 | 60.004 |
| 1280x768 | 47.776 | 59.87 |
| 1360x768 | 47.720 | 59.799 |
| 1280x1024 | 63.668 | 59.895 |
| 1920x1080 | 66.587 | 59.934 |

HDMI/DTV mode Vertical Frequency(Hz Horizontal Frequency(kHz) Resolution 720x480 31.47 59.94 31.50 60.00 720x480 720x576 31.25 50.00 1280x720 44.96 59.94 1280x720 45.00 60.00 1280x720 37.50 50.00 1920x1080 59.94 33.72 1920x1080 33.75 60.00 1920x1080 28.125 50.00 1920x1080 67.432 59.94 1920x1080 67.50 60.00 56.25 1920x1080 50.00 1920x1080 27.00 24.00 1920x1080 33.75 30.00

NOTE

- Avoid keeping a fixed image on the TV 's screen for prolonged periods of time. The fixed image may become permanently imprinted on the screen; use a screen saver when possible.
- There may be interference relating to resolution, vertical pattern, contrast or brightness in PC mode. Change the PC mode to another resolution or change the refresh rate to another rate or adjust the brightness and contrast on the menu until the picture is clear. If the refresh rate of the PC graphic card can not be changed, change the PC graphic card or consult the manufacturer of the PC graphic card.
- The synchronization input waveform for Horizontal and Vertical frequencies are separate.
- We recommend using 1920x1080, 60 Hz(Only 50PV2***), 1024x768, 60 Hz(Only 42/50PT2***, 42/50PT3***, 42/50PT5***) for the PC mode, this should provide the best picture quality.


- If the resolution of PC is over SXGA, there will be no picture on the TV.(Only HD Models)
- Connect the audio cable from the PC to the Audio input on the TV.(Audio cables are not included with the TV).
- ▶ you use too long an RGB-PC cable, there may be interference on the screen. We recommend using under 5m of the cable. This provides the best picture quality.


SCREEN SETUP FOR PC MODE

SCREEN RESET

Returns Position, Size and Phase to the factory default settings.

This function works in the following mode: Component(Except 480i, 576i), RGB.

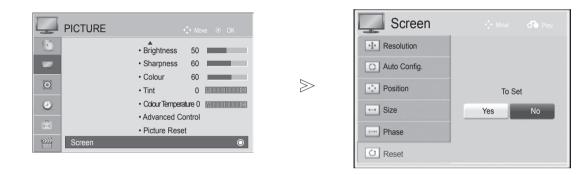

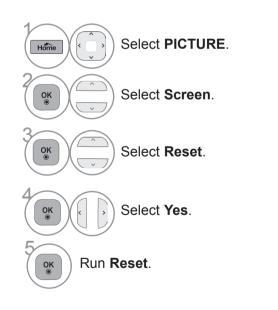

- Press the Home/EXIT button to return to normal TV viewing.
- Press the BACK button to move to the previous menu screen.

EXTERNAL EQUIPMENT SETUP


AUTO CONFIGURE (RGB [PC] MODE ONLY)

 
Automatically adjust the picture position and minimizes image instability. After adjustment, if the image is still not correct, your TV is functioning properly but needs further adjustment.

Auto configure

Hom

This function is for automatic adjustment of the screen position, size and phase The displayed image will be unstable for a few seconds while the auto configuration is in progress.

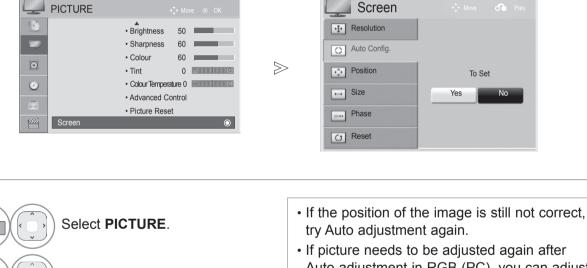




- OK Select Screen. Select Auto Config.. OK OK ◉ Select Yes. OK Run Auto Config..
- Press the Home/EXIT button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.

SELECTING RESOLUTION

To view a normal picture, match the resolution of RGB mode at TV and selection at PC.

This function works in the following mode: RGB[PC] (1024x768, 1280x768, 1360x768)

| | ♦¢ Move ⊙ OK | | Screen | |
|-----------|------------------------------------------------|-------------|---------------|--------------------------|
| <u>()</u> | • Brightness 50 | | *# Resolution | ✓ 1024 x 768 |
| 0 | Sharpness 60 Colour 60 | | Auto Config. | 1280 x 768 1360 x 768 |
| | Tint 0 Remaining Colour Temperature 0 | \geqslant | | |
| | Advanced Control Picture Reset | | Size | |
| Screen | ● Ficture reset | | Phase | |
| | | | C Reset | |

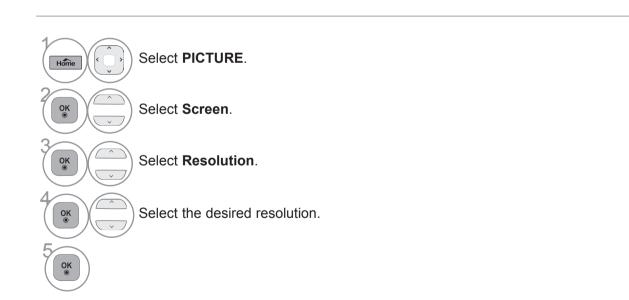


- Press the Home/EXIT button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.


EXTERNAL EQUIPMENT SETUP

ADJUSTMENT FOR SCREEN POSITION, SIZE, PHASE

If the picture is not clear after auto adjustment and especially if characters are still trembling, adjust the picture phase manually.

Position operates in Component(except 480i, 576i), RGB mode. **Size, Phase** operate only in RGB mode.

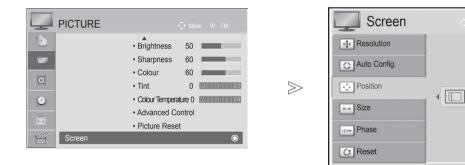

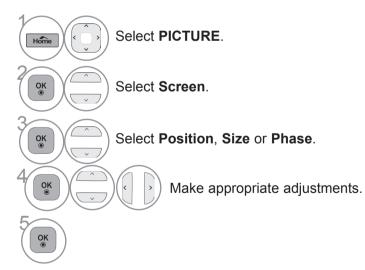

- Press the Home/EXIT button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.

WATCHING TV / PROGRAMME CONTROL

TURNING ON THE TV

- When your TV is turned on, you will be able to use its features.

| 1 | |
|---|--|
| L | |

Firstly, connect the power cord correctly. At this stage, the TV switches to standby mode.

In standby mode to turn TV on, press the O / I, **INPUT** or **P** $\land \lor$ button on the TV or press the **POWER**, **INPUT**, **P** $\land \lor$ or **NUMBER** button on the remote control and the TV will switch on.

INITIALIZING SETUP

If the OSD (On Screen Display) is displayed on the screen after turning on the TV, you can adjust the Language, Mode Setting, Auto Tuning.

Note:

1

1

- a.If you close without completing the initial setting, the Initial Setting menu can be displayed again.
- b. "Store Demo" mode is only for shop display and not for general customer use.
- c. "Home Use" mode is the optimal setting for home environments, and is the TV's default mode.
- d."Store Demo" mode is the optimal setting for store environments. If a user modifies image quality data, "Store Demo" mode initializes the product to the image quality set by us after a certain period of time.
- e. The mode (Home Use, Store Demo) can be changed by executing Mode Setting in the OPTION menu.

PROGRAMME SELECTION

Press the $P \land \lor$ or NUMBER buttons to select a programme number.

VOLUME ADJUSTMENT

Press the \bigtriangleup + or - button to adjust the volume.

If you wish to switch the sound off, press the **MUTE** button.

You can cancel this function by pressing the **MUTE**, \angle + , - or **AV Mode** button.


WATCHING TV / PROGRAMME CONTROL

QUICK MENU

Your TV's OSD (On Screen Display) may differ slightly from that shown in this manual. Q.Menu (Quick Menu) is a menu of features which users might use frequently.

- Aspect Ratio: Selects your desired picture format. For Zoom Setting, select 16:9, Original, 4:3, 14:9, Zoom and Cinema Zoom in Ratio Menu. After completing Zoom Setting, the display goes back to Q.Menu.
- Picture Mode : Selects your desired Picture Mode.
- **Sound Mode** : It is a feature to automatically set the sound combination which it deems the best for the images being watched. Selects your desired Sound Mode.
- Audio : Selects the sound output.
- Sleep Timer : Sets the sleep timer.
- Favourite : Selects the favourite programme.
- USB Eject : Selects "Eject" in order to eject USB device.


| Q. Menu | | | | | |
|-----------------------------|----------|--|--|--|--|
| ⊢ Aspect Ratio | ◀ 16:9 ► | | | | |
| Picture Mode | Standard | | | | |
| 🎜 Sound Mode | Standard | | | | |
| ((@)) Audio | Mono | | | | |
| 🕒 ^{zz} Sleep Timer | Off | | | | |
| Favourite | Off | | | | |
| USB Eject | Eject | | | | |
| Close | | | | | |

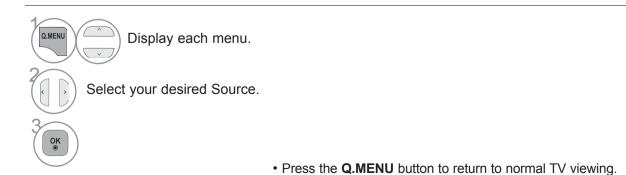


ON SCREEN MENUS SELECTION AND ADJUSTMENT

Your TV's OSD (On Screen Display) may differ slightly from that shown in this manual.

Image shown may differ from your TV.

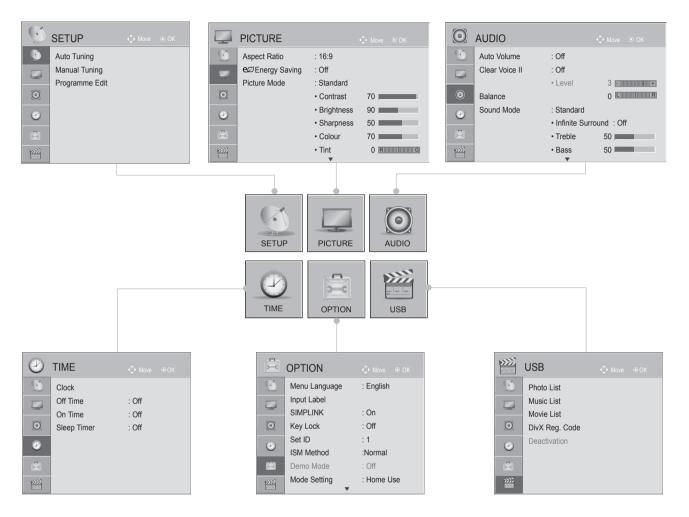

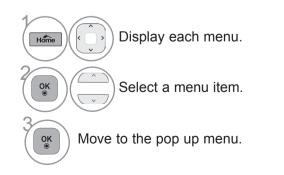

- Press the Home/EXIT button to return to normal TV viewing.
- Press the BACK button to move to the previous menu screen.

WATCHING TV / PROGRAMME CONTROL


AUTO PROGRAMME TUNING


Use this to automatically find and store all available programmes.

When you start auto programming, all previously stored service information will be deleted.





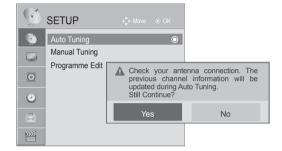

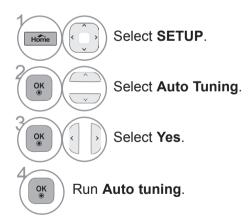


• If you wish to keep on auto tuning select Yes using the < >button. Then, press the OK button. Otherwise select No.

- Press the Home/EXIT button to return to normal TV viewing.
- Press the BACK button to move to the previous menu screen.


MANUAL PROGRAMME TUNING

Manual Tuning lets you manually tune and arrange the stations in whatever order you desire.

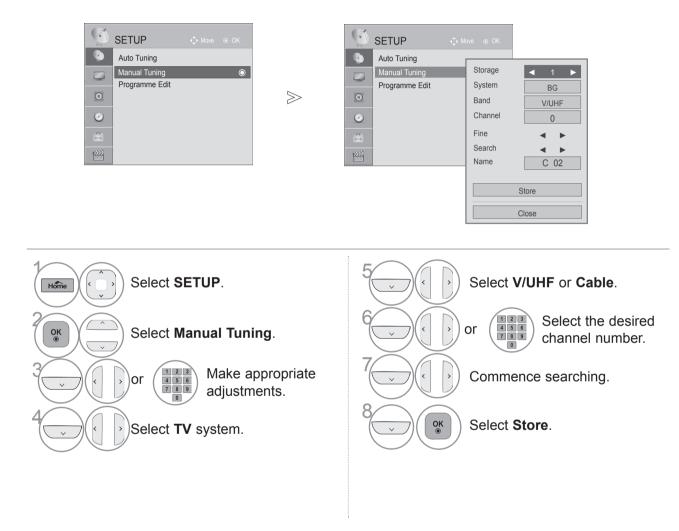


- Press the Home/EXIT button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.
- BG : PAL B/G, SECAM B/G (Europe / East Europe / Asia / NewZealand / M.East / Africa / Australia)
 I : PAL I/II (U.K. / Ireland / Hong Kong / South Africa)
 DK : PAL D/K, SECAM D/K (East Europe / China / Africa / CIS)
 M : NTSC-M (USA / Korea / Philippines), PAL-M(South America)
- To store another channel, repeat steps 3 to 8.

WATCHING TV / PROGRAMME CONTROL

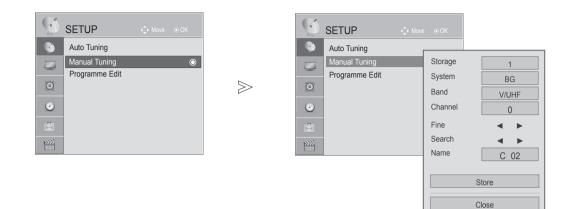

Assigning a station name

You can assign a station name with five characters to each programme number.

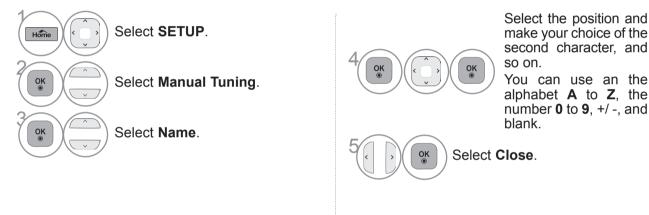

Fine Tuning

Normally fine tuning is only necessary if reception is poor.





- Press the Home/EXIT button to return to normal TV viewing.
- Press the BACK button to move to the previous menu screen.


PROGRAMME EDIT

When a programme number is skipped, it means that you will be unable to select it using $P \land \lor$ button during TV viewing.

If you wish to select the skipped programme, directly enter the programme number with the NUMBER buttons or select it in the Programme edit menu.

This function enables you to skip the stored programmes.



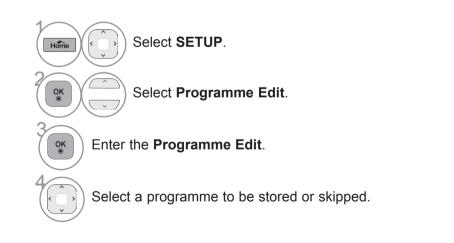

- Press the Home/EXIT button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.

WATCHING TV / PROGRAMME CONTROL

This function enables you to delete or skip the stored programmes. You can also move some channels and use other programme numbers.

Deleting a programme



RED

GREEN

Select a programme number to be deleted.

 
• The selected programme is deleted, all the following programmes are shifted up one.

Turn the deleted programme number to RED.



Release the deleted programme.

Moving a programme



Turn the moved programme number to GREEN.

GREEN Release the moved programme.

Skipping a programme number



Select a programme number to be skipped.

E Turn the skipped programme number to BLUE.

BLUE Release the skipped programme.

- When a programme number is skipped it means that you will be unable to select it using the P ∧ ∨ button during normal TV viewing.
- If you wish to select a skipped programme, directly enter the programme number with the NUMBER buttons or select it in the programme edit.

SELECTING THE PROGRAMME LIST

You can check which programmes are stored in the memory by displaying the programme list.

| Programme List |
|----------------|
| TV 1 ARD |
| TV 2 BBC1 |
| TV 3 ARD |
| TV 4 CO1 |
| TV 5 S46 |
| TV 6 C05 |
| TV 7 C06 |
| TV 8 C10 |
| TV 9 S11 |
| Exit |

Displaying programme LIST



Display the Programme List.

- You may find some blue programmes. These have been set up to be skipped by auto programming or in the programme edit mode.
- Some programmes with the channel number shown in the programme list indicate there is no station name assigned.

Selecting a programme in the programme list



Select a programme.

Switch to the chosen programme number.

Paging through a programme list



Turn the pages.




Return to normal TV viewing.

WATCHING TV / PROGRAMME CONTROL

FAVOURITE PROGRAMME SETUP

Selecting favourite programme

Favorite programmes is a convenient feature that lets you quickly scan up to programmes of your choice without having to wait for the TV to scan through all the in-between programmes.

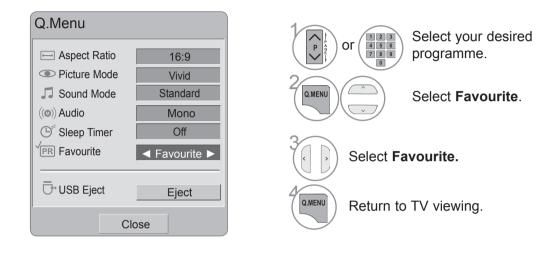

• This will automatically include the selected programme into your favourite programme list.

Displaying the favourite programme list


MARK

FAV

| Favourite List | |
|----------------|--------|
| TV 1 ARD | |
| TV 2 BBC1 | |
| TV 3 ARD | |
| TV 4 CO1 | |
| TV 5 S46 | |
| TV 6 C05 | |
| TV 7 C06 | |
| TV 8 C10 | |
| TV 9 S11 | |
| | 🗗 Exit |

) Display the Favourite Programme List.

INPUT LIST

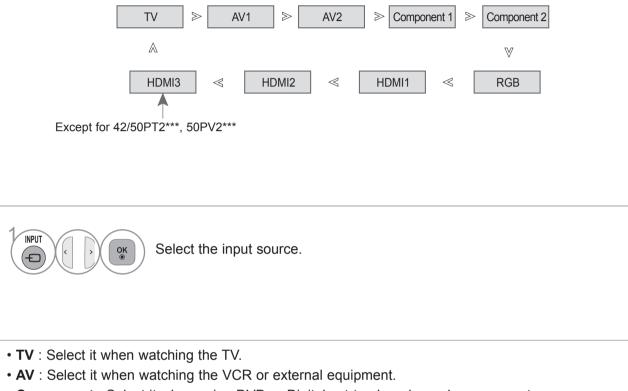


- Component : Select it when using DVD or Digital set-top box depends on connector.
- **RGB** : Select it when using PC depends on connector.
- HDMI : Select it when using DVD or Digital set-top box depend on connector.


WATCHING TV / PROGRAMME CONTROL

INPUT LABEL

Selects a label for each input source.

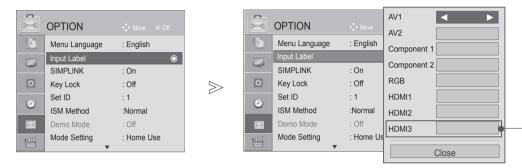

Except for 42/50PT2***, 50PV2***

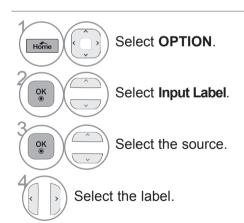

• Press the Home/EXIT button to return to normal TV viewing.

• Press the **BACK** button to move to the previous menu screen.

SIMPLINK


This function operates only with devices with the SIMPLINK logo. Please check the SIMPLINK logo.

The product might not function properly when using it with other products with HDMI-CEC function.

This allows you to control and play other AV devices connected to the display through HDMI cable without additional cables and settings.

If you do not require the SIMPLINK menu, select "Off".


| | OPTION | | | | OPTION | | |
|---------|---------------|------------|-------|--------------|---------------|------------|---|
| 6 | Menu Language | : English | | 6 | Menu Language | : English | |
| | Input Label | | | | Input Label | | |
| - 10- | SIMPLINK | : On 💿 | \gg | | SIMPLINK | : On Off | |
| \odot | Key Lock | : Off | | \odot | Key Lock | : Off On | C |
| ۲ | Set ID | :1 | | 3 | Set ID | :1 | |
| 0 | ISM Method | :Normal | | J | ISM Method | :Normal | |
| | Demo Mode | : Off | | | Demo Mode | : Off | |
| | Mode Setting | : Home Use | | >>>> ==== | Mode Setting | : Home Use | |
| | v | | | | • | | |

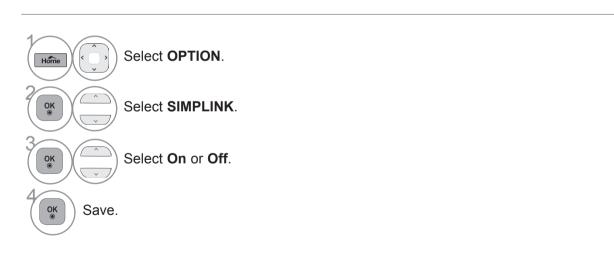

- Press the Home/EXIT button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.

WATCHING TV / PROGRAMME CONTROL

CONNECTING TO HOME THEATER WITH THE SIMPLINK LOGO.

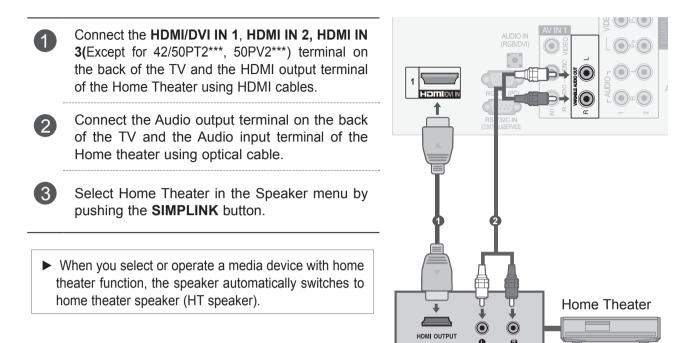

NOTE

Connect the HDMI/DVI IN or HDMI IN terminal of the TV to the rear terminal and Side terminal (HDMI terminal) of the SIMPLINK device with the HDMI cable.

AUDIO IN

- When you switch the Input source using the INPUT button on the remote control, you can stop the operation of a device controlled by SIMPLINK.
- ► When the unit is connected to SIMPLINK Home Theater, set to Variable Out and turn off the TV Speaker to operate the Home Theater Speaker. At this time, the maximum volume of the Home Theater Speaker is set to the TV volume.

SIMPLINK FUNCTIONS

Disc playback

Control connected AV devices by pressing the \land / \lor / \langle / \rangle , OK, \blacktriangleright , \blacksquare , II, $\blacktriangleleft \triangleleft$ and $\triangleright \triangleright$ buttons.

Direct Play

After connecting AV devices to the TV, you can directly control the devices and play media without additional settings.

Select AV device

Enables you to select one of the AV devices connected to the TV and operate it.

Power off all devices

When you switch off the TV, all connected devices are turned off.

Switch audio-out

Offers an easy way to switch audio-out.

Sync Power on

When the equipment with Simplink function connected HDMI terminal starts to play, The TV will change automatically to turn on mode.

* A device, which is connected to the TV through an HDMI cable but does not support SIMPLINK, does not provide this function.

Note: To operate SIMPLINK, an High Speed HDMI Cable with *CEC function should be used. (*CEC: Consumer Electronics Control).


SIMPLINK MENU

Press the $\land \lor \land \Rightarrow$ button and then OK button to select the desired SIMPLINK source.

- TV viewing : Switch to the previous TV programme regardless of the current mode.
- DISC playback : Select and play connected discs.

When multiple discs are available, the titles of discs are conveniently displayed at the bottom of the screen.

- VCR playback : Play and control the connected VCR.
- HDD Recordings playback : Play and control recordings stored in HDD.
- G Audio Out to Home theater/Audio Out to TV: Select Home theater or TV speaker for Audio Out.

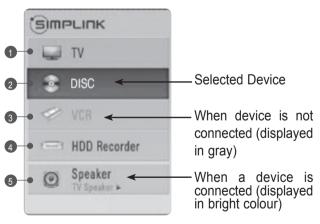


WATCHING TV / PROGRAMME CONTROL

AV MODE

You can select the optimal images and sounds when connecting AV devices to external input.

| Off | Disables the AV MODE. |
|--------|-------------------------------------------------------|
| Cinema | Optimizes video and audio for watching movies. |
| Sport | Optimizes video and audio for watching sports events. |
| Game | Optimizes video and audio for playing games. |

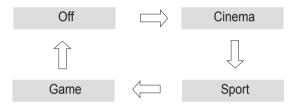 



Press the **AV MODE** button repeatedly to select the desired source.

- If you select **Cinema** in AV mode, **Cinema** will be selected both for **Picture Mode** and **Sound Mode** in **PICTURE** menu and **AUDIO** menu respectively.
- If you select "**Off**" in **AV mode**, the picture and image which you initially set will be selected.

INITIALIZING (RESET TO ORIGINAL FACTORY SETTINGS)


Use to quickly reset all the menu options to their original factory preset values.


This function deletes all TV programmes.

When the Initial Setting is completed, you must restart the Initializing setup.

| | OPTION | | |
|------------|-----------------|------------|--|
| (() | Input Label | A | |
| | SIMPLINK | : On | |
| | Key Lock | : Off | |
| \odot | Set ID | : 1 | |
| (2) | ISM Method | :Normal | |
| | Demo Mode | : Off | |
| | Mode Setting | : Home Use | |
| *** | Initial Setting | 0 | |

 \geqslant

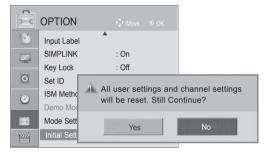

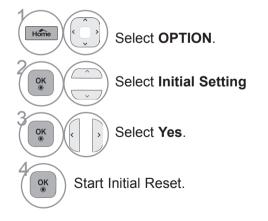

- Press the Home/EXIT button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.


WATCHING TV / PROGRAMME CONTROL


KEY LOCK

The TV can be set so that the remote control is required to control it.

This feature can be used to prevent unauthorized viewing.



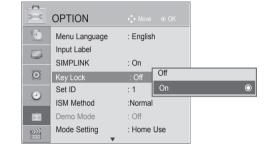

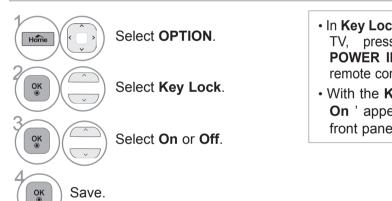


- In Key Lock 'On', if the TV is turned off, to turn on the TV, press the INPUT, P∧ ∨ button on the TV or POWER INPUT, P∧ ∨ or NUMBER buttons on the remote control then the set will be turned on.
- With the **Key Lock On**, the display ' **X Key Lock On** ' appears on the screen if any button on the front panel is pressed while viewing the TV.

- Press the Home/EXIT button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.

WHEN CONNECTING A USB DEVICE

When you connect a USB device, this pop up menu is displayed, automatically. "POP UP MENU" will not be displayed while the OSD including Menu is activated. In USB device, you can not add a new folder or delete the existing folder.

Image shown may differ from your TV.

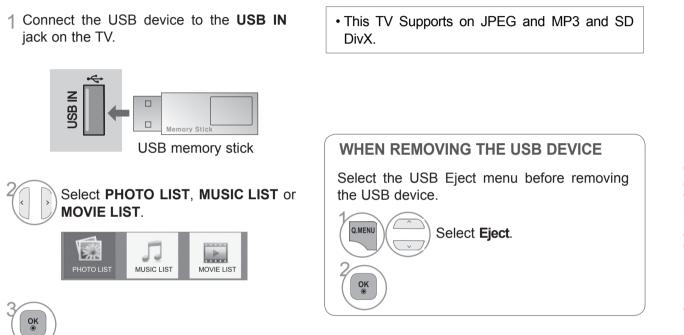

PRECAUTIONS WHEN USING THE USB DEVICE

- ► Only a USB storage device is recognizable.
- ▶ If the USB storage device is connected through a USB hub, the device is not recognizable.
- ► A USB storage device using an automatic recognition programme may not be recognized.
- ► A USB storage device which uses its own driver may not be recognized.
- ▶ The recognition speed of a USB storage device may depend on each device.
- Please do not turn off the TV or unplug the USB device when the connected USB storage device is working. When such device is suddenly separated or unplugged, the stored files or the USB storage device may be damaged.
- Please do not connect the USB storage device which was artificially maneuvered on the PC. The device may cause the product to malfunction or fail to be played. Never forget to use only a USB storage device which has normal music files or image files.
- Please use only a USB storage device which was formatted as a FAT16, FAT32, NTFS file system provided with the Windows operating system. In case of a storage device formatted as a different utility programme which is not supported by Windows, it may not be recognized. Data in a USB storage device cannot be deleted in the NTFS file system.
- Please connect power to a USB storage device which requires an external power supply. If not, the device may not be recognized.
- Please connect a USB storage device with cable is offered by USB maker. If connected with cable is not offered by USB maker or an excessively long cable, the device may not be recognized.
- Some USB storage devices may not be supported or operated smoothly.
- ▶ Maximum of 999 files and 200 folders can be recognized.
- ► Data in a USB storage device cannot be aligned.
- ▶ Up to 128 English characters can be recognized as a file name.
- Please back up the important file because a data of USB device may be damaged. Data management is consumer's responsibility and in consequence the manufactures does not cover the product bearing data damage.
- ▶ If the USB is connected in Standby Mode, specific hard disk will automatically be loaded when the TV is turned on.
- ▶ The recommended capacity is 1 TB or less for a USB external hard disk and 32 GB or less for USB memory.
- TV need more time to detect if the storage size is bigger. If the USB memory is connected in Standby Mode, power on time would be longer than without memory.
- ► Any device with more than the recommended capacity may not work properly.
- If a USB external hard disk with a "Energy Saving" function does not work, turn the hard disk off and on again to make it work properly.

PHOTO LIST

You can view photo files on USB storage device.

The On Screen Display may be different from your TV. Images are an example to assist with the TV operation. When you are watching the photo by the Photo List function, you can not change the picture mode.

PHOTO(*.JPEG) supporting file Baseline: Max 4800 x no limit Min 64 X 64

- Not support to progressive jpeg.
- You can play JPEG files only.
- Only baseline scan is supported among JPEG (SOF0, SOF1 only).
- Non-supported files are displayed in the form of bitmap.


SCREEN COMPONENTS

| Home Select USB. | Cox Cox Cox Cox Cox Cox Cox Cox |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Moves to upper level folder Current page/Total pages Total number of marked photos Corresponding buttons on the remote control | Photo List Page 2/3 x No Marked Image Drive 1 Up Folder Image 2/3 x No Marked x Y103 09/10/2008 Image 2/3 x No Marked x Y103 09/10/2008 Image 2/3 x No Marked x Y104 09/10/2008 Image 2/3 x No Marked x Y105 09/10/2008 Image 2/3 x No |
| | Navigation Popup Menu P Page Change Mark Exit |

PHOTO SELECTION AND POPUP MENU



 \mathbb{V}

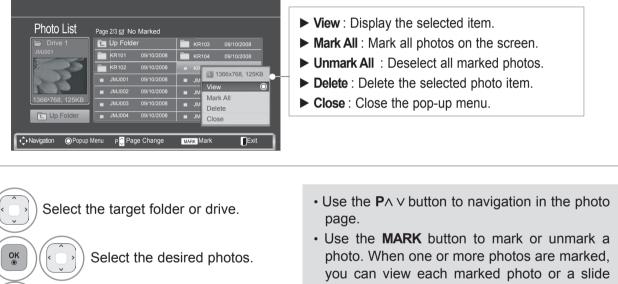

Show the PopUp menu.

OK

OK Select the desired PopUp menu.

 Use the MARK button to mark or unmark a photo. When one or more photos are marked, you can view each marked photo or a slide show of the marked photos. If no photos are marked, you can view every individual photo in the folder or a slide show of all photos in the folder.

• Press the **BACK** button to return to normal TV viewing.

SET UP THE MENU IN FULL-SIZED SCREEN

You can change the settings to display photos stored on a USB device, on a full-sized screen. Detailed operations are available on full-sized photo view screen.

 \gg


| Photo List | Page 2/3 🗹 No Marked | | |
|-----------------|-----------------------------------------------|-----------|------------|
| 📠 Drive 1 | 🔁 Up Folder | KR103 | 09/10/2008 |
| JMJ001 | E KR101 09/10/2008 | E KR104 | 09/10/2008 |
| | KR102 09/10/2008 | | 09/10/2008 |
| | JMJ001 09/10/2008 | JMJ005 | 09/10/2008 |
| | JMJ002 09/10/2008 | JMJ006 | 09/10/2008 |
| 1366×768, 125KB | JMJ003 09/10/2008 | JMJ007 | 09/10/2008 |
| L Up Folder | JMJ004 09/10/2008 | JMJ008 | 09/10/2008 |
| | | | |
| ♦ Navigation | llenu _P <mark>⊖</mark> Page Change | MARK Mark | 🚺 Exit |
| | | | |

 \mathbb{V}

| Photo List | Page 2/3 🗹 No I | Marked | | |
|-----------------|-----------------|------------|--------|------------------|
| ᡖ Drive 1 | 1 Up Folder | | - KR10 | |
| JMJ001 | E KR101 | 09/10/2008 | | 04 09/10/2008 |
| | E KR102 | 09/10/2008 | KR1 | 1366x768, 125KB |
| | JMJ001 | 09/10/2008 | JMJ | |
| | JMJ002 | 09/10/2008 | JMJ | View Mark All |
| 1366×768, 125KB | JMJ003 | 09/10/2008 | JMJ | Delete |
| L Up Folder | JMJ004 | 09/10/2008 | JMJ | Close |
| | | | | |



The aspect ratio of a photo may change the size of the photo displayed on the screen in full size. Press the **EXIT** button to move to the previous menu screen.

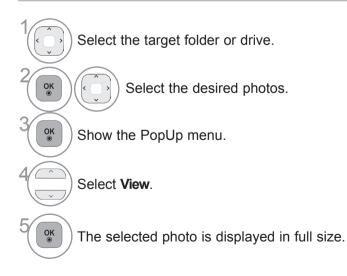



Select the Slideshow , BGM, (Rotate), Delete or Hide.

 Use <> button to select the previous or next photo.

OK


- Use < > button to select and control the menu on the full-sized screen.
- Slideshow : When no picture is selected, all photos in the current folder are displayed during slide show. If some photos are selected, those photos are displayed in a slide show.
 - Set the time interval of the slide show in **Option**.
- **BGM** (Background Music) : Listen to music while viewing photos in full size.
- Set the Music Folder for BGM in Options before using this function.
- ▶ **(Rotate)** : Rotate photos.
- Rotates the photo 90°, 180°, 270°, 360° clockwise.
- ► Delete : Delete photos.
- ▶ Hide : Hide the menu on the full-sized screen.
- To see the menu again on the full-sized screen, press OK button to display.

USING THE PHOTO LIST FUNCTION





| Choose Options | |
|-----------------|-------|
| Set Photo View. | O |
| Set Video. | |
| Set Audio. | |
| | Prev. |

▶ If you select "Off" for TV speaker, **Set Audio** features in Choose Options will not work.

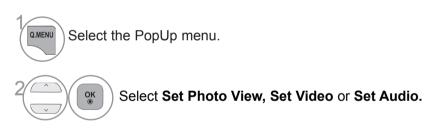


 - ► When you select the **Set Photo View**.
- You cannot change **Music Folder** while BGM is playing.

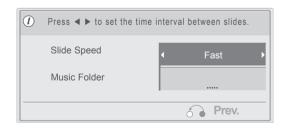




► When you select the Set Video.

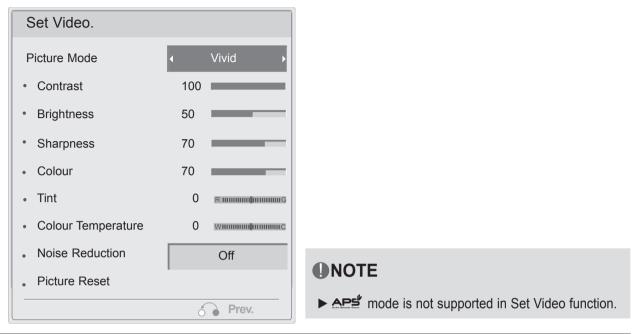

Make appropriate adjustments.(Refer to p.53 to 55, 58)

 ► When you select the **Set Audio**.





MUSIC LIST


Purchased music files(*.MP3) may contain copyright restrictions. Playback of these files may not be supported by this model.

Music file on your USB device can be played by this unit.

The On Screen Display may be different from your TV. Images are an example to assist with the TV operation.

MUSIC (*.MP3) supporting file Bit rate : 32 k to 320kbps Sampling rate MPEG1 layer 3 : 32 k to 48 kHz


SCREEN COMPONENTS

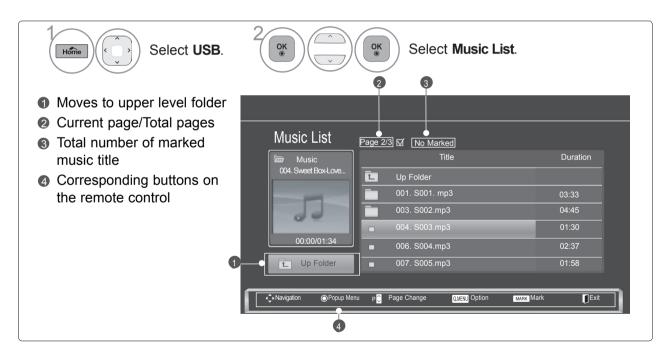

MUSIC SELECTION AND POPUP MENU

As shown, up to 6 music titles are listed per page.

| Music 004SvæBod.oe. | Page 23 g/ No Marked Trite Up Folder 01. S001.mp3 03. S002mp3 04. S003mp3 | Duration 03:33 04:45 01:30 | |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | 006. S004.mp3 | 02:37 | |
| L Up Folder | 007. S005.mp3 | 01:58 | |
| Navigation Popu | p Menu P 🗍 Page Change 🔍 MENU Opti | on MARK Mark Exit | Play (During stop) : Play the selected mutitles. |
| | \mathbb{V} | | Once a music finishes playing, the next sele ed one will be played. When there are selected music titles to play, the next one in current folder will be played. |
| | Title | Duration | Play Marked : Play the selected music tit Once a music finishes playing, the next sele ed one will be played automatically. |
| 53 | CUP Folder 001. S001. mp3 003. S002.mp3 | 03:33 04:45 | Stop Play (During playback) : Stop the play music titles. |
| L Up Folder | 004. S003.mp3 006. S004.mp3 007. S005.mp3 | 4395KB Itbps Play O Play with Photo | Play with Photo : Start playing the select music titles and then move to the Photo Lis |
| Navigation OPopu | ıp Menu P ◯ Page Change OMENU Opt | Mark All | Mark All : Mark all music titles in the folder |
| | | | Unmark All : Deselect all marked music titl Delete : Delete the selected music titles. |
| | | | |
| | | | Close : Close the pop-up menu. |

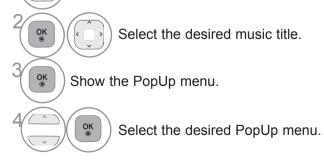

- Use the P∧ ∨ button to navigate up/down in the music page.
- Use MARK button to mark or unmark a music. When one or more music files are marked, the marked music title will be played in sequence. For example, if you want to listen to only one music repeatedly, just mark the music only and play it. If no music is marked, all the music in the folder will be played in sequence.

• Press the **BACK** button to return to normal TV viewing.

USING THE MUSIC LIST FUNTION, PLAY

| | | | ĺ | O a t A coallia | |
|-----------------------|---------------------------------------------------------|------------------|---|--------------------------------|----------------------------|
| Music List | Page 23 ⊠ No Marked | | | Set Audio. | |
| Music 04SveetBodoe | Title | Duration | | Sound Mode | Cinema |
| | to Up Folder | 03:33 | | * Auto Volume | Off |
| 00 | 003. S002.mp3 004. S003.mp3 | 04:45 01:30 | | * Clear Voice II | Off |
| L Up Folder | 006. S004.mp3 007. S005mp3 | 02:37 | | * Balance | 0 |
| | l Menu P ⊖ Page Change <mark>(0.MENU</mark> Optic | n MARK Mark Exit | | | Prev. |



Show the Sound Mode.

Make appropriate adjustments. (Refer to p.62 to 66)

NOTE

- ▶ If you select "Off" for TV speaker, Set Audio will not work.
- If you don't press any button for a while during the playing, the play information box (as shown in the below) will float as a screen saver.
- The 'Screen Saver'?

Screen saver is to prevent screen pixel damage due to an fixed image remaining on the screen for a extended period of time.



- ▶ When a music file is played, ♪ is displayed behind the title.
- ► A damaged or corrupted music does not play but displays 00:00 in playtime.
- ► A music downloaded from a paid service with copyright protection does not start but displays inappropriate information in playtime.
- ▶ If you press OK, buttons, screen saver is stopped.
- ► This TV can not play music files less than 32 Kbytes.
- ► The PLAY(►), Pause(II), ■, ►►, ◄< buttons on the remote control are also available in this mode.
- ▶ You can use the ▶▶ button to select the next music and the ◄◄ button to select the previous music.

MOVIE LIST

The movie list is activated once USB is detected. It is used when playing movie files on TV. Displays the movies in the USB folder and supports Play. Allows playback of all movies in the folder and user desired files.

Editing such as delete and add is not allowed.

It is a movie list that displays folder information and DivX file.

Supports up to four drives.

MOVIE(*.avi/*.DivX) supporting file

Video format : MPEG1 , MPEG2, MPEG4 (Doesn't support Microsoft MPEG4-V2, V3), DivX 3.xx , DivX 4.xx, DivX 5.xx , DivX VOD (DRM) , XviD, DivX 6.xx(Playback)

Audio format : Mpeg, Mp3, PCM, Dolby Digital.

Sampling frequency : 32 k to 48 kHz


Bit rate : 32 k to 320 kbps

Subtitle format : *.smi/ *.srt/ *.sub(MicroDVD, SubViewer 2.0)/ *.ass/ *.ssa/*.txt(DVD Subtitle System)

- Some user-created subtitles may not work properly.
- Time information in an external subtitle file should be arranged in ascending order to be played.
- The video file and the subtitle file must be located in the same folder.
- The name of the video file and the subtitle file must be the same to view the subtitles normally.
- If the video and audio structure of recorded file is not interleaved, either video or audio is outputted.
- Playing a video via a USB connection that does not support high speed may not work properly.
- USB storage devices below USB 2.0 are supported as well. But they may not work properly in the movie list.
- DivX may not be played depending on its types or recording methods.
- Max bitrate of playable DivX is 4 Mbps.
- Maximum FPS (Frame Per Second) can be reached only at SD level. FPS is 25 FPS (720*576) or 30 FPS (720*480) depending on Resolution.
- Files of 25 FPS or 30 FPS of higher may not be played properly.
- Files encoded with GMC(Global Motion Compensation) may not be played.
- · Certain video files created with an encoder may not be played.
- Some of subtitle files that are not ordered in sequence may not be display.

| Extension name | Video Decoder | Audio Codec | Resolution |
|--------------------------|------------------------------------------------------------------------------------|------------------|----------------------------|
| mpg, mpeg, mpe, vob, dat | MPEG1, MPEG2 | AC3,MPEG,MP3,PCM | |
| Avi, DivX, m4v | MPEG 4-SP, MPEG4-ASP, DivX 3.xx,DivX 4.xx, DivX 5.xx, DivX 6.xx(Playback), Xvid | AC3,MPEG,MP3,PCM | 720x576@25p 720x480@30p |

SCREEN COMPONENTS

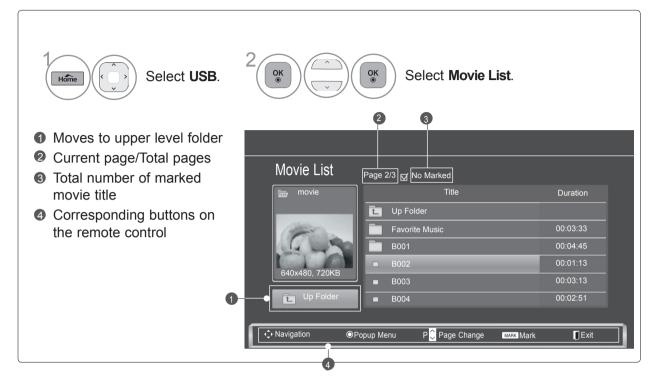

NOTE

- ► A DivX movie file and its subtitle file must be located in the same folder.
- ► A video file name and its subtitle file name must be identical for it to be displayed.
- Use the left/right (< / >) keys to move to a specific frame forward or backward while playing a movie. (The left/right (< / >) keys may not work properly for some files while playing a movie.)

MOVIE SELECTION AND POPUP MENU





- ▶ Play : Play the selected movie titles. DivX Play is executed while screen changes.
- ▶ Play Marked : Play the selected movie titles. Once a movie finishes playing, the next selected one will be played automatically.
- ► Mark AI I : Mark all movie titles in the folder.
- ▶ Unmark AI I : Deselect all marked movie titles.
- ▶ Delete : Delete the selected movie titles.
- Close : Close the pop-up menu.

Select the target folder or drive. OK ◉ Select the desired movie title OK ◉ Show the PopUp menu. OK ⊚ Select the desired PopUp menu. · In the case of files not supported, a message regarding non-supported file is displayed.

• Press the **BACK** button to return to normal TV viewing.


USING THE MUSIC LIST FUNTION, PLAY



| Choose Options. | |
|-----------------|---------|
| Set Video Play. | \odot |
| Set Video. | |
| Set Audio. | |
| | 6 Prev. |

NOTE

 ▶ If you select "Off" for TV speaker, Set Audio features in Choose Options will not work.



OK ● Select Set Video Play, Set Video or Set Audio.

► When you select the Set Video Play.

| Set Video Pla | ay. | ► Picture Size |
|-------------------|-----------------|----------------|
| Picture Size | ◄ Full Screen ► | play. |
| Audio Language | 1 / 8(AC3) | ► Audio Langu |
| Subtitle Language | 1 / 8 | Group of the |
| · Language | | Sync : Adjust |
| • Sync | | secs t |
| Position | | ► Position : 0 |
| | of Prev. | or down dur |

- Picture Size : Select your desired picture format during movie play.
- Audio Language & Subtitle Language : Change the Language Group of the audio/subtitle during movie play.
- Sync : Adjusts the time synchronisation of the subtitle from -10 secs to +10 secs by steps of 0.5 secs during movie play
 Position : Changes the Position of the subtitle either up or down during movie play

Show the Picture Size, Audio Language, or Subtitle Language.


Make appropriate adjustments.

| Subtitle Language | Support Language |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Latin1 | French, Spanish, Catalan Basque, Portuguese, Italian, Albanian, Rhaeto- Romanic, Dutch, German, Danish, Swedish, Norwegian, Finnish, Faroese, Icelandic, Irish, Scottish, English |
| Latin2 | Czech, Hungarian, Ploish, Romanian, Croatian, Slovak, Slovenian, Sorvian |
| Latin4 | Estonian, the Baltic languages Latvian(Lettish) and Lithuanian, Greenlandic and Lappish |
| Latin5 | English, Trukish |
| Cyrillic | Bulgarian, Byelorussian, Macedonian, Russian, Serbian and pre-1990 (no ghe with upturn) Ukrainian |
| Greek | English, modern Greek |
| Hebrew | English, modern Hebrew |
| Chinese | Chinese |
| Thai | Thai |
| Arabic | English, Arabic |

ONOTE

- Some special characters are not supported in subtitles.
- ► HTML tags are not supported in subtitles.
- Subtitles in languages other than the supported languages are not available.


► When you select the **Set Video**.

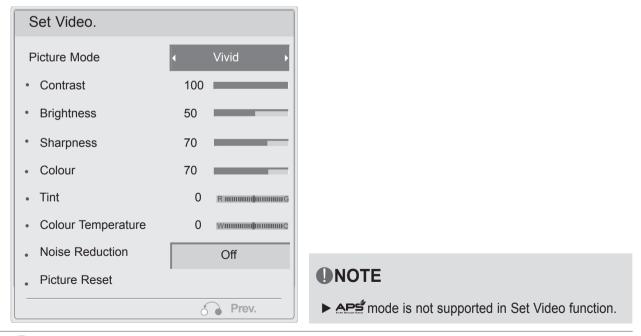

Make appropriate adjustments. (Refer to p.53 to 55, 58)

 ► When you select the **Set Audio**.





USING THE REMOTE CONTROL

| < | When playing, repeatedly, press the REW(\triangleleft) button to speed up \triangleleft \triangleleft (x2) -> \triangleleft \triangleleft (x4) -> \triangleleft \triangleleft \triangleleft (x8) -> \triangleleft \triangleleft \triangleleft (x16) -> \triangleleft \triangleleft \triangleleft (x32). repeatedly, press the FF(\blacktriangleright) button to speed up \triangleright \triangleright (x2) -> \triangleright \triangleright \triangleright (x4) -> \triangleright \triangleright \triangleright \triangleright (x8) -> \triangleright \triangleright \triangleright \triangleright \triangleright \triangleright \triangleright (x16) -> \triangleright \triangleright \triangleright \triangleright \triangleright (x32). • Pressing these buttons repeatedly increases the fast forward/reverse speed. |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Ш | During playback, press the Pause(II) button. ■ Still screen is displayed. |
| <> | ■ When using the 〈 or 〉 button during playback a cursor indicating the position can be viewed on the screen. |
| PLAY(►) | Press the PLAY(►) button to return to normal playback. |
| STOP (∎) | During playback, press the Stop(■) button. ■ Stop the playing movie. |

DIVX REGISTRATION CODE

Confirm the DivX registration code number of the TV. Using the registration number, movies can be rented or purchased at www.divx.com/vod.

With a DivX registration code from other TV, playback of rented or purchased DivX file is not allowed. (Only DivX files matched with the registration code of the purchased TV are playable.)

| USB Image: Second state Image: Second state </th <th>∲ Move © OK le</th> <th>≫</th> <th>USB Photo List Music List DivX Reg. C Deactivation Image: Construction Image: Construction</th> <th>Move ● OK DivX(R) Video On Demand Your registration Code is: xxxxxxxxxx To learn more visit www.divx.com/vod. Close</th> <th></th> | ∲ Move © OK le | ≫ | USB Photo List Music List DivX Reg. C Deactivation Image: Construction Image: Construction | Move ● OK DivX(R) Video On Demand Your registration Code is: xxxxxxxxxx To learn more visit www.divx.com/vod. Close | |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|-----------------------------|
| 2 | ct USB. ct DivX Reg. (| Code. | | | |
| Display Div | X Reg. Code. | | | return to normal TV view to the previous menu sc | • |
| DOLBY. | | l under license from ademarks of Dolby I | • | es. "Dolby "and the dou | ble-D |
| DIVX | ABOUT DIVX order to play p tion code, loca for more inform "DivX Certified DivX®, DivX 0 under license. Covered by or | VIDEO-ON-DEMANE urchased DivX Video- te the DivX VOD sect nation on how to com ® to play DivX® video Certified® and associa | D: This DivX Certified on-Demand (VOD) in tion in your device se plete your registratio o, including premium ated logos are tradem | | ered in gistra- x.com |
| | 7,519,274 | | | | |
| | | 480(720x576) WxH mes/sec | pixels. | | |


- ► Video Codec : MPEG1, MPEG2, MPEG4(Doesn't support Microsoft MPEG4-V2, V3), DivX3.xx, DivX4.xx, DivX5.xx, DivX VOD(DRM), XviD, DivX 6.xx(Playback).
- ► When loading, some buttons may not work.
- ► If you use the DivX registration code of another device, the rented or purchased DivX file cannot be played. Therefore always use the DivX registration code assigned to this product.

DEACTIVATION

Delete the existing authentication information to receive a new DivX user authentication for TV.

Once this function is executed, a DivX user authentication is required again to see DivX DRM files.

| | USB <€ Move ⊙ OK | | USB | | |
|----------|------------------|---------|----------------|----------------|---------------------------|
| (| Photo List | 6 | Photo List | | |
| | Music List | | Music List | | |
| | Movie List | | Movie List | | |
| 0 | DivX Reg. Code | \odot | DivX Reg. Code | | |
| ۲ | Deactivation 💿 | 2 | Deactivation | i DivX(R) | Video On Demand |
| 0 | | 0 | | Do you want to | o deactivate your device? |
| | | | | | |
| *** | | **** | | Yes | No |

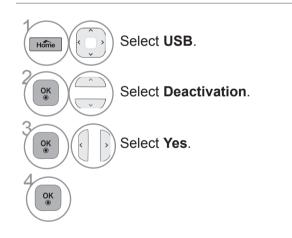


- Press the Home/EXIT button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.

PICTURE CONTROL

PICTURE SIZE (ASPECT RATIO) CONTROL

You can watch the screen in various picture formats; **16:9**, **Just Scan**, **Original**, **4:3**, **14:9**, **Zoom** and **Cinema Zoom1**.

If a fixed image is displayed on the screen for a long time, that fixed image may become imprinted on the screen and remain visible.

 

• 16:9

The following selection will allow you to adjust the picture horizontally, in linear proportion, to fill the entire screen(useful for viewing 4:3 formatted DVDs).



Just Scan

Following Selection will lead to you view the picture of best quality without loss of original picture in high resolution image.

Note : If there is noise in original Picture, You can see the noise at the edge.



• You can also adjust **Aspect Ratio** in the **PICTURE** or **Q.Menu** menu.

• Original

When your TV receives a wide screen signal it will automatically change to the picture format broadcast.



• 4:3

The following selection will allow you to view a picture with an original 4:3 aspect ratio, gray bars will appear on both the left and right of the screen.



• 14:9

You can view a picture format of 14:9 or a general TV programme in the 14:9 mode. The 14:9 screen is viewed in the same way as in 4:3, but is magnified to the left and right.



• Zoom

The following selection will allow you to view the picture without any alteration, while filling the entire screen. However, the top and bottom of the picture will be cropped.

- ▶ You can only select 4:3, 16:9 (Wide) in RGB mode only.
- ▶ In HDMI/Component (over 720p) mode, Just Scan is available.

Cinema Zoom1

Choose Cinema Zoom1 when you want to enlarge the picture in correct proportion. Note:When enlarging or reducing the picture, the image may become distorted.




PICTURE CONTROL


EXAMPLE SAVING

It reduces the plasma display's power consumption.

The default factory setting complies with the Energy Star requirements and is adjusted to the comfortable level to be viewed at home.

You can increase the brightness of your screen by adjusting the Energy Saving level or by setting the Picture Mode.

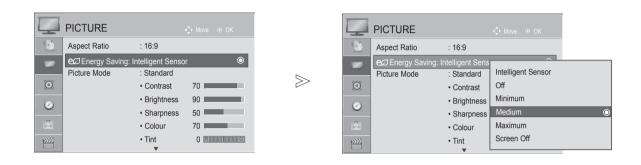

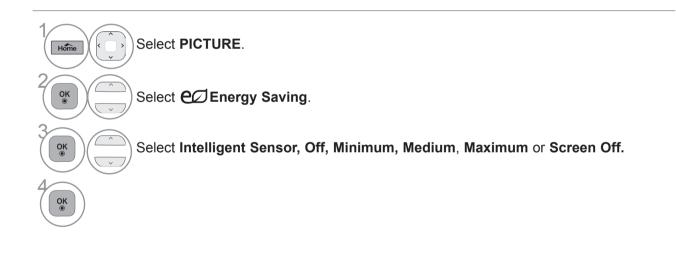

- When the Intelligent sensor function is on, the most suitable picture is automatically adjusted according to the surrounding conditions
- Intelligent Sensor : Adjusts picture according to the surrounding conditions.
- Screen Off : When you select Screen Off, the screen will be turned off in 3 seconds and Screen Off will start. If you do not press any button for 2 hours, the power of the TV will automatically be turned off.
- You can also adjust Energy Saving button.
- Press the Home/EXIT button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.

PRESET PICTURE SETTINGS

PICTURE MODE-PRESET

| Vivid | Strengthen the contrast, brightness, colour and sharpness for vivid picture. |
|-------------------------|---------------------------------------------------------------------------------------------------------------|
| Standard | The most general screen display status. |
| AP5 (Auto Power Saving) | Maximize reducting the power consumption without hurting the picture quality. Optimizes power consumption. |
| Cinema | Optimizes video for watching movies. |
| Sport | Optimizes video for watching sports events. |
| Game | Optimizes video for playing games. |
| | |

| | PICTURE | | | | | PICTURE | | 🗘 Move 💿 OK |
|--------|------------------|--------------------------------|------|--------|---------|------------------|-------------------------------|-------------|
| | Aspect Ratio | : 16:9 | | | 6 | Aspect Ratio | : 16:9 | |
| | ec Energy Saving | : Off | | | | ec Energy Saving | : Off | |
| | Picture Mode | : Vivid | O | ~ | | Picture Mode | | Vivid |
| 0 | | Contrast | 70 | \geq | \odot | | Contrast | Standard |
| 2 | | Brightness | 90 | | 0 | | Brightnes | |
| \cup | | Sharpness | 50 | | \cup | | Sharpnes | |
| | | Colour | 70 | | | | Colour | Cinema |
| >>>> | | Tint | 0 RG | | | | Tint | Sport |
| 100 | | • | | | 200 | | • | Game |

Select PICTURE.

Home

OK ◉

OK

OK

Select Picture Mode.

Select Vivid, Standard, APS, Cinema, Sport or Game. • **Picture Mode** adjusts the TV for the best picture appearance. Select the preset value in the **Picture Mode** menu based on the programme category.

0

• You can also adjust **Picture Mode** in the **Q. Menu**.

- Press the Home/EXIT button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.

PICTURE CONTROL

MANUAL PICTURE ADJUSTMENT

PICTURE MODE-USER OPTION

Contrast

Adjusts the signal level between black and white in the picture.

Brightness

Adjusts the base level of the signal in the picture.

Sharpness

Adjusts the level of crispness in the edges between the light and dark areas of the picture. The lower the level, the softer the image.

Colour

Adjusts intensity of all colours.

Tint

Adjusts the balance between red and green levels.

Colour Temperature

Adjust the balance between red(warm) and blue(cool) level of white balance.

| | PICTURE | | | | | | | |
|----------|------------------|--------------------------------|--------------|-------|----------|----------|---|----|
| (| Aspect Ratio | : 16:9 | | | | | | |
| - | eØ Energy Saving | : Off | | • | | A | | |
| | Picture Mode | : Standard | | \gg | Contrast | 88 | • | |
| \odot | | Contrast | 100lo | | | • | | OK |
| 2 | | Brightness | 90 | | | | | |
| | | Sharpness | 50 | | | | | |
| | | Colour | 70 | | | | | |
| >>>> | | • Tint | 0 RIIIIIIIII | | | | | |
| | | • | | | | | | |

Select PICTURE. Select Picture Mode. Select Vivid, Standard, APS, Cinema, Sport or Game. Select Contrast, Brightness, Sharpness, Colour, Tint or Colour Temperature. Make appropriate adjustments.

- Press the Home/EXIT button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.

NOTE

▶ You cannot adjust colour, sharpness and tint in the RGB-PC mode.

PICTURE IMPROVEMENT TECHNOLOGY

Dynamic Contrast(Off/Low/High)

Adjusts the contrast to keep it at the best level according to the brightness of the screen. The resolution of gradation is improved by making bright parts brighter and dark parts darker. This feature refers to dynamic contrast, and enhances the feeling of presence that contrast controls are intended to give by using dimming and other input signals.

Dynamic Colour(Off/Low/Medium/High)

Adjusts screen colours so that they look livelier, richer and clearer. This feature enhances hue, saturation and luminance so that red, blue, green and white look more vivid.

Noise Reduction(Off/Low/Medium/High)

Reduces screen noise without compromising video quality. This feature is also used to reduce recursive noise and MPEG noise (Mosquito/Block).

Gamma(Low/Medium/High)


Home

OK ●

OK ()

You can adjust brightness of dark area and middle gray level area of the picture.

- · Low : Make dark and middle gray level area of the picture brighten.
- Medium: Express original picture gradation.
- High: Make dark and middle gray level area of the picture darken.

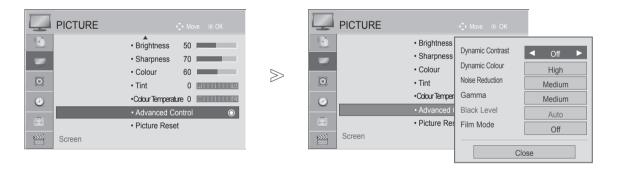

Select PICTURE.

Select Advanced Control.

Select Dynamic Contrast, Dynamic Colour, Noise Reduction, Gamma, Black Level or Film Mode.

Select your desired Source.


- Press the Home/EXIT button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.


PICTURE CONTROL


ADVANCED - BLACK(DARKNESS) LEVEL

Makes dark parts on the screen look darker.

This function works in the following mode: TV, AV, COMPONENT or HDMI.

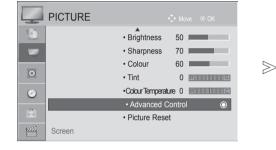

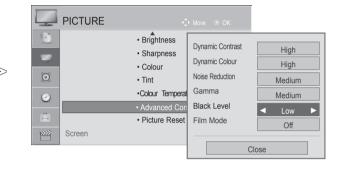

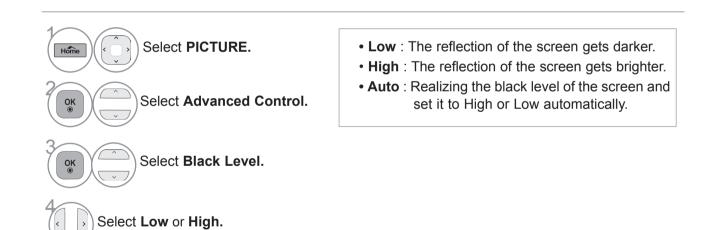



- Press the Home/EXIT button to return to normal TV viewing.
- Press the BACK button to move to the previous menu screen.

ADVANCED - FILM MODE

Makes video clips recorded in film look more natural.

This feature operates only in TV, AV and Component 480i/576i mode.

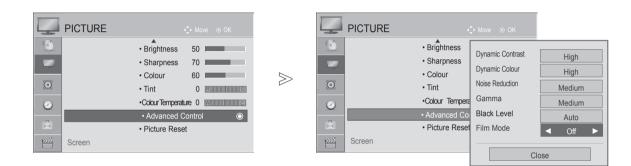

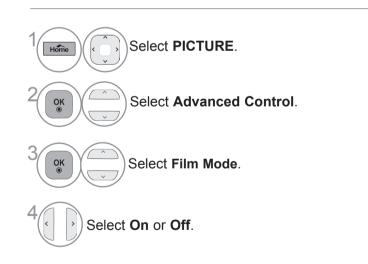

- Press the Home/EXIT button to return to normal TV viewing.
- Press the BACK button to move to the previous menu screen.


PICTURE CONTROL

PICTURE CONTROL

PICTURE RESET

Settings of the selected picture modes return to the default factory settings.

| | | | | PICTURE |
|-----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|----|------------------------------------|
| <u>()</u> | Brightness 50 Sharpness 70 | | | • Brightness 50 |
| | Colour 60 Tint 0 | \geqslant | 0 | Sharpness 70 |
| ٢ | Colour Temperature 0 Manual Annual | | 9 | ① Resetting video configuration |
| | Advanced Control Picture Reset | | ÷. | Advanced Control Picture Reset |
| Screen | | | | Screen |

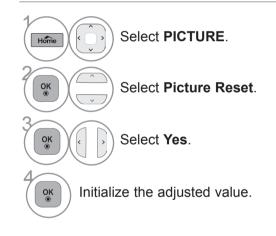

PICTURE CONTROL

- Press the Home/EXIT button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.

IMAGE STICKING MINIMIZATION (ISM) METHOD

A frozen or still picture from a PC/Video game displayed on the screen for prolonged periods will result in a ghost image remaining even when you change the image. Avoid allowing a fixed image to remain on the screen for prolonged periods.

Normal

If image sticking is never a problem, ISM is not necessary - set to Normal.

Orbiter

Orbiter may help prevent ghost images. However, it is best not to allow any fixed image to remain on the screen. To avoid a permanent image on the screen, the screen will move every 2 minutes.


Colour Wash


The colour block with the screen moved a little and the white pattern are alternately displayed. It is difficult to sense the afterimage occurred while the temporary afterimage is removed and the colour pattern is operating.

White Wash

White wash removes permanent images from the screen.

Note: An excessive permanent image may be impossible to clear entirely with White Wash.

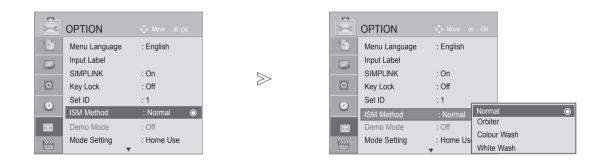

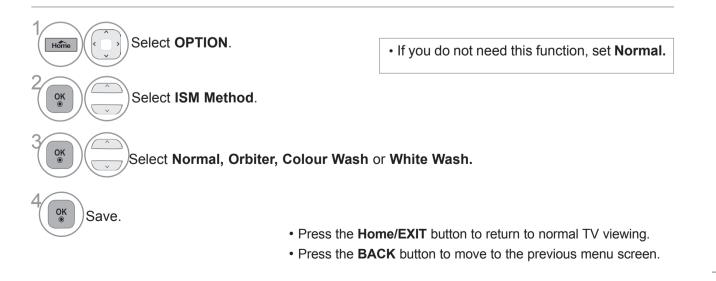


PICTURE CONTROL


DEMO MODE

Use it to see the difference between XD Demo on and XD Demo off.

It is not possible to use **Demo Mode** in **Home Use** mode. In **Store Demo**, **Demo Mode** is automatically set to **On**.

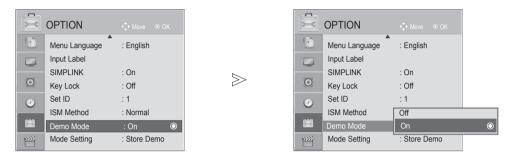



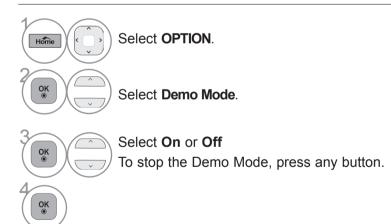

• Press the Home/EXIT button to return to normal TV viewing.

• Press the BACK button to move to the previous menu screen.

MODE SETTING

We recommend setting the TV to "**Home Use** " mode for the best picture in your home environment. "**Store Demo** " mode is an optimal setting for displaying at stores.

 \geq

| 7 | OPTION | |
|-----------|---------------|----------------|
| (| Menu Language | English |
| | Input Label | |
| | SIMPLINK | : On |
| \odot | Key Lock | : Off |
| ۲ | Set ID | : 1 |
| 0 | ISM Method | : Normal |
| | Demo Mode | : On |
| »»»» = | Mode Setting | : Store Demo 🔘 |





- Press the Home/EXIT button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.


SOUND & LANGUAGE CONTROL

AUTO VOLUME LEVELER

Auto Volume automatically remains on the same level of volume if you change programmes.

Because each broadcasting station has its own signal conditions, volume adjustment may be needed every time the channel is changed. This feature allows users to enjoy stable volume levels by making automatic adjustments for each programme.

| | 🗘 Move 💿 OK | | \bigcirc | AUDIO | | | |
|----------------|-------------------------|-------|------------|----------------|-----------------------------------|-------------|---|
| Auto Volume | : Off 💿 | | 6 | Auto Volume | : Off | Off | - |
| Clear Voice II | : Off | | | Clear Voice II | : Off | On | |
| | • Level 3 - | \gg | | | Level | 3 - | |
| Balance | 0 LR | | 0 | Balance | | 0 L | |
| Sound Mode | : Standard | | 0 | Sound Mode | : Standard | | |
| | Infinite Surround : Off | | | | Infinite Surr | round : Off | |
| Ē | Treble 50 | | Ē | | Treble | 50 | |
| >)))) | • Bass 50 | | | | • Bass | 50 | |

 

Select AUDIO.


Select Auto Volume.

Select On or Off.


- Press the Home/EXIT button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.


CLEAR VOICE II

By differentiating the human sound range from others, it helps users listen to human voices better.

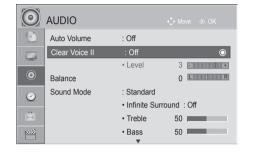



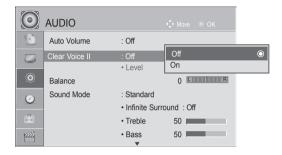

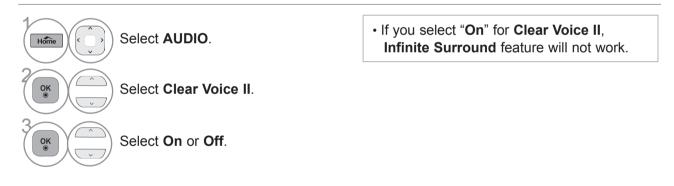

ADJUSTMENT FOR CLEAR VOICE LEVEL WITH SELECTING ON



- Press the Home/EXIT button to return to normal TV viewing.
- Press the BACK button to move to the previous menu screen.

SOUND & LANGUAGE CONTROL


PRESET SOUND SETTINGS-SOUND MODE


You can select your preferred sound setting; Standard, Music, Cinema, Sport or Game and you can also adjust the Treble, Bass.

Sound Mode lets you enjoy the best sound without any Special adjustment as the TV sets the appropriate sound options based on the programme content.

Standard, Music, Cinema, Sport and Game are preset for optimum sound quality at the factory.

| Standard | Offers standard-quality sound. |
|----------|---------------------------------------------|
| Music | Optimizes sound for listening to music. |
| Cinema | Optimizes sound for watching movies. |
| Sport | Optimizes sound for watching sports events. |
| Game | Optimizes sound for playing games. |

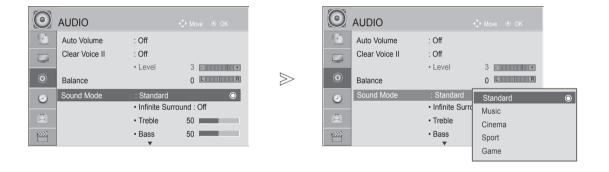

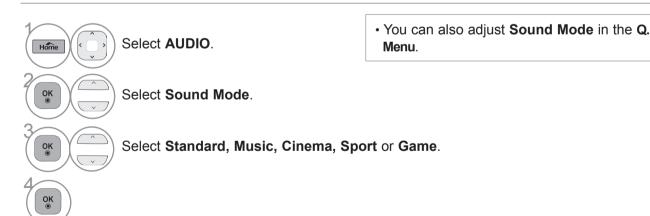


- Press the Home/EXIT button to return to normal TV viewing.
- Press the BACK button to move to the previous menu screen.

SOUND SETTING ADJUSTMENT -USER MODE

Adjusting the audio equalizer


| | | | | © 0K |
|----------------|-------------------------|----------------|---------------------------------------------|-----------------------|
| Auto Volume | : Off | Auto Volume | : Off | |
| Clear Voice II | : Off | Clear Voice II | : Off | |
| | • Level 3 • • • • • | | • Level 3 - | |
| O Balance | | Balance | 0 | |
| Sound Mode | : Standard | Sound Mode | : Standard | |
| | Infinite Surround : Off | | Infinite Surround : Off | Infinite Surround Off |
| Ē | • Treble 50O | Ē | • Treble 50 | • Treble 50 < |
| »))) | • Bass 50 | > | • Bass 50 | • Bass 50 |
| | ▼ | | ▼ | Close |

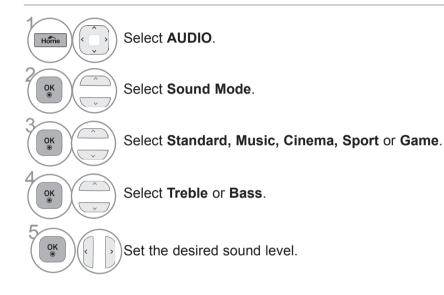

- Press the Home/EXIT button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.

INFINITE SURROUND

 Select this option to sound realistic.



Select AUDIO.

Select On or Off.

Select Infinite Surround.


• Infinite Surround : Infinite Surround is a patented LG proprietary sound processing technology that strives immersive 5.1 surround sound impression with front two loud-speakers.

SOUND & LANGUAGE CONTROL

BALANCE

You can adjust the sound balance of the speakers to preferred levels.



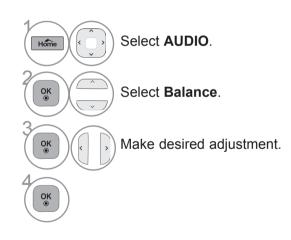

- Press the Home/EXIT button to return to normal TV viewing.
- Press the BACK button to move to the previous menu screen.


TV SPEAKERS ON/ OFF SETUP

You can adjust the TV internal speaker status.

Select On or Off.

In **AV COMPONENT**, **RGB** and **HDMI** with HDMI to DVI cable, the TV speaker can be operational even when there is no video signal.

If you wish to use an external Hi-Fi system, turn off the TV's internal speakers.

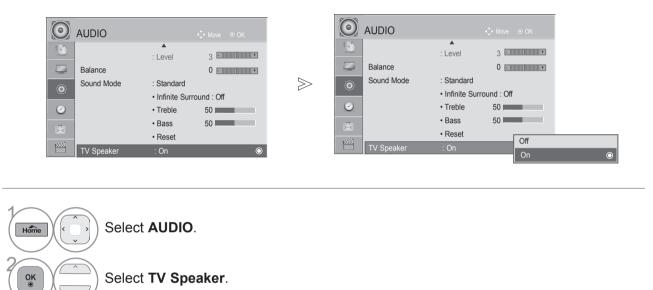

- Press the **Home/EXIT** button to return to normal TV viewing.
- \bullet Press the $\ensuremath{\textbf{BACK}}$ button to move to the previous menu screen.

NOTE

OK ●


OK


When the TV speaker is turned off while the Simplink home theater is operating, the sound output automatically switches to the Home theater speaker, but when the TV speaker is turned on, the sound output the TV speaker.

SOUND & LANGUAGE CONTROL

AUDIO RESET

Settings of the selected Sound Mode return to the default factory settings.

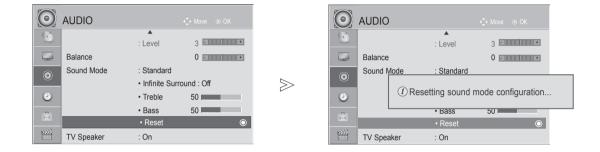

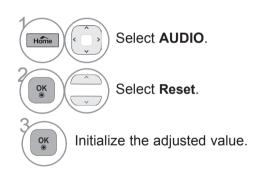


- Press the Home/EXIT button to return to normal TV viewing.
- Press the BACK button to move to the previous menu screen.

|/||

STEREO/DUAL RECEPTION

 When a programme is selected, the sound information for the station appears with the programme number and station name.



| Broadcast | On Screen Display |
|-----------|----------------------------|
| Mono | MONO |
| Stereo | STEREO |
| Dual | DUAL I, DUAL II, DUAL I+II |

Mono sound selection

If the stereo signal is weak in stereo reception, you can switch to mono. In mono reception, the clarity of sound is improved.

Language selection for dual language broadcast

If a programme can be received in two languages (dual language), you can switch to DUAL I, DUAL II or DUAL I+II.

- **DUAL I** Sends the primary broadcast language to the loudspeakers.
- **DUAL II** Sends the secondary broadcast language to the loudspeakers.
- **DUAL I+II** Sends a separate language to each loudspeaker.

SOUND & LANGUAGE CONTROL

NICAM RECEPTION

2

3

If the TV is equipped with a receiver for NICAM reception, high quality NICAM (Near Instantaneous Companding Audio Multiplex) digital sound can be received.

Sound output can be selected according to the type of broadcast received.

When **NICAM mono** is received, you can select **NICAM MONO** or **FM MONO**.

When **NICAM stereo** is received, you can select **NICAM STEREO** or **FM MONO**. If the stereo signal is weak, switch to **FM MONO**.

When NICAM dual is received, you can select NICAM DUAL I, NICAM DUAL II or NICAM DUAL I+II or FM MONO.

SPEAKER SOUND OUTPUT SELECTION

In AV, Component, RGB and HDMI mode, you can select output sound for the left and right loudspeakers.

 
Select the sound output.

- L+R: Audio signal from audio L input is sent to the left loudspeaker and audio signal from audio R input is sent to the right loudspeaker.
- L+L: Audio signal from audio L input is sent to left and right loudspeakers.

R+R: Audio signal from audio R input is sent to left and right loudspeakers.

ON-SCREEN MENU LANGUAGE SELECTION

The installation guide menu appears on the TV screen when it is switched on for the first time.



* If you want to change Language/ Country selection



- Press the **Home/EXIT** button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.

NOTE

► If you do not finish the set-up Installation Guide by pressing BACK or if you time out on the OSD (On Screen Display) the installation menu will continuously appear until the set up is completed whenever the TV is switched on.


TIME SETTING

CLOCK SETUP


You must set the time correctly before using on/off timer function.

If current time setting is erased by a power failure or the TV is unplugged, reset the clock.

 \gg

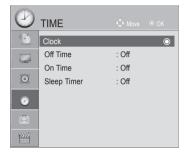



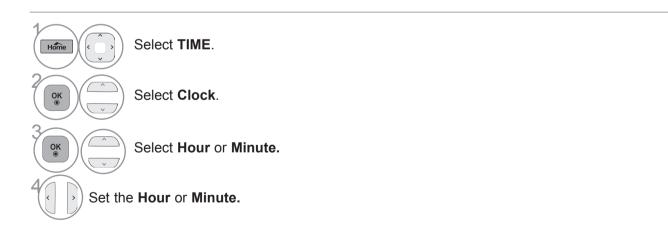


- Press the Home/EXIT button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.

AUTO ON/OFF TIME SETTING

The Off time function automatically switches the TV to standby at a preset time.

Two hours after the TV is switched on by the on time function it will automatically switch back to standby mode unless a button has been pressed.


The Off time function overrides the On timer function if both are set to the same time. The TV must be in standby mode for the On timer to work.

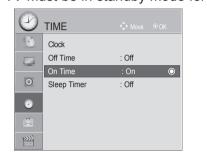

| | \bigcirc | TIME | < ↓ Move | ⊙OK | |
|-------------|------------|------------------------------|----------------|------------------------------------------------|--|
| | | Clock Off Time On Time | 23:59 | | |
| \geqslant | 0 | Sleep Timer | Hour Minute | On 00 00 | |
| | | | Programme | 1 | |
| | | | Volume | 30 | |
| | | | | Close | |



 When the On Time is selected

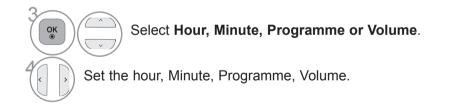

- Press the **Home/EXIT** button to return to normal TV viewing.
- Press the **BACK** button to move to the previous menu screen.

SLEEP TIMER SETTING

You do not have to remember to switch the TV off before you go to sleep.

The sleep timer automatically switches the TV to standby after the preset time has elapsed.



Select Sleep Timer.

Select Off, 10, 20, 30, 60, 90, 120, 180 or 240 min.

- When you switch the TV off, the preset sleep timer is cancelled.
- You can also adjust Sleep Timer in the TIME menu.

TELETEXT

This feature is not available in all countries.

Teletext is a free service broadcast by most TV stations which gives up-tothe-minute information on news, weather, television programmes, share prices and many other topics.

The teletext decoder of this TV can support the SIMPLE, TOP and FASTEXT systems. SIMPLE (standard teletext) consists of a number of pages which are selected by directly entering the corresponding page number. TOP and FASTEXT are more modern methods allowing quick and easy selection of teletext information.

SWITCH ON/OFF

Press the **TEXT** button to switch to teletext. The initial page or last page viewed appears on the screen.

Two page numbers, TV station name, date and time are displayed on the screen headline. The first page number indicates your selection, while the second shows the current page displayed.

Press the **TEXT** button to switch off teletext. The previous mode reappears.

SIMPLE TEXT

- Page selection
- Enter the desired page number as a three digit number with the NUMBER buttons. If during selection you press a wrong number, you must complete the three digit number and then re-enter the correct page number.
- 2 The $P \land \lor$ button can be used to select the preceding or following page.

TOP TEXT

The user guide displays four fields-red, green, yellow and blue at the bottom of the screen. The yellow field denotes the next group and the blue field indicates the next block.


Block / group / page selection

- With the blue button you can progress from block to block.
- **2** Use the yellow button to proceed to the next group with automatic overflow to the next block.
- With the green button you can proceed to the next existing page with automatic overflow to the next group.
- Alternatively the $\mathbf{P} \wedge$ button can be used.

The red button returns to the previous selection. Alternatively the $\mathbf{P} \lor$ button can be used.

Direct page selection

As with SIMPLE teletext mode, you can select a page by entering it as a three digit number using the NUMBER buttons in TOP mode.

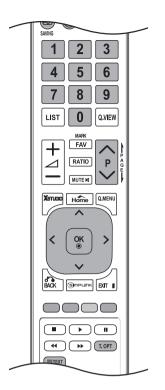

FASTEXT

The teletext pages are colour coded along the bottom of the screen and are selected by pressing the corresponding coloured button.

Page selection

- **1** Press the **T.OPT** button and then use $\land \lor$ button to select $\exists \exists menu$. Display the index page.
- You can select the pages which are colour coded along the bottom line with corresponding coloured buttons.
- S AS with SIMPLE teletext mode, you can select a page by entering its three digit page number with the NUMBER buttons in FASTEXT mode.
- **4** The $P \land \lor$ button can be used to select the preceding or following page.

SPECIAL TELETEXT FUNCTIONS

• Press the **T. OPT** button and then use $\land \lor$ button to select the **Text Option** menu.



Index

Select the each index page.

| ΞĐ |
|----|
|----|

Time

When viewing a TV programme, select this menu to display the time at the top right hand corner of the screen.

In the teletext mode, press this button to select a sub page number. The sub page number is displayed at the bottom of the screen. To hold or change the sub page, press the RED/GREEN, < > or NUMBER buttons.



Hold

Stops the automatic page change which will occur if a teletext page consists of 2 or more sub pages. The number of sub pages and the sub page displayed is, usually, shown on the screen below the time. When this menu is selected the stop symbol is displayed at the top left-hand corner of the screen and the automatic page change is inactive.



Reveal

Select this menu to display concealed information, such as solutions to riddles or puzzles.



Update

Displays the TV picture on the screen while waiting for a new teletext page. The display will appear at the top left hand corner of the screen. When the updated page is available then display will change to the page number. Select this menu again to view the updated teletext page.



TROUBLESHOOTING

| The TV does not operate properly. | | | | |
|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|--|
| The remote control does not work | Check to see if there is any object between the TV and the remote control causing an obstruction. Ensure you are pointing the remote control directly at the TV. Ensure that the batteries are installed with correct polarity (+ to +, - to -). | | | |
| Power is suddenly | Install new batteries. Is the sleep timer set? Check the power control settings. Has the Power supply been interrupted. | | | |
| turned off | If the TV is switched on and there is no input signal, it will switch off auto- matically after 15 minutes. | | | |

| The video function does | The video function does not work. | | | | |
|--------------------------|-------------------------------------------------------------------------------------------------|--|--|--|--|
| | Try another channel. The problem may be with the broadcast. | | | | |
| No picture & No sound | Is the power cord inserted correctly into the mains? | | | | |
| | Check your antenna direction and/or location. | | | | |
| | Test the mains outlet by plugging another TV into the same outlet. | | | | |
| Picture appears slowly | This is normal, the image is muted during the TV startup process. Please contact | | | | |
| after switching on | your service centre, if the picture has not appeared after five minutes. | | | | |
| | Adjust Colour in menu option. | | | | |
| No or poor colour | Allow a sufficient distance between the TV and the VCR. | | | | |
| or poor picture | Try another channel. The problem may be with the broadcast. | | | | |
| | Are the video cables installed properly? | | | | |
| | Activate any function to restore the brightness of the picture. | | | | |
| Horizontal/vertical bars | Check for local interference such as an electrical appliance or power tool. | | | | |
| or picture shaking | | | | | |
| Poor reception on | Station or cable channel experiencing problems, tune to another station. | | | | |
| some channels | Station signal is weak, reposition the antenna to receive weaker stations. | | | | |
| | Check for sources of possible interference. | | | | |
| Lines or streaks | Check antenna (Change the position of the antenna). | | | | |
| in pictures | | | | | |
| No picture | Check that your HDMI cable is High Speed HDMI Cable. | | | | |
| when connecting | If the HDMI cables are not High Speed HDMI Cable, flickering or no screen display | | | | |
| HDMI | can result. Please use the High Speed HDMI Cable. | | | | |

| The audio function does not work. | | |
|-------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Picture OK & No sound | Check whether the TV is switched on. Press the ∠ + or - button. Sound muted? Press MUTE button. Try another channel. The problem may be with the broadcast. Are the audio cables installed properly? | |
| No output from one of the speakers | Adjust Balance in menu option. | |
| Unusual sound from inside the TV | A change in ambient humidity or temperature may result in an unusual noise when the TV is switched on or off and does not indicate a fault with the TV. | |
| No sound when con- necting HDMI or USB | Check HDMI cable is High Speed HDMI Cable.Check USB cable over version 2.0. | |

| There is a problem in PC mode. (Only PC mode applied) | | | |
|---------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|--|--|
| The signal is out of range (Invalid format) | Adjust resolution, horizontal frequency, or vertical frequency. Check the input source. | | |
| Vertical bar or stripe on background & Horizontal Noise & Incorrect position | Use Auto configure or adjust size, phase, or H/V position. (Option) | | |
| Screen colour is unstable or single colour | Check the signal cable.Reinstall the PC video card. | | |

There is a problem with PICTURE settings.

When the user changes the picture settings, the TV automatically converts back to the initial settings after a certain period of time.

It means that the TV is currently set to Store Demo mode. To switch to Home use mode you should do the followings: From the TV Menu, choose OPTION -> Choose Mode Setting -> Choose Home use. Now, you have completed switching to the Home use mode.

MAINTENANCE

Early malfunctions can be prevented. Careful and regular cleaning can prolong the life of your new TV.

Caution: Be sure to switch the power off and unplug the power cord before you begin any cleaning.

CLEANING THE SCREEN

A good way to keep the dust off your screen for a while is to wet a soft cloth in a mixture of luke-1) warm water and a little fabric softener or dish washing detergent. Wring the cloth until it is almost dry, and then use it to wipe the screen.



2 Ensure there is no excess water on the screen. Allow any water or dampness to evaporate before switching on.

CLEANING THE CABINET

- To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth.
- Do not to use a wet cloth.

EXTENDED ABSENCE

ACAUTION

▶ If you expect to leave your TV dormant for prolonged periods (such as a holiday), unplug the power cord to protect against possible damage from lightning or power surges.

PRODUCT SPECIFICATIONS

| МО | DELS | 42PT2*** 42PT250R-TA 42PT251R-TB | 50PT2*** 50PT250R-TA 50PT251R-TB | | |
|---------------------------------|-----------------------------|----------------------------------------------------------------------|-------------------------------------------|--|--|
| Dimensions (Width x Height x | with stand | 987.6 mm x 662.8 mm x 230.5 mm | 1171.9 mm x 770.9 mm x 289.8 mm | | |
| Depth) | without stand | 987.6 mm x 608.9 mm x 52.5 mm | 1171.9 mm x 712.2 mm x 52.5 mm | | |
| Weight | with stand without stand | 21.4 kg 19.9 kg | 29.5 kg 27.2 kg | | |
| | | 42PT3*** | 50PT3*** | | |
| MODELS | | 42PT350R-TD 42PT351R-TC 42PT352R-TB | 50PT350R-TD 50PT351R-TC 50PT352R-TB | | |
| Dimensions (Width x Height x | with stand | 991.8 mm x 667.0 mm x 230.5 mm | 1176.1 mm x 774.7 mm x 289.8 mm | | |
| Depth) | without stand | 991.8 mm x 613.8 mm x 52.5 mm | 1176.1 mm x 716.5 mm x 52.5 mm | | |
| Weight | with stand without stand | 21.5 kg 20.0 kg | 29.6 kg 27.3 kg | | |
| Television System | | PAL/SECAM B/G/D/K, PAL I/II, NTSC-M | | | |
| Programme Coverage | | VHF: NZ1 to E21, UHF: E21 to E69, CATV: S1 to S20, HYPER: S21 to S47 | | | |
| External Antenna Imp | edance | 75 Ω | | | |
| Operating Temperature | | 0 °C to 40 ° | | | |
| Environment condition | Operating Humidity | Less that | an 80 % | | |
| | Storage Temperature | -20 °C t | o 60 °C | | |
| | Storage Humidity | Less that | an 85 % | | |
| Supported movie files | | Refer to p. 42 | | | |

The specifications shown above may be changed without prior notice for quality improvement.

For the power supply and power consumption refer to the label attached to the product.

| MO | | 42PT5*** | 50PT5*** | | |
|---------------------------------|-----------------------------|----------------------------------------------------------------------|---------------------------------|--|--|
| MODELS | | 42PT560R-TD | 50PT560R-TD | | |
| Dimensions (Width x Height x | with stand | 1120.6 mm x 662.8 mm x 230.5 mm | 1305.3 mm x 770.9 mm x 289.8 mm | | |
| Depth) | without stand | 1120.6 mm x 608.9 mm x 59.0 mm | 1305.3 mm x 712.2 mm x 60.5 mm | | |
| Weight | with stand without stand | 24.4 kg 22.9 kg | 32.7 kg 30.4 kg | | |
| | | 50P\ | /2*** | | |
| MODELS | | 50PV250R-TB | | | |
| Dimensions (Width x Height x | with stand | 1171.9 mm x 770.9 mm x 289.8 mm | | | |
| Depth) | without stand | 1171.9 mm x 712.2 mm x 52.5 mm | | | |
| Weight | with stand without stand | 29.8 27.5 | • | | |
| Television System | | PAL/SECAM B/G/D/K, PAL I/II, NTSC-M | | | |
| Programme Coverage | | VHF: NZ1 to E21, UHF: E21 to E69, CATV: S1 to S20, HYPER: S21 to S47 | | | |
| External Antenna Impo | edance | 75 Ω | | | |
| | Operating Temperature | 0 °C to 40 °C | | | |
| Environment condition | Operating Humidity | Less that | an 80 % | | |
| | Storage Temperature | -20 °C t | o 60 °C | | |
| Storage Humidity | | Less than 85 % | | | |
| Supported movie files | | Refer to p. 42 | | | |

• The specifications shown above may be changed without prior notice for quality improvement.

• For the power supply and power consumption refer to the label attached to the product.

IR CODES

*This feature is not available for all models.

| Code (Hexa) | Function | Note |
|-------------|-------------------|------------|
| 08 | ပ် power | R/C BUTTON |
| 95 | Energy Saving | R/C BUTTON |
| 0B | INPUT | R/C BUTTON |
| 0F | TV | R/C BUTTON |
| 45 | Q.MENU | R/C BUTTON |
| 43 | Home | R/C BUTTON |
| 7C | Xstudio | R/C BUTTON |
| 40 | Up (^) | R/C BUTTON |
| 41 | Down (∨) | R/C BUTTON |
| 07 | Left (<) | R/C BUTTON |
| 06 | Right (>) | R/C BUTTON |
| 44 | OK (⊚) | R/C BUTTON |
| 28 | BACK (🔊) | R/C BUTTON |
| 30 | AV MODE | R/C BUTTON |
| 02 | ⊿+ | R/C BUTTON |
| 03 | ⊿- | R/C BUTTON |
| 1E | FAV (MARK) | R/C BUTTON |
| 79 | RATIO | R/C BUTTON |
| 09 | MUTE | R/C BUTTON |
| 00 | РΛ | R/C BUTTON |
| 01 | Ρv | R/C BUTTON |
| 10 to 19 | Number Key 0 to 9 | R/C BUTTON |
| 53 | LIST | R/C BUTTON |
| 1A | Q.VIEW | R/C BUTTON |
| 72 | RED Key | R/C BUTTON |
| 71 | GREEN Key | R/C BUTTON |
| 63 | YELLOW Key | R/C BUTTON |
| 61 | BLUE Key | R/C BUTTON |
| 20 | TEXT | R/C BUTTON |
| 21 | T.OPT(T.Option) | R/C BUTTON |
| 7E | SIMPLINK | R/C BUTTON |
| 5B | EXIT | R/C BUTTON |
| B1 | • | R/C BUTTON |
| B0 | ► | R/C BUTTON |
| BA | II(FREEZE) | R/C BUTTON |
| 8F | •• | R/C BUTTON |
| 8E | •• | R/C BUTTON |

EXTERNAL CONTROL DEVICE SETUP

RS-232C SETUP

Connect the RS-232C (serial port) input jack to an external control device (such as a computer or an A/V control system) to control the product's functions externally.

Connect the serial port of the control device to the RS-232C jack on the product back panel.

Note:

RS-232C connection cables are not supplied with the product.

In USB, it doesn't support RS-232C function.


6

TYPE OF CONNECTOR; D-SUB 9-PIN MALE

No. Pin Name

- 1 No connection
- 2 RXD (Receive data)
- 3 TXD (Transmit data)
- 4 DTR (DTE side ready)
- 5 GND
- 6 DSR (DCE side ready)
- 7 RTS (Ready to send)
- 8 CTS (Clear to send)
- 9 No Connection

RS-232C CONFIGURATIONS

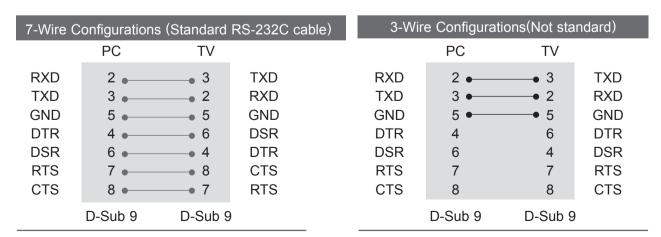

6


SET ID

Use this function to specify a set ID number. Refer to 'Real Data Mapping'. ► **p.87**



 \gg

| | OPTION | ♦ Move | |
|-----------|---------------|--------------|--|
| <u>()</u> | Menu Language | : English | |
| | Input Label | | |
| | SIMPLINK | : On | |
| 0 | Key Lock | 1 | |
| ۲ | Set ID | | |
| | ISM Method | Close | |
| | Demo Mode | | |
| **** | Mode Setting | : Store Demo | |

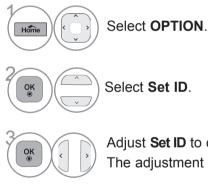

Adjust **Set ID** to shapped the desired TV/ ID put

Adjust **Set ID** to choose the desired TV ID number. The adjustment range of SET ID is 1 to 99.

APPENDIX

COMMUNICATION PARAMETERS

- Baud rate : 9600 bps (UART)
- Data length : 8 bits
- Parity : None

- Stop bit : 1 bit
- Communication code : ASCII code
- Use a crossed (reverse) cable.

Command Reference List

| | COMMAND 1 | COMMAND 2 | DATA (Hexadecimal) | | COMMAND 1 | COMMAND 2 | DATA (Hexadecimal) |
|--------------------------------------------|--------------|--------------|-----------------------|-------------------------|--------------|--------------|-----------------------|
| 01. Power | k | а | 00 to 01 | 14. Colour Temperature | х | u | 00 to 64 |
| 02. Aspect Ratio | k | С | Refer to p. 85 | 15. Treble | k | r | 00 to 64 |
| 03. Screen Mute | k | d | Refer to p. 85 | 16. Bass | k | S | 00 to 64 |
| 04. Volume Mute | k | е | 00 to 01 | 17. Abnormal Status | k | Z | FF |
| 05. Volume Control | k | f | 00 to 64 | 18. ISM Method | j | р | Refer to p. 87 |
| 06. Contrast | k | g | 00 to 64 | 19. Auto Configure | j | u | 01 |
| 07. Brightness | k | h | 00 to 64 | 20. Eneregy Saving | j | q | Refer to p. 87 |
| 08. Colour | k | i | 00 to 64 | 21. Tune Command | m | а | Refer to p. 88 |
| 09. Tint | k | j | 00 to 64 | 22. Channel Skip | m | b | 00 to 01 |
| 10. Sharpness | k | k | 00 to 64 | 23. Key | m | С | Refer to p. 88 |
| 11. OSD Select | k | I | 00 to 01 | 24. Input select (Main) | х | b | Refer to p. 89 |
| 12. Remote Control Lock / Key Lock Mode | k | m | 00 to 01 | | | | |
| 13. Balance | k | t | 00 to 64 | | | | |

Transmission / Receiving Protocol

| Transmission | OK Acknowledgement |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| [Command1][Command2][][Set ID][][Data][Cr] | [Command2][][Set ID][][OK][Data][x] |
| * [Command 1] : First command to control the set. (j, k, m or x) * [Command 2] : Second command to control the set. * [Set ID] : You can adjust the set ID to choose desired TV ID number in Setup menu. Adjustment range is 1 to 99. | * The TV transmits ACK (acknowledgement) based on this format when receiving normal data. At this time, if the data is data read mode, it indicates present status data. If the data is data write mode, it returns the data of the PC computer. |
| When selecting Set ID '0', every con- | Error Acknowledgement |
| nected TV is controlled. Set ID is indi- cated as decimal (1 to 99) on menu and | [Command2][][Set ID][][NG][Data][x] |
| as Hexa decimal (0x0 to 0x63) on transmission/receiving protocol. * [DATA] : To transmit command data. Transmit 'FF' data to read status of command. * [Cr] : Carriage Return ASCII code '0x0D' * [] : ASCII code 'space (0x20)' | TV transmits ACK(acknowledgement) based on this format when receiving abnormal data form non-viable functions or communication errors. [Command 2] : use as command. [Set ID]: use the small character, if set ID is 10, TV will send the '0', 'a' [Data]: use the small character, if data is 0xab, TV will send the 'a', 'b'. [NG]: use the large character. |

APPENDIX

01. Power (Command: k a)

► To control Power On/Off of the TV. <u>Transmission</u>

[k][a][][Set ID][][Data][Cr] Data 00 : Power Off 01 : Power On Acknowledgement

[a][][Set ID][][OK/NG][Data][x]

► To show Power On/Off. Transmission

[k][a][][Set ID][][FF][Cr]

Acknowledgement

[a][][Set ID][][OK/NG][Data][x]

* If there is the time delay between command and ack message during power on sequence, It should be described like "Note: In this model, TV will send the Acknowledge after power on processing completion.There might be a time delay between command and acknowledge."

02. Aspect Ratio (Command: k c) (Main Picture Size)

► To adjust the screen format. (Main picture format) You can also adjust the screen format using the Aspect Ratio in the PICTURE menu.

Transmission

[k][c][][Set ID][][Data][Cr]

 Data
 01
 Normal screen (4:3)
 Data
 06
 Original

 02
 : Wide screen (16:9)
 07
 : 14 : 9
 07
 : 14 : 9

 04
 : Zoom
 09
 : Just Scan
 10 to 1F
 : Original

Acknowledgement

- [c][][Set ID][][OK/NG][Data][x]
- * Using the RGB-PC, Component or HDMI input, you select either 16:9 or 4:3 screen aspect ratio.
- * In HDMI/Component (over 720p)mode, Just Scan is available.

03. Screen Mute (Command: k d)

► To select screen mute on/off.

<u>Transmission</u>

- [k][d][][Set ID][][Data][Cr]
- Data 00 : Screen mute off (Picture/Panel on)
 - 01 : Screen mute on (Panel off)
 - 10 : Video mute on (Picture Off)

Acknowledgement

[d][][Set ID][][OK/NG][Data][x]

* In case of Video-Out mute on only, TV will display On Screen Display(OSD) But, In case of Screen Mute On, TV will not display OSD.

04. Volume Mute (Command: k e)

 To control volume mute on/off. You can also adjust mute using the MUTE button on remote control.

<u>Transmission</u>

[k][e][][Set ID][][Data][Cr]

Data 00 : Volume mute on (Volume off) 01 : Volume mute off (Volume on)

Acknowledgement

[e][][Set ID][][OK/NG][Data][x]

05. Volume Control (Command: k f)

 To adjust volume. You can also adjust volume with the VOLUME buttons on remote control.

Transmission

[k][f][][Set ID][][Data][Cr]

Data Min : 00 to Max : 64

* Refer to 'Real data mapping 1'. See page 87.

Acknowledgement

[f][][Set ID][][OK/NG][Data][x]

06. Contrast (Command: k g)

To adjust screen contrast.

You can also adjust contrast in the PICTURE menu. Transmission

<u>inanonnoonon</u>

[k][g][][Set ID][][Data][Cr]

Data Min: 00 to Max: 64

* Refer to 'Real data mapping 1'. See page 87.

Acknowledgement

[g][][Set ID][][OK/NG][Data][x]

07. Brightness (Command: k h)

 To adjust screen brightness. You can also adjust brightness in the PICTURE menu.
 Transmission

[k][h][][Set ID][][Data][Cr]

Data Min: 00 to Max: 64

* Refer to 'Real data mapping 1'. See page 87. <u>Acknowledgement</u>

[h][][Set ID][][OK/NG][Data][x]

08. Colour (Command: k i)

To adjust the screen colour. You can also adjust colour in the PICTURE menu.
Transmission

<u>Transmission</u>

[k][i][][Set ID][][Data][Cr]

Data Min : 00 to Max : 64 * Refer to 'Real data mapping 1'. See page 87.

<u>Acknowledgement</u>

[i][][Set ID][][OK/NG][Data][x]

09. Tint (Command: k j)

To adjust the screen tint. You can also adjust tint in the PICTURE menu. <u>Transmission</u>

[k][j][][Set ID][][Data][Cr]

Data Red : 00 to Green : 64

* Refer to 'Real data mapping 1'. See page 87.
 Acknowledgement

[j][][Set ID][][OK/NG][Data][x]

10. Sharpness (Command: k k)

To adjust the screen sharpness. You can also adjust sharpness in the PICTURE menu.

<u>Transmission</u>

[k][k][][Set ID][][Data][Cr]

Data Min : 00 to Max : 64

* Refer to 'Real data mapping 1'. See page 87.

Acknowledgement

[k][][Set ID][][OK/NG][Data][x]

11. OSD Select (Command: k I)

 To select OSD (On Screen Display) on/off when controlling remotely.

<u>Transmission</u>

[k][I][][Set ID][][Data][Cr] Data 00 : OSD off 01 : OSD on <u>Acknowledgement</u>

[I][][Set ID][][OK/NG][Data][x]

12. Remote control lock / Key Lock Mode (Command: k m)

To lock the remote control and the front panel controls on the set.

(If you're not using the remote control and front panel controls on the TV, use this mode. When main power is on/off, remote control lock is released.)

Transmission

[k][m][][Set ID][][Data][Cr]

Data 00 : Lock off 01 : Lock on

Acknowledgement

[m][][Set ID][][OK/NG][Data][x]

13. Balance (Command: k t)

To adjust balance.

You can also adjust balance. in the AUDIO menu.

<u>Transmission</u>

[k][r][][Set ID][][Data][Cr]

Data Min: 00 to Max: 64

* Refer to 'Real data mapping 1'. See page 87. <u>Acknowledgement</u>

[t][][Set ID][][OK/NG][Data][x]

14. Colour Temperature (Command: x u)

 To adjust colour temperature. You can also adjust Colour Temperature in the PICTURE menu.
 <u>Transmission</u>
 [x][u][][Set ID][][Data][Cr]

Data W50 : 00 to C50 : 64

<u>Acknowledgement</u>

[u][][Set ID][][OK/NG][Data][x]

15. Treble (Command: k r)

 ► To adjust Treble. <u>Transmission</u>
 [k][r][][Set ID][][Data][Cr]
 Data Min : 00 to Max : 64

 * Refer to 'Real data mapping 1'. See page 87.

Acknowledgement

[r][][Set ID][][OK/NG][Data][x]

16. Bass (Command: k s)

► To adjust bass <u>Transmission</u> [k][s][][Set ID][][Data][Cr]

Data Min: 00 to Max: 64

* Refer to 'Real data mapping 1'. See page 87. <u>Acknowledgement</u>

[s][][Set ID][][OK/NG][Data][x]

APPENDIX

17. Abnormal State (Command: k z)

► To recognize an abnormal state. <u>Transmission</u>

[k][z][][Set ID][][Data][Cr]

<u>Acknowledgement</u>

[z][][Set ID][][OK/NG][Data][x]

Data FF: Read

Data 00: Normal (Power on and signal exist)

Data 01: No signal (Power on)

Data 02: Turn the TV off by remote control

Data 03: Turn the TV off by sleep time function

Data 04: Turn the TV off by RS-232C function

Data 05: 5V down

Data 06: AC down


Data 08: Turn the TV off by Off time function

Data 09: Turn the TV off by Auto off function

* This function is "read only".

18. ISM Method (Command: j p)

► To avoid having a fixed image remain on screen. <u>*Transmission*</u>

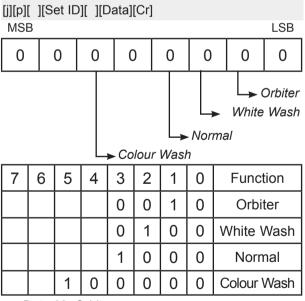

Data 02: Orbiter

Data 04: White Wash

Data 08: Normal

Data 20: Colour Wash

* More two kinds of function can not be set at a time.

Acknowledgement

[p][][Set ID][][OK/NG][Data][x]

19 . Auto Configure (Command: j u)

To adjust picture position and minimize image shaking automatically. It works only in RGB (PC) mode.
 <u>Transmission</u>
 [j][u][][Set ID][][Data][Cr]
 Data 01: To set
 <u>Acknowledgement</u>

[u][][Set ID][][OK/NG][Data][x]

20. Energy Saving (Command: j q)

 To reduce the power consumption of the TV. <u>Transmission</u>
 [j][q][][Set ID][][Data][Cr]
 Data 00: Low Power Off
 Data 01: Low Power Minimum
 Data 02: Low Power Medium
 Data 03: Low Power Maximum
 Data 03: Low Power Maximum
 Data 05: Screen Off
 Data 10: Intelligent Sensor
 <u>Acknowledgement</u>

[q][][Set ID][][OK/NG][Data][x]

| * Real data mapping 1 | * Real data mapping 2 |
|-----------------------|-----------------------|
| | |
| 00 : Step 0 | 00 : -30 |
| : | 01: -29 |
| A: Step 10 | 02 : -28 |
| : | |
| F: Step 15 | 1E: 0 |
| 10 : Step 16 | ÷ |
| : | 28: +0 |
| 64 : Step 100 | : |
| : | 3A: +28 |
| 6E : Step 110 | 3B: +29 |
| ÷ | 3C: +30 |
| 73 : Step 115 | : |
| 74 : Step 116 | 4E: N/A |
| : | 4F: N/A |
| C7: Step 199 | 50 : N/A |
| : | |
| FE: Step 254 | |
| FF: Step 255 | |

APPENDIX

21. Tune Command/ Channel Tuning (Command: m a)

► Tune Channel to following Physical number.

<u>Transmission</u>

[m][a][][Set ID][][Data0][][Data1][][Data2][Cr]

Data0, Data1: Programme Number Data0: High byte Data1: Low byte

Data2: Attribute

Air

| 7 | 6 | 5 | 4 | | 3 | 2 | 1 | | 0 |
|----------|----------|----------|----------|-----------|----------|----------|----------|------|--------------|
| Reserved | Reserved | Reserved | Reserved | RF Source | Reserved | Reserved | Reserved | Data | Main / Sub |
| 0 | х | 0 | 0 | ATV | х | х | х | 0 | Main picture |
| 0 | х | 0 | 1 | DTV | х | х | х | 1 | Sub picture |
| 0 | х | 1 | 0 | Radio | | | | | |
| 0 | х | 1 | 1 | Reserved | | | | | |

Cable

| 7 | 6 | 5 | 4 | | 3 | 2 | 1 | | 0 |
|----------|----------|----------|----------|-----------|----------|----------|----------|------|--------------|
| Reserved | Reserved | Reserved | Reserved | RF Source | Reserved | Reserved | Reserved | Data | Main / Sub |
| 1 | х | 0 | 0 | ATV | х | х | х | 0 | Main picture |
| 1 | х | 0 | 1 | DTV | х | х | х | 1 | Sub picture |
| 1 | х | 1 | 0 | Radio | | | | | |
| 1 | х | 1 | 1 | Reserved | | | | | |

'x' : don't care <u>Acknowledgement</u>

[a][][Set ID][OK][][Data0][Data1][x] [a][][Set ID][NG][][Data0][x]

22. Channel Skip(Command: m b)

► To set skip status for the current Programme. <u>*Transmission*</u>

[m][b][][Set ID][][Data][Cr] Data 00 : Skip 01 : Add

Acknowledgement

[b][][Set ID][][OK/NG][Data][x]

23. Key (Command: m c)

► To send IR remote key code.

<u>Transmission</u>

[m][c][][Set ID][][Data][Cr]

Data: Key code - Refer to page 81. <u>Acknowledgement</u> [c][][Set ID][][OK/NG][Data][x]

24. Input select (Command: x b) (Main Picture Input)

► To select input source for TV. <u>*Transmission*</u>

[x][b][][Set ID][][Data][Cr] Data : Structure

| MSB | | | | | | | LSB |
|-----|--------|---------|-------|----------|--------|-------|------|
| 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| | Exterr | nal Inp | out 1 | Ĺ | nput N | lumbe | er 🕹 |
| E | xterna | al Inp | ut | | Dat | а | |
| 0 | 0 | 0 | 1 | Analogue | | | |
| 0 | 0 | 1 | 0 | AV | | | |
| 0 | 1 | 0 | 0 | С | ompo | nent | |
| 0 | 1 | 1 | 0 | RGB-PC | | | |
| 1 | 0 | 0 | 1 | | HDN | ЛІ | |

| INPUT Number | | | | Data |
|--------------|---|---|---|--------|
| 0 | 0 | 0 | 0 | Input1 |
| 0 | 0 | 0 | 1 | Input2 |
| 0 | 0 | 1 | 0 | Input3 |
| 0 | 0 | 1 | 1 | Input4 |

Acknowledgement

[b][][Set ID][][OK /NG][Data][x]



Record the model number and serial number of the TV. Refer to the label on the back cover and quote this information to your dealer when requiring any service.

Model : _____

Serial No. : ____