



# OWNER'S MANUAL

## Colour Television

Please read this manual carefully before operating your set.  
Retain it for future reference.  
Record model number and serial number of the set.  
See the label attached on the back cover and quote this information to your dealer when you require service.

Model number :  
Serial number :

P/NO : MFL65001803-EN (CW91D)(1009-REV00)

[www.lg.com](http://www.lg.com)

## Installation

### Power

This set operates on an AC mains supply, the voltage is as indicated on the label on the back cover. Never apply DC power to the set. In the event of thunderstorms or powercuts, please pull out the aerial and power plug.

Press the **POWER** button on the front panel or side panel to turn off the TV when the TV set is not being used for a long time. It is recommended to remove the plug from the wall outlet (Power point).

### Disconnecting device from mains

Mains plug is the disconnecting device. The plug must remain readily operable

### Warning

To prevent fire or shock hazard, do not expose the set to rain or moisture.

Do not place anything containing liquid on top of the set, this may cause a fire or could give an electric shock.

### Service

Never remove the back cover of the set as this can expose you to very high voltage and other hazards. If the set does not operate properly, unplug it and call your dealer.

### Aerial

Connect the aerial cable to the socket on the back cover. For the best reception an outdoor aerial should be used.

### Location

Position your set so that no bright light or sunlight falls directly onto the screen. Care should be taken not to expose the set to any unnecessary vibration, moisture, dust or heat. Also ensure that the set is placed in a position to allow a free flow of air. Do not cover the ventilation openings on the back cover.

## Connection of external equipment

### Aerial socket

1. Connect the RF out socket of the VCR to the aerial socket on the back of the set.
2. Connect the aerial cable to the RF aerial in socket of the VCR.
3. Store the VCR channel on a desired programme number using the 'Auto programme tuning' section.
4. Select the programme number where the VCR channel is stored.
5. Press the **PLAY** button on the VCR.

### Audio/Video in/out sockets (option)

1. Connect the audio/video out sockets of the VCR to audio/video in sockets of the set and in sockets of the VCR to RF OUT sockets of the set.
2. If the VCR is connected to the AV sockets on the set, press the **TV/AV** button to select **AV1** or **AV2** (option).
3. Press the **PLAY** button on the VCR. The VCR playback picture appears on the screen.  
You can also record programmes received by the TV on video tape via audio/video out sockets.

#### Note :

If you have a mono VCR, connect the audio cable from the VCR to the **AUDIO L/MONO** socket of the set.

And if connected to AV2(option), then you should select L+L mode by pressing the **L/IL\*** (option) key.

### Euro scart socket (option)

1. Connect the Euro scart socket of the VCR to the Euro scart socket of the set.
2. Press the **PLAY** button on the VCR.  
If your VCR outputs a switching voltage when connected to Euro scart socket, the set will switch to **AV 1** mode automatically. But if you want to keep on watching TV mode, press the **▲ / ▼** or **NUMBER** buttons. Otherwise press the **TV/AV** button on the remote control handset to select **AV 1**. The VCR playback picture appears on the screen.  
You can also record programmes received by the TV on video tape.

**Note :** Signal type RGB, i.e. the signals red, green and blue can only be selected for the Euro scart socket. These signals are transmitted, for example, by a pay TV decoder, game machine or photo CD unit, etc.

 
### Component in sockets (option)


 
1. Connect the COMPONENT video output sockets (Y Cb Cr, Y Pb Pr or Y B-Y R-Y) of the COMPONENT (480i) to the COMPONENT INPUT sockets (Y P<sub>B</sub> P<sub>R</sub>) on the set.
2. Connect the audio cable from the COMPONENT to AUDIO IN sockets of **AV IN1**.
3. Press the **TV/AV** button to select **COMPONENT**.
4. Press the **PLAY** button on the COMPONENT. The COMPONENT playback picture appears on the screen.

## Location and function of controls

### Remote control handset

Before you use the remote control handset, please install the batteries.

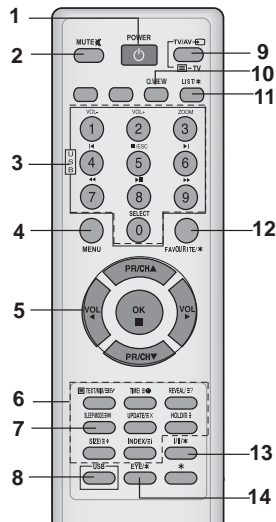

1. **POWER**  
Switches the set on from standby or off to standby.
2. **MUTE**   
Switches the sound on or off.
3. **NUMBER BUTTONS**  
Switches the set on from standby or directly select a number.  
**USB SELECT BUTTONS**  
Operate USB function.
4. **MENU**  
To display on-screen or exit from USB mode .  
Other local key is not available in USB mode.
5. **▲ / ▼ (Programme Up/Down)**  
Selects a programme or a menu item.  
Switches the set on from standby.  
**◀ / ▶ (Volume Up/Down)**  
Adjusts the volume.  
Adjusts menu settings.  
**OK**  
Accepts your selection or displays the current mode.
6. **TELETEXT BUTTONS (option)**  
These buttons are used for teletext.  
For further details, see the 'Teletext' section.
7. **SLEEP**  
Sets the sleep timer.
8. **USB BUTTON**  
Select the USB mode.
9. **TV/AV**   
Selects TV or AV mode.  
Switches the set on from standby.  
Exits the Teletext mode.
10. **Q.VIEW (or YELLOW)**

Returns to the previously viewed programme.

11. **LIST/\* (option)**  
Displays the programme table.
12. **FAVOURITE/\*(option)**  
Selects a favorite programme.
13. **L/L/\*(option)**  
Selects the language during dual language broadcast.  
Selects the sound output (option).
14. **EYE/\* (option)**  
Switches the eye function on or off.

**\* : No function**

#### COLOURED BUTTONS :

 
These buttons are used for teletext (only TELE-TEXT models) or programme edit.

### Battery installation

The remote control handset is powered by AAA type batteries. Install batteries as indicated by the polarity symbols (⊕ and ⊖) marked inside the compartment.

#### Note :

To avoid damage from possible battery leakage, remove the batteries if you do not plan to use the remote control handset for an extended period of time.

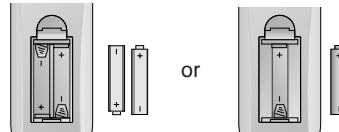

### Front panel

#### MAIN POWER (ON/OFF)

Switches the set on or off.

#### POWER/STANDBY INDICATOR

Illuminates brightly when the set is in standby mode,dims when the set is switched on.

#### REMOTE CONTROL SENSOR

**Note :** Only use the supplied remote control handset. (When you use others, they will not be able to function.)

#### MENU

Selects a menu.

#### OK

Accepts your selection or displays the current mode.

#### ◀ / ▶ (Volume Down/Up)

Adjusts the volume.

Adjusts menu settings.

#### ▲ / ▼ (Programme Up/Down)

Selects a programme or a menu item.

Switches the set on from standby.

#### AUDIO/VIDEO/USB IN SOCKETS (AV IN2)(option)

Connect the audio/video/USB out sockets of external equipment to these sockets.

#### Note :

What is shown here may be somewhat different from your set or can not be supplied on your area.

## Basic operation

 
### On and off

1. Press the main power button to switch the set on.
2. If the set is in standby mode, press the **POWER**, **▲ / ▼**, **TV/AV** or **NUMBER** buttons on the remote control handset to switch it on fully.
3. Press the **POWER** button on the remote control handset.  
The set reverts to standby mode.
4. Press the main power button again to switch the set off.

**Note :** If, while the set is switched on, the mains plug is disconnected the set will switch to standby or power on when the mains plug is replaced in the mains power socket.

### Mute function

Press the **MUTE** button. The sound is switched off

and the display  appears. You can cancel it by pressing the **MUTE**, **◀ / ▶**, **|||\***(option), button.

### On screen language selection(option)

The menu can be displayed on the screen in desired language. First select your language.

1. Press the **MENU** button and then **▲ / ▼** button to select the Special menu.
2. Press the **▶** or **OK** button to select **Language**.
3. Press the **◀ / ▶** button to select your desired language.

All the on screen displays will appear in the selected language. Press the **MENU** button to return to the Special menu.

4. Repeatedly press the **MENU** button to return to normal TV viewing.

## Other functions

### TV and AV modes

AV mode is used when a video cassette recorder (VCR), or other equipment is connected to the set.

**Note :** When a VCR is connected via the aerial socket the set is used in TV mode. See the 'Connection of external equipment' section.

AV1 : VCR connected to the Euro scart socket or **AV IN 1** sockets on the set

AV2 : VCR connected to the **AV IN 2** sockets on the set (option).

COMPONENT : DVD Player connected to the **COMPONENT** sockets on the set (option).

Alternatively you can select the TV or AV mode by pressing the **TV/AV** button.

In AV mode, to return to TV mode, press the **▲ / ▼** or **NUMBER** buttons.

### Auto AV switching (option)

If your VCR outputs switching voltage when it is switched to playback with the VCR connected to the Euro scart socket. The set is automatically switched to **AV1** mode when an AV signal is input. But if you want to keep on watching TV mode, press the **▲ / ▼** or **NUMBER** buttons. Press the **TV/AV** button to return to AV modes.

### Child lock

The TV can be set so that the remote control handset is needed to control it. This feature can be used to prevent unauthorized viewing.

With the lock on, the display **Child lock on** appears on the screen if any button on the front panel is pressed while viewing the TV.

### Degaussing (option)


Due to the super large Tube in the set. The colour purity of the picture may be affected by other

magnetic influences such as speakers. Stripes may appear on the screen or there may be colour patches.


**Note :** If you cannot adjust the screen condition by degaussing, try it again after about 4 minutes.

### Sleep timer

You don't have to remember to switch the set off before you go to sleep. The sleep timer automatically switches the set to standby after the preset time elapses.

Repeatedly press the **SLEEP** button to select the number of minutes. The display  --- will appear on the screen, followed by **10, 20, 30, 60, 90, 120, 180** and **240**. The timer begins to count down from the number of minutes selected.

**Note :**

- a. To view the remaining sleep time, press the **SLEEP** button once.
- b. To cancel the sleep time, repeatedly press the **SLEEP** button until the display  --- appears.
- c. When you switch the set off, the set releases the preset sleep time.

### Energy Saving (option)

If **On** is selected for **Energy Saving**, the TV screen will be turned off and the energy saving mode will be started within 10 seconds. The energy saving mode saves energy by about 70% compared with the normal status. And only sound is output, no picture is displayed.

After the energy saving mode is started, you can adjust volume levels by pressing **◀ / ▶** button (while the volume bar OSD is not displayed.)

Press any key (except **◀ / ▶** button) to exit from this function.

## On screen menus

The dialogue between you and your set takes place on screen with an operator menu. The buttons required for the operating steps are also displayed.

 
### Menu selection

1. Press the **MENU** button and then **▲ / ▼** button to display each menu.
2. Press the **▶** or **OK** button and then **▲ / ▼** button to select a menu item.
3. Change the setting of an item with the **◀ / ▶** button.

You can move to the higher level menu with the **MENU** button and to move to the lower level menu press the **▶** or **OK** button.

### Note :


- a. In the teletext mode, menus are not displayed.
- b. In some models, **Degauss** will not display.
- c. In some models, the **Language** will not display.
- d. In some models, the **Treble, Bass** will not display, but there will be **Equalizer setting**.

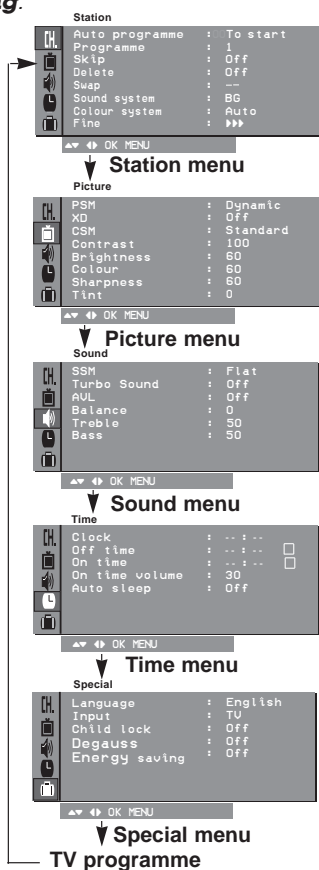

## Setting up TV stations

### Auto programme tuning

 All stations that can be received are stored by this method. It is recommended that you use auto programme during installation of this set.

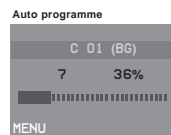

### Programme

This function enables you to select the programme number in setting mode.

### Skipping a programme number

1. In station mode, select skip item.
2. Press the **◀ / ▶** button to select ON or OFF. When a programme number is skipped it means that you will be unable to select it using the **▲ / ▼** button during normal TV viewing. If you want to select the skipped programme, directly enter the programme number with the **NUMBER** buttons.

Repeatedly press the **MENU** button to return to normal TV viewing.

### Deleting a programme

1. In station mode, select delete item.
2. Press the **◀ / ▶** button to select ON or OFF. Press the **OK** button when ON is selected, then the selected programme is deleted, and all the following programmes are shifted up one position.

### Swapping a programme number

1. In station mode, select swap item.
2. Press the **◀ / ▶** button to select the programme number. Press the **OK** button to swap the current programme for the selected programme.

### Sound system

#### System :

- BG** : (Asia/New Zealand/ M. East/Africa/Australia)
- I** : (Hong Kong/South Africa)
- DK** : (East Europe/China/Africa/CIS)
- M** : (USA/Korea/Philippines) (option)

### Colour system

You can adjust colour system in AUTO, PAL, PAL60, NTSC(option), NTSC4.43(option) and SECAM.

### Fine tuning

Normally fine tuning is only necessary if reception is poor. The finely tuned programme will be indicated by yellow number during programme selection.

## Picture adjustment

**Note:** Picture menu options are not available for the RGB input source.

### PSM (Picture Status Memory)

The picture **Dynamic**, **Standard**, **Mild** and **Game** are programmed for good picture reproduction at the factory and cannot be changed.

### XD

You can enjoy the vivid and hi-definition picture with LG's excellent Digital Reality processor technology.

### CSM (Colour Status Memory)

You can select the picture colour status; **Standard**, **Reddish**, **Greenish** or **Bluish** as you prefer.

### Picture adjustment

You can adjust picture **Contrast**, **Brightness**, **Colour**, **Sharpness** and **Tint** (NTSC input only) to the levels you prefer.

## Time Setting

### Setting the On/Off timer

By using this function, the set automatically switches on or off at a preset time. You must set the time correctly before using the on/off time function.

**Note :** a. **On time** works only in standby mode.

b. To view the remaining on/off time, select the **Time** menu.

c. When you switch the main power off, the **Clock** is reset .

### On time volume

In this function, you can set the volume of the TV automatically turning on.

### Auto sleep

If you select **On** on the **Auto sleep** item, the set will automatically switch itself to standby mode approximately ten minutes after a TV station stops broadcasting.

## Sound adjustment

### SSM (Sound Status Memory)

The sound **Flat**, **Music**, **Movie**, **Sport** are programmed for good sound reproduction at the factory and cannot be changed.

### Turbo sound selection

When this function is on, the sound will be more emphasized and amplified than normal sound.

### Sound adjustment

You can adjust **Balance**, **AVL** (Auto Volume Leveler), **Treble**, **Bass**. AVL automatically keeps on an equal volume level even if you change programmes. The Turbo sound creates an all around sound as in a concert hall.

### Sound output selection

In AV mode, you can select output sound for the left and right loudspeakers. Repeatedly press the **I/II/\*** button to select the sound output.

**L+R** :Audio signal from audio L input is sent to left loud-speaker and audio signal from audio R input is sent to right loud-speaker.

**L+L** or **R+R** (option): Audio signal from audio L or R input is sent to both left and right loud-speakers.

**Note:**

L+L or R+R may be unavailable for some models.

### Stereo/Dual reception (option)

When a programme is selected, the sound information for the station appears after the programme number and station name disappear.

Broadcast	On Screen Display
Mono	<b>MONO</b>
Stereo	<b>STEREO</b>
Dual	<b>DUAL I</b>

### Mono sound selection

In stereo reception if the stereo signal is weak, you can switch to mono by pressing the **I/II/\*** button twice. In mono reception the depth of sound is improved. To switch back to stereo, press the **I/II/\*** button twice again.

### Language selection for dual language broadcast

If a programme is received in two languages (dual language), you can switch to **DUAL I**, **DUAL II** or **DUAL I+II** by pressing the **I/II/\*** button repeatedly. **DUAL I** sends the primary broadcast language to the loudspeakers.

**DUAL II** sends the secondary broadcast language to the loudspeakers.

**DUAL I+II** sends a separate language to each loudspeaker.

### NICAM reception (option)

If your set is equipped with the receiver for NICAM reception, the high quality NICAM (Near Instantaneous Companding Audio Multiplex) digital sound can be received.

Sound output can be selected according to the type of received broadcast by pressing the **I/II/\*** button repeatedly.

 
1. When NICAM mono is received, you can select **NICAM MONO** or FM MONO.
2. When NICAM stereo is received, you can select **NICAM STEREO** or FM MONO. If the stereo signal is weak, switch to FM mono.
3. When NICAM dual is received, you can select **NICAM DUAL I**, **NICAM DUAL II** or **NICAM DUAL I+II** or **MONO**. When FM mono is selected the display **MONO** appears on the screen.



## USB MODE(option)

### USB connection



Connect the USB port of USB memory to the USB port on the side of the TV.  
After connecting the USB IN jacks, press the USB button.



### Removing the USB device from TV

1. Press STOP (■/ESC) twice to return to the USB menu.
  2. Remove the USB device from TV.
- When you plug a USB then press the USB button, the below screens will be displayed.

  - Enter into **USB** mode
1. Press "USB" key on remote control.
  2. Select "USB" on the main menu special mode
- Exit from the **"USB"** mode
1. Press "USB" or "MENU" in USB mode.
  2. Press local key "MENU" in USB mode.

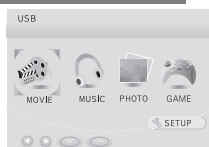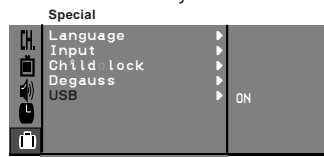

### Notes :

 
1. Don't extract the USB device while operating. Music files (MP3), image files (JPG), AVI files and Game files (SMF) can be played.
2. This unit can not use a USB HUB.
3. Recommended USB device and file system.
  - Connecting USB device should comply with USB 2.0 specifications.
  - Compatible with : FAT16, FAT32 (Recommend FAT32 for USB over 2GB)
  - Only use USB memory stick recommended.
4. Devices which require additional program installation may cause identification or data reading problem.
5. In case of a USB HDD, make sure to connect an auxiliary power to the USB HDD for proper operation. 1 primary partitions of a drive is supported. If there is an extension partition, it will not be supported.
6. Digital cameras and mobile phones are not supported.
7. Unsupported or damaged AVI, JPG, MP3 or SMF files can cause errors. Do not try to change the file extension of unsupported file types to the file extension of supported file types.
8. This device codec is hardware codec so the supportable file format and codec can not be updated by firmware upgrade.
9. Entry into USB mode can be activated or deactivated by USB key on the remote controller.
10. If you make entry back into USB mode after switching to RF while playing USB media, music and movie will be paused. For play, press ►|| key to continue to play.
11. Customers should note that permission is required in order to download MP3 or movie files from internet. Our company has no right to grant such permission. Permission should always be sought from the copyright owner.

## SYSTEM SETUP

### Select the SUBTITLE LANG

- The menus can be shown on the screen in the selected language. First select your language.  
- When selecting SUBTITLE LANG, it will only display in English. But subtitle can display in the language which you selected.

1. Press the **USB** button and then use ◀ / ▶ button to select the Setup.
2. Press the **OK** button to enter the Setup menu.
3. Press the ▲ / ▼ button to select the SYSTEMSETUP.

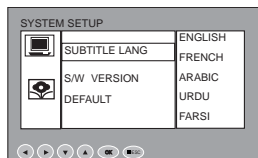

4. Press the ▶ and then use ▲ / ▼ button to select **SUBTITLE LANG**.
5. Press the ▶ and then use ▲ / ▼ button to select the desired language.
6. Press the **USB** button to exit or press the ■/ESC button to return to the USB menu.

Press the **Menu** button to return to the TV menu.

### Select the S/W Version

1. Press the USB button and then use ◀ / ▶ button to select the Setup.
2. Press the OK button to enter the Setup menu.
3. Press the ▲ / ▼ button to select the SYSTEMSETUP.
4. Press the ▶ and then use ▲ / ▼ button to select **S/W VERSION**.
5. Press the ▶
6. Press the **USB** button to exit or press the ■/ESC button to return to the USB menu. Press the **Menu** button to return to the TV menu.


### Select the Default

- Use the Default option to initialize the adjusted settings.
1. Press the USB button and then use ◀ / ▶ button to select the Setup.
  2. Press the OK button to enter the Setup menu.
  3. Press the ▲ / ▼ button to select the SYSTEMSETUP.
  4. Press the ▶ and then use ▲ / ▼ button to select **DEFAULT**.
  5. Press the ▶
  6. Press the **USB** button to exit or press the ■/ESC button to return to the USB menu. Press the **Menu** button to return to the TV menu.

## PHOTO SETUP

### Select the Effect

- The picture display effect for the slide show.
- The playing mode of some files in special format is from top to bottom.

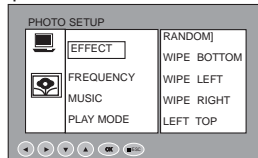 

1. Press the USB button and then use ◀ / ▶ button to select the Setup.
2. Press the OK button to enter the Setup menu.
3. Press the ▲ / ▼ button to select the PHOTO SETUP.
4. Press the ▶ and then use ▲ / ▼ button to select **EFFECT**.
5. Press the ▶ and then use ▲ / ▼ button to select the desired Effect.
6. Press the **USB** button to exit or press the **■/ESC** button to return to the **USB** menu.

### Select the Frequency

- The picture display interval for the slide show.

1. Press the USB button and then use ◀ / ▶ button to select the Setup.
2. Press the OK button to enter the Setup menu.
3. Press the ▲ / ▼ button to select the PHOTO SETUP.
4. Press the ▶ and then use ▲ / ▼ button to select **FREQUENCY**.

5. Press the ▶ and then use ▲ / ▼ button to select the Frequency.
6. Press the **USB** button to exit or press the **■/ESC** button to return to the USB menu.

### Select the Music

- You can turn on or off the background music when playing the photograph mode.

- The background music is from USB memory.

1. Press the USB button and then use ◀ / ▶ button to select the Setup.
2. Press the OK button to enter the Setup menu.
3. Press the ▲ / ▼ button to select the PHOTO SETUP.
4. Press the ▶ and then use ▲ / ▼ button to select **MUSIC**.
5. Press the ▶ and then use ▲ / ▼ button to select **ON** or **OFF**.
6. Press the **USB** button to exit or press the **■/ESC** button to return to the USB menu.

### Select the Play Mode

- You can select your desired playback mode in the slide shows.

1. Press the USB button and then use ◀ / ▶ button to select the Setup.
2. Press the OK button to enter the Setup menu.
3. Press the ▲ / ▼ button to select the PHOTO SETUP.
4. Press the ▶ and then use ◀ / ▶ button to select **PLAY MODE**.
5. Press the ▶ and then use ▲ / ▼ button to select **NORMAL** or **RANDOM**.
6. Press the **USB** button to exit or press the **■/ESC** button to return to the **USB** menu.

## MOVIE Media

### Select the MOVIE, MUSIC or PHOTO Media

- When you plug a USB or press the USB button, the below screens will be displayed.

1. Press ◀ / ▶ button to select Movie, Music or Photo.
2. Press the OK button to enter the Movie, Music or Photo media.
3. Press the USB button to exit.

### Movie File Playing Operation

1. Press the USB button and then use ◀ / ▶ button to select the Movie.
2. Press the OK button.
3. Press the ▲ / ▼ / ◀ / ▶ button to select folder and desired movie file.
4. Press the ▶|| (alternative play) or OK (single play) button. Then the movie starts.
5. Press the **USB** button to exit or press **■/ESC** button to stop or return to the USB main menu.

#### Notes:

1. Movie (AVI) file compatibility with this player is limited as follows:
  - Available resolution of AVI file is under 720x480(576) pixel.
  - If video codec is not supportable, "UNSUPPORTABLE FORMAT" OSD will be displayed in the file list menu.
  - If sound codec is not supportable, Video may display but "UNSUPPORTED FORMAT" OSD will be displayed with no sound.

- If sound has no data stream, "NO SOUND" OSD will be displayed on the screen.
  - If the number of the screen frame is over 30 per 1 second, this device may not operate normally.
2. Supportable Subtitle format: srt, sri, smi, txt, ssa, ass, sub, psb
  3. Supportable movie file extension: ".DAT", ".AVI", ".MP4", ".MPG"
  4. Supportable video codec: MPEG1 (VCD 1.0, 1.1, 2.0, SVCD), MPEG4 ASP or Compatible codecs.

### Using the remote control

 
① ②	To increase or decrease volume level for the Movie.
④ ⑥	Press the ④ button to jump previous Movie. Press the ⑥ button to jump next Movie.
⑤	Stop movie playing or move to the movie file list menu.
⑧	Still screen is displayed. (When playing movie) Play movie in sequence (at movie list)
⑦ ③	Press the ⑦ button to rewind. Press the ③ button to fast forward.
⑨	Show the Information of movie. (when playing movie) Play movie selected by cursor. (at movie list)
⑩	ON/OFF or Select subtitle



## MUSIC Media

### MP3 File Playing Operation

- Purchased MP3/music files may contain copy right restrictions.

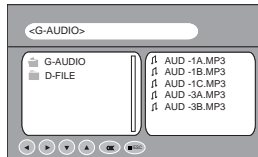

1. Press the USB button and then use ◀ / ▶ button to select the Music.
2. Press the OK button.
3. Press the ▲ / ▼ / ◀ / ▶ button to select folder and desired music file.
4. Press the ▶|| (alternative play) or OK (single play) button. Then the music starts.
5. Press the USB button to exit or press the ■/ESC button to stop or return to the USB menu.

### Using the remote control

Notes :

1. MP3 compatibility with this player is limited as follows:
  - Sampling frequency :within 8 -48 KHz
  - Bit rate :32 -384 Kbps, Support all variable bit rates
  - TV can not read an MP3 file that has a file extension other than “.mp3”

- File name should have a maximum of 8 letters and must incorporate an .mp3 extension.
  - Total number of files on the USB memory device should be less than 1200.
2. This TV mp3 player requires mp3 files to meet certain technical standards (ISO/IEC 111723, ISO/IEC 13818-3.2) in order to achieve optimal playback quality.
  3. There are many different types of MP3 encoders and these require certain pre-existing conditions above to ensure compatible play back.
  4. The navigation key can be shifted only up and down during MP3 file play and cannot switch to other folder.
  5. In order to play a file in other folder, stop the file being played, and move cursor to another folder.
  6. In case of VBR (Variable Bit Rate) MP3, estimated playing time may not correct as actual playing.

1 2	To increase or decrease volume level for the Music.
4 6	Press the 4 button to jump previous music. Press the 6 button to jump next music.
5	Moved the Folders in menu. (at music list) Stop playing music. (when playing music)
7 9	Press the 7 button to jump backward. Press the 9 button to jump forward.
8	To pause playback.(when playing music) Play music in sequence. (at music list)
•	Play music selected by cursor.

## PHOTO Media

### JPEG File Viewing Options

- When you select Photo in entry menu, you will now see a screen filled with thumbnail photo media.

1. Press the USB button and then use ◀ / ▶ button to select the Photo.
2. Press the OK button.
3. Press the ▲ / ▼ / ◀ / ▶ button to select photo file.
4. Press the OK button for 1 picture display and press 8 for slide show.
5. Press the USB button to exit or press the ■/ESC button to stop slide show or return to thumbnail file list, USB main menu.

### Slide Show



1. Press the ▲ / ▼ / ◀ / ▶ button to select JPEG file and then press the 8 button. Slide show starts.
2. You can choose the slide show effect, frequency and play mode in the USB Setup.
3. Press the ▶|| button to pause the current image.
4. Press the USB button to exit or press the ■/ESC button to stop slide show return to the USB menu.

## PHOTO Media


### Still picture

Press the ▲/▼ / ◀/▶ button to select JPEG file then press the **OK** button. Selected still picture display starts.

 
### Using the remote control

Notes :

1. JPEG compatibility with this player is limited as follows :
  - Depending upon the size and the number of JPEG files, it could take a long time for TV to read the USB memory's contents. If you don't see an on screen display after several minutes, some of the files maybe too large- reduce the resolution of the JPEG files to less than 2M pixels as 2760x2048 resolution.
  - The total number of files and folders on the USB memory device should be less than 1200.
  - File name without ".jpg" extension will not be able to read by this TV jpeg decoder. Even though the files are shown as JPEG image files in Windows Explorer.
  - Cause of Photo character, Progressive JPEG is always scanned "WIPETOP" regardless of Photo Effect.

① ②	To increase or decrease volume level for the Music. (When selecting the turn-on of background music when playing the photograph mode.)
④ ⑥	To select the previous or next page. (at thumbnail mode) To jump to the previous or next photo(at one photo display)
⑤	Move to main menu from thumbnail mode.
⑦ ⑨	These keys (FF&RW) are not available in photo mode.
③	To enlarge or reduce the image 2, 3 or 4 times. (at one photo display)
	1. Zoom mode To scroll left, right, up and down. 2. Still picture display mode VOL+: Rotate 90° (Clockwise) VOL- : Rotate-90° (Counter-clockwise) CH+: Upside down & vice versa CH-: Mirror image & versa


## GAME Media

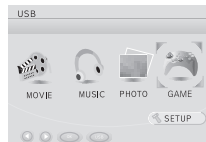

### GAME File Playing Operation

1. Press the USB button and then use ▲ / ▼ / ◀ / ▶ button to select the Game.
2. Press the OK button.
3. Press the ▲ / ▼ / ◀ / ▶ button to select folder and desired game file.
4. Press the ▶|| (alternative play) or OK (single play) button. Then the game starts.
5. Press the **USB** button to exit or press the **ESC** button to stop or return to the USB menu.

### Using the remote control

① ②	To increase or decrease volume level for the game.
④ ⑥	Press the ④ button to jump previous Game. Press the ⑥ button to jump next Game.
⑤	Stop game playing or move to the game file list menu.
⑧	Play game in sequence (at game list)
⑧	Play game selected by cursor. To confirm (when playing game)
	To select left, right, up, down (when playing game)

Note:

- You can download the game file from [www.gamefortv.com](http://www.gamefortv.com). The downloaded files are compressed files, so please decompress files and then put them in usb before using them.
- If the files under the folder in USB exceed 5 floors, maybe you can't open game files.

## Teletext (option)

Teletext (or TOP text) is an optional function, therefore only a set with the teletext system can receive the teletext broadcast.

Teletext is a free service broadcast by most TV stations which gives up-to-the-minute information on news, weather, television programmes, share prices and many other topics.

The teletext decoder of this TV can support the SIMPLE, TOP and FASTEXT systems. SIMPLE (standard teletext) consists of a number of pages which are selected by directly entering the corresponding page number. TOP and FASTEXT are more modern methods allowing quick and easy selection of teletext information.

### Switch on/off

Press the **TEXT** button to switch to teletext. The initial page or last page appears on the screen. Two page numbers, TV station name, date and time are displayed on the screen headline. The first page number indicates your selection, while the second shows the current page displayed. Press the **TEXT** or **TV/AV** button to switch off teletext. The previous mode reappears.

### SIMPLE text

#### Page selection

1. Enter the desired page number as a three digit number with the **NUMBER** buttons. If during selection you press a wrong number, you must complete the three digit number and then re-enter the correct page number.
2. The **▲ / ▼** button can be used to select the preceding or following page.

#### Programming a colour button in LIST mode (option)

Press the **LIST** button to switch to LIST mode. Four teletext page numbers of your choice can be colour coded and easily selected by pressing the corresponding coloured button on the remote control handset.

1. Press a coloured button.
2. Using the **NUMBER** buttons, select the page you wish to programme.
3. Press the **OK** button. Then the selected page is stored as the selected page number with blinking once. From now on, you can select this page with the same coloured button.
4. The three other coloured buttons are programmed in the same way.

### TOP text (option)

The user guide displays four fields—red, green, yellow and blue at the bottom of the screen. The yellow field denotes the next group and the blue field indicates the next block.

#### Block / group / page selection

1. With the blue button you can progress from block to block.
2. Use the yellow button to proceed to the next group with automatic overflow to the next block.
3. With the green button you can proceed to the next existing page with automatic overflow to the next group.  
Alternatively the **▲** button can be used.
4. The red button permits to return to previous selection. Alternatively the **▼** button can be used.

### Direct page selection

Corresponding to the SIMPLE teletext mode, you can select a page by entering it as a three digit number using the **NUMBER** buttons in TOP mode.

### FASTEXT

The teletext pages are colour coded along the bottom of the screen and are selected by pressing the corresponding coloured button.

#### Page selection

1. Press the **LIST** button to select the index page.
2. You can select the pages which are colour coded along the bottom line with the same coloured buttons.
3. Corresponding to the SIMPLE teletext mode, you can select a page by entering its three digit page number with the **NUMBER** buttons in FASTEXT mode.
4. The **▲ / ▼** button can be used to select the preceding or following page.

### Special teletext functions

#### REVEAL

Press this button to display concealed information, such as solutions of riddles or puzzles. Press this button again to remove the information from the display.

#### SIZE

Selects double height text.

Press this button to enlarge the top half of the page. Press this button again to enlarge the bottom half of the page. Press this button again to return to the normal display.

#### UPDATE

Displays the TV picture on the screen while waiting for the new teletext page. The update symbol will appear at the top left hand corner of the screen. When the updated page is available then the update symbol will change to the page number. Press this button to view the updated teletext page.

#### HOLD

Stops the automatic page change which will occur if a teletext page consists of 2 or more sub pages. The number of sub pages and the sub page displayed is, usually, shown on the screen below the time. When this button is pressed the stop symbol is displayed at the top left-hand corner of the screen and the automatic page change is inhibited. To continue press this button again.

#### MIX

Displays the teletext pages superimposed on the TV picture. To switch the TV picture off press this button again.

#### TIME

When viewing a TV programme, press this button to display the time at the top right hand corner of the screen. Press this button again to remove the display. In the teletext mode, press this button to select a sub page number. The sub page number is displayed at the bottom of the screen. To hold or change the sub page, press the **RED/GREEN**, **▲ / ▼** or **NUMBER** buttons. Press again to exit this function.

# Troubleshooting check list

## Symptoms

No picture, no sound

Sound OK, poor picture

Picture OK, poor sound

Picture blurred

 
Lines or streaks in picture

Poor reception on some channels

No colour

Poor colour

Remote control does not work

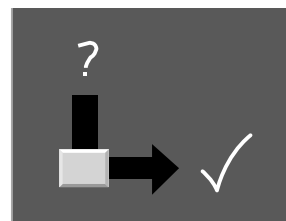

## Check these items and try to adjust these

<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

The mains plug-(plugged in and switched on)

Is the TV switched on

Try another channel (weak signal)

Check aerial (plugged into TV?)

Check aerial (broken lead?)

Check aerial

Check for local interference

Adjust contrast

Adjust brightness

Adjust colour

Adjust volume

Check the batteries in remote control

Check Audio/Video sockets (VCR only)