



ENGLISH

DEUTSCH

FRANÇAIS

NEDERLANDS

SLOVENŠČINA

ITALIANO

ESPAÑOL

ΕΛΛΗΝΙΚΑ

PORTUGUÊS

OWNER'S MANUAL

Wireless Speaker System

Please read this manual carefully before operating your set and retain it for future reference.

MODEL

PW15K (RX : PW15K-R, TX : PW15K-T)

PW15R (RX : PW15R-R, TX : PW15R-T)

P/NO : MFL63266287

1 Safety Information



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

CAUTION concerning the Power Cord

Most appliances recommend they be placed upon a dedicated circuit;

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

CAUTION: This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

This device is equipped with a portable battery or accumulator.

Safe way to remove the battery or the battery from the equipment:

Remove the old battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement system batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Disposal of your old appliance



1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



Do not leave your unit in the place where the temperature exceeds 40 °C , or the unit may be damaged.

Keep this product away from heat.

- If there is a strong electromagnetic wave product nearby, interference may occur. Put the unit (Wireless Receiver and main unit) away from there.
- Set the distance between this unit and Wireless Receiver within 10 m.
- The sound may not be heard by the effects of electromagnetic wave in the circumstance.
- Wave interference may occur during operating the unit.
- The speakers contain magnet parts, so color irregularity may occur on the TV screen or PC monitor screen. Please use the speakers far away from either TV screen or PC monitor.



LG Electronics hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC, EMC Directive 2004/108/EC, Low Voltage Directive 2006/95/EC, and Directive 2009/125/EC

Indoor Use Only.

Please contact to the following address for obtaining a copy of the DoC (Declaration of Conformity).

LG Electronics European Shared Service Center B.V.
Veluwezoom 15 1327 AE Almere The Netherlands
(Tel : +31-(0)36-547-8888)

RF Radiation Exposure Statement

This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

France Notice

Pour la France métropolitaine

2.400 - 2.4835 GHz (Canaux 1 à 13) autorisé en usage intérieur

2.400 - 2.454 GHz (canaux 1 à 7) autorisé en usage extérieur

Pour la Guyane et la Réunion

2.400 - 2.4835 GHz (Canaux 1 à 13) autorisé en usage intérieur

2.420 - 2.4835 GHz (canaux 5 à 13) autorisé en usage extérieur

Italy Notice

A general authorization is requested for outdoor use in Italy.

The use of these equipments is regulated by:

1. D.L.gs 1.8.2003, n. 259, article 104 (activity subject to general authorization) for outdoor use and article 105 (free use) for indoor use, in both cases for private use.
2. D.M. 28.5.03, for supply to public of RLAN access to networks and telecom services.

L'uso degli apparati è regolamentato da:

1. D.L.gs 1.8.2003, n. 259, articoli 104 (attività soggette ad autorizzazione generale) se utilizzati al di fuori del proprio fondo e 105 (libero uso) se utilizzati entro il proprio fondo, in entrambi i casi per uso private.
2. D.M. 28.5.03, per la fornitura al pubblico dell'accesso R-LAN alle reti e ai servizi di telecomunicazioni.

Latvia Notice

A license is required for outdoor use for operation in 2.4 GHz band.

- Replace only with a battery of the type recommended by LG.
- Caution: Danger of explosion if battery is incorrectly replaced. Replace only the rechargeable lithium battery with LG. Use of Another Cell May Present a Risk of Fire or Explosion.


Contents

- 2 CAUTION
- 5 Accessories
- 6 Installation
- 7 About the unit & Speaker
- 8 LED status
- 9 Pairing the speaker and unit manually
- 10 Listening to music
- 11 Troubleshooting
- 11 Specifications

2 Preparation

Accessories

Please check and identify the supplied accessories.

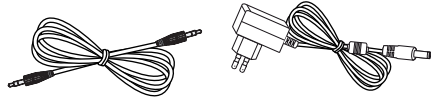

Portable cable (1)

AC/DC adapter (1)
(GFP181T-0920-1)

1




2


3

4

3 Installation

3
Installation

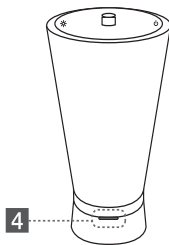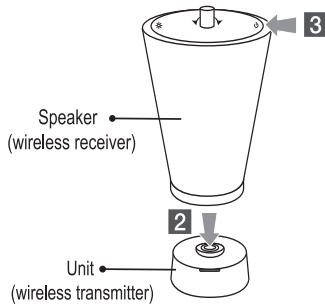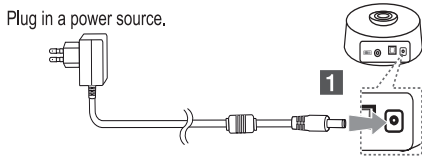



- 1** Connect one end to the DC IN socket on the main unit.
Connect the other end to the wall outlet.
- 2** Combine the unit (wireless transmitter) and speaker (wireless receiver).
- 3** Turn the power on by pressing  (Power).
- 4** The green color is on.

! **NOTE**

- Risk of electric shock!
When you unplug the AC/DC adapter, always pull the plug from the socket. Never pull the cord.
- Contact an electrical parts dealer for assistance in selecting a suitable AC/DC plug adapter or AC/DC cord set.
- For operating the unit after purchasing it, you should charge it fully first.

* The actual set may differ from the drawing.

About the unit & Speaker

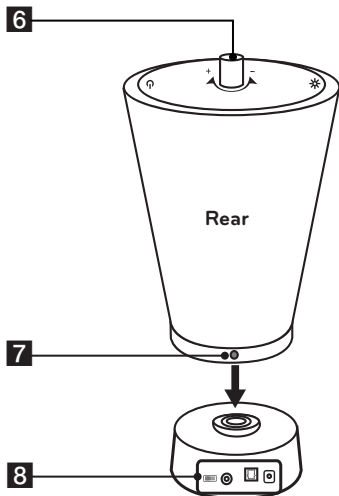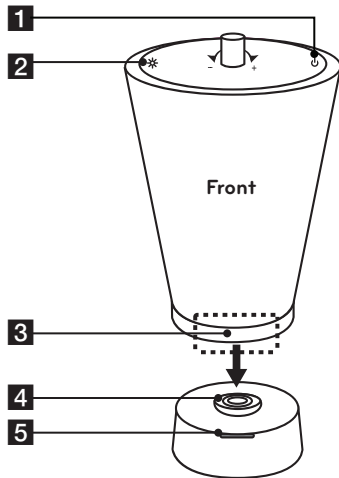

- 1** Power (on/off)
- 2** (Mood lighting) :
Press repeatedly to adjust the brightness level and to turn off the mood light.
- 3** Speaker (Battery status LED of speaker)
- 4** Parts for speaker charging
- 5** Unit (Wireless connection status LED of unit)
- 6**

Volume knob
To adjust the volume, press the button first and rotate it as below.



The mood light rotates in the direction that you rotate the volume knob.






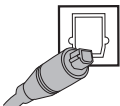



NOTE

If you do not use it for a long time, store it in a safe place with the volume knob pressed for preventing breakage.



- 7** **PHONES** (Headphone jack)
A warning that excessive sound pressure from earphones and headphones can cause hearing loss.


8  	When you connect a portable device to the unit.
 	When you connect the device with optical jacks on it to the unit.
	Connect the portable player to the PORT.IN (PORTABLE IN) connector of the unit.
	Connect the optical of your component into the OPTICAL IN.
	Connect one end to the DC in socket on the main unit. Connect the other end to the wall outlet.

LED status

Combined



Separated

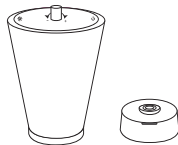

• Power-on

Speaker (LED status battery)		
LED	Combined	Separated
Green on	Charged	
Red on	low battery	

Unit (LED status wireless)		
LED	Combined	Separated
Green on	Connected	
Green blink	Not connected	

Rechargeable Battery


- If the unit is unpaired for longer than 2 minutes, it is automatically powered off.
- Operating time on the battery: approximately 5 hours 30 minutes
- The maximum playing time: approximately 6 hours - It may differ depending on the genre of music and the volume.
- Charging time on the battery: approximately 4 hours
- The battery operating time may vary depending on the battery status, operational status and environment conditions.
- Effective distance: about 10 m (The distance may differ according to surrounding circumstances.)
- When the temperature of the unit's outside is extremely high, the speaker LED blinks green and red alternately and the sound mutes. Then move the unit into a cooler place for normal operation.
 - If the unit does not work properly even after moving the unit, contact to a LG service center.

Pairing the speaker and unit manually


You can set up wireless connection manually, when your connection is not completed. Use the unit after charging it fully (for longer than 30 minutes).

1. Connect one end to the DC IN socket on the main unit.


Plug in a power source.

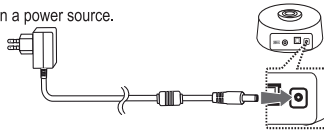


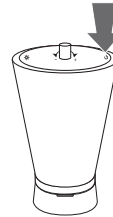
2. Press and hold reset button on the unit until the red light flicker a second on LED.

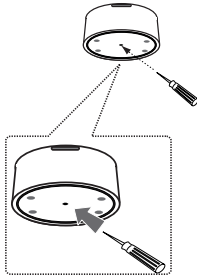

3. Press the reset button on the bottom of speaker.

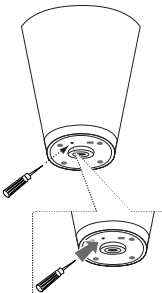

4. Combine the speaker and unit. Press  (Power) for longer than 3 seconds and then wait five seconds.






5. If the LED on the unit is green, the connection is completed.



Listening to music

The unit can be used to play the music from many types of portable player or component.

1. Connect the portable or optical output jack of your component into the OPTICAL/PORT.IN jack on this unit.
2. Turn the power on by pressing  (Power)
3. Select the PORT. or OPTICAL option by drawing  or  pulling the switch.
 - In receiving OPTICAL signals, Dolby digital & DTS On the setting menu of TV or other connected devices, please changed Digital Audio Output into PCM.
4. Turn on the external device and start it playing.



NOTE

- Please refer to the manuals of your TV, other devices as necessary to make the best connections.
- When you use an external device at high volume, the sound quality may be deteriorated. In this case, lower the volume of the external devices appropriately.

4

Appendix

Troubleshooting

PROBLEM	CAUSE	CORRECTION
No Power	AC/DC adapter is disconnected.	Plug the power cord into the wall outlet securely.
	The battery is discharged.	Recharge the battery.
No sound	The volume is set to minimum.	Use the volume controller.
	The power cord is not plugged in.	Ensure that the AC/DC adapter of the main unit is connected properly.
	Battery status LED is off.	Refer to the page 8
	The speaker battery status LED is displayed GREEN and red repeatedly.	The set is overheated, so move it into the cool area.
	Pairing between the unit and the speaker gets disconnected.	Move the speaker near the unit as closely as possible.
	The Digital Audio Output is not set to PCM.	Change the Digital Audio Output into PCM.

4

Appendix

Specifications

Unit (wireless transmitter)_PW15K (TX : PW15K-T), PW15R (TX : PW15R-T)	
Power supply	200 - 240 V, 50 / 60 Hz
Power consumption	5 W
Net Weight	0.05 kg
External dimensions (W x H x D)	(84 X 32 X 84) mm
Operating conditions Temperature	0 °C to 40 °C, Operation status: Horizontal
Operating humidity	5 % to 85 %
AC/DC adapter	DC 9 V, 2 A
OPTICAL	PCM (24 bit 192 kHz)
Amplifier	
Output Power	10 W (5 W+5 W)
Speakers (wireless receiver)_PW15K (RX : PW15K-R),PW15R (RX : PW15R-R)	
Type	1 way 2 speaker
Power consumption	5 W
Impedence	6 Ω
Rated Input Power	5 W
Max. Input power	18 W
External Dimension	(120 X 182 X 120) mm
Net weight	0.6 kg



Designs and specifications are subject to change without prior notice.