



# MICRO Hi-Fi SYSTEM OWNER'S MANUAL

**MODEL: XA102**

| XA102-A0U/D0U/X0U

| XAS102F

**XA42**

| XA42-A0U/D0U/X0U

| XAS42F

Before connecting up, operating or repairing this product,  
please read this instruction booklet carefully and  
completely.



# Safety Precaution



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

 
**WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.**

**WARNING:** Do not install this equipment in a confined space such as a book case or similar unit.

**CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating.

The openings should be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction have been adhered to.



## CAUTION:

This product employs a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Should the unit require maintenance, contact an authorized service center.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM.

**CAUTION:** The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

## CAUTION concerning the Power Cord

**Most appliances recommend they be placed upon a dedicated circuit;**

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.



## Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



**This product is manufactured to comply with the EEC DIRECTIVE 89/336/EEC, 93/68/EEC and 73/23/EEC.**

## POWER SAVE MODE - OPTIONAL

You can set up the unit into an economic power save mode.

In power-on status, press and hold STAND BY/ON (POWER) button for about 3 seconds.

- Nothing is displayed in the display window when the unit goes into the power save mode.


To cancel, power save mode press STAND BY/ON (POWER).

# Before use

## Contents

<b>Before use</b> .....	3-5
About the Symbols for instruction /	
Notes on Discs .....	3
Front / Rear Panel .....	4
Remote Control .....	5
<b>Connections</b> .....	6
Speaker System Connection /	
Antenna (Aerial) Connections /	
Auxiliary Function .....	6
<b>Operation</b> .....	7-13
Setting the Clock / Timer Function .....	7
Sleep Function / Audio Adjustment .....	8
RDS Function - OPTIONAL .....	9
Presetting the Radio Stations /	
Listening to the Radio .....	10
CD Playback .....	11
To Program Play / About MP3/WMA .....	12
USB Function .....	13
<b>Reference</b> .....	14-15
Troubleshooting .....	14
Specifications .....	15

## About the symbols for instruction

 
 Indicates hazards likely to cause harm to the unit itself or other material damage.

**Note** Indicates special notes and operating features.

## Notes on Discs

### Handling discs

Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints do not get on the surface. Never stick paper or tape on the disc.




### Storing discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.



### Cleaning discs

 Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center out.

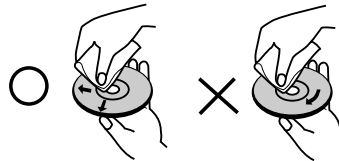


Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.

## Front / Rear Panel

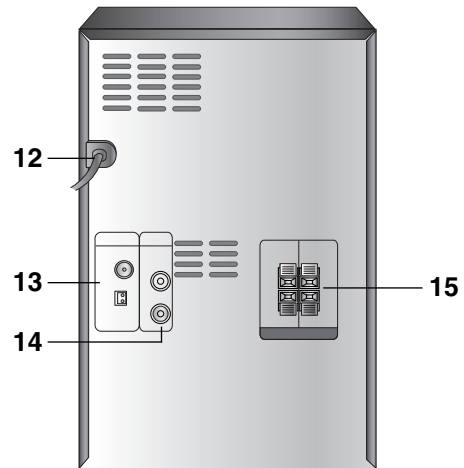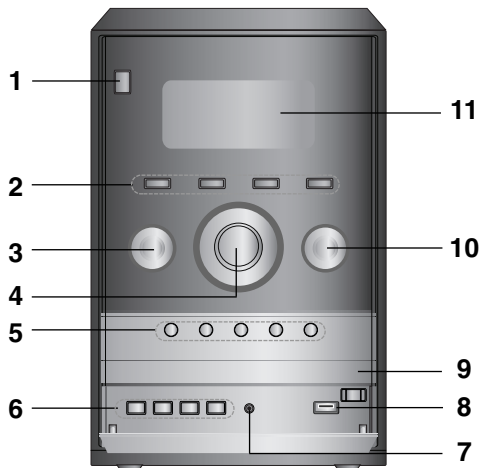  


- |  |   |
|--|---|
| <ol style="list-style-type: none"> <li>1. STAND BY/ ON (⏻) button</li> <li>2. • XDSS button             <ul style="list-style-type: none"> <li>• MP3 OPT. button</li> <li>• ST./MONO. (STEREO/MONO) button</li> <li>• XTS pro button</li> <li>• EQ master button</li> </ul> </li> <li>3. FUNCTION (FM, AM, CD, USB, AUX)</li> <li>4. VOLUME control knob</li> <li>5. • SEARCH (◀◀/▶▶) buttons<br/>TUNING (-/+) buttons (TUNER)             <ul style="list-style-type: none"> <li>• PLAY/PAUSE (▶  ) button</li> <li>• STOP (■) button</li> <li>• OPEN/CLOSE (⏏) button</li> </ul> </li> </ol> | <ol style="list-style-type: none"> <li>6. • CLOCK button             <ul style="list-style-type: none"> <li>• TIMER button</li> <li>• SET button</li> <li>• RDS (OPTIONAL) button</li> <li>• DEMO button</li> </ul> </li> <li>7. PHONES (Headphone jack : <math>\varnothing</math> 3.5mm)</li> <li>8. USB connector</li> <li>9. CD door</li> <li>10. MULTI JOG             <ul style="list-style-type: none"> <li>● SKIP ●</li> </ul> </li> <li>11. Display window</li> <li>12. Power cord</li> <li>13. Antenna terminal</li> <li>14. AUX IN (Auxiliary input) connector</li> <li>15. Speaker terminal</li> </ol> |
|--|---|

## Remote Control

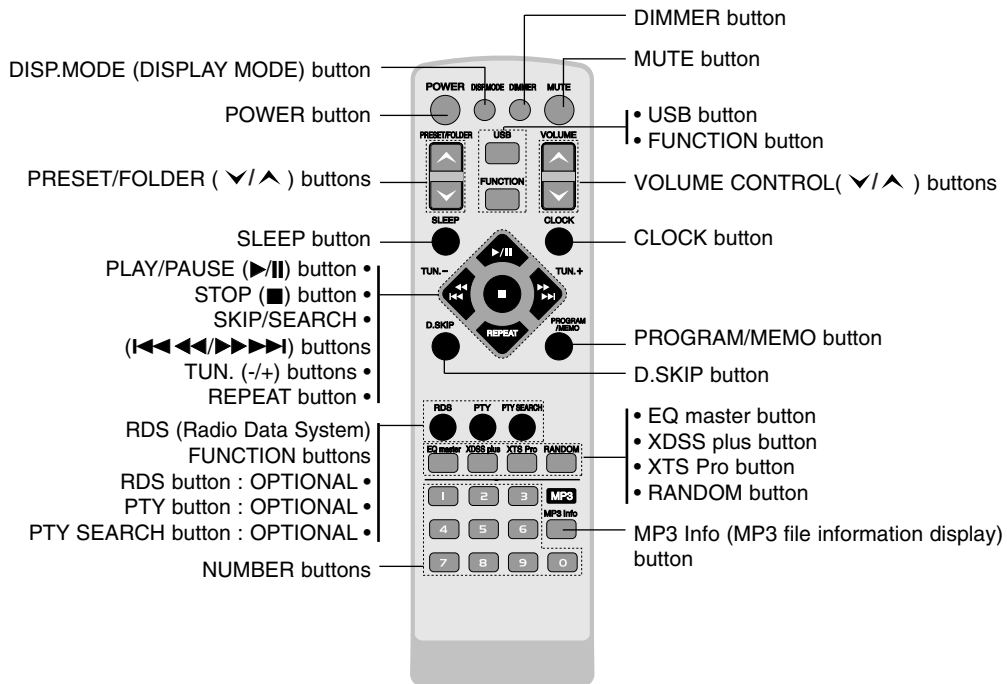 

### Remote Control battery installation

 

Detach the battery cover on the rear of the remote control, and insert two R03 (size AAA) batteries with **+** and **-** aligned correctly.

### Remote Control Operation Range

 
Point the remote control at the remote sensor and press the buttons.  
 Distance : About 23 ft (7 m) from the front of the remote sensor.  
 Angle : About 30° in each direction of the front of the remote sensor.

**⚠ Caution:** Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.).

# Connections

## Speaker System Connection

Connect the speaker cords to the speaker terminal.

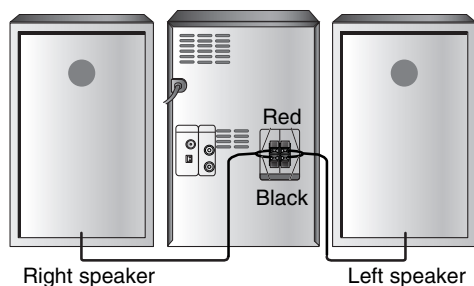

### Notes:

 
- Be sure to match the speaker cord to the appropriate terminal on the components: + to + and - to -. If the cords are reversed, the sound will be distorted and will lack base.
- Connect the Left/Right speaker correctly. If it reversed, the sound may be distorted.

## Auxiliary Function

Connect an auxiliary device such as a TV or VCR via the rear mounted AUX connector and turn FUNCTION on the front panel or press FUNCTION on the remote control.


### Note:

Turn the unit off and then connect an auxiliary device before you connect an auxiliary device. Because it may be made a noise.

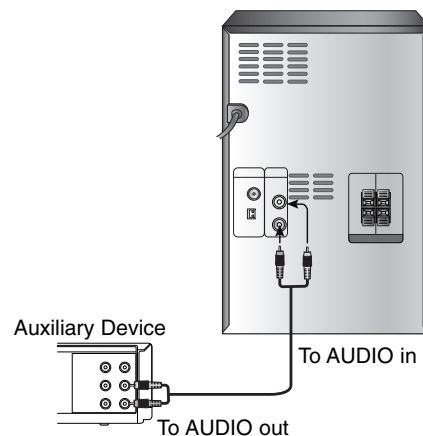

## Antenna (Aerial) Connections

 Connect the supplied FM/AM antennas for listening to the radio.

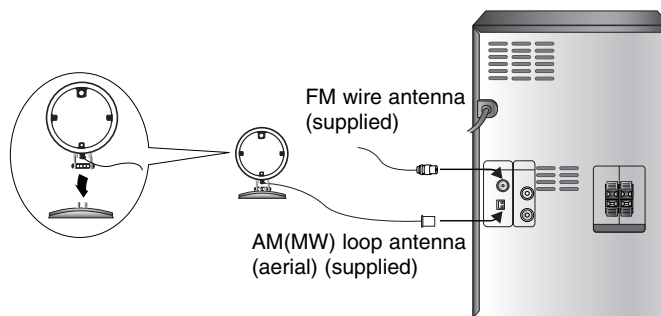


### Notes:

- To prevent noise pickup, keep the AM loop antenna away from the unit and other components.
- Be sure to fully extend the FM wire antenna.
- After connecting the FM wire antenna, keep it as horizontal as possible.

# Operation

## Setting the Clock

 1. Press CLOCK.
2. Select a 24 hour cycle or 12 hour cycle by turning MULTI JOG.



3. Press SET to confirm the selected hour cycle.
4. Turn MULTI JOG on the front panel to set the correct hours.
5. Press SET.
6. Turn MULTI JOG on the front panel to set the correct minutes.
7. Press SET and the correct time is shown on the display window.
8. Press CLOCK at any time, to display the time for about 5 seconds.

### Note:

If you want to reset the clock, press and hold CLOCK for more than 2 seconds.

## Timer Function

With the TIMER function you can have the radio reception, CD play and USB play turned on and off at the desired time.

1. Press CLOCK to check the current time. (If you don't set clock, the timer function doesn't work.)
2. Press TIMER to enter the timer setting mode. If you want to correct the previous memorized TIMER setting, press and hold the TIMER for more than 2 seconds.
  - The previous memorized timer on the time and "⊖" indicator appears in the display window.
3. Each function (TUNER → CD → USB) flashes in the display window in turn. Press SET when the desired function is flashing.

4.
  - a. When you select the TUNER function, select the previous memorized preset number by turning MULTI JOG on the front panel and press SET.
    - "ON TIME" indicator appears for about 0.5 seconds in the display window and then disappears.
  - b. When you select the CD or USB function,
    - "ON TIME" indicator appears for about 0.5 seconds in the display window and then disappears.
5. Set the hour to switch on by turning MULTI JOG on the front panel.
6. Press SET to confirm the hour to switch on.
7. Set the minute to switch on by turning MULTI JOG on the front panel.
8. Press SET to confirm the minute to switch on.
  - "OFF TIME" indicator appears for about 0.5 seconds in the display window and then disappears.
9. Set the hour to switch off by turning MULTI JOG on the front panel.
10. Press SET to confirm the hour to switch off.
11. Set the minute to switch off by turning MULTI JOG on the front panel.
12. Press SET.
13. Adjust the volume level by turning MULTI JOG on the front panel.
14. Press SET.
  - "⊖" appears in the display window and the timer setting has been completed.
15. Switch the system off.
  - The selected function is automatically switched on and off at the time set.

### To cancel or check the timer

Each time the TIMER is pressed you can select the timer set or cancel. You can also check the timer setting status.

To activate or check the timer, press the TIMER so that "⊖" appears in the display window.

To cancel the TIMER, press the TIMER so that "⊖" disappears in the display window.

## Sleep Function

When the sleep timer is used, the power is automatically turned off after the specified time has elapsed.

1. Press SLEEP to set the desired sleep time. The SLEEP indicator and sleep time appears in the display window.
2. Each time you press SLEEP the setting changes in the following order.  
SLEEP 180 → 150 → 120 → 90 → 80 → 70 → 60 → 50 → 40 → 30 → 20 → 10 → OFF

### Note:

If you press SLEEP while the sleep time is displayed, the SLEEP time is reset.

### To cancel the sleep timer mode

If you have to stop the function, press the SLEEP repeatedly until "SLEEP 10" appears, and then press SLEEP once again while "SLEEP 10" is displayed.

## Audio Adjustment

### Headphone jack

Connect a stereo headphone plug (ø3.5mm) into the headphone jack to listen to the sound through headphones. The speakers are automatically disconnected when you plug in the headphones (not supplied).

### MUTE

Press **MUTE** to temporarily stop the sound such as when you answer the telephone. The "M" indicator flashes in the display window. To cancel it, press MUTE again.

### DEMO

Press **DEMO** in power off state to demonstrate the function in the display window. To cancel, press  $\odot$ STAND BY/ON (POWER) or DEMO again.

### Sound Quality Adjustment

You can select a desired sound mode by using **EQ master**.

NORMAL → USER EQ → POP → CLASSIC  
→ ROCK → DRAMA → JAZZ → NORMAL ...

## XDSS

### (Extreme Dynamic Sound System)

Press XDSS on the front panel to reinforce treble, bass and the surround effect. The "XDSS ON" or "NORMAL" indicator lights.

Or press XDSS plus on the remote control.

Audio CD : XDSS ON ↔ NORMAL

MP3/WMA : XDSS ON → MP3 - OPT ON  
→ NORMAL → XDSS ON ...

## XTS Pro

This unique sound quality of our technology creates the optimum sound for you to play the perfect playback of the original sound and to feel the living sound source.

**Each time you press XTS Pro the setting changes in the following order.**

XTS - PRO ON ↔ XTS - PRO OFF

### Note:

The XTS Pro function will not be operated when a headphone has connected.

## MP3 Optimizer

This function is optimized for compressible MP3 file. It is improved the bass sound to make sweet sound.

Each time you press MP3 OPT. on the front panel. The setting changes in the following order.  
MP3 - OPT ON ↔ NORMAL

Or press XDSS plus on the remote control.

XDSS ON → MP3 - OPT ON → NORMAL  
→ XDSS ON ...

## DIMMER

This function is turned the LED (Light-emitting diode) on the front panel off and darken the display window by half in power-on status.

Press **DIMMER** once.

To cancel it, press DIMMER again.

## DISPLAY MODE

Whenever you press **DISP. MODE** (DISPLAY MODE), you can enjoy the spectrum change with 6 types in the display window.

## RANDOM

Press **RANDOM** on the remote control during playback. The tracks on the CD/MP3/WMA/USB will all play in random order.

To cancel it, press RANDOM again.



## RDS Function - OPTIONAL

### About RDS

This unit is equipped with RDS (Radio Data System), which brings a wide range of information to FM radio. Now in use in many countries, RDS is a system for transmitting station call signs or network information, a description of station programme type text message about the station or specifics of musical selection and the correct time.

### RDS Tuning

When a FM station is tuned in and it contains RDS data, the unit will automatically display the station's call sign and the RDS indicator will light in the Display Window as well as indicators for the programme type recognition (PTY), Radio Text (RT), Clock Time (CT) and RDS services programme (PS) if transmitted by the station.

### RDS Display Options

The RDS system is capable of transmitting a wide variety of information in addition to the initial call sign that appears when a station is first tuned. In normal RDS operation the display will indicate the station name, broadcast network or call letters. Pressing RDS on the remote control enables you to cycle through the various data types in the sequence:

(FREQUENCY → PTY → RT → CT → PS )

- PTY (Programme type recognition)- The name of the programme type is shown in the Display Window.
- RT (Radio text recognition)- The name of the radio text is shown in the Display Window.
- CT (Time controlled by the channel)- Enables the unit to receive the actual time and show it in the Display Window.
- PS (Programme Service name)- The name of the channel is shown in the Display Window.

#### Note:

Some RDS stations may not choose to include some of these additional features. If the data required for the selected mode is not being transmitted, the Display Window will show a PTY NONE, RT NONE, CT NONE, PS NONE message.

### Programme Search (PTY)

A major benefit of RDS is its ability to encode broadcasts with Programme Type (PTY) codes that indicate the type of material being broadcast. The following list shows the abbreviations used to indicate each PTY along with an explanation of the PTY.

NEWS	News
AFFAIRS	Current Affairs
INFO	Information
SPORT	Sports
EDUCATE	Educational
DRAMA	Drama
CULTURE	Culture
SCIENCE	Science
VARIED	Varied Speech Programme
POP M	Popular Music
ROCK M	Rock Music
EASY M	Easy Listening Music
LIGHT M	Light Music
CLASSICS	Classical Music
OTHER M	Other Music
WEATHER	Weather Information
FINANCE	Financial Programmes
CHILDREN	Children's Programmes
SOCIAL	Social Affairs Programmes
RELIGION	Religious Broadcasts
PHONE IN	Phone-In Programmes
TRAVEL	Travel and Touring
LEISURE	Leisure and Hobby
JAZZ	Jazz Music
COUNTRY	Country Music
NATION M	National Music
OLDIES	Oldies Music
FOLK M	Folk Music
DOCUMENT	Documentary Programmes
TEST	Station Alarm Test Message
ALARM !	Emergency Broadcast Information

You may search for a specific Programme Type (PTY) by following these steps.

1. Turn FUNCTION (or press FUNCTION) to select FM mode.
2. Press PTY on the remote control, the display will show the last PTY in use.
3. Press PTY repeatedly to select a desired PTY.
4. When the PTY is selected, press PTY SEARCH.

The unit will go into an automatic search mode. When a station is tuned, the search will stop.

## Presetting the Radio Stations

You can preset 50 stations for FM and AM. Before tuning, make sure that you have turned down the volume to the minimum.

1. Turn FUNCTION on the front panel or press FUNCTION on the remote control to select the frequency (AM or FM) you want.
2. Select a station you want by pressing TUN. (-/+) buttons.

### Tuning in automatically

- Press TUNING (-/+) on the front panel. (Or press TUN. (-/+) on the remote control for more than 0.5 second.) Scanning stops when the unit tunes in a stations.

### Tuning in manually

- Turn MULTI JOG on the front panel (or press TUN. (-/+) on the remote control) briefly and repeatedly.

3. Press PROGRAM/MEMO on the remote control. A preset number will flash in the display window.
4. Press PRESET/FOLDER (▼/▲) on the remote control to select the preset number you want.
5. Press PROGRAM/MEMO again. The station is stored.
6. Repeat steps 1 (or 2) to 5 to store other stations.

### To delete all the memorized stations

Press and hold PROGRAM/MEMO on the remote control for about two seconds, "ERASE ALL" appears in the display window and then PROGRAM/MEMO on the remote control again, the stations are deleted.

### For your reference

If all stations have already been entered, "FULL" message will appear in the display window for a moment and then a preset number will flash. To change the preset number, follow the steps 4-5.

### To recall presets

Press and hold PRESET/FOLDER (▼/▲) on the remote control until the desired preset number appears or press it repeatedly.

## Listening to the Radio

1. Turn FUNCTION on the front panel or press FUNCTION on the remote control to select the frequency (AM or FM) you want. The last received station is tuned in.
2. Press PRESET/FOLDER (▼/▲) on the remote control repeatedly to select the preset station you want.
  - Each time you press the button, the unit tunes in one preset station at a time.
3. Adjust the volume by rotating the VOLUME control knob (or pressing VOLUME ▼/▲ on the remote control) repeatedly.

### To listen to non-preset radio stations

- For manual tuning, see "Tuning in manually" in step 2 on left.
- For automatic tuning, see "Tuning in automatically" in step 2 on left.

### To turn off the radio

Press ⏻ STANDBY/ON (POWER) to turn the unit off or select another function mode (CD, USB, AUX).

### For your reference

- If an FM program is noisy. Press ST./MONO. so that "MONO" appears in the display window. There will be no stereo effect, but the reception will be improved. Press ST./MONO. again to restore the stereo effect.
- To improve reception. Reposition the supplied antennas.

## CD Playback

### Basic Playback

1. Use FUNCTION to select CD/MP3 function.  
If no disc is loaded then "NO DISC" is displayed.
2. Press OPEN/ CLOSE (▲) and place the disc into the disc tray.

#### Note:

To load an 8cm (3 inch) disc, put it onto the inner circle of the tray.

3. Press OPEN/ CLOSE (▲) to close the disc compartment.  
Audio CD : "READING" appears in the display window, and then the total number of tracks and the playing time are displayed.  
MP3 CD : "READING" appears in the display window, and then the total number of files is displayed.
4. Press PLAY/ PAUSE (▶/||).  
In addition, you can also play an Audio CD or MP3 CD using the NUMBER buttons.

### Pause Playback

Press PLAY/ PAUSE (▶/||) during playback.  
Press this button again it to resume play.

### Stop Playback

Press STOP (■) during playback.

### Skipping a Track

- Turn MULTI JOG on the front panel to select the track you want.
- Press ▶▶▶▶ on the remote control to go to the next track.
- When the ◀◀◀◀ on the remote control is pressed once midway through a track, the player returns to the start of that track. When it is pressed again, a track is skipped each time the button is pressed.

### Searching a Track

Press ◀◀/▶▶ on the front panel, and then press once more at the point you want.

Or hold ◀◀◀◀/▶▶▶▶ on the remote control during playback, then release at the point you want.

#### Note:

This function is only available to play an Audio CD.

## Repeat

Press REPEAT during playback.

### Audio CD

- RPT 1 : To play one track repeatedly.
- ↓
- RPT ALL : To play all tracks repeatedly.
- ↓
- RPT OFF : To cancel repeat play.

### MP3/WMA

- RPT 1 : To play one track repeatedly.
- ↓
- RPT FOLDER : To play folder repeatedly.
- ↓
- RPT ALL : To play all tracks repeatedly
- ↓
- RPT OFF : To cancel repeat play.

### Program repeat play

- RPT 1 : To play one track repeatedly.
- ↓
- RPT ALL : To play all program repeatedly.
- ↓
- RPT OFF : To cancel repeat play.

### To check MP3 file information

Press MP3 Info during MP3 file playback.

- The information (Title, Artist or Album) of the MP3 file will be shown in the display window.
- If there is no the information of the MP3 file, "NO ID3 TAG" indicator will be shown in the display window.

#### Note:

This unit can play a CD-R or CD-RW that contains audio titles or MP3 files.

### MP3/WMA file folder function

Press PRESET/FOLDER (▼/▲) on the remote control to select the folder you want.

#### Note:

It is applied in a case that has several folder in MP3/WMA file.

## To Program Play

You can arrange the order of the tracks on the discs and create your own program. The program can contain up to 20 tracks.

1. Press PROGRAM/MEMO on the remote control in stop mode.
2. Turn MULTI JOG on the front panel (or press ◀◀◀◀▶▶▶▶▶▶ on the remote control) to select the track.  
EX) "4 - P 01" will be shown in the display.  
|  
| Program number  
|  
| Track number
3. Press PROGRAM/MEMO on the remote control.
4. Repeat 1 - 3.
5. Press PLAY/ PAUSE (▶||).  
"PROG." appears in the display window.

### To check the program contents

Press PROGRAM/MEMO on the remote control in stop mode.  
- A Track and program number will be displayed.

### To clear program contents

Press PROGRAM/MEMO on the remote control in stop mode. And then press STOP (■) on the remote control.

### To add program contents

1. Press PROGRAM/MEMO on the remote control repeatedly in program stop mode until the Track Number blinks.
2. Repeat 2 - 4 on above.

### To modify program contents

1. Press PROGRAM/MEMO on the remote control to display the program number you want to modify.
2. Repeat 2 - 4 on above.

## About MP3/WMA

### MP3

- An MP3 file is audio data compressed by using the MPEG1 audio layer-3 file-coding scheme. We call files that have the ".mp3" file extension "MP3 files".
- The unit can not read an MP3 file that has not ".mp3" file extension.

### WMA

- A WMA file is a Microsoft audio compression technology.
- WMA(Windows Media Audio) offers double the audio compression of the MP3 format.

### MP3/WMA Disc compatibility with this unit is limited as follows:

1. Sampling Frequency  
8 - 48kHz(MP3), 32 - 48kHz(WMA)
2. Bit rate  
8 - 320kbps(MP3), 48 - 320kbps(WMA)
3. CD-R physical format should be "ISO 9660"
4. If you record MP3/WMA files using the software which cannot create a FILE SYSTEM, for example "Direct-CD" etc., it is impossible to playback MP3 files. We recommend that you use "Easy-CD Creator", which creates an ISO 9660 file system.
5. File names should be named using 30 letters or less and must incorporate ".mp3", ".wma" extension e.g. "\*\*\*\*\*.MP3" or "\*\*\*\*\*.WMA"
6. Do not use special letters such as "/ : \* ? " < >" etc.
7. Even if the total number of files on the disc have more than 1000, it will only be shown up to 999.

### About MULTI SESSION

- This function recognizes the multi session disc according to a disc of CD-ROM type.

 
ex) If there are MP3/WMA files in the first session, the MP3/WMA file in the first session is only played.

If there are only MP3/WMA files in the whole session, all of the MP3/WMA files in the session are played.

If there is an Audio CD in the first session, only the Audio CD in the first session is played.

## USB Function

You can enjoy the media files such as tunes (MP3/WMA) saved in an MP3 player or USB memory by connecting the storage device to the USB port of this unit.

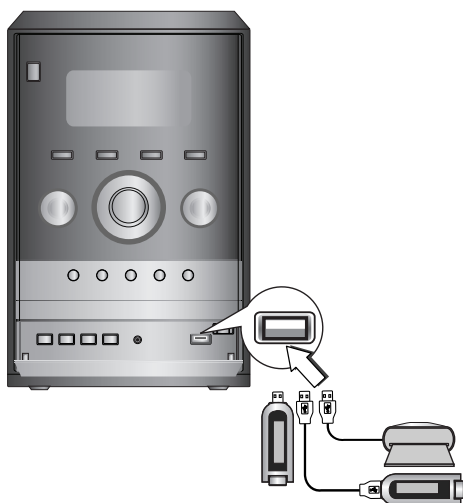

## Compatible Devices

1. Devices which require additional program installation when you have connected it to a computer, are not supported.
2. MP3 Player : Flash type MP3 player.
  - The MP3 player requiring installation of a driver is not supported.
3. USB Flash Drive : Devices that support USB2.0 or USB1.1.

## Basic Playback

1. Connect the USB device to the USB connector of your unit.
2. Press the USB on the remote control or turn FUNCTION on the front panel to enter the USB mode.  
"CHECKING" appears in the display window, and then the total number of files is displayed.
3. Press PLAY/ PAUSE (▶/||).  
In addition, you can also play using the NUMBER buttons.

## To Remove the USB from the unit

1. Choose the other functions except USB function in order to remove the USB.
2. Remove the USB from the unit.

### Note:

Besides Basic Playback, if you want to operate other functions, see the CD Playback section.

## Moving to other cards

When you use an MP3 player or memory card, press D.SKIP on the remote control during playing or stopping.

### Notes:

- Do not extract the USB device in operating.
- A back up demands to prevent a data damage.
- If you use a USB extension cable or USB hub, the USB device might not be recognized.
- A device using NTFS file system is not supported. (Only FAT (16/32) file system is supported.)
- The USB function of this unit does not support all USB devices.
- Digital camera and mobile phone are not supported.
- This unit is not supported when the total number of files is 1000 or more.

# Reference

## Troubleshooting

Symptom	Cause	Correction
No power.	<ul style="list-style-type: none"><li>The power cord is disconnected.</li></ul>	<ul style="list-style-type: none"><li>Plug the power cord into the wall outlet securely.</li></ul>
No sound.	<ul style="list-style-type: none"><li>The power of the external source equipment is switched off.</li></ul>	<ul style="list-style-type: none"><li>Switch on the external source equipment.</li></ul>
The unit does not start playback.	<ul style="list-style-type: none"><li>No disc is inserted.</li></ul>	<ul style="list-style-type: none"><li>Insert a disc.</li></ul>
	<ul style="list-style-type: none"><li>An unplayable disc is inserted.</li></ul>	<ul style="list-style-type: none"><li>Insert a playable disc.</li></ul>
	<ul style="list-style-type: none"><li>The disc is placed upside down.</li></ul>	<ul style="list-style-type: none"><li>Place the disc with the playback side down.</li></ul>
	<ul style="list-style-type: none"><li>The disc is not placed within the guide.</li></ul>	<ul style="list-style-type: none"><li>Place the disc on the disc tray correctly inside the guide.</li></ul>
The remote control does not work properly.	<ul style="list-style-type: none"><li>The disc is dirty.</li></ul>	<ul style="list-style-type: none"><li>Clean the disc.</li></ul>
	<ul style="list-style-type: none"><li>The remote control is not pointed at the remote sensor of the unit.</li></ul>	<ul style="list-style-type: none"><li>Point the remote control at the remote sensor of the unit.</li></ul>
	<ul style="list-style-type: none"><li>The remote control is too far from the unit.</li></ul>	<ul style="list-style-type: none"><li>Operate the remote control within about 23 ft (7 m).</li></ul>
	<ul style="list-style-type: none"><li>There is an obstacle in the path of the remote control and the unit.</li></ul>	<ul style="list-style-type: none"><li>Remove the obstacle.</li></ul>
	<ul style="list-style-type: none"><li>The batteries in the remote control are exhausted.</li></ul>	<ul style="list-style-type: none"><li>Replace the batteries with new ones.</li></ul>

## Specifications

SECTION		MODEL		
		XA102	XA42	
[General]	Power supply	Refer to the back panel of the unit.		
	Power consumption	35W	20W	
	Net Weight	3.4 kg		
	External dimensions (WxHxD)	170 X 253 X 265 mm		
[CD]	Frequency response	20 - 20000 Hz		
	Signal-to-noise ratio	75 dB		
	Dynamic range	75 dB		
[Tuner]	FM	Tuning Range	87.5 - 108.0 MHz or 65 - 74 MHz, 87.5 - 108.0 MHz	
		Intermediate Frequency	10.7 MHz	
		Signal to Noise Ratio	60/55 dB	
		Frequency Response	50 - 10000 Hz	
	AM (MW)	Tuning Range	522 - 1620 kHz or 520 - 1720 kHz	
		Intermediate Frequency	450 kHz	
		Signal to Noise Ratio	30 dB	
		Frequency Response	140 - 1800 Hz	
[Amp]	Output Power	50 W + 50 W	20 W + 20 W	
	T.H.D	0.5 %		
	Frequency Response	40 - 20000 Hz		
	Signal-to-noise ratio	75 dB		
[Speakers]	Model	<b>XAS102F</b>	<b>XAS42F</b>	
	Type	2 Way 2 Speaker	1 Way 1 Speaker	
	Impedance	4 Ω	4 Ω	
	Frequency Response	75 - 20000 Hz	75 - 15000 Hz	
	Sound Pressure Level	84 dB/W (1m)	84 dB/W (1m)	
	Rated Input Power	50 W	20 W	
	Max. Input Power	100 W	40 W	
	Net Dimensions (WxHxD)	160x253x186 mm	160x253x186 mm	
	Net Weight (1EA)	2.1 kg	2.1 kg	

Reference

Designs and specifications are subject to change without notice.



P/NO :MFL36565303