



**CE 0168**

[www.lgmobile.com](http://www.lgmobile.com)

MMBB0271163 (1.0) W

**KF600**

ENGLISH

Bluetooth QD ID B012723



Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.

## KF600 User Guide

Congratulations on your purchase of the advanced and compact KF600 phone by LG, designed to operate with the latest digital mobile communication technology.



BROWSER	01
CALL LOGS	02
TOOLS	03
MULTIMEDIA	04
MESSAGING	05
MY STUFF	06
PROFILES	07
CONTACTS	08
SETTINGS	09
ACCESSORIES	10

# Contents

Getting to know your phone

Installing the SIM and battery

Memory card

Menu map

Your standby screen

Browser

Home.....	18
Bookmarks .....	18
Enter address .....	18
History.....	18
Saved pages .....	18
Browser Settings .....	19
Network profiles .....	19
Rendering mode .....	19
Cache .....	19
Cookies .....	19
Security certificates .....	19
Show image .....	19
JavaScript .....	19
Storage location .....	20

Information..... 20

Call Logs

All calls.....	21
Missed calls.....	21
Dialled calls .....	21
Received calls.....	21
Call duration .....	22
Call costs.....	22
Data information.....	22

Tools

Alarm clock.....	23
Calendar .....	23
Adding an event to your calendar .....	23
Editing a calendar event .....	24
Sharing a calendar event .....	25
Calculator .....	25
Memo .....	26
Stop watch .....	26
Unit converter .....	26
World clock .....	26
SIM services.....	27

## Multimedia

MP3 player .....	28
Camera.....	30
Video camera.....	32
FM radio .....	32
Voice recorder .....	33

## Messaging

New message.....	34
Text .....	34
Multimedia .....	35
Email .....	36
Bluetooth message .....	37
Inbox .....	38
Mailbox.....	38
Drafts .....	39
Outbox.....	39
Sent Items .....	39
Listen to voicemail.....	40
Info messages .....	40
Read .....	40
Topics .....	40
Templates.....	41
Text templates .....	41
Multimedia templates .....	41

Settings .....	42
Text message .....	42
Multimedia message .....	42
Email .....	43
Voicemail number .....	44
Service message .....	44
Info message .....	45

## My stuff

Images .....	46
Sounds .....	48
Videos .....	48
Documents .....	49
Others .....	49
Games & Apps .....	50
External memory .....	50

## Profiles

Activate .....	51
Personalise .....	51

# Contents

## Contacts

Search .....	52
New contact .....	52
Speed dials .....	53
Groups .....	53
Copy all .....	54
Delete all .....	54
Settings .....	54
Information .....	54

## Settings

Date & Time .....	55
Set date .....	55
Date format .....	55
Set time .....	55
Time format .....	55
Auto update .....	55
Languages .....	55
Screen .....	55
Wallpaper .....	55
Backlight timer .....	55
Brightness .....	55

Home screen shortcut .....	55
Theme .....	56
Menu style .....	56
Main font style .....	56
Dialing font style .....	56
Standby text .....	56
Network name .....	56
InteractPad™ calibration .....	56
Connectivity .....	56
Bluetooth .....	56
Network .....	59
USB connection .....	61
Call .....	61
Call divert .....	61
Answer mode .....	62
Send my number .....	62
Call waiting .....	63
Minute minder .....	63
Auto redial .....	63
Send DTMF tones .....	63
Security .....	63
PIN code request .....	63
Phone lock .....	64
InteractPad™ lock .....	64
Call barring .....	64
Fixed dial number .....	65
Change codes .....	65
Flight mode .....	65

Power save .....	66
Reset .....	66
Memory manager .....	66
Accessories .....	67
Network service .....	68
Technical data .....	68
For your safety .....	70
Guidelines for safe and efficient use ..	71

## Getting to know your phone

### End/Power key

Ends or rejects a call.  
Turns the phone on/off.  
Press once to return to the standby screen.

### Clear key

Deletes a character with each press. Use this key to go back to the previous screen.

### Main screen

### InteractPad™

### Call key

 
Dials a phone number and answers incoming calls.

 
### Charger, Cable, Handsfree connector

### Volume

### MP3 Player

### Capture button

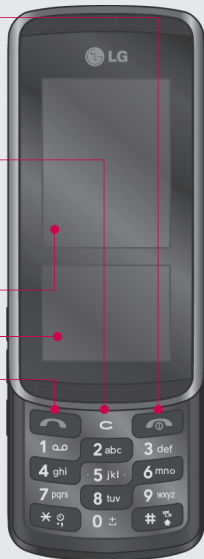

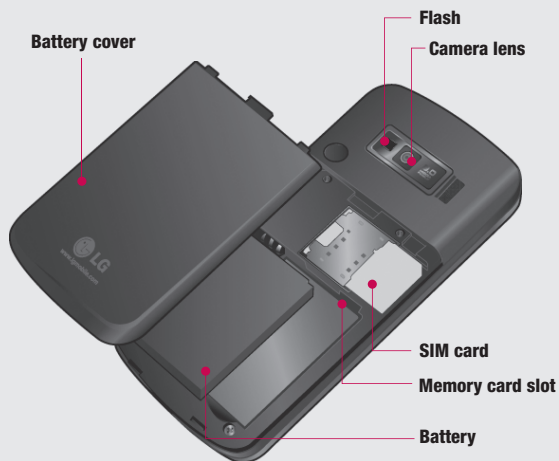

## Installing the SIM and battery



### 1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.



### 2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.

**WARNING:** Do not use your fingernail when removing the battery

**WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.



### 5 Replace the battery cover

 
Slide the battery cover towards the top of the phone until it clicks into place.





### 3 Insert the SIM card

Slide the SIM card into the SIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the reverse direction.

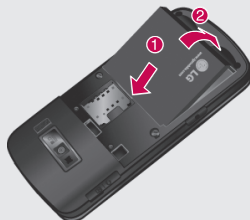

### 4 Insert the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clips into place.



### 6 Charging your phone

Pull open the cover of the charger socket on the side of your KF600. Insert the charger and plug into a mains electricity socket. Your KF600 will need to be charged until a message reading Fully Charged appears on screen.

## Memory card

### Installing a memory card

Expand the memory space available on your phone using a memory card. The KF600 will support up to a 2 GB memory card.



- 1 Remove the battery cover and battery as before.
- 2 Insert the memory card. Slide the memory card into the slot at the top, until it clicks into place. Make sure that the gold contact area is facing upwards.

 



- 3 Replace the battery cover as before.


### Formatting the memory card

If your memory card is already formatted, you can begin using it. If your card isn't formatted you will need to do so.

- 1 From the standby screen touch  and select .



- 2 Choose **Memory manager** and select **External memory**.
- 3 Touch **Format** and enter the password, which is set to 0000 as default. Your card will be formatted and ready to use.
- 4 To view the new formatted folders on your KF600 touch  and select . Choose **External Memory**. You'll see five folders: Images, Sounds, Videos, Documents and Others.

For more details on using a memory card, see page 46.

 **WARNING:** When you format your memory card, all the content will be erased /deleted. If you do not want to lose the data on your memory card, back it up first.

### Transferring your contacts

To transfer your contacts from your SIM to your phone:

- 1 From the standby screen touch , and choose .
- 2 Select **Copy all**.
- 3 Choose **Phone to SIM** then **Keep original** or **Delete original**.
- 4 Touch **Yes** to confirm.

# Menu map



## BROWSER

- 1 Home
- 2 Bookmarks
- 3 Enter address
- 4 History
- 5 Saved pages
- 6 Browser Settings
- 7 Information



## CALL LOGS

- 1 All calls
- 2 Missed calls
- 3 Dialed calls
- 4 Received calls
- 5 Call duration
- 6 Call costs
- 7 Data information



## TOOLS

- 1 Alarm clock
- 2 Calendar
- 3 Calculator
- 4 Memo
- 5 Stop watch
- 6 Unit converter
- 7 World clock
- 8 SIM services



## MULTIMEDIA

- 1 MP3 player
- 2 Camera
- 3 Video camera
- 4 FM radio
- 5 Voice recorder



## MESSAGING

- 1 New message
- 2 Inbox
- 3 Mailbox
- 4 Drafts
- 5 Outbox
- 6 Sent Items
- 7 Listen to voicemail
- 8 Info messages
- 9 Templates
- 0 Settings



## MY STUFF

- 1 Images
- 2 Sounds
- 3 Videos
- 4 Documents
- 5 Others
- 6 Games & Apps
- 7 External memory



## PROFILES

- 1 General
- 2 Silent
- 3 Vibrate only
- 4 Outdoor
- 5 Headset



## CONTACTS

- 1 Search
- 2 New contact
- 3 Speed dials
- 4 Groups
- 5 Copy all
- 6 Delete all
- 7 Settings
- 8 Information



## SETTINGS

- 1 Date & Time
- 2 Language
- 3 Screen
- 4 Connectivity
- 5 Call
- 6 Security
- 7 Flight mode
- 8 Power save
- 9 Reset
- 0 Memory manager

## Your standby screen

Whenever your KF600 isn't in use it'll return to your standby screen. From here you access menu options, make a quick call and change your profile - as well as many other things. Your KF600 has two screens, a InteractPad and a main screen. You can determine what you see on the main screen using the smaller InteractPad beneath it.

### InteractPad tips

The standby screen is also a great place to get accustomed to the InteractPad.

To select an item touch the icon on the touch screen accurately. Your KF600 will vibrate slightly when it recognises you've touched an option.

- ▶ There's no need to press too hard, the InteractPad is sensitive enough to pick up on a light yet firm touch.
- ▶ Use the tip of your finger to touch the option you require. Be careful not to touch any other keys around it.
- ▶ When the screen light is off, press the camera key on the right hand side of the phone to restore the standby screen.
- ▶ Don't cover the phone with a case or cover as the InteractPad will not work with any material covering it.

- ▶ When you enter an options menu, the touch screen will provide a four way arrow pad. Either touch the arrows to move through a menu one item at a time, or slide your finger across the InteractPad in the direction you want to move.



▲ standby screen




▲ InteractPad™

### The quick keys


The quick keys provide easy, one-touch access to your most used functions.


 Touch to open the main menu.

 Touch to open the messaging menu. See page 34 for details.

 Touch to open your address book. Your contacts are displayed as a alphabetical list. You can also create new contacts and edit existing ones. See page 52 for details.


 Tap to set the alarm function.

 Touch to choose a sound profile for your phone.

 Touch to close the quick keys and lock the InteractPad. Press the camera key once to unlock.

### The main menu

The main menu provides nine menu options. To open the menu:

- 1 Touch .
- 2 The main menu will appear on the main screen. The InteractPad will display four directional arrows.
- 3 Touch the arrows to move around the main menu one icon at a time.
- 4 When the option you require is circled, touch **OK** to open.




▲ main menu











## Your standby screen

### The status bar

The status bar indicates, using various icons, things like signal strength, new messages and battery life as well as telling you whether your Bluetooth is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New MSG
	New voice message
	Message inbox is full
	An alarm is set
	Vibrate profile in use

Icon	Description
	General profile in use
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	GPRS available
	EDGE available
	Roaming
	Flight mode is selected
	Bluetooth

# Browser

You can access various WAP (Wireless Application Protocol) services such as banking, news, weather reports and flight information. These services are specially designed for mobile phones and they are maintained by WAP service providers.





Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services. Once connected, the homepage is displayed. The content depends on the service provider. To exit the browser at any time, press the (📶) key. The phone will return to the idle menu.

## Navigating with the WAP browser

You can surf the Internet using either the phone keys or the WAP browser menu.

## Using the phone keys

When surfing the Internet, the phone keys function differently to phone mode.

Key	Description
	Scrolls each line of the content area
	
	Returns to the previous page
	Selects options and confirms actions

## Using the WAP browser menu

There are various menu options available when surfing the Mobile Web.

**TIP!** The WAP browser menus may vary, depending on your browser version.

01

02

03

04

05

06

07

08

09

10

# Browser

## Home

### Menu 1.1

Connects to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.

- ▶ **New bookmark:** Select this to create a new bookmark.
- ▶ **New folder:** Select this to create a new folder.
- ▶ **Copy:** Copy to the folder.
- ▶ **Send URL via:** Sends the selected bookmark via Text/Multimedia message and Email.

## Bookmarks

### Menu 1.2

This menu allows you to store the URL of favourite web pages for easy access at a later time.

#### To create a bookmark

- 1 Press the left soft key **Options**.
- 2 Select Add new and press the OK key.
- 3 After entering the desired URL and title, press the **OK** key. After selecting a desired bookmark, the following options are available.

## Enter address

### Menu 1.3

You can connect directly to the site you want. After entering a specific URL, press the **OK** key.

## History

### Menu 1.4

This menu will show the recently browsed pages.

## Saved pages

### Menu 1.5

The phone can save the page on display as an offline file. Up to 30 pages can be saved.

**TIP!** Total capacity is up to 500kb.



## Browser Settings

Menu 1.6

You can set the profile, cache and security related to internet service.

### Network profiles (Menu 1.6.1)

A profile is the network information used to connect to the Internet.

There are default profiles for some operators, stored in phone memory. It's impossible to rename default profiles.

Each profile has submenus as follows:

#### Activate

Activates the selected profile.

#### View

You can see the selected profile.

- ▶ **Edit:** You can edit the selected profile.
- ▶ **New profile:** You can add a new profile.
- ▶ **Delete:** Deletes the selected profile from the list.
- ▶ **Reset all:** Allows you to reset all profiles.

### Rendering mode (Menu 1.6.2)

- ▶ **Normal:** Displays all the information normally.
- ▶ **Optimized:** Displays all the information optimized.

### Cache (Menu 1.6.3)

The information or services you have accessed are saved in the cache memory of the phone.

**TIP!** A cache is a buffer memory, which is used to save data temporarily.

### Cookies (Menu 1.6.4)

Check whether a cookie is used or not.

### Security certificates (Menu 1.6.5)

You can see the list of personal certificates that have been stored in your phone.

### Show image (Menu 1.6.6)

Select whether to display image/avatar or not.

### JavaScript (Menu 1.6.7)

You can set the JavaScript working on and off.

01

02

03

04

05

06

07

08

09

10

# Browser

## Storage location (Menu 1.6.8)

- ▶ **Phone:** Displays memory used and memory available for storing new applications in the phone.
- ▶ **External:** Displays memory used and memory available for storing new applications in the external memory.

## Information

Menu 1.7

You can view the information of WAP browser version.

# Call Logs

You can check the record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times.

## All calls

Menu 2.1

You can view all lists of outgoing or incoming calls.

## Missed calls

Menu 2.2

This option lets you view the last 50 unanswered calls. You can also:

- ▶ View the number if available and call it, or save it in the Address Book
- ▶ Enter a new name for the number and save both in the Address Book
- ▶ Send a message to this number
- ▶ Delete the call from the list

## Dialled calls

Menu 2.3

This option lets you view the last 50 outgoing calls (called or attempted). You can also:

- ▶ View the number if available and call it or save it in the Address Book.
- ▶ Enter new name for the number and save both in the Address Book.
- ▶ Send a message to this number.
- ▶ Delete the call from the list.

## Received calls

Menu 2.4

This option lets you view the last 50 incoming calls. You can also:

- ▶ View the number if available and call it or save it in the Address Book.
- ▶ Enter new name for the number and save both in the Address Book.
- ▶ Send a message to this number.
- ▶ Delete the call from the list.

01

02

03

04

05

06

07

08

09

10

## Call Logs

### Call duration

Menu 2.5

Allows you to view the duration of your incoming and outgoing calls. You can also reset the call times.

The following timers are available:

- ▶ **Last call:** Length of the last call.
- ▶ **All calls:** Total length of all calls made and incoming calls since the timer was last reset.
- ▶ **Dialled calls:** Length of the outgoing calls.
- ▶ **Received calls:** Length of the incoming calls.

### Data information

Menu 2.7

You can check the amount of data transferred over the network through the GPRS information option.

In addition, you can also view how much time you are online.

### Call costs

Menu 2.6

Allows you to check the cost of your last call, all calls, remaining and reset the cost. To reset the cost, you need PIN2 code.

# Tools

## Alarm clock

Menu 3.1

You can set the alarm clock to expire at a specified time.

- 1 Select **On** and enter the alarm time you want.
- 2 Select the repeat period: Once, Daily, Mon-Fri, Mon-Sat, Sat-Sun.
- 3 Scroll down and choose whether you would like the alarm to Follow profile, Always sound or Always vibrate.
- 4 Scroll down to choose the alarm sound. Touch Search to select a new sound.
- 5 Scroll down and enter a name for the alarm or keep the suggested name.
- 6 Touch Save.

**TIP!** You can set up to 5 alarms.

**TIP!** Although your phone is off, alarm function is working at the time set.


If you tap Snooze then after 5 minutes alarm is turn on again and if you tap QUIT, the message "Turn your phone on" is pop up.


## Calendar

Menu 3.2

### Adding an event to your calendar

(Menu 3.2.1)

- 1 Select the date you would like to add an event to. You can choose a date either by scrolling to it using the InteractPad arrows or by touching  and manually entering the date.

**TIP!** Once you've already got an event saved in your calendar, you will need to select **Go to date** after touching  in order to enter a date to set your event to.

- 2 Touch **New** and enter the time you would like your event to begin. Scroll down using the InteractPad arrows and enter the end time of your event.

01

02

03

04

05

06

07

08


09

10

## Tools

- 3 Scroll down again and choose whether you would like to set an **Alarm** for the event. Scroll left or right to see the available options. You can select for the alarm to go off at the starting time of the event or at a set period of time before the event starts to remind you the event is coming up.
- 4 Scroll down and enter a **Subject** for the event. Use the keypad to type letters and numbers.
- 5 Scroll down once more to select whether the event is a one-off or if it is to be repeated at **Daily**, **Weekly**, **Monthly** or **Yearly** intervals. If the event is repeated, you can also scroll down to enter an **Expiration date** for when the events will stop completely.
- 6 Touch **Save** and your event will be saved in the calendar. A triangular cursor will mark the days that any events have been saved to.


### Editing a calendar event (Menu 3.2.2)

- 1 Press  and select **All schedules** to see a list of all your events. Scroll to the event you would like to edit and touch **View**. Alternatively select the day of the event in the calendar and touch **View**.
- 2 Touch **Edit** and scroll to the event detail you want to change. Make your modifications and touch **Save** to store the edited event.

**TIP!** You can delete an event from your calendar by selecting to view the event and then touching **Delete**.

## Sharing a calendar event

(Menu 3.2.3)


- 1 Select the event you would like to share and touch .
- 2 Choose **Send via** and select from **Text message**, **Multimedia message**, **Bluetooth** or **Email**.

## Calculator

Menu 3.3

This contains the standard functions such as +, -, x, / : Addition, Subtraction, Multiplication, and Division.

Furthermore, you can use the various function of calculator such as +/-, sin, cos, tan, log, ln, exp, deg, rad.

- 1 Input the numbers by pressing numeric keys.
- 2 Use InteractPad to select a sign for calculation.
- 3 Then input the numbers.
- 4 Press = to view the result.
- 5 For more complex calculations, touch  to select a command.
- 6 Touch **AC** to clear the screen to start a new calculation.

01

02

03

04

05

06

07

08

09

10

## Tools

### Memo

Menu 3.4

- 1 Select the Memo by pressing **View**.
- 2 If the entry is empty, press **New**.
- 3 Input the memo and then press **Save**.

### Stop watch





Menu 3.5

- 1 Press **Start** to take time and record the lap time by pressing **Lap**.
- 2 Press **Stop** to ascertain the record of lap time.
- 3 Press **Reset** to default condition.
- 4 Touch Resume to restart the stopwatch at the time you stopped it at or touch Reset to begin the time again.

### Unit converter






Menu 3.6

This converts any measurement into a unit you want. There are 7 types that can be converted into units: Currency, Area, Length, Weight, Temperature, Volume and Velocity.

- 1 You can select one of unit types by pressing **OK** key.
- 2 Select the unit you want to convert by pressing , . It's impossible to input - symbol in unit converter.
- 3 Select the standard value by using , .

### World clock

Menu 3.7

You can check the current time of Greenwich Mean Time (GMT) and major cities around the world, using , , ,  and .

The screen shows the city name, current date and time.



## SIM services

### Menu 3.8

This menu depends on SIM and the network services.

01

02

03

04

05

06

07

08

09

10

## Multimedia


### MP3 player


Menu 4.1

Your LG KF600 has a built-in MP3 player so you can play all your favourite music.

- ▶ **All songs:** Contains all of the songs you have on your phone.
- ▶ **My playlist** Contains any playlists you have created as well as **On the go list**, **Recent songs**, and **Favourite songs**.
- ▶ **Settings:** Adjust your music settings.

#### Playing a song

- 1 Choose MP3 Player.
- 2 Select All songs and then the song you want to play. Touch ►.
- 3 Touch || to pause the song.
- 4 Touch ►► to skip to the next song.
- 5 Touch ◀◀ to skip to the previous song.
- 6 Touch mp3 side key  to hide the music player screen so that you can continue using your phone as normal while music is playing.

- 7 Touch  to stop the music and return to the music menu.

#### Using options while playing music

Touch  and choose from:



- ▶ **View playlist:** Look at the playlist you are currently listening to.
- ▶ **Set as ringtone:** You can set the current music on playing MP3 file as a ringtone.
- ▶ **Settings:** Change the **Equalizer** or **Play mode** or **Set shuffle** on to mix up the music.

**TIP!** To change the volume while listening to music, use the volume keys on the side of your phone.


#### Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All songs** folder.

- 1 Choose **MP3 Player**, then My playlist.
- 2 Touch **New**, enter the playlist name and touch **Save**.

- 3 The **All songs** folder will show. Select all the songs that you would like to include in your playlist by scrolling to the ones you want and touching ; a tick will show next to their name. If you accidentally add a song you don't want, select it and touch  again to untick it.
- 4 Touch **Save** to store the playlist.

### Playing a playlist

- 1 Touch **MP3 Player**, then **My playlist**.
- 2 Select the playlist you would like to play and touch View, then .


### Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist. You may also want to organise your playlists. When you want to do this, you can edit the playlist.

- 1 Choose **MP3 Player**, then **My playlist**.

- 2 Scroll to the playlist you want to edit and touch View, then . Choose from:
- ▶ **Play:** Play the playlist.
  - ▶ **Add:** You can add or delete songs from the playlist using this option.
  - ▶ **Remove:** Remove a song from the playlist. Touch Yes to confirm.
  - ▶ **Move up/Move down:** Move the song up or down the list to change the playing order.
  - ▶ **Multi delete:** Delete songs from the playlist.
  - ▶ **Remove all:** Remove all of the songs from the playlist.
  - ▶ **Information:** View the playlist information.

### Deleting a playlist

- 1 Choose **MP3 Player**, then **My playlist**.
- 2 Scroll to the playlist you want to delete and touch .
- 3 Select **Delete** and touch **Yes** to confirm.

01

02

03

04

05

06

07

08

09


10

# Multimedia

## Camera


### Menu 4.2


Using the camera module built in your phone, you can take pictures or record videos. Additionally, you can send photos to other people and select photos as wallpaper.

**TIP!** When using the camera, power consumption increases. If this icon  appears on the wallpaper, indicating low battery, recharge the battery before use.



### • To take a picture



Hold down the camera  button. The camera will be ready to use and you may want to rotate the screen into a horizontal position.














- To take clear pictures, press the camera  button while holding the camera without any movement.
- Appropriately adjust distance to the object that you want take a picture of (more than 50 cm).

- Handle carefully since the camera is vulnerable to shock and use a soft cloth when cleaning the camera lens.
- Do not disassemble or modify the camera as this may lead to fire or malfunctioning.
- Auto Focus function is enabled when taking a picture. Press the camera  button half way to adjust focus.

Tab  to set various conditions. You can move by pressing    .

**TIP!** You can adjust zoom by using the  .

- **Go to [  ]:** Choose to view the photos in your **Album** or to switch to **Video** camera mode.
- **Shot mode [  ]:** Allows you to set the shot mode from Auto, Portrait, Scene, Sports, Night.

- ▶ **Resolution** [  ]: Allows you to set the image size. (2048x1536)(1600x1200), (1280x960) (640x480) and (320x240). Multishot is only available with the (320x240), (640x480) pixel resolution.
- ▶ **Quality** [  ]: Allows you to set the image quality from Normal, Fine and Super fine.
- ▶ **Portrait enhancer** [  ]: Allows you to set Portrait enhancer.
- ▶ **Flash** [  ]: Allow you to set the flash when you take a photo in dark place.
- ▶ **Shake reduction** [  ]: Select On for unsteady hands.
- ▶ **Self timer** [  ]: Allows you to select the delay time (3 seconds, 5 seconds or 10 seconds). Then the phone takes a photo after the specified time.
- ▶ **Save to** [  ]: You can set the space after taking a picture. (External/Phone)
- ▶ **Multi shot** [  ]: Allows to take multishot photos successively.
- ▶ **Auto focus** [  ]: Turn Auto focus On or Off. Alternatively select Macro to take extreme close-ups - If you are trying to take a closeup shot but the focus box remains red, try turning the macro mode On.
- ▶ **Colour effect** [  ]: 4 settings are available. Off (normal/colour), Sepia, Mono (black and white) or Negative.
- ▶ **White balance** [  ]: Allows you to change the settings according to the environment. Auto, Daylight, Incandescent, Cloudy or Fluorescent.
- ▶ **Shutter tone** [  ]: You can set the sound when taking a picture.
- ▶ **Reset settings** [  ]: Allows you to reset the settings.

01

02

03

04

05

06

07

08



09

10

## Multimedia

### Video camera

#### Menu 4.3




- 1 Select Video camera menu.
- 2 Video camera settings menu is the same with Photo camera settings, except following items:
  - ▶ **Video mode** [  ]: Allows you to set to send a file through MMS or email.
  - ▶ **Resolution** [  ]: You may select the following resolution: 320x240, 176x144 .

### FM radio

#### Menu 4.4

You can search radio stations and enjoy listening to the radio.

**TIP!** To improve the radio reception, extend the headset cord which functions as the FM antenna.


- 1 Press the corresponding number key of a channel to store the currently selected radio station into.
- 2 After presetting radio channels, you can listen to other channel by pressing the corresponding number key (short press).
- 3 You can access the following option menus by pressing the left soft key [  ] [Options].
  - ▶ **Edit freq:** You can adjust frequency and change the radio station in the selected channel. You can change the frequency 0.1 MHz at a time with [  ], [  ] and number keys.
  - ▶ **Auto scan:** If you select "Auto Scan Now?" On, automatically set the radio channel. And When "Save this Station?" message will be popped up, if you select Yes, the selected frequency will be stored.
  - ▶ **Listen via speaker:** Select this to listen to the radio through the built-in speaker. To turn off the speaker, select "Listen via headset" in the [Options]
  - ▶ **Station info:** You can view the radio station information.

## Voice recorder

Menu 4.5

You can record voice memo.

### Record

- 1 Press  to start recording. Once recording is started, the message starts Recording and the counter is displayed.
- 2 If you want to pause or resume recording, press left soft key or OK key.
- 3 If you want to finish recording, press right soft key **Stop**.

### Album

You can view the Sounds folder which contains all sound files saved in the memory.

01

02

03

04

05

06

07

08

09

10

# Messaging

## New message

### Menu 5.1

This menu includes functions related to Text, Multimedia, Email, as well as Bluetooth message.

### Text (Menu 5.1.1)

You can write and edit text message.

- 1 If you want to write a new message, select Text.
- 2 To make text input easier, use T9.
- 3 Press each button to attach the followings.

#### Insert

- **Symbol:** You add special characters.
- **Image:** You can insert the Default graphics or graphics in My pictures that are available for short messages.
- **Sound:** You can insert sounds that are available for short messages.
- **Default image:** You can insert Animations stored.
- **Default sound:** You can insert Sounds stored.
- **Text template:** You can use Text templates already set in the phone.

- **Name & Number:** You can add phone numbers or e-mail addresses in address book.

- **My business card:** You can add your Business card to the message.

▶ **Save to drafts:** Stores messages in Drafts.

▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate T9 input mode by selecting T9 off.

▶ **New T9 word:** Select the New T9 word for inputting New word into the dictionary.

▶ **Handwriting:** Select to turn on Handwriting recognition, begin a new message.

▶ **Clear text:** You can clear text while writing SMS.

▶ **Exit:** You can get back to the Message menu.

#### TIP!

**Character encoding:** Select Reduced support, it can change 2byte character to 1byte character. ("á é í ó ñ ú" -> "a e i o n u")





## Multimedia (Menu 5.1.2)

You can write and edit multimedia messages, checking message size.

- 1 If you want to write a new message, select Multimedia.
- 2 You can create a new message or choose one of the multimedia message templates already made.

Maximum available file size, that can be inserted to MMS-message, is 300 kb.

- 1 Enter numbers of recipient.
- 2 Press  key to add more recipients.
- 3 You can add phone numbers in the address book.
- 4 Press the  [Option] and then press send after entering numbers.

## Insert

- **Symbol:** You add special characters.
- **Image:** You can insert the Existing Image or graphics in My pictures from New photo that are available for short messages.
- **Sound:** You can insert sounds the Existing sound or New voice record for short messages.
- **Video:** You can insert the Existing video or New video for short messages.
- **Symbol:** You can insert the Symbol.
- **Text template:** You can use Text templates already set in the phone.
- **Name & Number:** You can add phone numbers or e-mail addresses in address book.
- **New slide:** You can choose Insert slide before or Insert slide after.
- **More:** You can insert Contact or My business card or Schedule.
- ▶ **Save to:** You can save multimedia messages To drafts or As templates.
- ▶ **Edit Subject:** Allows you to modify the multimedia message you have chosen.
- ▶ **Preview:** You can preview multimedia messages you have created.

01

02

03

04

05

06

07

08

09

10

# Messaging



- ▶ **Slide duration:** You can set the duration of slide of multimedia message.
- ▶ **Remove:** You can remove the subject or attachment.
- ▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate T9 input mode by selecting 'T9 off' .
- ▶ **New T9 word:** Select the New T9 word for inputting New word into the dictionary.
- ▶ **Clear text:** You can clear text while writing SMS.
- ▶ **Handwriting:** Select to turn on Handwriting recognition, begin a new message.
- ▶ **Exit:** Select this if you want to stop writing the message and go back to messaging menu. The message you have written is not saved.

**TIP!** If you select a picture with a large file size (200K for example) on writing multimedia message, the loading duration will take around 10 seconds. Furthermore, you can't activate any keys during the loading time. After about 10 seconds, you should be able to write the message.

## Email (Menu 5.1.3)

### Email account (Menu 5.1.3.1)

To send/receive an email, you should set up the email New account.

- 1 Make a subject and write your message  
Press  to attach images, videos, sounds or other file types
- 2  press Send to then enter the recipients address
- 3 Touch Send and your email will be sent.
- 4 Use the tabs and to enter the recipients address and write your message. Use the Files tab to attach images, videos, sounds or other file types.
- 5 Touch Send and your email will be sent.

### Access point (Menu 5.1.3.2)

Specify the access point name.

### Retrieve interval (Menu 5.1.3.3)

Choose how often your KF600 checks for new email messages.

### Signature (Menu 5.1.3.4)

Create an email signature and switch this feature On.

### Bluetooth message (Menu 5.1.4)

- ▶ **Save to drafts:** Select this to save the message in Drafts.
- ▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate the T9 input mode by selecting 'T9 off'.
- ▶ **New T9 word:** Select the New T9 word menu for inputting a new word into the dictionary.
- ▶ **Clear text:** You can clear text while writing the message.
- ▶ **Handwriting:** Select to turn on Handwriting recognition, begin a new message.

- ▶ **Exit:** If you select this while writing the message, you can exit from writing message and go back to the previous screen. The message you have written is not stored.

**TIP!** For all email accounts you may save up to 100 messages totally. In Draft , Outbox and Sent folders up to 100 messages. In case Inbox is full, you don't receive email any more.

**TIP!** Maximum size for one sent message is 300 kb with attachments, and maximum size for one received message is 300 kb. In case you have received message with more than 5 attachments, only 5 of them will be received. Some attachment may display incorrectly.

**TIP!** If you receive a mail over 300kb, you can not find the over sized mail.

01

02

03

04

05

06

07

08

09

10

# Messaging

## Inbox

### Menu 5.2

You will be alerted when you have received messages. They will be stored in Inbox.

If the phone shows No space for SIM message , you have to delete only SIM messages from Inbox. If the phone displays No space for message , you can make space of each repository as deleting messages, media and applications.

### \* SIM message

SIM message means the message exceptionally stored in SIM card. You can move this message to the phone.

For notified multimedia message, you have to wait for downloading and processing of the message.

- ▶ **View:** You can view the received messages.
- ▶ **Delete:** You can delete the current message.
- ▶ **Reply:** You can reply to the sender.

- ▶ **Reply all:** You can reply to all senders.
- ▶ **Forward:** You can forward the selected message to another party.
- ▶ **Return call:** You can call back to the sender.
- ▶ **Information:** You can view information about received messages; Senders address, Subject (only for Multimedia message), Message date & time, Message type, Message size.
- ▶ **Multi delete:** After selecting the messages you want to remove, you can delete the selected messages.
- ▶ **Delete all read:** You can delete all read messages.
- ▶ **Delete all:** You can delete all messages.

## Mailbox

### Menu 5.3

When you access this menu, you can either connect to your remote mailbox to retrieve your new email messages, or you can view the previously retrieved email messages without logging in to the email server.

You can check the Drafts, Outbox.

## Drafts

### Menu 5.4

Using this menu, you can preset multimedia messages that you use most frequently. This menu shows the preset multimedia message list.

The following options are available.

- ▶ **View:** You can see the multimedia messages.
- ▶ **Edit:** Modifies the message you choose.
- ▶ **Delete:** Deletes the message you choose.
- ▶ **Information:** You can view information about the message you choose.
- ▶ **Multi delete:** After selecting the messages you want to remove, press **OK** and you can delete the selected messages.
- ▶ **Delete all:** Deletes all of the messages in the folder.

## Outbox

### Menu 5.5

This menu allows to view the message which is about to send or is failed sending.

After sending the message successfully, the message will be moved to sent box.

- ▶ **View:** You can view the message.
- ▶ **Delete:** You can delete the message.
- ▶ **Resend:** You can resend the selected message.
- ▶ **Edit:** Modifies the message you choose.
- ▶ **Information:** You can check information of each message.
- ▶ **Multi delete:** Select and delete the selected messages.
- ▶ **Delete all:** You can delete all messages in outbox.

01

02

03

04

05

06

07

08

09

10

## Sent Items

### Menu 5.6

This menu allows you to view the messages which are already sent. You can check the time and the contents of message.

# Messaging

## Listen to voicemail Menu 5.7

Once this menu has been selected, simply press **OK** to listen to voice mail.

**TIP!** When you receive a voice mail, your phone displays the icon and you hear an alert. Please check with your network provider for details of their service in order to configure the handset correctly.

## Info messages Menu 5.8 (Dependent to network and subscription)

Info service messages are text messages delivered by the network to GSM. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices.

Each type of message has the number; therefore, you can contact service provider as long as you have input the certain number for the information.

When you have received an info service message, you can see the popup message to show you that you have received a message or the info service message is directly displayed.

To view the message again or not in standby mode, follow the sequence shown below;

## Read (Menu 5.8.1)

- 1 When you have received an info service message and select Read to view the message, it will be displayed on the screen.
- 2 The message will be shown until another message is reached.

## Topics (Menu 5.8.2)

### (Dependent to network and subscription)

- **View list:** You can see Info service message numbers which you added. If you press each button, you can edit and delete info message category which you added.
- **Active list:** You can select info service message numbers in the active list. If you activate an info service number, you can receive messages sent from the number.

## Templates

### Menu 5.9

#### Text templates (Menu 5.9.1)

You have 6 text templates as below;

- **Please call me back.**
- **I'm late. I will be there at**
- **Where are you now?**
- **I'm on the way**
- **Urgent! Please contact.**
- **I love you**

The following options are available.

- ▶ **Send via**
  - **Text message:** Use this to send the selected template message by SMS.
  - **Multimedia message:** Use this to send the selected template message by MMS.
  - **Bluetooth message:** Use this to send the selected template message by Bluetooth.
  - **Email:** This menu allows you to edit, delete or add an email account.
- ▶ **Delete:** Deletes the template.
- ▶ **New template:** Use this to create new template.

- ▶ **Delete all:** Allows you to delete all multimedia messages.
- ▶ **View:** You can see multimedia templates.
- ▶ **Edit:** Use this to write a new message or edit the selected template message from the text template list.

#### Multimedia templates (Menu 5.9.2)

After saving new template, you can use the following options.

- ▶ **Save:** Allows you to save new multimedia templates you created.
- ▶ **Insert:** You can add Symbol, Image, Video, Sound, New slide, Text template, Contact, Business card and Others.
- ▶ **Preview:** You can preview multimedia templates you wrote.
- ▶ **Edit subject:** Allows you to modify the multimedia message you have chosen.
- ▶ **Slide duration:** You can set the duration of slide of multimedia message.
- ▶ **T9 languages:** Select the desired language for T9 input mode. You can also deactivate T9 input mode by selecting T9 off .
- ▶ **Exit:** Will take you back to the Message menu.

01

02

03

04

05

06

07

08

09

10

# Messaging

## Settings

Menu 5.0

### Text message (Menu 5.0.1)

► **Message type:**

Text, Voice, Fax, Paging, X.400, Email, ERMES

Usually, the type of message is set to Text. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

► **Validity period:** This network service allows you to set how long your messages will be stored at the message centre.

► **Delivery report:** If you set to Yes, you can check whether your message is sent successfully.

► **Reply charging:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill.

► **Message centre number:** If you want to send the text message, you can receive the address of SMS centre through this menu.

► **Character encoding**

► **Bearer setting:** You can set the bearer setting such as GSM preferred, GPRS preferred.

### Multimedia message (Menu 5.0.2)

► **Subject:** You can enter multimedia messages subject when this menu is on.

► **Slide duration:** Display the duration of each page when writing the message.

► **Priority:** You can set the priority of the message you choose.

► **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.

► **Delivery report:** If it is set to Yes in this menu, you can check whether your message is sent successfully.

► **Read report:** You can receive the report whether the receiver read the message or not.

► **Auto download:** Home network allows you receive multimedia messages depends on Homenetwork. Roaming network allows you receive multimedia messages depends on Roaming network. If you select Automatic, you receive multimedia messages automatically. If you select Manual, you receive only notification message in the inbox and then you can check this notification.



- ▶ **Network profile:** If you select multimedia message server, you can set URL for multimedia message server.
- ▶ **Permitted message type**
  - Personal:** Personal message.
  - Advertisement:** Commercial message.
  - Information:** Necessary information.

## Email (Menu 5.0.3)

### ▶ Email account

This menu allows you to edit, delete or add an email account.

- 1 Touch New.
- 2 You can now choose how your account works
  - Account name:** Account name.
  - Email address:** Enter the email address given to you by your service provider.
  - My name:** You can make your nickname.
  - Incoming mail server:** Enter the POP3 address and Port number of the that receives your email.

**User name:** Enter your email ID.

**Password:** Enter your email password.

**Outgoing mail server:** Enter the SMTP address and Port number of computer that sends your email.

**Outgoing mail authentication:** when you send the mail, you can set authentication whether or not.

**Outgoing server ID/password:** Enter the ID and password for sending your email.

To enter the following information, touch  and select **Advanced settings**.

### - Advanced settings

**Protocol type:** Choose your protocol type. (POP3/IMAP4)

**Maximum receive size:** View the Maximum size that you can receive mails.

**Save to server:** Select On to leave the messages on the server.

**Insert signature:** Select On to attach your signature to your email messages.

01

02

03

04

05

06

07

08

09

10

## Messaging

**Reply email address:** Email address that you can receive the reply.

**Incoming port number:** Allow you to edit POP3/IMAP port number.

**Outgoing port number:** Allow you to edit SMTP port number.

**Auto retrieving:** Select to automatically retrieve your emails.

**Retrieve download:** Select Headers only or All. Now your account is set up, it will appear in the list of accounts in your Email folder.

- **New account:** You can set up to 5 email accounts by selecting New account menu. Using the Edit menu, you can set the following values.
- **Delete:** Deletes the selected account from the list.
- **Delete all:** You can delete all accounts from the list.

### ► Access point

Specify the access point name.

### ► Retrieve interval

Choose how often your KF600 checks for new email messages.

### ► Signature

Create an email signature and switch this feature On.

### Voicemail number (Menu 5.0.4)

You can receive the voicemail if your network service provider supports this feature. When a new voicemail is arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

### Service message (Menu 5.0.5)

You can set the option whether you will receive the message or not.

## Info message (Menu 5.0.6)

### ► Receive

**On:** If you select this menu, your phone will receive Info service messages.

**Off:** If you select this menu, your phone will not receive Info service messages any more.

### ► Alerts

**On:** Your phone will beep when you receive Info service message.

**Off:** Your phone will not beep even though you have received info service messages.

### ► Language

You can select the language you want by pressing ☒ . Then, the info service message will be shown in the language that you selected.

01

02

03

04

05

06

07

08

09

10

# My stuff


## Images

### Menu 6.1

Images contains a folder of default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

### Images option menus

The options which are available to you in images depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but the file info option is only available for default images.


In the images folder, touch  to bring up your list of options.

- ▶ **Delete:** Delete the selected image.
- ▶ **Send via:** Send the selected image to a friend via MMS, Bluetooth or Email.


**TIP!** The image(.jpeg) may need to be resized before it can be sent by MMS or e-mail.

- ▶ **File:** Rotate, rename or view the information (Name, Size, Date, Resolution, Type and Copyright) of the selected image. If you have an external memory card inserted two additional options will show: **Move to external memory** and **Copy to external memory**.
- ▶ **Print via:** Print an image file via PictBridge or Bluetooth®.
- ▶ **Slide show:** See Creating a slide show on page 48.
- ▶ **New folder:** Create a new folder within the main Images folder.
- ▶ **Multi-delete:** Select more than one image before touching Delete.
- ▶ **Delete all:** Delete all the photos in your Images folder.
- ▶ **Sort by:** Arrange your images by Date, Type or Name.
- ▶ **List view / Thumbnail View:** Change the way you view your photos.


## Sending a photo

- 1 Scroll to and select **Images**.
- 2 Select a photo and touch .
- 3 Touch **Send via** and choose from **Multimedia message**, **Bluetooth** or **Email**.
- 4 If you choose **Multimedia message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.




## Organising your images

- 1 Scroll to and select **Images**.
- 2 Touch  then **Sort by**.
- 3 Choose from **Date**, **Type** or **Name**.

## Deleting an image

- 1 Scroll to and select **Images**.
- 2 Select an image and touch .
- 3 Touch **Delete**.

## Deleting multiple images

- 1 Scroll to and select **Images**.
- 2 Touch  and select **Multi delete**.
- 3 A box will appear next to each image. Select the image and touch  to mark it. To unmark an image, touch the  again so that the tick disappears from the box.
- 4 Once you have marked all of the appropriate boxes, touch **Delete** and confirm you want to delete all of the marked images.

01

02

03

04

05

06

07

08


09


10

## My stuff

### Creating a slide show

If you want to look at all of the images on your phone or scan through what you've got, you can create a slide show to save you from having to open and close each individual image.

- 1 Select **Images**.
- 2 Select the photo you would like to begin the slideshow and touch .
- 3 Select Slide show and it will begin.
- 4 Touch Pause to pause the slide show and Quit to end the slide show and return to the Images folder.

Touching  during the slide show presents further options:


- ▶ **View:** Choose between **Full image** and **Full Screen**. Select **Landscape** to change the orientation of the image.
- ▶ **Repeat on / off:** Decide whether you want the slide show on repeat or not.

### Sounds

Menu 6.2

The **Sounds** folder contains the **Default sounds** and your voice recordings. From here you can manage, send or set sounds as ringtones.

#### Using a sound

- 1 Select **Sounds**.
- 2 Select **Default sounds** or choose from the list of voice recording files.
- 3 Select a sound and touch  to listen to it.
- 4 Touch **Set as** and choose from **Ringtone** and **Ringtone ID**.

### Videos

Menu 6.3


The My videos folder shows the list of downloaded videos and videos you have recorded on your phone.

## Watching a video

- 1 Select **Videos**.
- 3 Select a video and touch ►.

**TIP!** The video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all, in which case choose one of the other sending options.

## Using the video options menu

In the Videos folder, touch  to bring up the following list of options.

- ▶ **Delete:** Delete the selected video.
- ▶ **File:** Rename the video, move it to another folder or view the information (Name, Size, Date, Resolution, Type and Copyright).
- ▶ **New folder:** Create a new folder within the main Videos folder.
- ▶ **Multi-delete:** Select more than one video clip before touching Delete.
- ▶ **Delete all:** Delete all the clips in your Videos folder.
- ▶ **Sort by:** Arrange your videos by Date, Type or Name.
- ▶ **List view / Thumbnail View:** Change the way you view your videos.

## Documents

Menu 6.4

From the Documents menu, you can view all of your document files. From here you can view Excel, PowerPoint, Word, Text and PDF files.

## Others

Menu 6.5

Show the list of files in Other folder in the internal, external memory. In the Multimedia memory.

**TIP!** You may send files via Bluetooth only if they are stored in the phone memory, external memory.

**TIP!** When connecting with a PC via USB cable you will only see the following folders in the internal memory: Images, Sounds, Videos, and Others. You can see all folders in the external memory. If Bluetooth connects with PC, it can exchange files in images, sounds, videos, documents, others folders except default folder. (In others folder it can not work "view", "play")

01

02

03

04

05

06

07

08

09

10

## My stuff

### Games & Apps

Menu 6.6

In this menu, you can manage the Java applications installed in your phone. You can play or delete downloaded applications, or set the connect option.

**TIP!** MASS STORAGE function will only work when the phone is in idle mode.

### External memory

Menu 6.7

This menu allows you to view Images, Sounds, Videos, Documents and Others in memory card. If the external memory is not available, a pop up message Please insert external memory is displayed.

**TIP!** The SIM card must be installed in order for the phone to be recognized as a removable disk.

**TIP!** DO NOT remove the cable while you are downloading files. After you download the files, you need to click "Safely Remove Hardware" on the PC and then disconnect the cable.

**TIP!** When you copy a file to the removable disk, you can see a message on the display animation. It means MASS STORAGE is working and data is being transferred. Do not remove the cable while copying files. If you disconnect the cable while display animation, data will be lost or corrupted and possibly damage the phone.

#### New Fantastic LG

The KF600 works as a mass storage device. If you connect the USB cable, you can use the phone as a Removable Disk. You can download MP3 files, photos, videos, text files etc. this gives you fast access from the PC to phone, by just connecting the USB cable.



# Profiles

In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups.

There are five preset profiles: **General**, **Silent**, **Vibrate only**, **Outdoor** and **Headset**.

## Activate (Menu 7.X.1)

- 1 A list of profiles is displayed.
- 2 In the Profiles list, scroll to the profile you want to activate.
- 3 Then, select Activate.

## Personalise (Menu 7.X.2)

Scroll to the desired profile in the Profile list. Select Personalise.

The profile setting option opens. Set the option as required.

- ▶ **Call alert type:** Set the alert type for incoming calls.
- ▶ **Ring tones:** Select the desired ring tone from the list.

- ▶ **Ring volume:** Set the volume of the ringing tone.
- ▶ **Message alert type:** Set the alert type for messages.
- ▶ **Message tones:** Select the alert tone for messages.
- ▶ **Message volume:** Set the volume of the message tone.
- ▶ **InteractPad™ & key feedback:** You can set all the things with InteractPad™ & key.(tones,volume,vibration etc)
- ▶ **Slide tones:** Allows to set the flip tone for adjusting environment.
- ▶ **Effect sound volume:** Set the volume of effect sound.
- ▶ **Power on/off volume:** Set the volume of the ringing tone when switching the phone on/off.

**TIP!** All profiles cannot be renamed.

01

02

03

04

05

06

07

08

09

10


# Contacts

## Search

### Menu 8.1

- 1 Enter the name that you want to search.

**TIP!** Instant searching is available by inputting the initial letter of the name.

- 2 If you want to edit, delete, copy an entry, tap .

The following menu will be displayed.

- ▶ **View:** You can view each entry in details.
- ▶ **Edit:** You can edit the name, number, group, ringtone and picture by using the navigation key.
- ▶ **New message:** After you have found the number you want, you can send a message(Text/Multimedia/Email) to the selected number.
- ▶ **Send via:** You can send the data of phone book via Text message, Multimedia message, Bluetooth or Email.
- ▶ **Delete:** You can delete an entry.
- ▶ **New contact:** After selecting the place (SIM/Phone) you want to save, you can add to the phonebook list.




- ▶ **Multi delete:** Allows you to remove a number of files selected.
- ▶ **Copy to phone/SIM:** You can copy an entry from SIM to phone or from phone to SIM.

## New contact

### Menu 8.2

You can add phonebook entry by using this function. Phone memory capacity is 1000 entries. SIM card memory capacity depends on the cellular service provider. The number of character is SIM dependent feature.

**TIP!** Maximum stored name and number length depends on SIMcard type.

- 1 Select New contact.
- 2 Choose the storage to save.
- 3 Input a name.
- 4 Press , then you can input a number. (Mobile, Home, Office, E-mail address, Fax)
- 5 You can set a group for the entry by pressing , .
- 6 You can set a ringtone and a photo for the entry.

## Speed dials

Menu 8.3

You can assign any of the keys **2** **3** to **9** with a Name list entry. You can call directly by pressing this key.

- 1 Select Speed dial.
- 2 If you want to add speed dial, select <empty> by pressing **Assign**. Then, you can search the name in phonebook.
- 3 After assigning the number as speed dial, you can change and delete the entry. You can also make a call or Send a message to this number.

## Groups

Menu 8.4

You can list up to the members per each group. There are 7 groups you can make lists to.

- ▶ **View members:** Shows the group members you have selected.
- ▶ **Group ringtone:** Allows you to specify ring tone for the group members' call.
- ▶ **Group icon:** Allows you to select the icon dependent on Group.
- ▶ **Remove member:** You can remove the member from the Group member list. But the name and the number will remain in phonebook.
- ▶ **Remove all member:** You can remove all the members from the Group member list.
- ▶ **Rename:** You can change a group name.
- ▶ **Reset all:** You can reset all.
- ▶ **View:** Shows the group you have selected.
- ▶ **Add:** You can add the group members.

01

02

03

04

05

06

07

08

09

10

# Contacts

## Copy all

Menu 8.5

You can copy entries from SIM card memory to Phone memory and vice versa.

- ▶ **SIM to phone:** You can copy the entry from SIM Card to Phone memory.
- ▶ **Phone to SIM:** You can copy the entry from Phone memory to SIM Card.

## Delete all

Menu 8.6

You can delete all entries from SIM or Phone.

## Settings

Menu 8.7

### ▶ View options

Scroll to highlight View options, and then press **OK**.

- **Name and number:** Set the phonebook list with displaying name and number.
- **With picture:** Set the phonebook list with the information of character and picture.

## Information

Menu 8.8

### ▶ Service dial numbers

Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).


### ▶ Own numbers (SIM dependent)

You can save and check your own number in SIM card.

### ▶ Business card

This option allows you to create your own business card featuring Name and an mobile phone number.

To create a new business card, press the left soft key  [New] and enter the information into the fields.

If you want to edit, delete or to send a business card, select left soft key  [options].

# Settings

## Date & Time

Menu 9.1

You can set functions relating to the date and time.

### Set date (Menu 9.1.1)

You can enter the current date.

### Date format (Menu 9.1.2)

You can set the Date format such as YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY.  
(D: Day / M: Month / Y: Year)

### Set time (Menu 9.1.3)

You can enter the current time.

### Time format (Menu 9.1.4)

You can set the time format between 24 hours and 12 hours.

### Auto update (Menu 9.1.5)

Select On, the phone will automatically update the data and time.

## Languages

Menu 9.2

You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

## Screen

Menu 9.3

### Wallpaper (Menu 9.3.1)

You can select the background pictures in standby mode.

### Backlight timer (Menu 9.3.2)

You can set the light-up duration of the display.  
(Off/10 secs/20 secs/30 secs/60 secs)

### Brightness (Menu 9.3.3)

You can set the brightness of LCD: 100%, 80%, 60%, 40%

### Home screen shortcut (Menu 9.3.4)

Selecting On displays the functionalities of 4 Navigation keys and Menu key as pictures on the middle of the idle window.

01

02

03

04

05

06

07

08

09

10

# Settings

## Theme (Menu 9.3.5)

Quickly change the whole look of your screen.

## Menu style (Menu 9.3.6)

Your phone provides you with Grid and List menu themes. Set the menu style by scrolling and pressing **OK**.

## Main font style (Menu 9.3.7)

You can select the desired main font style.

## Dialing font style (Menu 9.3.8)

Your phone provides you with three dialing styles.  
(Music style/Lawn style/Patch style)

## Standby text (Menu 9.3.9)

If you select On, you can edit the text which is displayed in standby mode.

## Network name (Menu 9.3.0)

If this function is activated, network name will be displayed on LCD.

## InteractPad™ calibration (Menu 9.3.\*)

Reset your InteractPad for ease of use

## Connectivity

Menu 9.4

### Bluetooth (Menu 9.4.1)

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires.

This handset supports built-in Bluetooth connectivity, which makes it possible to connect them with compatible Bluetooth headsets, computer applications and so on.

**TIP!** Supported profile: HSP, HFP, OPP, BPP, FTP, SPP, A2DP, AVRCP, DUN, SAP, PBAP

**TIP!** When you receive data from another Bluetooth device, the phone requests confirmation. After confirming the transfer, the file will be copied on to your phone.

**TIP!** Depending on the file type, it will be stored in the following folders:

- **Video (.3gp, mp4):** Videos folder
- **Image (.bmp, gif, jpg, png):** Images folder
- **Sound (.amr, wav, aac):** Sounds folder
- **MP3 (.mp3):** Sounds folder
- **Documents (.txt):** Documents folder

**TIP!** A document(txt) with up to 160 characters is saved in Inbox(menu 5-2).

## ► Bluetooth on/off

You can activate or cancel the Bluetooth function.

## ► Device list

- **Connect / Disconnect:** After pairing with headset or stereo headset, automatically connected with that. After pairing with handset device, you can connect with ftp of that handset.
- **New:** Allows to search new Bluetooth devices and add them to your phones list of paired devices. When you select Add new your handset will start to search for Bluetooth devices within range.

01

02

03

04

05

06

07

08

09

10

# Settings

**TIP!** If the desired device is not found after searching, press Refresh for retry searching.

If you transfer file via bluetooth, screen goes to idle because of background file transfer.

Scroll to the desired device and press **Pair**. You will then be asked to enter a passcode. The passcode can be any code you wish to use (the same passcode must be used by both devices) or is one that is pre-determined by the manufacturer of the device you are trying to pair with. Please check the User Manual of the device you are initiating the pair with to see if it already has a predetermined passcode in place. You can view all devices which your KF600 is already paired to. If you enter Paired devices, you access the options icon.

- **Rename:** Allows you to change the name of the paired Bluetooth device and how it is displayed on the handset.

- **Set as authorised/Set as unauthorised:** Allows you to set an authorised connection between each Bluetooth device. For example if you regularly use a Bluetooth headset with your phone then setting the connection as authorised will mean the headset will automatically connect to the handset each time the headset is powered on.
- **Delete:** Allows to delete a paired Bluetooth device.
- **Delete all:** Allows to delete all the paired Bluetooth devices.

## ► Bluetooth settings

- **My visibility:** This indicates whether or not your handset will be visible to other Bluetooth devices.
- **My name:** You can set the name of Bluetooth device. The default name is LG KF600.
- **My address:** You can view the address of your Bluetooth device.

## ► All service

After pairing, we can show supported bluetooth profile of that device.



## Network (Menu 9.4.2)

You can select a network which will be registered either automatically or manually.

### Network selection (Menu 9.4.2.1)

Usually, the network selection is set to Automatic.

- ▶ **Automatic:** If you select Automatic mode, the phone will automatically search for and select a network for you. Once you have selected Automatic, the phone will be set to Automatic even though the power is off and on.
- ▶ **Manual:** The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator. The phone let you select another network if the phone fails to access the selected network.

- ▶ **Preferred:** You can set a list of preferred networks and the phone attempts to register with first, before attempting to register to any other networks. This list is set from the phones predefined list of known networks.

### GPRS attach (Menu 9.4.2.2)

You can set GPRS service depending on various situations.

#### ▶ Power on

If you select this menu, the phone is automatically registered to a GPRS network when you switch the phone On. Starting a WAP or PC dial-up application created the connection between phone and network and data transfer is possible. When you end the application, GPRS connection is ended but the registration to the GPRS network remains.

#### ▶ When needed

If you select this menu, the GPRS connection is established when you connect a WAP or application service and closed when you end the WAP or application connection.

01

02

03

04

05

06

07

08

09

10

## Settings

### Access point (Menu 9.4.2.3)

- ▶ **View:** View the access point name.
- ▶ **Edit:** Edit the access point name.

**TIP!** Changes could effect other contents.

### Network profile

#### ▶ Data connections

- **Name:** You can type the network name.
- **Bearer:** You can set the bearer data service.

1 Data/2 GPRS

#### <Data settings>

Appears only if you select Data Settings as a Bearer/service.

- **Dial number:** Enter the telephone number to dial to access your WAP gateway.
- **User ID:** The users identity for your dial-up server (and NOT the WAP gateway).
- **Password:** The password required by your dial-up server (and NOT the WAP gateway) to identify you.
- **Call type:** Select the type of data call; Analogue or Digital (ISDN).

- **Call speed:** The speed of your data connection; 9600 or 14400 (Depends on Operator)
- **Linger time:** You need to enter timeout period.  
After entering that, the WAP navigation service will be unavailable if any data is not input or transferred.
- **Primary server:** Input the IP address of the primary DNS server you access.
- **Secondary server:** Input the IP address of the secondary DNS server you access.

#### <GPRS settings>

The service settings are only available when GPRS is chosen as a bearer service.

- **APN:** Input the APN of the GPRS.
- **User ID:** The users identify for your APN server.
- **Password:** The password required by your APN server.
- **Primary server:** Input the IP address of the primary DNS server you access.
- **Secondary server:** Input the IP address of the secondary DNS server you access.

## USB connection (Menu 9.4.3)

You can choose one mode of Data service and Mass storage.

When you have finished using the phone memory, click Exit and take the following steps.

### CAUTION!

Before you remove the cable, it is necessary that you click Exit. Or, the integrity of transferred data is not guaranteed.

- 1 Click on the notification area.  
[Unplug or Eject Hardware]
- 2 Select USB Mass Storage Device, click on Stop.  
The following message will appear: The USB Mass Storage Device device can now be safely removed from the system
- 3 Then remove the cable.

## Call

Menu 9.5

You can set the menu relevant to a call.

### Call divert (Menu 9.5.1)

The Call divert service allows you to divert incoming voice calls, fax calls, and data calls to another number. For details, contact your service provider.

#### ► All voice calls

Diverts voice calls unconditionally.

#### ► If busy

Diverts voice calls when the phone is in use.

#### ► If no reply

Diverts voice calls which you do not answer.

#### ► If out of reach

Diverts voice calls when the phone is switched off or out of coverage.

#### ► All data calls

Diverts to a number with a PC connection unconditionally.

#### ► All fax calls

Diverts to a number with a fax connection unconditionally.

01

02

03

04

05

06

07

08

09

10

## Settings

### ► **Cancel all**

Cancels all call divert service.

### **The submenus**

Call divert menus have the submenus shown below.

#### - **Activate**

Activate the corresponding service.

#### **To voice mail number**

Forwards to message centre. This function is not shown at All data calls and All fax calls menus.

#### **To other number**

Inputs the number for diverting.

#### **To favourite number**

You can check recent 5 diverted numbers.

#### - **Cancel**

Deactivate the corresponding service.

#### - **View status**


View the status of the corresponding service.

### **Answer mode (Menu 9.5.2)**

#### ► **Slide open**

If you select this menu, you can receive an incoming call when you open the slide.

#### ► **Any key**

If you select this menu, you can receive a call by pressing any key except  [End] key.

#### ► **Accept key only**

If you select this menu, you can receive a call by only pressing  [Send] key.

### **Send my number (Menu 9.5.3)**

(network and subscription dependent)

#### ► **Set by network**

If you select this, you can send your phone number depending on two line service such as line 1 or line 2.

#### ► **On**

You can send your phone number to another party.

Your phone number will be shown on the receivers phone.

#### ► **Off**

Your phone number will not be shown.

## Call waiting (Menu 9.5.4)

### (network dependent)

#### ► **Activate**

If you select Activate, you can accept a waiting (receiving) call.

#### ► **Deactivate**

If you select Deactivate, you cannot recognize the waiting (receiving) call.

#### ► **View status**

Shows the status of Call waiting.

## Minute minder (Menu 9.5.5)

If you select On, you can check the call duration by a beep sound given every minute during a call.

## Auto redial (Menu 9.5.6)

#### ► **On**

When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.

#### ► **Off**

Your phone will not make any attempts to redial when the original call has not connected.

## Send DTMF tones (Menu 9.5.7)

You can send touch tones during an active call to control your voice mailbox or other automated phone services.

## Security

Menu 9.6

### PIN code request (Menu 9.6.1)

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on.

If this function is activated, you will be requested to enter the PIN code.

- 1 Select PIN code request in the security settings menu, and then press **OK**.
- 2 Set On/Off.
- 3 If you want to change the setting, you need to enter PIN code when you switch on the phone.
- 4 If you enter wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in PUK code.
- 5 You can enter your PUK code up to 10 times. If you put wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

01

02

03

04

05

06

07

08

09

10

# Settings

## Phone lock (Menu 9.6.2)

You can use a security code to avoid unauthorized use of the phone. Whenever you switch on the phone, the phone will request security code if you set phone lock to When switch on.

If you set phone lock to When SIM changed, your phone will request security code only when you change your SIM card.

## InteractPad™ lock (Menu 9.6.3)

If you activate this function, InteractPad will be locked.

## Call barring (Menu 9.6.4)

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

### ▶ All outgoing

The barring service for all outgoing calls.

### ▶ Outgoing international

The barring service for all outgoing international calls.

### ▶ O/G international except home country

The barring service for all international outgoing calls except home network.

### ▶ All incoming

The barring service for all incoming calls.

### ▶ Incoming when abroad

The barring service for all incoming calls when roaming.

### ▶ Cancel all barring

You can cancel all barring services.

### ▶ Change password

You can change the password for Call Barring Service.

### The submenus:

#### - **Activate**

Allows to request the network to set call restriction on.

#### - **Deactivate**

Set the selected call restriction off.

#### - **View status**

View the status whether the calls are barred or not.

### Fixed dial number (Menu 9.6.5)

#### (SIM dependent)

You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

#### ► **On**

You can restrict your outgoing calls to selected phone numbers.

#### ► **Off**

You can cancel fixed dialling function.

#### ► **Number list**

You can view the number list saved as Fixed dial number.

### Change codes (Menu 9.6.6)

PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized person.

You can change the access codes: Security code, PIN1 code, PIN2 code, ATMT code.

- 1 If you want to change the Security code/ PIN1/ PIN2 code/ ATMT code input your original code, and then press **OK**.
- 2 Input new Security code/PIN/PIN2 code/ ATMT code and verify them.

### Flight mode

Menu 9.7

This allows you to use only the phone's features that do not require the use of the wireless network when you are in an airplane or in places where the wireless network is prevented.

If you set the flight mode on, the icon will be displayed on the screen instead of the network signal icon.

- **On:** You cannot make (or receive) any calls, including emergency calls, or use other features that require network coverage
- **Off:** You can deactivate the flight mode and restart your handset to access the network.

01

02

03

04

05

06

07

08

09

10

# Settings

## Power save

Menu 9.8

If you set On, you can save the power when you don't use the phone.

## Reset

Menu 9.9

You can initialize all factory defaults. You will need Security code to activate this function.

## Memory manager

Menu 9.0

You can check free space and memory usage of each repository, Internal memory and Multimedia memory. You can go to each repository menu.



# Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

## Acumulator standard



## Travel Adapter

This charger allows you to charge the battery while away from home or your office.



## Data cable/CD

You can connect your phone to PC to exchange the data between them.



## Hands free earmicrophone and music player controller combo



### ► Stereo headset

► **Controller:** Answer & End button, music player control, volume control, Hold button and microphone.

## User Guide



**TIP!** Always use genuine LG accessories.

**TIP!** Failure to do this may invalidate your warranty.

**TIP!** Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

01

02

03

04

05

06

07

08

09

10

## Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800, PCS1900.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

## Technical data

### General

**Product name:** KF600

**System:** GSM 900 / DCS 1800 / PCS 1900

### Ambient Temperatures

**Max:** +55°C (discharging)/+45°C (charging)

**Min:** -10°C

# Declaration of Conformity



LG Electronics

## Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

## Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KF600

Trade Name

LG

CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1  
EN 300 328 V 1.6.1  
EN 60950-1 : 2001  
EN 50360/EN 50361 : 2001  
EN 301 511 V9.0.2

## Supplementary Information

The conformity to above standards is verified by BABT.

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

21. Nov. 2007

Signature of representative

## For your safety

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

### **WARNING!**

- Mobile Phones must be switched off at all times in an aircraft.
- Do not hold the phone in your hand while driving.
- Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.
- For your safety, use **ONLY** specified **ORIGINAL** batteries and chargers.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

### **CAUTION!**

- Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.
- Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls.
- Only use **ORIGINAL** accessories to avoid damage to your phone.
- All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.
- Batteries should be disposed of in accordance with relevant legislation.
- Do not dismantle the phone or battery.
- Risk of explosion if battery is replaced by an incorrect type.

## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

### Exposure to radio frequency energy Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KF600 has been designed to comply with applicable safety requirements for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- ▶ The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- ▶ While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- ▶ The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.
- ▶ The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.471 W/kg (10g) and when worn on the body is 0.743 W/kg (10g).
- ▶ SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue (for example USA, Canada, Australia and Taiwan).

### Product care and maintenance



#### WARNING!

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

01

02

03

04

05

06

07

08

09

10

Guidelines for safe and efficient use

71

## Guidelines for safe and efficient use

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as a TV s, radios or personal computers.
- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Never place your phone in a microwave oven as it will cause the battery to explode.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.
- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.

- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.
- ▶ Please remove the data cable before powering on the handset.

### Electronic devices

All mobile phones may get interference, which could affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers (i.e. in your breast pocket.)
- ▶ Some hearing aids might be disturbed by mobile phones.
- ▶ Minor interference may affect TVs, radios, PCs, etc.

## Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- ▶ Do not use a hand-held phone while driving.
- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.
- ▶ RF energy may affect some electronic systems in your motor vehicle such as a car stereo or safety equipment.
- ▶ If your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause serious injury due to improper performance.

If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- ▶ Do not use the phone at a refuelling point. Don't use near fuel or chemicals.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

01

02

03

04

05

06

07

08

09

10

## Guidelines for safe and efficient use

### In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use it on the ground without crew permission.

### Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

### Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls. Check with your local service provider.

### Battery information and care

- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.
- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.



- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- ▶ Risk of explosion if battery is replaced by an incorrect type.
- ▶ Dispose of used batteries according to the manufacturer s instructions.

01

02

03

04

05

06

07

08

09

10

Guidelines for safe and efficient use

75

[illegible]

# LG MOBILE PHONE WARRANTY

Middle East & Africa



[www.lgservice.com](http://www.lgservice.com)  
[www.lgmobile.com](http://www.lgmobile.com)





## Terms & Conditions

Your LG mobile phone and all accessories included in this package are under LG warranty across the countries mentioned in the back of this card for a period of 12 months from purchase date (pls. refer to list of coverage at the back), and (6 months for battery). Warranty support at LG Authorized Service Centers will be provided upon presentation of this warranty card. Warranty covers only those models that are sold in that particular market.

**This Warranty is not applicable if this telephone has:**

1. Been mishandled, misused, willfully damaged, neglected, improperly tested, liquid damaged, repaired, altered or defaced in any way.
2. A defect arising as a result of any failure to follow instructions either in the manual or product specification.
3. A defect which has risen from the use of non LG approved accessories or ancillary items attached or in connection with the telephone.



## Warranty Card

Kindly fill in all details below at the time of purchase

REFERENCE NO.: .....  
Customer's Name: .....  
Product/ Model: .....  
Serial No.: .....  
IMEI No.: .....  
Dealer's Name: .....  
Date of Purchase: .....  
Invoice/ Cash memo Details:.....

Operator/ Distributor's Stamp



## Authorized Service Centers

*CIC No.0861-545454 (LGLGLG)*

*Tel.No. 27-11-571-6700, Fax No. 27-11-822-5751,*

### Regional

#### Middle East

UAE	800 54
KSA	+96612112345
	+96638343000
Qatar	+9744315865
Oman	+96824502866/8
Bahrain	+97317403304
Yemen	+96771503240
Iran	+982188302922
Egypt	19960
Syria	+963113347720/1
Jordan	+96265510137

#### Africa

Morocco	081005454
Tunisia	+21670838424
Libya	+218213405695
Algeria	+21321917494
Kenya	+25420252240/1
Nigeria	+23418935454
South Africa	0861545454

#### Others

Turkey	+902165450404
Pakistan	+92214388271/74

**LG**

## Customer Registration Form

Kindly fill in all details below and fax/ email to your Local Customer Care.

REFERENCE NO: .....  
Date of Purchase: .....  
Customer's Name: .....  
Tel: ..... Fax: .....  
Email: .....  
Address: .....  
Product/ Model: .....  
Serial No.: .....  
IMEI No.: .....  
Date of Purchase: .....  
Distributor's Name: .....  
Dealer's Name: .....







## **LG Mobile Phone Service Centers in Middle East & Africa**





## **Service for LG Mobile Phone is available in the following countries**

(List includes Only the Main Service Centers. Other area's customers can contact the Head-quarter of their countries for further information)

### **Middle East Countries**

#### **11 Countries**

UAE  
Saudi Arabia  
Qatar  
Oman  
Kuwait  
Bahrain  
Yemen  
Iraq  
Egypt  
Syria  
Jordan

### **Africa Countries**

#### **7 Countries**

Morocco  
Tunisia  
Libya  
Algeria  
Kenya  
Nigeria  
South Africa

### **Other Countries**

#### **2 Countries**

Turkey  
Pakistan



## Middle East Countries

UAE	<input type="checkbox"/>	Yemen	<input type="checkbox"/>
Saudi Arabia	<input type="checkbox"/>	Iraq	<input type="checkbox"/>
Qatar	<input type="checkbox"/>	Egypt	<input type="checkbox"/>
Oman	<input type="checkbox"/>	Syria	<input type="checkbox"/>
Kuwait	<input type="checkbox"/>	Jordan	<input type="checkbox"/>
Bahrain	<input type="checkbox"/>		

# UAE

## Headquarter

- ❑ Agent Name : Jumbo Electronics Co. Ltd.
- ❑ Address : Telecommunication Division, P.O. Box 3426, Dubai, UAE
- ❑ Telephone No. : +97143367999 (LG Customer Information Center: 800 54)
- ❑ Fax No. : +97143340821
- ❑ Web Site : <http://www.jumbocorp.com>
- ❑ Email : [Roby.George@jumbo.ae](mailto:Roby.George@jumbo.ae)

## Service Centers

Area	Address	Telephone No.	Fax No.
Dubai (Karama)	Near Strand Cinema, P.O. Box 3426, Dubai	+97143362621	+97143360847
Abudhabi	Regional Service Center P.O. Box 3832,	+97126732201	+97126733930
Al Ain	Regional Service Center P.O. Box 15444	+97137542898	+97137557898
Sharjah	Regional Service Center P.O. Box 5331	+97165599725	+97165538365
Fujairah	Regional Service Center P.O. Box 868	+97192221406	+97192221828
Ras Al Khaimah	Regional Service Center P.O. Box 1054	+97172272571	+97172271881



# UAE

## Headquarter

- 
- ❑ Agent Name : Al Sayegh Brothers Trading L.L.C
  - ❑ Address : Al Sayegh Brothers Building, Muraqqabat, Deira, P.O. Box 55106, Dubai, UAE
  - ❑ Telephone No. : +97142663200 (LG Customer Information Center: 800 54)
  - ❑ Fax No. : +97142669964
  - ❑ Web Site : [www.alsa-g.com](http://www.alsa-g.com)
  - ❑ Email : [helpdesk@alsa-g.com](mailto:helpdesk@alsa-g.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Dubai	Al Sayegh Brothers Building, Muraqqabat, Deira P.O. box 55106	+97142622770	+97142669964/ +97142680340
Abu Dhabi	Lotus Tower, Airport road, P.O. Box 7993	+97124452111	+97124462040
Sharjah	Al Sayegh Brothers Main SVC Center Industrial area #6.	+97165436221	+97165437422

# UAE

## Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : World Trade Centre, P.O. Box 9266, Dubai UAE
- ❑ Telephone No. : 04 3318555 (LG Customer Information Center: 800 54)
- ❑ Fax No. : 04 3318855
- ❑ Web Site : [www.axiomtelecom.com](http://www.axiomtelecom.com)
- ❑ Email : [atcc@axiomtelecom.com](mailto:atcc@axiomtelecom.com)

## Service Centers in UAE

Area	Address	Telephone No.	Fax No.
Dubai	Shk Zayed Road, Al Kawakeb Building, Block C, P O Box 9266, Dubai, UAE	00971 43210600	00971 43210400
Abu Dhabi	Defense Road, Block A 4, Next to Al Sultan Restaurant. Abu Dhabi, UAE	00971 26417144	00971 26417076
Sharjah	Shop no 78, Crystal Plaza, Buhaira Corniche Road , Shj UAE	00971 65751503	00971 65751404

## Saudi Arabia

### Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : 9th Floor, Al Subaiee Tower, Abdul Aziz Highway, Al Khobar, KSA, P O Box 4742
- ❑ Telephone No.: 00966 38019000
- ❑ Fax No. : 00966 38019051
- ❑ Web Site : [www.axiomtelecom.com](http://www.axiomtelecom.com)
- ❑ Email : [ksasupport@axiomtelecom.com](mailto:ksasupport@axiomtelecom.com)

### Service Centers in KSA

Area	Address	Telephone No.	Fax No.
KHOBAR	9, Al Fanar Complex, Khobar-Dammam Highway, Khobar 31952, KSA	00966 38587922	00966 38587910
RIYADH	Olaya Main Street, Nr. Al Owais Market, Riyadh, KSA	00966 12698255	00966 12698355
JEDDAH	City Plaza Centre, Price Sultan Street, Jeddah, KSA	00966 26922764	00966 26924575



# Saudi Arabia

## Headquarter

- ❑ Agent Name : AL Farida Telecom Co. Ltd. (SKY)
- ❑ Address : P.o. box 359, Riyadh 11411, Riyadh, Saudi Arabia.
- ❑ Telephone No. : +96612112345
- ❑ Fax No. : +96612112311
- ❑ Email : marwan.alshare@alhokair.com.sa

## Service Centers

Area	Address	Telephone No.	Fax No.
Riyadh	P.o. box 359, Riyadh 11411, Riyadh, Saudi Arabia	+96612112345	+96612112311

## Saudi Arabia

### Headquarter

- ❑ Agent Name : Itsalat International Co.
- ❑ Address : P.O. Box 9798, Dammam, 31423, Saudi Arabia.
- ❑ Telephone No. : +96638343000
- ❑ Fax No. : +96638334664
- ❑ Web Site : <http://www.itsalat.com>
- ❑ Email : [ashraf.hassan@itsalat.com](mailto:ashraf.hassan@itsalat.com), [headoffice@itsalat.com](mailto:headoffice@itsalat.com)


### Service Centers

Area	Address	Telephone No.	Fax No.
Jeddah	Palestine st., Soukal Jawal, Jeddah	+96626677988	+96626643618
Riyadh	Mursalat, Neat STC, Riyadh	+96614559106	+96612645766
Dammam	Malik Fahd Road	+96638411111	+96638469055



## QATAR

### Headquarter

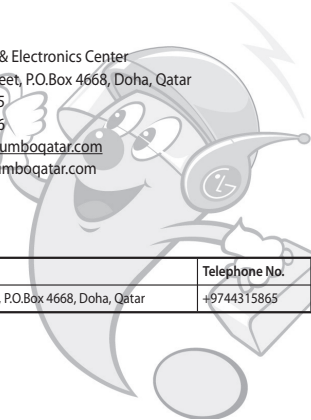- 
- ❑ Agent Name : Video Home & Electronics Center
  - ❑ Address : Musherib Street, P.O.Box 4668, Doha, Qatar
  - ❑ Telephone No. : +9744315865
  - ❑ Fax No. : +9744437876
  - ❑ Web Site : <http://www.jumboqatar.com>
  - ❑ Email : alexjacob@jumboqatar.com

### Service Centers

Area	Address	Telephone No.	Fax No.
Doha	Musherib street, P.O.Box 4668, Doha, Qatar	+9744315865	+9744437876

# OMAN

## Headquarter

- ❑ Agent Name : Oman Gulf Enterprises L.L.C
- ❑ Address : P.O. Box 175, PC 117, Muscat, OMAN
- ❑ Telephone No. : +96824502866/8
- ❑ Fax No. : +96824502019
- ❑ Web Site : <http://www.otegroup.com>
- ❑ Email : [sudhirk@otegroup.com](mailto:sudhirk@otegroup.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Salalah	P.O. Box 211, PC2823, Salalah, OMAN	+96823210684	+96823210145
Sur	P.O. Box 480, PC 411, Sur, OMAN	+96825545107	+96825545107
Nizwah	P.O. Box 784, PC 611, Nizwah, OMAN	+96825412549	+96825412549
Sohar	P.O. Box 205, PC 321, Al Tarif, Sohar, OMAN	+96826843942	+96826843942

# OMAN

## Headquarter

- ❑ Agent Name : Cellucom and Partners L.L.CI
- ❑ Address : Office No 7, Makha Business Center, Ruwi High Street, Muscat, Oman
- ❑ Telephone No. : +96824835010
- ❑ Fax No. : +96824834234
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : [info@cellucom.com](mailto:info@cellucom.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Muscat, Oman	Office No 7, Makha Business Center, Ruwi High Street, Muscat, Oman	+96824835010	+96824834234

# KUWAIT

## Headquarter

- ❑ Agent Name : Cellucom Kuwait WLL
- ❑ Address : Salem Al Mubarak Street, Shaha Complex, P.O. Box: 4019, Salmiya, Kuwait
- ❑ Telephone No.: +9655710801
- ❑ Fax No. : +9655710803
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : [info@cellucom.com](mailto:info@cellucom.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Salmiya, Kuwait	Salem Al Mubarak Street, Shaha Complex, P.O. Box: 4019, Salmiya, Kuwait	+9655710801	+9655710803

## BAHRAIN

### Headquarter

- ❑ Agent Name : AJM Kooheji & Sons
- ❑ Address : P.O. Box 74, Manama Bahrain.
- ❑ Telephone No. : +97317403304
- ❑ Fax No. : +97317403800
- ❑ Web Site : <http://www.ajmkooheji.com>
- ❑ Email : [habib@ajmkooheji.com](mailto:habib@ajmkooheji.com)

### Service Centers

Area	Address	Telephone No.	Fax No.
Sehla	P.O. Box 74, Manama Bahrain.	+97317401919	+97317405654

# BAHRAIN

## Headquarter

- ❑ Agent Name : Cellucom WLL
- ❑ Address : Shop no 5&6, Gosi commercial Complex, Manama, Kingdom of Bahrain
- ❑ Telephone No. : +97317294026
- ❑ Fax No. : +97317294046
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : [info@cellucom.com](mailto:info@cellucom.com)

## Service Centers


Area	Address	Telephone No.	Fax No.
Manama, Bahrain	Shop no 5&6, Gosi commercial Complex, Manama, Kingdom of Bahrain	+97317294026	+97317294046





## BAHRAIN

### Headquarter

- 
- ❑ Agent Name : Fono
  - ❑ Address : Gosi Complex, Exhibition Rd, Manama, Bahrain
  - ❑ Telephone No. : 00973 17312001
  - ❑ Fax No. : 00973 17310884
  - ❑ Web Site : [www.axiomtelecom.com](http://www.axiomtelecom.com)
  - ❑ Email : [fcc@almoayyedintl.com.bh](mailto:fcc@almoayyedintl.com.bh)

### Service Centers in Bahrain

Area	Address	Telephone No.	Fax No.
Bahrain	Fono, Gosi Complex, Exhibition Rd, Manama, Bahrain	00973 17312001	00973 17310884

# YEMEN

## Headquarter

- ❑ Agent Name : Al Mutarreb
- ❑ Address : Hada st. Al Mutarreb for Trading, P.O. Box-19272
- ❑ Telephone No. : +9671503240
- ❑ Fax No. : +9671500878
- ❑ Email : mutarreb@y.net.ye

## Service Centers

Area	Address	Telephone No.	Fax No.
Yemen	Hada st. Al Muttrieb for Trading P.O. Box 19272	+9671503240	+9671500878

# IRAQ

## Headquarter

- ❑ Agent Name : Al-Seera Communication Company
- ❑ Address : 14th Ramadan Road, Al-Mansour Street, Baghdad, Iraq
- ❑ Telephone No. : +9647901393615
- ❑ Fax No. : +96415427798
- ❑ Web Site : <http://www.alseera.com>
- ❑ Email : seeracom@hotmail.com, mohammed\_d\_r@hotmail.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Baghdad	14th Ramadan Road, Al Mansour Street	+9647901393615	+96415427798

# IRAQ

## Headquarter

- ❑ Agent Name : Delta General Trading
- ❑ Address : #907 Al Riqqa Palace, Al Maktoum St. P.O. Box 112121 Dubai UAE
- ❑ Telephone No. : +97142249159
- ❑ Fax No. : +97142249079
- ❑ Web Site : <http://www.deltairaq.net>
- ❑ Email : [haydar.hussain@deltairaq.net](mailto:haydar.hussain@deltairaq.net)

## Service Centers

Area	Address	Telephone No.	Fax No.
Baghdad	Street 13-Bldg.5/7 Mahalla 609, Mansour Baghdad, Iraq	+9647901905965	
Erbil	30th Metru St. Near to Bayiz Café, Erbil Iraq	+964662540070	+964662540071
Bashra	El Jazaier St. Bldg.139/54, No. 1 in front of Lahim Ibageem Eljandoul Restaurant, Bashra Iraq	+96440622146	

# EGYPT

## Headquarter

- ❑ Agent Name : Delta Communication
- ❑ Address : 39 M Tawfik Diab – Makram Ebied, Nasar City, Egypt
- ❑ Telephone No. : +2027487100 (LG Customer Information Center: 19960)
- ❑ Fax No. : +2025201241
- ❑ Email : salahezz@delta-group.org

## Service Centers

Area	Address	Telephone No.	Fax No.
Nasar City	39 M Tawfik Diab – Makram Ebied, Nasar City, Egypt	+2027487100	+2025201241

# EGYPT

## Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : 8, Al Oboor Buildings, Salah Salem Street, Cairo, Egypt
- ❑ Telephone No. : 002 02 4015050/4013939
- ❑ Fax No. : 002 02
- ❑ Web Site : [www.axiomtelecom.com](http://www.axiomtelecom.com)
- ❑ Email : [menon@axiomtelecom.com](mailto:menon@axiomtelecom.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
AXIOM-CAIRO	3, Abdul Fida Street, Zamalik, Cairo Province, Egypt	002 02 7377881	002 02 7377882
AXIOM- ALEXANDRIA	10, Victoria Square Amanwel, Zahrat Al Kotn Building, Somooha, Alexandria, Egypt	002 02 4242529	

# SYRIA

## Headquarter

- ❑ Agent Name : ECC (Z.Ghreiwati Sons Co.)
- ❑ Address : Abo Romaneh Shakib Arslan str.
- ❑ Telephone No. : +963113347720/1/3/4/5/6, +963113347465
- ❑ Fax No. : +963113333825
- ❑ Email : ecc@net.sy

## Service Centers

Area	Address	Telephone No.	Fax No.
Damascus	Kaboon – facing the bus Pullman station	+963119345	+963114537010
Aleppo	Jameilia beside Alseddeik Mosque	+963212284002	+963212122367

# JORDAN

## Headquarter

- ❑ Agent Name : Itisacom Company
- ❑ Address : Lana Complex bldg, Al Rabayah, Amman, Jordan
- ❑ Telephone No. : +96265510137
- ❑ Fax No. : +96265539358
- ❑ Email : lgsupport@nets.com.jo

## Service Centers

Area	Address	Telephone No.	Fax No.
Amman	Al Rabayah, Amman, Jordan	+96265510137	+96265539358





## Africa Countries

- Morocco ☐
- Tunisia ☐
- Libya ☐
- Algeria ☐
- Kenya ☐
- Nigeria ☐
- South Africa ☐

# MOROCCO

## Headquarter

- ❑ Agent Name : LGEMC (LG Electronics Morocco S.A.R.L)
- ❑ Address : Immeuble 2, Zenith Millenium, Sidi Maarouf, Lotissement Attawfiq, casa, Morocco
- ❑ Telephone No. : 081005454 (LG Customer Information Center)
- ❑ Fax No. : +21222975959
- ❑ Email : abdelhamid@lge.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Cetelec	5 rue Albouhtouri casa anfa Maroc	+21222270790	+21222203748
Lineatec	105 Avenue Fal ould oumaeir Number 1, Agdal, Rabat	+21237776506	+21237671040

# TUNISIA

## Headquarter

- ❑ Agent Name : TTE (Tunisian Telecom Electric Distribution)
- ❑ Address : Tunisian telecom Distribution, 22 Rue 8600 ZI Chargaia, Tunis, Tunisia
- ❑ Telephone No. : +21670838424
- ❑ Fax No. : +21670838422
- ❑ Web Site : <http://www.tte.com.tn>
- ❑ Email : f.hamdi@tte.com.tn

## Service Centers

Area	Address	Telephone No.	Fax No.
Tunis	22 Rue 8600 ZI Chargaia, Tunis, Tunisia	+21670838424	+21670838422

# LIBYA

## Headquarter

- ❑ Agent Name : PCNA (PC North Africa Company)
- ❑ Address : Noofleen ben Jaber Street, Benghazi, Libya.
- ❑ Telephone No. : +218213405695
- ❑ Fax No. : +218213405957
- ❑ Email : [nafrica@ltnet.net](mailto:nafrica@ltnet.net), [ahmad\\_al\\_shebani@hotmail.com](mailto:ahmad_al_shebani@hotmail.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Benghazi	Islamic center	+218619094079	+218619094079
Tripoli	Aldhara, Al Wadan Street	+218213344333	+218213344333
Mostra	Aldees Street	+21851626294	+21851626294

# ALGERIA

## Headquarter

- ❑ Agent Name : Algerika
- ❑ Address : 409, Lotissement El-Bouroudj, Ain-Allah Delly Brahim Alger.
- ❑ Telephone No. : +21321917494
- ❑ Fax No. : +21321917505
- ❑ Email : [garantie@algerie-k.com](mailto:garantie@algerie-k.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Algiers	409, Lotissement El-Bouroudj, Ain-Allah Delly Brahim Alger	+21321917494	+21321917505



## KENYA

### Headquarter

- ❑ Agent Name : Skytel Limited
- ❑ Address : Wilson Airport, PO Box 42444, Nairobi, Kenya
- ❑ Telephone No. : +25420252240/1
- ❑ Fax No. : +25420252240
- ❑ Email : alex.kabuagi@xcom.co.ke

### Service Centers



Area	Address	Telephone No.	Fax No.
Nairobi	Wilson Airport, PO Box 42444, Nairobi, Kenya	+25420252240/1	+25420252240



## NIGERIA

### Headquarter

- ❑ Agent Name : LGEAL (LG Electronics Antwerp Logistics N.V.)
- ❑ Address : 65C, Opebi Road, Ikeja Lagos, Nigeria
- ❑ Telephone No. : +23418935454 (LG Customer Information Center)
- ❑ Fax No. : +23417936510, 4977753
- ❑ Email : cland@lge.com

### Service Centers

Area	Address	Telephone No.	Fax No.
Lagos	65C, Opebi Road, Ikeja Lagos, Nigeria	+23418927777	+23417936510

## SOUTH AFRICA

### Headquarter

- ❑ Agent Name : LG Electronics (Customer Care Only, no on-site repairs)
- ❑ Address : 181 Barbara Road, Elandsfontein, Johannesburg, SA
- ❑ Telephone No. : +27861545454
- ❑ Fax No. : +27115716969
- ❑ Web Site : <http://www.lgmobile.com>

### Customer Care only (no on-site repairs)

Area	Address	Telephone No.	Fax No.
Elandsfontein, Johannesburg	181 Barbara Road, Elandsfontein, Johannesburg, SA	+2711861545454	+27115716969



## SOUTH AFRICA

### Headquarter

- ❑ Agent Name : LG Mobile Care Lounge
- ❑ Address : Monte Casino, Fourways
- ❑ Telephone No. : +27115110185
- ❑ Fax No. : +27115510189
- ❑ Email : <http://www.lgmobile.com>

### Service Centers


Area	Address	Telephone No.	Fax No.
Fourways, Johannesburg	Monte Casino, Fourways, Johannesburg, SA.	+27115110185	+27115510189

## SOUTH AFRICA

### Headquarter

- ❑ Agent Name : IXIA
- ❑ Address : 44 Old Pretoria Rd, Midrand, Blue Glass Building
- ❑ Telephone No. : +27116558118
- ❑ Fax No. : +27866340735
- ❑ Web Site : <http://www.ixia.co.za>
- ❑ Email : [silvin@ixia.co.za](mailto:silvin@ixia.co.za)

### Service Centers



Area	Address	Telephone No.	Fax No.
Midrand Johannesburg	44 Old Pretoria Rd, Midrand, Blue Glass Building (Gauteng and surrounding areas up to Rustenburg)	+27116558118 or +270861545454	+27866340735
Durban	Collection arranged	+27116558118 or +270861545454	+27866340735
Cape Town	Collection arranged	+27116558118 or +270861545454	+27866340735
Port Elizabeth	Collection arranged	+27116558118 or +270861545454	+27137554183
East London	Collection arranged	+27116558118 or +270861545454	+27866340735
Newcastle	Collection arranged	+27116558118 or +270861545454	+27866340735
Polakwane	Collection arranged	+27116558118 or +270861545454	+27866340735
Bloemfontein	Collection arranged	+27116558118 or +270861545454	+27866340735
Kimberley	Collection arranged	+27116558118 or +270861545454	+27866340735



## SOUTH AFRICA

### Headquarter

- 
- ❑ Agent Name : Cumi Electronics
  - ❑ Address : Atlas Lifestyle Center, 1st Floor Cnr Atlas & Northrand Rd, Bardene, Boksburg
  - ❑ Telephone No. : +27119186851
  - ❑ Fax No. : +27865159850
  - ❑ Email : pclark@cumi.co.za

### Service Centers

Area	Address	Telephone No.	Fax No.
Boksburg Johannesburg	Atlas Lifestyle Center, 1st Floor Cnr Atlas & Northrand Rd, Bardene, Boksburg	+27119186851/7	+27865159850

## SOUTH AFRICA

### Headquarter

- ❑ Agent Name : Pope & Sons
- ❑ Address : 2 Marais Street, Durbanville, Cape Town
- ❑ Telephone No. : +27119751888
- ❑ Fax No. : +27119765800
- ❑ Email : kevin@itecape.com

### Service Centers

Area	Address	Telephone No.	Fax No.
Durbanville, Cape Town	2 Marais Street, Durbanville, Cape Town	+27119751888	+27119765800

## SOUTH AFRICA

### Headquarter

- ❑ Agent Name : Vodacare
- ❑ Address : ARC, Ground Floor, east wing, Vodacom Service Park, Vodacom Boulevard, Vodavalley, Midrand, SA
- ❑ Telephone No. : +27(0)821944
- ❑ Fax No. : +27115464005
- ❑ Web Site : <http://www.vodacom.co.za>
- ❑ Email : [vodacarecallcentre@vodacom.co.za](mailto:vodacarecallcentre@vodacom.co.za)

### Service Centers (please refer to [www.vodacom.co.za](http://www.vodacom.co.za) for outlets in your region)

Area	Address	Telephone No.	Fax No.
Midrand	ARC, Ground Floor, east wing, Vodacom Service Park, Vodacom Boulevard, Vodavalley, Midrand, SA	+27115464039	+27115464005

## SOUTH AFRICA

### Headquarter

- ❑ Agent Name : MTN SP
- ❑ Address : 311 15th Rd, Midrand, Johannesburg, SA
- ❑ Telephone No. : +27118484329
- ❑ Fax No. : +27118484445
- ❑ Web Site : <http://www.mtn.co.za>
- ❑ Email : [theart\\_m@mtn.co.za](mailto:theart_m@mtn.co.za)

### Service Centers (please refer to [www.mtn.co.za](http://www.mtn.co.za) for outlets in your region)

Area	Address	Telephone No.	Fax No.
Midrand	311 15th Rd, Midrand, Johannesburg, SA	+27118484329	+27118484445



# TURKEY

## Headquarter

- ❑ Agent Name : Teleservice Int. Telefon
- ❑ Address : Dr. Fahrettin Kerim Gökay Cad. No:31-1 Altunizade Üsküdar TR-34662 İstanbul
- ❑ Telephone No. : +90 216 - 545 04 04
- ❑ Fax No. : +90 216 - 544 56 56
- ❑ Web Site : <http://www.teleservice.com>
- ❑ Email : [handan.ozcelik@teleservice.com](mailto:handan.ozcelik@teleservice.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Istanbul	Dr. Fahrettin Kerim Gökay Cad. No:31-1 Altunizade Üsküdar TR-34662 İstanbul	+90 216 - 545 04 04	+90 216 - 544 56 56
Istanbul	Ataturk Cad. Baglarbasi Mah. Cagla Sok. No: 9 Maltepe 34848 İstanbul Turkey	+90 216 - 458 97 97	+90 216 - 458 65 55
Ankara	Necatibey Cad. No:33/B Sıhhiye / Çankaya / Ankara	+90 312 - 230 55 30	+90 312 - 230 55 57
Dişarbakır	İnönü Cad. 4/C Büyük Hotel Altı Dağkapı TR-21090 Dişarbakır	+90 412 - 228 77 85	+90 412 - 228 80 88
İzmir	Gazi Bulvarı No:90/B TR-35230 Çankaya/İzmir	+90 232 - 445 86 00	+90 232 - 445 77 75



# PAKISTAN

## Headquarter

- ❑ Agent Name : New Allied Mobile Communication
- ❑ Address : 3/3 Ground Floor, Rabbiya Garden, M.C.H.S., Shaheed-e-Millat Road, Karachi, Pakistan.
- ❑ Telephone No. : +92214388271/74
- ❑ Fax No. : +92214388278
- ❑ Email : zpalg@yahoo.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Karachi	N-1, 4th Floor, Al -Haroon, 10 Aga Khan III Road, Karachi. 74400.	+92212729722	+92212729722
Lahore	Suite # 10, 2nd Floor Hafeez Centre Gulburg III, Lahore	+92425759157	+92425714684
Multan	352 Hithar Road Behind Hussain Agahi Road, Multan	+926145184012	+92616561456
Faisalabad	63, Gulistan Market, Street # 3, Near Taj Cinema, Railway Road, Faisalabad	+92412640655	-
Islamabad	2 / B, N.H.S.P Centre, Near Utility Store Head Office, Fazal-e-Haq Road, Blue Area	+925128282734	+92512828234



Visit us on  
<http://www.lgservice.com>  
<http://www.lgmobile.com>

# XPERIENCE

## WINNING CELLULAR SERVICE

@ MONTECASINO

Thank you for buying a LG Mobile phone



Visit our LG Mobile Care Lounge

where you and your mobile phone receive five star

Service

Quality

Value

Advice



Visit the LG Xperience Store for the latest in mobile technology, content and accessories. Qualified and experienced staff are on call for all your mobile needs.

Find us at Monte Casino, opposite Nu Metro, Johannesburg  
Call: 011 511 0184



[illegible]

[illegible]

[illegible]