

Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

WARNING! *Violation of the instructions may cause serious injury or death.*



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.
3. Never store your phone in temperatures less than -4°F or greater than 122°F.
4. Do not dispose of your battery by fire or with hazardous or flammable materials.



5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



6. Do not use a hand-held phone while driving.
7. Do not use the phone in areas where its use is prohibited. (For example: aircraft)

Important Safety Precautions

Important Safety Precautions



1. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



2. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



3. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.

4. Do not use your phone in high explosive areas as the phone may generate sparks.



5. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



6. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.

7. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.



8. Do not disassemble the phone.



1. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
2. Do not hold or let the antenna come in contact with your body during a call.



3. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.



4. Store the battery out of reach of children.
5. Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



6. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



7. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
8. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



9. Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Table of Contents

Important Safety Precautions	1
---------------------------------	---

Table of Contents	4
-------------------	---

Welcome	9
---------	---

Technical Details	10
-------------------	----

Technical Details	10
-------------------	----

FCC RF Exposure Information	12
-----------------------------	----

Bodily Contact During Operation	12
---------------------------------	----

Vehicle-Mounted the External Antenna	13
-----------------------------------------	----

FCC Notice and Cautions	13
-------------------------	----

Phone Overview	14
----------------	----

Menus Overview	18
----------------	----

Getting Started with Your Phone	20
------------------------------------	----

The Battery	20
-------------	----

Charging the Battery	20
----------------------	----

Battery Charge Level	21
----------------------	----

Turning the Phone On and Off	21
------------------------------	----

Signal Strength	21
-----------------	----

Screen Icons	22
--------------	----

Making Calls	22
--------------	----

Correcting Dialing Mistakes	22
-----------------------------	----

Redialing Calls	23
-----------------	----

Receiving Calls	23
-----------------	----

Quick Access to Convenient Features	24
----------------------------------------	----

Lock Mode	24
-----------	----

Mute Function	24
---------------	----

Volume Quick Adjustment	24
-------------------------	----

Call Waiting	24
--------------	----

Caller ID	25
-----------	----

Speed Dialing	25
---------------	----

Entering and Editing Information	26
-------------------------------------	----

Text Input	26
------------	----

Key Functions	26
---------------	----

Contacts in Your Phone's Memory 27

The Basics of Storing Contacts Entries	27
Phone Numbers With Pauses	27
Storing a Number with Pauses	28
Adding a Pause to an Existing Number	28
Searching Your Phone's Memory	29
Scrolling Through Your Contacts	29
Making a Call From Your Phone's Memory	30

Using Phone Menus Messaging 32

Messaging	32
1. New Text Message	32
2. New Picture Message	34
3. Inbox	36
4. Sent	38
5. Drafts	39
6. Voicemail	39

7. Templates	40
8. Settings	40
8.1 All Messages	40
8.2 Text Message	41
8.3 Picture Message	42
8.4 Edit Voicemail #	42
9. Delete All	42

Alltel Shop 43

1. Alltel Shop	44
2. Alltel Info	44

Alltel Web 45

1. Start Browser	45
2. Web Settings	48

Multimedia 48

1. Take Photo	48
2. Record Video	49
3. Record Voice	50
4. Images	51
5. Videos	51
6. Audios	52

Table of Contents

7. Shuffle	53	5. Genres	60
Contacts	54	6. Settings	60
1. New Contact	54	Tools	61
2. Contact List	54	1. Voice Command	61
3. Groups	55	2. My Menu	62
4. Speed Dials	56	3. Alarm Clock	62
5. My Name Card	56	4. Calendar	63
Recent Calls	57	5. Ez Tip Calc	63
1. Missed Calls	57	6. Notepad	64
2. Received Calls	57	7. Calculator	64
3. Dialed Calls	57	8. World Clock	65
4. All Calls	57	9. Stopwatch	65
5. Call Timer	58	0. Unit Converter	66
6. Data	58	Settings	66
7. Data Counter	58	1. Sound	66
Music	59	1.1 Ringers	66
1. All Songs	59	1.2 Volume	67
2. My Playlists	60	1.3 Message Alerts	67
3. Artists	60	1.4 Alert Type	67
4. Albums	60	1.5 Service Alerts	67

1.6 Power On/Off Tone	68	4.3 Auto Retry	75
1.7 Slide Tone	68	4.4 One-Touch Dial	75
2. Display	69	4.5 Voice Privacy	76
2.1 Wallpaper	69	4.6 Airplane Mode	76
2.2 Banner	69	4.7 TTY Mode	76
2.3 Backlight	70	5. Touch Pad	77
2.4 Wheel Board	70	6. Bluetooth®	77
2.5 Menu Style	70	6.1 Paired Devices	77
2.6 Languages	71	6.2 Power	78
2.7 Clocks & Calendar	71	6.3 My Visibility	78
2.8 Font Settings	71	6.4 My Bluetooth Name	79
2.9 Color Schemes	72	6.5 My Bluetooth Info	79
2.0 Name Match for Dialing	72	7. PC Connection	79
3. Security	72	8. System	79
3.1 Lock Phone	72	8.1 Network	79
3.2 Restrictions	73	8.2 Location	81
3.3 Emergency #s	73	9. Memory	81
3.4 Change Lock Code	74	0. Alltel Shop & Web	81
3.5 Reset Default	74	*. Software Update	82
4. Call Settings	75	#. Phone Info	82
4.1 Answer Options	75	XM Radio	82
4.2 End Call Options	75		

Table of Contents

ZUMA	82	Potentially Explosive Atmosphere	86
Ringtones	82	For Vehicles Equipped with an Air Bag	87
Safety	83	Safety Information	87
TIA Safety Information	83	Warning! Important safety information	90
Exposure to Radio Frequency Signal	83	FDA Consumer Update	92
Antenna Care	83	10 Driver Safety Tips	102
Phone Operation	84	Consumer Information on SAR	105
Tips on Efficient Operation	84	FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices	108
Driving	84		
Electronic Devices	84	Accessories	112
Pacemakers	84		
Persons with pacemakers:	85	Limited Warranty Statement	113
Hearing Aids	85		
Other Medical Devices	85	Index	117
Health Care Facilities	85		
Vehicles	86	Some content in this user guide may differ from your phone depending on the phone software. Features and specifications are subject to change without prior notice.	
Posted Facilities	86		
Aircraft	86		
Blasting Areas	86		

Welcome

Thank you for choosing the LG Rhythm™ cellular phone designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this compact phone offers:

- Celltop capability.
- Significantly enhanced voice clarity.
- Slim and sleek design with internal antenna (Internal antenna described as antenna throughout this user guide).
- Large, easy-to-read, 9-line backlit LCD with status icons.
- Paging, messaging, voice mail, and caller ID.
- 25-key keypad.
- Speakerphone feature.
- Menu-driven interface with prompts for easy operation and configuration.

- Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
- Bilingual (English and Spanish) capabilities.
- Bluetooth® wireless technology.

Note

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.

Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

Technical Details

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Technical Details

The LG Rhythm™ is a trimode phone that operates on both (Code Division Multiple Access CDMA) frequencies: cellular services at 800 MHz and (Personal Communication Services PCS) at 1.9 GHz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication

from being crossed and to use one frequency channel by multiple users in the same specific area.

This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base Station Transmission System), and MS (Mobile Station).

* TSB-74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-

speed data transmission is also possible.

The following table lists some major CDMA standards.

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000 ANSI TIA/EIA 553A	CDMA Dual Mode Air Interface 14.4kbps radio link protocol and inter-band operations IS-95 adapted for PCS frequency band cdma2000 1xRTT AirInterface
Network	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41 -C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem operations Non-signaling data comm.
Service	TIA/EIA/IS-96-B TIA/EIA/IS-99 TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Async Data and Fax Short message service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
Performance	TIA/EIA/IS-97 TIA/EIA/IS-98 ANSI J-STD-018 ANSI J-STD-019 TIA/EIA/IS-125	Cellular base station Cellular mobile station PCS personal station PCS base station Speech CODEC

Technical Details

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.79 inches (2.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.79 inches (2.0 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted the External Antenna

(Optional, if available.)

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and vehicle-mounted the external antenna. For more information about RF exposure, visit the FCC website at www.fcc.gov.

FCC Notice and Cautions

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

Phone Overview

Phone Overview



1. **Headset Jack** Allows you to plug in an optional headset for convenient, hands-free conversations.
2. **Earpiece** Lets you hear the caller.
3. **Slide** Slide up to answer an incoming call and slide it down to end the call.
4. **LCD Screen** Displays messages and indicator icons. When the phone is turned on, Power Save mode automatically dims the screen and then darkens it if no keys are pressed.
5. **Left Soft Key** Use to access Celltop.
6. **Side Keys** Use to adjust the Master Volume in standby mode* and the Earpiece Volume during a call.
7. **Navigation Wheel** Use to scroll to menus in the main menu screen. Use for quick access to My Menu, Alltel Music, Alarm, Alltel shop, Alltel Web.
8. **Lock/ Unlock Key** Press to unlock the Front screen and use the Front Navigation Wheel and Center Select Keys.
9. **Music Key** Use to access Music menu.
10. **TALK Key** Use to place or answer calls.
11. **Accessory Charger Port** Connects the phone to the battery charger, or other compatible accessory.
12. **Lock Mode Key** Use to lock the phone (from standby mode press and hold for about 3 seconds).
13. **microSD™ Slot** Accommodates optional microSD cards up to 16GB.
14. **Right Soft Key** Use to access Message.
15. **Music Shortcut Key** Activates Music Player.
16. **Menu/OK Key** Selects the function displayed at the bottom of the LCD between the Left and Right Soft Key functions.
17. **BACK Key** Deletes single spaces or characters with a quick press, but press and hold to delete entire words. Will also back you out of menus, one level at a time.
18. **Speakerphone Key** Use to change to speakerphone mode. Prolonged touch while in a menu activates speakerphone mode.
19. **PWR/END Key** Use to turn the power on/off and to end a call. Also returns to the main menu display screen.
20. **Camera Key** Use for quick access to Camera menu. Press and hold the camera key to go directly to the camera screen function.
21. **Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
22. **Camera Lens** Keep it clean for optimal photo quality.
23. **Touch Keys and Navigation Wheel with OK Key** Touch Keys include the Left Soft Key, the Right Soft Key, the Music Key, and the Clear Key which are activated by the touch of your finger. The Navigation Wheel allows you to scroll to and select choices.

Phone Overview

Rear view

Installing the Battery

Insert the bottom of the battery into the opening on the back of the phone, then push the battery down until the latch clicks.



Phone Overview

NOTE

Antenna equipped inside your phone.





Tip If you hold the phone enclosing the upper edge, you may interfere with the antenna's ability to receive a clear signal which affects call quality for voice or data transfer.



NOTES

- It's important to fully charge the battery before using the phone for the first time.
- Battery life and signal strength are significant factors (among others) that affect your phone's ability to send/receive calls.

Menus Overview

You can launch the menu display screen by touching  in standby mode. Move to the desired menu by touching  /  and touch  to go into the sub menus.

You can also enter the desired menu by pressing the corresponding numeric keys as follows.

Messaging

1. New Text Message
2. New Picture Message
3. Inbox
4. Sent
5. Drafts
6. Voicemail
7. Templates
8. Settings
 1. All Messages
 2. Text Message
 3. Picture Message
 4. Edit Voicemail#
9. Delete All
 1. Delete Inbox
 2. Delete Sent
 3. Delete Drafts

4. Delete All Messages

Alltel Shop

1. Alltel Shop
2. Alltel Info

Alltel Web

1. Start Browser
2. Web Settings
 1. Message Notification
 2. Alert

Multimedia

1. Take Photo
2. Record Video
3. Record Voice

4. Images
5. Videos
6. Audios
7. Shuffle

Contacts

1. New Contact
2. Contact List
3. Groups
4. Speed Dials
5. My Name Card

Recent Calls

1. Missed Calls
2. Received Calls
3. Dialed Calls
4. All Calls

Menus Overview

5. Call Timer

6. Data

7. Data Counter

Music

1. All Songs

2. My playlists

3. Artist

4. Albums

5. Genres

6. Settings

1. Shuffle

2. Repeat

3. Equalizer

4. Play Mode

5. Visualization

6. Music Highlight

7. Background Music

Tools

1. Voice Command

1. Start Command

2. Command Mode

3. Announce Alert

4. Train Word

5. Best Match

2. My Menu

3. Alarm Clock

4. Calendar

5. Ez Tip Calc

6. Notepad

7. Calculator

8. World Clock

9. Stopwatch

0. Unit Converter

Settings

1. Sound

1. Ringers

2. Volume

3. Message Alerts

4. Alert Type

5. Service Alerts

6. Power On/Off Tone

7. Slide Tone

2. Display

1. Wallpaper

2. Banner

3. Backlight

4. Wheel Board

5. Menu Style

6. Languages

7. Clocks & Calendar

8. Font Settings

9. Color Schemes

0. Name Match for Dialing

3. Security

1. Lock Phone

2. Restrictions

3. Emergency #s


4. Change Lock Code

5. Reset Default

4. Call Settings

- | | |
|----------------------|----------------------|
| 1. Answer Options | 1. Network |
| 2. End Call Options | 2. Location |
| 3. Auto Retry | 9. Memory |
| 4. One-Touch Dial | 1. Save Options |
| 5. Voice Privacy | 2. Phone Memory |
| 6. Airplane Mode | 3. Card Memory |
| 7. TTY Mode | 0. Alltel Shop & Web |
| 5. Touch Pad | 1. Alltel Info |
| 6. Bluetooth | 2. Web Setting |
| 1. Paired Devices | *. Software Update |
| 2. Power | 1. Check for Update |
| 3. My Visibility | #.Phone Info |
| 4. My Bluetooth Name | 1. My Number |
| 5. My Bluetooth Info | 2. ESN/MEID |
| 7. PC Connection | 3. Icon Glossary |
| 1. USB Modem | 4. Version |
| 2. USB Mass Storage | |
| 3. Bluetooth | |
| 4. Setting Reminder | |
| 8. System | |

Menu Access

Press  **Menu** to access nine phone menus. There are two methods of accessing menus and submenus:

- Use the navigation key to highlight and select, or
- Press the number key that corresponds with the menu (or submenu).

Getting Started with Your Phone

The Battery

Note

It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level is shown at the top of the LCD screen.

Installing the Battery

Remove the battery cover by sliding it downward followed by the arrow indicator. Align the battery with the terminals near the top of the phone. Align the battery cover then slide it to the right side until it clicks into place.

Removing the Battery

Turn the phone off. Slide the battery cover downward to remove. Use the opening near the bottom of the battery to lift the battery out.

Charging the Battery

To use the charger provided with your phone:

Warning! Use only the charger provided with the phone. Using any charger other than the one included with the LG Rhythm™ may damage your phone or battery.



Notice

Please make sure that the **LG logo faces down** before inserting a charger, data cable, etc into the charger port of your phone.


1. Plug the end of the adapter into the phone's charger port and the other end into an electrical outlet.
2. The charge time varies depending upon the battery level.

Battery Charge Level


The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying a warning message. If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.

Turning the Phone On and Off


Turning the Phone On

1. Install a charged battery or connect the phone to an external power source.
2. Press  for about 3 seconds until the LCD screen lights up.

Turning the Phone Off

1. Press and hold  until the display turns off.

Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon  -- the more bars, the better the signal strength. If the signal quality is poor, move to an open

Getting Started with Your Phone

area. If you are in a building, the reception may be better near a window.



Note

The call quality is also affected by the places where you are and weather conditions with RF emission changes.

Screen Icons

To see the icon glossary, go to **Menu -> Settings -> Phone Info -> Icon Glossary** on your phone.

 




Making Calls

1. Make sure the phone is turned on. If not, press  for about 3 seconds.
2. Enter the phone number (include the area code if needed).
3. Press .

If the phone is locked, enter the lock code (the last 4 digits of your phone number by default and it's changeable in Settings menu).



Note

If the phone is restricted, you can only dial phone numbers saved in the Emergency Numbers or your Contact List. To turn off this function:

Menu ->  Settings ->  Security -> Lock Code -> OK ->  Restrictions ->  Calls ->  None -> OK

4. Press  to end the call.

Correcting Dialing Mistakes

If you make a mistake while dialing a number, press  once to erase the last digit entered, or hold down  for

at least 2 seconds to go to the standby mode.

Redialing Calls

1. Press **TALK** twice to redial the last number you dialed. The last 120 numbers (missed, received, dialed) are stored in the call history list and you can also select any of these to redial.

Receiving Calls

1. When the phone rings or vibrates, press **TALK** to answer.

Tip

To choose answer options: **Menu** ->

9 ways: **Settings** -> **4 gh** **Call**

Settings -> **1** **Answer**

Options. Choose from the following options:

Slide Open/ Any Key/ TALK Key Only/ Auto Answer

Note

If you press **END** or **↓** (the side keys), while the phone is ringing, the ringing or vibration is muted for that call.

2. Press **END** once to end the call.

Quick Access to Convenient Features

Lock Mode

Sets your phone to require a 4-digit password in order to use the phone.

Note

Until you change it, the default lock code/password is the last 4 digits of your phone number.

To quickly lock your phone press



for three seconds. To

cancel, press Left Soft Key

Unlock, enter the password and press .

Mute Function

The Mute Function is used during a phone call. To quickly activate Mute press Left Soft Key **Mute**, then to cancel press Left Soft Key **Unmute**.

Volume Quick Adjustment

Use the side keys to adjust the ringer volume while in standby mode, and the earpiece volume during a phone call. The upper key increases the volume and the lower key decreases the volume.



Note

Keypad Volume is adjusted through the Sound Volume menu:

Menu -> **Settings** ->
Sound -> **Volume** ->
Keypad

Call Waiting

Your cellular service may offer call waiting. While a call is in progress, a beep indicates another incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call. Check with your cellular service provider for information about this function.

1. Press  to receive a waiting call.
2. Press  again to switch between calls.

Caller ID

Caller ID displays the phone number or name of the incoming call. If the caller's identity is stored in Contacts, the name will appear along with the phone number. Check with your service provider to ensure they offer this feature.

Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly. A number key can be assigned to a specific phone number. By pressing and holding down a number key, your phone will recall the phone number associated from the Contact List and display it briefly

while simultaneously dialing that phone number for you. Speed Dial Number 1 is set to Voice Mailbox by default and is unchangeable.

Dialing Single Digit Speed Dials (from 2 to 9)

Press and hold the Speed Dial number.


OR

Enter the Speed Dial number and press .

Dialing Double Digit Speed Dials (from 10 to 99)

Press the first digit and then press and hold the key of the second digit.

OR

Enter the first and second digits and press .

Entering and Editing Information

Text Input

You can input and edit your Banner, Calendar, Contacts, Alarm Clock, Notepad, and Messages.

Key Functions



Left Soft Key:

Press to scroll through the following text input modes: T9Word (T9WORD/T9Word/T9word) -> Abc (ABC/Abc/abc) -> 123 -> Symbols



Shift: Press to change case.

T9 text : T9Word ->

T9WORD -> T9word

Abc text : Abc -> ABC ->

abc



Next: In T9 mode, press to display other matching words.



Space: Press to complete a word and insert a space.






Clear: Press to delete a single space or character. Hold to delete the whole message.



Punctuation: In T9 mode, press to insert punctuation in a word and complete a sentence.


Contacts in Your Phone's Memory

The Basics of Storing Contacts Entries

1. From standby mode enter the phone number you want to save (up to 48 digits).
2. Press Left Soft Key  **Save**.
3. Select either **Save New** or **Update Existing**.
4. Use  to highlight a Label and press .
Mobile 1/ Home/ Work/ Mobile 2/ Fax

Note


Use **Update Existing** to add another phone number to a contact already stored in memory.

5. Enter a name for the phone number (up to 22 characters) and press . A confirmation message is displayed briefly.

Phone Numbers With Pauses

When you call automated systems, such as voice mail or credit billing numbers, you often have to enter a series of numbers to navigate through the system. Instead of entering these numbers by hand, you can store the numbers in your Contacts separated by special pause characters (W, P). There are two different types of pauses you can use when storing a number:

Wait (W)






 

The phone stops dialing until you press Left Soft Key  **Release** to advance to the next number.

Pause (P)










The phone waits 2 seconds before sending the next string of digits.

Contacts in Your Phone's Memory

Storing a Number with Pauses

1. Press  **Menu**.
2. Press  **Contacts**.
3. Press  **New Contact**.
4. Enter a name (up to 22 characters) and enter a number.
5. Press Right Soft Key  **Options**.
6. Press  **Wait** or  **Pause**.
7. Enter additional number(s) then press .



Adding a Pause to an Existing Number

1. Press  **Contact List** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry to edit, then press .
3. Press Left Soft Key  **Edit**.
4. Use  to highlight the number.
5. Press Right Soft Key  **Options**.
6. Press  **Wait** or  **Pause**.
7. Enter additional number(s), then press .


Searching Your Phone's Memory

The LG Rhythm[™] phone is able to perform a dynamic search of the contents in your phone's memory. A dynamic search compares entered letters or numbers against the entries in your Contacts. A matching list is displayed in descending order. You can then select a number from the list to call or edit.





Scrolling Through Your Contacts


1. Press  **Contact List** to display your Contacts alphabetically.
2. Use  to scroll through the list.

Searching by Letter

1. Press  **Contact List** to display your Contacts alphabetically.
2. Press (or press repeatedly) the key on the keypad that corresponds with the search letter.

Searching Options

1. Press  **Contact List**.
2. Press Right Soft Key  **Options**.
3. Select the search criteria (use  then press Right Soft Key  **Options**:

1 


Contact List Search:
 Search for contact either using Navigation or Search Window.

Contacts in Your Phone's Memory






- 2 abc** **Send Message:** Send a text message or picture message to the selected contact.
- 3 def** **Delete:** Delete the selected entry in your Contacts.
- 4 ghi** **Edit:** Edit the selected contact information.
- 5 jkl** **Delete Multiple:** Choose from Selective/ All to delete multiple entries at one time.
- 6 mno** **Send via Bluetooth:** Send a contact (vCard) via Bluetooth. In case Bluetooth power is not on, a notice pops up to turn Bluetooth on.
- 7 pqrs** **Set Speed Dial/ Remove Speed Dial:** Set a speed dial or remove the speed dial.

Making a Call From Your Phone's Memory





Once you have stored phone numbers in your Contacts, you can place calls to those numbers quickly and easily.

- By pressing Talk Key  after searching for a phone number in Contacts or Recent Calls and highlighting it.
- By using Speed Dialing.



From Contacts

1. Press  **Contact List** to display your Contacts.
2. Use  to highlight the Contact entry, then press .
3. Use  to highlight the phone number.
4. Press  to place the call.



From Recent Calls

1. Press  **Menu**.
2. Press  **Recent Calls**.
3. Use  to highlight the type of recent call, then press .

Missed Calls/Received Calls/Dialed Calls/ All Calls

4. Use  to highlight the phone number.
5. Press  to place the call.

Speed Dialing

For a single-digit Speed Dial, press and hold the digit or press the digit, then press . For a double-digit Speed Dial, press the first digit and hold the second digit or press the first and second digits, then press .

Using Phone Menus

Messaging

Messaging



The phone can store up to 435 messages. The LG Rhythm™ supports up to 1000 characters. The information stored in the message is determined by phone mode and service capability. Other limits such as available characters per message may exist, please check with your service provider for system features and capabilities.

1. New Text Message

Allows you to send text messages, pages, and e-mail transmissions. Each message will be formatted and sent according to the destination address.







The Basics of Sending a Text Message

1. Press , , .
2. Enter the recipient's address.

3. Press  to access the message screen.
4. Type your message (text or e-mail).
5. Press  **Send**.

A confirmation message is displayed.

Select Recipient(s) Using Options

1. Press , , .
2. Press Right Soft Key  **Options**.
3. Use  to highlight an option and press .

Contacts To select a recipient from your Contact List.

Recent Calls To select a recipient from your Recent Calls.

Recent Messages Choose **Inbox/ Sent** to select a recipient from your Recent Messages.

Groups Select a recipient from your Groups.







General/ Family/ Friends/ Colleagues/ Business/ School



Cancel Cancels editing your message.

4. Complete your message and send or save it.

Customize Your Text Message Using Options

While you are composing the text of a message you can insert customized text.

1. Press , , .
2. Enter the recipient's address.
3. Use  or press  to highlight the Message window.
4. Press Right Soft Key 
Options.

5. Use  to highlight an option and press .

Add Graphic/ Animation/ Sound/ Templates/ Signature

Text Format

Alignment/ Font Size/ Font Style/ Text Color/ Background

Save As Draft/ Templates

Priority Level Normal/ High

Callback # On/ Off

Delivery Notice Enhanced/ Normal

Cancel Cancels editing your message.

6. Complete your message and send or save it.

Messaging

Message Icon Reference

Inbox

	New/Unread Text/Picture Message
	Opened/Read Text/Picture Message
	New/Unread Notification Message
	Opened/Read Notification Message
	Priority High
	MMS New/Read Priority High

Sent

	Failed Text/Picture Message
	Failed Multiple Text/Picture Messages
	Sent Message Pending
	Multi Messages Pending
	Sent Text/Picture Message
	Multiple Text/Picture Messages in transfer
	Text/Picture Message delivered
	Multiple Messages delivered



Drafts



	Draft Text Message
	Draft Picture Message


2. New Picture Message



Allows you send messages with Text, Image and Audio.

1. Press , , .
2. Enter the recipient's address, or press Right Soft Key **Options** to search Contacts, and press to select the desired contact.
3. Press to access the message screen.
4. Type your message.
5. With the highlight **Image/Video** on press Left Soft Key **Add**, highlight an option, and press to select:
Image/ Video/ Take Photo/ Record Video
6. Use to highlight a picture, then press Left Soft Key **Set**.

7. With the highlight on Audio, press Left Soft Key  Add, highlight an option, and press  to select from My Ringers.

8. Use  to highlight a sound, then press Left Soft Key  Set.

9. Use Right Soft Key  Options.

10. Use  to highlight an option and press .

* Editing the Receiver

Contacts/ Recent Calls/
Recent Messages/ Groups/
Online Album/ Cancel

* Editing the Text

Preview Shows your message before sending.

Add Templates/ Signature/
Slide

Go to Previous Slide/ Next Slide

Save As Draft/ Templates

Priority Level Normal/ High

Delivery Notice Informs you that the message has been successfully delivered to the recipient.

Enhanced/ Normal

Remove Image/ Audio/ Video/
Slide

Cancel Cancels the contents of message field.

* Editing Image/ Video

Preview/ Add Slide/ Go to/
Save As Draft/ Delete/
Priority Level/ Delivery
Notice/ Remove/ Cancel

* Editing Audio

Preview/ Add Slide/ Go to/
Save As Draft/ Priority Level/
Delivery Notice/ Remove/
Cancel

Messaging


* Editing Subject

**Preview/ Add/ Go to/ Save
As/ Priority Level/ Delivery
Notice/ Remove/ Cancel**

11. Press  to send.

3. Inbox








The phone alerts you in 2 ways when you receive a new message by:

- Displaying a notification message on the screen.
- Displaying the message icon  (It blinks when the message is urgent).

Received text messages, page messages, picture messages and e-mail lists may be searched and the contents viewed. Received messages are displayed from newest to oldest.

Viewing Your Inbox


Up to 300 received messages can be stored in the Inbox.




1. Press , , .
2. Use  to highlight an inbox message.
3. Press Left Soft Key  **Reply** to reply,  **Chat** to start a chat session with the sender, or Right Soft Key  **Options** to view the message and access additional options.

For text messages: **View/
Change View Type/ Delete/
Forward/ Save Contact/
Lock/ Message Info/ Delete
Multiple**

For picture messages:
**Delete/ Forward/ Save
Contact/ Lock/ Message
Info/ Delete Multiple**

Note

For picture messages, press  **View** to view the message.

4. While viewing the selected message, press Left Soft Key  **Reply** to reply,  **Chat** to start a chat session with the sender (not available with picture messages), or Right Soft Key  **Options** to view additional options.

Delete Deletes the selected message.

Forward Forwards a received message to other destination address(es).

Save Contact Stores the callback number, e-mail address, and numbers in the received message into your Contacts.

Save as Templates Stores the message as a template for future messages.

Call Back Calls the number in the received message.

Go to website Accesses the website by starting AlltelWeb.

Lock/Unlock Locks or unlocks the selected message.

Message Info Shows the message type priority and status.

Note

At a session of chat, press the Left Soft Key **Reply**, to respond, or press the Right Soft key to see more options

For picture messages:
Play Again/ Delete/ Forward/ Save Contact/ Save Media/ Lock/ Go to website/ Message Info

Messaging

4. Sent

Up to 100 sent text messages or picture messages can be stored in the Sent. Access the Sent message list to view contents of sent messages and verify whether the transmission was successful or not.

1. Press , , .
2. Use to highlight a sent message. Press Left Soft Key **Resend** to resend the message to the recipient, **View** to view the message, or Right Soft Key **Options** to access additional options.
Delete/ Forward/ Save Contact/ Lock/ Message Info/ Delete Multiple

3. While viewing the selected sent message, press Left Soft Key **Resend** to resend the message to the recipient, or Right Soft Key **Options** to access additional options.

Delete Deletes the selected message.

Forward Forwards a received message to other destination address(es).

Save Contact Stores the callback number, e-mail address, and numbers in the received message into your Contacts.

Save as Templates Stores the message as a template for future messages.

Lock/Unlock Locks or unlocks the selected message.

Message Info Shows the message type priority and status.

Note

For picture messages:

**Play Again/ Delete/ Forward/
Save Contact/ Save Media/ Lock/
Go to website/ Message Info**

5. Drafts

Displays saved messages and draft messages.

1. Press , , .
2. Use to highlight a Saved message.
 - Press **Edit**.
 - Press Right Soft Key **Options**.

Delete Deletes the selected message from the Drafts.

Save Contact Select **Save New/ Update Existing** to store the callback number, e-mail address, and numbers in the received message into your

Contacts or update an existing contact already stored in memory.

Lock/Unlock Locks a message so that it is not erased if the Erase Saved or Erase All feature is used.

Delete Multiple Select **Selective/ All** to delete multiple messages at one time.

6. Voicemail

Allows you to view new voice messages recorded in your voice mail box. Your phone will alert you when you receive a new voice message.

Checking Your Voicemail Box

1. Press , , .
2. Choose from the following options:
 - Press Left Soft Key **Clear** to clear the voicemail counter.

Messaging

- Press **TALK** to listen to the message(s).
- Press Right Soft Key **Exit** to return to the Messaging menu.

7. Templates

Allows you to display, edit, and add text phrases. These text strings allow you to reduce manual text input into messages.

1. Press **Menu**, **1**, **7**.
2. Press Left Soft Key **New** to create a new template.
Enter text and press **OK** to save the template.
3. Use **Up** to highlight a template and press Right Soft Key **Options**, then highlight an option and press **OK** to select:
Delete/Edit

8. Settings

Allows you to configure 4 settings for messages.

1. Press **Menu**, **1**, **8**.
2. Use **Up** to highlight **All Messages/ Text Message/ Picture Message/ Edit Voicemail #** then press **OK**.
3. Use **Up** to highlight one of the settings and press **OK** to select it.

Message Settings Sub-Menu Descriptions

8.1 All Messages

1. Auto Save (Auto Save/ Prompt/ Do Not Save)

With this feature on, messages are automatically saved in Sent when transmitted.

2. Auto Delete (On/ Off)

With this feature on, read messages are automatically deleted when you exceed the storage limit.

3. Entry Mode

Allows you to select the default input method including T9Word, Abc and 123.

4. Signature (On/ Off/ Edit)

Allows you to make/edit a signature to automatically send with your messages.

5. Speed Messaging (On/ Off)

This feature allows you to speed dial text and picture messages.

For example:

1. Assign the number 2 as a speed dial for one of your contacts.

2. Compose a new text or picture message. In the destination address window, hold down the number 2 key instead of entering the address, and the message will be automatically sent to that contact.

8.2 Text Message

1. Auto View (On/ Off)

When set to On, new messages will automatically display on your screen when they are received.

2. Auto Play (On/ Off)

Allows the display to automatically scroll down while viewing messages.

Messaging

3. Callback # (On/ Off/ Edit)

With this feature on, you can input the callback number that will be automatically included when you send a message.

8.3 Picture Message

1. Auto Receive (On/ Off)








With this set to On, attached content will automatically download when a new picture message is received.

8.4 Edit Voicemail

Allows you to manually enter the access number for Voicemail Service. This feature should only be used when a VMS (Voicemail Service) access number is not provided from the network.

9. Delete All

Allows you to erase the messages stored in your Inbox, Sent, or Saved message folders. You can also erase all messages at the same time.

1. Press , , .
2. Use  to highlight an option: **Delete Inbox/ Delete Sent/ Delete Drafts/ Delete All Messages** then press .
3. Use  to highlight **Yes/ No** and press .

Alltel Shop

Alltel Shop

Alltel Shop allows you to do more than just talk on your phone. Alltel Shop is a technology and service that allows you to download and use applications on your phone. With Alltel Shop, it is quick and easy to personalize your phone to suit your lifestyle and tastes. Just download the applications that appeal to you. With a wide range of software available, from ringtones to games to productivity tools, you can be assured that you will find something useful, practical, or down right entertaining.

Downloading Applications

You can download applications and use Alltel Shop anywhere on the network, as long as your handset has a digital signal available. Most applications do

not use a network connection while in use.

Incoming Calls

While downloading an application, incoming calls will automatically be sent to your voice mail, if available. If you do not have voice mail, downloading will not be interrupted by an incoming call, and the caller will receive a busy signal.

When using applications, an incoming call will automatically pause the application and allow you to answer the call. When you complete your call, you can resume using the application.



Alltel Shop

Alltel Shop




1. Alltel Shop

Allows you to download selected applications while displaying the Alltel Shop application list relayed from the Alltel Shop server connection.


1. Press , , .

2. Use  to highlight **Shop Now** and press .

- or -

Press , use  to highlight **Catalog** or **Search**, and press .

Shortcut

Pressing the right arrow key  from standby mode will start Alltel Shop.

Note



If you try to download an application when the file memory is full, the following message will be displayed: "File Memory is full. To make enough storage space to install this app, the following app(s) will be temporarily disabled...You can restore disabled apps by simply starting them, at no additional purchase cost. Proceed?" If you select Yes, the app(s) will be disabled.

2. Alltel Info

Allows you to set the Airtime Charge Warning message that pops up when Alltel Shop is started.

1. To access to this option, scroll to **Alltel Shop** by coming from Contacts menu and pressing Left/Right Navigation Wheel.

Alltel Shop/ Alltel Web






2. Use  to highlight Alltel Info and press .

Managing Your Alltel Shop Applications

Download new applications and delete old ones at anytime.

Deleting Applications

Only removing an application deletes it completely from the memory of the phone. To restore an application once it has been deleted, you will be charged to download it again.




1. Navigate to **Alltel Shop**.
2. Use  to highlight the application you wish to delete and press Left Soft Key  **Options**.
3. Use  to highlight Delete and press .
4. Press Left Soft Key  **Yes**.

Alltel Web

The Alltel Web feature allows you to view Internet content. Access and selections within this feature are dependent upon your service provider. For specific information on Alltel Web access through your phone, contact your service provider.

1. Start Browser

Allows you to initiate an Alltel Web session.

1. To access to this option, scroll to **Alltel Web** by coming from Contacts menu and pressing Left/Right Navigation Wheel.
2. Use  to highlight **Start Browser** and press .
3. Read the displayed message and press .

Alltel Web

4. After a few seconds, you will see the home page.

Ending an Alltel Web Session

End an Alltel Web session by pressing .

Navigating Through the Browser

On-screen items may be presented in one of the following ways:

- **Numbered options**

You can use your numeric keypad or you can select the items by moving the cursor and pressing the appropriate Soft Key(s).


- **Links embedded in content**

You can act on the options or the links by using the Soft Keys at the bottom of the display screen.


- **Text or numbers**

You can select the items by moving the cursor and pressing the appropriate Soft Keys.

Scrolling

Use  to scroll through the content if the current page does not fit on one screen. The currently selected item is indicated by a cursor on the screen.

Fast Scrolling

Press and hold  to quickly move the cursor up and down on the current screen.


Scrolling by Page

Press the Side Keys to move up or down one page at a time.


Soft Keys

To navigate to different screens or select special functions, use the Soft Keys. The function associated with the Soft Keys can change for each page and depends on each highlighted item.

Left Soft Key





Left Soft Key  is used primarily for first options or selecting an item, but its function may change depending on the content displayed.

Right Soft Key



Right Soft Key  is used primarily for secondary options or a menu of secondary options.

Entering Text, Numbers, or Symbols

When prompted to enter text, the current text entry mode

appears above the Right Soft Key  as ABC, abc, Sym, 123, WORD, word. To change the input mode, press Right Soft Key , use  to highlight an option, then press .

Clearing Out Text/Number Entered

When entering text or numbers, press  to clear the last number, letter, or symbol. Press and hold  to clear the input field completely.



Initiating a Phone Call From Mobile Web

You can make a phone call from Mobile Web if the site you are using supports the feature. The browser connection is terminated when you initiate the call. After you end the call, your phone returns to the screen from which you initiated the call.

Alltel Web/ Multimedia

2. Web Settings



Allows you to select a browser alert sound.

1. To access to this option, scroll to **Alltel Web** by coming from another menu and pressing Left/Right Navigation Wheel.
2. Use  to highlight **Web Settings** and press .

Message Notification
(Automatic/ Prompt)



Alert (Prompt/ Alert Beep)

- **Prompt**

Use  to highlight an option and press .

At Start/ At End/ Both/ None

- **Alert Beep**





Use  to highlight an option and press .

Mute/ 2 Beeps/ 4 Beeps

Multimedia

View, take, and trade your digital pictures right from your wireless phone.

1. Take Photo

1. Press , , .
2. Turn the phone counter-clockwise and press Right Soft Key  **Options** to customize.

- **Effects**

Quality/ Zoom/ Brightness/
White Balance/ Color
Effects

- **Settings**

Night Mode/ Self Timer/
Shutter Sound/ Memory
Storage/ AlltelMyPics
Reminder

- * Press Left Navigation Wheel to select other options:
Resolution/ Video/ Take/
Multishot/ Templates
3. Take a picture by pressing **OK**.
 4. Press Right Soft Key **Delete**, **Send**, or Left Soft Key **Save**.
Choose from the following save options:
 - Save to Phone
 - Save to Card memory
 - Set As
 1. Main Screen
 2. Sub Screen
 3. Picture ID
 - Save to AlltelMyPics.net Only
- The picture is stored in **Gallery**.

2. Record Video

1. Press **Menu**, **4 ghi**, **2 abc**.
 2. Turn the the phone counter-clockwise to Record Video.
 3. Press the left navigation wheel and highlight the Brightness option and press **OK**.
 4. Set zoom **Zoom** and press Right Soft Key **Options** to change other settings.
 - Select the options to customize.
- Zoom** Set the zoom with the navigation wheel.




White Balance Auto/ Sunny/ Cloudy/ Tungsten/ Fluorescent

Memory Storage Phone Memory/ Card Memory

Multimedia

AlltelMyPics Reminder

Enable/ Disable

5. Press  to begin recording.
6. Press  to stop recording.
7. Press Right Soft Key 








Delete,  **Send/Set As**, or
Left Soft Key  **Save**.

Choose from the following
save options:

- **Save**
- **Set As**
- **Save to AlltelMyPics.net Only**










3. Record Voice



Allows you to add, listen to, and erase short verbal reminders.

1. Press , , .
2. Press  **Record** to record a new voice memo.
3. Talk into the microphone, then press  **Stop**.
4. Press Left Soft Key  to save.
The default memo title is the date and time of recording.
5. While the highlight is still on the recording, press Right Soft Key  **Options** to access the following:
Rename/ Delete

4. Images







Allows you to select images to customize your phone's Main Screen, Front Screen, or Picture ID.

1. Press , , .
2. Use  to highlight **My Images/ Default** then press .
3. Use  to highlight the image you want to display.
 - Press Right Soft Key  **Options** to access additional options. Use  to highlight an option and press . **Set as/ Take Photo/ Delete/ Rename/ Lock/ View Type/ Information/ Delete Multiple/ Send via Bluetooth/ Send to AlltelMyPics.net**

- Press  **View** to view the selected image.
- Press Left Soft Key  **Send** to send the selected image to somebody else. (This option is only available in My Images).

5. Videos

Allows you to choose video clips.





1. Press , , .
- Press Left Soft Key  **Send** to send the selected video clip to somebody else.
- Press  **Play** to play the selected video clip.
- Press Right Soft Key  **Options** to access and apply options.





Multimedia






Set as/ File Filter/ Record Video/ Delete/ Rename/ Move/Copy / Lock/ List View/ Information/ Delete Multiple/ Sort By/ Send via Bluetooth/ Send to AlltelMyPics.net




6. Audios



Allows you to choose audio clips.




1. Press , , .
2. Press Left Soft Key  **Voice** to record an audio clip.

- Press Left Soft Key  **Audio** to access My Audios list.
- Press  **Record** to begin recording.
- While recording, press Left Soft Key  **Pause** to pause, or  **Stop** to stop recording.

- When you are finished recording, press Left Soft Key  **Save** to save the audio clip,  **Send** to send the audio clip to somebody else, or Right Soft Key  **Options** to access additional options. Use  to highlight **Rename/ Delete** and press .

3. Use  to highlight **My Ringers** and press .
4. Use  to highlight the audio clip.









- Press Left Soft Key  **Send** to send the selected audio clip to somebody else.
- Press  **Play** to play the selected audio clip.

- Press Right Soft Key  **Options** to access additional options. Use  to highlight an option and press .

For **File Filter/ Record Voice/ Delete/ Rename/ Lock/ Information/ Delete Multiple/ Send via Bluetooth**

7. Shuffle

Allows you to set your wallpaper and ringtone to change randomly. If you turn off the phone, the setting is deactivated.

1. Press , , .
2. Use  to highlight **Ringtone List/ Wallpaper List** then press .
3. Use  to highlight the desired ringtones or wallpapers and press  to select them.
4. Press Left Soft Key  **Done** when you are finished selecting the ringtones or wallpapers you wish to add.

By going to Options and selecting Settings can turn this feature on.

Contacts

Contacts

The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory. When you access your Contacts, the number in parentheses represents the number of entries you have stored (up to 1000).


1. New Contact

Allows you to add a new contact to your Contact List.

Note

Using this submenu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry.


1. Press , **5 jkl**, **1** .

2. Enter the name, then press .

3. Highlight the field you wish to store the contact information in.

4. Enter the phone number or e-mail address.

5. Continue adding the desired contact information to the entry.


6. When you are finished entering the desired contact information, press  **Save** to save the entry into your Contact List.


2. Contact List

Allows you to view your Contact List.



1. Press , **5 jkl**, **2 abc**.

2. Choose from the following options:

- Press  to scroll through your Contacts alphabetically.

- Press Right Soft Key  **Options** to select one of the following:

Contact List Search/ Send Message/ Delete/ Edit/ Delete Multiple/ Send via Bluetooth






- Press  **View** to view the contact's information.
- Press Left Soft Key  **New** to store new contact information.

3. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a whole group.

1. Press ,  **jkl**,  **def**.

2. Choose from the following options:







 


- Use  to highlight a group, then press  **View** to view the contacts in the selected group.
- Press Left Soft Key  **New** to add a new member to the group.
- Use  to highlight a group, then press Right Soft Key  **Options** to choose from the following options:

Delete/ Send Message/ Rename Group/ Set Ringtone/ Delete All

Contacts

4. Speed Dials







Allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.

1. Press , , .
2. Use  to highlight the desired Speed Dial location (or enter the Speed Dial digit), and press  **Assign**.
3. Use  to highlight the Contact then press .
4. Use  to highlight the number, then press .

A confirmation message is displayed.

5. My Name Card

Allows you to view all of your personal Contact information including name and phone numbers.

1. Press , , .
2. Use  to highlight the feature you wish to edit, and press Left Soft Key  **Edit**.
3. Edit the information as desired and press .

Note


You cannot edit phone number, but you can add an additional phone number.

Recent Calls

Recent Calls





The Recent Calls Menu is a list of the last phone numbers or Contacts entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Note

To view a quick list of all your recent calls, press Talk Key  from standby mode.





1. Missed Calls

Allows you to view the list of missed calls; up to 40 entries.

1. Press , , .
2. Use  to highlight an entry.





2. Received Calls

Allows you to view the list of incoming calls; up to 40 entries.

1. Press , , .
2. Use  to highlight an entry.




3. Dialed Calls

Allows you to view the list of outgoing calls; up to 40 entries.

1. Press , , .
2. Use  to highlight an entry.

4. All Calls






Allows you to view the list of missed, received and dialed calls; up to 120 entries.

1. Press , , .
2. The history of all calls are displayed.

Recent Calls

5. Call Timer

Allows you to view the duration of selected calls.

1. Press , , .
2. Use  to highlight a call list, then press .

Last Call/ Home Calls/ Roam Calls/ All Calls



6. Data

Allows you to view the list of data calls; up to 40 entries.

1. Press , , .
2. Use  to highlight an entry.

7. Data Counter

Allows you to view the list of received and transmitted data calls.

1. Press , , .
2. Use  to highlight a data call list, then press .



Received Data/ Sent Data/
All Data

Music

Music

Allows you to transfer songs stored in your memory card. For the availability of this feature, there should be stored music in your memory card.

Tip

To access the music menu, just touch music  on the left navigation wheel key or keep pressed the key () on the right side of the phone.

Note

Avoid Hearing Damage

Warning: Permanent hearing loss may occur if speakerphone, earphones or headphones are used at high volume over a long period of time.



You can adapt over time to a higher volume of sound, which may sound normal but can be damaging to your hearing.

We, therefore, recommend that you DO NOT turn on the handset in close proximity of your ears or if the earphones are plugged in. Please set your music and call volume to a safe level.

1. All Songs

1. Press , , .

2. Select the song with the navigation wheel to play.

3. Press Left Soft Key 
Mute or Right Soft Key 
Options.

Add to Playlist/ Search by
Window/ Delete/ Rating/
Information/ Equalizer/
Settings

Or (When playing music)

Minimize/ Now Playing/
Full Player/ Search by
Window/ Rating/ Equalizer/
Music Transmitter/
Information/ Settings

Music

2. My Playlists

Allows you to check the recently played lists or rated songs.

1. Press **(Menu)**, **7** **pgs**, **2** **abc**.
2. Select **Recently Played** or **Rated**.

3. Artists

Allows you to check the artist of the songs stored on the phone.

1. Press **(Menu)**, **7** **pgs**, **3** **def**.
2. With the navigation wheel, select the artist to view and press **(OK)**.

4. Albums

Allows you to view and listen to music by album.

1. Press **(Menu)**, **7** **pgs**, **4** **ghi**.

2. With the navigation wheel, select the album to view and press **(OK)**.

5. Genres

Allows you to view and listen to music by genre.

1. Press **(Menu)**, **7** **pgs**, **5** **jkl**.
2. With the navigation wheel, select the genre to view and press **(OK)**.

6. Settings

Allows you to customize music settings.

1. Press **(Menu)**, **7** **pgs**, **6** **mno**.
2. With the navigation wheel, select the option to customize.

Music/ Tools

Shuffle On/ Off

Repeat Repeat Off/ Repeat
One/ Repeat All

Equalizer Natural Sound/
Flat/ Live/ Virtual Bass/
Comfort/ Clear

Play Mode List Player/ Full
Player

Visualization Album View/
Spectrum View

Music Highlight Cursor 1/
Cursor 2/ Cursor 3/ Cursor
4/ Off

Background Music Prompt/
Always On/ Always Off

Tools

Your phone tools include: Voice
Command, My Menu, Alarm
Clock, Calendar, Ez Tip Calc,
Notepad, Calculator, World
Clock, Stopwatch, and Unit
Converter.

1. Voice Command

Allows you to make phone calls
quickly and easily by voice. Your
phone recalls the number from
your Contacts, displays it briefly,
and then dials it. This menu also
includes a feature for those who
are driving or blind. It delivers time
information by voice and allows
you to check missed calls,
messages and voicemails.

1. Press , **8** , **1** , **1**  .
2. When prompted, say "Call".








Tools

- When prompted, say the name or phone number of the Contact you want to call. The phone will ask you to confirm the name or phone number before dialing.

Call <Name> or <Number>/
Voicemail/ Missed Calls/
Messages/ Time & Date/
Help









2. My Menu




Allows you quick access to your favorite menus. A maximum of 12 items can be stored in My Menu.

- Press , , .
- Select the location of your choice by using , then press .
- Select the menu you wish to add to My Menu by using , then press .

3. Alarm Clock











Allows you to set up to five alarms. At the alarm time, any set alarm will sound the tone of your choice, and an alarm message will be displayed on the LCD screen.





- Press , , .
- Use  to highlight the alarm you wish to set, then press  to select it.
- Press Left Soft Key  Set to set the alarm time.
- Use  to highlight Repeat (recurrence setting).
- Press  to select one of the following:
Once/ Daily/ Mon - Fri/ Weekends

6. Use  to highlight **Ringtones**, press Left Soft Key  **Set** and select a ringtone.
7. Press  **Save**.

4. Calendar

Allows you to store and access your agenda(s). Simply enter your appointments in the Calendar, and your phone will alert you with a reminder.

1. Press ,  **8**  **Tues**,  **4**  **Fri**.
2. Use  to highlight the scheduled day.
 -  Moves cursor to the left.
 -  Moves cursor to the right.
 -  Moves to the previous week.
 -  Moves to the next week.

3. Press Left Soft Key  **New**.
4. Use  to highlight the field you wish to edit, then press Left Soft Key  **Set** to edit your schedule information:
 - Set Time • Subject
 - Reminder • Repeat
 - Repeat End • Ringtone
5. Press  **Save**.

5. Ez Tip Calc






Allows you to quickly and easily estimate the tip and total amount of a bill by inputting the bill amount before tip, the tip percentage, and dividing it by the number of people paying.

1. Press ,  **8**  **Tues**,  **5**  **Fri**.

Tools





6. Notepad




 
Allows you to add, read, edit, and erase notes to yourself.

1. Press , , .
2. Press Left Soft Key  **New** to write a new note.
3. Type the note, then press .

A confirmation message displays briefly, then displays your list of notes.

Viewing a Notepad Entry



1. Access Notepad and highlight the entry.
2. To erase, press Right Soft Key  **Options**.
 -  **Delete**
 -  **Edit**
 -  **Delete All**



To edit a note, highlight the entry, then press  **View** and press Left Soft Key  **Edit**. Or press Right Soft Key  **Options** and  **Edit**.

7. Calculator

Allows you to perform simple mathematical calculations. You can enter numbers up to eight digits.





1. Press , , .
2. Enter data.



- Use keypad to enter numbers.
- Use  to enter decimals.
- Press Left Soft Key  **Clear** to the entry.

- Press Right Soft Key  **Operator** for additional calculating options.
- Use Navigation Keys to enter functions.
- Press  to complete equation.

8. World Clock








Allows you to determine the current time in another time zone or country.

1. Press , , .
2. Press Right Soft Key  **Cities** to select a specific city and display the date/time in that location.
3. Use  to scroll through all available cities on the map.

4. Press  to select the highlighted city.
5. Press Left Soft Key  **Set DST**.

9. Stopwatch








Stopwatch is available just as common stopwatches we see and use in daily life.

1. Press , , .
2. Press  **Start** to start, and press  **Stop** to stop.
 - You can use the Lap function by pressing Right Soft Key  **Lap** to record up to 20 laps and lap times.
3. Press Left Soft Key  **Reset** to reset.

Tools/ Settings

0. Unit Converter

Allows you to measure Area, Length, Temperature, Mass, Volume and Velocity.

1. Press , , .
2. Use  to highlight a desired unit and press .
3. Enter the value and the conversion is displayed automatically. Press Left Soft Key  Reset to reset or Right Soft Key  Close to close the menu.








Settings

1. Sound

Options to customize your phone's sounds:

1.1 Ringers

Allows you to assign ringtones for incoming calls.

1. Press , , , .
2. Select **All Calls/ Caller ID/ No Caller ID/ Restricted Calls/ Shuffle/ Buy Ringtones.**
3. Use  to highlight the ringtone.
4. Press  **Play** to preview the ringtone, and Left Soft Key  **Set** to set the ringtone to your phone.

1.2 Volume

Allows you to set various volume settings.

1. Press , , , .
2. Select **Master Volume/ Keypad/ Earpiece/ Speaker**.
3. Use to adjust the volume of the ringer, then press to save the setting.

1.3 Message Alerts

Allows you to select the alert tone for a new message, and set the frequency of the Message Reminder.

1. Press , , , .
2. Select **Text Message/ Picture Message/ Voicemail/ All Messages/ Message Reminder**.
3. Use to select a setting, then press .

1.4 Alert Type

Allows you to select the alert types.

1. Press , , , .
2. Use to highlight the alert you wish to edit.
Call Alert/ Message Alerts/ Schedule Alert/ Alarm Alert
3. Use to scroll through the alert types.
Ring Only/ Vibrate Only/ Ring & Vib
4. Press to save.

1.5 Service Alerts

Allows you to set any of the 3 Alert options to On or Off.

1. Press , , , .
2. Select an alert option.

Settings

1.5.1 Minute Beep

Alerts you 10 seconds before the end of every minute during a call.

1.5.2 Call Connect

Alerts you when the call is connected.

1.5.3 Back to Top

Alerts you when you scroll through the end of a menu list.







1.5.4 Low Battery

Alerts you when the battery charge level is low.

For Low Battery option,
Announce/ Tone







1.6 Power On/Off Tone

Allows you to set the phone to sound a tone when the phone is powered on and off.

1. Press , , , .
2. Use  to set to **On/ Off**, then press .

1.7 Slide Tone

Allows you to set a flip tone that will play when you flip your phone open or closed.






1. Press , , , .
2. Use  to set to **On/ Off**, then press .

2. Display



Options to customize your phone's display screen.

2.1 Wallpaper



Allows you to choose the kind of background to be displayed on the phone.

1. Press , , , .
2. Select **Main Screen/ Sub Screen/ Shuffle/ Buy Wallpaper**, then press .

2.1.1 Main Screen

From the Main Screen select **My picture** and highlight an image from **My Image** or **Default**, and press  **View** to view the image, and Left Soft Key  **Set** to set it as the wallpaper.

2.1.2 Sub Screen

Highlight an image from **My Images** or **Default**, and press  **View** to view the image, and Left Soft Key  **Set** to set it as the wallpaper.

2.1.3 Shuffle





Set **Shuffle** to **On** or **Off**, set it to **Main Screen** and set the repeat frequency.

2.1.4 Buy Wallpaper





Purchase wallpapers for your phone.

2.2 Banner

Allows you to enter a string of characters which display on the LCD screen.



1. Press , , , .
2. Use  to scroll between **On/ Off**.

Settings



3. Use  to highlight the message window.
4. Input text and press Left Soft Key  **ABC** to change text options,  **Save** to save, or Right Soft Key  **Cancel** to cancel editing your banner.

2.3 Backlight

Allows you to set the duration for illuminating the backlight.




1. Press , **9 wxyz**, **2 abc**, **3 def**.
2. Choose a submenu, then press .

Display/ Keypad

3. Use  to select a setting, then press .

2.4 Wheel Board



When set as On, My Menu is displayed on idle screen.

1. Press , **9 wxyz**, **2 abc**, **4 ghi**.
2. Use  to set to On/ Off, then press .









2.5 Menu Style

Allows you to view the Menu as an Icon or Arc List display.

1. Press , **9 wxyz**, **2 abc**, **5 jkl**.
2. Select Icon or Arc and press .






2.6 Languages

Allows you to set the bilingual feature according to your preference. Choose between English and Spanish.



1. Press , , , .
2. Use  to select **English** or **Spanish**, then press .

2.7 Clocks & Calendar

Allows you to select the type of clocks displayed on the main LCD or sub LCD.






1. Press , , , .
2. Choose a sub-menu and press .

Main Screen/ Sub Screen



3. Use  to highlight an option and press .

2.8 Font Settings

Allows you to select the type of font displayed on LCD.

1. Press , , , .
2. Choose a sub-menu and press .

**Font Type/ Dial Font Style/
Dial Font Size**

3. Use  to highlight an option, then press .

Options for Font Type

LG Arial/ LG Script/ LG Serif

Options for Dial Font Style

**Robot/ Green Lawn/
Painter/ Basic**



Options for Dial Font Size

Normal/ Large

Settings

2.9 Color Schemes




Allows you to choose the color of the background screen.

1. Press , **9 ways**, **2 abc**, **9 ways**.
2. Choose a sub-menu and press .

Black/ White

2.0 Name Match for Dialing

Allows you to set name match for dialing.




1. Press , **9 ways**, **2 abc**, **0 next**.
 3. Use  to highlight an option and press .
- On/ Off**



3. Security

The Security menu allows you to secure the phone electronically.

3.1 Lock Phone

Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can still receive phone calls and make emergency calls. You can modify the lock code by setting a New Lock code within the Security menu.

1. Press , **9 ways**, **3 def**.
 2. Enter the four-digit lock code and press .
- The default lock code is commonly the last 4 digits of your phone number.
3. Press  **Lock Phone**.

4. Use  to select an option, then press .

Unlock The phone is never locked (Lock mode can be used).

Lock The phone is always locked. When locked, you can receive incoming calls and make only emergency calls.

On Power Up The phone is locked when it is turned on.

3.2 Restrictions

Allows you to restrict Calls, Messaging, Camera or Data.



Note

You can receive the incoming calls from saved contacts on your phone, when Incoming Only is on.

1. Press , , .

2. Enter the four-digit lock code and press .


3. Press  Restrictions and enter the four digit code.

4. Use  to select **Calls/ Messaging/ Camera/ Data**, then press .


3.3 Emergency #s

Allows you to enter 3 emergency numbers. You can call these emergency numbers and 911, even when the phone is locked or restricted.



1. Press , , .

2. Enter the four-digit lock code and press .

3. Press  **Emergency #s**.







4. Press  to edit the emergency numbers.

Settings

- When you are finished editing the number, press  **Save** to save, or Right Soft Key  **Cancel** to cancel editing.



 






3.4 Change Lock Code

Allows you to enter a new four-digit lock code.

- Press , , .
- Enter the four-digit lock code and press .
- Press  **Change Lock Code** and select Phone only/Call & Applications.
- Enter a new 4-digit lock code and press .
- For confirmation, it will ask you to enter the new lock code again.

3.5 Reset Default

Allows you to reset your phone to the factory default settings.

- Press , , .
- Enter the four-digit lock code and press .
- Press  **Reset Default**.
- Read the displayed message and press  to continue.
- A message will pop up that says "Preference settings will be set to factory defaults. Press <OK> to continue." Press .
- Use  to highlight an option and press . **Revert/ Cancel**.

4. Call Settings

The Call Settings menu allows you to designate how the phone handles both incoming and outgoing calls.

4.1 Answer Options

Allows you to determine how to handle an incoming call.

1. Press , , , .
2. Use to select a setting, then press .

Slide Open/ Any Key/ TALK Key Only/ Auto Answer

4.2 End Call Options

Allows you to customize ending call options.

1. Press , , , .
 2. Use up/down to select a setting, then press .
- Slide Down/ End Key Only

4.3 Auto Retry

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

1. Press , , , .
2. Use to select a setting, then press .

Off/ Every 10 Seconds/
Every 30 Seconds/ Every 60
Seconds

4.4 One-Touch Dial




Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Off, Speed Dial numbers designated in your Contacts will not function.

1. Press , , , .
 2. Use to select a setting, then press .
- On/ Off

Settings

4.5 Voice Privacy





Allows you to set the voice privacy feature for CDMA calls as Enhanced or Standard. CDMA offers inherent voice privacy. Check with your service provider for availability.

1. Press , **9** wxyz, **4** ghj, **5** jkl.
2. Use  to select a setting, then press .

Enhanced/ Standard





4.6 Airplane Mode

Only allows you to use features on your phone that do not require wireless communications.

1. Press , **9** wxyz, **4** ghj, **6** mnd.
 2. Read the displayed message and press  to continue.
 3. Use  to select a setting, then press .
- On/ Off**

4.7 TTY Mode






Allows you to attach a TTY (Teletype writer) device, enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. Press , **9** wxyz, **4** ghj, **7** pqrs.
2. Read the displayed message and press  to continue.
3. Use  to select a setting, then press .

**TTY Full/ TTY + Talk/
TTY + Hear/ TTY Off**

5. Touch Pad

Allows you to customize touch pad settings.

1. Press , , .
2. Use  to select a setting, then press .

Vibrate/ Touch Color/
Wheel LED/ Sensitivity

6. Bluetooth®

The LG Rhythm™ is compatible with devices that support the *Bluetooth* headset and hands-free profile(s)*. You may create and store 20 pairings within the LG Rhythm™ and connect to one device at a time. The approximate communication range for *Bluetooth* wireless technology is up to 30 feet (10 meters).

Bluetooth QD ID B014197

Note

Read user guide of each *Bluetooth* accessory that you are trying to pair with your phone because the instructions may be different.

The *Bluetooth* features available on this handset may not be compatible with all *Bluetooth* enabled devices. Your service provider or handset manufacturer cannot be held responsible for compatibility issues with devices not sold by the service provider or handset manufacturer.







6.1 Paired Devices

Pairing is the process that allows the handset to locate, establish and register 1-to-1 connection with the target device.

For pairing new Bluetooth® device







1. Press , , , .
2. Follow the *Bluetooth* accessory instructions to set the device to pairing mode.

Settings

3. If *Bluetooth* power is set to off, you will be prompted to turn power on. Highlight Yes  and press .
4. The device will appear in the Add New Device menu once it has been located. Highlight the device and press .
5. The handset will prompt you for the passkey. Consult the *Bluetooth* accessory instructions for the appropriate passkey (typically "0000" - 4 zeroes). Enter the passkey and press .
6. Once pairing is successful, select Yes  and press  to connect with the device.
7. Once connected, you will see the device listed in the Paired Devices menu.

6.2 Power

Allows you to set the power On/Off.

1. Press , , , .
2. Use  to select a setting, then press .







On/ Off

Note

By default, your device's *Bluetooth* functionality is turned off.

6.3 My Visibility

Allows you to set the visibility of your Bluetooth device.

1. Press , , , .
2. Use  to select a setting, then press .

Visible/ Hidden

Note

If you turn on My Visibility, your device is able to be searched by other in-range *Bluetooth* devices.

6.4 My Bluetooth Name

Allows you to edit the name of the *Bluetooth* device.

1. Press , , , .
2. Hold down to clear the existing name.
3. Use the alphanumeric keypad to enter a new alias.
4. Press to save and exit, or Right Soft Key Cancel to cancel editing.

6.5 My Bluetooth Info

Allows you to view the information of the *Bluetooth*.

1. Press , , , .

7. PC Connection

Allows you to select the data port.

1. Press , , .
2. Use to select a setting, then press .

USB Modem/ USB Mass
Storage/ Bluetooth/
Setting Reminder

8. System

The System menu allows you to designate specific system network settings.








8.1 Network

8.1.1 System Select

Allows you to set up the phone producer's management environment. Leave this setting as the default unless you want to alter system selection as








Settings

instructed by your service provider.

1. Press , , , , .
2. Use  to highlight **Home Only/ Automatic** then press .








8.1.2 Set NAM

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Press , , , , .
2. Use  to highlight **NAM1** or **NAM2**, then press .

8.1.3 Auto NAM

Allows the phone to automatically switch between programmed telephone numbers corresponding to the service provider area.

1. Press , , , , .
2. Use  to highlight **On** or **Off**, then press .







8.1.4 Serving System

Identifies the channel number of a system that is served as a SID Number. This information should only be used for technical support.

1. Press , , , , .

8.2 Location

Menu for GPS (Global Positioning System: Satellite assisted location information system) mode.






1. Press , , , .
 2. Use  to highlight a setting, then press .
- Location On/ E911 Only**

Note

GPS satellite signals are not always transmitted, especially under bad atmospheric and environmental conditions, indoors etc.






9. Memory

Allows you to check out the memory status of your phone.

1. Press , , .
2. Use  to highlight **Save Option/ Phone Memory/ Card Memory**, and press .

0. Alltel Shop & Web






Refer to page 43 ~ 48 for more information.

1. Press , , .
2. Select  **Alltel Info** or  **Web Setting**.
3. Select **Yes**.

Settings






*. Software Update

Allows you to check the current software version and update if needed. Refer to supplied service provider's brochure.

1. Press , , .
2. Select  **Check for Update.**
3. Press .

#. Phone Info

The Phone Info menu provides you with specific information pertaining to your phone model.

1. Press , , .
2. Use  to highlight an option and press , or press the corresponding number key.

**My Number/ ESN/MEID/
Icon Glossary/ Version**

XM Radio

Airtime charges may apply. Start [Alltel Apps]?

ZUMA

Airtime charges may apply. Start [Alltel Apps]?

Ringtones

Airtime charges may apply. Start [Alltel Apps]?

Safety

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-ionizing Radiation Protection.

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments

Safety

could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and

always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association

recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that

interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas

Safety

instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air.

Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations);

below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all times after reading it.

Caution! *Violation of the instructions may cause minor or serious damage to the product.*

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Use the correct adapter for your phone when using the battery pack charger abroad.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.

Safety

Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery doesn't need to be empty before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, Browser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire

Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug,

ensure that it's firmly connected. If not, it may cause excessive heat or fire.

- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Do not disassemble or crush the battery. It may cause a fire.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.

Safety

- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Warning! Important safety information

Avoiding hearing damage

Permanent hearing loss may occur if you use your phone and/or headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you

experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use your phone and/or headset at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your phone, see the features guide for your phone.

Using your phone safely

Use of your phone while

operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using your phone if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.

Safety



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known

adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF)

energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the

best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

Safety

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit

connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that

had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from

Safety

wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more

years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that

high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on

wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures.

Safety

The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website

(<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental

Techniques”, sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not

Safety

demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by

other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method

to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and

performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones
(<http://www.fda.gov/cellphones/>)
Federal Communications

Safety

Commission (FCC) RF Safety Program
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project
(<http://www.who.int/emf>)

National Radiological Protection Board (UK)
(<http://www.hpa.org.uk/radiation/>)

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When

using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these

devices if available to you.

3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
 4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
 5. Don't take notes or look up phone numbers while driving.
- If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip -- dial only a few numbers, check the road and your mirrors, then continue.

Safety

7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations -- with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a

hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

Consumer Information on SAR

(Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Counsel on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and

Safety

engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC

with the phone transmitting at its highest certified power level in all tested frequency bands.

Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2.0 cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.79 inches (2.0 cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

The FCC has granted an Equipment Authorization for this

model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

The highest SAR value for this model phone when tested for use at the ear is 0.798 W/kg and when worn on the body, as described in this user's manual, is 0.552 W/kg. While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID.

To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed

Safety

somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this

interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or

 
 
M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is

Safety

considered for best use.

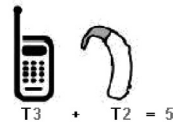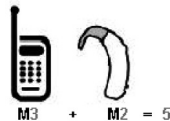

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This is synonymous for T ratings. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be

synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

For information about hearing aids and digital wireless phones

FCC Hearing Aid Compatibility and Volume Control

<http://www.fcc.gov/cgb/dro/hearing.html>

Gallaudet University, RERC

<http://tap.Gallaudet.edu/DigWireless.KS/DigWireless.htm>

Hearing Loss Association of America [HLAA]

<http://www.hearingloss.org/learn/cellphonetech.asp>

The Hearing Aid Compatibility FCC Order

http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf

Accessories

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability. Optional items are sold separately.

Charger

The battery charger allows you to charge your phone.



USB Cable



Battery

Standard battery is available.



Vehicle Power Charger

The vehicle power charger allows you to operate the phone and trickle charge the phone's battery from your vehicle.



Stereo Headset Adaptor With Microphone



Limited Warranty Statement

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or

transferable to any subsequent purchaser/end user.

- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service

Limited Warranty Statement

Limited Warranty Statement

Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts
- which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise,

including, but not limited to any implied warranty of marketability or fitness for a particular use.

- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. WHAT LG WILL DO:

"LG will, at its sole option, either repair, replace or refund the

purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information."

4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

Limited Warranty Statement

LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

5. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit <http://us.lgservice.com>. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets

P.O. Box 240007, Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS. Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

Index

1

10 Driver Safety Tips 102

A

Accessories 112
 Airplane Mode 76
 Alarm Clock 62
 Albums 60
 Alert Type 67
 All Calls 57
 All Messages 40
 All Songs 59
 Alltel Shop & Web 81
 Answer Options 75
 Artists 60
 Audios 52
 Auto NAM 80
 Auto Retry 75
 Access Apps 44
 Access Info 44
 Access Shop 43
 Access Web 45

B

Backlight 70

Banner 69
 Battery Charge Level 21
 Bluetooth® 77

C

Calculator 64
 Calendar 63
 Call Settings 75
 Call Timer 58
 Call Waiting 24
 Caller ID 25
 Change Lock Code 74
 Charging the Battery 20
 Clocks & Calendar 71
 Color Schemes 72
 Consumer Information on SAR 105
 Contact List 54
 Contacts 54
 Contacts in Your Phone's Memory 27
 Correcting Dialing Mistakes 23

D

Data 58
 Data Counter 58
 Delete All 42
 Dialed Calls 57
 Display 69
 Drafts 39

E

Edit Voicemail # 42
 Emergency #s 73
 End Call Options 75
 Entering and Editing Information 26
 Ez Tip Calc 63

F

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices 108
 FDA Consumer Update 92
 Font Settings 71

Index

G

Genres 60
Getting Started with
Your Phone 20
Groups 55

I

Images 51
Important Safety
Precautions 1
Inbox 36
Index 117

L

Languages 71
Limited Warranty
Statement 113
Location 81
Lock Mode 24
Lock Phone 72

M

Making a Call From
Your Phone's
Memory 30

Making Calls 22
Memory 81
Menu Style 70
Menus Overview 17
Message Alerts 67
Messaging 32
Missed Calls 57
Multimedia 48
Music 59
Mute Function 24
My Bluetooth Info 79
My Bluetooth Name
79
My Menu 62
My Name Card 56
My playlists 60
My Visibility 78

N

Name Match for
Dialing 72
Network 79
New Contact 54
New Picture
Message 34
New Text Message 32

Notepad 64

O

One-Touch Dial 75

P

Paired Devices 77
PC Connection 79
Phone Info 82
Phone Numbers With
Pauses 27
Phone Overview 14
Picture Message 42
Power 78
Power On/Off Tone 68

Q

Quick Access to
Convenient Features
24

R

Received Calls 57
Receiving Calls 23
Recent Calls 57

Record Video 49
 Record Voice 50
 Redialing Calls 23
 Reset Default 74
 Restrictions 73
 Ringers 66
 Ringtones 82

S

Safety 83
 Safety Information 87
 Screen Icons 22
 Searching Your Phone's
 Memory 29
 Security 72
 Sent 38
 Service Alerts 67
 Serving System 80
 Set NAM 80
 Settings 40, 60, 66
 Shuffle 53
 Signal Strength 22
 Slide Tone 68
 Software Update 82
 Sound 66
 Speed Dialing 25

Speed Dials 56
 Start Browser 45
 Stopwatch 65
 System 79

T

Table of Contents 4
 Take Photo 48
 Technical Details 10
 Templates 40
 Text Input 26
 Text Message 41
 The Basics of Storing
 Contacts Entries 27
 The Battery 20
 TIA Safety Information
 83
 Tools 61
 Touch Pad 77
 TTY Mode 76
 Turning the Phone On
 and Off 21

U

Unit Converter 66
 Using Phone

Menus 32

V

Videos 51
 Voice Command 61
 Voice Privacy 76
 Voicemail 39
 Volume 67
 Volume Quick
 Adjustment 24

W

Wallpaper 69
 Warning! Important
 safety information 90
 Web Settings 48
 Welcome 9
 Wheel Board 70
 World Clock 65

X

XM Radio 82

Z

ZUMA 82