 



© Vodafone Group 2008. Vodafone and the Vodafone logos are trade marks of the Vodafone Group. Any product or company names mentioned herein may be the trade marks of their respective owners.
P/N : MMBB0317002 (1.0) H

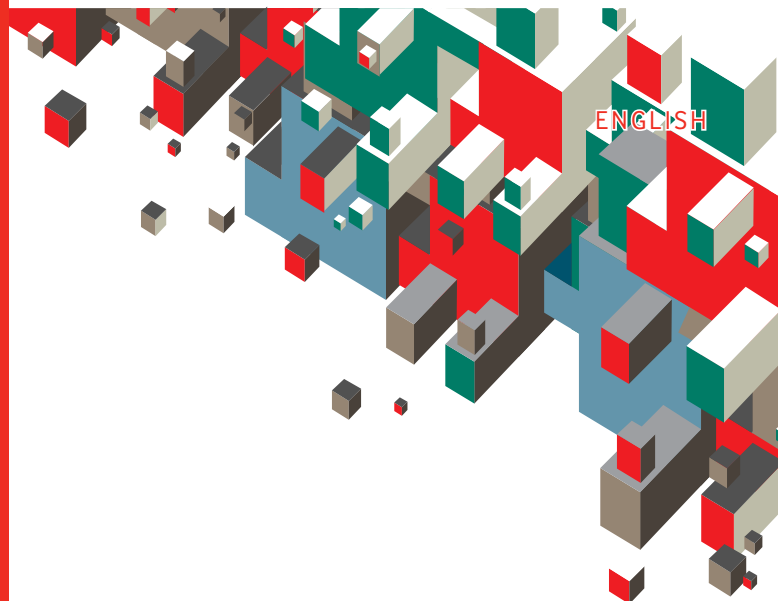

User Guide LG KS500



 Bluetooth QD ID B014526

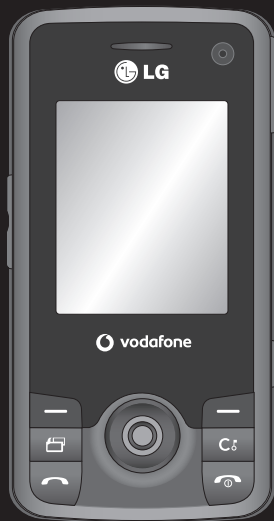

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

KS500 User Guide

Congratulations on your purchase of the advanced and compact KS500 phone by LG, designed to operate with the latest digital mobile communication technology.



Disposal of your old appliance

- 1** When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2** All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3** The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4** For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Set up **01**

Your standby screen **02**

The basics **03**

Get creative **04**

Get organised **05**

The web **06**

Settings **07**

Accessories **08**

Contents

Guidelines	
Guidelines for safe and efficient use	8
Set up	
Getting to know your phone	14
Inserting the SIM and Battery	16
Memory card	18
Menu map	20
Your standby screen	
Thumbpad	22
The main menu	22
The status bar	23
The basics	
Calls	24
Making a voice call	24
Making a video call	24
Making a voice/video call from Contacts..	24
Making international calls	25
Answering and rejecting a call.....	25
Speed dialling	25
Making a second call	25
DTMF Tone.....	25
Viewing your call logs	25
Using call divert.....	26
Using call barring.....	26
Changing the common call setting.....	27
Changing your video call settings	27
Contacts	28
Searching for a contact.....	28
Adding a new contact.....	28
Contact options.....	29
Creating a group.....	29
Using service dial numbers.....	30
Viewing your own number.....	30
Creating a business card	30
Changing your contact settings.....	30
Messaging	31
Messaging	31
Sending a message	31
Entering text	31
T9 predictive	31
Abc manual.....	32
Message folders.....	32
Managing your messages.....	32
Using templates	33
Using emoticons	33
Message settings	33
Changing your text message settings.....	33
Changing your multimedia message settings.....	33
Changing your other settings	34

28	E-mail	35	Multimedia	42
28	Setting up your email	35	Pictures	42
28	Sending an email using your new		Pictures options menu	42
29	account	35	Sending a photo	42
29	Changing your email settings	35	Using an image	43
30	Get creative		Organising your images	43
30	Camera	36	Deleting an image	43
30	Taking a quick photo	36	Moving or copying an image	43
30	After you've taken your photo	36	Marking and unmarking images	43
31	Using the toolbar	36	Creating a slide show	44
31	Changing the image size	37	Checking your memory status	44
31	Viewing your saved photos	37	Sounds	44
31	Choosing a shot mode	37	Using a sound	44
31	Using burst shot mode	38	Videos	44
32	Using a frame shot mode	38	Watching a video	44
32	Video camera	39	Using options while video is	
32	Shooting a quick video	39	paused	44
33	After you've shot your video	39	Sending a video clip	45
33	Using the toolbar	39	Using a video clip as a ringtone	45
33	Watching your saved videos	40	Using the video options menu	45
33	Adjusting the volume when		Games and Applications	45
33	viewing a video	40	Downloading a game	46
33	Your photos and videos	41	Playing a game	46
34	Editing photo album options		Using the games options menu	46
34	menu	41	Flash contents	46
34	Editing video album options menu	41	Viewing an SWF/SVG file	46
34	Viewing your photos and videos	41	Using options viewing the SWF/SVG file	46
34	Adjusting the volume		Transferring a file to your phone	46
34	when viewing a video	41	Others	47

Contents

Music.....	47	The web	
Transferring music onto your phone.....	47	Vodafone live!.....	54
Playing a song.....	48	Accessing the web.....	54
Using options while playing music.....	48	Adding and accessing your bookmarks....	54
Creating a playlist.....	48	Saving a page.....	54
Editing a playlist.....	48	Accessing a saved page.....	54
Deleting a playlist.....	49	Viewing your browser history.....	55
		Using RSS reader.....	55
Get organised		Adding the Feed.....	55
Organiser & Tools.....	50	Updating the RSS reader.....	55
Adding an event to your calendar.....	50	Changing the web browser settings.....	55
Changing your default calendar view.....	50	Using your phone as a modem.....	56
Adding an item to your to do list.....	50	Using Bluetooth.....	56
Sharing a to do item.....	51	Settings	
alarm.....	51	Settings.....	57
Adding a memo.....	51	Changing your screen settings.....	57
Using your calculator.....	51	Personalising your profiles.....	57
Converting a unit.....	52	Changing your phone settings.....	57
Adding a city to your world time.....	52	Changing your connectivity settings.....	58
Using voice recorder.....	52	Using memory manager.....	59
Recording a sound or voice.....	53	Using flight mode.....	60
Sending the voice recording.....	53	Sending and receiving your files using Bluetooth.....	60
		Pairing with another Bluetooth device.....	61
		Using a Bluetooth headset.....	61

54
54
54
54
55
55
55
55
56
56

57
57
57
57

58
59
60

60

61
61

Accessories 62
Network service 63
Technical data 63

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg*. Tests for SAR are conducted using standard operating positions with the device transmitting at its

highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the device. Before a phone model is available for sale to the public, compliance with the European R&TTE directive must be shown. This directive includes as one essential requirement the protection of the health and the safety for the user and any other person.

The highest SAR value for this device when tested for use at the ear is 0.874 W/kg.

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission

of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed. The highest SAR value for this device when tested for use at the body is 1.36 W/kg.

* The SAR limit for mobile devices used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band.

For SAR information in other regions please look under product information at www.lgmobile.com.

FCC SAR information

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over 1 gram of tissue. The highest SAR value reported under this standard during product certification for use at the ear is 0.506W/kg

and when properly worn on the body is 0.225 W/kg.

Additionally, this device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2cm) between the users body and the back of the phone.

To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches(2cm) must be maintained between the user's body and the back of the phone.

*** FCC Notice & Caution**

Notice!

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Guidelines for safe and efficient use

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not press the antenna unnecessarily.

Efficient phone operation

Electronic and medical devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Please consult your doctor to determine if operation of your phone may interfere with the operation of your medical device.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

Guidelines for safe and efficient use

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not press or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

- Use your wireless phone to call emergency services for yourself or others. In the case of fire, traffic accident or medical emergencies;
 - Australia: Dial 0-0-0,
 - New Zealand: Dial 1-1-1,
 - International: Dial 1-1-2,
 - other local emergency number.Remember, it is a free call on your wireless phone for emergency services.
- Use your wireless phone to help others in emergencies, if you see an auto accident crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.


Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

Getting to know your phone

Inner camera


Main screen

Clear key 

Deletes a character with each press.

Call key 

 
Dials a number or answers an incoming call.

End/Power key 

Ends or rejects a call. Turns the phone on/off. Press once to return to the standby screen.



Charger, USB Cable,
Handsfree connector

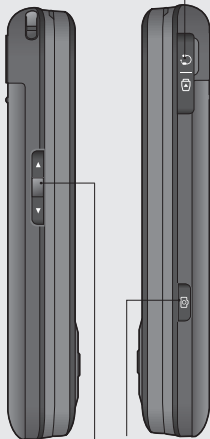

Capture button

Volume



Micro SD card slot

External camera lens

Battery cover



Battery

SIM card slot

01

02

03

04

05

06

07

08

Set up

15

Inserting the SIM and Battery

 


1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.


⚠ WARNING: Do not use your fingernail when removing the battery.

⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

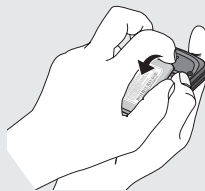


2 Remove the battery

 Lever the bottom edge of the battery and remove it carefully from the battery compartment.

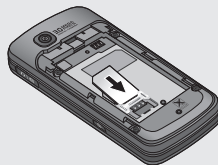

3 Insert the SIM card

 Slide the SIM card into the SIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the reverse direction.

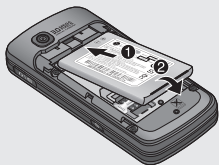

4 Install the battery

Insert the top of the battery into the top edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clips into place.



5 Replace the battery cover

Slide the battery cover towards the top of the phone until it clicks into place.



6 Charging your phone

Pull open the cover of the charger socket on the side of your KS500. Insert the connector on your charger, and plug into a mains electricity socket. Your KS500 will need to be charged until the message "Battery full" appears on the screen.

01

02

03

04

05

06

07

08

Set up

17

Memory card

Installing a memory card

You can expand the memory space available on your phone using a memory card. The KS500 will support up to a 8GB memory card.

TIP! A memory card is an optional accessory.


- 1 Remove the Micro SD cover.
- 2 Slide the memory card into the slot at the top, until it clicks into place. Make sure that the gold contact area is facing downwards.



- 3 Replace the Micro SD cover.

Formatting the memory card

If your memory card is already formatted, you can begin using it. If your card isn't formatted you will need to do so.


- 1 From the standby screen press , select **Settings** and choose **Phone settings**.
- 2 Select **Memory manager** then choose **External memory**.
- 3 Select **Format** and then confirm your choice.
- 4 Enter the password, if one is set, and your card will be formatted and ready to use.

TIP! To change your default storage destination, open Memory manager from the Phone settings menu and select Primary storage settings.

NOTE: If your memory card has existing content it will automatically be filed in the correct folder. For example, videos will be stored in the My videos folder.

Transferring your contacts

To transfer your contacts from your USIM to your phone:

- 1 From the standby screen select  and choose **Contacts**.
- 2 Select **Contact settings** then **Copy**.
- 3 Choose **USIM to Handset**.
- 4 Choose **All together** or **One by one** and press to select Done.

01

02

03

04

05

06

07

08

Set up

19

Menu map



Vodafone live!

- 1 Vodafone live!
- 2 Enter address
- 3 Bookmarks
- 4 RSS reader
- 5 Saved pages
- 6 History
- 7 Browser settings



Email

- 1 Create new
- 2 Mailbox
- 3 Drafts
- 4 Outbox
- 5 Sent messages
- 6 Email settings



Applications

- 1 Download applications
- 2 Google maps



Camera

- 1 Still camera
- 2 Video camera



Messaging

- 1 Create new
- 2 Inbox
- 3 Drafts
- 4 Outbox
- 5 Sent messages
- 6 My folders
- 7 Templates
- 8 Emoticons
- 9 Media Album
- 0 Settings



My Files

- 1 Pictures
- 2 Sounds
- 3 Videos
- 4 Games
- 5 Applications
- 6 Flash contents
- 7 Others
- 8 External memory



Organiser & Tools

- 1 Alarms
- 2 Calendar
- 3 Quick menu
- 4 Vodafone
- 5 Tasks
- 6 Memo
- 7 Voice recorder
- 8 Private memo
- 9 Calculator
- 0 Converter
- * World time
- # Organiser settings



Entertainment

- 1 Games
- 2 Mobile TV



Music

- 1 Recently played
(Or Now playing)
- 2 My music
- 3 Music store



Contacts

- 1 Add new
- 2 Contacts list
- 3 Groups
- 4 Speed dials
- 5 Calls
- 6 Service dial numbers
- 7 Own number
- 8 My business card
- 9 Settings



Profiles

- 1 Normal
- 2 Silent
- 3 Outdoor
- 4 Flight mode
- 5 Customised 1
- 6 Customised 2
- 7 Customised 3



Settings

- 1 Phone settings
- 2 Display settings
- 3 Connectivity
- 4 Call settings
- 5 Message settings
- 6 Email settings
- 7 Contact settings
- 8 Java settings

01

02

03

04

05

06

07

08

Your standby screen



From here you can access menu options, make a quick call or change your profile - as well as many other things.

 
Thumbpad

The Thumbpad is a feature of your KS500. You can use this to navigate up, down, left and right in menus, applications and while browsing the Internet.

The main menu

The main menu provides twelve menu options.

- 1 Press  to open the main menu.
- 2 Use the Thumbpad to move and make selections
- 3 When the option you require is selected, press  to open.

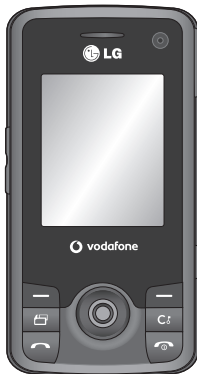

▲ Standby screen



▲ Thumbpad

Advice to the customer

In order to allow better antenna sensitivity LG suggest that you hold the handset as shown below.



Please do not cover the antenna area with your hand during a call or when using a Bluetooth connection. It may reduce signal quality.

The status bar

The status bar indicates, using various icons, things like signal strength, new messages and battery life as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Battery empty
	New text message

Icon	Description
	New email
	An alarm is set
	Normal profile in use
	Silent profile in use
	External memory
	Calls are diverted
	GPRS available
	EDGE in use
	Roaming
	Bluetooth is active
	Calls are rejected
	3G available

01

02

03

04

05





06

07

08



Calls


Making a voice call

- 1 Enter the number including the full area code.
To delete a digit press .
To delete all digits press and hold .
- 2 Press  to make the call.
- 3 Press  or close the handset to finish the call.

Making a video call




You can make a video call if all parties involved have a 3G capable handset in a 3G coverage area. To make a video call, do the following.

- 1 Dial the phone number using the keypad, or select the phone number from your contacts.
To correct mistakes, press  briefly to delete the last digit, or press and hold  to delete all digits.
- 2 To start the video call, press **[Options]** and select **Make Video call**.
NOTE: If you do not want to use the speakerphone, ensure you have the headset plugged in.
NOTE: The video call may take some time to connect. Please be patient.
- 3 Adjust the camera position if necessary.



- 4 Press  or close the handset to finish the call.

Making a voice/video call from Contacts


It is easy to call anyone whose number you have stored in your Contacts.


- 1 Press Thumbpad down to access the contacts list.
- 2 Scroll to the contact to make a call.
- 3 Press  to make a voice call. Press  and select **Make video call** to make a video call.
- 4 Press  to finish the call.

Making international calls

- 1 Press and hold  for the international prefix, '+'.
2 Enter the country code, area code, and the phone number.
- 3 Press .

Answering and rejecting a call


When your phone rings press the  key to answer the call.

Press  to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting.


Press  to reject the incoming call.

Speed dialling



You can assign a frequently-called contact to a speed dial number.

- 1 Press  and select **Contacts**.
- 2 Select **Speed dials**.
- 3 Your Voicemail is already set to speed dial 1 and this cannot be changed. Select any other number to assign it a speed dial contact.
- 4 Your address book will open. Select the contact you would like to assign to that number.

To call a speed dial number:

- 1 Press the assigned number then press the send key .
- 2 Press and hold the assigned number until the contact appears on screen.

Making a second call

- 1 During your initial call,  and select **Add new call**.
- 2 Dial the number or search your contacts.
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 Select **Swap** to change between the calls.

- 6 To end one or both calls select **Options** → **End** followed by **All** or **Active**.

NOTE: You will be charged for each call you make.

DTMF Tone

DTMF allows you to use numerical commands to navigate menus within automated messages. DTMF is switched on as default.

Viewing your call logs

Press , select **Contacts** and choose **Calls**. Choose to view:

All calls - View a complete list of all your dialled, received and missed calls.

Dialled calls - View a list of all the numbers you have called.

Received calls - View a list of all the numbers that have called you.

Missed calls - View a list of all the calls you have missed.

Press , select **Settings** and choose **Call settings**.

You can then view:

01

02

03

04

05

06


07

08


Calls

Call costs - View the charges applied to your dialled numbers (this service is network dependant, some operators are unable to support this function) and the call duration of all your calls; received and dialled.

Data volume - View the amount of all your received and sent data in kilobytes.

TIP! From any call list  and **Clear all** to delete all the recorded items.

Using call divert

- 1 Press , select **Settings** and choose **Call settings**.
- 2 Select **Call divert** and choose **Voice calls** and/or **Video calls**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable.
- 4 Input the number you'd like to divert to.
- 5 Select **Activate** to activate.

NOTE: Charges are incurred for diverting calls. Please contact your network provider for details.


TIP! To turn off all call diverts, choose **Deactivate all** from the **Options** menu.

Using call barring

- 1 Press , select **Settings** and choose **Call settings**.
- 2 Select **Call barring** and choose **Voice calls** and/or **Video calls**.
- 3 Choose any or all of the five options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international calls except home country**
 - All incoming**
 - Incoming when abroad**
- 4 Enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial number** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

Changing the common call settings

- 1 Press , select **Settings** and choose **Call settings**.
- 2 Select **Common settings**. From here you can amend the settings for:
 - Call reject** - Select **On** or **Off** and choose to reject all calls, those from specific groups, contacts, those with no caller ID or from unregistered numbers (those not in your contacts).

Send my number - Choose whether your number will be displayed when you call someone.

Auto redial - Choose **On** or **Off**.

Answer mode - Choose whether to answer the phone using the **Send** key, by opening the slide or using any key.


Minute minder - Select **On** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset or select **Handset** to press a key on the handset to answer a call when using a Bluetooth headset.

Save new number - Select **Yes** to save a new number.

Slide close setting - Select **End call** to be able to disconnect a call when closing the slide.

Changing your video call settings

- 1 Press , select **Settings** and choose **Call settings**.
- 2 Select **Video call**.
- 3 Choose whether to **Use private picture** and select one and/or switch on the **Mirror** (so you can see yourself on the screen).

01

02

03

04

05

06

07

08


Contacts

Searching for a contact

There are two ways to search for a contact:

From the standby screen


- 1 From the standby screen press Thumbpad down to open the address book.
- 2 A Contacts list appears, to search enter the first few letters of the contact you'd like to find using the keypad.

TIP! You can search by group by  and selecting **Search by group**. This will bring up a list of all your groups.

From the main menu

- 1 Select **Contacts**.
- 2 Select **Contacts list** and enter the first few letters of the contact you'd like to find using the keypad.
- 3 Your address book will bring up a list of the contacts corresponding to the letters you've entered.

Adding a new contact


- 1 Press  and select **Contacts**.
- 2 Select **Add new**.
- 3 Choose whether to save the contact to your **Handset** or **USIM**.
- 4 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 5 Enter up to five different numbers and assign a type for each. Choose from **Mobile, Home, Office, Pager, Fax, VT** and **General**.
- 6 Add up to two email addresses.
- 7 Assign the contact to a group. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.
- 8 You can also assign a Contact image and ringtone, and add a **Homepage, Home address, Company name, Job title, Company address** and a **Memo**.

TIP! You can create customised groups for your contacts.

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

1 Open the contact you'd like to use. See **Searching for a contact**.

2 Press  to open the list of options. From here you can:

Send message - Send a message to the contact. If the contact has an email address, select whether you'd like to send an email, an SMS/MMS or a postcard.

Send business card - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia msg**, **Email** or via **Bluetooth**.

Make voice call - Call the contact.

Make video call - Video call the contact.

Add new contact - You can add a new entry.

Edit - You can edit the contact.

Mark/Unmark - Mark your contacts for multiple selection.


Search by - You can search the entry by number or group.

Save to Handset - Choose to move or copy to handset (depending on where you originally saved the contact).

Delete - Delete the contact. Press **Yes** if you are sure.

Text input - You can set the text input method.

Creating a group

1 Press  and select **Contacts**.


2 Select **Groups** and .

3 Select **Add new group**.

4 Enter a name for your new group. And, assign a Group Ringtone(Option)

5 Press **Done**.

NOTE: If you delete a group, the contacts assigned to that group will not be lost. They will remain in your address book.

TIP! You can edit an existing group by highlighting it and . Choose to **Add member** to the group from your contacts or, reset **Group ringtone**.

01

02

03

04

05


06

07

08

Contacts

Using service dial numbers

You can view the list of Service Dialling Numbers (SDN) assigned by your service provider (if supported by the USIM card). Such numbers include directory enquiries and voice mail numbers. After selecting a service number, press  to dial the service.

Viewing your own number

Allows you to display your phone number as saved in the USIM card.

Creating a business card

You can create your own business card by pressing the centre key to Add. After entering the name, number, email and image, you can use it as a business card when sending a message.

Changing your contact settings

You can use contact settings to adapt your address book to your own preferences.

1 Press  and select **Contacts**.

2 Select **Contact settings**. From here you can adjust the following settings:

Contact list settings - Choose whether to view contacts saved to both your

Handset & USIM, Handset only or USIM only.

You can also select to show the first name or last name of a contact first.

Copy - Copy your contacts from your USIM to your handset or from your handset to your USIM. Choose to do this one at a time, or all at once. If you select one at a time, you'll need to select each contact to copy one by one.

Move - This works in the same way as **Copy**, but the contact will only be saved to the location you've moved it to. If you move a contact from the USIM to the handset it will be deleted from the USIM memory.

Send all contacts via Bluetooth - Send all your contacts to another handset by Bluetooth.

Backup contacts - See **Backing up and restoring your phone's information**.

Restore contacts - See **Backing up and restoring your phone's information**.

Clear contacts - Delete all your contacts. Press **Yes** if you are sure you want to clear your address book.

Memory info - You can check how much memory space you've got left on the Handset and on the USIM card.


Messaging


Messaging

Your KS500 combines SMS, MMS and email into one intuitive and easy to use menu.

Sending a message

- 1 Select **Messaging** then choose **Create new**.
- 2 Choose **Message** to send an SMS or MMS. You can also choose to send a **Voice message**.
- 3 A new SMS will open.
- 4 Select **Options** then **Insert**, to add an image, video, sound, or subject.
- 5 Press **Send**. Enter the phone number or select **Contacts** to open your contacts list. You can add multiple contacts.


 **WARNING:** You will be charged per 160 character text message for each person that you send the message to.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

Entering text


There are two ways to enter text:


T9 predictive and Abc manual.

To switch between text entry methods press and hold the  key.

T9 predictive text - Press **Options** to turn on T9 predictive text, then press to sequence through **T9 abc**, **T9 Abc**, **T9 ABC** or **123**.

Abc manual - Press **Options** to sequence through **abc**, **Abc**, **ABC** or **123**.

To change between upper and lower case press the  key.

To delete a character use the  key below the screen.

To enter a symbol select **Insert**.

T9 predictive

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences. Simply press the number key associated with the letter you want to enter, and the dictionary will supply options for the word as you type.

01

02

03

04

05

06

07

08

Messaging


Abc manual

In Abc mode you must press the key repeatedly to enter a letter. For example, to write 'hello', press **4** twice, **3** twice, **5** three times, **5** three times again, then **6** three times.

Message folders

The folder structure used on your KS500 is fairly self-explanatory and easy to use.

Inbox - All the messages you receive are placed into your inbox. From here you can reply, forward and more.

Drafts - If you don't have time to finish writing a message exit the message editor, by either closing the slide or by pressing . Messages are automatically saved to drafts when you press or close the slide

Outbox - This is a temporary storage folder for messages that are being sent.

Sent messages - All the messages you send are placed into your Sent items folder.

My folders - you can create folders and create new messages to be saved in these folders for use now or at a later date.

Managing your messages

You can use your Inbox to manage your messages.

- 1 Select **Messaging** then **Inbox**.
- 2 Select **Options** and then choose to:

Reply - Send a reply to the selected message.

Forward - Send the selected message on to another person.

Call - Make a voice or video call to the person who sent you the message.

Delete - Delete the message.

Create new message - Open a new blank message or email.

Mark/Unmark - Mark your messages for multiple deletion.

Copy & Move - Save a copy or move the message to your phone or USIM.

Filter - View your messages by type. This will group SMS separately from MMS.

Message info. - See additional information for the message, for example, the time it was sent. You can also view the delivery report and read report.

If you see the message **No space for USIM message** you should delete some messages from your inbox.

If you see the message **No space for messages** you can delete either messages or saved files to create space.

Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, you can edit these if you wish.

- 1 Select **Messaging** then choose **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. You can then select **Options** to **Add new**, **Write MMS**, **Edit**, **Delete** or **Delete all** templates.

Using emoticons

Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.

- 1 Select **Messaging** then choose **Emoticons**.
- 2 Select **Options** to **Add new**, **Edit**, **Delete** or **Delete all** emoticons.

Message Settings

Your KS500 message settings are pre-defined so that you can send messages immediately.

Changing your text message settings

Select **Messaging**, choose **Message settings** and then **Text message**. You can make changes to:

Text message centre - Enter the details for your message centre.

Delivery report - Choose to receive confirmation that your message was delivered.

Validity period - Choose how long your message is stored at the message centre.

Message types - Convert your text into **Voice**, **Fax**, **X.400** or **Email**.

Character encoding - Choose how the characters in your messages are encoded. This impacts the size of your message and therefore data charges.

Send long text as - Choose to send as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

Select **Messaging**, choose **Message settings** then **Multimedia message**. You can make changes to:

Retrieval mode - Choose **Home** or **Roaming** network. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

01

02

03

04

05

06

07

08

Messaging

Delivery report - Choose to allow and/or request a delivery report.

Read reply - Choose to allow and/or send a read reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on screen.

Creation mode - Choose your message mode.

Delivery time - Deliver your message at a specific time.

Multimedia msg. centre - Enter the details for your message centre.

Changing your other settings

Select **Messaging** and choose **Message settings**.


Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

Info. service - Choose your reception status, language and other settings.

E-mail


Setting up your email

You can stay in touch on the move using email on your KS500. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Press , Select **Email** and choose **Email settings**.
- 2 Select **Email accounts**.
- 3 Select **Options** and press **Add new**.

Sending an email using your new account

To send/receive an email, you should set up an email account (see above).

- 1 Press , Select **Email** and choose **Create new**.
- 2 Choose **Email** and a new email window will open.
- 3 Write a subject line then press OK.
- 4 Enter your message using the keypad.
Mailbox - This contains all your email messages. Select the account you want to use then select Retrieve. Your KS500 will connect to your email account and retrieve your new messages.

Changing your email settings

You can adapt your email settings in accordance with your own preferences.

- 1 Select **Messaging** then open **Message settings**.

- 2 Select **Email** then **Email accounts** to adapt the following settings:

Allow reply Email - Choose to allow the sending of 'read confirmation' messages.

Request reply Email - Choose whether to request 'read confirmation' messages.

Retrieve interval - Choose how often your KS500 checks for new email messages.

Retrieve amount - Choose the number of emails to be retrieved at one time.

Include original message - Choose whether to include the original message.

Include attachment - Choose to include the original attachment.

Auto Retrieval in Roaming - Choose to auto retrieve your messages when abroad, or stop auto retrieval.

New email notification - Choose whether to be alerted to new emails.

Signature - Create an email signature and switch this feature on.

Priority - Choose the priority level of your email messages.

01

02

03

04

05

06

07

08

Camera

Taking a quick photo


- 1 Press the key on the right hand side of the handset and the camera's viewfinder will appear on screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Slightly press the capture button, and a focus box will appear in the centre of the viewfinder screen.
- 4 Position the phone so you can see the subject of your photo in the focus box.
- 5 When the focus box turns green, the camera has focused on your subject.
- 6 Press the capture button fully.


After you've taken your photo


Your captured photo will appear on screen. The name of the image runs along the bottom of the screen together with five icons down the right side.





Back Go back to previous menu.

 View the pictures you have taken in your Album.

 Send the photo as an MMS, Email, via Bluetooth, or as a Postcard. Refer to **Sending a message**, and for **Sending and receiving your files using Bluetooth**.

 Take another photo straightaway. Your current photo will be saved.

 Use the image as wallpaper, as a Contact image, or in your Start-up or Shut down screen.

 Delete the photo you have just taken and confirm by pressing **Yes**. The viewfinder will reappear.

Using the toolbar

Before taking a photo, select **Settings** to configure various options.

Colour effect - Choose from four colour tone options: **Off**, **Black & White**, **Negative** and **Sepia**.

White balance - The white balance ensures that any white in your photos appears realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Sunny**, **Incandescent**, **Cloudy** or **Fluorescent**.

Night mode - On or Off

Timer - The self-timer allows you to set a delay after the capture button is pressed. Choose from **3 secs.**, **5 secs.** or **10 secs.**. Great for that group photo you want to be a part of.

Shot mode - Normal, Burst shot and

Frame shot

Image quality - Choose between **Normal**, **Fine** and **Super fine**. The finer the quality, the sharper the photo will be but the file size will increase as a result, which means you'll be able to store fewer photos in your phone's memory

Memory in use - Choose whether to save your photos to the **Handset** memory or to the **External** memory.

Hide icons - Set whether to automatically hide the icons on the side of the viewfinder.

Sound - Select one of the three different

Changing the image size

The larger the image size, the larger the file. Storing larger sized images will take up more of your phone's memory. If you want to fit more pictures on to your phone you can alter the image size to make the file size smaller.

1 Select **Size** from the right toolbar.

2 Select an option from those presented (**3M**, **2M**, **1M**, **640X480**, **320X240**, **Contacts**).

Viewing your saved photos

You can access your saved photos within the camera. From the viewfinder, simply select **Album** from the right toolbar.

1 Alternatively, from the main menu, select **My Files**, then **Pictures**.

2 Your gallery will appear on screen.

3 Use the arrows to select the photo you want to view and choose **View** to enlarge it.

Choosing a shot mode

1 Select **Settings** to open the available shot modes.

2 Choose from the four options:

Normal shot - This is the default shot type, the photo will be taken in the normal way, as outlined in **Taking a quick photo** on page 36.

Burst shot - This enables you to take nine shots automatically in very quick succession. See **Using burst shot mode** on page 38 for details.

Frame shot - Choose from one of the fun frames to transform your picture.

01

02

03

04

05

06

07

08

Camera

Using burst shot mode

Burst shot mode is great for taking photos of moving objects or at sporting events.

- 1 Select **Burst shot**.
- 2 Position the subject in the viewfinder and press the capture button as you would to take a normal photo.
- 3 The camera can take series of pictures (1, 3, 6 or 9) in quick succession and display the first picture with eight thumbnails on the bottom of the screen.

Using a frame shot mode

Frame shot can be used to transform your friend into a pirate, or just to decorate their surroundings with a frame.

- 1 From the viewfinder select settings
- 2 Select Shot mode
- 3 Select Frame Shot
- 4 Select a frame to use
- 5 Select close
- 6 Take photo






Video camera

Shooting a quick video

- 1 Select , to change from camera to video camera mode.
- 2 Holding the phone horizontally, point the lens towards the subject of the video.
- 3 Press the capture button once to start recording. Press the capture button a second time to stop recording.
- 4 While recording your remaining time will appear at the bottom.

After you've shot your video

A still image representing your captured video will appear on screen. The name of the image runs along the bottom of the screen together with five icons down the right side.

-  View your video Album.
-  Play the file.
-  Start new recording.
-  Send the video as an MMS, Email or Bluetooth. Refer to **Sending a message**, or for **Sending and receiving your files using Bluetooth**.
-  Delete the video you have just made and confirm by pressing Yes. The viewfinder will reappear.

TIP! Select the album icon to open the video album. See **Viewing your photos and videos** for details.

Using the toolbar

Before shooting a video, select **Settings** to configure various options.

Colour Effect - Choose from four colour tone options: **Off**, **Black & White**, **Negative** and **Sepia**.

White balance - The white balance ensures that any white in your videos appear realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Sunny**, **Incandescent**, **Cloudy** or **Fluorescent**.

Night mode - **On** or **Off**

Video quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a video will be, but the file size will increase as a result, which means you'll be able to store fewer videos in the phone's memory.

Duration - **Normal** or **MMS**.

01

02

03

04

05

06

07

08

Video camera

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you'll be able to see the image change in preview behind the settings menu.

Use the arrow keys to navigate the options in **Others**.

Memory in use - Choose whether to save your videos to the Handset memory or to the External memory.

Hide icons - Set the camera to automatically hide the icons to the side of the viewfinder.

Voice - Choose Mute to record a video without sound.

Watching your saved videos

- 1 Select the album icon. Your album will appear on screen.
- 2 Highlight the video you want to view.
- 3 Select the video to watch it.

Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, use the keys on the side of the handset.

Your photos and videos

Editing photo album options menu

You can view and edit your images using the Options menu in photo album.

Play - View the image.

Send - Send the image to a friend.

Delete - Delete the image.

Use as - Set the image as Wallpaper/ Contacts image/Start-up or Shut down image.

Rename - Change the file name.

File info - Display image file information.

Editing video album options menu

You can view and edit your videos using the Options menu in video album.

Play - Play the video.

Send - Send the video to a friend.

Delete - Delete the video.


Rename - Change the file name.

Edit - Edit the video.

Date display - Set date display option.

Viewing your photos and videos

- 1 After taking the picture or video, select **Album**.
- 2 Your album will appear on screen.
- 3 Select the video or photo you want to view.

- 4 Videos will begin to play automatically. To pause playback select .

TIP! You can delete a photo or video. Select the photo or video, then select **Options** and choose **Delete**. Select **Yes** to confirm.

Adjusting the volume when viewing a video

To adjust the volume of the audio on a video move the thumbpad up and down, while the phone is horizontal.

01

02

03

04

05

06

07

08

Multimedia

You can store any multimedia files into your phone's memory in **My files** so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

Pictures

Pictures contains a list of pictures including default images, images downloaded by you and images taken on your phone's camera.

Pictures options menu

The options available to you in **Pictures** will depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but only the **Use as, Sort by, Grid view, File info, Memory info** options are available for default images.

Send - Send the image to a friend.

Use as - Set the image to appear on your phone at certain times.

Move - Move an image from the phone memory to a memory card or vice versa.

Copy - Copy an image from the phone memory to a memory card or vice versa.

Delete - Delete an image.

Mark/Unmark - Select multiple files.

Print via Bluetooth - Print an image via PictBridge or Bluetooth®.

File - Change the name or view the information for the file.

Slide show - Start a slide show.

Sort by - Sort images into a specified order.

Grid view/ List view - View each image in grid or list type.

Memory info. - View the memory status.

Sending a photo

- 1 Select **My Files** then choose **Pictures**.
- 2 Select the photo you want to send and press **Options**.
- 3 Select **Send** and choose from **Message, Email, Bluetooth, Media Album**.
- 4 If you choose **Message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to. If you choose **Media Album**, you need to subscribe to the network service first.

Using an image

You can choose images to use as wallpapers and screensavers or even to identify a caller.

- 1 Select **My Files** then **Pictures**.
- 2 Select the image you want to use and press **Options**.
- 3 Select **Use as** and choose from:

Wallpaper - Set a wallpaper for the standby screen.

Contacts image - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.

Start up image - Set an image to appear when you switch the phone on.


Shut down image - Set an image to appear when you switch the phone off.

Organising your images

- 1 Select **My Files** then **Pictures**.
- 2 Select **Options** then Sort by.
- 3 Choose from **Date**, **Type** or **Name**.

Deleting an image

- 1 Select **My Files** then **Pictures**.
- 2 Select the image you want to delete and press **Options**.
- 3 Select **Delete** then **Yes** to confirm.

TIP! To quickly delete any file in My files, select it once so it is highlighted by the cursor and press the  key. Confirm by selecting **Yes**.

Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Select **My Files** then **Pictures**.
- 2 Select an image and select **Options**.
- 3 Select **Move** or **Copy**.

Marking and unmarking images

If you want to move, copy, send or delete several images at once, you first need to identify them by marking them with a tick.

- 1 Select **My Files** then **Pictures**.
- 2 Select **Options** then **Mark/Unmark**.
- 3 A box will appear to the left of each image. If you select an image a tick will appear in the box marking it.
- 4 To unmark an image, select the image again so that the tick disappears from the box.

01

02

03

04

05

06

07

08

Multimedia

- 5 Once you have marked all of the appropriate images, choose one of the options to apply to all of them.

Creating a slide show

If you want to look at all of the images on your phone or scan through what you've got, you can create a slide show to save you from having to open and close each individual image.

- 1 Select **My Files** then **Pictures**.
- 2 Select **Options** then **Slide show**.

Checking your memory status

You can check to see how much of your memory space you have used and how much you have left to use.

- 1 Select **My Files** then **Pictures**.
- 2 Select **Options** then **Memory manager**.
- 3 Choose **Handset memory** or **External memory**.

NOTE: If you do not have a memory card inserted, you will not be able to select External memory.

Sounds

The **Sounds** folder contains the **Default sounds** and **Voice recordings**. From here you can manage, send or set sounds as ringtones.

LG KS500 | User Guide

Using a sound


- 1 Select **My Files** then **Sounds**.
- 2 Select **Default sounds** or **Voice recordings**.
- 3 Select a sound and select **Play** to listen to it.
- 4 Select **Options** and select **Use as**.
- 5 Choose from **Voice ringtone**, **Video ringtone**, **Contact ringtone**, **Message tone**, **Start-up** or **Shut down**.

Videos

The Videos folder shows the list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Select **My Files** then **Videos**.
- 2 Select a video and press **Play**.

TIP! To quickly delete any file in My files, press it once so it is highlighted by the cursor and press the  key. Confirm by selecting **Yes**.

Using options while video is paused

Select **Options** while in pause mode and choose from:

Landscape view - View the video file in landscape view

Mute/ Unmute - Switch the sound on/off.

Repeat - Repeat the video file.

File info. - View the Name, Size, Date & Time, Type, Duration, Dimension, Protection and Copyright details.

Send - Send the video in a message, Email, via Bluetooth or as a Media Album.

Delete - Delete the video.

Use as - Use as a voice/video ringtone.

Capture - Capture the frozen frame as a picture.

Sending a video clip

- 1 Select a video and select **Options**.
- 2 Select **Send** and choose from **Message**, **Email**, **Bluetooth** or **Media Album**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

Using a video clip as a ringtone

- 1 Select a video and select **Options**.
- 2 Select **Use as** and choose from **Voice ringtone** or **Video ringtone**.

Using the video options menu

From the **Videos** folder, you can choose from the following options:

Send - Send a video to a friend.

Use as - Use as a voice/video ringtone.

Move - Move a video clip from the phone memory to a memory card or vice versa.

Copy - Copy a video clip from the phone memory to a memory card or vice versa.

Delete - Delete a video.

Mark/Unmark - Select multiple files.

File - Edit the file name and view its information.

Create new folder - Create a new folder within the Videos folder.

Sort by - Sort videos into a specific order.

Grid view/ List view - View the options menu by Grid or List type.

Memory info. - View the memory status.

Games and Applications

You can download games and applications to your phone to keep you amused when you have time to spare.

01

02

03

04

05

06

07

08

Multimedia

Downloading a game

- 1 From the main menu, select **Entertainment** and then **Games** for games.
- 2 Select **Download games** and press **Connect**.
- 3 You will connect to the web portal from where you can find a game to download.

TIP! To quickly delete any file in My Files, press it once so it is highlighted by the cursor and press the **Del** key. Confirm by pressing **Yes**.

Playing a game

- 1 Select **Entertainment**, then **Games**.
- 2 Select a game and press **Launch**.

Using the games options menu

From the Games and the Applications folders, the following options are available:

File info – View the Name, Vendor, Version, Size, Domain, and Signature of a particular game.

Sort by - Sort the games and applications by **Date**, **Size** or **Name**.

Memory manager - View the memory status.

Flash contents

The Flash contents folder contains all of your default and downloaded flash contents.

Viewing an SWF/SVG file

- 1 Select **My Files** then **Flash contents**.
- 2 Select the file and press **Play**.

Using options viewing the SWF/SVG file

Select **Options** while in pause mode and choose from:

Play/Pause - Pause or resume playback.

Full screen/ Landscape view -

View your SWF/SVG in full screen or landscape view mode.

Mute/Unmute - Switch the sound on/off.

Use as wallpaper - Set the SWF/SVG file as a wallpaper.

File info - View the Name, Size, Date, Time and Type of the file.

Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via a sync cable.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **OK**.
- 4 The file should appear in your **Others** folder.

Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. You may find that when you transfer files from your computer to your phone that they appear in the **Others**. If this happens you can move them. To move a file from Others to Documents:

- 1 Select **My Files** then **Others**.
- 2 Select a file and choose **Options**.
- 3 Select **Move**.

Music

Your LG KS500 has a built-in music player so you can play all your favourite tracks. To access the music player, select **Music** from the main menu. From here you can access a number of folders:

Recently played - View all of the songs you have played recently.

My music

 - All music:

All tracks - Contains all of the songs you have on your phone.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains any playlists you have created.

Shuffle tracks - Listen to your music in a random order.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or a sync cable and LG PC Suite

To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by pressing **OK**.
- 4 The file should appear in **Music** → **All tracks**.

01

02

03

04

05


06

07

08

Multimedia

Playing a song

- 1 Select **My music**, then **All tracks**.
- 2 Select the song you want to play and choose **Play**.
- 3 Press  to pause the song.
- 4 Press Thumbpad right to skip to the next song.
- 5 Press Thumbpad left to skip to the previous song.

Using options while playing music

Select **Options** and choose from:

Minimise - Make the music player screen disappear so that you can continue using your phone as normal.

Go to my music - Move the file to the My music folder.

Repeat - Repeat the selected track.

Shuffle - Listen to your music in a random order.

Equalizer - Set the equaliser menu.

Visualisation - Select the visual effects.

Add to playlist - Add the file to a playlist.

File info. - View the Name, Size, Date, Time, Type, Duration, Protection and Copyright of the song.


Send - Send the song as a message or via Bluetooth.

Delete - Delete the song.

Use as - Use the song as one of your ringtones.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Select **My music**, then **Playlists**.
- 2 Select **Add**, enter the playlist name and press  **Save**.
- 3 The All tracks folder will be displayed. Select all of the songs that you would like to include in your playlist; a tick will show next to the file name.

To play a playlist, select it and choose **Play**.

NOTE: To add a second playlist, select **Options** then **Add new playlist**.

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist. When you want to do this, you can edit the playlist.

- 1 Select **My music**, then **Playlists**.
- 2 Select the playlist.
- 3 Select **Options** and select:

Add new songs – To add more songs to the playlist. Mark the ones you want and select **Done**.

File info. - View the Name, Size, Date, Time, Type, Duration, Protection and Copyright of the song.

Send – Send a song as a message or via Bluetooth.

Remove from list – Remove a song from the playlist. Select **Yes** to confirm.

Mark/Unmark – Select multiple files.

Use as – You can set the song as an effect sound.

Memory info. – You can view the current status of memory.

Deleting a playlist

- 1 Select **My music**, then **Playlists**.
- 2 Select **Options** then **Delete** or **Delete all** to delete all of the playlists.

01

02

03

04

05


06

07

08


Organiser & Tools

Adding an event to your calendar


- 1 From the standby screen press  and choose **Organiser & Tools**. Select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Select **Options** then **Add new**.
- 4 Select whether you would like to add an **Appointment, Anniversary** or **Birthday** and select **Done**.
- 5 Check the date and enter the time you would like your event to begin.
- 6 For appointments and anniversaries enter the time and date your event finishes in the lower two time and date boxes.
- 7 If you would like to add a subject or a note to your event, press **Subject** or **Name** and type in your note.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

TIP! You can set a holiday in your calendar. Select each day you are on holiday one at a time, then choose **Options** and select **Set holiday**. Each day will be shaded red.

Changing your default calendar view


- 1 From the standby screen press  and choose **Organiser & Tools**. Select **Organiser settings**.
- 2 Select **Calendar**, press **Options** and choose either **Month view** or **Week view**.
- 3 Press **OK** to confirm your choice.

Adding an item to your to do list

- 1 From the standby screen press  and choose **Organiser & Tools**.
- 2 Select **Tasks** and select **Add**.
- 3 Set the date for the to do item, add notes and select a priority level: **High, Medium** or **Low**.
- 4 Save your to do list item by selecting **Done**.


TIP! You can edit an item by selecting it, and pressing **Options** and **Edit**. Confirm your amends by selecting **Save**.

Sharing a to do item

- 1 From the standby screen press  and choose **Organiser & Tools**. Select **Tasks**.
- 2 Select the to do item you would like to share, then select **Options**.
- 3 Select **Send**. You can choose to share your to do item by **Text message**, **Multimedia msg.**, **Email** or **Bluetooth**.

TIP! You can back up and synchronise your calendar with your computer.


Alarm

- 1 From the standby screen press  and choose **Alarms**.
- 2 Select **Options** and press **Add new**.
- 3 Set the time you would like the alarm to sound.
- 4 Choose whether you would like your alarm to sound **Not repeated**, **Daily**, **Mon-Fri**, **Mon-Sat**, **Except holiday**, **Choose weekday**.
- 5 Select  and **Edit** to select a sound for your alarm. To listen to sounds select the sound, and press **Play**.
- 6 Add a memo for the alarm and select **Done**. When the alarm sounds the memo will be displayed.
- 7 Finally you can set the snooze interval at **5**, **10**, **20**, **30 minutes**, **1 hour** or **off**.

- 8 Once you have set your alarm, select **Done**.


NOTE: You can set up to 5 alarms. The alarm will be alerted on even if the phone is switched off.

Adding a memo

- 1 From the standby screen press  and choose **Organiser & Tools**. Select **Memo**.
- 2 Select **Add**.
- 3 Type your memo, followed by **Save**.
- 4 Your memo will appear on screen next time you open the **Memo** application.

TIP! You can edit an existing memo. Select the one you want to edit and press **Edit**.

Using your calculator

- 1 From the standby screen press  and choose **Organiser & Tools**. Select **Calculator**.
- 2 Select the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, x, ÷), followed by =.
- 4 For more complex calculations, select **Options** and choose from +/-, **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** or **rad**.

01

02

03

04

05


06

07


08

Organiser & Tools

Converting a unit

- 1 From the standby screen press  and choose **Organiser & Tools**. Select **Converter**.
- 2 Choose whether you would like to convert **Currency, Surface, Length, Weight, Temperature, Volume** or **Velocity**.
- 3 Select the unit and the value to convert from, and the unit to convert to.
- 4 The corresponding value will appear on the screen.

Adding a city to your world time

- 1 From the standby screen press  and choose **Organiser & Tools**. Select **World time**.
- 2 Select **Options**, followed by **Add city**. Start typing the name of the city you require and it will show at the top of the screen. Alternatively choose **Map**, and select your chosen city from the map.
- 3 Press **Select** to confirm your choice.

TIP! If you are abroad you can change your time zone from World time by selecting **Options**, followed by **Change time zone**. Choose your required city as above, and press **Select**.

Using voice recorder

Use your voice recorder to record voice memos or other sounds.

- 1 Select **Organiser & Tools**.
- 2 Select **Voice recorder** then **Options** and choose from:

Duration – Set the recording duration. Choose from **MMS msg. size, 30 secs, 1 min, No limit**.

Quality – Select the sound quality.

Choose from **Super Fine, Fine** or **Normal**.

Memory in use – Check the current status of each memory.

Go to Voice recordings – Open the Voice recordings folder in **Sounds**.

Recording a sound or voice

- 1 Select **Organiser & Tools**.
- 2 Select **Voice recorder**.
- 3 Select **Rec.** to begin recording.
- 4 Select **Stop** to end recording.
- 5 Select **Play** in **Options** to listen to your recording.

Sending the voice recording

- 1 Once you have finished recording, select **Options**.
- 2 Select **Send** and choose from **Message**, **Email**, **Bluetooth** or **Media Album**. If you choose Message or Email, the recording will be added to a message and you can write and send it as normal. If you choose Bluetooth, you will be prompted to turn Bluetooth on.

NOTE: After you have finished recording, select **Options** and choose **Play**, **Send**, **File**, **Delete**, **Use as** (to use the recording as your ringtone) or **Go to Voice recordings**.

01

02

03

04

05

06


07

08

Vodafone live!

The browser allows you to download the latest music, ringtones, wallpapers and games.


Accessing the web

- 1 From the standby screen press  and choose **Vodafone live!**.
- 2 You will access the browser homepage directly by selecting **Vodafone live!**. Alternatively select **Enter address** and type in your desired address, followed by **Open**.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the standby screen press  and choose **Vodafone live!**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To create a new folder, select **Options** and press **Create new folder**. Enter the name of your bookmark folder.


- 4 To add a new bookmark, select **Options** and press **Add new**. Enter a name for your bookmark followed by the URL.
- 5 Select **Done**. Your bookmark will be displayed in the list of bookmarks.
- 6 To access the bookmark simply scroll to it and select **Open**.

Saving a page


- 1 Access your required webpage as described above.
- 2 Select **Options** and select **Save items - Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Select **Save**.

TIP! This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.

Accessing a saved page

- 1 From the standby screen press  and choose **Vodafone live!**.
- 2 Select **Saved pages**.
- 3 Select **Open** to connect to the saved page.

Viewing your browser history

- 1 From the standby screen press  and choose **Vodafone live!** and then select **History**.
- 2 **Visual history** will be displayed. Select **Options** and select **Add to bookmark**, to add the current page to your bookmarks.
- 3 Select **Options** and **Select List history** to show a list of web page titles you have accessed recently.
- 4 To access one of these pages, simply select the required page and press **Open**.

Using RSS reader

RSS (Really Simple Syndication) is a family of Web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a **feed**, **web feed**, or **channel**, contains either a summary of content from an associated web site or the full text.

RSS makes it possible for people to keep up with their favorite web sites in an automated manner that is easier than checking them manually.

The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the

subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.


Adding the Feed

You can input the feed directly yourself: **Vodafone live!** → **RSS reader** → **Options** → **Add new** or you can click the feed link by selecting the RSS icon in the webpage.

Updating the RSS reader

- 1 You can select **Update** or **Update all**.
- 2 If you want to update it automatically, select **Update schedule**.

Changing the web browser settings

- 1 From the standby screen press  and choose **Vodafone live!**. Select **Browser settings**.
- 2 You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies**, **Security**, or **Reset Settings**.
- 3 Once you have changed your settings, press **Select**.

01

02

03

04

05

06

07

08

Vodafone live!

Using your phone as a modem

Your KS500 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your KS500 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Communication** on your PC. Then click **Settings** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Click **Connect** and your PC will connect through your KS500.

Using Bluetooth


- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and KS500.
- 2 Pair your PC and KS500 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.

- 4 Click **Communication** on your PC. Then click **Settings**.
- 5 Click **Modem**.
- 6 Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on screen.
- 7 Click **Connect** and your PC will connect through your KS500.

Settings


Within this folder you can adapt your settings to make your KS500 personal to you.

Changing your screen settings

- 1 From the standby screen, press .
- 2 Select **Display settings** to choose from:
 - Main display** - Choose the theme for your standby screen or start-up, power off the phone.
 - Menu style** - Choose the style used to display the menu.
 - Dialling** - Set the display when making a call.
 - Font** - Adjust the font colour.
 - Backlight** - Choose how long the backlight remains on for.
NOTE: The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.
 - Handset theme** - Quickly change the whole look of your screen.
 - Welcome message** - Input the greeting message when switching on the phone.
- 3 Choose **Select** to save your settings.


Personalising your profiles

You can quickly change your profile on the standby screen.

- 1 From the standby screen, press .
- 2 Select **Profiles** and then choose the profile you want to edit. You cannot edit the **Silent** profile.
- 3 Select **Options** and choose **Edit**.
- 4 You can then change all of the sounds and alert options available in the list, including your **Ring tone** and **Volume, Message alerts** and more.

Changing your phone settings

Enjoy the freedom of adapting your KS500 so that it works in a way that suits you best.

- 1 From the standby screen, press , and choose **Settings**.
- 2 Select **Phone settings** then choose from the list below.
 - Date & Time** - Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.
 - Language** - Change the language of your KS500's display.
 - Auto key lock** - Lock the keypad automatically in standby screen.

01

02

03

04

05

06

07

08

Settings

Security - Set the phone to ask for the PIN code of your SIM card when switching on the phone.

Handset lock - Set the phone lock to avoid unauthorised use of the phone. You will need a security code.

Power save - Choose to switch the factory set power saving settings **On** or **Off**.

Memory manager - See **Using memory manager** on page 59 for more information


Primary storage setting - Set the primary storage as handset memory or external memory.

ThumbPad calibration, Handset information - View the technical information for your KS500.

Reset settings - Reset all the settings to their factory definitions.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

From the standby screen, press  and select **Settings** and **Connectivity**.

Bluetooth - Setup your KS500 for Bluetooth use. You can adapt your visibility to other devices or search through devices you're paired with.

USB connection mode - Choose Data service and synchronise your KS500 using the LG PC Suite software to copy files from your phone.

GPS type - Choose either Assisted GPS or Stand alone.

GPS

- GPS technology uses information from earth-orbiting satellites to find locations.
- A receiver estimates the distance to GPS satellites based on the time it takes for signals to reach it, then uses that information to identify its location.
- It may take from a couple of seconds to several minutes.
- Assisted GPS(A-GPS) on this mobile is used to retrieve location assistance data over packet data connection.
- The assistance data is retrieved from the Service server only when you needed.
- The KS500 has a GPS Receiver.
- Use of GPS receiver requires an application that may not be included in software provided by your service provider.

Network - Your KS500 connects automatically to your preferred network. To change these settings use this option.

Internet profiles - Set the profiles for connecting to the internet.

Access points - Your network operator has already saved this information. You can add new access points using this option.

Packet data conn. - Set the packet data connection.


Browser settings - change the web browser settings

Streaming settings - Set the settings for internet streaming.

Using memory manager

Your KS500 has three memory storage locations available: the phone, the USIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available.

Press  in standby screen and choose **Settings**. Select **Phone settings** then **Memory Manager**.

User memory - View the memory location available on your KS500 for Image, Sounds, Video, Flash, MMS, Email, Java applications and others.

User reserved memory - View the memory available on your handset for SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

USIM memory - View the memory available on your USIM Card.

01

02

03

04

05

06

07



08

Settings

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

TIP! See page 18 for information on **Installing a memory card.**

Using flight mode

Turn on flight mode by pressing  in standby screen, and then select **settings** - **Profiles**. Select **Flight mode** and press  to activate.

Flight mode will not allow you to make calls, connect to the Internet, send messages or use Bluetooth.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Select **Options** and choose **Send**. Choose **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on.


- 4 Your KS500 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and press **Select** to send the file.
- 6 Your file will be sent.

TIP! Keep an eye on the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** for more information.
- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file. Files will usually be saved to the relevant folder in My Files.

Changing your Bluetooth settings:

- 1 Press  in standby screen, and choose **Settings**.
- 2 Choose **Connectivity**, then **Bluetooth** and **Settings**.
Make your changes to:
My device visibility - Choose to be Visible, Visible for 1 min or Hidden.

My device name - Enter a name for your KS500.

Supported services - Search for the profile supported by KS500. See **Using your phone as a modem** or **Using a Bluetooth headset**.

My address - View your Bluetooth device address.

Pairing with another Bluetooth device

By pairing your KS500 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**.
You can change your visibility in the **Settings** menu.
- 2 Select **Paired Devices** then **New**.
- 3 Your KS500 will search for devices. When the search is completed **Refresh** and **Add** will appear on screen.
- 4 Choose the device you want to pair with and enter a passcode then press **Add**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Select **Yes** to **Connect now**. Your KS500 will automatically switch to Headset profile.

TIP! Refer to BT answer mode for details so that you can control how you answer calls when your Bluetooth headset is connected.

01

02

03

04

05

06

07

08

Accessories

These accessories are available for use with your KS500.

Charger



Data cable and CD

Connect and synchronise your KS500 and PC.



Battery



User Guide

Learn more about your KS500.



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquires.

Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800, PCS1900 and W-CDMA network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : KS500

System : GSM 900 / DCS 1800 /
PCS 1900 / W-CDMA

Ambient Temperatures

Max : +55°C (discharging), +45°C (charging)

Min : -10°C

01

02

03

04

05

06

07

08

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM / W-CDMA Terminal Equipment

Model Name

K5500

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC
EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1
EN 301 511 V9.0.2
EN 301 908-1 V2.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.6.1
EN 50360/EN 50361:2001
EN 60950-1 : 2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director

18. Aug. 2008

LG Electronics Inc. Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36-547 - 8940, e-mail : seokim@lge.com


Signature of representative

MANUFACTURER'S WARRANTY

Australia & New Zealand

1. WHAT THIS WARRANTY COVERS:

LG offers you a warranty that the enclosed Product and its enclosed accessories will be free from defects in material and workmanship according to the following terms and conditions:

- (1) The warranty for the Product is for ONE (1) year beginning on the date of purchase of the Product.
- (2) The warranty extends only to the original consumer purchaser of the Product ("Customer") and is not assignable or transferable to any subsequent customer. LG offers a warranty for genuine LG battery packs, extending SIX (6) months from the date of purchase.
- (3) This warranty is only valid to the original purchasing Customer for the duration of the warranty period as long as it is purchased and used in AUSTRALIA or NEW ZEALAND.
- (4) During the warranty period, any defective LG Product or part will be repaired or replaced by LG or its authorised service centre, at LG's option, with new or factory rebuilt replacement items. LG or the authorised service centre will return the Product to the Customer in working condition. No charge for either parts or labour in repair or replacement of the Product will be incurred by the Customer. If parts, boards or equipment are replaced, they shall become the property of LG.
- (5) Upon request from LG, the Customer must provide LG with proof of the date of purchase.
- (6) The Customer will bear the cost of transporting, delivering and handling the Product to and from LG or its authorised service centre.
- (7) The benefits available from this warranty are in addition to all applicable statutory rights.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- (2) Defects or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorised modifications, unauthorised connections, unauthorised repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.

- (3) Breakage or damage to antennas, unless caused directly by defects in material or workmanship.
- (4) If the Customer does not notify LG of the alleged defect or malfunction of the Product during the applicable warranty period, the Customer shall have no coverage or benefits under this warranty.
- (5) Products which have had the serial number removed or made illegible.
- (6) If the battery short circuits or the seals of the battery are broken or show evidence of tampering, or the battery was used in equipment in a manner other than that which has been specified, the Customer shall have no coverage or benefits under this warranty.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).
- (12) Defects or damage resulting from breakage of or tampering with the LCD screen.
- (13) Where applicable, Products that have been subject to an unauthorised removal or deactivation of the network operator lock function.

3. STATEMENT:

Except for those terms that cannot by law be excluded, all terms other than those expressly contained in this warranty statement are excluded. To the extent permitted by law, LG excludes all liability (whether in contract, tort or otherwise) for any consequential, special, incidental or indirect loss or damage including loss of profit, loss or impairment of privacy of conversations, work stoppage or loss or impairment of data arising out of the use or inability to use the Product.

4. HOW TO GET WARRANTY SERVICE:

To obtain information regarding warranty service, please call the following toll free telephone numbers;

AUSTRALIA:
LG Electronics Australia Pty Ltd
2 Wonderland Drive
Eastern Creek NSW 2766
PO Box 212
HORSLEY PARK NSW 2175
Tel: 1800-638-080
Fax: 02-8805-4201

NEW ZEALAND:
LG Electronics Australia Pty Ltd
Unit A, 38 Highbrook Drive
East Tamaki 2013
PO Box 58195 Greenmount
Auckland 2141
Tel: 0800-666-780
Fax: 09-914-2441

