

Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

WARNING! *Violation of the instructions may cause serious injury or death.*



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.
3. Never store your phone in temperatures less than -4°F or greater than 122°F.



4. Do not dispose of your battery by fire or with hazardous or flammable materials.
5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



6. Do not use a hand-held phone while driving.
7. Do not use the phone in areas where its use is prohibited. (For example: aircraft)

Important Safety Precautions

Important Safety Precautions



1. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



2. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



3. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.



4. Do not use your phone in high explosive areas as the phone may generate sparks.



5. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



6. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.

7. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.

8. Do not disassemble the phone.



1. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
2. Do not hold or let the antenna come in contact with your body during a call.



3. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.



4. Store the battery out of reach of children.
5. Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



6. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



7. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
8. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



9. Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Table of Contents

Important Safety Precautions	1	The Battery	21
		Installing the Battery	21
		Removing the Battery	21
Table of Contents	4	Charging the Battery	22
		Battery Charge Level	22
Welcome	9	Turning the Phone On and Off	23
		Turning the Phone On	23
		Turning the Phone Off	23
Technical Details	10	Signal Strength	23
Important Information	10	Screen Icons	24
FCC Part 15 Class B Compliance	10	Making Calls	24
Technical Details	10	Correcting Dialing Mistakes	25
FCC RF Exposure Information	12	Receiving Calls	25
Bodily Contact During Operation	12		
Vehicle-Mounted the External Antenna	13	Quick Access to Convenient Features	26
FCC Notice and Cautions	13	Lock Mode	26
Caution	14	Mute Function	26
Part 15.19 statement	14	Quick Volume Adjustments	26
Part 15.21 statement	14	Call Waiting	26
Part 15.105 statement	15	Caller ID	27
		Speed Dialing	27
Phone Overview	16		
		Entering and Editing Information	28
Menus Overview	18		
Getting Started with Your Phone	21		

Text Input	28	5. Drafts	40
Key Functions	28	6. Voicemail	41
<hr/>		7. Templates	41
Contacts in Your Phone's Memory	29	8. Settings	41
The Basics of Storing Contacts Entries	29	9. Delete All	44
Phone Numbers With Pauses	29	<hr/>	
Storing a Number with Pause or Wait	30	Alltel Shop	44
Adding Pause or Wait to an Existing Number	30	1. Launch	45
Searching Your Phone's Memory	31	<hr/>	
Scrolling Through Your Contacts	31	Alltel Web	45
Contacts Options	31	1. Launch	45
Making a Call From Your Phone's Memory	32	<hr/>	
<hr/>		Multimedia	48
Phone Menus	34	1. Take Photo	48
<hr/>		2. Record Voice	49
Messaging	34	3. Images	49
1. New Text Message	34	4. Audios	50
2. New Picture Message	36	5. Shuffle	51
3. Inbox	38	<hr/>	
4. Sent	39	Contacts	52
		1. New Contact	52
		2. Contact List	52
		3. Groups	53
		4. Speed Dials	53
		5. My Name Card	54

Table of Contents

Recent Calls	54	1.2 Command Mode	60
1. Missed Calls	54	1.3 Announce Alert	60
2. Received Calls	55	1.4 Train Word	60
3. Dialed Calls	55	1.5 Best Match	60
4. All Calls	55	2. My Menu	61
5. Call Timer	55	3. Alarm Clock	61
6. Data	55	4. Calendar	62
7. Data Counter	56	5. Ez Tip Calc	62
<hr/>		6. Notepad	63
Bluetooth	56	7. Calculator	63
1. Paired Devices	57	8. World Clock	64
2. Power	57	9. Stopwatch	64
3. My Visibility	58	0. Unit Converter	64
4. My Bluetooth Name	58	<hr/>	
5. My Bluetooth Info	58	Settings	65
<hr/>		1. Sound	65
Tools	59	1.1 Ringers	65
1. Voice Command	59	1.2 Volume	65
1.1 Start Command	59	1.3 Message Alerts	65
1.1.1 Call <Name> or <Number>	59	1.4 Alert Type	66
1.1.2 Voicemail	59	1.5 Service Alerts	66
1.1.3 Missed Calls	59	1.6 Power On/Off Tone	66
1.1.4 Messages	59	1.7 Flip Tone	67
1.1.5 Time & Date	59	2. Display	67
1.1.6 Help	60		

2.1 Wallpaper	67	6. Alltel Shop & Web	75
2.2 Banner	68	6.1 Alltel Info	75
2.3 Backlight	68	6.2 Web Settings	75
2.4 Menu Style	68	7. System	75
2.5 Languages	68	7.1 Network	75
2.6 Clocks & Calendar	69	7.1.1 System Select	75
2.7 Font Settings	69	7.1.2 Set NAM	76
2.8 Phone Dial Search	69	7.1.3 Auto NAM	76
3. Security	70	7.1.4 Serving System	76
3.1 Lock Phone	70	7.2 Location	76
3.2 Restrictions	70	8. Memory	77
3.3 Emergency #'s	71	9. Phone Info	77
3.4 Change Lock Code	71	RealTone JukeBox	78
3.5 Reset Default	72	Alltel Navigation	78
4. Call Settings	72	Wallpaper Universe	78
4.1 Answer Options	72	Safety	79
4.2 Auto Retry	72	TIA Safety Information	79
4.3 One-Touch Dial	73	Exposure to Radio Frequency Signal	79
4.4 Voice Privacy	73	Antenna Care	79
4.5 Voice Clarity	73	Phone Operation	80
4.6 Airplane Mode	74	Tips on Efficient Operation	80
4.7 TTY Mode	74		
5. PC Connection	74		

Table of Contents

Driving	80	Using headsets safely	89
Electronic Devices	80	FDA Consumer Update	89
Pacemakers	81	10 Driver Safety Tips	100
Persons with pacemakers:	81	Consumer Information on	
Hearing Aids	81	SAR	103
Other Medical Devices	81	FCC Hearing-Aid Compatibility	
Health Care Facilities	82	(HAC) Regulations for Wireless	
Vehicles	82	Devices	106
Posted Facilities	82	<hr/>	
Aircraft	82	Accessories	110
Blasting Areas	82	<hr/>	
Potentially Explosive Atmosphere	82	Limited Warranty	
For Vehicles Equipped with an		Statement	111
Air Bag	83	<hr/>	
Safety Information	83	Index	115
Charger and Adapter Safety	84		
Battery Information and Care	85		
Explosion, Shock, and Fire Hazards	86		
General Notice	86		
Warning! Important safety			
information	88		
Avoiding hearing damage	88		
Using your phone safely	88		
Avoiding hearing damage	89		

Some content in this user guide may differ from your phone depending on the phone software. Features and specifications are subject to change without prior notice.

Welcome

Thank you for choosing the AX310 cellular phone designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this compact phone offers:

- Significantly enhanced voice clarity.
- Slim and sleek design with internal antenna (Internal antenna described as antenna throughout this user guide).
- Large, easy-to-read, backlit LCD with status icons.
- Paging, messaging, voice mail, and caller ID.
- 24-key keypad.
- Speakerphone feature.
- Menu-driven interface with prompts for easy operation and configuration.
- Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
- Bilingual (English and Spanish) capabilities.
- Bluetooth® wireless technology.

Note

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.

Technical Details

Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Technical Details

The AX310 is a dualmode phone that operates on among (Code Division Multiple Access CDMA) frequencies: cellular services a 800 MHz, (Personal Communication Services PCS) at 1.9 GHz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The Cellular and PCS CDMA networks consist of MSO

(Mobile Switching Office), BSC
(Base Station Controller), BTS

(Base Station Transmission
System), MS (Mobile Station).

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000 ANSI TIA/EIA 553A	CDMA Dual Mode Air Interface 14.4kbps radio link protocol and inter-band operations IS-95 adapted for PCS frequency band cdma2000 1xRTT AirInterface
Network	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41 -C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem operations Non-signaling data comm.
Service	TIA/EIA/IS-96-B TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Short message service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
Performance	TIA/EIA/IS-97 TIA/EIA/IS-98 ANSI J-STD-018 ANSI J-STD-019 TIA/EIA/IS-125	Cellular base station Cellular mobile station PCS personal station PCS base station Speech CODEC

Technical Details

Technical Details

* TSB-74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible.

The following table lists some major CDMA standards.

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic

energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.79 inches (2.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing

metallic components should not be used. Avoid the use of accessories that cannot maintain 0.79 inches (2.0 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted the External Antenna

(Optional, if available.)

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and vehicle-mounted the external antenna. For more information about RF exposure, visit the FCC website at www.fcc.gov.

FCC Notice and Cautions

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the

following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

Technical Details

Caution

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin a minor burn may result. Contact your local dealer for a replacement antenna.

Part 15.19 statement

This device and its accessories comply with part15 of FCC rules. Operation is subject to the following two conditions:

- (1) This device & its accessories may not cause harmful interference.
- (2) This device & its accessories must accept any interference received, including interference that may cause undesired operation.

Part 15.21 statement

Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. if this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Welcome

Phone Overview

Phone Overview



1. **Earpiece** Lets you hear the caller.
2. **LCD Screen** Displays messages and indicator icons. When the phone is turned on, Power Save mode automatically dims the screen and then darkens it if no keys are pressed.
3. **Left Soft Key** Use to access the Contacts list from the standby screen, or the function immediately above it.
4. **Speakerphone Key** Use to turn Speaker On or Off.
5. **SEND Key** Use to place or answer calls.
6. **Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
7. **Vibrate Mode Key** Use to set Normal/Vibrate Only mode from standby mode, press and hold for about 3 seconds.
8. **Navigation Key** Use to navigate through menus and options. When in standby mode, use for quick access to Alltel Web, Ringers, My Menu and Alltel myapps.
9. **Right Soft Key** Use to access Messaging from the standby screen, or the function immediately above it.
10. **Menu/OK Key** Lets you access the phone's main Menu and also selects the highlighted choice when navigating through a menu or function.
11. **Voice Command** When in standby mode, use to start the Voice Command feature.
12. **PWR/END Key** Use to turn the power on/off and to end a call. Also returns to standby mode.
13. **CLR Key** Deletes single spaces or characters with a quick press, but press and hold to delete text entered. Will also back you out of menus, one level at a time.
14. **Lock Mode Key** Use to lock the phone when in standby mode, press and hold for about 3 seconds.



1. **Earphone Jack** Allows the use of a headset for handsfree conversations.
2. **Side Keys** Use to adjust the ringer volume in standby mode and the earpiece volume during a call.
3. **Charger Port** Connects the phone to the battery charger or other available accessories.
4. **Side Camera Key** Use for quick access to Camera function.

Charging with PC USB

You can use your computer to charge your phone. Connect one end of a USB cable to the charging accessory port on your phone and the other end to a highpower USB port on your PC (commonly located on the front panel of the computer). When charging with Hub, charge the phone with Hub Power.

5. **Camera Lens** lets you take pictures and videos.
6. **Speaker** lets you hear the different ringers and sounds.

Menus Overview

Menu Access

While in standby mode, press **OK** **Menu** to access the phone menus. There are two methods of accessing menus and submenus:

- Use the navigation key to highlight and select. Or
- Press the number key that corresponds with the menu (or submenu).

Messaging

1. New Text Message
2. New Picture Message
3. Inbox
4. Sent
5. Drafts
6. Voicemail
7. Templates
8. Settings
 1. All Messages
 2. Text Message
 3. Picture Message
 4. Edit Voicemail#

9. Delete All

1. Delete Inbox
2. Delete Sent
3. Delete Drafts
4. Delete All Messages

Alltel Shop

Alltel Web

Multimedia

1. Take Photo
2. Record Voice

3. Images

4. Audios
5. Shuffle

Contacts

1. New Contact
2. Contact List
3. Groups
4. Speed Dials
5. My Name Card

Recent Calls

1. Missed Calls
2. Received Calls
3. Dialed Calls
4. All Calls
5. Call Timer
6. Data
7. Data Counter

Bluetooth

1. Paired Devices
2. Power
3. My Visibility
4. My Bluetooth Name
5. My Bluetooth Info

Tools

1. Voice Command
 1. Start Command
 2. Command Mode
 3. Announce Alert
 4. Train Word
 5. Best Match
2. My Menu
3. Alarm Clock
4. Calendar
5. Ez Tip Calc
6. Notepad
7. Calculator
8. World Clock
9. Stopwatch
0. Unit Converter

Settings

1. Sound
 1. Ringers
 2. Volume
 3. Message Alerts
 4. Alert Type
 5. Service Alerts
 6. Power On/Off Tone
 7. Flip Tone
2. Display
 1. Wallpaper
 2. Banner
 3. Backlight
 4. Menu Style
 5. Languages
 6. Clocks & Calendar
 1. Main Screen
 2. Front Screen

Menus Overview

- 7. Font Settings
- 8. Phone Dial Search
- 3. Security
 - 1. Lock Phone
 - 2. Restrictions
 - 3. Emergency #s
 - 4. Change Lock Code
 - 5. Reset Default
- 4. Call Settings
 - 1. Answer Options
 - 2. Auto Retry
 - 3. One-Touch Dial
 - 4. Voice Privacy
 - 5. Voice Clarity
 - 6. Airplane Mode
 - 7. TTY Mode
- 5. PC Connection
 - 1. USB Modem
- 2. Bluetooth
- 3. Closed
- 6. Alltel Shop & Web
 - 1. Alltel Info
 - 2. Web Settings
- 7. System
 - 1. Network
 - 2. Location
- 8. Memory
 - 1. Reserved Memory
 - 2. Multimedia
- 9. Phone Info.
 - 1. My Number
 - 2. ESN/MEID
 - 3. Icon Glossary
 - 4. Version

[Alltel Navigation](#)

[RealTone JukeBox](#)

[Wallpaper Universe](#)

Getting Started with Your Phone

The Battery

Note

It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. The battery charge level is shown at the top of the LCD screen.

Installing the Battery

Remove the battery cover by pressing down below the LG logo and sliding the cover up. Align the battery with the terminals near the top of the phone, then snap the rest of the battery into place. Align the battery cover then slide it downward side until it clicks into place.



Removing the Battery

Turn the phone off. Slide the battery cover to upward to remove it. Use the opening near the bottom of the battery to lift the battery out.

Getting Started with Your Phone

Charging the Battery

Use the charger provided with your phone:

Warning! Use only the charger provided with the phone. Using any charger other than the one included with the AX310 may damage your phone or battery.



Notice

Please make sure that the 'B' Side faces up before inserting a charger or data cable into the charger port of your phone.

1. Plug the end of the adapter into the phone's charger port and the other end into an electrical outlet.


2. The charge time varies depending upon the battery level.

Battery Charge Level


The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in up to three ways: sounding an audible tone, blinking the battery icon, and displaying a warning message. If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.

Turning the Phone On and Off

 
Turning the Phone On

1. Install a charged battery or connect the phone to an external power source.
2. Press  for about 3 seconds until the LCD screen lights up.

Turning the Phone Off

1. Press and hold  until the display turns off.

Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon  -- the more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.

Note

The call quality may also be affected by the places where you are and weather/ambient conditions.


Getting Started with Your Phone



Screen Icons

To see the icon glossary, go to **Menu -> Settings -> Phone Info. -> Icon Glossary** on your phone.

Making Calls

 
 



 

 
1. With the phone turned on, open the flip.

If the phone is locked, press the Left Soft Key  Unlock, enter the Lock Code (by default, it is the last 4 digits of your phone number).

2. Enter the phone number (include the area code if needed).
3. Press .
4. Press  to end the call.

Note

If Outgoing calls are restricted, you can only dial phone numbers saved in the Emergency Numbers or your Contact List. To turn off this function:

 **Menu** ->  **Settings** ->
 **Security** -> **Lock Code** ->
 ->  **Restrictions** ->
Lock Code ->  ->
Restrictions ->  **Calls** ->
 **None**

Correcting Dialing Mistakes

If you make a mistake while dialing a number, press **CLR** while once to erase the last digit entered, or hold down **CLR** while press digit go to the for at least 2 seconds to go back to standby mode.

Redialing Calls

1. Press **SEND** twice to redial the number from the last call. The last 120 numbers calls (40 missed, 40 received and 40 dialed) are stored in the call history list and you can also select any of these to redial.

Receiving Calls

1. When the phone rings and/or vibrates, press **SEND** to answer or open the flip (depending on your Answer Options).

Tip

To change Answer Options:

OK -> **Menu** -> **9** **MYF** **Settings** ->


4 **ghl** **Call Settings** -> **1** **gld**

Answer Options.

Choose from the following options:

Flip Open/ Any Key/ SEND Key Only/ Auto Answer

Note

If you press  (the side keys), while the phone is ringing, the ringing and/or vibration is muted for that call.

2. Press **END** to end the call.

Quick Access to Convenient Features

Lock Mode

Sets your phone to require a 4-digit password in order to use the phone.

Note

Until you change it, the default lock code/password is the last 4 digits of your phone number.

To quickly lock your phone press



for three seconds. To

unlock, press Left Soft Key

Unlock, enter the Lock Code

and press .

Mute Function

The Mute Function can be used during a phone call. To quickly activate Mute press Left Soft Key **Mute**, then to cancel press Left Soft Key **Unmute**.

Quick Volume Adjustments

Use the side keys to adjust the Master volume while in standby mode, and the earpiece volume during a phone call. The upper key increases the volume and the lower key decreases the volume.

Note

Keypad Volume is adjusted through the Sound Volume menu:

-> Menu -> **Settings** ->
Sound -> **Volume** ->
Keypad -> Use to
 adjust volume and press .

Call Waiting

Your cellular service may offer call waiting. While a call is in progress, a beep indicates another incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call.

Check with your cellular service provider for information about this function.

1. Press **SEND** to answer a waiting call.
2. Press **SEND** again to switch between calls.

Caller ID

Caller ID displays the phone number or name of the incoming call. If the caller's identity is stored in Contacts, the name will appear along with the phone number. Check with your cellular provider for information about this function.

Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly. A speed dial number can be assigned to a specific phone number. By pressing and holding down a

number key, your phone will recall the phone number associated from the Contact List and display it briefly while simultaneously dialing that phone number for you. Speed Dial Number 1 is set to Voicemail by default and is unchangeable.

Dialing Single Digit Speed Dials (from 2 to 9)

Press and hold the Speed Dial number.

OR

Enter the Speed Dial number and press **SEND**.

Dialing Double Digit Speed Dials (from 10 to 99)

Press the first digit and then press and hold the key of the second digit.

OR

Enter the first and second digits and press **SEND**.

Entering and Editing Information

Text Input

You can customize and enter text in many of the functions in your phone. Including, but not limited to: the Banner, Calendar, Contacts and more. While entering text, the following are your options:

Key Functions



Left Soft Key:

Press to scroll through the following text input modes:

T9 Word: T9WORD/

T9Word/ T9word

Abc: ABC/ Abc/ abc

123

Symbols



Shift Key: Press to change capitalization modes:

T9Word : T9Word ->

T9WORD -> T9word

Abc : Abc -> ABC -> abc



Next: In T9 mode, press to display other matching words.



Space: Press to complete a word and insert a space.






Clear: Press to delete a single space or character. Hold to delete the text entered.



Punctuation: When entering text or numbers, press to enter punctuation marks or some of available special characters.


Contacts in Your Phone's Memory

The Basics of Storing Contacts Entries

1. From standby mode enter the phone number you want to save (up to 48 digits).
2. Press Left Soft Key  **Save**.
3. Select either **Save New** or **Update Existing**.
4. Use  to highlight a Label and press .
**Mobile 1/ Home/ Work/
Mobile 2/ Fax**

Note


Use **Update Existing** to add another phone number to a contact already stored in memory.

5. Enter a name for the phone number (up to 22 characters) and press . A confirmation message is displayed briefly.

Phone Numbers With Pauses

When you call automated systems, such as voice mail or credit billing numbers, you often have to enter a series of numbers to navigate through the system. Instead of entering these numbers by hand, you can store the numbers in your Contacts separated by special pause characters (W, P). There are two different types of pauses you can use when storing a number:

Wait (W)

The phone stops dialing until you press Left Soft Key  **Release** to advance to the next string of digits.

Pause (P)

The phone waits 2 seconds before sending the next string of digits.

Contacts in Your Phone's Memory

Storing a Number with Pause or Wait

1. Press **OK** **Menu**.
2. Press **5 jkl** **Contacts**.
3. Press **1 o** **New Contact**.
4. Enter a name (up to 22 characters) and enter a number.
5. While entering a number, press Right Soft Key **Options**.
6. Press **3 def** **Wait** or **4 ghi** **Pause**.
7. Enter additional number(s) then press **OK** **Save**.



Adding Pause or Wait to an Existing Number

1. Press the Right Soft Key **Contacts** to display your Contacts alphabetically.
2. Use **↓** to highlight the Contact entry to edit, then press **OK** **View**.
3. Press Left Soft Key **Edit**.
4. Use **↓** to highlight the number.
5. Press Right Soft Key **Options**.
6. Press **3 def** **Wait** or **4 ghi** **Pause**.
7. Enter additional number(s), then press **OK** **Save**.


Searching Your Phone's Memory

The AX310 phone is able to perform a dynamic search of the contents in your phone's Contact List. A dynamic search compares entered letters on the Dialpad against the entries in your Contacts. A matching list is displayed in descending order. You can then select a number from the list to call or view.






Scrolling Through Your Contacts

1. Press  **Contacts** to display your Contacts alphabetically.
2. Use  to scroll through the list.

Searching by Letter

1. Press  **Contacts** to display your Contacts alphabetically.
2. Start entering the Contact name. The closest (alphabetical) match will be highlighted.

Contacts Options

1. Press  **Contacts**.
2. Highlight a contact and press Right Soft Key  **Options**.
3. Select an option (use  then press , or press the corresponding number on the keypad):
 -  **Send Message:** Send a text message or picture message to the selected contact.

Contacts in Your Phone's Memory

- 2 abc** **Delete:** Delete the selected entry in your Contacts.
- 3 def** **Edit:** Edit the selected contact information.
- 4 ghi** **Delete Multiple:** Choose **Selective/ All** to delete multiple entries at one time.
- 5 jkl** **Send via Bluetooth:** Send the contact (as a vCard) via *Bluetooth*.
- 6 mno** **Set Speed Dial/ Remove Speed Dial:** Set a speed dial or remove the speed dial.

Making a Call From Your Phone's Memory

Once you have stored phone numbers in your Contacts, you can place calls to those numbers quickly and easily.

- By pressing Send Key **SEND** after searching for a phone number in your Contacts list.
- By using Speed Dials.

From Contacts

1. Press **☰** **Contacts** to display your Contacts.
2. Use **↑** to highlight the Contact entry, then press **OK**.
3. Use **↓** to highlight the phone number.
4. Press **SEND** to place the call.

From Call History

1. Press **OK** **Menu**.
2. Press **6 mino** **Recent Calls**.
3. Use **▲** **▼** to highlight the type of recent call, then press **OK**.

Missed Calls/Received Calls/Dialed Calls/All Calls

4. Use **▲** **▼** to highlight the phone number.
5. Press **SEND** to place the call.

Speed Dialing

For a single-digit Speed Dial, press and hold the digit or press the digit, then press **SEND**. For a double-digit Speed Dial, press the first digit and hold the second digit or press the first and second digits, then press **SEND**.

Phone Menus

Messaging



The phone can store up to 435 messages (including a maximum of 100 SMS and 100 MMS in the Inbox). The information stored in the message is determined by phone model and service capability. Other limits such as available characters per message may exist, please check with your service provider for system features and capabilities.

1. New Text Message

Allows you to send text messages, pages (if supported by the recipient's network), and e-mail transmissions.


 




The Basics of Sending a Text Message

1. Press , , .
2. Enter the recipient's address.

3. Press  to access the text screen.
4. Type your message (text or e-mail).
5. Press  **Send**.

A confirmation message is displayed.

Select Recipient(s) Using Options

1. Press , , .
2. Press Right Soft Key  Options.
3. Use  to highlight an option and press .

Contacts To select a recipient from your Contact List.

Recent Calls To select a recipient from your Recent Calls.

Messaging

Recent Messages Choose **Inbox/ Sent** to select a recipient from your Recent Messages.

Groups Select a recipient from your Groups.

Cancel Cancels the message.

4. Complete your message and send or save it.

Customize Your Text Message Using Options

While you are composing the text of a message, you have various options to customize the text.

1. Press **OK**, **1**, **1**.
2. Enter the recipient's address.
3. Use **↓** or press **OK** to get to the text entry window.

4. Press Right Soft Key **Options**.

5. Use **↓** to highlight an option and press **OK**.

Add Graphic/ Animation/ Sound/ Templates/ Signature

Text Format Alignment/ Font Size/ Font Style/ Text Color/ Background

Save As Draft/ Templates

Priority Level Normal/ High

Callback # On/ Off

Delivery Notice On/ Off

Cancel Cancels the message.

6. Complete your message and send or save it.

Messaging

Message Icon Reference

Inbox

	New/Unread Text/Picture Message
	Opened/Read Text/Picture Message
	New/Unread Notification Message
	Opened/Read Notification Message
	Priority High
	MMS New/Read Priority High

Sent

	Failed Text/Picture Message
	Failed Multiple Text/Picture Messages
	Sent Text Message








Drafts

	Draft Text Message
	Draft Picture Message

2. New Picture Message

Allows you send messages with Text, Image and Audio.


1. Press **OK**, **1**, **2 abc**.
2. Enter the recipient's address, or press Right Soft Key **Options** to search recent contacts, and press **OK** to select the desired contact.
3. Press **OK** to access the message screen.
4. Type your message, then use **↑** to access other fields.
5. With the highlight on **Image**, press Left Soft Key **Add**, and press **OK** to select:
Image / Take Photo
6. Use **←** to highlight a picture, then press Left Soft Key **Set**.

7. With the highlight on **Audio**, press Left Soft Key  **Add**, and press  to select a file (listed) or a file from **My Audios**. Please note that files from **Default** are not supported.
8. Use  to highlight a sound, then press Left Soft Key  **Set**.
9. Use  to highlight **Subject**, then enter subject.
10. Use Right Soft Key  **Options**.
 - * Options for the **To:** field
Contacts/ Recent Calls/ Recent Messages/ Groups/ Online Album/ Cancel
 - * Options for the **Text** field
Preview/ Add/ Go to/ Save As/ Priority Level/ Delivery Notice/ Remove/ Cancel
 - * Options for the **Image** field
Preview/ Add Slide/ Go to/ Save As Draft/ Priority Level/ Delivery Notice/ Remove/ Cancel
 - * Options for the **Audio** field
Preview/ Add Slide/ Go to/ Save As Draft/ Priority Level/ Delivery Notice/ Remove/ Cancel
 - * Options for the **Subject** field
Preview/ Add/ Go to/ Save As/ Priority Level/ Delivery Notice/ Remove/ Cancel
12. Press  **Send** to send.

Messaging

3. Inbox

The phone can alert you in several ways when you receive a new message, including:


- Displaying a notification message on the screen.
- Displaying the message icon  on the status bar (It blinks when the message is urgent).
- Ringing and/or Vibrating (depending on the Volume settings).




Received messages are displayed from newest to oldest.

Viewing Your Inbox

Up to 300 (100 SMS, 100 MMS and 100 MMS Notifications) messages can be stored in the Inbox.

1. Press  ,  ,  .



2. Use  to highlight an inbox message.

3. Press Left Soft Key  **Reply** to reply, or Right Soft Key  **Options** or press  **Chat** to view the message.

The Options menu options available are:

For text messages: **View/ Change View Type/ Delete/ Forward/ Save Contact/ Lock/ Message Info/ Delete Multiple**

For picture messages: **Delete/ Forward/ Save Contact/ Lock/ Message Info/ Delete Multiple**

4. While viewing the message as a Chat conversation, press Left Soft Key  **Reply** to reply, or Right Soft Key  **Options** to view additional options.

View Last Message/ Delete Last Chat/ Delete All/ Save Contact/ Go to Website

Note

The options available when viewing a picture message:

Play Again/ Delete/ Forward/ Save Contact/ Save Media/ Lock/ Go to Website/ Message Info

4. Sent

Up to 100 sent messages (50 SMS and 50 MMS) can be stored in the Sent folder. Access the Sent message list to view contents of sent messages and verify whether the transmission was successful or not.

1. Press **OK**, **1**, **2**, **4**.
2. Use **↑** to highlight a sent message. Press Left Soft Key **Resend** to resend the

message to the recipient, **OK** **View** to view the message, or Right Soft Key **Options** to access additional options.

Delete/ Forward/ Save Contact/ Lock/ Message Info/ Delete Multiple

3. While viewing the selected sent message, press Left Soft Key **Resend** to resend the message to the recipient, or Right Soft Key **Options** to access the following options:

Delete Deletes the selected message.

Forward Forwards a received message to other destination address(es).

Messaging

Save Contact Stores the underlined number, e-mail address, and numbers in the received message into your Contacts.

Save as Templates Stores the message as a template for future messages.

Lock/Unlock Locks or unlocks the selected message.

Message Info Shows the message type priority and status.

Note

The options available when viewing a picture message:

Play Again/ Delete/ Forward/ Save Contact/ Save Media/ Lock/ Go to Website/ Message Info

5. Drafts

Displays saved messages and draft messages.

1. Press **OK**, **1**, **5**.

2. Use **⏏** to highlight a Saved message. Options available are:

- Press **OK** **Edit**.
- Press Right Soft Key **Options**.

Delete Deletes the selected message from the Drafts folder.

Save Contact Select **Save New/ Update Existing** to store the phone number or e-mail address in the draft message into your Contacts or update an existing contact already stored in memory.

Lock/Unlock Locks a message so that it is not erased if the Delete Drafts or Delete All Messages feature is used.

Delete Multiple Select **Selective/ All** to delete multiple messages at one time.

6. Voicemail

Allows you to access new voice messages recorded in your voice mail box. Your phone will alert you when you receive a new voice message.

Checking Your Voicemail Box

1. Press **OK**, **1**, **6**, **6**.
2. Choose from the following options:
 - Press Left Soft Key **Clear** to clear the voicemail counter.
 - Press **SEND** to listen to the message(s).
 - Press Right Soft Key **Exit** to return to the Messaging menu.

7. Templates

Allows you to display, edit, and add text phrases. These text strings allow you to reduce manual text input into messages.

1. Press **OK**, **1**, **6**, **7**.
2. Press Left Soft Key **New** to create a new template.

Enter text and press **OK** **Save** to save the template.

3. Use **↑** to highlight a template and press Right Soft Key **Options**, then highlight an option and press **OK** to select:





Delete/Edit

8. Settings

Allows you to configure Messaging settings.

1. Press **OK**, **1**, **6**, **8**.

Messaging

- Use  to highlight **All Messages/ Text Message/ Picture Message/ Edit Voicemail #** then press .
- Use  to highlight one of the submenus and press  to select it.

Message Settings Sub-Menu Descriptions

All Messages

- 1. Auto Save (Auto Save/ Prompt/ Do Not Save)**
With this feature on, messages are automatically saved in Sent when transmitted.
- 2. Auto Delete (On/ Off)**
With this feature on, read messages are automatically deleted when you exceed the storage limit.

3. Entry Mode

Allows you to select the default input method including T9Word, Abc and 123.

4. Signature (On/ Off/ Edit)

Allows you to make/edit a signature to automatically send with your messages.

5. Speed Messaging (On/ Off)

Allows you to send messages quickly to your Speed Dial contacts. Create a message and enter the text and content. Then, instead of entering a number or contact, press and hold down the Speed Dial number; the message will automatically be sent to that Speed Dial contact.

For example:

1. Assign the number 2 as a speed dial for one of your contacts.
2. Compose a new text or picture message. In the destination address window, hold down the number 2 key instead of entering the address, and the message will be automatically sent to that contact.

Text Message

1. Auto View (On/ Off)

When set to On, new messages will automatically display on your screen when they are received.

2. Auto Play (On/ Off)

Allows the display to automatically scroll down while viewing messages.

3. Callback # (On/ Off/ Edit)

With this feature on, you can input the callback number that will be automatically included when you send a message.

Picture Message

1. Auto Receive (On/ Off)

With this set to On, attached content will automatically download when a new picture message is received.

Edit Voicemail

Allows you to manually enter the access number for Voicemail Service. This feature should only be used when a VMS (Voicemail Service) access number is not provided from the network.

Alltel Shop

9. Delete All

Allows you to erase the messages stored in your Inbox, Sent, or Drafts message folders. You can also erase all messages at the same time.

1. Press **OK** , **1** , **9** .
2. Use **↓** to highlight an option: **Delete Inbox/ Delete Sent/ Delete Drafts/ Delete All Messages** then press **OK** .
3. Use **↓** to highlight **Yes/ No** and press **OK** .

Alltel Shop

Alltel Shop allows you to do more than just talk on your phone. Alltel Shop is a technology and service that allows you to download and use applications on your phone. With Alltel Shop, it is quick and easy to personalize your phone to suit your lifestyle and tastes. Just download the applications that appeal to you. With a wide range of software available, from ringtones and wallpapers to games and productivity tools, you can be assured that you will find something useful, practical, or downright entertaining.

Downloading Applications

You can download applications and use Alltel Shop anywhere on the network, as long as your handset has a digital signal available. Most applications do not use a network connection while in use.

Alltel Web

Incoming Calls

While downloading an application, incoming calls will automatically be sent to your voice mail, if available. If you do not have voice mail, downloading will not be interrupted by an incoming call, and the caller will receive a busy signal.

When using applications, an incoming call will automatically pause the application and allow you to answer the call. When you complete your call, you can resume using the application.

1. Launch

Opens the Alltel Shop, where you can access **my apps** or download new ones.

1. Press **OK** , **2 abc** .

2. After a few seconds, you will see the downloaded applications list.

Alltel Web

The Alltel Web feature allows you to view Internet content.

Accessibility and selections within this feature are dependent upon your service provider. For specific information on Alltel Web contact your service provider.

1. Launch

Allows you to initiate an Alltel Web session.

1. Press **OK** , **3 def** .

2. After a few seconds, you will be directed to your home page.

Alltel Web

Ending an Alltel Web Session

End an Alltel Web session by pressing .

Navigating Through the Browser

On-screen items may be presented in one of the following ways:


- **Numbered options**

You can use your numeric keypad or you can select the items by moving the cursor and pressing the appropriate Soft Key(s).

- **Links embedded in content**

You can select the options or the links by using the Soft Keys at the bottom of the display screen.


Scrolling

Use  to scroll through the content if the current page does not fit on one screen. The currently selected item is indicated by a the highlighted text on the screen.

Fast Scrolling


Use the Side Volume Keys to quickly move the cursor up and down on the current screen.

Entering Text, Numbers, or Symbols

When prompted to enter text, the current text entry method appears above the Right Soft Key . Press the Right Soft Key to select another Text Entry mode:

**abc/ ABC/ Sym/ 123/
Emoticons/ word/ WORD**

Initiating a Phone Call From Alltel Web

You can make a phone call from Alltel Web if the site you are using supports the feature. Usually, this involves an embedded phone number that can be highlighted and called by pressing the . After you end the call, your phone returns to the screen from which you initiated the call.




Multimedia

Multimedia

View, take, and exchange digital pictures right from your wireless phone.

1. Take Photo

1. Press  ,  ,  .

2. Set the brightness using  , zoom using  and press Right Soft Key  **Options** to change the following settings:

View Mode Fit to Screen/
Landscape

Resolution 1280X960/
640X480/ 320X240/
176X144/ 160X120

Quality Fine/ Normal/
Economy

Zoom

Brightness

Night Mode On/ Off

Self Timer Off/ 3 Seconds/
5 Seconds/ 10 Seconds

White Balance Auto/ Sunny/
Cloudy/ Tungsten/
Fluorescent

Color Effects Color/ Sepia/
Mono/ Negative


Template On/ Off




Shutter Sound None/ Sound
1/ Sound 2/ Sound 3/ Say
Cheese

Multishot Off/ 3 shots/ 6 shots

AlltelMyPics Remider Enable/
Disable

Auto-Save Enable/ Disable

3. Take a picture by pressing  **Take**.

4. Press Right Soft Key  **Delete**,  **Send**, or Left Soft Key  **Save**. If you choose to Save, you can choose to send the picture to AlltelMyPics.net.

The picture is stored in **Gallery**.

2. Record Voice

Allows you to add, listen to, and erase short verbal reminders.

1. Press **OK**, **4 ghi**, **2 abc**.
2. Press **OK** **Record** to record a new voice memo.
3. Talk into the microphone, then press **OK** **Stop**.
4. Once you've stopped the recording, press Right Soft Key **Options** to access the following:
Rename/ Delete
Or
Press Left Soft Key **Save** to save. The default memo title is the date and time of recording.

3. Images

Allows you to view the saved images on your phone. You can

also select images to customize your phone's Main Screen, Front Screen, or Picture ID.

1. Press **OK**, **4 ghi**, **3 def**.
2. Use **Up** to highlight **My Images/ Default** then press **OK**.
3. Use **Left** to highlight an image. Once you have an image highlighted, you can:
 - Press Right Soft Key **Options** to access additional options. Then, use **Down** to highlight and select one of the following options:

For images saved in **My Images**:
Set as/ Take Photo/ Delete/ Rename/ Lock/ List View/ Information/ Delete Multiple/ Sort by/

Multimedia

Send via Bluetooth/ Send to AllteMyPics.net

For images saved in Default:

Set as/ List View/ Information

- Press **OK** **View** to view the selected image.
- Press Left Soft Key **Send** to send the selected image to somebody else. (This option is only available in My Images).

4. Audios

Allows you to access saved audio clips on your phone. You can also customize some phone sound settings using these menus.






1. Press **OK**, **4 gpi**, **4 gpi**.
2. Press Left Soft Key **Voice** to record an audio clip.

- Press Left Soft Key **Audio** to return to the My Audios list.

3. Press **OK** **Record** to begin recording.
4. While recording, press Left Soft Key **Pause** to pause, or **OK** **Stop** to stop recording.
5. When you are finished recording, press Left Soft Key **Save** to save the audio clip, **OK** **Send** to send the audio clip to somebody else, or Right Soft Key **Options** to access additional options. Use **Up** to highlight **Rename/Delete** and press **OK**.

-Or-

2. Use **Up** to highlight **My Audios/ Default** and press **OK**.
3. Use **Down** to highlight the audio clip.

- Press Left Soft Key  **Send** to send the selected audio clip to somebody else.
- Press  **Play** to play the selected audio clip.
- Press Right Soft Key  **Options** to access additional options. Use  to highlight an option and press .











Options for audio files in **My Audios**: **Record Voice/ Delete/ Rename/ Lock/ Information / Delete Multiple/ Sort By/ Send Via Bluetooth**

Options for audio files in **Default**: **Set as/ Information**

5. Shuffle

Allows you to set your ringtone and wallpaper to shuffle and

change after a selected period of time.

1. Press , , .
2. Use  to highlight **Ringtone List/ Wallpaper List** then press .
3. Press  **Add** to begin adding ringtones or wallpapers to the Shuffle list.
4. Use  to highlight the desired ringtones or wallpapers and press  to select them.
5. Press Left Soft Key  **Done** when you are finished selecting the ringtones or wallpapers you wish to add.
6. Press Right Soft Key  **Options** and select **Settings**. From this menu you can configure the Shuffle preferences.

Contacts

Contacts

The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory. When you access your Contacts, the number in parentheses represents the number of entries you have stored (up to 1000).

1. New Contact

Allows you to add a new contact to your Contact List.

Note

Using this submenu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry.

1. Press **OK**, **5 jkl**, **1 000**.
2. Enter the name, then press **↓**.
3. Highlight the field you wish to store the contact information in.

4. Enter the phone number or e-mail address.
5. Continue adding the desired contact information to the entry.
6. When you are finished entering the desired contact information, press **OK** **Save** to save the entry into your Contact List.

2. Contact List

Allows you to view your Contact List.

1. Press **OK**, **5 jkl**, **2 abc**.
2. Choose from the following options:
 - Press **↑** to scroll through your Contacts alphabetically.
 - Press Right Soft Key **Options** to select one of the following:

Send Message/ Delete/ Edit/ Delete Multiple/ Send via Bluetooth/ Set Speed Dial/ Remove Speed Dial

- Press **OK** **View** to view the contact's information.
- Press Left Soft Key **New** to create a new Contact.

3. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a whole group.

1. Press **OK**, **5** **nl**, **3** **del**.
2. Choose from the following options:
 - Use **↑** to highlight a group, then press **OK** **View** to view the contacts in the selected group.

- Press Left Soft Key **New** to add a new group.
- Use **↑** to highlight a group, then press Right Soft Key **Options** to choose from the following options:




Delete/ Send Message/
Rename Group/ Set Ringtone/
Delete All

4. Speed Dials

Allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.







1. Press **OK**, **5** **nl**, **4** **gh**.
2. Use **↑** to highlight the desired Speed Dial location (or enter the Speed Dial digits), and press **OK** **Assign**.

Recent Calls

- Use  to highlight the Contact.
- Use  to choose a number, then press .
A confirmation message is displayed.

5. My Name Card

Allows you to view and add to your personal Contact information that can be sent via Bluetooth®.

- Press  ,  ,  .
- Use  to highlight the feature you wish to edit, and press Left Soft Key  Edit.
- Edit the information as desired and press  .


Note

You cannot edit the Mobile 1 field, but you can add additional contact info.

Recent Calls

The Recent Calls menu has lists of phone numbers and/or Contact entries for calls you missed, received or dialed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Note

To quickly view the list of Recent Calls, press  from standby mode.

1. Missed Calls

Allows you to view the list of missed calls, up to 40 entries.

- Press  ,  ,  .
- Use  to highlight an entry.

2. Received Calls

Allows you to view the list of incoming calls; up to 40 entries.

1. Press **OK**, **6 mno**, **2 abc**.
2. Use **↑** to highlight an entry.

3. Dialed Calls

Allows you to view the list of outgoing calls; up to 40 entries.

1. Press **OK**, **6 mno**, **3 def**.
2. Use **↓** to highlight an entry.

4. All Calls

Allows you to view the list of missed, received and dialed of calls; up to 120 entries.

1. Press **☰**, **6 mno**, **4 ghi**.
2. Use **↑** to highlight an entry.

5. Call Timer

Allows you to view the duration of selected calls.

1. Press **☰**, **6 mno**, **5 jkl**.
2. Use **↑** to highlight a call type, then press **OK**.

**Last Call/ Home Calls /
Roam Calls / All Calls**

6. Data

Allows you to view the list of the most recent data calls.

1. Press **☰**, **6 mno**, **6 mno**.
2. Use **↑** to highlight a call, then press **OK** **View** to view the call details.

Bluetooth

7. Data Counter

Allows you to view the amount of Received and Sent data.

1. Press **OK**, **6 min**, **7 pers**.
2. Use **↑** to highlight a data call list, then press **OK**.

Received Data/ Sent Data/
All Data

Bluetooth

The AX310 is compatible with devices that support the Bluetooth® headset and hands-free profile(s). You may create and store 20 pairings within the AX310 and connect to one device at a time. The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).

Bluetooth QD ID B015228

Note

Read user guide of each Bluetooth® accessory that you are trying to pair with your phone because the instructions may be different.

The Bluetooth® features available on this handset may not be compatible with all Bluetooth® enabled devices. Your service provider or handset manufacturer cannot be held responsible for compatibility issues with devices not sold by the service provider or handset manufacturer.

1. Paired Devices

Pairing is the process that allows the handset to locate, establish and register 1-to-1 connection with the target device.

For pairing new Bluetooth® device

1. Press **OK**, **7 pgs**, **1**.
2. Follow the Bluetooth® accessory instructions to set the device to pairing mode.
3. Press Left Soft Key **Search**.
4. If Bluetooth® power is set to off, you will be prompted to turn power on. Highlight **Yes** and press **OK**.
5. Select **New Search/Last Search**. The device will appear in the Add New Device menu once it has been located.

Highlight the device and press **OK** **Pair**.



6. If you attempt to pair a device that is part of the handset profile, your device will automatically attempt to pair using a "0000" passcode.
7. The handset will prompt you for your connection preferences. Highlight **Always Ask** or **Always Connect** and press **OK**.
8. Once connected, you will see the device listed in the Paired Devices menu.

2. Power

Allows you to set the Bluetooth® power On/Off.

1. Press **OK**, **7 pgs**, **2 abc**.

Bluetooth

- Use  to select a setting, then press .

 




On/ Off

Note

By default, your device's Bluetooth® functionality is turned off.

3. My Visibility

Allows you to set the visibility of your Bluetooth® device.

- Press , , .
- Use  to select a setting, then press .







Visible/ Hidden

Note

If you turn on My Visibility, your device is able to be discovered by other in-range Bluetooth® devices.

4. My Bluetooth Name

Allows you to edit the name/alias of your Bluetooth® device.

- Press , , .
- Hold down  to clear the existing name.
- Use the alphanumeric keypad to enter a new alias.
- Press  Save to save and exit, or Right Soft Key  Cancel to cancel editing.

5. My Bluetooth Info

Allows you to view information regarding the Bluetooth® functionality.

- Press , , .

Tools

Tools

1. Voice Command

Allows you to make phone calls quickly and easily by voice. Your phone recalls the number from your Contacts, displays it briefly, and then dials it. This menu includes useful features for those who may be driving or blind. It delivers time information by voice and allows you to check missed calls, messages and voicemails.

Shortcut

When in standby mode, press **OK** to quickly and easily access Voice Command.

1.1 Start Command

1. Press **OK**, **8 tuv**, **1**, **1**.

1.1.1 Call <Name> or <Number>

1. Press **OK**, **8 tuv**, **1**, **1**, **1**.

2. Say the Contact name (and phone type, if applicable) or number.

1.1.2 Voicemail

1. Press **OK**, **8 tuv**, **1**, **1**, **2 abc**.

1.1.3 Missed Calls

You can check missed alerts.

1. Press **OK**, **8 tuv**, **1**, **1**, **3 def**.

2. The handset will prompt you to dial each number. Say **Yes** or **No** to proceed.

1.1.4 Messages

1. Press **OK**, **8 tuv**, **1**, **1**, **4 ghi**.

1.1.5 Time & Date

1. Press **OK**, **8 tuv**, **1**, **1**, **5 jkl**.

Tools

1.1.6 Help

Allows you to check the information of Voice Control.

1. Press **OK**, **8 tuv**, **1 abc**, **1 abc**, **6 mno**.

1.2 Command Mode

Allows you to set command mode to Normal or Speed (The Speed setting allows you to access and use the Voice Command functions more quickly with a faster non-verbal prompt).

1. Press **OK**, **8 tuv**, **1 abc**, **2 abc**.
2. Select options.
Normal/ Speed

1.3 Announce Alert

Allows you to customize Announce Alert. Announce Alert lets you hear more information about an incoming call or message instead of, or along with, your ringtone.

1. Press **OK**, **8 tuv**, **1 abc**, **3 def**.
2. Select options.
**Disable/ Announce/
Announce + Ring**

1.4 Train Word

Allows your to train words for improved Voice Command responses.

1. Press **OK**, **8 tuv**, **1 abc**, **4 ghi**.
2. Select options.
**Voice Command/ Answer/
Digit Dial**

1.5 Best Match

Allows you to choose whether the phone displays the 4 closest matches, or only the closest match, when using the Call <Name> function.

1. Press **OK**, **8 tuv**, **1 abc**, **5 jkl**.
2. Select options.
1 Match/ 4 Matches

2. My Menu

Allows you quick access to your favorite menus or functions. A maximum of 12 items can be stored in My Menu.

1. Press **OK**, **8 tuv**, **2 abc**.
2. Select the location for your menu (or function) by using **↑**, **↓**, then press **OK**.
3. Select the menu (or function) you wish to add to My Menu by using **↑**, **↓**, then press **OK** **Set**.

Shortcut

Access the My Menu items directly from the standby screen by pressing **↓**.

3. Alarm Clock

Allows you to set up to five alarms. At the alarm time, any set alarm can sound (depending on your Master Volume settings) the tone of your choice, and an alarm message will be displayed on the LCD screen.

1. Press **OK**, **8 tuv**, **3 def**.
2. Use **↑** to highlight the alarm you wish to set, then press **OK** to select it.
3. Press Left Soft Key **←** **Set** to set the alarm time.
4. Use **↑** to highlight Repeat (recurrence setting).
5. Press **→** to select one of the following.
Once/ Daily/ Mon - Fri/ Weekends
6. Use **↑** to highlight **Ringtones**, press Left Soft Key **←** **Set** and select a folder.
My Audios/ Default
7. Use **↑** to highlight the ring tone and press the Left Soft Key **←** **Set**, then press **OK** **Save**.

Tools

4. Calendar

Allows you to store and access your agenda(s). Simply enter your appointments in the Calendar, and your phone will alert you with a reminder.

1. Press **OK**, **8 tuv**, **4 ghi**.
2. Use **⬅** to highlight the scheduled day.
 - Moves to the previous day.
 - Moves to the next day.
 - Moves to the previous week.
 - Moves to the next week.
3. Press Left Soft Key **↵** **New**.
4. Use **⬆** to highlight the field you wish to edit, then press Left Soft Key **↵** **Set** to edit your schedule information:

- Set Time
- Subject
- Reminder
- Repeat
- Repeat End
- Ringtone

5. Press **OK** **Save**.

5. Ez Tip Calc

Allows you to quickly and easily estimate the tip and total amount of a bill by inputting the bill amount before tip, the tip percentage, and dividing it by the number of people paying.

1. Press **OK**, **8 tuv**, **5 kl**.
2. Enter values for all variable fields (Bill amount, Tip (%), Split) and the corresponding calculation fields (tip and total for each person) are updated automatically.
3. Press the Left Soft Key **↵** **Reset** for another calculation.

6. Notepad

Allows you to add, read, edit, and erase notes.

1. Press , , .
2. Press Left Soft Key **New** to write a new note.
3. Type the note, then press **Save**.

A confirmation message displays briefly, then displays your list of notes.

Options for a Notepad Entry

1. Access Notepad and highlight the entry.
2. To erase, press Right Soft Key **Options**.
 - **Delete** • **Edit**
 - **Delete All**

7. Calculator

Allows you to perform simple mathematical calculations.

1. Press , , .
2. Enter data.
 - Use keypad to enter numbers.
 - Use to enter decimals.
 - Use to switch the numbers entered to a negative value.
 - Press Left Soft Key **Clear** to erase the entry.
 - Press Right Soft Key **Operator** for additional calculating options.
 - Use Navigation Keys to enter functions.
 - Press to complete equation.

Tools

8. World Clock

Allows you to determine the current time in another time zone or city.

1. Press **OK**, **8 tuv**, **8 tuv**.
2. Press Right Soft Key **→** **Cities** to select a specific city and display the date/time in that location.
3. Press **OK** to select the highlighted city.
4. Use **←** to scroll through all available cities on the map.
5. Press Left Soft Key **←** **Set DST**.

2. Press **OK** **Start** to start, and press **OK** **Stop** to stop.
 - You can use the Lap function by pressing Right Soft Key **→** **Lap** to record up to 20 laps and lap times.
3. Press Left Soft Key **←** **Reset** to reset.

0. Unit Converter

Allows you to convert units of measurement for Area, Length, Temperature, Mass, Volume and Velocity.

1. Press **OK**, **8 tuv**, **0 next**.
2. Select the unit of measurement you want to convert:
Area/ Length/ Temperature/ Mass/ Volume/ Velocity

Settings

Settings

1. Sound

Options to customize your phone's sounds:

1.1 Ringers

Allows you to assign ringtones for incoming calls.

1. Press **OK**, **9 myz**, **1 abc**, **1 abc**.
2. Select **All Calls/ Caller ID/ No Caller ID/ Restricted Calls/ Shuffle/ Buy ringtones**.
3. Select **My Audios** or **Default**.
4. Use **↑** to highlight the ringtone.
5. Press **OK** **Play** to preview the ringtone, and **Left Soft Key** **Set** to set as ringtone to your phone.

1.2 Volume

Allows you to set various volume settings.

1. Press **OK**, **9 myz**, **1 abc**, **2 abc**.
2. Select **Master Volume/ Keypad/ Earpiece/ Speaker**.
3. Use **↑** to adjust the volume of the ringer, then press **OK** to save the setting.

1.3 Message Alerts

Allows you to select the alert tone for new message notifications, and set the frequency of the Message Reminder.

1. Press **OK**, **9 myz**, **1 abc**, **3 def**.
2. Select **Text Message/ Picture Message/ Voicemail/ All Messages/ Message Reminder**.

Settings

- Use to select a file/setting, then press .

1.4 Alert Type

Allows you to select the alert types.

- Press , , , .
- Use to highlight the alert you wish to edit.
**Call Alert/ Message Alerts/
Schedule Alert/ Alarm Alert**
- Use to scroll through the alert types.
**Ring Only/ Vibrate Only/
Ring & Vib**
- Press **Save** to save.

1.5 Service Alerts

Allows you to set the Service Alert preferences.

- Press , , , .

- Select an alert option.

- Use to set **On/ Off**, then press . (for Low Battery option, **Announce/ Tone**)

1.5.1 Minute Beep

Alerts you 10 seconds before the end of every minute during a call.

1.5.2 Call Connect

Alerts you when the call is connected.

1.5.3 Back to Top


Alerts you when you scroll through the end of a menu list.

1.5.4 Low Battery

Alerts you when the battery charge level is low.


1.6 Power On/Off Tone

Allows you to set the phone to sound a tone when the phone is powered on and off.

1. Press **OK**, **9 wxyz**, **1** , **6 mins**.
2. Use **↓** to set to **On/ Off**, then press **OK**.

1.7 Flip Tone

Allows you to set a flip tone that will play when you flip your phone open or closed.

1. Press **OK**, **9 wxyz**, **1** , **7 pprs**.
2. Use **↓** to set to **On/ Off**, then press **OK**.

2. Display

Options to customize your phone's display screen.


2.1 Wallpaper

Allows you to choose the kind of background to be displayed on the phone.


1. Press **OK**, **9 wxyz**, **2 abc**, **1** .

2. Select **Main Screen/ Front Screen/ Shuffle/ Buy Wallpaper**, then press **OK**.

2.1.1 Main Screen

Highlight an image from **My Images** or **Default**, and press **OK** **View** to view the image, and **Left Soft Key**  **Set** to set it as the wallpaper.

2.1.2 Front Screen

Highlight an image from **My Images** or **Default**, and press **OK** **View** to view the image, and **Left Soft Key**  **Set** to set it as the wallpaper.

2.1.3 Shuffle

Set **Shuffle** to **On** or **Off** for the **Main Screen** or **Front Screen**, and set the **Repeat** frequency.

Settings

2.1.4 Buy Wallpaper

Allows you to buy wallpaper through Alltel application. Airtime charges may apply.

2.2 Banner

Allows you to enter a string of characters which display on the LCD screen.

1. Press **OK**, **9 wxyz**, **2 abc**, **2 abc**.
2. Use **←** to scroll between **On/ Off**.
3. Use **↑** to highlight the text window.
4. Input text and press Left Soft Key **ABC** to change text options, **OK** **Save** to save, or Right Soft Key **Cancel** to cancel editing your banner.

2.3 Backlight

Allows you to set the duration for illuminating the backlight.

1. Press **OK**, **9 wxyz**, **2 abc**, **3 def**.
2. Choose a submenu, then press **OK**.

Display/ Keypad

3. Use **↓** to select a setting, then press **OK**.

2.4 Menu Style



Allows you to view the Menu as an Icon or List display.

1. Press **OK**, **9 wxyz**, **2 abc**, **4 ghi**.
2. Select **Icon** or **List** and press **OK**.

2.5 Languages






Allows you to use the bilingual feature according to your preference. Choose between English and Spanish.

1. Press **OK**, **9 wxyz**, **2 abc**, **5 jkl**.



2. Use  to select **English** or **Spanish**, then press .

2.6 Clocks & Calendar

Allows you to select the type of clocks displayed on the main LCD or the external LCD.






1. Press , , , .
2. Choose a sub-menu and press .

Main Screen/ Front Screen



3. Use  to highlight an option and press .

2.7 Font Settings

Allows you to select the type of font displayed on the phone text and dialpad.

1. Press , , , .
2. Choose a sub-menu and press .

Font Type/ Dial Font Style/ Dial Font Size

3. Use  to highlight an option, then press .

Options for Font Type

**LG Gothic/ LG Secret/ LG
Mint**

Options for Dial Font Style

Magic/ Digital/ Basic

Options for Dial Font Size



Normal/ Large

2.8 Phone Dial Search

When in standby mode, this function compares entered letters on the keypad against the entries in your Contacts. A matching list is displayed in descending order. You can then select a Contact Entry from the list to call or view.

1. Press , , , .

Settings

2. Use  to select a setting, then press .





On/ Off

3. Security




The Security menu allows you to secure the phone electronically.

3.1 Lock Phone

Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can still receive phone calls and make emergency calls. You can modify the lock code by setting a New Lock code within the Security menu.

1. Press , , .
 2. Enter the four-digit lock code and press .
- The default lock code is commonly the last 4 digits of

your phone number.

3. Press  **Lock Phone**.
4. Use  to select an option, then press .

Unlock The phone remains unlocked by default, until it is locked manually.

Lock The phone remains locked. When locked, you can receive incoming calls and make only emergency calls.

On Power Up The phone is locked when it is turned on.

3.2 Restrictions

Allows you to restrict Calls, Messaging, Camera or Data.

Note

You can receive the incoming calls from saved contacts on your phone, when Incoming Only is on.

1. Press **OK**, **9 wxyz**, **3 def**.
2. Enter the four-digit lock code and press **OK**.
3. Press **2 abc** **Restrictions**.
4. Enter the four-digit lock code and press **OK**.
5. Use **↓** to select **Calls/ Messaging/ Camera/ Data**, then press **OK**.

3.3 Emergency #s

Allows you to enter 3 emergency numbers. You can call these emergency numbers and 911, even when the phone is locked or restricted.

1. Press **OK**, **9 wxyz**, **3 def**.
2. Enter the four-digit lock code and press **OK**.
3. Press **3 def** **Emergency #s**.

4. Press **OK** to edit the emergency numbers.
5. When you are finished editing the number, press **OK** **Save** to save, or Right Soft Key **Cancel** to cancel editing.

3.4 Change Lock Code

Allows you to enter a new four-digit lock code.

1. Press **OK**, **9 wxyz**, **3 def**.
2. Enter the four-digit lock code and press **OK**.
3. Press **4 ghi** **Change Lock Code**.
4. Use **↓** to select an option, then press **OK**.
Phone Only Allows you to change the lock code used to lock/unlock the phone.
Call & Applications Allows

Settings

you to change the lock code that is used to access the Restrictions menu (Calls, Messaging, Camera and Data).

5. Enter a new 4-digit lock code and press **OK**.
6. For confirmation, it will ask you to enter the new lock code again.

3.5 Reset Default

Allows you to reset your phone to the factory default settings.

1. Press **OK**, **9 wxyz**, **3 def**.
2. Enter the four-digit lock code and press **OK**.
3. Press **5 jk** **Reset Default**.
4. A message will pop up that says "Preference settings will be set to factory defaults. Press <OK> to continue." Press **OK**.
5. Use **↑** to highlight an

option and press **OK**.
Revert/ Cancel.

4. Call Settings

The Call Settings menu allows you to designate how the phone handles both incoming and outgoing calls.

4.1 Answer Options

Allows you to determine how to answer an incoming call.

1. Press **OK**, **9 wxyz**, **4 ghi**, **1 on**.
2. Use **↑** to select a setting, then press **OK**.
Flip Open/ Any Key/ SEND Key Only/ Auto Answer

4.2 Auto Retry

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

1. Press **OK**, **9 wxyz**, **4 ghi**, **2 abc**.

2. Use **↑** to select a setting,
then press **OK**.

**Off/ Every 10 Seconds/
Every 30 Seconds/ Every 60
Seconds**

4.3 One-Touch Dial

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Off, Speed Dial numbers designated in your Contacts will not function.

1. Press **OK**, **9 wxyz**, **4 ghi**, **3 def**.

2. Use **↓** to select a setting,
then press **OK**.

On/ Off

4.4 Voice Privacy

Allows you to set the voice privacy feature for CDMA calls as Enhanced or Standard. CDMA offers inherent voice privacy. Check with your service provider for availability.

1. Press **OK**, **9 wxyz**, **4 ghi**, **4 ghi**.

2. Use **↑** to select a setting,
then press **OK**.



On/ Off

4.5 Voice Clarity

When this feature is enabled, it provides a better audio experience by controlling the dynamic range and volume of the sending and receiving voices across different environments and conditions.

1. Press **OK**, **9 wxyz**, **4 ghi**, **5 jkl**.







 
Settings

- Use  to select a setting, then press .

On/ Off

4.6 Airplane Mode

Only allows you to use features on your phone that do not require wireless communications.







 
- Press , , , .
- Read the displayed message and press  to continue.
- Use  to select a setting, then press .

On/ Off

4.7 TTY Mode

Allows you to attach a TTY (Teletype writer) device, enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to






voice. Voice can also be translated into characters and then displayed on the TTY.

- Press , , , .
- Read the displayed message and press  to continue.
- Use  to select a setting, then press .

TTY Full/ TTY + Talk/ TTY + Hear/ TTY Off

5. PC Connection

Allows you to set the preferred connection type between your handset and your PC (when connected via a USB cable).

- Press , , .
- Use  to select a setting, then press .

USB Modem/ Bluetooth/ Closed

6. Alltel Shop & Web

Allows you to set a settings and options related to the Alltel Shop & Web application.

1. Press **OK**, **9 wxyz**, **6 mmo**.

6.1 Alltel Info

Allows you to decide whether or not your phone displays the Airtime Charges Warning message when you start Alltel Shop.

1. Press **OK**, **9 wxyz**, **6 mmo**, **1**.

2. Press **Yes** or **No**.

6.2 Web Settings

Allows you to customize some of the browser notification settings.

1. Press **OK**, **9 wxyz**, **6 mmo**, **2 abc**.

2. Select **Prompt** or **Alert Beep**.

- **Prompt** : At Start/ At End/ Both/ None

- **Alert Beep** : Mute/ 2 Beeps/ 4 Beeps

7. System

The System menu allows you to designate specific system network settings.

7.1 Network

7.1.1 System Select

Allows you to set up the phone producer's management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

1. Press **OK**, **9 wxyz**, **7 pqrs**, **1**, **1**.

2. Use **↑** to highlight **Home Only/ Automatic A/ Automatic B** then press **OK**.

Settings

7.1.2 Set NAM

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Press **OK**, **9 wxyz**, **7 pqrs**, **1 0 00**, **2 abc**.
2. Use **↑** to highlight **NAM1** or **NAM2**, then press **OK**.

7.1.3 Auto NAM

Allows the phone to automatically switch between programmed telephone numbers corresponding to the service provider area.

1. Press **OK**, **9 wxyz**, **7 pqrs**, **1 0 00**, **3 def**.
2. Use **↑** to highlight **On** or **Off**, then press **OK**.

7.1.4 Serving System

Identifies the channel number of a system that is served as a SID Number. This information should only be used for technical support.

1. Press **OK**, **9 wxyz**, **7 pqrs**, **1 0 00**, **4 ghi**.

7.2 Location

Allows you to turn On or Off the Location function on your phone. If set to On, location-based services are able to access your GPS (Global Positioning System) satellite-assisted location information.

1. Press **OK**, **9 wxyz**, **7 pqrs**, **2 abc**.
2. Use **↑** to highlight a setting, then press **OK**.
Location On/ E911 Only

Note

GPS satellite signals are not always transmitted, especially under bad atmospheric and environmental conditions, indoors etc.

8. Memory

Allows you to check out the memory status of your phone.

1. Press **OK**, **9 myze**, **8 tuv**.
2. Use **↑** to highlight **Reserved Memory/Multimedia**, and press **OK**.

9. Phone Info

The Phone Info menu provides you with specific information pertaining to your handset.



1. Press **OK**, **9 myze**, **9 myze**.
2. Use **↑** to highlight an option and press **OK**, or press the corresponding number key.

**My Number/ ESN/MEID/
Icon Glossary/ Version**

RealTone JukeBox/ Alltel Navigation/ Wallpaper Universe

RealTone JukeBox


Allows you to download real music ringtones from your favorite artists.

1. Press , .
2. Access application and download ringtones.

Alltel Navigation

Alltel Navigation is an application downloadable from the Alltel Navigation menu. Now you can find the address of a great restaurant or the nearest ATM. Check movie times. Discover the latest hot spots. And know exactly how to get where you're going. Alltel Navigation puts all the advanced features of the latest GPS devices and system on your wireless device at a fraction of the price.

1. Press , .

2. Register your name, email and press  to submit.

Wallpaper Universe

Allows you to access application and download wallpapers.

1. Press , .
2. Access application and download wallpapers.

Safety

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

- ANSI C95.1 (1992) *
- NCRP Report 86 (1986)
- ICNIRP (1996)

* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection.

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments

Safety

could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in

the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;

- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Safety

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If

in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all times after reading it.

Caution! *Violation of the instructions may cause minor or serious damage to the product.*

- Do not disassemble or open crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose

Safety

- to fire, explosion or other hazard.
 - Only use the battery for the system for which it is specified.
 - Only use the battery with a charging system that has been qualified with the system per IEEE-Std-1725-2006. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
 - Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
 - Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
 - Promptly dispose of used batteries in accordance with local regulations.
 - Battery usage by children should be supervised.
 - Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
 - Improper battery use may result in a fire, explosion or other hazard.
 - The phone shall only be connected to USB products that bear the USB-IF logo or have completed the USB-IF compliance program.
- ### Charger and Adapter Safety
- The charger and adapter are intended for indoor use only.

- Insert the battery pack charger vertically into the wall power socket.
- Use the correct adapter for your phone when using the battery pack charger abroad.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.

Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery doesn't need to be empty before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, Browser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Safety

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.

- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Do not disassemble or crush the battery. It may cause a fire.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.

- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Safety

Warning! Important safety information

Avoiding hearing damage

Permanent hearing loss may occur if you use your phone and/or headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use your phone and/or headset at high volume.

- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your phone, see the features guide for your phone.

Using your phone safely

Use of your phone while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using your phone if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.

Avoiding hearing damage

Permanent hearing loss may occur if you use your headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use headset at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your handset, please refer to the features guide for your handset.

Using headsets safely

Use of headsets to listen to music while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using this device if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.



FDA Consumer Update

The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

Safety

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe.

Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some

cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different

aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply

Safety

with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS”

phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the

research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours

per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

Safety

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they

do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health

Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with

independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR)

Safety

of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head.

Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take

a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those

Safety

described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United

Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is

now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a

“compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones
(<http://www.fda.gov/cellphones/>)

Federal Communications Commission (FCC) RF Safety Program
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on

Safety

Non-Ionizing Radiation
Protection

(<http://www.icnirp.de>)

World Health Organization
(WHO) International EMF
Project

(<http://www.who.int/emf>)

National Radiological Protection
Board (UK)

(<http://www.hpa.org.uk/radiation/>)

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy

reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.

4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not

watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.

6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip -- dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they

Safety

are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.

8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations -- with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides

you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.

10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one

appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

Consumer Information on SAR

(Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were

Safety

Safety

developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

Tests for SAR are conducted

using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands.

Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and

locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2.0 cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.79 inches (2.0 cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF

exposure limits and should be avoided.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

The highest SAR value for this model phone when tested for use at the ear is 0.938 W/kg and when worn on the body, as described in this user's manual, is 0.436 W/kg. While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid>

Safety

after searching on FCC ID.

To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6

watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to

telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/higher of the two ratings.

 
 
Safety

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This is synonymous for T ratings. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the

Safety

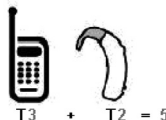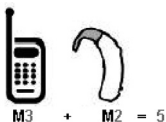

American National Standards Institute (ANSI) C63.19 standard.

To enter that the Hearing Aid Compatibility rating for your phone is maintained, secondary

transmitters such as Bluetooth and WLAN components must be disabled during a call. See Page 52 for instructions to disable these components.

For information about hearing aids and digital wireless phones

FCC Hearing Aid Compatibility and Volume Control

<http://www.fcc.gov/cgb/dro/hearing.html>

Gallaudet University, RERC

<http://tap.Gallaudet.edu/DigWireless.KS/DigWireless.htm>

Hearing Loss Association of America [HLAA]

<http://www.hearingloss.org/learn/cellphonetech.asp>

The Hearing Aid Compatibility FCC Order

http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf

Accessories

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability. Optional items are sold separately.

Battery Charger

The battery charger allows you to charge your phone.



Battery

Standard battery is available.



Vehicle Power Charger

The vehicle power charger allows you to operate the phone and trickle charge the phone's battery from your vehicle.



USB Cable



Limited Warranty Statement

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or

transferable to any subsequent purchaser/end user.

- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service

Limited Warranty Statement

Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise,

including, but not limited to any implied warranty of marketability or fitness for a particular use.

- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. WHAT LG WILL DO:

“LG will, at its sole option, either repair, replace or refund the

purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.”

4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

Limited Warranty Statement

Limited Warranty Statement

LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

5. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit <http://us.lgservice.com>. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets

P.O. Box 240007, Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS. Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

Index

I

10 Driver Safety Tips
100

A

Accessories 110
Airplane Mode 74
Alarm Clock 61
Alert Type 66
All Calls 55
Alltel Info 75
Alltel Web 45
Altel Shop 44
Altel Shop & Web 75
Announce Alert 60
Answer Options 72
Audios 50
Auto Retry 72

B

Backlight 68
Banner 68
Battery Charge Level
22

Best Match 60
Bluetooth 56

C

Calculator 63
Calendar 62
Call Settings 72
Call Timer 55
Call Waiting 26
Caller ID 27
Change Lock Code 71
Charging the Battery
22
Clocks & Calendar 69
Command Mode 60
Consumer Information
on SAR 103
Contact List 52
Contacts 52
Contacts in Your
Phone's Memory 29
Contacts Options 31
Correcting Dialing
Mistakes 25

D

Data 55
Data Counter 56
Delete All 44
Dialed Calls 55
Display 67
Drafts 40

E

Emergency #'s 71
Entering and Editing
Information 28
Ez Tip Calc 62

F

FCC Hearing-Aid
Compatibility (HAC)
Regulations for
Wireless Devices 106
FDA Consumer Update
89
Flip Tone 67
Font Settings 69

Index

G

Getting Started with Your Phone 21
Groups 53

I

Images 49
Important Safety Precautions 1
Inbox 38
Index 115

L

Languages 68
Launch 45
Limited Warranty Statement 111
Location 76
Lock Mode 26
Lock Phone 70

M

Making a Call From

Your Phone's Memory 32

Making Calls 24

Memory 77

Menu Style 68

Menus Overview 18

Message Alerts 65

Messaging 34

Missed Calls 54

Multimedia 48

Mute Function 26

My Bluetooth Info 58

My Bluetooth Name 58

My Menu 61

My Name Card 54

My Visibility 58

N

Network 75

New Contact 52

New Picture Message 36

New Text Message 34

Notepad 63

O

One-Touch Dial 73

P

Paired Devices 57

PC Connection 74

Phone Dial Search 69

Phone Info 77

Phone Menus 34

Phone Numbers With Pauses 29

Phone Overview 16

Power 57

Power On/Off Tone 66

Q

Quick Access to Convenient Features 26

Quick Volume Adjustments 26

R

RealTone JukeBox 78
Received Calls 55
Receiving Calls 25
Recent Calls 54
Record Voice 49
Redialing Calls 25
Reset Default 72
Restrictions 70
Ringers 65

S

Safety 79
Safety Information 83
Screen Icons 24
Searching Your Phone's
Memory 31
Security 70
Sent 39
Service Alerts 66
Settings 41, 65
Shuffle 51
Signal Strength 23

Sound 65
Speed Dialing 27
Speed Dials 53
Start Command 59
Stopwatch 64
System 75

T

Table of Contents 4
Take Photo 48
Technical Details 10
Templates 41
Text Input 28
The Basics of Storing
Contacts Entries 29
The Battery 21
TIA Safety Information
79
Tools 59
Train Word 60
TTY Mode 74
Turning the Phone On
and Off 23

U

Unit Converter 64

V

Voice Clarity 73
Voice Command 59
Voice Privacy 73
Voicemail 41
Volume 65

W

Wallpaper 67
Wallpaper Universe 78
Warning! Important
safety information 88
Web Settings 75
Welcome 9
World Clock 64