

Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

WARNING! Violation of the instructions may cause serious injury or death.



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.

3. Never store your phone in temperatures less than -4°F or greater than 122°F.

4. Do not dispose of your battery by fire or with hazardous or flammable materials.



5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



6. Do not use a hand-held phone while driving.

7. Do not use the phone in areas where its use is prohibited. (For example: aircraft)

Important Safety Precautions

Important Safety Precautions



1. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



2. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



3. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.



4. Do not use your phone in high explosive areas as the phone may generate sparks.



5. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



6. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.

7. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.

8. Do not disassemble the phone.



1. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
2. Do not hold or let the antenna come in contact with your body during a call.



3. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.



4. Store the battery out of reach of children.
5. Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



6. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



7. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
8. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



9. Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Table of Contents

Important Safety Precautions	1
------------------------------	---

Table of Contents	4
-------------------	---

Welcome	10
---------	----

Technical Details	11
-------------------	----

Important Information	11
-----------------------	----

FCC Part 15 Class B Compliance	11
--------------------------------	----

Technical Details	11
-------------------	----

FCC RF Exposure Information	13
-----------------------------	----

Bodily Contact During Operation	13
---------------------------------	----

Vehicle-Mounted the External	
------------------------------	--

Antenna	14
---------	----

FCC Notice and Cautions	14
-------------------------	----

Part 15.21 statement	14
----------------------	----

Part 15.19 statement	14
----------------------	----

Part 15.105 statement	15
-----------------------	----

Phone Overview	16
----------------	----

Menus Overview	18
----------------	----

Getting Started with Your Phone	21
---------------------------------	----

The Battery	21
-------------	----

Installing the Battery	21
------------------------	----

Removing the Battery	21
----------------------	----

Charging the Battery	21
----------------------	----

How to Install Your microSD™ Card	22
-----------------------------------	----

How to Remove Your microSD™ Card	22
----------------------------------	----

Battery Charge Level	23
----------------------	----

Turning the Phone On and Off	23
------------------------------	----

Turning the Phone On	23
----------------------	----

Turning the Phone Off	23
-----------------------	----

Signal Strength	23
-----------------	----

Screen Icons	24
--------------	----

Making Calls	24
--------------	----

Correcting Dialing Mistakes	25
-----------------------------	----

Redialing Calls	25	Searching Your Phone's Memory	31
Receiving Calls	25	Making a Call From Your Phone's Memory	32
Quick Access to Convenient Features	26	Messaging	34
Mute Function	26	1. New Text Message	34
Quick Volume Adjustment	26	2. New Picture Message	36
Call Waiting	26	3. Inbox	37
Caller ID	27	4. Sent	38
Speed Dialing	27	5. Drafts	38
Entering and Editing Information	28	6. Voicemail	39
Text Input	28	7. Email	40
Key Functions	28	8. Mobile IM	40
Contacts in Your Phone's Memory	29	9. Templates	40
The Basics of Storing Contacts		0. Settings	41
Entries	29	0.1 All Messages	41
Phone Numbers With Pauses	29	0.2 Text Message	41
		0.3 Picture Message	42
		0.4 Edit Voicemail #	42
		*. Delete All	42

Table of Contents

Contacts	43	Recent Calls	52
1. New Contact	43	1. Missed Calls	52
2. Contact List	44	2. Received Calls	52
3. Groups	44	3. Dialed Calls	52
4. ChatLINK	45	4. All Calls	52
5. Metro411	45	5. Call Timer	52
6. My Name Card	45	6. Data	53
7. Speed Dials	46	7. Data Counter	53
Multimedia	46	Music	54
1. Take Photo	46	1. All Songs	54
2. Record Video	48	2. Playlists	54
3. Record Voice	48	3. Recently Played	55
4. Images	49	4. Artists	55
5. Videos	49	5. Genres	55
6. Audios	49	6. Albums	55
7. Shuffle	50	My Schedule	56
@metro	51	1. Calendar	56
MetroWEB	51	2. Notepad	56

3. Alarm Clock	57	1.3 Message Alerts	64
Bluetooth®	58	1.4 Alert Tone	64
1. Paired Devices	59	1.5 Service Alerts	64
2. Power	60	1.7 Slide Tone	65
3. My Visibility	60	2. Display	65
4. My Bluetooth Name	60	2.1 Shortcuts Display	65
5. My Bluetooth Info	60	2.2 Wallpaper	66
Tools	61	2.3 Banner	66
1. Voice Command	61	2.4 Backlight	66
2. Ez Tip Calc	61	2.5 Menu Style	67
3. Calculator	62	2.6 Languages	67
4. World Clock	62	2.7 Clocks & Calendar	67
5. Stopwatch	62	2.8 Font Settings	67
6. Unit Converter	63	2.9 Color Schemes	68
Settings	63	2.0 Name Match for Dialing	68
1. Sound	63	3. Security	68
1.1 Ringers	63	3.1 Lock Phone	68
1.2 Volume	64	3.2 Restrictions	69
		3.3 Emergency #s	69
		3.4 Change Lock Code	69

Table of Contents

3.5 Reset Default	70	Antenna Care	75
4. Call Settings	70	Phone Operation	76
4.1 Answer Options	70	Tips on Efficient Operation	76
4.2 End Call Options	71	Driving	76
4.3 Auto Retry	71	Electronic Devices	76
4.4 One-Touch Dial	71	Pacemakers	76
4.5 Voice Privacy	71	Persons with Pacemakers:	77
4.6 Airplane Mode	72	Hearing Aids	77
4.7 TTY Mode	72	Other Medical Devices	77
5. USB Mass Storage	72	Health Care Facilities	77
6. System	73	Vehicles	78
6.1 Network	73	Posted Facilities	78
6.2 Location	74	Aircraft	78
7. Memory	74	Blasting Areas	78
8. Phone Info	74	Potentially Explosive Atmosphere	78
Safety	75	For Vehicles Equipped with an	
TIA Safety Information	75	Air Bag	79
Exposure to Radio Frequency		Safety Information	79
Signal	75	Charger and Adapter Safety	79
		Battery Information and Care	80

Explosion, Shock, and Fire Hazards	80
General Notice	81
Warning! Important safety information	82
Avoiding hearing damage	82
Using your phone safely	83
Avoiding hearing damage	83
Using headsets safely	84
FDA Consumer Update	84
10 Driver Safety Tips	94
Consumer Information on SAR	98
FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices	101
Accessories	104
Limited Warranty Statement	105
Index	109

Some content in this user guide may differ from your phone depending on the phone software. Features and specifications are subject to change without prior notice.

Welcome

Thank you for choosing the **MT375** cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, this compact phone offers:

- Significantly enhanced voice clarity.
- Slim and sleek design with internal antenna (Internal antenna described as “antenna” throughout this user guide).
- Large, easy-to-read, backlit LCD with status icons.
- Paging, messaging, voice mail, and caller ID.
- Speakerphone feature.

- Menu-driven interface with prompts for easy operation and configuration.
- Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
- Bilingual (English and Spanish) capabilities.
- Bluetooth® wireless technology.
- Music Player and microSD™ card slot.

Note

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.

Technical Details

Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Technical Details

The MT375 is a trimode phone that operates on both (Code Division Multiple Access CDMA) frequencies: cellular services at 800 MHz and (Personal Communication Services PCS) at 1.9 GHz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard handoff, and dynamic RF power control technologies combine to reduce call interruptions.

Technical Details

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base

Station Controller), BTS (Base Station Transmission System), and MS (Mobile Station).

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000 ANSI TIA/EIA 553A	CDMA Dual Mode Air Interface 14.4kbps radio link protocol and inter-band operations IS-95 adapted for PCS frequency band cdma2000 1xRTT AirInterface
Network	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41 -C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem operations Non-signaling data comm.
Service	TIA/EIA/IS-96-B TIA/EIA/IS-99 TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Sync Data and Fax Short message service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
Performance	TIA/EIA/IS-97 TIA/EIA/IS-98 ANSI J-STD-018 ANSI J-STD-019 TIA/EIA/IS-125	Cellular base station Cellular mobile station PCS personal station PCS base station Speech CODEC

* TSB-74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible.

The table (on the previous page) lists some major CDMA standards.

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated

transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.79 inches (2.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.79 inches (2.0 cm) distance

Technical Details

between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted the External Antenna

(Optional, if available.)

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and vehicle-mounted the external antenna. For more information about RF exposure, visit the FCC website at www.fcc.gov.

FCC Notice and Cautions

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept

any interference received, including interference that causes undesired operation.

Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

Part 15.21 statement

Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Part 15.19 statement

This device and its accessories comply with part 15 of FCC rules.

Operation is subject to the following two conditions:

- (1) This device & its accessories may not cause harmful interference.
- (2) This device & its accessories must accept any interference received, including interference that may cause undesired operation.

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and

used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Phone Overview



1. **Earpiece** Lets you hear the caller.
2. **LCD Screen** Displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
3. **Left Soft Key** Use to access Menu from the standby screen, or the function immediately above it.
4. **TALK Key** Use to place or answer calls.
5. **Alphanumeric Keypad** Use to enter numbers, characters and to select menu items.
6. **Normal/ Vibrate Mode Key** Use to set Normal/ Vibrate All mode (from standby mode press and hold for about 3 seconds).
7. **Navigation Key** Press Up for quick access to Contact List, Down for quick access to Messaging or Left/Right to browse the metro Apps.
8. **Right Soft Key** Use to access @metro from the standby screen, or the function immediately above it.
9. **OK Key** Selects the function displayed at the bottom center of the LCD screen.
10. **PWR/END Key** Lets you turn the phone on or off, end a call, or return to standby mode. While in a menu, it returns the phone to standby mode. When you receive an incoming call, press to enter silent mode and mute the ringer.
11. **Clear Key** Deletes characters from the display in text entry mode. When in a menu, press this key to return to the previous menu.
12. **Lock Mode Key** Use to lock the phone (from standby mode press and hold for about 1.5 seconds).



13. **Camera Lens** As part of the built-in camera, lets you take pictures and videos. Keep clean for optimal camera performance.

14. **Side Volume Button** Allows you to adjust the ringer volume in standby mode or adjust the voice volume during a call.

 
15. **Charger/Accessory Port** Allows you to connect the phone to the phone charger and to optional accessories, such as a USB cable. CAUTION! Inserting an accessory into the incorrect jack may damage the phone.

16. **Headset Jack** Allows you to plug in either a stereo or mono (2.5mm) headset for convenient, hands-free conversations. CAUTION! Inserting an accessory into the incorrect jack may damage the phone.

17. **microSD™ card slot** Lets you use a microSD card (may be sold separately) to expand the memory of your phone.

18. **Speakerphone Key** Use to turn the Speakerphone On or Off.

19. **Camera/ ChatLINK™ Key** Press once (quickly) to activate ChatLINK™ or hold down to activate the camera function.

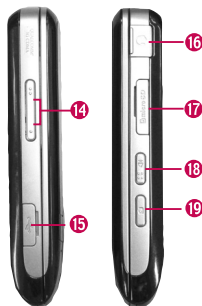

Navigation Shortcut Keys



⊙ **Contact List Key** Use to access Contact List.

⊙ **Messaging Key** Use to access Messaging.

⊙ **metro Key** Use to access the metro Apps.

Menus Overview

Menu Access

Press **OK** **Menu** to access the twelve phone menus. There are two methods of accessing menus and submenus:

- Use the navigation key to highlight and **OK** to select.
- Press the number key that corresponds with the menu (or submenu).

Messaging

1. New Text Message
2. New Picture Message
3. Inbox
4. Sent
5. Drafts
6. Voicemail
7. Email
8. Mobile IM
9. Templates
0. Settings
 1. All Messages
 2. Text Message
 3. Picture Message

4. Edit Voicemail#

*. Delete All

1. Delete Inbox
2. Delete Sent
3. Delete Drafts
4. Delete All Messages

Contacts

1. New Contact
2. Contact List
3. Groups
4. ChatLINK
5. Metro411
6. My Name Card

7. Speed Dials

Multimedia

1. Take Photo
2. Record Video
3. Record Voice
4. Images
 1. My Images
 2. Default
5. Videos
6. Audios
7. Shuffle
 1. Ringtone List
 2. Wallpaper List

@metro

MetroWEB

Recent Calls

1. Missed Calls
2. Received Calls
3. Dialed Calls
4. All Calls
5. Call Timer
6. Data
7. Data Counter

Music

1. All Songs
2. Playlists
3. Recently Played
4. Artists

5. Genres

6. Albums

My Schedule

1. Calendar
2. Notepad
3. Alarm Clock

My Menu

Tools

1. Voice Command
 1. Start Command
 2. Command Mode
 3. Announce Alert
 4. Train Word
 5. Best Match

2. Ez Tip Calc

3. Calculator

4. World Clock

5. Stopwatch

6. Unit Converter

Bluetooth

1. Paired Devices
2. Power
3. My Visibility
4. My Bluetooth Name
5. My Bluetooth Info

Menus Overview

Settings

1. Sound

1. Ringers

2. Volume

3. Message Alerts

4. Alert Type

5. Service Alerts

6. Power On/Off
Tone

7. Slide Tone

2. Display

1. Shotcuts Displays

2. Wallpaper

3. Banner

4. Backlight

5. Menu Style

6. Languages

7. Clocks &
Calendar

8. Font Settings

9. Color Schemes

0. Name Match for
Dialing

3. Security

1. Lock Phone

2. Restrictions

3. Emergency #s

4. Change Lock
Code

5. Reset Default

4. Call Settings

1. Answer Options

2. End Call Options

3. Auto Retry

4. One-Touch Dial

5. Voice Privacy

6. Airplane Mode

7. TTY Mode

5. USB Mass Storage

6. System

1. Network

2. Location

7. Memory

1. Save Options

2. Phone Memory

3. Card Memory

8. Phone Info

1. My Number

2. ESN/MEID

3. Icon Glossary

4. Version

Getting Started with Your Phone

The Battery

Note

It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. The battery charge level is shown at the top of the LCD screen when the phone is on.

Installing the Battery

To install, insert the battery into the opening on the back of the phone and gently press down until the battery snaps into place.

Removing the Battery

 
1. Make sure the power is off so that you do not lose any unsaved information.
2. Press down on the top part of the battery cover (directly above the Camera Lens) with your thumb and slide the cover downward to remove it from the back of the phone.

Charging the Battery

To use the charger provided with your phone:

Warning! Use only the charger provided with the phone. Using any charger other than the one included with the MT375 may damage your phone or battery.

1. Connect the USB data cable into the cableless wall adapter. When connecting as shown below, the LG logo on the USB cable should face toward you.

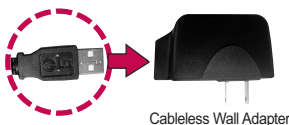

2. Gently uncover the accessory charging port, then plug the end of the AC adapter into the phone's accessory/charger port and the other end into an electrical outlet.

Getting Started with Your Phone



NOTICE

Please make sure that the 'B' Side faces up before inserting a charger or data cable into the charger port of your phone.

3. The charge time varies depending upon the battery level and usage.

How to Install Your microSD™ Card



1. Locate the microSD™ slot on the right side of the phone and gently uncover the slot opening (the microSD™ slot cover stays attached to the phone so it doesn't become misplaced).



2. Insert the microSD™ card facing up and push in until it clicks into the slot. If you insert the card in the wrong direction, it may damage your phone or your card.

How to Remove Your microSD™ Card

1. Push the card in to release the exposed edge of the microSD™ card, to eject it.
2. Remove the microSD™ card from the slot and replace the cover.

Note


Do not attempt to remove the microSD™ card while reading or writing to the card.

Battery Charge Level

The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the phone alerts you in up to three ways: sounding an audible tone, blinking the battery icon, and displaying a warning message. If the battery charge level becomes exceedingly low, the phone automatically turns off and unsaved items are not saved.

Turning the Phone On and Off


Turning the Phone On

1. Install a charged battery or connect the phone to an external power source.
2. Press  for about 3 seconds until the LCD screen lights up.

Turning the Phone Off

1. Press and hold  until the display turns off.

Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars on the signal strength icon . The more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.

Note

The call quality is also affected by the places where you are and weather conditions with radio frequency (RF) emission changes.

Getting Started with Your Phone

Screen Icons


To see the icon glossary, go to

 **Menu** ->  **Settings** ->

 **Phone Info** ->  **Icon**

Glossary on your phone.

Making Calls

1. Slide the phone open.
2. Enter the phone number (include the area code if needed).
3. Press .

If the phone is locked, enter the lock code (by default, it's the last 4 digits of your phone number).


Note

If the phone is restricted, you can only dial phone numbers saved in the Emergency Numbers and (depending on your settings) your Contacts list. To turn off this function:

 **Menu** ->  **Settings** ->  **3 def**

Security -> **Enter Lock Code** -> 

->  **2 abc** **Restrictions**->**Enter Lock**



Code->  -> Select the below

categories.


- Incoming Calls/ Outgoing Calls/ Incoming Messages/ Outgoing Messages - Options include: Allow All/ Contacts Only/ Block All
- Camera/ Data Options include: Unlock/ Lock

4. Press  to end the call.


Correcting Dialing Mistakes

If you make a mistake while dialing a number, press  once to erase the last digit entered, or hold down  for at least 2 seconds to go to the standby mode.

Redialing Calls



1. Press  twice to redial the most recent number in your call history. The last 120 calls (40 Missed, 40 Received and 40 Dialed) are stored in the call history list, you can also select any of these to redial.

Receiving Calls


1. When the phone rings and/or vibrates, press , or slide the phone open (according to your Answer Options settings), to answer.

Tip

The Call Settings menu allows you to choose answer options:

 Menu ->  Settings ->

 Call Settings ->

 Answer Options. Choose



from the following options:

Slide Open/ TALK Key Only/ Slide Open & Any Key/ Auto Answer

2. Press  to end the call.

Quick Access to Convenient Features

Mute Function

The Mute Function is used during a phone call. To quickly activate Mute press Left Soft Key  **Mute**, then to cancel press Left Soft Key  **Unmute**.

Quick Volume Adjustment



Use the side keys to adjust the ringer volume while in standby mode, and the earpiece volume during a phone call. The upper key increases the volume and the lower key decreases the volume.

Note

Keypad Volume is adjusted through the Keypad volume settings menu. Available levels are: (Off/ Volume 1~5).

Call Waiting

Your cellular service may offer call waiting. While a call is in progress one beep indicates an incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call. Check with your cellular service provider for information about this function.

1. Press  to receive a waiting call.
2. Press  again to switch between calls.

Caller ID

Caller ID displays the phone number or name of the incoming call. If the caller's identity is stored in Contacts, the name will appear along with the phone number. Check with your service provider to ensure they offer this feature.

Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly. A number key can be assigned to a specific phone number. By pressing and holding down a number key, your phone will recall the phone number associated from the Contact List and display it briefly while simultaneously dialing that phone number for you. Please note that Speed Dial Number 1 is set to Voice Mailbox by default and is unchangeable.

Dialing Single Digit Speed Dials (from 2 to 9)

Press and hold the Speed Dial number.


OR

Enter the Speed Dial number and press .

Dialing Double Digit Speed Dials (from 10 to 99)

Press the first digit and then press and hold the key of the second digit.

OR

Enter the first and second digits and press .

Entering and Editing Information

Text Input

You can customize and enter text in many of the functions in your phone. Including, but not limited to: the Banner, Calendar, Contacts and more. While entering text, the following are your options:

Key Functions



Left Soft Key:
Press to scroll through the following text input modes: T9Word (T9WORD/T9Word/T9word) -> Abc (ABC/Abc/abc) -> 123 -> Symbols



Shift: Toggle between capitalization modes T9 text

T9Word -> T9WORD -> T9word
Abc text : Abc -> ABC ->

abc



Next: In T9 mode, press to display other matching words.



Space: Press to complete a word if text is in T9 mode or insert a space.






Clear: Press to delete a single space or character. Hold to delete the whole message.



Punctuation: When entering text or numbers, press to enter punctuation marks or some of available special characters.


Contacts in Your Phone's Memory

The Basics of Storing Contacts Entries

1. From standby mode enter the phone number you want to save (up to 48 digits).
2. Press Left Soft Key  **Save**.
3. Select either **Save New** or **Update Existing**.
4. Use  to highlight a Label and press .
**Mobile 1 / Home/ Work/
Mobile 2/ Fax**

Note


Use **Update Existing** to add another phone number to a contact already stored in memory.

5. Enter a name for the phone number (up to 22 characters) and press . A confirmation message is displayed briefly.

Phone Numbers With Pauses

When you call automated systems, such as voice mail or credit billing numbers, you often have to enter a series of numbers to navigate through the system. Instead of entering these numbers by hand, you can store the numbers in your Contacts separated by special pause characters (W, P). There are two different types of pauses you can use when storing a number:

Wait (W)








The phone stops dialing until you press Left Soft Key  **Release** to advance to the next number.

Pause (P)












The phone waits 2 seconds before sending the next string of digits.

Contacts in Your Phone's Memory

Storing a Number with Pause or Wait

1. Press  **Menu**.
2. Press  **Contacts**.
3. Press  **New Contact**.
4. Enter a name (up to 22 characters) and enter a number.
5. Enter the number in any of the text fields presented (**Mobile 1, Home, Work, Mobile 2 and Fax**).
6. Press Right Soft Key  **Options** and select  **Pause** or  **Wait**.
7. Enter additional number(s) then press  **Save**.





Adding Pause or Wait to an Existing Number

1. Press  **Menu**.
2. Press  and  **Contact List**.
3. Use  to highlight the Contact entry to edit, then press  **View**.
4. Press Left Soft Key  **Edit**.
5. Use  to highlight the number.
6. Press Right Soft Key  **Options**.
7. Press  **Wait** or  **Pause**.
8. Enter additional number(s), then press  **Save**.

Searching Your Phone's Memory

The MT375 phone is able to perform a dynamic search of the contents in your phone's memory. A dynamic search compares entered letters with the first letters of the Contacts saved. A matching list is displayed in descending order. You can then select a number from the list to call or edit.

Scrolling Through Your Contacts

1. Press  **Menu**.
2. Press  and  **Contact List** to display your Contacts alphabetically.
3. Use  to scroll through the list.





Searching by Letter

1. Press  **Menu**.


2. Press  and  **Contact List**.


3. Start entering the Contact name.

Contact Options

1. Press  **Menu**.
2. Press  and  **Contact List**.
3. Highlight a contact and press Right Soft Key  **Options**.

The following options are available:

-  **Contact List Search:** Select between the two Contact List viewing modes: By Navigation or By Search Window.

-  **Send Message:** Send a text message or picture message to the selected contact.

Contacts in Your Phone's Memory

3 def **Delete:** Delete the selected entry in your Contacts.

4 ghi **Edit:** Edit the selected entry's information.


5 jkl **Delete Multiple:** Choose from **Selective/ All** to delete multiple entries at one time.

6 mno **Send via Bluetooth:** Send a contact(vCard) via Bluetooth®. In case Bluetooth® power is not on, a notice pops up to turn Bluetooth® on.








7 pqrs **Set Speed Dial/ Remove Speed Dial:** Set a speed dial or remove the speed dial.

Making a Call From Your Phone's Memory





Once you have stored phone numbers in your Contacts, you can place calls to those numbers quickly and easily.

- By pressing Talk Key  after searching for a phone number in Contacts or Call History and highlighting it.
- By using Speed Dialing.


From Contacts

1. Press  **Menu**.
2. Press  and  **Contact List**.
3. Use  to select the Contact entry, then press .
4. Use  to select the phone number.
5. Press  to place the call.

From Call History



1. Press  **Menu**.
2. Press  **Recent Calls**.
3. Use  to select the type of recent call, then press .

Missed Calls/ Received Calls/ Dialed Calls/ All Calls

4. Use  to select the phone number.

5. Press  to place the call.

Speed Dialing

For a single-digit Speed Dial, press and hold the digit or press the digit, then press . For a double-digit Speed Dial, press the first digit and hold the second digit or press the first and second digits, then press .

Messaging






Messaging

The MT375 can store up to 700 messages (including a maximum of 500 SMS and 100 MMS in the Inbox). The information stored in the messages is determined by phone mode and service capability. Other limits such as available characters per message may exist, please check with your service provider for system features and capabilities.

1. New Text Message





Allows you to send text messages, pages, and e-mail transmissions. Each message will be formatted and sent according to the destination address. Please note that the service carrier of the recipient device may not support Pages.

The Basics of Sending a Text Message

1. Press , , .
2. Enter the recipient's address.
3. Press  to access the message screen.
4. Type your message (text or e-mail).
5. Press  **Send**.

A confirmation message is displayed.

Recipient (To:) Field Options

1. Press , , .
2. Press Right Soft Key  **Options**.
3. Select the option(s) to customize.

Contacts To select a recipient from your Contact List.

Recent Calls To select a recipient from your Recent Calls.

Recent Messages Choose **Inbox/ Sent** to select a recipient from your Recent Messages.






Groups Select a recipient from your Groups.


Cancel Cancels the text message.

4. Complete your message and send or save it.

Customize Your Text Message Using Options

While you are composing the text of a message, you have various options to customize the text.

1. Press , , .
2. Use  or press  to highlight the text entry window.

3. Press Right Soft Key  **Options**.

4. Select the option(s) to customize.

Add Templates/ Signature

Save As Draft/ Templates

Priority Level Normal/ High

Callback # On/ Off






Delivery Notice On/ Off

Cancel Cancels the text message.

5. Complete your message and send or save it.






Message Icon Reference

Inbox



	New/Unread Text/Picture Message
	Opened/Read Text/Picture Message
	New/Unread Notification Message
	Opened/Read Notification Message
	Priority High

Messaging

Sent






-   Failed Text/Picture Messages
-   Failed Multi Text/Picture Messages
-   Multi Text/Picture Messages in transfer
-   Text/Picture Message delivered



Drafts



-  Draft Text Message
-  Draft Picture Message

2. New Picture Message


Allows you to send messages with Text, Image/ Video an Audio.

1. Press  ,  ,  .
2. Enter the recipient's address, or press Right Soft Key  **Options** to search recent contacts.
3. Press  to access the text screen.
4. Type your message.

5. With the highlight on **Image/ Video**, press Left Soft Key  **Add**, highlight an option, and press  to select:
Image/ Video/ Take Photo/ Record Video

6. Use  to highlight a file, then press Left Soft Key  **Set**.

7. With the highlight on **Audio**, press Left Soft Key  **Add**.

8. Use Right Soft Key  **Options** to customize the message. The options (below) are available:

* Editing the To: field

**Contacts/ Recent Calls/
Recent Messages/ Groups/
Cancel**

* Editing a text field

**Preview/ Add/ Go to/ Save
As/ Priority Level/ Delivery
Notice/ Remove/ Cancel**

- * Editing the Image/Video

Preview/ Add Slide/ Go to/
Save As Draft/ Priority Level/
Delivery Notice/ Remove/
Cancel

- * Editing the Audio

Preview/ Add Slide/ Go to/
Save As Draft/ Priority Level/
Delivery Notice/ Remove/
Cancel

- * Editing the Subject


Preview/ Add/ Go to/ Save
As/ Priority Level/ Delivery
Notice/ Remove/ Cancel

9. Press  **Send** to send.

3. Inbox

The phone can alert you in several ways when you receive a new message, including:








- Displaying a notification message on the screen.

- Displaying the message icon  on the status bar (It blinks when the message is urgent).
- Ringing and/or Vibrating (depending on the Volume settings).

Received messages are displayed from newest to oldest.

Viewing Your Inbox

Up to 700 received messages (500 SMS, 100 MMS and 100 MMS Notification Messages) can be stored in the Inbox.

1. Press , , .
2. Use  to highlight an inbox message.
3. Press Left Soft Key  **Reply** to reply,  **View** to view the message from the sender, or Right Soft Key  **Options** to access additional options.

Messaging



If you select **View**, options available are:



Delete/ Forward/ Save Contact/ Save as Templates/ Extract Address/ Go to Website/ Lock/Unlock/ Message Info

4. Sent

Up to 100 sent messages(50 SMS + 50 MMS) can be stored in the Sent folder. View the contents of sent messages and verify whether the transmission was successful or not.

1. Press , , .

2. Use  to highlight a message, then press .

While viewing the selected message, press Left Soft Key  **Resend** to resend press Right Soft Key  **Options**.

Options vary depending on the type of message:

Play Again

Delete Deletes the selected message.

Forward Forwards a received message to other destination address(es).

Save Contact Save New/ Update Existing

Save as Templates

Save Media Image/ Audio

Lock/Unlock Locks or unlocks the selected message.


Go to Website


Message Info Show the message's Type, Priority, Status, and more.

5. Drafts

Displays saved messages and draft messages.

1. Press , , .

2. Use  to highlight a

Draft/Saved message. Press Right Soft Key  **Options** for the following options:

Delete Deletes the selected message from the Drafts.


Save Contact Save New/
Update Existing

Lock/Unlock Locks a message so that it is not erased if the Erase Saved or Erase All feature is used.

Delete Multiple Selective/ All

-Or-

2. Press  **Edit**.

Press Right Soft Key  **Options** to see the options. If viewing an SMS, the following options are available:

Add/ Save As/ Priority Level/
Callback #/ Delivery
Notice/ Cancel

3. Press  **Send** to send the edited message.




6. Voicemail

Allows you to hear new voice messages recorded in your voice mail box. Your phone will alert you when you receive a new voice message.

Checking Your Voicemail Box

1. Press , , .

2. Choose from the following options:

- Press Left Soft Key  **Clear** to clear the voicemail counter.
- Press  to listen to the message(s).
- Press Right Soft Key  **Exit** to return to the Messaging menu.

Messaging

7. Email

Allows you to send an email via Mobile Web. Mobile Email is an application downloadable from the Messaging Menu. Don't miss an important email. Thanks to Mobile Email, you can get your emails on your phone, while you're on the go. Mobile Email works with many providers, including Yahoo!, AOL, Verizon.net and more. Get alerts from your **MT375** when new email has arrived.

1. Press , , .
2. A Mobile Web Browser session starts.
3. Highlight email provider and press .
4. Login or enter your email address and password.

8. Mobile IM

Allows you to send and receive an Instant Message at any time.

1. Press , , .
2. Select **Mobile IM**.

9. Templates

Allows you to display, edit, and add text phrases. These text strings allow you to reduce manual text input into messages.








1. Press , , .
2. Press Left Soft Key **New** to create a new template.
Enter text and press to save the template.
3. Use to highlight a template and press Right Soft Key **Options**, then highlight an option and press

 to select:

Delete/Edit

0. Settings

Allows you to configure settings for Messaging:

1. Press , , .
2. Use  to highlight **All Messages/ Text Message/ Picture Message/ Edit Voicemail #** then press .
3. Use  to highlight one of the settings and press  to select it.

Messaging Settings Sub-Menu Descriptions

0.1 All Messages

1. **Auto Save (Auto Save/ Prompt/ Do Not Save)**
With this feature on, messages

are automatically saved in the Sent folder when transmitted.

2. Auto Delete (On/ Off)

With this feature on, read messages are automatically deleted when you exceed the storage limit.

3. Entry Mode

Allows you to select the default input method between T9Word, Abc and 123.

4. Signature (On/ Off/ Edit)

Allows you to make/edit a signature to automatically send with your messages.

0.2 Text Message

1. Auto View (On/ Off)

When set to On, new messages will automatically display on your screen when they are received.

Messaging

2. Auto Play (On/ Off)

Allows the display to automatically scroll down while viewing messages.

3. Callback # (On/ Off/ Edit)

With this feature on, you can input the callback number that will be automatically included when you send a message.

0.3 Picture Message

1. Auto Receive (On/ Off)

With this set to On, attached content will automatically download when a new picture message is received.








0.4 Edit Voicemail

Allows you to manually enter the access number for Voicemail Service. This feature should only

be used when a VMS (Voicemail Service) access number is not provided from the network.

*. Delete All

Allows you to erase the messages stored in your Inbox, Sent, or Drafts message folders. You can also erase all messages at the same time.

1. Press , , .
2. Use  to highlight an option: **Delete Inbox/ Delete Sent/ Delete Drafts/ Delete All Messages** then press .
3. Use  to highlight **Yes/ No** and press .

Contacts

Contacts

The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory.

Note






When you access your Contacts, the number in parentheses represents the number of entries you have stored (up to 1000).

1. New Contact

Allows you to add a new contact to your Contact List.

Note








Using this submenu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry through the Contact List.

1. Press , , .
2. Enter the name, then press .
3. Highlight the field you wish to store contact information in.
4. Enter the phone number or e-mail address.
5. Continue adding the desired contact information to the entry.
6. When you are finished entering the desired contact information, press  **Save** to save the entry into your Contact List.

Contacts









2. Contact List

Allows you to view your Contact List.

1. Press , , .
2. Choose from the following options:
 - Press  to scroll through your Contacts alphabetically.
 - Press Right Soft Key 
Options to select one of the following:
Contact List Search/ Send Message/ Delete/ Edit/ Delete Multiple/ Send via Bluetooth/ Set(Remove) Speed Dial
 - Press  **View** to view the contact's information.
 - Press Left Soft Key 
New to store new contact information.



3. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a group.

1. Press , , .
2. Choose from the following options:
 - Use  to highlight a group, then press  **View** to view the contacts in the selected group.
 - Press Left Soft Key 
New to add a new group.
 - Use  to highlight a group, then press Right Soft Key  **Options** to choose from the following options:
Delete/ Send Message/ Rename Group/ Set Ringtone/ Delete All

4. ChatLINK

Allow you to use Push-To-Talk to talk with other PTT user in person or group.

1. Press  to start ChatLINK application
2. Follow on-screen instruction to provision and log-in to PTT service.
3. Add your friend in your PTT contact list
4. Choose  contact then press and hold CAMERA key to start a PTT conversation.

5. Metro411







Get directory assistance information quickly and easily with one of these MetroPCS Directory Assistance Services.

1. Press , , .

2. Follow on-screen instruction to initiate the Metro411 service on your phone.
3. Follow the on-screen menu to use Metro411.

6. My Name Card

Allows you to view and add to your personal Contact information that can be sent via Bluetooth®.

1. Press , , .
2. Use  to highlight the field you wish to edit, and press Left Soft Key  Edit.
3. Edit the information as desired and press  Save.










Note

You cannot edit the Mobile 1 field, but you can add additional contact info.

Contacts/ Multimedia

7. Speed Dials

Allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.


 




1. Press , , .
2. Use  to highlight the desired Speed Dial location (or enter the Speed Dial digits), and press  **Assign**.
3. Use  to highlight the Contact then press .
4. Use  to highlight the number (if applicable), then press .

A confirmation message is displayed.

Multimedia

View, take, and trade your digital pictures, videos or recorded audio files right from your wireless phone.

1. Take Photo

1. Press , , .
2. Set the brightness using , zoom using  and press Right Soft Key  **Options** to change other settings.





Select from the available options (below):

Switch to Camcorder

Resolution 1200X1600/
960X1280/ 480X640/
240X320/ 144X176/
120X160

Quality Fine/ Normal/ Economy
Zoom

Brightness**Night Mode** On/ Off**Self Timer** Off/ 3 Seconds/
5 Seconds/ 10 Seconds**White Balance** Auto/ Sunny/
Tungsten /Cloudy/ Fluorescent**Color Effects** Color/ Sepia/
Mono/ Negative**Template** On/ Off**Shutter Sound** None/
Sound 1/ Sound 2/ Sound 3/
Say Cheese**Multishot** Off/ 3 shots/
6 shots**Memory Storage** Phone
Memory/ Card Memory**Auto-Save** Enable/ Disable

3. Take a picture by pressing
 **Take**.
4. Press Right Soft Key 
Delete,  **Send**, or Left
 Soft Key  **Save**. Choose
 from the following save
 options:





- **Save to Phone**
- **Save to Card Memory**(if
available).
- **Set As**
 1. **Main Screen**
 2. **Picture ID**

The picture is stored in **Gallery**.**Notes**

- The displayed number directly above the set resolution is the estimated number of pictures that can be taken with the current camera settings.
- The maximum number of pictures you can take on your phone may vary depending on the types, resolution or all other factors that affect your picture size. Thus, this number will change along with your settings.
- The maximum display number is 9999. If your microSD card can store more than that, the display number will not decrease until the remaining number of pictures that can be taken reaches 9999.
This number depends on the Save Options settings in the Memory menu.



Multimedia




2. Record Video

1. Press , **3 def**, **2 abc**.
2. Set the brightness using , zoom using  and press Right Soft Key  **Options** to change other settings.

Select from the available options (below):

Switch to Camera
Resolution 176X144/ 128X96
Zoom
Brightness
White Balance Auto/ Sunny/
 Tungsten /Cloudy/ Fluorescent
Record Time 15 sec/ 1 hour
Memory Storage Phone
 Memory/ Card Memory






3. Press  **Rec** to begin recording.
4. Press  **Stop** to stop recording.


5. Press Right Soft Key 
Delete,  **Send**, or
 Left Soft Key  **Save**.
 Choose from the following
 save options:

- **Save**
- **Set as Main Screen.**

3. Record Voice

Allows you to add, listen to, and erase short verbal reminders.








1. Press , **3 def**, **3 def**.
2. Press  **Record** to record a new voice memo.
3. Talk into the microphone, then press  **Stop**. The default memo title is the date and time of recording.
4. Once recording has stopped, press the Left Soft Key  **Save** to save the file, press  **Send** to send in a Picture Message, or press Right Soft

Key  Options to access the following:

Set As/ Rename/ Delete







4. Images

Allows you to view saved images and to select images to customize your phone's Main Screen, or Picture ID.

1. Press , , .
2. Select **My Images/ Default** then press .
3. Highlight the image you want to display.
 - Press Right Soft Key  Options to access and apply options.
 - Press  **View** to view the selected image.
 - Press Left Soft Key  **Send** to send the selected image to somebody else.





5. Videos

Allows you to access saved video clips.


1. Press , , .
- Press Left Soft Key  **Send** to send the selected video clip to somebody else.
- Press  **Play** to play the selected video clip.
- Press Right Soft Key  Options to access and apply options.






6. Audios

Allows you to access saved audio clips.

1. Press , , .
 2. Press Left Soft Key  **Voice** to record an audio clip. See page 48 for the options available.
- Or

Multimedia











2. You can browse the saved audio files in the **Audios** folder, use  to highlight the audio clip.

- Press Left Soft Key  **Send** to send the selected audio clip to somebody else.
- Press  **Play** to play the selected audio clip.
- Press Right Soft Key  **Options** to access additional options. Use  to highlight an option (below) and press  :

Set as/ File Filter/ Record Voice/ Delete/ Rename/ Move/Copy/ Lock/ Information/ Delete Multiple/ Sort by/ Send via Bluetooth

7. Shuffle



Allows you to set your wallpaper and ringtone to change after a selected period of time.

1. Press , , .
2. Use  to highlight **Ringtone List/ Wallpaper List** then press .
3. Press Left Soft Key  **Add**.
4. Use  to highlight the desired ringtones or wallpapers and press  to select them.
5. Press Left Soft Key  **Done** when you are finished selecting the ringtones or wallpapers you wish to add.
6. Press Right Soft Key  **Options** and select **Settings**. From this menu you can configure the Shuffle preferences.

@metro/ MetroWEB





@metro

Allow you to download new applications from the @metro service.

1. Press , .
2. Waiting for @metro started then go to Browse to see the catalog of application
3. Choose which application you want to download then follow the on-screen instruction to download
4. You can start using the application after download finish.

MetroWEB

The MetroWeb feature allows you to view Internet content. Access and selections within this feature are dependent upon your service provider. For specific information on Web access through your phone, contact your service provider.

1. Press , .
2. Press the Directional Key  to scroll to the MetroWEB menu and press .

@metro/ MetroWEB

Recent Calls

Recent Calls


The Recent Calls menu has lists of phone numbers and/or Contact entries for calls you missed, received or dialed.

It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

1. Missed Calls

Allows you to view the list of missed calls, up to 40 entries.

1. Press , , .

2. Use  to highlight an entry.

2. Received Calls

Allows you to view the list of incoming calls; up to 40 entries.


1. Press , , .

2. Use  to highlight an entry.

3. Dialed Calls

Allows you to view the list of outgoing calls; up to 40 entries.

1. Press , , .

2. Use  to highlight an entry.

4. All Calls

Allows you to view the list of missed, received and dialed calls; up to 120 entries.

1. Press , , .



2. Use  to highlight an entry.

5. Call Timer

Allows you to view the duration of selected calls.

1. Press , , .

Recent Calls





2. Use  to highlight a call type, then press .

Last Call/ Dialed Calls/
Received Calls/ Home Calls/
Roam Calls/ All Calls/
Lifetime Calls

Received Data/ Sent Data/
All Data/ Lifetime Data

6. Data

Allows you to view the list of the most recent data calls.

1. Press , , .
2. Use  to highlight an entry.

7. Data Counter

Allows you to view the amount of Received and Sent data.

1. Press , , .
2. Use  to highlight a data call type, then press .







Recent Calls

Music

Music

Allows you to access songs stored in your memory card. For access to this feature, there should be stored music in your memory card. Music can be transferred to your phone from your PC. To enable this feature, please set USB Mass Storage to On (see page 72).

1. All Songs

1. Press , , .
 2. Use  to select a music file and press  **Play** to play or the Right Soft Key .
- Options:**

Music List Search/ Add to Playlist/ Delete/ Information/ Delete Multiple (Selective/ All)


 



Options available when playing music:

Repeat (Repeat Off/ Repeat One/ Repeat All)
Shuffle (On/ Off)

Background Music (Prompt/ Always On/ Always Off)







2. Playlists

Allows you to create and listen to Playlists.

1. Press , , .
2. Press the Left Soft Key  **New** to create a new playlist or press Right Soft Key  **Options** for the following options:
 Play Playlist/ Rename Playlist/ Create Playlist/ Edit Playlist/ Delete Playlist/ Delete All Playlists/ Import M3U file/ Export M3U File






3. Recently Played

Allows you to view the most recently played songs.

1. Press , , .
2. Use  to highlight the recently played songs. Then press  **Play** to play or the Right Soft Key  **Clear** to clear the list.






4. Artists

Allows you to view and listen to your music by Artists.

1. Press , , .
2. Use  to select the artist to view and press  **View** to view the songs in your collection by that Artist.



 


5. Genres

Allows you to view and listen to your music by Genre.

1. Press , , .
2. Use  to select the Genre to view and press  **View** to view the songs in your collection from that Genre.

6. Albums

Allows you to view and listen to your music by Album.

1. Press , , .
2. Use  to select the Album and press  **View** to view the songs from that Album.

My Schedule

My Schedule

Your My Schedule tools include Calendar, Notepad, Alarm Clock.

1. Calendar

Allows you to store and access your agenda(s). Simply enter your appointments in the Calendar, and your phone can (depending on your Master Volume settings) alert you with a reminder.

1. Press , , .

2. Use to highlight the scheduled day.

- Moves to the previous day.
- Moves to the next day.
- Moves to the previous week.
- Moves to the next week.

3. Press Left Soft Key **New**.

4. Enter your schedule information including:

- Set Time
- Subject
- Reminder
- Repeat
- Repeat End
- Ringtone

5. Press **Save**.

2. Notepad



Allows you to add, read, edit, and erase notes.


1. Press , , .

2. Press Left Soft Key **New** to write a new note.

3. Type the note, then press **Save**. A confirmation message displays briefly, then displays your list of notes.

Editing a Notepad Entry

1. Access Notepad and highlight the saved note.
2. Press  **View**, then press the Left Soft Key  **Edit**.









For other available options, press Right Soft Key  **Options**.

Delete/ Edit/ Delete All

3. Alarm Clock

Allows you to set up to five alarms. At the alarm time, any set alarm can sound (depending on your Master Volume settings) the tone of your choice, and an alarm message will be displayed on the LCD screen.

1. Press ,  **8** tuv,  **3** def.







2. Use  to highlight the alarm you wish to set, then press  to select it.
3. Press Left Soft Key  **Set** to set the alarm time.
4. Use  to highlight **Repeat** (recurrence setting).
5. Press  to select one of the following.
Once/ Daily/ Mon - Fri/ Weekends
6. Use  to highlight **Ringtones**, press Left Soft Key  **Set** and select a ringtone.
7. Press  **Save**.

Bluetooth®

My Menu/ Bluetooth®

My Menu

Allows you quick access to your favorite menus or functions. A maximum of 12 items can be stored in My Menu.

1. Press , .
2. Select the location for your menu (or function) by using , then press .
3. Select the menu (or function) you wish to add to My Menu by using , then press  Set.

Bluetooth®

The **MT375** is compatible with devices that support the Bluetooth headset, hands-free profiles, object push, File Transfer, and phonebook access. You may create and store several pairings within the **MT375** and connect to one device at a time. The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).

Bluetooth QD ID B015101

Note

Read user guide of each Bluetooth® accessory that you are trying to pair with your phone because the instructions may be different.

Bluetooth®

Note

The Bluetooth® features of this handset may not be compatible with all devices which are Bluetooth® enabled; your service provider or handset manufacturer cannot be responsible for compatibility with devices not sold by the service provider or handset manufacturer.

1. Paired Devices


Pairing is the process that allows the handset to locate, establish and register 1-to-1 connection with the target device.


For pairing new Bluetooth® device


1. Press , , .


Follow the Bluetooth® accessory instructions to set the target device to pairing mode.

2. Press the Left Soft Key  Search.

3. If Bluetooth® power is set to off, you will be prompted to turn power on. Select **Yes** and press .

4. Select **New Search/ Last Search**. The device will appear in the Add New Device list once it has been located. Highlight the device and press  Pair.

5. The handset may prompt you for the passkey. Consult the Bluetooth® accessory instructions for the appropriate passkey (typically "0000" - 4 zeroes). Enter the passkey and press .

6. The handset will prompt you for your connection preferences. Highlight **Always Ask** or **Always Connect** and press .






Bluetooth®

Bluetooth®

- Once connected, you will see the device listed in the Paired Devices menu.

2. Power

Allows you to set Bluetooth® power to On/Off.






- Press , , .
 - Use  to select a setting, then press .
- On/ Off

Note

By default, your device's Bluetooth® functionality is turned off.

3. My Visibility

Allows you to set the visibility of your Bluetooth® function.

- Press , , .
- Use  to select a setting, then press .

Options are:






Visible/ Hidden

Note

If you turn on My Visibility, your device is able to be discovered by other in-range Bluetooth® devices.

4. My Bluetooth Name

Allows you to edit the name/ alias of your Bluetooth® device.

- Press , , .
- Hold down  to clear the existing name.
- Use the alphanumeric keypad to enter a new alias.
- Press  Save to save and exit.

5. My Bluetooth Info

Allows you to view information regarding the Bluetooth® functionality.

- Press , , .

Tools


Tools





Your phone tools include Voice Command, Ez Tip Calc, Calculator, World Clock, Stopwatch and Unit Converter.

1. Voice Command

Allows you to make phone calls quickly and easily by voice. Your phone recalls the number from your Contacts, displays it briefly, and then dials it. This menu includes useful features for those who may be driving or blind. It delivers time information by voice and allows you to check missed calls, messages and voicemails.

Shortcut

When in standby mode, hold down the  to quickly and easily access Voice Command.

1. Press , , .
2. Select  **Start Command.**
3. When prompted, say the name of the Voice Control option you wish to use. The options available are:

Call <Name> or <Number>/
Voicemail/ Missed Calls/
Messages/ Time & Date/
Help

2. Ez Tip Calc

Allows you to quickly and easily estimate the tip and total amount of a bill by inputting the bill amount before tip, the tip percentage, and dividing it by the number of people paying.

1. Press , , .

Tools

3. Calculator

Allows you to perform simple mathematical calculations.

1. Press , , .
2. Enter data.
 - Use keypad to enter numbers.
 - Use to enter decimals.
 - Use to switch the numbers entered to a negative value.
 - Press Left Soft Key **Clear** to erase the entry.
 - Press Right Soft Key **Operator** for additional calculating options.
 - Use Navigation Keys to enter functions.
 - Press to complete equation.

4. World Clock








Allows you to determine the current time in another time zone or city.

1. Press , , .
2. Press Right Soft Key **Cities** to select a specific city and display the date/time in that location.
3. Press to select the highlighted city.
4. Use to scroll through all available cities on the map.
5. Press Left Soft Key **Set DST.** to select Daylight Savings Time settings.

5. Stopwatch





Allows you to use your phone as a Stopwatch.

Tools/ Settings

1. Press , , .
2. Press  **Start** to start, and press  **Stop** to stop.
 - You can use the Lap function by pressing Right Soft Key  **Lap** to record up to 20 laps and lap times.
3. Press Left Soft Key  **Reset** to reset.

6. Unit Converter

Allows you to measure Area, Length, Temperature, Mass Volume and Velocity.

1. Press , , .
2. Once you select one of the options. Use  to select a field and enter the unit amount. The conversions will be made automatically.








Settings

1. Sound

Options to customize your phone's sounds:

1.1 Ringers

Allows you to assign ringtones for incoming calls.

1. Press , , , .
2. Select **All Calls/ Caller ID/ No Caller ID/ Restricted Calls/ Roaming/ Shuffle**.
3. Select one of the files or open the **My Ringers** folder.
4. Use  to highlight a ringer, and press  **Play** to listen to it. Press Left Soft Key  **Set** to set the ringtone to your phone.

Settings

1.2 Volume

Allows you to set various volume settings.

1. Press , , , .
2. Select **Master Volume/ Keypad/ Earpiece/ Speaker**.
3. Use to adjust the volume of the ringer, then press to save the setting.

1.3 Message Alerts

Allows you to select the alert tone for new message notifications and set the frequency of the Message Reminder.

1. Press , , , .
2. Select **Text Message/ Picture Message/ Voicemail/ All Messages/ Message Reminder**.
3. Use to select a ringer or setting, then press .

1.4 Alert Type

Allows you to select the alert types.

1. Press , , , .
2. Use to highlight the alert you wish to edit.

**Call Alert/ Message Alerts/
Calendar Alert/ Alarm Alert**

3. Use to scroll through the alert types.

**Ring Only/ Vibrate Only/
Ring & Vib**

4. Press **Save** to save.

1.5 Service Alerts

Allows you to set any the Service Alert preferences.

1. Press , , , .
2. Select an alert type:

1.5.1 Minute Beep

Alerts you 10 seconds before the end of every minute during a call.

1.5.2 Call Connect

Alerts you when the call is connected.

1.5.3 Back to Top

Alerts you when you scroll through the end of a menu list.

1.5.4 Low Battery

Alerts you when the battery charge level is low.

1.5.5 Roam Alert

Alerts you when the call is connected.

- Use to select an option, then press .

Options are: **On/ Off**

Options for Low Battery are:
Announce/ Tone

1.6 Power On/Off Tone

Allows you to set the phone to sound a tone when the phone is powered on and off.

- Press , , , .
- Use to set to **On/ Off**, then press .

1.7 Slide Tone

Allows you to set a slide tone that will play when you slide your phone.

- Press , , , .
- Use to set to **On/ Off**, then press .

2. Display

Options to customize your phone's display screen:

2.1 Shortcuts Display

Allows you to enable/disable the

Settings

popup shortcut from the standby screen. When set to On, you can access the metroPCS Apps by pressing . When set to Off, accesses MetroWEB and accesses the Calendar.

1. Press , , , .
2. Select **On/ Off**, then press .

2.2 Wallpaper

Allows you to choose the kind of background to be displayed on the phone.

1. Press , , , .
2. Select **Main Screen/ Shuffle**, then press .

2.2.1 Main Screen

Select an image or video from My Picture or My Videos, and press Left Soft Key **Set** to set it as the main screen wallpaper.

2.2.2 Shuffle

Set Shuffle to **On** or **Off**, and set the repeat frequency.

2.3 Banner

Allows you to enter a string of characters which display on the LCD screen.

1. Press , , , .
2. Use to select **On/ Off**.
3. Scroll down to the text window and enter your banner text, then press .

2.4 Backlight

Allows you to set the duration for illuminating the backlight.






1. Press , , , .
2. Select a submenu, then press .

Display/ Keypad

3. Use to select a setting, then press .







2.5 Menu Style

Allows you to view the Menu as an Icon or List display.

1. Press , , , .
2. Select **Icon** or **List** and press .







2.6 Languages

Allows you to use the bilingual feature according to your preference. Choose between English and Spanish.


1. Press , , , .
2. Use  to select **English** or **Spanish**, then press .

2.7 Clocks & Calendar

Allows you to select the type of clocks displayed on the main LCD.








1. Press , , , .
2. Use  to choose a setting and press .

**Normal Clock/ Analog Clock
/ Digital Clock/ Dual Clock/
Calendar/ Off**

3. Press the Left Soft Key 
Set to save the setting.

2.8 Font Settings

Allows you to select the type of font displayed on the phone text and dialpad.

1. Press , , , .
2. Choose a sub-menu and press .
3. Use  to highlight an option, then press .

**Font Type/ Dial Font Style/
Dial Font Size**

Options for Font Type

LG Arial/ LG Script/ LG Serif

Options for Dial Font Style

**Robot/ Green Lawn/
Painter/ Basic**

Settings

Options for Dial Font Size

Normal/ Large




2.9 Color Schemes

Allows you to choose the color scheme of the phone menus.

1. Press , , **2 abc**, **9 worst**.
2. Select **Black/ White** then press .

2.0 Name Match for Dialing

Matches a saved Contact entry with the corresponding letters entered on the Dialing screen after 3 characters are entered.




1. Press , , **2 abc**, **0 next**.
2. Select **On/ Off** then press .

3. Security




The Security menu allows you to secure the phone electronically.

3.1 Lock Phone

Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can receive phone calls and still make emergency calls. You can modify the lock code by setting a New Lock code within the Security menu.

1. Press , , **3 def**.
2. Enter the four-digit lock code and press .

The default lock code is commonly the last 4 digits of your phone number.

3. Press  **Lock Phone**.
4. Use  to select an option, then press .

Unlock The phone remains unlocked by default, until it is locked manually.

Lock The phone remains locked. When locked, you can receive incoming calls and make calls only to Emergency #s.

On Power Up The phone is locked when it is turned on.

3.2 Restrictions

Allows you to set restrictions for incoming calls, outgoing calls, Messaging, the Camera function and Data.

1. Press , , .
2. Enter the four-digit lock code and press .
3. Press **Restrictions**.
4. Enter the four-digit lock code and press .
5. Use to select **Incoming Calls, Outgoing Calls, Incoming Messages, Outgoing Messages, Camera,**

Data, then press .

6. Choose the type of restriction and press to set.

3.3 Emergency #s

Allows you to enter 3 emergency numbers. You can call these emergency numbers and 911, even when the phone is locked or restricted.





1. Press , , .
2. Enter the four-digit lock code and press .
3. Press **Emergency #s**.
4. Press to edit the emergency numbers.

3.4 Change Lock Code

Allows you to enter a new four-digit lock code.


1. Press , , .

Settings

2. Enter the four-digit lock code and press .
3. Press  **Change Lock Code**.
4. Use  to select a setting, then press .







Phone Only Allows you to change the lock code used to lock/unlock the phone.

Call & Applications Allows you to change the lock code that is used to access the Restrictions menu (Calls, Messages, Camera and Data).

5. Enter a new 4-digit lock code and press . If you're changing the Call & Applications Lock Code, you will need to enter the current Lock Code first.
6. For confirmation, it will ask you to enter the new lock code again.

3.5 Reset Default

Allows you to reset your phone to the factory default settings.

1. Press , , .
2. Enter the four-digit lock code and press .
3. Press  **Reset Default**.
4. Read the displayed message and press  to continue.
5. A message will pop up that says "All settings will revert to factory default."

Select: **Revert/ Cancel**

6. Enter your lock code to confirm your selection.

4. Call Settings

The Call Settings menu allows you to designate how the phone handles both incoming and outgoing calls.

4.1 Answer Options

Allows you to determine how to answer an incoming call.

1. Press , , , .
2. Use to select a setting, then press .

Slide Open/ TALK Key Only/
Slide Open & Any Key/ Auto
Answer

4.2 End Call Options

Allows you to determine how the phone will disconnect a call.

1. Press , , , .
2. Use to select a setting, then press .

Slide Down/ End Key Only

4.3 Auto Retry

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

1. Press , , , .
2. Use to select a setting, then press .

Off/ Every 10 Seconds/
Every 30 Seconds/ Every 60
Seconds

4.4 One-Touch Dial

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Off, Speed Dial numbers designated in your Contacts will not function.

1. Press , , , .
2. Use to select a setting, then press .



 
 


On/ Off

4.5 Voice Privacy

Allows you to set the voice privacy feature for CDMA calls as Enhanced or Standard. CDMA already offers inherent voice

Settings




 



privacy. Check with your service provider for availability.

1. Press , , , .
2. Use  to select a setting, then press .

Enhanced/ Standard

4.6 Airplane Mode

Turns off the wireless communications and allows you to use features on your phone that do not require wireless communications.








1. Press , , , .
2. Read the displayed message and press  to continue.
3. Use  to select a setting, then press .

On/ Off

4.7 TTY Mode

Allows you to attach a TTY

(Teletype writer) device, enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. Press , , , .
2. Read the displayed message and press  to continue.
3. Use  to select a setting, then press .

TTY Full/ TTY + Talk/ TTY + Hear/ TTY Off

5. USB Mass Storage

This menu enables you to transfer content from your phone to your Windows® XP or Windows Vista™ PC (or vice versa) when your phone is connected to your Windows® XP

or Windows Vista™ PC with a compatible USB cable. Mac OS operating system is not supported.

1. Press , , .
2. Use to select a setting, then press .

On/ Off

Note

Once this is set to On, you can connect your phone to a PC. The phone will appear as a removable device.

6. System

The System menu allows you to designate specific system network settings.

6.1 Network

6.1.1 System Select

Allows you to set up the phone producer's management environment. Leave this setting as

the default unless you want to alter system selection as instructed by your service provider.

1. Press , , , , .
2. Use to select **metroPCS/ Automatic** then press .

6.1.2 Set NAM

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Press , , , , .
2. Use to select **NAM1** or **NAM2**, then press .

6.1.3 Auto NAM

Allows the phone to automatically switch between programmed telephone numbers corresponding to the service provider area.

Settings

1. Press , , , ,
 .

2. Use to select **On** or **Off**,
then press .

6.1.4 Serving System

Identifies the channel number of a system that is served as a SID Number. This information should only be used for technical support.

1. Press , , , ,
 .

6.2 Location

Allows you to turn On or Off the Location function on your phone. If set to On, location-based services are able to access your GPS (Global Positioning System) satellite-assisted location information.

1. Press , , , .
2. Use to select a setting,

then press .

Location On/ E911 Only

Note

GPS satellite signals are not always transmitted, especially under bad atmospheric and environmental conditions, indoors etc.

7. Memory

Allows you to check the memory status of your phone and to set the save options.

1. Press , , .
2. Select **Save Options/ Phone Memory/ Card Memory**.

8. Phone Info

The Phone Info menu provides you with specific information pertaining to your phone model.

1. Press , , .
2. Select a submenu.

**My Number/ ESN/MEID/
Icon Glossary/ Version**

Safety

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection.

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments

Safety

could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and

always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association

recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with Pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that

interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas

Safety

instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air.

Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations);

below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all times after reading it.

Caution! *Violation of the instructions may cause minor or serious damage to the product.*

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Use the correct adapter for your phone when using the battery pack charger abroad.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.

Safety

Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery doesn't need to be empty before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to

usage patterns and environmental conditions.

- Use of extended backlighting, Browser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug,

ensure that it's firmly connected. If not, it may cause excessive heat or fire.

- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Do not disassemble or crush the battery. It may cause a fire.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.

Safety

- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Warning! Important safety information

Avoiding hearing damage

Permanent hearing loss may occur if you use your phone and/or headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you

experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use your phone and/or headset at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your phone, see the features guide for your phone.

Using your phone safely

Use of your phone while

operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using your phone if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.

Avoiding hearing damage

Permanent hearing loss may occur if you use your headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

Safety

- Limit the amount of time you use headset at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your handset, please refer to the features guide for your handset.

Using headsets safely

Use of headsets to listen to music while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using this device if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.



FDA Consumer Update

The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known

adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF)

energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the

Safety

best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit

connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that

Safety

had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from

wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more

years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that

high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on

Safety

wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures.

The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website

(<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first

consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head.

Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these

Safety

products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not

demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by

other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method

to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and

Safety

performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

Commission (FCC) RF Safety Program
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project
(<http://www.who.int/emf>)

National Radiological Protection Board (UK)
(<http://www.hpa.org.uk/radiation/>)

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones
(<http://www.fda.gov/cellphones/>)
Federal Communications

using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Don't take notes or look up

Safety

phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.

6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip -- dial only a few numbers, check the road and

your mirrors, then continue.

7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations -- with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or

medical emergency. Remember, it's a free call on your wireless phone!

9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your

wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

Safety

Consumer Information on SAR

(Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and

engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure Limit for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC

with the phone transmitting at its highest certified power level in all tested frequency bands.

Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2.0 cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.79 inches (2.0 cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

The FCC has granted an Equipment Authorization for this

Safety

model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

The highest SAR value for this model phone when tested for use at the ear is 1.23 W/kg and when worn on the body, as described in this user's manual, is 0.847 W/kg. While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID.

To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed

somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are

more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

 
 
Safety

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for

normal use. A sum of 6 is considered for best use.

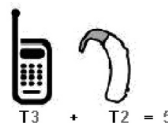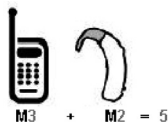

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This is synonymous for T ratings. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT

marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

For information about hearing aids and digital wireless phones

FCC Hearing Aid Compatibility and Volume Control

<http://www.fcc.gov/cgb/dro/hearing.html>

Gallaudet University, RERC

<http://tap.Gallaudet.edu/DigWireless.KS/DigWireless.htm>

Hearing Loss Association of America [HLAA]

<http://www.hearingloss.org/learn/cellphonetech.asp>

The Hearing Aid Compatibility FCC Order

http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf

Accessories

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability. Optional items are sold separately.

Wall/USB Charger



USB Cable



Battery

Standard battery is available.



Vehicle Power Charger

The vehicle power charger allows you to operate the phone and charge the phone's battery from your vehicle.



Stereo Earphones



Limited Warranty Statement

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or

transferable to any subsequent purchaser/end user.

- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service

Limited Warranty Statement

Limited Warranty Statement

Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts

which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.

- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise,

including, but not limited to any implied warranty of marketability or fitness for a particular use.

- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. WHAT LG WILL DO:

“LG will, at its sole option, either repair, replace or refund the

purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.”

4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

Limited Warranty Statement

Limited Warranty Statement

LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

5. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

**Tel. 1-800-793-8896 or Fax.
1-800-448-4026**

Or visit <http://us.lgservice.com>.
Correspondence may also be mailed to:

LG Electronics Service- Mobile
Handsets

P.O. Box 240007, Huntsville, AL
35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS. Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

Index

1

10 Driver Safety Tips
94
@metro 51

A

Accessories 104
Airplane Mode 72
Alarm Clock 57
Albums 55
Alert Type 64
All Calls 52
All Messages 41
All Songs 54
Answer Options 71
Artists 55
Audios 49
Auto Retry 71

B

Backlight 66
Banner 66
Battery Charge Level
23
Bluetooth® 58

C

Calculator 62
Calendar 56
Call Settings 70
Call Timer 52
Call Waiting 26
Caller ID 27
Change Lock Code 69
Charging the Battery
21
ChatLINK 45
Clocks & Calendar 67
Color Schemes 68
Consumer Information
on SAR 98
Contact List 44
Contacts 43
Contacts in Your
Phone's Memory 29
Correcting Dialing
Mistakes 25

D

Data 53
Data Counter 53
Delete All 42

Dialed Calls 52
Display 65
Drafts 38

E

Edit Voicemail # 42
Email 40
Emergency #s 69
End Call Options 71
Entering and Editing
Information 28
Ez Tip Calc 61

F

FCC Hearing-Aid
Compatibility (HAC)
Regulations for
Wireless Devices 101
FDA Consumer Update
84
Font Settings 67

G

Genres 55
Getting Started with

Index

Your Phone 21
Groups 44

H

How to Install Your
microSD™ Card 22
How to Remove Your
microSD™ Card 22

I

Images 49
Important Safety
Precautions 1
Inbox 37
Index 109

L

Languages 67
Limited Warranty
Statement 105
Location 74
Lock Phone 68

M

Making a Call From
Your Phone's Memory
32
Making Calls 24
Memory 74
Menu Style 67
Menus Overview 18
Message Alerts 64
Messaging 34
Metro WEB 51
Metro411 45
Missed Calls 52
Mobile IM 40
Multimedia 46
Music 54
Mute Function 26
My Bluetooth Info 60
My Bluetooth Name
60
My Menu 58
My Name Card 45
My Schedule 56
My Visibility 60

N

Name Match for
Dialing 68
Network 73
New Contact 43
New Picture Message
36
New Text Message 34
Notepad 56

O

One-Touch Dial 71

P

Paired Devices 59
Phone Info 74
Phone Numbers With
Pauses 29
Phone Overview 16
Picture Message 42
Playlists 54
Power 60
Power On/Off Tone 65

Q

Quick Access to
Convenient Features 26
Quick Volume
Adjustment 26

R

Received Calls 52
Receiving Calls 25
Recent Calls 52
Recently Played 55
Record Video 48
Record Voice 48
Redialing Calls 25
Reset Default 70
Restrictions 69
Ringers 63

S

Safety 75
Safety Information 79
Screen Icons 24
Searching Your Phone's

Memory 31
Security 68
Sent 38
Service Alerts 64
Settings 41, 63
Shortcuts Display 65
Shuffle 50
Signal Strength 23
Slide Tone 65
Sound 63
Speed Dials 46
Stopwatch 62
System 73

T

Table of Contents 4
Take Photo 46
Technical Details 11
Templates 40
Text Input 28
Text Message 41
The Basics of Storing
Contacts Entries 29
The Battery 21
TIA Safety Information

75
Tools 61
TTY Mode 72
Turning the Phone On
and Off 23

U

Unit Converter 63
USB Mass Storage 72

V

Videos 49
Voice Command 61
Voice Privacy 71
Voicemail 39
Volume 64

W

Wallpaper 66
Warning! Important
safety information 82
Welcome 10
World Clock 62