

عربي  
ENGLISH



ENGLISH  
عربي

دليل مستخدم  
LG-C310

USER GUIDE  
LG-C310



CE0168

[www.lg.com](http://www.lg.com)

P/NO : MMBB0392935 (1.1)



CE0168

[www.lg.com](http://www.lg.com)

P/NO : MMBB0392935 (1.1)

Bluetooth QD ID B016671

# دليل مستخدم LG-C310 - العربية

سيُساعدك هذا الدليل على إدراك كيفية استخدام هاتفك المحمول الجديد. سيوفر لك شرحاً مفيداً للميزات الموجودة على هاتفك.

قد تختلف بعض المحتويات الموجودة في هذا الدليل عن هاتفك وذلك استناداً إلى برنامج الهاتف أو موفر الخدمة.



## إرشادات لاستخدام آمن وفعال

• حد SAR الذي توصي به اللجنة الدولية

للمحماية من الإشعاع غير المؤين

Commission on Non-Ionizing  
Radiation Protection (ICNIRP)

هو 2 واط/كغ وهو حد مقسم على نحو

متناسب إلى 10 غرامات من النسيج

العضوي.

• تبلغ أعلى قيمة SAR لطراز الهاتف

هذا الذي تم اختياره بواسطة DASY4

للاستخدام على الأذن 1.26 واط/كيلوجرام

(10 جرام). وعند الحمل على الجسد تبلغ

1.14 واط/كيلوجرام (10 جرام).

• معلومات بيانات SAR للمقيمين في

بلدان/مناطق تبني حد SAR الموصى به

من قبل معهد المهندسين الكهربائيين

والإلكترونيين (IEEE). وهو 1.6 واط/كغ

كمتوسط لكل غرام واحد (1) من النسيج.

### العناية بالمنتج وصيانتة

⚠ تحذير: استخدم فقط البطاريات

والشواحن والملحقات الموافق على

استخدامها مع طراز الهاتف المعين هذا. إن

استخدام أي أنواع أخرى قد يؤدي إلى إبطال

أي ضمان أو موافقة تطبيق على الهاتف

المحمول. وقد يكون خطيراً.

يرجى قراءة هذه الإرشادات البسيطة. عدم

التقيد بهذه الإرشادات قد يكون أمراً خطراً أو

غير قانوني.

### التعرض لطاقة التردد اللاسلكي

معلومات حول التعرض للموجات اللاسلكية

ومعدل الامتصاص المحدد (SAR). لقد تم

تصميم طراز الهاتف المحمول LG-C310

هذا بحيث يفي بمتطلبات السلامة السارية

المتعلقة بالتعرض للموجات اللاسلكية.

وتستند هذه المتطلبات إلى إرشادات علمية

تضمن هوامش سلامة مصممة لضمان

السلامة لكل الأشخاص. دون أخذ العمر

والصحة بعين الاعتبار.

• تستخدم إرشادات التباين للموجات

اللاسلكية وحدة قياس معروفة بمعدل

الامتصاص المحدد، أو SAR. وتجري اختبارات

SAR باستخدام أساليب قياسية فيما

ينفذ الهاتف عملية الإرسال بأعلى مستوى

طاقة مسموح به في كل نطاقات التردد التي

تم اختبارها.

• وعلى الرغم من وجود اختلافات بين مستويات

SAR لمختلف طرازات هاتف LG. فهي كلها

مصممة بحيث تفي بالإرشادات المتعلقة

بالتعرض للموجات اللاسلكية.

- لا تقم بتفكيك الوحدة. اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى تنفيذ عمل ما عليها لإصلاحها.
- ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفزيون. والراديو. وأجهزة الكمبيوتر الشخصي.
- يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل الأجهزة المشعة للحرارة أو الأفران المنزلية.
- تجنب إسقاط الوحدة.
- لا تعرّض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.
- أوقف تشغيل الهاتف في أي منطقة حيث القوانين الخاصة تطالبك بذلك. على سبيل المثال. لا تستخدم الهاتف في المستشفيات إذ قد يؤثر على المعدات الطبية الحساسة.
- لا تمسك الهاتف بيدين رطبتين فيما يكون شحنه جار. فقد يتسبّب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.
- يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال إذ قد يصبح الهاتف ساخناً وقد يؤدي ذلك إلى اندلاع حريق.
- استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبنزين أو التينر أو الكحول).
- لا تشحن الهاتف عندما يكون موضوعاً على أثاث ناعم.
- يجب أن يتم شحن الهاتف في منطقة ذات تهوية جيدة.
- لا تعرّض هذه الوحدة للدخان أو الغبار الزائد.
- لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.
- لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.
- لا تعرّض الهاتف للسوائل أو الرطوبة.
- استخدم الملحقات كسماعات الأذن مثلاً بحذر. لا تلمس الهوائي دون وجود سبب يدعوك إلى ذلك.

## تشغيل فعال للهاتف

### الأجهزة الإلكترونية

- قد تعرّض كل الهواتف المحمولة للتشويش. ما قد يؤثر على أدائها.
- لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية دون طلب الإذن للقيام بذلك. تجنّب وضع الهاتف على أجهزة ضبط النبض. مثلاً. في الجيب على مستوى الصدر.
- قد تسبّب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.

## إرشادات لاستخدام آمن وفعال

### تجنب إلحاق الضرر بسمعك

قد يؤدي تعرّضك إلى أصوات عالية لفترات طويلة من الوقت إلى إلحاق الضرر بسمعك. ونوصي بالتالي بالأا تقوم بتشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنك. كما نوصي بضبط مستوى صوت معقول للموسيقى والمكالمات.

### مناطق التفجير

لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية، التزم بالقيود. واتبع الأنظمة أو القوانين.

### مناطق تتسم أجواؤها بالقابلية

#### للانفجار

- لا تستخدم الهاتف في نقطة إعادة التزويد بالوقود.
- لا تستخدم الهاتف بالقرب من الوقود أو المواد الكيميائية.
- لا نحم بنقل أو تخزين غاز أو سائل قابل للاشتعال أو متفجرات في حجرة السيارة نفسها التي تحتوي على الهاتف المحمول وملحقاته.

### في الطائرة

- باستطاعة الأجهزة اللاسلكية أن تتسبب بحدوث تشويش في الطائرة.
- أوقف تشغيل الهاتف المحمول قبل

• قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون والراديو والكمبيوتر الشخصي.

### السلامة على الطرقات

- تحقق من القوانين والأنظمة المتعلقة باستخدام الهواتف المحمولة في المناطق أثناء القيادة.
- لا تستخدم هاتفاً محمولاً باليد أثناء القيادة.
- عليك دوماً تركيز كامل الانتباه على القيادة.
- استخدم مجموعة أدوات لا يدوية، إذا كانت متوفرة.
- توقّف عند جانب الطريق قبل إجراء مكالمة أو الإجابة على المكالمة إذا كانت ظروف القيادة تستدعي ذلك.
- قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل الاستيريو ومعدات السلامة في السيارة.
- عندما تكون المركبة مزودة بكيس هوائي، عليك عدم إعاقة عمله بواسطة تجهيزات لاسلكية مثبتة أو محمولة، فقد يبطل ذلك عمل الكيس الهوائي أو قد يتسبب ذلك بإصابات خطيرة بسبب أداء غير صحيح.
- إذا كنت تستمع إلى الموسيقى أثناء تنقلك، فتأكد من كون مستوى الصوت معقولاً بحيث تكون مدركاً لما يحيط بك. هذا الأمر يعتبر ملزماً خاصة بالقرب من الطرقات.

الصعود على متن أي طائرة.

• لا تستعمله في الطائرة من دون الحصول على إذن من قبل الطاقم.

## الأطفال

ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال. فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتسبب بالاختناق.

## مكالمات الطوارئ

قد لا تكون مكالمات الطوارئ متوفرة ضمن شبكات الهاتف المحمول كافة. وبالتالي عليك ألا تعتمد فقط على هاتفك المحمول لمكالمات الطوارئ. راجع موفر الخدمة المحلي لديك لمزيد من المعلومات.

## معلومات حول البطارية والعناية بها

• لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها. وبخلاف أنظمة البطاريات الأخرى. ليس هناك من تأثير للذاكرة يمكنه تخفيض أداء البطارية. • استخدم بطاريات وشواحن LG فقط. • فنشواحن LG مصممة لإطالة فترة عمل البطارية.

• لا تعمل على تفكيك البطارية أو تعريضها لحدوث تماس.

• حافظ على نظافة الموصلات المعدنية الموجودة على البطارية.

- استبدل البطارية عندما يصبح أداؤها غير مقبول. قد يعاد شحن البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
- أعد شحن البطارية إذا كنت قد توقفت عن استخدامها لفترة طويلة وذلك لزيادة صلاحية استعمالها إلى الحد الأقصى.
- لا تعرض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة، مثل الحمام.
- لا تترك البطارية في الأماكن الساخنة أو الباردة. فقد يؤدي ذلك إلى التراجع في أداء البطارية.
- هناك خطر انفجار، إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.
- تخلص من البطاريات المستعملة طبقاً لتعليمات الشركة المصنعة. يرجى إعادة التصنيع عندما يكون ذلك ممكناً. لا تخلص منها كمهملات منزلية.
- إذا كنت بحاجة إلى استبدال البطارية، خذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للحصول على المساعدة.
- قم دائماً بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.
- تعتمد فترة عمل البطارية الفعلية على تكوين الشبكة واعدادات المنتج ونمط الاستخدام والبطارية و الظروف البيئية.

## التعرّف على هاتفك





## الشاحن/موصل كبل USB

تلميح: يرجى التأكد من تشغيل الهاتف، ومن إدخال بطاقة الذاكرة وأن الهاتف في وضع الخمول قبل توصيل كبل USB ذي التخزين الكبير السعة.

## المفاتيح الجانبية

- في وضع الانتظار: يتيح لك هذا الخيار التحكم بمستوى صوت الرنين.
- أثناء المكالمات: ضبط مستوى صوت سماعة الأذن
- أثناء تشغيل موسيقى MP3: ضبط مستوى الصوت

مفتاح تبديل SIM (الاختيار بين SIM1 و SIM2)

## سماعة الرأس

## عدسة الكاميرا

## غطاء البطارية

## SIM2 حامل بطاقة

## SIM1 حامل بطاقة

## حزمة البطارية

# تثبيت بطاقة SIM و البطارية

## 1 نزع غطاء البطارية

اضغط على مزلاج تحرير غطاء البطارية.



## 2 إخراج البطارية

ارفع الحافة السفلى للبطاقة وقم بإخراجها بتأنٍ من حجرتها.



**⚠ تحذير:** لا تقم باستبدال بطاقة SIM أو إزالتها أثناء استخدام الهاتف أو عندما يكون قيد التشغيل فذلك قد يؤدي إلى فقدان البيانات أو إلحاق الضرر بطاقة SIM.



## 4 تركيب البطارية

قم أولاً بإدراج الجهة العليا للبطارية في الحافة العليا لحجرة البطارية. تأكد من محاذاة موصلات البطارية مع الأطراف الموجودة على الهاتف. اضغط على جهة البطارية السفلى إلى الأسفل حتى تستقر في مكانها.

**⚠ تحذير:** لا تخرج البطارية عندما يكون الهاتف قيد التشغيل. إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.

## 3 تثبيت بطاقة SIM

ادخل بطاقة SIM داخل حامل بطاقة SIM. تأكد من كون ناحية الموصلات الذهبية الموجودة على البطاقة موجهة نحو الأسفل. لإخراج بطاقة SIM، اسحبها بلطف في الاتجاه العكسي.

 


## 5 إعادة غطاء البطارية إلى مكانه



## 6 شحن الهاتف

اسحب لفتح غطاء مقبس الشاحن الموجود في جانب الهاتف LG-C310. أدخل الشاحن وقم بتوصيله بمقبس كهربائي رئيسي. يجب أن يتم شحن الهاتف LG-C310 حتى تظهر على الشاشة رسالة تشير إلى أن "البطارية ممتلئة".

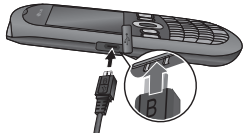

## استخدام بطاقة SIM المزدوجة

يمكنك رؤية رمزين للإشارة الشبكة على الجانب الأيسر العلوي من الشاشة عند إدخال بطاقة SIM مزدوجة.

لتحديد أو تبديل بطاقة SIM، اضغط على القائمة وحدد الإعدادات، ثم حدد بطاقة SIM المزدوجة.

أو ببساطة اضغط على مفتاح بطاقة SIM المزدوجة على الجانب الأيمن من هاتف LG-C310. يسهل عليك مفتاح بطاقة SIM المزدوجة تبديل بطاقة SIM كلما كنت تجري مكالمة أو ترسل رسالة، إلخ.

**تلميح!** يمكنك رؤية إشارات الشبكة التي تم تمييزها بواسطة لون الخلفية عند تبديلها. يسهل عليك ذلك تحديد قوة الإشارة الخاصة بطاقة SIM التي تم تحديدها.

**تلميح!** عليك ان تختار SIM1 أو SIM2 لاستخدام بعض الوظائف. على سبيل المثال ، المكالمات ، الرسائل ، دليل الهاتف ، وخيارات أي إعدادات

## بطاقة الذاكرة

### تركيب بطاقة ذاكرة

يمكنك توسيع مساحة الذاكرة المتوفرة على هاتفك باستخدام بطاقة ذاكرة.

**ملاحظة:** بطاقة الذاكرة هي ملحق اختياري.

- 1 إزالة غطاء البطارية و ثم إزالة البطارية.
- 2 ادفع فتحة بطاقة المايكرو لتحرير القفل.
- 3 اقلب الغطاء المعدني .
- 4 ضع بطاقة مايكرو في الفتحة المخصصة. تأكد من أن منطقة الاتصال الذهبية تواجه أسفل.
- 5 اقلب الغطاء المعدني لغلاق القفل.



### إخراج بطاقة ذاكرة

قم بإخراج بطاقة الذاكرة بعناية وذلك بدفعها بلطف إلى الهاتف وتحريرها بسرعة.

### تهيئة بطاقة الذاكرة

قد تكون بطاقة الذاكرة مهيأةً أصلاً. إذا لم تكن بطاقة الذاكرة مهيأةً، فعليك تهيئتها قبل أن تبدأ باستخدامها.

- 1 في الشاشة الرئيسية اضغط على القائمة ثم حدد إعدادات.
- 2 اختر الهاتف ومعلومات الذاكرة. ثم حدد الذاكرة الخارجية.
- 3 اضغط على تهيئة. وأدخل كلمة المرور التي تم تعيينها إلى 0000 كضبط افتراضي. ستتم تهيئة بطاقة الذاكرة وتصبح جاهزة للاستخدام.
- 4 لعرض الحافظات الجديدة التي تمت تهيئتها على هاتف LG-C310 اضغط على القائمة وحدد ملفات. اختر بطاقة الذاكرة الخاصة بي.

**تحذير:** عندما تقوم بتهيئة بطاقة الذاكرة الخاصة بك، سيتم مسح كل محتواها. إذا لم تكن ترغب في فقدان البيانات الموجودة على بطاقة الذاكرة، فعليك إجراء نسخة احتياطية عنها أولاً.

## الشاشة الرئيسية الخاصة بك

| الوصف                           | الرمز   |
|---------------------------------|---|
| الجدولة                         |  |
| رسالة جديدة                     |  |
| رسالة صوتية جديدة               |  |
| بريد إلكتروني جديد              |  |
| النمط عادي قيد الاستخدام        |  |
| النمط صامت قيد الاستخدام        |  |
| النمط خارجي قيد الاستخدام       |  |
| النمط سماعة الرأس قيد الاستخدام |  |
| فترة العمل المتبقية للبطارية    |  |
| البطارية فارغة                  |  |
| الذاكرة الخارجية                |  |
| راديو FM                        |  |
| تشغيل الموسيقى MP3              |  |

### شريط الحالة

يستخدم شريط الحالة رموزاً مختلفة للإشارة إلى أمور مثل قوة الإشارة، والرسائل الجديدة وفترة عمل البطارية، وكذلك إعلامك ما إذا كان بلوتوث نشطاً.

يشير الجدول أدناه إلى معنى الرموز التي يَرجح أن تراها في شريط الحالة.

| الوصف                                | الرمز   |
|--------------------------------------|---|
| قوة إشارة الشبكة (يختلف عدد الأشرطة) |    |
| إشارة الشبكة غير متوفرة              |    |
| GPRS متوفر                           |    |
| EDGE متوفر                           |    |
| وضع الرحلات الجوية منشط              |    |
| المكالمات محوّلَة                    |    |
| خدمة التجوال                         |    |
| بلوتوث® منشط                         |  |
| خدمة WAP متصلة                       |  |
| تم تعيين منبه                        |  |

## اتصال

### إجراء مكالمة

1 تأكد من أن هاتفك قيد التشغيل.

2 يمكنك استخدام لوحة المفاتيح. لحذف

رقم اضغط على السهم الخلفي.

3 اضغط على  لبدء المكالمة.

4 لإنهاء المكالمة، اضغط على .

**تلميح!** لإدخال + عند إجراء مكالمة دولية.

اضغط باستمرار 0.

اضغط على  أو حدد رفض لرفض  
مكالمة واردة.

**ملاحظة:** في المكالمة عندما يتم تنشيط  
مكبر الصوت، يعرض رمز مكبر الصوت مع  
خط أحمر مائل وعندما يتم إلغاء تنشيط  
مكبر الصوت يعرض رمز مكبر الصوت من  
دون الخط الأحمر المائل.

### الاتصال السريع

يمكنك تعيين رقم اتصال سريع لجهة اتصال  
تتصل بها بشكل متكرر.

1 اضغط على القائمة لفتح القائمة

الرئيسية، حدد دليل الهاتف، ثم حدد

الخيار والاتصالات السريعة.

2 تم مسبقاً تعيين بريدك الصوتي إلى رقم

الاتصال السريع 1 ولا يمكنك تغيير ذلك.

حدد أي رقم آخر سواء باستخدام مفاتيح

التنقل وتحديد تعيين أو بضغط مفتاح

الرقم الفعلي وتحديد تعيين.

3 يفتح دليل الهاتف، حدد جهة الاتصال

التي تريد تعيينها إلى ذلك الرقم

باستخدام مفاتيح التنقل، ثم اضغط

على تحديد.

لطلب رقم اتصال سريع، اضغط باستمرار

على الرقم المعين حتى ظهور اسم جهة

الاتصال على الشاشة، سوف تبدأ المكالمة

تلقائياً ولا حاجة إلى الضغط على .

### إجراء مكالمة من جهات الاتصال

من السهل الاتصال بأي شخص قمت بتخزين

رقمه في دليل الهاتف.

1 اضغط على القائمة لفتح القائمة

الرئيسية، حدد دليل الهاتف.

2 باستخدام لوحة المفاتيح، قم بإدخال

الحرف الأول من جهة الاتصال التي ترغب


في الاتصال بها وقم بالتمرير إلى دليل

الهاتف.

3 اضغط على  لبدء المكالمة.

### الرد على مكالمة ورفضها

عندما يرن الهاتف، اضغط على موافق أو

اضغط على  للرد على المكالمة.

أثناء رنين الهاتف يمكنك الضغط على

صامت لكتم صوت الرنين. يُعتبر هذا الأمر

مفيداً إذا كنت قد نسيت تغيير نمط الهاتف

إلى صامت أثناء حضور اجتماع.

## عرض سجلات المكالمات

اضغط على القائمة وحدد السجلات.

### كل السجلات - عرض قائمة كاملة

تتضمن كل المكالمات الصادرة والمكالمات

المستلمة والمكالمات التي لم يرد عليها

بالإضافة إلى الرسائل المرسله والمستلمة.

### المكالمات فقط - عرض قائمة بكل الأرقام

التي طلبتها واستلمتها ولم ترد عليها.

### الرسائل فقط - عرض قائمة بكل الأرقام التي

قمت بإرسال الرسائل إليها أو استلامها منها.

### سجلات لم يرد عليها - عرض قائمة بأي

مكالمات لم ترد عليها.

### السجلات الصادرة - عرض قائمة بكل الأرقام

التي طلبتها.

### السجلات الواردة - عرض قائمة بكل الأرقام

التي استلمتها.

### تلميح! في أي سجل مكالمات حدد

الخيارات ثم حذف لحذف العناصر المحددة.

## استخدام تحويل المكالمات

### 1 اضغط على القائمة وحدد الإعدادات ثم

المكالمة.

### 2 حدد تحويل المكالمات من SIM1 أو

SIM2.

### 3 اختر ما إذا كنت تريد أن يتم تحويل كل

المكالمات، أو عندما يكون الخط مشغولاً.

أو عند عدم الرد أو لا يكون الوصول إليك

ممكناً.

### 4 اختر التنشيط وحدد ما إذا كنت تريد أن

يتم التحويل إلى بريدك الصوتي أو رقم

آخر أو الأرقام الأخيرة المحولة.

### 5 أدخل رقم التحويل أو حدد بحث

للاستعراض بحثاً عن رقم التحويل.

**ملاحظة:** يتم فرض رسوم على تحويل المكالمات. يرجى الاتصال بموفر الشبكة للحصول على تفاصيل.

### تلميح! لايقاف تشغيل تحويل كل

المكالمات. اختر تحويل المكالمات من قائمة

مكالمة ثم حدد الخيارات وإلغاء تنشيط

الكل.

## استخدام حظر المكالمات

### 1 اضغط على القائمة، وحدد الإعدادات ثم

المكالمة.

### 2 حدد حظر المكالمات.

### 3 اختر أحد الخيارات أو كلها:

كل المكالمات الصادرة

المكالمات الدولية الصادرة

المكالمات الدولية الصادرة

باستثناء الوطن

المكالمات الواردة

الواردة عند السفر

### 4 أدخل كلمة مرور حظر المكالمات. تحقق

من توفر الخدمة مع مشغل الشبكة.



مجموعات أو جهات اتصال معيّنة، أو من أرقام غير مسجلة (الأرقام غير المضمّنة في قائمة جهات الاتصال) أو كل الاتصالات بدون معرف متصل.

**إرسال رقمي** - اختر ما إذا كنت ترغب في أن يظهر رقمك عند اتصالك بأحدهم. (يعتمد هذا الأمر على موفر الشبكة.)

**معاودة الاتصال التلقائي** - يتيح لك هذا الخيار تفعيل معاودة الاتصال التلقائي عند فشل محاولة الاتصال.

**مذكر الدقائق** - يحدد إذا ما كنت تود إطلاق نغمة تنبيه كل دقيقة أثناء إجراء مكالمة.

**وضع رد البلوتوث** - اختر كيفية الرد على مكالمة عند استخدام سماعة البلوتوث. حدد تحرير اليمين أو رد يدوي دائماً.

**حفظ رقم جديد** - بتحديد هذا الخيار سيتم حفظ الأرقام غير الموجودة في جهات الاتصال على هاتفك عند إنهاء المكالمة.

**تكاليف المكالمة** - عرض الكلفة التي تم تطبيقها على مكالماتك الأخيرة أو كل المكالمات. هذه الخدمة تعتمد على الشبكة. وبعض مشغلي الشبكات ليس باستطاعتهم دعم هذه الخدمة.

**تلميح!** حدد أرقام الإتصال الثابت من القائمة المكالمة لتشغيل وجميع قائمة بالأرقام التي يمكن طلبها من هاتفك. ستحتاج إلى الحصول على رمز PIN2 من المشغل. عند التشغيل، وحدها الأرقام المضمّنة في قائمة أرقام الاتصال الثابتة هي التي يمكن طلبها من هاتفك.

## تغيير إعدادات المكالمات

**1** اضغط على القائمة. وحدد الإعدادات ثم المكالمة.

**2** من هنا يمكنك تحرير إعدادات الخيارات التالية:

**تحويل المكالمات** - اختر ما إذا كنت تريد تحويل كل مكالماتك.

**حظر المكالمات** - حدد المكالمات التي ترغب في حظرها.

**وضع مكالمة قيد الانتظار** - لكي يتم تنبيهك عند وجود مكالمة قيد الانتظار.

**رقم اتصال ثابت** - اختر قائمة بالأرقام التي يمكن طلبها من هاتفك.

**رسالة اعتذار** - قبل رفض مكالمة واردة. يمكنك استخدام "رسائل اعتذار" لإرسال رسالة تفسر فيها سبب عدم استلام المكالمة الواردة.

**إعدادات رفض المكالمة** - حدد إيقاف التشغيل أو التشغيل واختار رفض كل المكالمات أو المكالمات الواردة من

# الكاميرا

## التقاط صورة سريعة

1 اضغط على القائمة وحدد الكاميرا

والكاميرا.

2 عندما تركز الكاميرا على موضوع الصورة.

حدد رمز الالتقاط في وسط الشاشة

السفلي واضغط على موافق لالتقاط

صورة.

## بعد التقاط الصورة

تظهر الصورة الملتقطة على الشاشة. يظهر

اسم الصورة في اعلى الشاشة مع خمسة

رموز في الجانب السفلي.

الألبوم - عرض الصور وملفات الفيديو التي

قمت بالتقاطها في ألبومك.

إرسال - إرسال الصورة كرسالة. أو بريد

إلكتروني أو عبر بلوتوث.

جديدة - التقاط صورة أخرى على الفور.

ضبط ك - استخدام الصورة كخلفية أو

كصورة للأسماء أو في صورة بدء التشغيل أو


صورة إيقاف التشغيل.

حذف - حذف الصورة التي قمت بالتقاطها.

يظهر محدد المنظر من جديد.

# كاميرا الفيديو

## التقاط فيديو سريع

- 1 اضغط على القائمة وحدد الكاميرا واختر كاميرا الفيديو. سيظهر محدد المنظر في كاميرا الفيديو على الشاشة.
- 2 قم بتركيز الكاميرا لتسجيل المشاهد التي تريد.
- 3 حدد رمز التسجيل في وسط الشاشة السفلي واضغط على موافق لالتقاط فيديو. يظهر تسجيل في أسفل محدد المنظر. اضغط  مجدداً لإيقاف التسجيل.

## بعد الانتهاء من التقاط الفيديو

ستظهر على الشاشة صورة ثابتة تمثل الفيديو الملتقط.

بعد تسجيل مقطع فيديو. يمكنك التحقق من القائمة كما يلي:

الألبوم - عرض الصور وملفات الفيديو التي قمت بالتقاطها في ألبومك.

تشغيل - تشغيل الملف.

جديد - اضغط لالتقاط فيديو آخر على الفور.

إرسال - إرسال الفيديو كرسالة أو بريد إلكتروني أو عبر بلوتوث.

حذف - حذف الفيديو الذي قمت بالتقاطه. يظهر محدد المنظر من جديد.

# الموسيقى

## مشغل MP3

النوع - يتيح لك رؤية كل المسارات التي تم فرزها بحسب النوع.

تبديل كل الاغاني - يتيح لك تشغيل كل الاغاني في ترتيب عشوائي.

يكون مشغل الموسيقى مضمناً في الهاتف LG-C310 بحيث يمكنك تشغيل كل مسارات الموسيقى المفضلة لديك.

### ملاحظة:

- قبل استخدام مشغل الموسيقى، ستحتاج إلى نقل ملف الموسيقى إلى الهاتف.
- يعتمد مشغل الموسيقى أنواع الترميز التالية: MP3، WMA و AAC. لا يعتمد مشغل الموسيقى بالضرورة كل ميزات تنسيقات الملف وتغييراتها.

**نقل الموسيقى إلى الهاتف**  
الطريقة الأسهل لنقل الموسيقى إلى الهاتف تتم عبر بلوتوث أو كبل المزامنة. لنقل الموسيقى باستخدام بلوتوث:

1 تأكد من تشغيل بلوتوث على الجهازين ومن كونهما مرتبين بالنسبة إلى بعضهما البعض.

2 حدّد ملف الموسيقى على الجهاز الآخر واختر إرساله عبر بلوتوث.

3 عندما يتم إرسال الملف سيترتب عليك قبوله على الهاتف وذلك بتحديد نعم.

4 يجب أن يظهر الملف في كل الاغاني.

### تشغيل أغنية

1 اضغط على القائمة وحدد الموسيقى. ثم اختر مشغل MP3.

2 اختر كل الاغاني ثم حدد الأغنية التي تريد تشغيلها. تحديد OK.

3 حدد OK لإيقاف الأغنية مؤقتاً.

4 حدد ► للانتقال إلى الأغنية التالية.

5 حدد ► للانتقال إلى الأغنية السابقة.

6 حدد الرجوع لإيقاف الموسيقى والعودة إلى قائمة كل الاغاني.

للوصول إلى مشغل الموسيقى، اضغط على القائمة وحدد الموسيقى ومشغل MP3.

من هنا يمكنك الوصول إلى:

تم تشغيلها مؤخراً - عرض كل الاغاني التي قمت بتشغيلها مؤخراً.

كل الاغاني - يحتوي على كل الاغاني المتوفرة في هاتفك.

قائمة التشغيل خاصتي - تحتوي على قوائم التشغيل كلها التي أنشأتها.

الفنان - يتيح لك رؤية كل المسارات التي تم فرزها بحسب أسماء الفنانين.

الألبوم - يتيح لك رؤية كل المسارات التي تم فرزها بحسب الألبوم.

**المرئيات - حدد تأثيراً مرئياً.**

**معلومات الملف -** يمكنك عرض معلومات تتعلق بملف الموسيقى الذي تستمع إليه.  
**إضافة إلى قائمة التشغيل -** إضافة المسار الحالي إلى قائمة التشغيل.

**إرسال بواسطة -** إرسال الأغنية كرسالة أو بريد إلكتروني أو عبر بلوتوث.

**ضبط ك -** استخدم الأغنية كنغمة رنين، نغمة رسالة، بدء التشغيل أو إيقاف التشغيل.

**تلميح! لتغيير مستوى الصوت أثناء الاستماع إلى الموسيقى.** استخدم مفاتيح مستوى الصوت على الجانب الأيمن من الهاتف.

**ملاحظة:** يمكن أن تكون حقوق النشر لملفات الموسيقى محمية بموجب المعاهدات الدولية وقوانين حقوق النشر الوطنية. ولهذا، فقد يكون من الضروري الحصول على إذن أو ترخيص لإعادة إنتاج الموسيقى أو نسخها. يمنع القانون الوطني في بعض البلدان النسخ الخاص للمواد المحمية بحقوق النشر، قبل تنزيل أو نسخ الملف. يُرجى التحقق من القانون الوطني للبلد المعني والمتعلق باستخدام مثل هذه المواد.

## **استخدام خيارات أثناء تشغيل الموسيقى**

حدد الخيارات واختر من:

**تصغير -** إخفاء شاشة مشغل الموسيقى بحيث يمكنك الاستمرار في استخدام الهاتف بشكل عادي أثناء تشغيل الموسيقى.  
**إعادة -** يمكن الاستماع إلى الموسيقى إعادة.  
**عشوائي -** يشغل المسارات بترتيب عشوائي.  
**المعادل -** يمكنك عرض المعادل على الشاشة.

# راديو FM

## استخدام راديو FM

تتوفر في جهاز LG-C310 ميزة راديو FM بحيث يمكنك ضبط محطاتك المفضلة والاستماع إليها أثناء التنقل.

## الاستماع إلى الراديو

- 1 اضغط على القائمة وحدد الموسيقى. ثم اختر راديو FM.
- 2 حدد رقم القناة للمحطة التي تريد الاستماع إليها.

## البحث عن محطات

يمكنك ضبط محطات الراديو في هاتفك وذلك بالبحث عنها إما يدوياً أو تلقائياً. وسيتم حينئذٍ حفظها في أرقام قنوات معينة بحيث لن تعود بحاجة إلى إعادة ضبطها. للضبط تلقائياً:

- 1 اضغط على القائمة وحدد الموسيقى.
- 2 حدد راديو FM ثم الخيارات.
- 3 حدد بحث تلقائي. تظهر رسالة تأكيد. حدد نعم، فيتم العثور على المحطات تلقائياً وتخصيصها إلى قناة في هاتفك.

ملاحظة: يمكنك أيضاً ضبط إحدى المحطات يدوياً باستخدام [ ] و [ ] الذي يظهر في وسط الشاشة، إذا ضغطت باستمرار على [ ] و [ ]، فسيتم العثور على المحطات تلقائياً.

## تسجيل راديو

- 1 اضغط خيارات وحدد مسجل الراديو أثناء الاستماع إلى الراديو.
- 2 يتم عرض تسجيل الوقت على الهاتف. إذا كنت ترغب في إيقاف التسجيل، اضغط [إيقاف]. إذا تم تسجيل، سيتم حفظ محتويات المسجل في ملفاتي -- الأصوات < وملف MP3.

## المتصفح

### الوصول إلى ويب

يمكنك تشغيل المتصفح WAP والوصول إلى الصفحة الرئيسية للنمط الذي تم تنشيطه على إعدادات المتصفح. يمكنك أيضاً الدخول يدوياً إلى عنوان محدد مواقع المعلومات URL والوصول إلى صفحة WAP المقترنة.

**1** اضغط على القائمة وحدد المتصفح.

**2** للانتقال مباشرةً إلى صفحة المتصفح

الرئيسية، حدد الصفحة الرئيسية.

كطريقة بديلة، حدد إدخال العنوان واكتب

عنوان URL. يتبعه الاتصال.

**ملاحظة:** يتم فرض رسم إضافي عند الاتصال بهذه الخدمات وتنزيل المحتوى. اتصل بموفر الشبكة للتحقق من رسوم البيانات.

## الرسائل

### الرسائل

يتضمّن الهاتف LG-C310 وظائف متعلّقة برسائل SMS (خدمة الرسالة القصيرة)، ورسائل MMS (خدمة رسالة الوسائط المتعددة)، وكذلك رسائل خدمة الشبكة، لاستخدام هذه الوظائف، اضغط على القائمة وحدد الرسائل.

### إرسال رسالة

1 اضغط على القائمة، حدد الرسائل واختر كتابة رسالة.

2 افتح محرر رسائل جديدة، يجمع محرر الرسائل SMS و MMS في وضع بديهي واحد يسهل التبديل بينها، الضبط الافتراضي لمحرر الرسائل هو وضع SMS.

3 أدخل رسالتك باستخدام لوحة المفاتيح، راجع إدخال النص في الجانب الأيمن لمزيد من المعلومات حول كيفية إدخال نص.

4 حدد الخيارات واختر إدراج لإضافة صورة أو فيديو أو صوت أو نموذج أو رمز تعبيري أو اسم ورقم أو شريحة جديدة أو موضوع أو المزيد (بطاقة عمل/جدول/مذكرة/ مهمة/بطاقة العمل الخاصة بي).

5 اختر إرسال إلى.

6 اختر جهة اتصال من قائمة جهات الاتصال أو أدخل رقم هاتف.

7 حدد إرسال.



**تحذير:** إذا تمت إضافة صورة، صوت، فيديو، شريحة جديدة، موضوع، بطاقة عمل، جدول أو بطاقة العمل الخاصة بي إلى معدّل الرسالة، سيتم تحويلها تلقائيًا إلى وضع MMS وسيفرض رسم عليك وفقًا لذلك.

**تلميح!** يمكنك إرسال رسائل نصية إلى عدة أرقام في وقت واحد، اضغط على إرسال إلى في أسفل شاشة الرسالة، من خيارات حدد وضع الاختيار، يمكنك اختيار 20 اسم كحد أقصى

### إدخال النص

يمكنك إدخال الأحرف الأبجدية والرقمية باستخدام لوحة المفاتيح على الهاتف، فتخزين الأسماء في جهات الاتصال مثالًا، وكتابة رسالة، وإنشاء أحداث مجدولة في التقويم كلها عمليات تتطلب إدخال النص، تتوفر أساليب إدخال النص التالية على الهاتف: وضع Abc ووضع 123.

**ملاحظة:** قد تتيح بعض الحقول وضع إدخال واحد فقط (مثل رقم الهاتف في حقول جهات الاتصال).



## إدخال النص باستخدام لوحة المفاتيح

إذا رغبت في إدخال نص. مثلاً عند كتابة رسالة. تتغير لوحة المفاتيح بصورة افتراضية إلى وضع Abc. إذا كنت تدخل رقمًا أثناء إجراء مكالمة مثلاً. فستنتقل مفاتيح أرقام لوحة المفاتيح افتراضياً إلى الأرقام.

## حافظات الرسائل

اضغط على القائمة وحدد الرسائل.

إن بنية الحافظة المستخدمة في الهاتف LG-C310 تفسر نفسها بنفسها.

**كتابة رسالة** - إنشاء رسالة جديدة خاصة بك.

**صندوق الوارد** - توضع في صندوق الوارد كل الرسائل التي تتلقاها. من هنا يمكنك الرد. والارسال والكثير غير ذلك.

**عرض المحادثات** - يمكنك عرض الرسائل الخاصة بكل رقم.

**المسودات** - إذا لم يكن لديك الوقت الكافي لالانتهاء من كتابة رسالة. فيمكنك أن تحفظ هنا ما كتبت حتى الآن.

**صندوق الصادر** - عبارة عن حافظة لتخزين الرسائل مؤقتاً فيما يكون إرسالها جارياً.

**المرسلة** - توضع نسخ لكل الرسائل التي ترسلها في حافظة العناصر المرسلة.

**الرسالة الفورية** - يتيح لك إرسال رسالة فورية واستلامها في أي وقت.

**حافظاتي** - يمكنك نقل رسائل من صندوق الوارد أو المرسلة إلى حافظاتي. يمكنك أيضاً نقل هذه الرسائل الخاصة بحافظاتي إلى صندوق الرسائل الأصلي. **النماذج** - لائحة برسائل مكتوبة مسبقاً. مفيدة لإجراء رد سريع.

## إدارة الرسائل

**1** اضغط على القائمة. حدد الرسائل واختار صندوق الوارد.

**2** حدد الخيارات ثم اختر:

**الرد** - إرسال رد إلى الرسالة المحددة.

**الارسال** - إرسال الرسالة المحددة إلى شخص آخر.

**كتابة رسالة** - اكتب رسالة جديدة أو بريد الكتروني جديد بغض النظر عن الجهة التي أرسلت إليك الرسالة.

**المكالمة عبر** - الاتصال بالشخص الذي أرسل إليك الرسالة.

**حفظ رقم** - حفظ رقم الرسالة.

**حذف** - حذف الرسالة المحددة.

**نسخ ونقل** - اختر نسخ الرسالة المحددة أو نقلها إلى بطاقة SIM1 أو SIM2 أو الهاتف وخاصةً نقل الرسالة المحددة إلى حافظاتي.

**وضع الاختيار** - تحديد رسالة أو الكل.

## الرسائل

### تغيير اعدادات الرسائل النصية

اضغط على القائمة. حدد الرسائل. ثم اختر الإعدادات و الرسالة النصية. يمكنك إدخال تغييرات على:

رقم مركز الرسائل - أدخل تفاصيل مركز الرسائل.

تقرير الاستلام - اختر تلقي تأكيد باستلام رسالتك.

مدة الصلاحية - اختر فترة تخزين رسائلك في مركز الرسائل.

أنواع الرسائل - تحويل النص إلى صوت، أو فاكس، أو x.400 أو بريد إلكتروني.

تشفير الحروف - اختر طريقة ترميز الحروف. ويؤثر هذا الأمر على حجم رسالتك وبالتالي على تكاليف البيانات.

إرسال النص الطويل ك- اختر ما إذا كنت ترغب في إرسال رسالتك كرسالة نصية متعددة أو رسالة وسائط عندما تقوم بإدخال نص يتجاوز طوله طول صفحتين في حقل الرسالة.

### تغيير اعدادات رسائل الوسائط المتعددة

اضغط على القائمة. وحدد الرسائل. ثم اختر الإعدادات ورسالة وسائط متعددة. يمكنك إدخال تغييرات على:

البحث - يمكنك العثور على الرسائل عبر الكلمة أساسية أو المرسل.

عامل التصفية - يعرض الرسائل وفقاً لأنواع الرسالة التي ترغب بها.

حذف الكل - حذف الرسائل كلها.

معلومات الرسالة - يمكنك التحقق من معلومات الرسالة وفقاً للنوع والموضوع ومصدر الإرسال وتاريخ الإرسال.

إذا شاهدت الرسالة لا توجد مساحة لرسالة SIM فهذا يعني أنه عليك حذف بعض الرسائل من صندوق الوارد لتوفير مساحة.

إذا شاهدت الرسالة لا توجد مساحة كافية للرسائل فيمكنك حذف إما الرسائل أو الملفات المحفوظة لتوفير مساحة.

**تلميح!** أثناء عرض الرسالة المستلمة.

اضغط على الخيارات وحدد رد نموذج. ويعتبر هذا الأمر مفيداً إذا رغبت في رد الرسالة خلال اجتماع.

**تلميح!** عند رؤية الرسالة. اضغط على

الخيارات وحدد استخراج. يمكنك استخراج معلومات مثل رقم، عنوان بريد إلكتروني أو عنوان ويب من الرسالة المحددة.

**وضع الاسترداد** - اختر تنزيل رسائل الوسائط المتعددة تلقائياً أو يدوياً وهذا يتوقف على ما إذا كنت موجوداً في المنزل أو متجولاً.

**تقرير الاستلام** - اختر طلب تقرير الاستلام أو السماح به.

**تقرير الرد** - اختر طلب تقرير الرد أو السماح بها.

**الأولوية** - اختر مستوى أولوية رسالة الوسائط المتعددة.

**مدة الصلاحية** - اختر فترة حفظ رسالتك في مركز الرسائل.

**مدة الشريحة** - اختيار مدة ظهور الشرائح على الشاشة.

**وضع الإنشاء** - يتيح لك تحديد نوع المحتويات المعتمدة من قبل MMS.

**وقت الاستلام** - يقوم بتكوين وقت تسليم الرسالة إلى المستلم. سيقوم مركز رسائل الوسائط المتعددة بتسليم الرسالة بعد مرور وقت التسليم.

**مركز رسائل الوسائط المتعددة** - يتيح لك تكوين معلومات الشبكة مثل مركز خدمة الوسائط المتعددة ونمط انترنت لإرسال رسالة وسائط متعددة.

## **تغيير الضوابط الأخرى**

**اضغط على القائمة**. حدد الرسائل واختر اعدادات ثم:

**الرسالة النصية** - يمكنك تكوين خيارات تتعلق بالرسالة النصية.

**رسالة الوسائط المتعددة** - يمكنك تكوين خيارات تتعلق برسالة وسائط متعددة.

**البريد الصوتي** - إضافة خدمة بريد صوتي جديدة. اتصل بمشغل الشبكة للحصول على مزيد من المعلومات حول الخدمة التي يقدمها.

**رسالة الخدمة** - اختر استلام أو حظر رسائل الخدمة. كما يمكنك تعيين حماية الرسالة وذلك بإنشاء قوائم بالمرسلين الموثوق بهم وغير الموثوق بهم.

**حفظ الرسالة المرسله** - يمكنك اختيار حفظ الرسالة التي أرسلتها.

**عداد الرسائل** - يمكنك التحقق من عدد الرسائل التي أرسلتها خلال فترة معينة.

**خدمة المعلومات** - اختر حالة الاستلام والقنوات واللغة لرسائل المعلومات.

## البريد الإلكتروني

### إرسال بريد إلكتروني باستخدام

#### حسابك الجديد

لإرسال/استلام رسالة بريد إلكتروني. عليك إعداد حساب بريد إلكتروني.

#### 1 اضغط على القائمة. حدد البريد

الإلكتروني واختر الحساب الذي تريد استخدامه.

#### 2 اختر كتابة بريد إلكتروني يفتح بريد

الالكتروني جديد.

#### 3 اكتب موضوعاً في الحقل المخصص ثم

اضغط على موافق.

#### 4 أدخل رسالتك باستخدام لوحة المفاتيح.

### استرداد بريدك الإلكتروني

#### 1 اضغط على القائمة وحدد البريد

الإلكتروني.

#### 2 حدد الحساب الذي تريد استخدامه.

#### 3 حدد صندوق الوارد.

#### 4 اختر التحديث فيتصل هاتفك بحساب

البريد الإلكتروني ويسترد رسائلك الجديدة.

### حافظات الرسائل

اضغط على القائمة وحدد البريد الإلكتروني.

يجب أن تفسر بنية الحافظة المستخدمة في الهاتف LG-C310 نفسها بنفسها.

#### كتابة بريد إلكتروني - إنشاء رسالة جديدة

خاصة بك.

#### صندوق الوارد - توضع كل رسائل البريد

الإلكتروني التي تستلمها في صندوق الوارد.

من هنا يمكنك الرد. الأرسال والكثير غير ذلك.

#### المسودات - إذا لم يكن لديك الوقت الكافي

للانتهاء من كتابة رسالة بريد إلكتروني.

فيمكنك أن تحفظ هنا ما كتبته حتى الآن.

#### المرسلة - توضع نسخ لكل رسائل البريد

الإلكتروني التي ترسلها في حافظة العناصر

المرسلة.

#### صندوق الصادر - عبارة عن حافظة تخزين

مؤقت لرسائل البريد الإلكتروني فيما يكون

إرسالها جارٍ أو يتم تخزين الرسائل التي

فشلت عملية إرسالها هنا.

#### المهملات - توضع كل رسائل البريد

الالكتروني التي تزيلها في المهملات.

## تغيير اعدادات البريد الإلكتروني

1 اضغط على القائمة. واختر البريد الإلكتروني.

2 حدد الحساب الذي تريد استخدامه.

3 حدد ضبط البريد الإلكتروني من خيارات ويمكنك بعد ذلك تكييف الاعدادات التالية:

حسابات البريد الإلكتروني - يمكنك إعداد حساب بريد إلكتروني.

السماح بالرد على البريد الإلكتروني - اختر السماح بإرسال رسائل "تأكيد القراءة".

طلب الرد على البريد الإلكتروني - اختر ما إذا كان يجب طلب رسائل تأكيد القراءة.

الفواصل الزمني للاسترداد - اختر مدى إعادة قيام LG-C310 بالتحقق من وجود رسائل بريد إلكتروني جديدة.

إظهار عدد الرسائل - اختر عدد رسائل البريد الإلكتروني التي تود إظهارها في آن واحد.

تضمين الرسالة في الارسال والرد - اختر تضمين الرسالة الأصلية في ردك أو عدم تضمينها.

تضمين مرفقات - اختر تضمين المرفق الأصلي أو عدم تضمينه.

## استرداد تلقائي أثناء التجوال -

اختر ما إذا كنت ترغب في استرداد رسائلك تلقائياً أثناء تواجذك في الخارج أو عدم استردادها.

إعلام بورود بريد إلكتروني جديد - اختر ما إذا كان يجب أو لا يجب تنبيهك عند وصول رسائل بريد إلكتروني جديدة.

التوقيع - قم بإنشاء توقيع على البريد الإلكتروني وشغل هذه الميزة.

الأولوية - اختر مستوى الأولوية لرسائل البريد الإلكتروني.

الحجم الأقصى للبريد الإلكتروني - اختر حجم رسائل البريد الإلكتروني التي تود استردادها في آن واحد.

حجم البريد المرسل - اختر حجم رسائل البريد الإلكتروني التي تود إرسالها في آن واحد.

## دليل الهاتف

### البحث عن جهة اتصال

- 1 اضغط على القائمة وحدد دليل الهاتف.
- 2 باستخدام لوحة المفاتيح. أدخل الحرف الأول من اسم جهة الاتصال التي تريد الاتصال بها.
- 3 للتمرير عبر جهات الاتصال وأرقامها المختلفة. استخدم مفاتيح التنقل. أو. باستخدام الطريقة الأسرع بعض الشيء...

- 1 أدخل الرقم الذي ترغب في البحث عنه على الشاشة الرئيسية وحدد خيارات.
- 2 اختر البحث عن جهات اتصال في قائمة الخيارات.

### إضافة جهة اتصال

- 1 اضغط على القائمة وحدد دليل الهاتف.
  - 2 اضغط على الخيار وحدد إضافة جديد.
  - 3 اختر ما إذا كنت تريد تخزين جهة الاتصال الجديدة على هاتفك أو بطاقة SIM.
  - 4 أدخل المعلومات التي تريدها في الحقول المتوفرة وحدد تم.
- الرسالة - إرسال رسالة إلى جهة الاتصال.  
المكالمة عبر - إجراء مكالمة صوتية مباشرة لجهة اتصال تختارها.  
تحرير - تغيير أي من تفاصيل خاصة بجهة الاتصال.  
حذف - حذف جهة الاتصال. حدد نعم إذا كنت متأكدًا.  
إضافة جديد - إضافة جهة اتصال.

**موقع التخزين - اختر ما إذا كنت تريد إجراء عملية النقل أو النسخ إلى الهاتف أو بطاقة SIM (يتوقف هذا على الموقع الأصلي حيث قمت بحفظ جهة الاتصال).**

**إرسال جهة الاتصال - إرسال تفاصيل تتعلق بجهة الاتصال إلى شخص آخر كبطاقة عمل. اختر الإرسال كرسالة نصية أو رسالة MMS أو بريد إلكتروني أو عبر بلوتوث.**

**وضع الاختيار - اختر ما إذا كنت ترغب في تحديد أو إلغاء تحديد جهة اتصال.**

**ترتيب بحسب - فرز جهة اتصال بحسب ABC ↑ أو ABC ↓.**

**الاتصالات السريعة - يمكنك تعيين جهة اتصال نطلبها بشكل متكرر إلى رقم اتصال سريع.**

## إنشاء مجموعة

**1 اضغط على القائمة وحدد دليل الهاتف.**

**2 حدد المجموعات واختر الخيارات.**

**3 حدد إضافة جديد.**

**4 أدخل اسماً للمجموعة الجديدة.**

**5 اضغط على تم.**

**ملاحظة: إذا قمت بحذف مجموعة، فلن تفقد جهات الاتصال التي كان قد تم تعيينها إلى تلك المجموعة، بل ستبقى موجودة في جهات الاتصال لديك.**

**تلميح! يمكنك تحرير مجموعة موجودة عبر تحديد خيار تحديد الخيارات. اختر تعيين الأعضاء إلى المجموعة من جهات الاتصال المتوفرة لديك. وحدد تحرير المجموعة أو حذف المجموعة.**

## تغيير الإعدادات جهات الاتصال

**1 اضغط على القائمة وحدد دليل الهاتف.**

**2 حدد الخيار واختر الإعدادات. من هنا يمكنك تنظيم الإعدادات التالية:**

**عرض الاسم - كما يمكنك أن تختار إظهار الاسم الأول أولاً أو الاسم الأخير أولاً أو الاسم الأخير الاسم الأول.**

**العرض والتخزين الرئيسي - اختر ما إذا كنت تريد تخزين جهات الاتصال على بطاقة SIM1 أو SIM2 أو الهاتف. واختر أيضاً ما إذا كنت ترغب في عرض جهات الاتصال المحفوظة في الهاتف وSIM. أو في الهاتف فقط أو SIM1 فقط أو SIM2 فقط.**

## دليل الهاتف

**نسخ الكل** - نسخ جهات الاتصال من بطاقة SIM1 أو SIM2 إلى الهاتف أو من الهاتف إلى بطاقة SIM.

**نقل الكل** - يعمل هذا الأمر بالطريقة نفسها التي يعمل فيها نسخ الكل. غير أن جهة الاتصال ستُحفظ فقط في الموقع الذي تم نقلها إليه. إذا نقلت جهة اتصال من بطاقة SIM إلى الهاتف فسيتم حذفها من ذاكرة بطاقة SIM.

**تصدير جهات الاتصال** - يمكنك حفظ بيانات دليل الهاتف كافة الموجودة في الهاتف في بطاقة ذاكرة خارجية على شكل vcard.

**استيراد جهات الاتصال** - يمكنك استعادة بيانات دليل الهاتف كافة الموجودة في بطاقة ذاكرة خارجية إلى ذاكرة الهاتف على شكل vcard.

**إرسال كل جهات الاتصال عبر بلوتوث** - يرسل هذا الأمر معلومات كافة جهات الاتصال إلى هاتف آخر عبر بلوتوث.



## المزيد

### ضبط المنبه

1 اضغط على القائمة وحدد المزيد. ثم اختر

ساعة المنبه.

2 اضغط على الخيارات وحدد منبه جديد.

3 قم بالتمرير إلى الأسفل وأدخل الوقت الذي تريد أن يبدأ فيه المنبه بالرنين.

4 اختر نوع التكرار للإشارة إلى ما إذا كنت

ترغب في أن يرن المنبه من غير تكرار

أو يومياً أو الاثنين-الجمعة أو الاثنين-

السبت أو حدد الأيام.

5 قم بالتمرير إلى الأسفل وحدد خيارات

المنبه إلى الصوت دائماً، أو الاهتزاز

دائماً، أو الصوت والاهتزاز دائماً أو كما

في النمط.

6 قم بالتمرير إلى الأسفل لاختيار نغمة

المنبه. اضغط على  واختار صوتاً من

الأصوات.

7 قم بالتمرير إلى الأسفل واختار اسماً

للمنبه أو احتفظ بالاسم المقترح.

8 يمكنك أخيراً تعيين فترة انتظار من 5، 10،

20، 30 دقيقة، 1 ساعة أو إيقاف تشغيل.

9 حدد تم.

### إضافة حدث إلى التقويم

1 اضغط على القائمة وحدد المزيد

والمنسّق. ثم اختر التقويم.

2 حدّد التاريخ الذي تريد إضافة حدث إليه.

يمكنك اختيار تاريخ سواء بالتمرير إليه

باستخدام مفاتيح التنقل أو بتحديد

الخيارات والذهاب إلى تاريخ لإدخال تاريخ.

3 حدد الخيارات ثم جدول جديد وقم

بالتمرير للأسفل لإدخال الوقت الذي تريد

أن يبدأ عنده الحدث. قم بالتمرير إلى

الأسفل وأدخل وقت انتهاء الحدث.

4 أدخل موضوع للحدث. استخدم لوحة

المفاتيح لكتابة الأحرف والأرقام.

5 قم بالتمرير إلى الأسفل مرة أخرى واختر

ما إذا كنت ترغب في تعيين تنبيه للحدث.

قم بالتمرير يساراً أو يميناً لمشاهدة

الخيارات المتوفرة. يمكنك تعيين المنبه

بحيث يرنّ في الوقت الذي يبدأ فيه الحدث

أو في فترة وقت محددة قبل بدء الحدث

بههدف تذكيرك باقتراب الحدث.

6 مرر للأسفل مرة أخرى لتحديد ما إذا كان

الحدث يظهر بشكل غير مكرّر أو مكرّر

يومياً أو أسبوعياً أو شهرياً أو سنوياً.

إذا كان الحدث عبارة عن حدث متكرر،

فيمكنك أيضاً التمرير إلى الأسفل لإدخال

تاريخ انتهاء الصلاحية لتحديد تاريخ

تتوقف فيه الأحداث بشكل تام.

7 حدد تم فيتم حفظ الحدث في التقويم.

يضع مؤشر مربع الشكل علامة على الأيام

التي تم حفظ أحداث فيها.

### إضافة مهمة إلى قائمة المهام

1 اضغط على القائمة وحدد المزيد ثم

اختر المُنسّق.

2 حدد المهام ثم مهمة جديدة.

3 عَيّن تاريخ استحقاق المهمة. وأضف

الملاحظات. واختر المنبّه وحدد مستوى للأولوية: عالية أو متوسطة أو منخفضة.

4 احفظ المهمة في قائمة المهام

بتحديد تم.

تلميح! يمكنك تحرير عنصر وذلك بتحديد.

بالضغط على الخيارات وتحرير. أكد على التعديلات التي قمت بها وذلك بتحديد تم.

### إضافة مذكرة

1 اضغط على القائمة وحدد المزيد

والمُنسّق. ثم المذكرة.

2 حدد مذكرة جديدة واكتب المذكرة.

3 حدد حفظ.

4 تظهر مذكرتك على الشاشة.

تلميح! يمكنك إقفال المذكرة. اضغط على

الخيار وحدد إقفال بحيث تحمي المذكرة السريّة خصوصيتك.

### محدد التاريخ

محدد التاريخ هو أداة سهلة تساعدك على

احتساب تاريخ الأيام القليلة المقبلة.

### مسجّل الصوت

استخدام مسجّل الصوت

استخدم مسجّل الصوت لتسجيل مذكرات

الصوت أو أصوات أخرى.

تسجيل مذكرة صوتية

1 اضغط على القائمة وحدد المزيد. ثم اختر

مسجّل الصوت.

2 اضغط على موافق لبدء التسجيل.

3 اختر إيقاف لإنهاء التسجيل.

4 اضغط على خيارات وحدد تشغيل

للاستماع إلى التسجيل.

ملاحظة: يمكنك الاستماع إلى كل التسجيلات الصوتية التي قمت بحفظها بتحديد الخيارات والذهاب إلى الألبوم.

### إرسال تسجيل صوتي

1 حين تنتهي من التسجيل. حدد الخيارات.

2 حدد إرسال واختر من MMS أو بريد

إلكتروني أو بلوتوث. إذا اخترت MMS أو

بريد إلكتروني. فستتم إضافة التسجيل

إلى الرسالة ويمكنك كتابة الرسالة

وإرسالها بشكل عادي. إذا اخترت بلوتوث.

فستتم مطالبتك بتشغيل بلوتوث.

### استخدام الحاسبة


1 اضغط على القائمة وحدد المزيد. ثم اختر

الحاسبة.

2 اضغط على المفاتيح الرقمية لإدخال الأرقام.

3 بالنسبة إلى الحسابات البسيطة، حدد الوظيفة التي تحتاج إليها (+, -, \*, ÷). باستخدام مفاتيح التنقل يليها =.

4 بالنسبة إلى الحسابات الأكثر تعقيداً، حدد الخيارات لاختيار أمر.

5 حدد  لمسح الشاشة وبدء عملية حسابية جديدة.

## استخدام ساعة الإيقاف

1 اضغط على القائمة وحدد المزيد، ثم اختر ساعة الإيقاف.

2 حدد بدء لبدء تشغيل المؤقت.

3 اختر الدورة إذا أردت تسجيل وقت الدورة. يمكن حفظ لغاية 99 وقت دورة كحد أقصى.

4 حدد إيقاف لإيقاف تشغيل المؤقت.

5 اختر استئناف لإعادة تشغيل ساعة الإيقاف في الوقت الذي توقفت فيه أو حدد إعادة ضبط لإعادة ضبط التوقيت من جديد.

## تحويل وحدة

1 اضغط على القائمة وحدد المزيد، ثم اختر محول الوحدات.

2 اختر ما إذا كنت ترغب في تحويل وحدات العملة أو المساحة أو الطول أو الوزن أو درجة الحرارة أو مستوى الصوت أو السرعة.

3 قم بالتمرير إلى اليسار وإلى اليمين لتحديد وحدة. ثم قم بالتمرير إلى الأسفل وأدخل كمية الوحدة.

4 قم بالتمرير إلى الأسفل إلى خانة تحويل الوحدة واختر قيام الوحدة التي تريد التحويل إليها. يظهر التحويل تلقائياً في السطر أدناه.

ملاحظة: لتحويل العملة، خُتاج إلى تعيين المعدل وفقاً لمعدل الصرف الحالي أولاً.

## إضافة مدينة إلى ساعتك العالمية

1 اضغط على القائمة وحدد المزيد، ثم اختر الساعة العالمية.

2 لمعرفة وقت مدينة معينة، اضغط على الخيارات وحدد مدينة جديدة.

3 انقل مدينة بواسطة مفتاح التنقل وحدد مدينةً على الخريطة.

حدد الخيارات واختر عرض قائمة المدن. ثم يمكنك أيضاً تحديد القائمة أو إدخال الحرف الأول من اسم المدينة في حقل البحث.

4 اضغط فوق تحديد.

## الاعدادات

### تغيير اوضاع

بإدراج ذاكرة خارجية في الهاتف. فيمكنك أيضاً أن تحدد اعدادات التخزين الاساسي ثم اختيار الموقع الافتراضي الذي تفضل حفظ العناصر فيه.

**معلومات الهاتف** - عرض معلومات LG-C310 التقنية.

1 اضغط على القائمة وحدد الاعدادات.

2 حدد اوضاع ثم اختر النمط الذي تريد تعديله.

3 حدد الخيارات واختر تخصيص.

4 يمكنك تغيير كل خيارات نغمات الرنين. ومستوى الصوت. والتنبيه من هنا.

### تغيير التاريخ والوقت

1 اضغط على القائمة وحدد الاعدادات.

2 حدد الهاتف واختر التاريخ والوقت واختر من القائمة أدناه:

اعدادات التاريخ والوقت - حدد تشغيل التحديث التلقائي. فيقوم الهاتف بتحديث التاريخ والوقت تلقائياً.

تنسيق التاريخ - يمكنك إدخال التاريخ

الحالي. يمكنك تعيين تنسيق التاريخ (اليوم/الشهر/السنة، الشهر/اليوم/السنة، السنة/الشهر/اليوم).

فاصل التاريخ - يمكنك إدخال التاريخ

الحالي. يمكنك تعيين فاصل التاريخ (اليوم/الشهر/السنة، اليوم، الشهر، السنة، اليوم-الشهر-السنة).

تنسيق الوقت - يمكنك تعيين تنسيق

التاريخ إلى 12 ساعة أو 24 ساعة.

### استخدام وضع الرحلات الجوية

لتشغيل وضع الرحلات الجوية. اضغط على القائمة ثم حدد الاعدادات واوضاع. حدد وضع الرحلات الجوية للتنشيط. لن يسمح لك وضع الرحلات الجوية بإجراء مكالمات أو الاتصال بالإنترنت أو إرسال الرسائل.

### تغيير اعدادات الهاتف

1 اضغط على القائمة وحدد الاعدادات.

2 حدد اعدادات الهاتف واختر من القائمة أدناه.

توفير الطاقة - اختر تشغيل أو إيقاف

تشغيل اعدادات توفير الطاقة في الشركة المصنعة.

اللغات - غير لغة الهاتف أو لغة الكتابة في LG-C310.

قفل المفاتيح التلقائي - قم بإقفال لوحة

المفاتيح تلقائياً في وضع الانتظار.

اعدادات التخزين الأساسي - إذا قمت

## تغيير اعدادات الحماية

قم بتغيير اعدادات الحماية لحماية الهاتف LG-C310 والمعلومات الهامة التي يحتوي عليها.

**1** اضغط على القائمة وحدد الاعدادات. ثم اختر الهاتف.

**2** حدد الحماية واختر من القائمة أدناه:

**طلب رمز PIN** - اختر رمز PIN الذي يجب إدخاله عند تشغيل هاتفك.

**إقفال الهاتف** - اختر رمز حماية لإقفال هاتفك مطلقاً أو عند بدء تشغيل الهاتف أو عند تغيير بطاقة SIM أو على الفور.

**إقفال التطبيق** - يمكنك إقفال المحتويات التي تريد إخفاءها. دليل الهاتف. الرسائل. البريد الإلكتروني. إلخ.)

**تغيير الرموز** - قم بتغيير رمز PIN (سيظهر عنصر القائمة هذا إذا تم تعيين طلب رمز PIN إلى تشغيل). رمز PIN2 ورمز الحماية.

## ملاحظة: رمز الحماية

يحمي رمز الحماية الهاتف من الاستخدام غير المصرح به. تم تعيين رمز الحماية الافتراضي إلى "0000" ورمز الحماية مطلوب لحذف كافة إخطالات الهاتف وتنشيط قائمة اعادة ضبط الهاتف. كما أن رمز الحماية مطلوب لتفعيل وظائف قفل الهاتف أو إيقافها لمنع الاستخدام غير المصرح به للهاتف. ويمكن تحرير الضبط الافتراضي لرمز الحماية من الحماية < تغيير الرموز.

## معلومات الذاكرة

تتوفر في LG-C310 ثلاثة أنواع من الذاكرة: الهاتف. وبطاقة SIM وبطاقة ذاكرة خارجية (قد تحتاج إلى شراء بطاقة الذاكرة بشكل منفصل).

ويمكنك استخدام معلومات الذاكرة لتحديد كمية الذاكرة المستخدمة وكمية المساحة المتوفرة.

اضغط على القائمة وحدد الاعدادات والهاتف ثم اختر معلومات الذاكرة وستشاهد حينئذ حالة الذاكرات الحالية في الهاتف LG-C310.

### اعادة ضبط الهاتف

استخدم اعادة ضبط الهاتف في الهاتف في قائمة لإعادة ضبط كل الاعدادات وفق تعريفاتها المحددة من قبل الشركة المصنعة. ومن أجل تنشيط هذه الوظيفة تحتاج إلى رمز الحماية.

### تغيير اعدادات الشاشة

1 اضغط على القائمة وحدد الاعدادات.

2 حدد الشاشة واختر من ضمن:

الشاشة الرئيسية - اضبط الخلفية وعناصر الشاشة.

سمة القائمة - قم بتغيير مظهر الشاشة بأكمله بشكل سريع.

نمط القائمة - قم بتغيير عرض القائمة من نمط القائمة أو نمط الشبكة.

الخط - قم بضبط حجم الخط.

الإضاءة الخلفية - اختر الفترة التي تبقى خلالها الإضاءة الخلفية قيد التشغيل. يمكنك أيضاً استخدام مفاتيح التنقل لضبط سطوع الشاشة الرئيسية.

**تلميح!** بقدر ما تطول الفترة التي تكون خلالها الإضاءة الخلفية قيد التشغيل. بقدر ما يتم استخدام طاقة البطارية وقد تحتاج إلى شحن هاتفك بشكل متكرر أكثر.

رسالة الترحيب - بعد تحديد تشغيل. يمكنك كتابة رسالة ترحيب. متى تقوم بتشغيل الهاتف تظهر الرسالة على الشاشة. الشاشات الأخرى - حدد سمة شاشة بدء تشغيل و إيقاف التشغيل.

### خدمات الشبكة الاجتماعية (SNS)

إن هاتف LG-C310 مزود بـ SNS للاستمتاع بالشبكة الاجتماعية وإدارتها.

**ملاحظة:** قد تفرض تكاليف إضافية عند الاتصال بخدمات على إنترنت واستخدامها. للحصول على تفاصيل تتعلق بالرسوم المفروض على البيانات، اتصل بموفر الشبكة.

### تحديث برنامج الهاتف

تحديث برنامج الهاتف المحمول LG من إنترنت

للحصول على مزيد من المعلومات حول استخدام هذه الوظيفة. يرجى زيارة الموقع [http:// update.lgmobile.com](http://update.lgmobile.com) or <http://www.lg.com/common/index.jsp> select country

تسمح لك هذه الميزة بتحديث أحدث إصدار لبرامج الهاتف الثابتة بسهولة من إنترنت من دون الحاجة إلى زيارة مركز الخدمة.

بما أن تحديث برنامج الهاتف المحمول الثابت يتطلب انتباه المستخدم الكامل لمدة عملية التحديث. يرجى التحقق من كل التعليمات والملاحظات التي تظهر في كل خطوة قبل المتابعة. تجدر الملاحظة إلى أن إزالة كبل بيانات USB أو البطارية أثناء الترقية قد يتسبب بالحاق ضرر بالغ بهاتفك المحمول.

## إمكانية التوصيل

### تغيير اعدادات إمكانية الاتصال

تم مسبقاً إعداد اعدادات إمكانية الاتصال بواسطة مشغل الشبكة. بحيث يمكنك أن تتمتع باستخدام هاتفك الجديد فوراً. إذا أردت تغيير أي ضابط من الاعدادات استخدم هذه القائمة. اضغط على القائمة وحدد الاعدادات ومن ثم اختر التوصيل. خيارانك هي:

بلوتوث - قم بإعداد LG-C310 استخدام بلوتوث. يمكنك تكيف إمكانية رؤيتك بالنسبة إلى الأجهزة الأخرى أو البحث عبر الأجهزة التي اقترن هاتفك بها.

وضع اتصال USB - يمكنك تحديد وضع اتصال USB في الهاتف لاستخدامات متعددة.

### تغيير اعدادات بلوتوث

1 اضغط على القائمة وحدد الاعدادات والتوصيل.

2 اختر بلوتوث ثم الاعدادات. أدخل تغييراتك على:

إمكانية رؤية جهازي - قم بتعيين الهاتف إلى مرئي أو مرئي لـ دقيقة واحدة بحيث تستطيع الأجهزة الأخرى كشف هاتفك خلال بحثها عن جهاز بلوتوث. إذا ما قمت بتحديد مخفي. فلن تتمكن الأجهزة الأخرى من كشف هاتفك خلال بحثها عن جهاز بلوتوث.

اسم جهازي - يمكنك تسمية أو إعادة تسمية هاتفك كما تريده أن يظهر على الأجهزة الأخرى. سيظهر اسم هاتفك على الأجهزة الأخرى فقط عندما تكون إمكانية رؤية جهازي معينة إلى مرئي.

الخدمات المعتمدة - يمكنك عرض قائمة الأجهزة مثل سماعات الرأس ومجموعات أدوات الأجهزة التي تغني عن استخدام اليدين والتي يعتمدها هذا الهاتف الممكن لاستخدام بلوتوث. عنواني - تحقق من عنوان بلوتوث هنا.

### ملاحظة:

1. قم بإقران LG-C310 مع أي جهاز يدعم إصدار BT أحدث من 2.0، ولن تتم مطابقتك برمز مرور إذ يتم توليده تلقائياً.
2. قم بإقران LG-C310 مع أي جهاز يدعم إصدارات BT أقدم شأن الإصدار 1.2 وغيره. وستتم مطابقتك برمز مرور.

**ملاحظة:** لتعزيز الحماية، ننصح بتعيين إمكانية الرؤية إلى مخفي، ما إن يتم التكوين أو الإقران بجهاز. للاتصالات الواردة، بغض النظر عن ما إذا تم إقران الجهاز أم لا مع هاتفك، يمكنك اختيار موافق أو رفض الاتصال.

### الاقتران بجهاز بلوتوث آخر

عند إجراء اقتران لهاتف LG-C310 بجهاز آخر، يمكنك إعداد اتصال محمي برمز مرور. وهذا يعني أن الاقتران أصبح آمناً أكثر.

1 تأكد من كون بلوتوث في وضع التشغيل ومن كونه مرئياً. يمكنك تغيير إمكانية الرؤية في قائمة اعدادات بلوتوث من خلال تحديد إمكانية رؤية جهازي ثم مرئي.

2 من بلوتوث. اختر تنشيط بلوتوث وحدد البحث عن جهاز جديد.

3 سيبحث الهاتف LG-C310 عن الأجهزة. عند اكتمال عملية البحث، يظهر الخيار إضافة وتحديث على الشاشة.

4 اختر الجهاز الذي تريد إجراء الاقتران به. وحدد إضافة وأدخل رمز المرور ثم اختر موافق.

5 يتصل هاتفك حينئذٍ بالجهاز الآخر. حيث عليك إدخال رمز المرور نفسه.

6 لقد أصبح اتصال بلوتوث المحمي برمز مرور آمناً الآن.

### استخدام سماعة البلوتوث

1 تحقق من كون بلوتوث في وضع تنشيط بلوتوث ومن كونه مرئياً.

2 اتبع الإرشادات التي تصحب سماعة الرأس لوضعها في وضع الاقتران وإجراء اقتران للأجهزة.

3 سيتصل جهاز LG-C310 تلقائياً بسماعة البلوتوث والتبديل إلى وضع سماعة الرأس.

### إرسال الملفات واستلامها باستخدام بلوتوث

يعتبر بلوتوث طريقة جيدة لإرسال الملفات وتلقيها إذ لا حاجة إلى أسلاك ويكون الاتصال سريعاً وسهلاً. كما يمكنك الاتصال بسماعات البلوتوث لإجراء مكالمات وتلقيها. قبل أن تتمكن من بدء المشاركة في الملفات باستخدام بلوتوث، ستحتاج إلى إجراء اقتران لهاتفك بجهاز بلوتوث آخر. للحصول على



معلومات حول اقتران الأجهزة. انظر الاقتران بجهاز بلوتوث آخر.

### لتشغيل بلوتوث:

- 1 اضغط على القائمة وحدد الاعدادات. اختر التوصيل ثم حدد بلوتوث.
- 2 حدد تنشيط بلوتوث.
- 3 حدد إلغاء تنشيط بلوتوث لإيقاف تشغيل بلوتوث.

### لإرسال ملف:

- 1 افتح الملف الذي تريد إرساله. وهو عادةً عبارة عن صورة أو فيديو أو ملف موسيقى.
- 2 حدد الخيارات واختر إرسال بواسطة بلوتوث.
- 3 حدد نعم لتشغيل بلوتوث إذا لم يكن قد تم تنشيطه بعد.
- 4 سيبحث الهاتف LG-C310 تلقائياً عن أجهزة بلوتوث أخرى تم تمكينها ضمن النطاق.

- 5 اختر الجهاز الذي تريد إرسال الملف إليه وحدد موافق.

### لاستلام ملف:

- 1 لاستلام ملفات. يجب أن يكون بلوتوث في وضع تنشيط بلوتوث وومرئياً.
- 2 تظهر رسالة تطالبك بقبول الملف من المرسل. حدد نعم لاستلام الملف.

**تلميح!** راقب شريط التنفيذ لكي تتأكد من إرسال الملف.

**تلميح!** إن علامة الكلمة بلوتوث® وشعاراتها ملوكة من قبل بلوتوث SIG, Inc. وأي استخدام لمثل هذه العلامات من قبل LG Electronics يتم بموجب ترخيص. أما العلامات التجارية والأسماء التجارية الأخرى فهي تعود إلى مالكيها.

### مزامنة الهاتف مع الكمبيوتر

يمكنك مزامنة الهاتف

مع الكمبيوتر للتأكد من

تطابق كل التفاصيل والتواريخ الهامة. ولكن أيضاً لإجراء نسخة احتياطية تساعدك على الاطمئنان.

### إجراء نسخ احتياطي لمعلومات

#### الهاتف واستعادتها

- 1 توصيل كبل USB بهاتفك والكمبيوتر.
- 2 حدد PC suite من قائمة الإطارات المنبثقة في الهاتف.
- 3 انقر فوق الرمز نسخ احتياطي وحدد النسخ الاحتياطي أو الاستعادة.
- 4 حدد المحتويات التي ترغب في إجراء نسخ احتياطي لها أو استعادتها. حدّد

## الاعدادات

الموقع حيث تريد إجراء نسخ احتياطي للمعلومات أو استعادة المعلومات منه. انقر فوق موافق.

**5** سيتم إجراء نسخ احتياطي للمعلومات.

### عرض ملفات الهاتف على الكمبيوتر

**1** توصيل كبل USB بهاتفك والكمبيوتر.

**2** حدد **PC suite** من قائمة الإطارات

المنبثقة في الهاتف.

**3** بعد البحث عن الهاتف سيتم الاتصال تلقائياً.

**تلميح!** يساعدك عرض محتويات الهاتف على الكمبيوتر على ترتيب الملفات، وتنظيم المستندات وإزالة المحتويات التي لم تعد بحاجة إليها.

## الملحقات

هناك مجموعة متنوعة من الملحقات المتوفرة لهاتفك المحمول. تجدها بالتفصيل أدناه.

الشاحن



البطارية



كبل البيانات



دليل المستخدم



مضغوط



سماعة رأس  
استيريو



### ملاحظة

- استخدم دائماً ملحقات LG الأصلية.
- فقد يؤدي عدم القيام بذلك إلى إبطال الضمان.
- قد تختلف الملحقات من منطقة لأخرى. يرجى مراجعة شركة أو وكيل الخدمة الإقليمي لمزيد من الاستفسارات.

# بيانات تقنية

درجات الحرارة المحيطة

الحد الأقصى: +55 درجة مئوية (تفريغ). +45 درجة مئوية (شحن)

الحد الأدنى: -10 درجات مئوية

## Declaration of Conformity



### Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

### Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

LG-C310

Trade Name

LG

# CE 0168

### Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1

EN 300 328 V 1.7.1

EN 60950-1 : 2001

EN 50360:2001/EN62209-1:2006

EN 301 511 V9.0.2

### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD , United Kingdom

Notified Body Identification Number : 0168

### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Doo Haeng Lee / Director

31.08.2010

LG Electronics Inc. – EU Representative  
Veluwezoom 15, 1327 AE Almere, The Netherlands

Signature of representative

## استكشاف الأخطاء وإصلاحها

يسرد هذا الفصل بعض المشاكل التي قد تصادفها أثناء استخدام الهاتف. بعض المشاكل تتطلب منك الاتصال بموفر الخدمة. ولكن معظمها يكون سهلاً ويمكنك تصحيحه بنفسك.

| الرسالة               | الأسباب المحتملة  | الحلول المحتملة   |
|-----------------------|---|---|
| خطأ SIM               | لا يوجد بطاقة SIM في الهاتف أو ربما قمت بإدخالها بشكل غير صحيح.                                   | تأكد من إدخال بطاقة SIM بالطريقة الصحيحة.   |
| لا يوجد اتصال بالشبكة | الإشارة ضعيفة خارج شبكة GSM   | توجّه نحو نافذة أو نحو مكان مفتوح. تحقق من خريطة التغطية التي يزودك بها موفر الخدمة.                |
| الرموز غير متطابقة    | لتغيير رمز حماية. عليك تأكيد الرمز الجديد بإدخاله مرة أخرى. الرمزان اللذان ادخلتهما ليسا متطابقين | اتصل بموفر الخدمة.  |
| يتعذر ضبط الوظيفة     | غير معتمد من قبل موفر الخدمة أو التسجيل مطلوب.  | اتصل بموفر الخدمة.  |
| المكالمات غير متوفرة  | خطأ في الطلب<br>تم إدخال بطاقة SIM جديدة<br>تم بلوغ الحد الخاص برسوم المكالمات                    | شبكة جديدة غير مصرّح لها. تحقق من القيود الجديدة. اتصل بموفر الخدمة أو أعد إعداد الحد بواسطة PIN 2. |

## استكشاف الأخطاء وإصلاحها

| الرسالة                     | الأسباب المحتملة   | الحلول المحتملة  |
|-----------------------------|--|--|
| يتعذر تشغيل الهاتف          | لم يتم الضغط على مفتاح التشغيل/إيقاف التشغيل لفترة كافية | اضغط مفتاح التشغيل/إيقاف التشغيل لثانيتين على الأقل.   |
|                             | البطارية فارغة<br>ملاسمات البطارية متسخة                 | اترك الشاحن متصلاً لفترة أطول.<br>قم بتنظيف ملاسمات البطارية.  |
| خطأ في الشحن                | البطارية فارغة بالكامل                                   | اشحن البطارية.   |
|                             | درجة الحرارة خارج النطاق                                 | تأكد من أن درجة الحرارة المحيطة جيدة وانتظر قليلاً، ثم حاول الشحن مرة أخرى.                            |
|                             | مشكلة في الاتصال   | تحقق من وحدة التزويد بالطاقة والاتصال بالهاتف، تحقق من ملاسمات البطارية، وقم بتنظيفها إذا اقتضى الأمر. |
|                             | لا جهد رئيسي   | قم بالتوصيل بمقبس آخر أو تحقق من الجهد.  |
|                             | الشاحن به خلل  | إذا لم يسخن الشاحن، فقم باستبداله.   |
| الهاتف ينقطع عن الشبكة      | الشاحن غير مناسب   | استخدم ملحقات LG الأصلية فقط.  |
|                             | خلل في البطارية  | استبدل البطارية.   |
| الرقم غير مسموح بالاتصال به | الإشارة ضعيفة جداً                                       | تتم إعادة الاتصال بموفر خدمة آخر تلقائياً إذا كانت الشبكة توفر هذه الخدمة                              |
|                             | وظيفة أرقام الاتصال الثابت قيد التشغيل.                  | تحقق من الإعدادات.   |

# LG-C310 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the content of this manual may differ from your phone depending on the software of the phone or your service provider.



# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information  
This mobile phone model LG-C310 has been designed to comply with applicable safety requirements for exposure to radio waves.

These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/Kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.26 W/Kg (10g) and when worn on the body is 1.14 W/Kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/Kg averaged over 1g of tissue.

## Product care and maintenance



**WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.



- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## **Efficient phone operation**

### **Electronics devices**

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

# Guidelines for safe and efficient use

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle with your mobile phone and accessories.

## **In aircraft**

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

## **Children**

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## **Emergency calls**

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

 
## **Battery information and care**

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.

## Guidelines for safe and efficient use

- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

# Getting to Know Your Phone

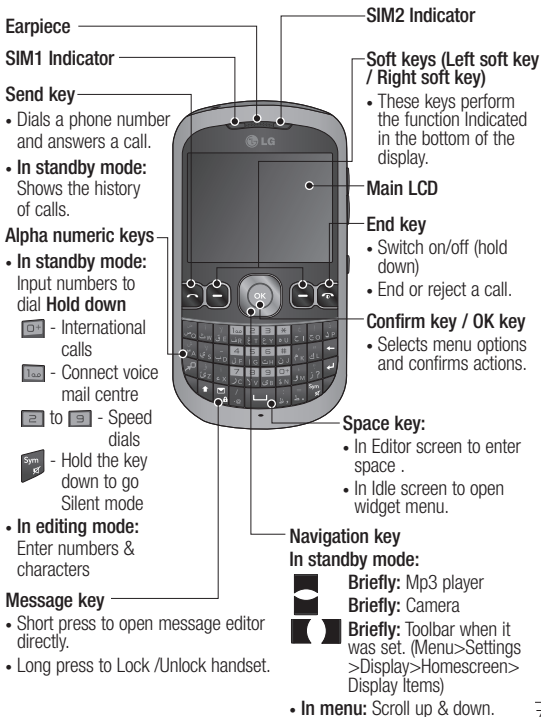

# Getting to Know Your Phone



 
**Charger/USB cable connector**

**TIP:** Please ensure the phone is powered on , external memory card is inserted and in idle mode before connecting the USB cable for Mass Storage.



**Side keys**

- **In standby mode:**  
Controls the ring volume.
  - **During a call:**  
Earpiece volume adjustment.
  - **During playing MP3 music:** Audio volume adjustment.
- SIM Switching Key**  
(SIM1 and SIM2 selection)



**Headset**

 
**Camera lens**

**Battery cover**

**SIM2 Card holder**

**SIM1 Card holder**

**Battery pack**

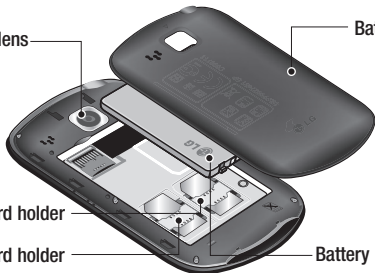

# Installing the SIM and battery

## 1 Remove the battery cover

Press the battery cover as shown in figure.



**⚠ WARNING:** Do not replace or remove the SIM card while your phone is being used or turned on, data may be lost or the SIM card might be damaged.

## 2 Remove the battery

Lever the top edge of the battery and remove it carefully from the battery compartment.



**⚠ WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 3 Install the SIM card

Slide the SIM card into the SIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the reverse direction.

## 4 Install the battery

First insert the bottom of the battery into the bottom edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press top of the battery until it clips into place.

# Installing the SIM and battery

 


## 5 Insert the battery cover



## 6 Charging your phone

Pull open the cover of the charger socket on the top of your LG-C310. Insert the charger and plug into a mains electricity socket. Your LG-C310 will need to be charged until a message reading "Battery full" appears on screen.

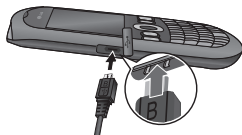



# Using Dual SIM-card

You can see two Network Signal icons on the left-top of the screen when you insert two SIM-Card.

To select or switch the SIM-card, press Menu and select Settings, then select Dual SIM.

Or press Dual SIM key simply on the right side of the LG-C310. Dual SIM key make it easy for you to switch SIM-Card whenever you call, send messages and so on.

**TIP!** You can see the network signals highlighted by background colour when you switch them. It makes you easily identify the strength of your signal of the selected SIM-Card.

**Tip!** You must choose SIM1 or SIM2 to use some function. For example, Call, Messaging, Phonebook, Settings and any Options.

# Memory card

## Installing a memory card

You can expand the memory available on your phone using a memory card.

**Note:** A memory card is an optional accessory.

- 1 Remove the battery cover.
- 2 Push the microSD card slot to release lock.
- 3 Flip up the slot.
- 4 Put the microSD card on the card tray. Make sure the gold colour contact area is facing downwards.
- 5 Flip down then push the slot to lock.



## Formatting the memory card

Your memory card may already be formatted. If your memory card isn't formatted, you will need to format it before you can begin using it.

- 1 From the home screen press **Menu** then select **Settings**.
- 2 Choose **Device** and **Memory info.** and select **External memory**.
- 3 Press **Format** and enter the password, which is set to 0000 as default. Your memory card will be formatted and ready to use.
- 4 To view the new formatted folders on your LG-C310 press **Menu** and select **My stuff**. Choose **My memory card**.












**WARNING:** When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.














# Your home screen

## The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth connection is active.



The table below explains the meaning of icons you're likely to see in the status bar.

| Icon  | Description  |
|---|--|
|    | Network signal strength (number of bars will vary) |
|    | No network signal                                  |
|    | GPRS available                                     |
|    | EDGE available                                     |
|    | Flight mode is activated                           |
|    | Calls are diverted                                 |
|    | Roaming service                                    |
|  | Bluetooth® is activated                            |
|  | WAP service is connected                           |

| Icon  | Description            |
|---|------------------------|
|  | An alarm is set        |
|  | Schedule               |
|  | New message            |
|  | New voice message      |
|  | New Email              |
|  | Normal profile in use  |
|  | Silent profile in use  |
|  | Outdoor profile in use |
|  | Headset profile in use |
|  | Remaining battery life |
|  | Battery empty          |
|  | External memory        |
|  | FM radio               |
|  | MP3 music playing      |

# Calling


## Making a call

- 1 Make sure your phone is on.
- 2 You can use the keypad. To delete a digit press back arrow.
- 3 Press  to begin the call.
- 4 To end the call, press .

**TIP!** To enter + when making an international call, press and hold 0.

## Making a call from your Contacts

It's easy to call anyone whose number you have stored in your **Phonebook**.

- 1 Press **Menu** to open the main menu. Select **Phonebook**.
- 2 Using the keypad, enter the first letter of the contact you want to call and scroll to the **Phonebook**.
- 3 Press  to begin the call.

## Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call.

While your phone is ringing you can press **Silent** to mute the ringing. This is useful if you have forgotten to change your profile to silent for a meeting.

Press  or select **Reject** in order to reject an incoming call.


### Note:

In call when speaker is activated, the speaker icon is displayed with red colour cross, when the speaker is deactivated speaker icon is displayed without red colour cross.

## Speed dialling

You can assign a speed dial number to a contact you call frequently.

- 1 Press **Menu** to open the main menu. Select **Phonebook**, then select **Option** and **Speed dials**.
- 2 Your voicemail is preset to speed dial 1 and you cannot change this. Select any other number either by using the navigation keys and selecting **Set** or by pressing the hard key number and selecting **Set**.
- 3 Your **Phonebook** will open. Select the contact you'd like to assign to that number using the navigation keys then Press **Select**.

To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will begin automatically and there is no need to press .

## Viewing your Call logs

Press **Menu** and select **Logs**.

**All logs** - View a complete list of all your dialled, received and missed calls and also send and received messages.

**Calls Only** - View a list of all the numbers you have called, received calls and missed calls.

**Messages Only** - View a list of all the numbers you have sent or received messages.

**Missed logs** - View a list of any calls you have missed.

**Outgoing logs** - View a list of all the numbers you have called.

**Incoming logs** - View a list of all the numbers that have received.

**TIP!** From any call log select **Options** and then **Delete** to delete selected items.

## Using call divert

- 1 Press **Menu** and select **Settings** and **Call**.
- 2 Select call divert from **SIM1** or **SIM2**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer and when you are out of reach.
- 4 Choose **Activate** and select whether to divert to voice mail, to other number or to recent diverted numbers.
- 5 Enter your divert number or select **Search** to browse for your divert number.

**Note:** Charges are incurred for diverting calls. Please contact your network provider for details.

**TIP!** To turn off all call diverts, choose Call divert from calling menu then select Options then select Deactivate all.

# Calling

## Using call barring

- 1 Press **Menu** and select **Settings** and **Call**.
- 2 Select **Call barring** from **SIM1** or **SIM2**.
- 3 Choose any or all of the options:  
**All outgoing calls**  
**Outgoing international**  
**Outgoing international calls except home country**  
**Incoming calls**  
**Incoming when abroad**
- 4 Enter the call barring password. Please check with your network operator for this service.

**TIP!** Select **Fixed dial numbers** from the **calling menu** to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

## Changing the call settings

- 1 Press **Menu** and select **Settings** and **Call** then select **SIM1** or **SIM2**.
- 2 From here you can amend the settings for:  
**Call divert** - Choose whether to divert your calls.  
**Call barring** - Select which calls you would like to be barred.  
**Call waiting** - Be alerted when you have a call waiting.  
**Fixed dial numbers** - Choose a list of numbers that can be called from your phone.  
**Call reject settings** - Select **Off** or **On** and choose to reject all calls, those from specific groups, contacts, unregistered numbers (those not in your list of contacts) or those with no caller ID.  
**Send my number** - Choose whether your number will be displayed when you call someone. (Depends on your network provider.)  
**Auto redial** - Allows you to set the auto redial function when a call attempt has failed.

**Minute minder** - Determines whether to sound a tone every 1 minute when you are in the call.

**Save new number** - Selecting this option will save numbers that are not already in your contacts upon ending the call.

**Call costs** - View the charges applied to your last call or all calls. This service is network dependent, some operators are unable to support this.

## Changing the call Common setting

1 Press **Menu** and select **Settings** and **Call** and Select **Common setting**.

2 From here you can amend the settings for:

**Excuse message** - Before you reject an incoming call, you can use "Excuse messages" to send a message to explain why you do not receive an incoming call.

**Bluetooth answer mode** - Choose how to answer a call when using a Bluetooth headset. Select **Hands-free** or **Handset**.

# Camera

## Taking a quick photo

- 1 Press **Menu** and select **Camera** and **Camera**.
- 2 When the camera has focused on your subject, select the Capture icon on the bottom-centre of the screen and press **OK** to take a photo.

## After taking a photo

Your captured photo will appear on the screen. The image name is shown on the bottom top of the screen with five icons on the bottom side.

**Album** - View the pictures and videos you have taken in your Album.

**Send** - Send the photo as **Message**, as an **Email** or via **Bluetooth**.

**New** - Take another photo straight away.

**Set as** - Use the image as Wallpaper, as a **Contact** image, or in your Start up image or Shut down image.

**Delete** - Delete the photo you have just taken. The viewfinder will reappear.



# Video Camera

## Shooting a quick video

- 1 Press **Menu** and select **Camera** and choose **Video Camera**. The video camera's viewfinder will appear on screen.
- 2 Focus the camera on what to record.
- 3 Select the Rec. icon on the bottom-centre of the screen and press **OK** to take a video. Rec will appear at the bottom of the viewfinder. Press  again to stop recording.

## After you've shot your video

A still image representing your captured video will appear on screen.

After recording a video clip, you can check the menu as follow:

**Album** - View the pictures and videos you have taken in your Album.

**Play** - Play the file.

**New** - Press to shoot another video straight away.

**Send** - Send the video as **Message**, as an **Email** or via **Bluetooth**.

**Delete** - Delete the video you have just made. The viewfinder will reappear.

# Music

## MP3 Player

Your LG-C310 has a built-in music player so you can play all your favourite music.

### Note:

- Before using music player, you will need to transfer music file onto your phone.
- Music player supports codec types as follows: MP3, WMA, AAC. Music player does not necessarily support all features and variations of file formats.

To access the music player, press **Menu** and select **Music** and select **MP3 player**. From here you can access to:

**Recently played** - View all of the songs you have played recently.

**All songs** - Contains all of the songs you have on your phone.

**My Playlists** - Contains all playlists you have created.

**Artists** - Allows you to view all tracks sorted by artist.

**Albums** - Allows you to view all tracks sorted by album.

**Genres** - Allows you to view all tracks sorted by genre.

**Shuffle all songs** - Allows you to play all of the songs in random order.


## Transferring music onto your phone




The easiest way to transfer music onto your phone is via Bluetooth or sync cable.

To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you should to accept it on your phone by selecting **Yes**.
- 4 The file should appear in **All songs**.

## Playing a song

- 1 Press **Menu** and select **Music**, then choose **MP3 player**.
- 2 Choose **All songs** then select the song you want to play. Select .

- 3 Select  to pause the song.
- 4 Select  to skip to the next song.
- 5 Select  to skip to the previous song.
- 6 Select **Back** to stop the music and return to the **All songs** menu.

**TIP!** To change the volume while listening to music, use the volume keys on the right hand side of your phone.

**Note:**

The copyright of music files can be protected in international treaties and national copyright laws. Therefore, it may be necessary to obtain a permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

## Using options while playing music

Select **Options** and choose from:

**Minimize** - Hide the music player screen so that you can continue using your phone as normal while music is playing.

**Repeat** - You can listen the music repeated.

**Shuffle** - Play your tracks in a random order.

**Equalizer** - You can view Equalizer on the screen.

**Visualization** - Select a visual effect.

**File info.** - You can view information about the music file you are listening to.

**Add to playlist** - Adds the current track to a playlist.

**Send via** - Send the song as a **Message, Email** or via **Bluetooth**.

**Set as** - Use the song as **Ringtone, Message tone, Start-up** or **Shut down**.

# FM Radio

## Using the FM radio

Your LG-C310 supports **FM radio** feature so you can tune into your favorite stations and listen on the move.

## Listening to the radio




- 1 Press **Menu**, select **Music** and choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

## Searching for stations

You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning

To auto tune:

- 1 Press **Menu** and select **Music**.
- 2 Select **FM radio** choose **Options**.
- 3 Select **Auto-scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.

**Note:** You can also manually tune into a station by using  and . If you press and hold,  or , the stations will be automatically found.

## Recording the Radio

- 1 Press **Option** and select **Radio recorder** during listening to the radio.
- 2 The recording time is displayed on your phone.

If you want to stop the recording, press **Stop**. If recording is done, the recorded contents will be saved in **My stuff** -> **Sounds** as mp3 file.

# Browser

## Accessing the web

You can launch the WAP browser and access the homepage of the activated profile on web settings. You can also manually enter a URL address and access the associated WAP page.

- 1 Press **Menu** and select **Browser**.
- 2 To go straight to the browser home page, select **Home**.  
Alternately, select **Enter address** and type in the URL, followed by **Connect**.

**NOTE:** You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

# Messaging

## Messaging

Your LG-C310 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) as well as the network's service messages. To use these functions, press **Menu** and select **Messaging**.

## Sending a message

- 1 Press **Menu**, select **Messaging** and choose **Write message**.
- 2 A new message editor will open. Message editor combines **SMS** and **MMS** in one intuitive mode that is easy to switch between. The default setting of the message editor is **SMS** mode.
- 3 Enter your message using the keypad. See **Entering text** on the right for more information on how to enter text.
- 4 Select **Options** and choose **Insert** to add an **Image, Video, Sound, Template, Emoticon, Name & Number, New slide, Subject** or **More (Business card/Schedule/Memo/Task/My business card)**.

- 5 Choose **Send to**.

- 6 Choose a contact from the list of contacts or enter the phone number.

- 7 Select **Send**.



**WARNING:** Image, Sound, Video, New slide, Subject, Business card, Schedule or My business card is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

**TIP!** You can send SMS to many contacts at a time. Select **Send** to at the bottom of the message screen to open **Contacts**. Select **Selection mode** though **Options** menu. Maximum it supports 20 contacts at a time.

## Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: **Abc** mode, and **123** mode.

**Note:** Some fields may allow only one input mode (e.g. telephone number in contact fields).

## Text input mode using the keypad

When you want to enter text, for example when writing a message, the keypad will default to **Abc** mode. If you are entering a number, for example when making a call, the keypad number keys will default to numbers.

## Message folders

Press **Menu** and select **Messaging**.

The folder structure used on your LG-C310 should be self-explanatory.

**Write message** - Create your new message.

**Inbox** - All the messages you receive are placed into your Inbox. From here you can reply, forward and more.

**Conversation view** - You can view the messages by each numbers.

**Drafts** - If you don't have time to finish writing a message, you can save what you have written so far in here.

**Outbox** - This is a temporary storage folder used while messages are being sent.

**Sent** - Copies of all the messages you send are kept into your Sent folder.

**IM** - Allows you to send and receive an Instant Message at any time.

**My folders** - You can move messages of **Inbox** or **Sent** into **My folders**. Also you can move those messages of **My folders** into the original message box.

**Templates** - A list of pre written useful messages, useful for a quick reply.

## Managing your messages

1 Press **Menu**, select **Messaging** and choose **Inbox**.

2 Select **Options** and then choose to:

**Reply** - Send a reply to the selected message.

**Forward** - Send the selected message on to another person.

**Write message** - Write a new message or email regardless who sent you message.

**Call by** - Call the person who sent you the message.

# Messaging

**Save number** - Save the number of the message.

**Delete** - Delete the selected message.

**Copy&Move** - Choose to copy or move the selected message to the phone and specially move selected message to **My folders**.

**Selection mode** - Mark a message or all.

**Search** - you can find messages by **Keyword** or **Sender**.

**Filter** - Displays messages by desired message types.

**Delete all** - Delete all messages.

**Message info** - You can check the message info of its type, subject, where it is from and its date.

If you see the message **No space for SIM message**, you should delete some messages from your inbox to create space.

If you see the message **No space for messages**, you can delete either messages or saved files to create more space.

**TIP!** While viewing the received message, press **Options** and select **Template reply**. This is useful if you need to reply the message during a meeting.

**TIP!** While you see the message, press **Options** and select **Extract**. You can extract the information such as a number, email address or web address from the selected message.

## Changing your text message settings

Press **Menu**, select **Messaging**, then choose **Settings** and **Text message** from **SIM1** or **SIM2**. You can make changes to:

**Text message centre** - Enter the details for your message centre.

**Delivery report** - Choose to receive confirmation that your message have been delivered.

**Validity period** - Choose how long your messages are stored at the message centre.

**Message types** - Convert your text into **Voice**, **Fax**, **X.400** or **Email**.

**Character encoding** - Choose how your characters are encoded. This



affects the size of your message and therefore data costs.

**Send long text as** - Choose whether to send your message as Multiple SMS or MMS when you enter a text longer than 2 pages in the message field.

## Changing your multimedia message settings

Press **Menu**, select **Messaging**, then choose **Settings** and **Multimedia message** from **SIM1** or **SIM2**. You can make changes to:

**Retrieval mode** - Choose to automatically or manually download multimedia messages depending on whether you are at home or roaming.

**Delivery report** - Choose to request or allow a delivery report.

**Read reply** - Choose to request or allow a read reply.

**Priority** - Choose the priority level of your multimedia message.

**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose how long your slides appear on screen.

**Creation mode** - Allows you to select the contents type supported by MMS.

**Delivery time** - Configures the delivery time of message to the recipient. The multimedia message centre will deliver the message after the delivery time.

**Multi msg centre** - Allows you to configure network information such as the multimedia service centre and the internet profile to send a multimedia message.

## Changing your other settings

Press **Menu**, select **Messaging**, and choose **Settings** then:

**Text message** - You can configure text message related options.

**Multimedia message** - You can configure multimedia message related options.

**Voicemail** - Add a new voicemail service. Contact your network operator for more information on the service they provide.

**Service message** - Choose to receive or block service messages. You can also set your message

# Messaging

security by creating trusted and untrusted lists of senders.

**Save sent message** - You can select to save message you sent.

**Message counter** - You can check amount of messages you sent during period you want to know.

**Info. service** - Choose the reception status, channels and language of your info messages.

# E-Mail

## Sending an email using your new account

To send/receive an email, you should set up an email account.

- 1 Press **Menu**, select **E-Mail** and choose the account you want to use.
- 2 Choose **Write e-mail** and a new email window will open.
- 3 Write a subject line then press **OK**.
- 4 Enter your message using the keypad.

## Retrieving your email

- 1 Press **Menu** and select **E-mail**.
- 2 Select the account you want to use.
- 3 Select **Inbox**.
- 4 Choose **Refresh** and the phone will connect to your email account and retrieve your new messages.

## Message folders

Press **Menu** and select **E-mail**. The folder structure used on your LG-C310 should be self-explanatory.

**Write e-mail** - Create your new message.

**Inbox** - All the e-mails you receive are placed into your **Inbox**. From here you can reply, forward and more.

**Drafts** - If you don't have time to finish writing a e-mail, you can save what you have written so far in here.

**Outbox** - This is a temporary storage folder while e-mail are being sent or stores the messages that are failed to sent.

**Sent** - Copies of all the e-mail you send are kept into your Sent folder.

**Trash** - All the e-mail you remove are placed into your **Trash**.

# E-Mail

## Changing your email settings

- 1 Press **Menu**, choose **E-mail**.
- 2 Select the account you want to use.
- 3 Select **Settings** from **Options** then you can adapt the following settings:

**E-mail accounts** - You can set up an email account.

**Allow reply e-mail** - Choose to allow the sending of 'read confirmation' messages.

**Request reply e-mail** - Choose whether to request read confirmation messages.

**Retrieve interval** - Choose how often your LG-C310 checks for new email messages.

**Show amount** - Choose the number of emails to be shown at any one time.

**Include message in Fwd & Reply** - Choose whether or not to include the original message.

**Include attachment** - Choose whether or not to include the original attachment.

## Auto retrieval in roaming -

Choose whether or not to automatically retrieve your messages when abroad.

## New e-mail notification -

Choose whether or not to be alerted to new emails.

**Signature** - Create an email signature and switch this feature on.

**Priority** - Choose the priority level of your email messages.

## Maximum size for receiving

- Choose the size of emails to be retrieved at any one time.

**Mail sending size** - Choose the size of emails to be sent at any one time.

# Phonebook

## Searching for a contact

- 1 Press **Menu** and select **Phonebook**.
- 2 Using the keypad enter the first letter of the name of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.

Or, using the slightly quicker method...

- 1 Enter the number you wish to search on the home screen and select **Options**.
- 2 Choose **Search contacts** in option menu.

## Adding a new contact

- 1 Press **Menu** and select **Phonebook**.
- 2 Press **Option** and select **New contact**.
- 3 Choose whether to store your new contact on your **Handset** or **SIM** card.
- 4 Enter the information you want in the fields provided and select **Done**.

Or to use a slightly quicker method...

- 1 Enter the number you wish to store and press **Options**.
- 2 Choose **Save number**, and choose either **New contact** or **Update contact**.
- 3 Enter the relevant information and select **Done**.

## Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu.

- 1 Press **Menu** and select **Phonebook**.
- 2 Select **Options** to open the list of options. From here you can:
  - Message** - Send a message to the contact.
  - Call by** - Directly make voice call to a contact you choose.
  - Edit** - Change any of the contact's details.
  - Delete** - Delete the contact. Select **Yes** only if you are sure.
  - New contact** - Add a new contact.

# Phonebook

**Storage location** - Choose to move or copy to the phone or SIM card (depending on where you originally saved the contact).

**Send contact** - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **MMS**, **E-mail** or via **Bluetooth**.

**Selection Mode** - Choose whether to mark a contact or unmark.

**Speed dials** - You can assign a frequently-called contact to a speed dial number.

**Sort by** - Sort a contact by **ABC↑** or **ABC↓**.

## Creating a group

- 1 Press **Menu** and select **Phonebook**.
- 2 Select **Groups** and choose **Options**.
- 3 Select **New group**.
- 4 Enter a name for your new group.
- 5 Press **Done**.

**Note:** If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your contacts.

**TIP!** You can edit an existing group by highlighting it and selecting **Options**. Choose to **Assign members** to the group from your contacts, select **Edit group** or **Delete** the group.

## Changing your contact settings

- 1 Press **Menu** and select **Phonebook**.
- 2 Select **Option** and choose **Settings**. From here you can adjust the following settings:
  - Display name** - You can select to show the **First name first** or **Last name first** or **Last name, First name**.
  - Main store and view** - Choose whether to store contacts **SIM1** or **SIM2** or **Handset**. And also choose whether to view contacts saved to **Both handset & USIM**, **Handset only** or **SIM1 only** or **SIM2 only**.

**Copy all** - Copy your all contacts from your **SIM1** or **SIM2** to your handset or from your handset to your **SIM1** or **SIM2** or from **SIM1** to **SIM2** or from **SIM2** to **SIM1**.

**Move all** - This works in the same way as **Copy all**, but the contact will only be saved to the location you've moved. If you move a contact from the SIM card to the handset it will be deleted from the SIM card memory.

**Export contacts** - You can save all the phonebook data in the handset to an external memory card by the form of vcard.


**Import contacts** - You can restore all the phonebook data in an external memory card to the phone memory by the form of vcard.

### **Send all contacts via Bluetooth**

- Send all contacts information to another handset by Bluetooth.

# More

## Setting your alarm

- 1 Press **Menu** and select **More**, then choose **Alarm clock**.
- 2 Press **Options** and select **New alarm**.
- 3 Scroll down and enter the time you would like the alarm to sound at.
- 4 Choose the repeat type to indicate whether you would like your alarm to sound **Not repeated**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Select days**.
- 5 Scroll down and choose whether you would like the alarm to **Always sound**, **Always vibrate**, **Always sound and vibrate** or **As in profile**.
- 6 Scroll down to choose the alarm tone. Press  and choose a sound from the My stuff.
- 7 Scroll down and enter a name for the alarm or keep the suggested name.
- 8 Finally you can set the snooze interval at 5, 10, 20, 30 minutes, 1 hour or off.
- 9 Select **Done**.

## Adding an event to your calendar

- 1 Press **Menu** and select **More** and select **Organiser**, then choose **Calendar**.
- 2 Select the date you would like to add an event to. You can choose a date either by scrolling to it using the navigation keys or by selecting **Options** and **Go to date** in order to enter a date.
- 3 Select **Options** then select **New schedule** and scroll down to enter the time you would like your event to begin. Scroll down and enter the end time of your event.
- 4 Enter a **Subject** for the event. Use the keypad to type letters and numbers.
- 5 Scroll down again and choose whether you would like to set an **Alarm** for the event. Scroll left or right to see the available options. You can set the alarm to go on at the starting time of the event or at a set period of time before the event starts to remind you the event is coming up.



- 6 Scroll down once more to select whether the event is occurring **Not repeat** or repeated at **Daily**, **Weekly**, **Monthly** or **Annually** intervals. If the event is repeated, you can also scroll down to enter an **Expiration date** for when the events will stop completely.
- 7 Select **Done** and your event will be saved in the calendar. A square cursor will mark the days of any saved events.

## Adding an item to your task list

- 1 Press **Menu** and select **More** and choose **Organiser**.
- 2 Select **Tasks** and select **New task**.
- 3 Set the date for the to do item, add notes and choose alarm and select a priority level: **High**, **Normal** or **Low**.
- 4 Save your to do list item by selecting **Done**.

**TIP!** You can edit an item by selecting it, pressing **Options** and **Edit**. Confirm your amends by selecting **Done**.

## Adding a memo

- 1 Press **Menu** and select **More** and select **Organiser**, then **Memo**.
- 2 Select **New memo** and type your memo.
- 3 Select **Save**.
- 4 Your memo will appear on the screen.

**TIP!** You can lock the memo. Press **Option** and select **Lock** for the private memo to protect privacy.

## Date finder

Date finder is a handy tool to help you calculate what the date will be once a certain number of days have passed.

## Voice recorder

### Using the Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

### Recording your voice memo

- 1 Press **Menu** and select **More**, then choose **Voice recorder**.
- 2 Press **OK** to begin recording.

## More

- 3 Choose **Stop** to end the recording.
- 4 Press **Options** and select **Play** to listen to the recording.


**Note:** You can listen to all of the voice recordings you have saved by selecting options and go to Album.

### Sending a voice recording

- 1 Once you have finished recording, select **Options**.
- 2 Select **Send** and choose from **MMS**, **E-mail** or **Bluetooth**. If you choose **MMS** or **E-mail**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

### Using your calculator

- 1 Press **Menu** and select **More**, then choose **Calculator**.
- 2 Press the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, ×, ÷) using the navigation keys followed by =.

- 4 For more complex calculations, select **Options** to choose a command.
- 5 Select  to clear the screen and start a new calculation.

### Using the stopwatch

- 1 Press **Menu** and select **More**, then choose **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Choose **Lap** if want to record a lap time. Up to 99 lap times can be saved.
- 4 Select **Stop** to end the timer.
- 5 Choose **Resume** to restart the stopwatch at the time you stopped it at or select **Reset** to return to zero.

### Converting a unit

- 1 Press **Menu** and select **More**, then choose **Unit converter**.
- 2 Choose whether you would like to convert **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 3 Scroll left and right to select a unit, then scroll down and enter the unit quantity.

- 4 Scroll down to the unit conversion box and choose the unit measurement you want to convert into. The conversion will show automatically in the line below.

**Note:** For **Currency** convert, you need to set **Rate** according to current exchange rate first.

## Adding a city to your World clock

- 1 Press **Menu** and select **More**, then choose **World clock**.
- 2 To find out the time of specific city, press **Options** and select **New city**.
- 3 Move a city by navigator key and select a city on the Map. Select **Options** and choose **View city list**, then also you can select the list or enter the first letter of the city in search field.
- 4 Press **Select**.

# Settings

## Changing your profiles

- 1 Press **Menu** and select **Settings**.
- 2 Select **Profiles** and then choose the profile you want to edit.
- 3 Select **Options** and choose **Personalise**.
- 4 You can change all of the tones, its volumes and alert options from here.

## Using flight mode

To turn on flight mode, press **Menu** and then select **Settings** and **Profiles**. Select **Flight mode** to activate. Flight mode will not allow you to make calls, connect to the internet or send message.

## Changing your Device settings

- 1 Press **Menu** and select **Settings**.
- 2 Select **Device** settings and choose from the list below.

**Power save** - Choose to switch the factory set power saving settings On or Off.

**Languages** - Change the language of for your LG-C310's display.

**Auto key lock** - Lock the keypad automatically in standby screen.

**Primary storage settings** - If you insert an external memory card in your phone, you can also select Primary storage settings then choose the default location you prefer items to be saved to.

**Device info** - View the technical information for your LG-C310.

## Changing the date & time

- 1 Press **Menu** and select **Settings**.
- 2 Select **Device** and choose **Date and Time** and choose from the list below:

**Date and time settings** - Select Auto update On, and the phone will automatically update the date and time.

**Date format** - You can enter the current date. You can set the date format (DD/MM/YYYY, MM/DD/YYYY, YYYY/MM.DD).

**Date separator** - You can enter the current date. You can set the date separator (DD/MM/YYYY, DD.MM.YYYY, DD-MM-YYYY).

**Time format** - You can set the date format **12 hours** or **24 hours**.

## Changing your security settings

Change your security settings to keep your LG-C310 and the important information it holds protected.

1 Press **Menu** and select **Settings** and choose **Device**.

2 Select **Security** and choose from the list below:

**PIN code request** - Choose a PIN code to be requested when you turn your phone on.

**Device lock** - Choose a security code to lock your phone **Never**, **At device start up**, **When SIM card is changed** or **Immediately**.

**Application lock** - You can lock the contents you want to hide. (Phonebook, Messaging, E-mail, etc.)

### Anti Theft Mobile Tracker

- When the handset is stolen, handset sends the SMS to the numbers configured by real Owner. To activate the ATMT feature, you will need to set ATMT on, and configure the ATMT settings with Owner name and

Alternate numbers. Default ATMT Code is "0000"

**Change codes** - Change your PIN code (This menu item will appear if PIN code request is set to On), PIN2 code, Security code.

### Note: Security code

The security code protects the unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the **Reset settings** menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorised use of the phone. The security code default setting can be modified from the **Security > Change codes**.

## Viewing memory status

Your LG-C310 has three memories available: the phone, the SIM card and an external memory card (you may need to purchase the memory card separately).

You can use the memory manager to determine how each memory is used and see how much space is available.

# Settings

Press **Menu** and select **Settings**, select **Device** and choose **Memory info** You will then see the current status of the memories in your LG-C310.

## Resetting your phone

Use **Reset Device** in **Device of Settings** menu to reset all the settings to the factory definitions. You need the security code to activate this function.

## Changing your display settings

- 1 Press **Menu** and select **Settings**.
- 2 Select **Display** and choose from:

**Homescreen** - Adjust the **Wallpaper** and **Display items**.

**Menu theme** - Quickly change the whole look of your screen.

**Menu style** - Change the menu view from **List style** or **Grid style**.

**Font** - Adjust the font size.

**Backlight** - Choose how long the backlight remains on. Also, use the navigation keys to adjust the main screen brightness.

**TIP!** The longer the backlight is on, the more battery power is used and you may need to charge your phone more often.

**Greeting message** - After selecting **On**, you can write a welcome message. The message will appear on screen whenever you start-up the phone.

**Other screens** - Choose the theme of your home screen or start-up/shut down screen.

## Social network services (SNS)

Your LG-C310 has SNS that lets you enjoy and manage your social network.

**NOTE:** An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

## Phone Software update LG Mobile Phone Software update from internet

For more information on using this function, please visit the

<http://update.lgmobile.com> or  
<http://www.lg.com/common/index.jsp> → select country.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

## Connectivity

### Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone straightaway. If you want to change any settings, use this menu. Press **Menu** and select **Settings** then choose **Connectivity**. Your options are:

**Bluetooth** - Set up your LG-C310 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

**USB connection mode** - You can select the USB connection mode on your phone for several uses.

### Changing your Bluetooth settings

- 1 Press **Menu** and select **Settings** and choose **Connectivity**.
- 2 Choose **Bluetooth** then **Settings**. Make your changes to:

**My device visibility** - Set Visible or **Visible for 1 min** so that other devices can detect your phone when they are searching for a Bluetooth device. If you select **Hidden**, other devices will not be able to detect your phone when they are searching for a Bluetooth device.

**My device name** - You can name or rename your phone as it will appear on other devices. Your phone's name will be shown on other devices only when **My device visibility** is set to **Visible**.

# Settings

**Supported services** - You can view the list of devices such as headsets and handsfree supported by Bluetooth enabled phone.

**My address** - Check your Bluetooth address here.

**Note:** To improve security, we recommend that once you have configured or paired with a device, **Visibility** be set to **Hidden**. For incoming connections, regardless of whether or not the other device has been paired with your phone, you can choose to accept or reject the connection.

## Pairing with another Bluetooth device

By pairing your LG-C310 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **Turn on** and **Visible**. You can change your visibility in the **Settings of Bluetooth** menu, by selecting **My device visibility**, then **Visible**.
- 2 From **Bluetooth**, choose **Activate Bluetooth** and select **Search new device**.

- 3 Your LG-C310 will search for devices. When the search is completed **Add** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, select **Add** and enter a passcode then choose **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

### **Note:**

- 1 Pair LG-C310 with any device supporting BT version above 2.0, then passcode is not asked, since passcode is auto generated.
- 2 Pair LG-C310 with any device supporting lesser BT versions such as 1.2 etc, then passcode is asked.

## Using a Bluetooth headset

- 1 Check your Bluetooth is **Activate Bluetooth** and **Visible**.
- 2 Follow the instructions that came with your headset to place it in pairing mode and pair your devices.



- 3 Your LG-C310 will automatically connect to your Bluetooth headset and switch to headset profile.

## **Sending and receiving your files using Bluetooth**

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls. Before you can start sharing files using Bluetooth, you will need to pair your phone with another Bluetooth device. For information on pairing devices, see

### **Pairing with another Bluetooth device.**

#### **To switch Bluetooth on:**

- 1 Press **Menu** and select **Settings**. Choose **Connectivity** then select **Bluetooth**.
- 2 Select **Activate Bluetooth**.
- 3 Select **Deactivate Bluetooth** to switch Bluetooth off.

#### **To send a file:**

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Select **Options** and choose **Send via Bluetooth**.

- 3 Select **Yes** to turn Bluetooth on if it is not already activated.
- 4 Your LG-C310 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and select **OK**.

#### **To receive a file:**

- 1 To receive files, your Bluetooth must be both **Activate Bluetooth** and **Visible**.
- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.

**TIP!** Keep an eye on the progress bar to make sure your file is sent.

**TIP!** The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under licence. Other trademarks and trade names are those of their respective owners.

# Settings

## Synchronise your phone with your PC

You can synchronise your phone with your PC to make sure all your important details and dates match, but also to backup your files to put your mind at ease.

## Installing LG PC Suite on your computer

- 1 Go to [www.lgapplication.com](http://www.lgapplication.com) and choose your country.
- 2 Select Manual & Software Download and click Download to Download LG Mobile Support Tool to PC .
- 3 Follow the instructions on screen to complete the LG PC Suite Installation on your PC.

## Backing up and restoring your phone's information

- 1 Connect the USB cable to your phone and your PC.
- 2 Select the **PC suite** from the popup menu in your phone.
- 3 Click on the Backup icon, and select **Backup** or **Restore**.
- 4 Mark the contents you would like to back up or restore. Select

the location you would like to backup information to, or restore information from. Click OK.

- 5 Your information will be backed up.

## Viewing your phone files on your PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Select the **PC suite** from the popup menu in your phone.
- 3 After searching the phone it will be connected automatically.

**TIP!** Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

# Accessories

Various accessories are available for your mobile phone. These are detailed below.

## Charger



## Battery



## Data cable



## User Guide



## CD



## Stereo headset



### NOTE

- Always use genuine LG accessories.
- Failure to do so may invalidate your warranty.
- Accessories may be different in different regions. Please check with our regional service company or agent for further enquires.

# Technical Data

## Ambient Temperatures

Max.: +55°C (discharging) +45°C (charging)

Min.: -10°C

### Declaration of Conformity



LG Electronics

#### Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

#### Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

LG-C310

Trade Name

LG

CE 0168

#### Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1

EN 300 328 V 1.7.1

EN 60950-1 : 2001

EN 50360:2001/EN62209-1:2006

EN 301 511 V9.0.2

#### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

#### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Doo Haeng Lee / Director

31.08.2010

LG Electronics Inc. – EU Representative  
Veluwezoom 15, 1327 AE Almere, The Netherlands

Signature of representative

# Troubleshooting

This section lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself.

| Message                     | Possible causes   | Possible Solutions  |
|-----------------------------|---|---|
| USIM error                  | There is no USIM card in the phone or it is inserted incorrectly.   | Make sure the USIM card is correctly inserted.  |
| No network connection       | Signal weak<br>Outside GSM network area   | Move towards a window or into an open area. Check the service provider coverage map.                        |
| Codes do not match          | To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match. | Contact your Service Provider.  |
| Function cannot be set      | Not supported by Service Provider, or registration required   | Contact your Service Provider.  |
| Calls not available         | Dialling error<br>New USIM card inserted<br>Charge limit reached  | New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2. |
| Phone cannot be switched on | On/Off key not pressed long enough  | Press the On/Off key for at least two seconds.  |
|                             | Battery empty   | Keep charger attached for a longer time.  |
|                             | Battery contacts dirty  | Clean the contacts.   |

# Troubleshooting

| Message              | Possible causes                       | Possible Solutions  |
|----------------------|---------------------------------------|---|
| Charging error       | Battery totally empty                 | Charge battery.   |
|                      | Temperature out of range              | Make sure the ambient temperature is right, wait for a while, and then charge again.                        |
|                      | Contact problem                       | Check the power supply and connection to the phone. Check the battery contacts and clean them if necessary. |
|                      | No mains voltage                      | Plug in to a different socket or check the voltage.   |
|                      | Charger defective                     | If the charger does not warm up, replace it.  |
|                      | Wrong charger                         | Only use original LG accessories.   |
| Number not permitted | Battery defective                     | Replace battery.  |
|                      | The Fixed dial number function is on. | Check settings.   |









