

# Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

**WARNING!** *Violation of the instructions may cause serious injury or death.*



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.
3. Never store your phone in temperatures less than -4°F or greater than 122°F.



4. Do not dispose of your battery by fire or with hazardous or flammable materials.
5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



6. Do not use a hand-held phone while driving.
7. Do not use the phone in areas where its use is prohibited. (For example: aircraft)

## Important Safety Precautions



8. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



9. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



10. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.



11. Do not use your phone in high explosive areas as the phone may generate sparks.



12. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



13. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.



14. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.

15. Do not disassemble the phone.



16. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.



17. Do not hold or let the antenna come in contact with your body during a call.

18. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.



19. Store the battery out of reach of children.

20. Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



21. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



22. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.

23. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



24. Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

# Table of Contents

<b>Important Safety Precautions</b>	<b>1</b>	The Battery	22
<b>Table of Contents</b>	<b>4</b>	Installing the Battery	22
<b>Welcome</b>	<b>9</b>	Removing the Battery	22
Important Information	10	Battery Charge Level	23
FCC Part 15 Class B Compliance	10	Turning the Phone On and Off	23
Technical Details	10	Turning the Phone On	23
<b>Technical Details</b>	<b>10</b>	Turning the Phone Off	24
FCC RF Exposure Information	11	Signal Strength	24
Bodily Contact During Operation	13	Screen Icons	24
Vehicle-Mounted External Antenna	13	Making Calls	24
FCC Notice and Cautions	13	Correcting Dialing Mistakes	25
Part 15.19 statement	14	Redialing Calls	25
Part 15.21 statement	14	Receiving Calls	25
Part 15.105 statement	15	<b>Quick Access to Convenient Features</b>	<b>26</b>
<b>Phone Overview</b>	<b>16</b>	Lock Mode	26
<b>Menu Overview</b>	<b>19</b>	Mute Function	26
<b>Getting Started with Your Phone</b>	<b>22</b>	Quick Volume Adjustments	26
		Call Waiting	26
		Caller ID	27
		Speed Dialing	27

## Entering and Editing Information 28

Text Input	28
Key Functions	28

## Contacts in Your Phone's Memory 29

The Basics of Storing Contacts Entries	29
Phone Numbers With Pauses	29
Storing a Number with Pause or Wait	30
Adding a Pause or Wait to an Existing Number	30
Searching Your Phone's Memory	31
Scrolling Through Your Contacts	31
Contacts Options	31
Making a Call From Your Phone's Memory	32

## Contacts 34

1. New Contact	34
2. Contact List	34

## Phone Menus 34

3. Favorites	35
4. Groups	36
5. Speed Dials	36
6. My vCard	37

## Messaging 37

1. New Text Message	37
2. New Picture Message	40
3. Inbox	41
4. Outbox	43
5. Drafts	44
6. Voicemail	45
7. Templates	45
8. Settings	46
9. Delete All	47

## Call History 48

1. Missed Calls	48
2. Received Calls	48
3. Dialed Calls	48
4. All Calls	48
5. Call Timer	48
6. Data Counter	49

# Table of Contents

<b>Multimedia</b>	<b>49</b>	1.2 Command Mode	61
1. Take Photo	49	1.3 Announce Alert	61
2. Record Voice	51	1.4 Train Word	61
3. Images	51	1.5 Best Match	62
4. Sounds	52	<b>2. Calculator</b>	<b>62</b>
<hr/>		<b>3. My Menu</b>	<b>62</b>
<b>easyedge<sup>SM</sup></b>	<b>54</b>	<b>4. Ez Tip Calculator</b>	<b>63</b>
1. easyedge Apps	54	<b>5. World Clock</b>	<b>63</b>
<hr/>		<b>6. Stopwatch</b>	<b>63</b>
<b>My Schedule</b>	<b>55</b>	<b>7. Unit Converter</b>	<b>64</b>
1. Alarm Clock	55	<hr/>	
2. Calendar	55	<b>Settings</b>	<b>64</b>
3. Notepad	56	1. Sound	64
<hr/>		1.1 Ringtones	64
<b>Browser</b>	<b>57</b>	1.2 Volume & Vibrate	65
<hr/>		1.3 Message Alerts	65
<b>Tools</b>	<b>59</b>	1.4 Alert Type	65
1. Voice Command	59	1.5 Service Alerts	66
1.1 Start Command	59	1.6 Power On/Off Tone	66
1.1.1 Call <Name> or <Number>	60	<b>2. Display</b>	<b>67</b>
1.1.2 Voicemail	60	2.1 Wallpaper	67
1.1.3 Missed Calls	60	2.2 Banner	67
1.1.4 Messages	60	2.3 Backlight	67
1.1.5 Time & Date	61		
1.1.6 Help	61		

2.4 Menu Style	68	5.4 My Bluetooth Info	77
2.5 Languages (Idiomas)	68	<b>6. System</b>	<b>77</b>
2.6 Clocks & Calendar	68	6.1 Network	77
2.7 Font Settings	68	6.2 Location	78
2.8 Word Prediction	69	<b>7. Web Access Prompt</b>	<b>78</b>
<b>3. Security</b>	<b>69</b>	<b>8. Memory</b>	<b>79</b>
3.1 Lock Phone	69	<b>9. Phone Info</b>	<b>79</b>
3.2 Restrictions	70	<b>Tone Room Deluxe</b>	<b>79</b>
3.3 Emergency Numbers	71	<b>My Contacts Backup</b>	<b>79</b>
3.4 Change Lock Code	71	<b>PAC-MAN</b>	<b>79</b>
3.5 Master Reset	72	<b>Safety</b>	<b>80</b>
<b>4. Call Settings</b>	<b>72</b>	<b>TIA Safety Information</b>	<b>80</b>
4.1 Answer Options	72	Exposure to Radio Frequency Signal	80
4.2 Auto Retry	73	Antenna Care	80
4.3 One Touch Dial	73	Phone Operation	81
4.4 Voice Privacy	73	Tips on Efficient Operation	81
4.5 Airplane Mode	73	Driving	81
4.6 TTY Mode	74	Electronic Devices	81
<b>5. Bluetooth</b>	<b>74</b>	Pacemakers	82
5.1 Paired Devices	75	Persons with pacemakers:	82
5.2 Power	76		
5.3 My Visibility	76		

## Table of Contents

Hearing Aids	82	FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices	107
Other Medical Devices	82		
Health Care Facilities	83		
Vehicles	83	<b>Accessories</b>	<b>111</b>
Posted Facilities	83		
Aircraft	83	<b>Limited Warranty Statement</b>	<b>112</b>
Blasting Areas	83		
Potentially Explosive Atmosphere	83	<b>Index</b>	<b>116</b>
For Vehicles Equipped with an Air Bag	84		
Charger and Adapter Safety	84		
Battery Information and Care	85		
Explosion, Shock, and Fire Hazards	86		
General Notice	86		
<b>Warning! Important safety information</b>	<b>88</b>		
Avoiding hearing damage	88		
Using your phone safely	88		
Using headsets safely	89		
<b>FDA Consumer Update</b>	<b>89</b>		
<b>10 Driver Safety Tips</b>	<b>100</b>		
<b>Consumer Information on SAR</b>	<b>104</b>		

Some content in this user guide may differ from your phone depending on the phone software. Features and specifications are subject to change without prior notice.



# Welcome

Thank you for choosing the UN200 cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this compact phone offers:

- Slim and sleek design with internal antenna.
- Large, easy-to-read, backlit LCD with status icons.
- Messaging, voicemail, and caller ID capabilities.
- QWERTY keypad.
- Speakerphone feature.
- Menu-driven interface with prompts for easy operation and configuration.

- Any Key answer, Auto with Handsfree answer, Auto Retry, One Touch Dial, and Speed Dialing with 99 memory locations.
- Bilingual (English and Spanish) capabilities.
- Bluetooth® wireless technology.

## Note

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.

# Technical Details

## Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

## FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received,

including interference that causes undesired operation.

## Technical Details

The UN200 is a trimode phone that operates on among (Code Division Multiple Access CDMA) frequencies: cellular services at 800 MHz, (Personal Communication Services PCS) at 1.9 GHz and GPS.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard handoff, and

dynamic RF power control technologies combine to reduce call interruptions.

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base Station Transmission System), , MS (Mobile Station) and GPS.

\* TSB-74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible.

The table on the following page lists some major CDMA standards.

## FCC RF Exposure Information

**WARNING! Read this information before operating the phone.**

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

## Technical Details

CDMA Standard	Designator	Description
<b>Basic Air Interface</b>	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000 ANSI TIA/EIA 553A	CDMA Dual Mode Air Interface 14.4kbps radio link protocol and inter-band operations IS-95 adapted for PCS frequency band cdma2000 1xRTT AirInterface
<b>Network</b>	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41-C TIA/EIA/IS-124	MAS-BS PCSC-RS Inter-system operations Non-signaling data comm.
<b>Service</b>	TIA/EIA/IS-96-B TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Short message service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
<b>Performance</b>	TIA/EIA/IS-97 TIA/EIA/IS-98 ANSI J-STD-018 ANSI J-STD-019 TIA/EIA/IS-125	Cellular base station Cellular mobile station PCS personal station PCS base station Speech CODEC

## **Bodily Contact During Operation**

This device was tested for typical use with the back of the phone kept 0.79 inches (2.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.79 inches (2.0 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

## **Vehicle-Mounted External Antenna**

### **(Optional, if available.)**

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and vehicle-mounted external antenna. For more information about RF exposure, visit the FCC website at [www.fcc.gov](http://www.fcc.gov).

## **FCC Notice and Cautions**

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

## Technical Details

Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

### **Part 15.19 statement**

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions:

- (1) This device and its accessories may not cause harmful interference.
- (2) This device and its accessories must accept any interference received, including interference that may cause undesired operation.

### **Part 15.21 statement**

Changes or modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

### Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Phone Overview



1. **Earpiece** Lets you hear the caller.
2. **LCD Screen** Displays messages and status icons.
3. **Left Soft Key** Use to access the Messaging menu from the Home screen or the function immediately above it.
4. **Camera Key** Press this key to open the Camera function.
5. **SEND Key** Use to place or answer calls.
6. **Alphanumeric Keypad** Use to enter numbers and select menu items.
7. **Navigation Key** Use to navigate through menus and options. On the Home screen, use for quick access to your Favorites, easyedge, Calendar and My Menu.
8. **Menu/OK Key** Lets you access the phone's main menu and also selects the highlighted choice when navigating through a menu or function.
9. **Right Soft Key** Use to access the Contacts menu from the Home screen or the function immediately above it.
10. **CLR Key** Deletes single spaces or characters with a quick press; press and hold to delete the entire text entered in a text field. You can also use this key to back you out of menus, one level at a time.
11. **PWR/END Key** Use to turn the power on/off and to end a call. Also, use to exit from any function and return to the Home screen.
12. **Lock Mode Key** Use to lock and unlock the phone (from the Home screen, press and hold for about 3 seconds).
13. **Microphone** Lets callers hear you.





1. **Earphone Jack** Allows the use of a hands-free headset.
2. **Volume Keys** Use to adjust the Master Volume from the Home screen and the Earpiece volume during a call.
3. **Charger/Accessory Port** Connects the phone to the battery charger or other available accessories.

#### Charging with your PC via USB cable

 
You can use your computer to charge your phone. Connect one end of a USB cable to the Charger/Accessory port on your phone and the other end to a high-power USB port on your PC. When charging a USB hub, be sure to use a powered USB hub.

4. **Camera Lens** Used to take photos. Keep it clean for optimal photo quality.

## Phone Overview

### Qwerty Keypad

Your phone features a QWERTY keypad, specifically designed for easy and comfortable text entry. The QWERTY keypad uses a standard layout.

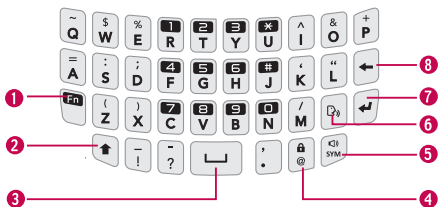

- 1. Function Key** allows you enter the alternate character (such as \$ for the W key) on the QWERTY keypad (See "Entering and Editing Information" on page 28 for more information). To lock the Function Key (as when entering a series of numbers or alternate characters), press it twice.
- 2. Shift Key** lets you change letter capitalization when entering text.
- 3. Space Key** lets you enter a space.
- 4. Lock Mode Key** allows you to lock the phone. Press the Right Soft Key, then the OK Key to unlock the phone.
- 5. Symbols/Speaker Key** lets you enter symbols when entering text. Pressing this key from Home screen allows you to turn the speaker on or off.
- 6. Voice Command Key** allows you to begin the Voice Command function.
- 7. Enter Key** lets you move the cursor to the beginning of the next line when entering text.
- 8. Back Key** Deletes single spaces or characters with a quick press; press and hold to delete the entire text entered in a text field. You can also use this key to back you out of menus, one level at a time.

# Menu Overview

## Contacts

1. New Contact
2. Contact List
3. Favorites
4. Groups
5. Speed Dials
6. My vCard

## Messaging

1. New Text Message
2. New Picture Message
3. Inbox
4. Outbox
5. Drafts
6. Voicemail
7. Templates
8. Settings
  1. All Messages
  2. Text Message
  3. Picture Message

4. Edit Voicemail Number
9. Delete All
  1. Delete Inbox
  2. Delete Outbox
  3. Delete Drafts
  4. Delete All Messages

## Call History

1. Missed Calls
2. Received Calls
3. Dialed Calls
4. All Calls
5. Call Timer
6. Data Counter

## Multimedia

1. Take Photo
2. Record Voice
3. Images

1. My Images
2. Default
4. Sounds
  1. My Sounds
  2. Default

## easyedge

## My Schedule

1. Alarm Clock
2. Calendar
3. Notepad

## Browser

## Tools

1. Voice Command
  1. Start Command
  2. Command Mode

## Menu Overview

- 3. Announce Alert
- 4. Train Word
- 5. Best Match
- 2. Calculator
- 3. My Menu
- 4. Ez Tip Calculator
- 5. World Clock
- 6. Stopwatch
- 7. Unit Converter
  - 1. Currency
  - 2. Area
  - 3. Length
  - 4. Mass
  - 5. Temperature
  - 6. Volume
  - 7. Velocity

### Settings

- 1. Sound
  - 1. Ringtones
    - 1. All Calls
    - 2. Caller ID
    - 3. No Caller ID
    - 4. Restricted Calls
  - 2. Volume & Vibrate
    - 1. Master Volume
    - 2. Keypad
    - 3. Earpiece
    - 4. Speaker
    - 5. Vibrate Level
- 3. Message Alerts
  - 1. Text Message
  - 2. Picture Message
  - 3. Voicemail
  - 4. All Messages

- 5. Message Reminder
- 4. Alert Type
- 5. Service Alerts
  - 1. Minute Beep
  - 2. Call Connect
  - 3. Back to Top
  - 4. Low Battery
- 6. Power On/Off Tone
- 2. Display
  - 1. Wallpaper
    - 1. My Images
    - 2. Default
  - 2. Banner
  - 3. Backlight
    - 1. Display Timer
    - 2. Keypad Timer
    - 3. Brightness
  - 4. Menu Style
  - 5. Languages (Idiomas)

- 6. Clocks & Calendar
- 7. Font Settings
  - 1. Font Type
  - 2. Dial Font Style
  - 3. Dial Font Size
- 8. Word Prediction
- 3. Security
  - 1. Lock Phone
  - 2. Restrictions
  - 3. Emergency Numbers
  - 4. Change Lock Code
  - 5. Master Reset
- 4. Call Settings
  - 1. Answer Options
  - 2. Auto Retry
  - 3. One Touch Dial
  - 4. Voice Privacy
  - 5. Airplane Mode
  - 6. TTY Mode

- 5. Bluetooth
  - 1. Paired Devices
  - 2. Power
  - 3. My Visibility
  - 4. My Bluetooth Info
- 6. System
  - 1. Network
    - 1. System Select
    - 2. Set NAM
    - 3. Auto NAM
    - 4. Serving System
  - 2. Location
- 7. Web Access Prompt
- 8. Memory
  - 1. Reserved Memory
  - 2. Multimedia

- 9. Phone Info
  - 1. My Number
  - 2. Current Battery Level
  - 3. ESN/MEID
  - 4. Icon Glossary
  - 5. Version

Tone Room  
Deluxe

My Contacts  
Backup

PAC-MAN

# Getting Started with Your Phone

## The Battery

The phone comes with a rechargeable battery. The battery charge level is shown at the top right corner of the LCD screen.

### Note

It is important to fully charge the battery before initial use of the phone.

## Installing the Battery

1. Remove the battery cover by pressing down on at the top-center of the battery cover, then sliding the cover downward.
2. Align the battery contacts with the phone terminals at the top of the battery compartment (see image 1), then snap the rest of the battery into place (see image 2).

3. Align the battery cover and slide it upward until it clicks into place (see image 3).



## Removing the Battery

1. Turn the phone off.
2. Remove the battery cover by pressing down on at the top-center of the battery cover, then sliding the cover downward.
3. Use the fingertip cutout at the bottom of the battery compartment to lift the battery out.

## Charging the Battery

Use the charger provided with your phone.

**Warning!** Use only the charger provided with the phone. Using any charger other than the one included with the UN200 may damage your phone or battery.



### Notice

Please make sure that the 'B' side faces up before inserting a charger or USB cable into the charger/accessory port of your phone.

1. Plug one end of the adapter into the phone's charger/accessory port and the other end into an electrical outlet.


The charge time varies depending upon the battery level.

## Battery Charge Level

The battery charge level is shown at the top right corner of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in up to three ways: sounding an audible tone, blinking the battery icon, and displaying a warning message. If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.


## Turning the Phone On and Off

### Turning the Phone On


1. Install a charged battery or connect the phone to an external power source (if the battery is low).
2. Press  for about 2 seconds until the LCD screen lights up.

## Getting Started with Your Phone

### Turning the Phone Off

1. Press and hold  until the LCD screen turns off.

### Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon  -- the more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.



#### Note

The call quality may also be affected by the places where you are and weather/ambient conditions.

### Screen Icons



To see the icon glossary, go to **Menu -> Settings -> Phone Info -> Icon Glossary** on your phone.


### Making Calls

1. With the phone turned on, use the keypad to enter the phone number (include the area code if needed).
2. Press  .
3. Press  to end the call.


#### Note

If outgoing calls are restricted, you can only dial phone numbers saved as Emergency Numbers or in your Contact List. To turn off this function:

**Menu ->  Settings -> **



**Security -> Enter the Lock Code -> **

**Restrictions ->  Outgoing Calls ->**


** Allow All ->Enter the Service Lock Code.**





## Correcting Dialing Mistakes

If you make a mistake while dialing a number, press  once to erase the last digit entered or press and hold  down for 2 seconds to go back to the Home screen.

## Redialing Calls




1. Press  twice to redial the number from the last call. If you press once, the last 150 calls (50 missed, 50 received and 50 dialed) stored in the call history list are displayed. You can also select any of these to redial.

## Receiving Calls

1. When the phone rings and/or vibrates, press  to answer (depending on your Answer Options).
2. Press  to end the call.


### Tip

To set Answer Options:

Menu ->  Settings ->  Call Settings ->  Answer Options.

Choose from the following options:  
**SEND Key Only / Any Key/  
 Auto with Handsfree**

### Note

If you unlock the phone and press  (the Volume Keys) while the phone is ringing, the ringing and/or vibration is muted for that call.



## Quick Access to Convenient Features

### Lock Mode



Sets your phone to require a 4-digit password in order to use the phone.

#### Note

Until you change it, the default lock code/password is the last 4 digits of your phone number.

To quickly lock your phone press  for three seconds and then enter your Lock Code. To unlock, press the Right Soft Key  **Unlock** and enter the Lock Code.

### Mute Function







The Mute function is available during a phone call. To quickly activate Mute during a call, press the Left Soft Key  **Mute**. To cancel the function, press the Left Soft Key  **Unmute**.

### Quick Volume Adjustments

Use the Volume Keys to adjust the Master Volume from the Home screen and the Earpiece volume during a phone call. The upper Volume Key increases the volume and the lower Volume Key decreases the volume.

#### Note

Keypad Volume can be adjusted through the Volume & Vibrate sub-menu of the Sound settings menu.

**Menu** ->  **Settings** ->   
**Sound** ->  **Volume & Vibrate**  
 ->  **Keypad**. Use  to adjust the volume level and press .

### Call Waiting

Your cellular service may offer call waiting. While a call is in progress, a beep indicates another incoming call. When call waiting is enabled, you may put

the active call on hold while you answer the other incoming call. Check with your cellular service provider for information about this function.

1. During a call, press **SEND** to answer the incoming call (Call Waiting).
2. Press **SEND** again to switch between calls.

## Caller ID

Caller ID displays the phone number or name of the incoming call. If the caller's identity is stored in Contacts, the name will appear along with the phone number. Check with your service provider for availability.

## Speed Dialing

Speed Dialing is a convenient feature that allows you to make phone calls quickly. A number key

can be assigned to a specific phone number. Then, by pressing and holding down a number key, your phone will recall the phone number and dial that phone number for you. Speed Dial Number 1 is set to your Voicemail by default and is unchangeable.

### Dialing Single Digit Speed Dials (from 2 to 9)

Press and hold the Speed Dial number.

OR

Enter the Speed Dial number and press **SEND**.

### Dialing Double Digit Speed Dials (from 10 to 99)

Press the first digit and then press and hold the key of the second digit.

OR

Enter the first and second digits and press **SEND**.

# Entering and Editing Information

## Text Input

You can customize and enter text in many of the functions in your phone, including, but not limited to the Banner, Calendar, Contacts and messages. While entering text, the following are your options:

### Key Functions



#### Left Soft Key:

Press to select one of the following text input modes:

**T9 Word:** T9WORD/  
T9Word/ T9word

**Abc:** ABC/ Abc/ abc

**123**

**Symbols**



**Shift Key:** Press to change capitalization

**T9Word :** T9Word ->

T9WORD -> T9word

**Abc :** Abc -> ABC -> abc



**Space:** Press to complete a word (in T9 mode) and insert a space.



**Clear:** Press to delete a single space or character. Press and hold to delete all of the text entered.



**FN Key:** Press to enter corresponding special characters on the QWERTY keypad one at a time. Press this key twice to lock it.


# Contacts in Your Phone's Memory

## The Basics of Storing Contacts Entries

1. From the Home screen, enter the phone number you want to save (up to 48 digits).
2. Press **OK** **Save**.
3. Select either **Add New Contact** or **Update Existing**.

### Note


Use **Update Existing** to add another phone number to a contact already stored in memory.

4. Use  to highlight a Label and press **OK**.  
**Mobile 1/ Home 1/ Office 1/ Mobile 2/ Home 2/ Office 2/ Fax**
5. Enter a name for the phone number (up to 32 characters) and press **OK** **Save**.  
A confirmation message is displayed briefly.

## Phone Numbers With Pauses

When you call automated systems, such as voicemail or credit billing numbers, you often have to enter a series of numbers to navigate through the system. Instead of entering these numbers by hand, you can store the numbers in your Contacts separated by special pause characters (W, P). There are two different types of pauses you can use when storing a number:

### Wait (W)








The phone stops dialing until you press the Left Soft Key  **Release** to advance to the next string of digits.

### Pause (P)












The phone waits 2 seconds before sending the next string of digits.

## Contacts in Your Phone's Memory

### Storing a Number with Pause or Wait

1. Press  Menu.
2. Press  Contacts.
3. Press  New Contact.
4. Enter a name (up to 32 characters) and enter a number.
5. While entering a number, press the Right Soft Key  Options.
6. Press  Wait or  Pause.
7. Enter the additional number(s) and press  Save.




### Adding a Pause or Wait to an Existing Number

1. Press  Menu.
2. Press  Contacts.
3. Press  Contact List.
4. Use  to highlight the Contact entry to edit, then press  View.
5. Press the Left Soft Key  Edit.
6. Use  to highlight the number.
7. Press the Right Soft Key  Options.
8. Press  Wait or  Pause.
9. Enter the additional number(s), and press  Save.





## Searching Your Phone's Memory

The UN200 phone is able to perform a dynamic search of the contents in your phone's Contact List. A dynamic search compares entered letters or numbers on the keypad against the entries in your Contacts. A matching list is displayed in descending order. You can then select a number from the list to call or view it.





### Searching by Letter

1. Press  **Menu**.
2. Press  **Contacts**.
3. Press  **Contact List**.
4. Start entering the Contact name. The matching entries will be automatically highlighted.

## Scrolling Through Your Contacts

1. Press  **Menu**.
2. Press  **Contacts**.
3. Press  **Contact List**.
4. Use  to scroll through the list.

## Contacts Options



1. Press  **Menu**.
2. Press  **Contacts**.
3. Press  **Contact List**.
4. Highlight a contact and press the Right Soft Key  **Options**.
5. Select an option.

## Contacts in Your Phone's Memory

- 1 R** **Send Message:** Send a text message or picture message to the selected contact.
- 2 Y** **Delete:** Delete the selected entry in your Contacts.
- 3 E Y** **Edit:** Edit the selected contact information.
- 4 F** **Delete Multiple:** Choose from **Selective/ All** to delete multiple entries at one time.
- 5 G** **Send via Bluetooth:** Send a contact(vCard) via Bluetooth®.
- 6 H** **Set Speed Dial/ Remove Speed Dial:** Set the contact as a Speed Dial or remove the contact from Speed Dial.
- 7 C** **Set as Favorite:** Set the contact as a Favorite.

### Making a Call From Your Phone's Memory

Once you have stored phone numbers in your Contacts, you can place calls to those numbers quickly and easily.

- Press the Right Soft Key  **Contacts**, highlight a number and press  .
- Use Speed Dialing.



### From Contacts

1. Press **OK** **Menu**.
2. Press **Contacts**.
3. Press **Contact List**.
4. Use **↓** to highlight the Contact entry, then press **OK** **View**.
5. Use **↓** to highlight the phone number.
6. Press **SEND** to place the call.

### From Call History

1. Press **OK** **Menu**.
2. Press **Call History**.
3. Use **↓** to highlight the type of recent call, then press **OK** **Missed Calls/Received Calls/Dialed Calls/All Calls**.
4. Use **↓** to highlight the call entry.
5. Press **SEND** to place the call.

### Speed Dialing

For a single-digit Speed Dial, press and hold the digit or press the digit, then press **SEND**. For a double-digit Speed Dial, press the first digit and hold the second digit or press the first and second digits, then press **SEND** to call.

# Phone Menus

## Contacts

The Contacts menu allows you to store names, phone numbers and other information in your phone's memory.

### Note

When you access your Contacts, the number in parentheses represents the number of entries you have stored (up to 1000).

### 1. New Contact

Allows you to add a new contact to your Contact List.

1. Press **OK**, **R**, **R**.
2. Enter the name, then use **^** to highlight the field you wish to store the contact information in.
3. Enter any contact information you wish.

4. When you are finished entering the desired contact information, press **OK** **Save** to save the entry into your Contact List.


### Note

Using this sub-menu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry.



### 2. Contact List

Allows you to view your Contact List.

1. Press **OK**, **R**, **R**.
2. Choose from the following options:
  - Use **^** to scroll through your Contacts alphabetically.




- Press the Right Soft Key  **Options** to select from the following options:

**Send Message/ Delete/  
Edit/ Delete Multiple/  
Send via Bluetooth/  
Set Speed Dial/ Set as  
Favorite**



- Press  **View** to view the highlighted contact's information.
- Press the Left Soft Key  **New** to create a new Contact.


### 3. Favorites

Allows you to create and view your Favorites contact list.




1. Press , , .
2. Press  **Assign** to add a favorite.

3. Select whether you want to add a favorite from your **Contacts/ Groups**.

4. Use  to scroll through your Contacts or Groups alphabetically and press  **Select**.

5. Press the Left Soft Key  **Done** to add the contact(s) to your Favorites.

Once you have added Contacts to the Favorites list, the following options will become available in the Favorites menu:

- Left Soft Key  : **[Message]**
- Right Soft Key  : **[Options]**  
View/ Remove/ Remove Multiple
- OK Key  : **[Chat]**

## Contacts

### 4. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a whole group.

1. Press **OK**, **↑**, **4**.
2. Choose from the following options:
  - Use **↑** to highlight a group, then press **OK** **View** to view the contacts in the selected group.
  - Press the Left Soft Key **≡** **New** to add a new group.
  - Use **↓** to highlight a group, then press the Right Soft Key **≡** **Options** to choose from the following options:  
**Delete/ Send Message/  
 Rename Group/ Group  
 Ringtone/ Delete All/ Set  
 as Favorite**

### 5. Speed Dials

Allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.

1. Press **OK**, **↑**, **5**.
2. Use **↓** to highlight the desired Speed Dial location (or press the Speed Dial digit on the keypad) and press **OK** **Assign**.
3. Use **↓** to highlight the Contact.
4. Use **< >** to choose a number, then press **OK**.  
 A confirmation message is displayed.

## Contacts/ Messaging

### 6. My vCard

Allows you to edit your vCard, which you can then send to others via Bluetooth.

1. Press **OK**, **↑**, **↓**, **←**.
2. Use **↑** to highlight the field you wish to edit and press the Left Soft Key **←** **Edit**.
3. Edit the information as desired and press **OK** **Save**.

#### Note

You cannot edit the Mobile 1 field but you can add additional contact info.

### Messaging

The phone can store up to 835 messages, including a maximum of 500 SMS, 100 MMS, and 100 MMS notification messages in the Inbox; 50 SMS and 50 MMS in the Outbox; and 15 SMS and 20 MMS in the Drafts folder. The information stored in the message is determined by phone model and service capability. Other limits, such as available characters per message, may exist. Please check with your service provider for system features and capabilities.

### 1. New Text Message

Allows you to send text messages and e-mail messages.

# Messaging

## The Basics of Sending a Text Message

1. Press **OK**, **ⓧ**, **ⓧ**.
2. Enter the recipient's address in the **To** field.
3. Press **OK** to access the text field.
4. Use the keypad to enter your message.
5. Press **OK** **Send**.

A confirmation message is displayed.

## Select Recipient(s) Using Options

1. Press **OK**, **ⓧ**, **ⓧ**.
2. With the **To** field highlighted, press the Right Soft Key **ⓧ** **Options**.
3. Use **ⓧ** to highlight an option and press **OK**.

**Contacts** To select a recipient from your Contact List.

**Call History** To select a recipient from your Call History.

**Recent Messages** Choose **Inbox/ Outbox** to select a recipient from your Recent Messages.









**Groups** Select a recipient from your Groups.

**Cancel** Cancels editing your message.

4. Complete your message and send or save it.

## Customize Your Text Message Using Options

While you are composing the text of a message, you have various options to customize the text.

1. Press , , .
2. Enter the recipient's address.
3. Use  or press  to access the text field.
4. Press the Right Soft Key  **Options**.
5. Use  to highlight an option and press .

**Insert** Templates/ Signature/  
Name & Number

**Save As** Drafts/Templates

**Priority Level** High/ Normal

**Callback Number** On/ Off






**Cancel** Cancels editing your  
message.

6. Complete your message and send or save it.

## Message Icon Reference

### Inbox


 
 

---

	New/Unread Text/Picture Message
	Opened/Read Text/Picture Message
	New/Unread Notification Message
	Opened/Read Notification Message
	High Priority Message

---

### Sent

---

	Failed Text/Picture Message
	Failed Multiple Text/Picture Messages
	Sent Text/Picture Message
	Multiple Sent Text/ Picture Messages

---

### Drafts

---








	Draft Text Message
	Draft Picture Message

---

# Messaging





## 2. New Picture Message

Allows you send messages with text, image and audio attachments.

1. Press **OK**, , .
2. Enter the recipient's address, or press the Right Soft Key  **Options** to search recent contacts and press **OK** to select the desired contact.
3. Use  to access the **Subject** and **Text** fields.
4. Enter your subject and message.
5. Highlight the **Image** field, press the Left Soft Key  **Add**, and press **OK** to select: **Image/ Take Photo**
6. If **Image** is chosen, use  to highlight a file, then press the Left Soft Key  **Set**.

OR

If **Take Photo** is chosen, take a picture of the subject and press **OK** **Set**.

7. Highlight the **Audio** field, press the Left Soft Key  **Add** to enter **My Sounds** and select from the following options:
  - Press the Left Soft Key  **Voice** to record new audio.
  - Press **OK** **Play** to play the highlighted file.
  - Press the Right Soft Key  **Set** to attach the highlighted file.
8. Press the Right Soft Key  **Options** to customize the message fields. The following options are available:





- \* Editing the To: field  
**Contacts/ Call History/  
 Recent Messages/ Groups/  
 Online Album/ Cancel**
- \* Editing the Subject/Text field  
**Preview/ Add/ Go to/ Save  
 As/ Priority Level/ Remove/  
 Cancel**
- \* Editing the Image/Audio field  
**Preview/ Add Slide/ Go to/  
 Save As Draft/ Priority Level/  
 Remove/ Cancel**

12. Press  **Send.**

### 3. Inbox

The phone can alert you in several ways when you receive a new message, including:

- Displaying a notification message on the screen.
- Displaying the message icon  /  on the status bar (It blinks when the message is urgent).
- Ringing and/or Vibrating (depending on the Volume settings).







Received messages are displayed from newest to oldest.

#### Viewing Your Inbox

Up to 700 (500 SMS, 100 MMS and 100 MMS Notifications) messages can be stored in the Inbox.

1. Press , , .

## Messaging

- Use  to highlight a message.
- Press the Left Soft Key  **Reply/ D-load** to reply to the message or download the attachment, the Right Soft Key  **Options**, or  **View/ Chat** to view the message.
- Once you select the **View** option for the message, press the Left Soft Key  **Reply** to reply or the Right Soft Key  **Options** to view the following additional options.

**Delete** Deletes the selected message.

**Forward** Forwards the message to other destination address(es).

**Save Contact** Stores the callback number, e-mail address, and numbers in the received message into your Contacts.

**Save To Templates** Stores the message as a template for future messages.

**CallBack** Calls the number in the received message.

**GoTo URL** Connects you to the URL included in the message (if available).

**Lock** Locks the selected message so that it cannot be deleted.

The following options are available in the Options menu:

For text messages: **View/ Change View Type/ Delete/ Forward/ Save Contact/ Lock/ Message Info/ Delete Multiple**

For picture messages: **Delete/ Forward/ Save Contact/ Lock/ Message Info/ Delete Multiple**

**Message Info** Shows information about the message, such as type, priority, and status.

#### Note

For picture messages:


**Play Again/ Delete/ Reply as Picture Message\*/ Forward/ Save Contact/ Save Media/ Lock/ GoTo URL/ Extract Address/ Message Info**

\* If the Reply Setting (Menu > Messaging > Settings > All Messages > Reply Setting) is set to Text Message Only.


## 4. Outbox


Up to 100 sent messages (50 SMS and 50 MMS) can be stored in the Outbox folder. View the contents of sent messages and verify whether the transmission was successful (if verification is supported by network).

1. Press , , .

2. Use  to highlight a sent message.



3. Press the Left Soft Key 

**Resend** to resend the message to the recipient, 

**View** to view the message or the Right Soft Key 

**Options** to access the following options:

**Delete/ Forward/ Save Contact/ Lock/ Message Info/ Delete Multiple**

3. While viewing the selected sent message, press the Left Soft Key  **Resend** to resend the message to the recipient, or the Right Soft Key  **Options** to access the following additional options:

## Messaging

**Delete** Deletes the selected message.

**Forward** Forwards the message to other destination address(es).

**Save Contact** Stores the callback number, e-mail address, and numbers in the sent message into your Contacts.

**Save To Templates** Stores the message as a template for future messages.

**Lock** Locks the selected so that it cannot be deleted.

**Message Info** Shows information about the message, such as type, priority, and status.





### Note



For picture messages:

Play Again/ Delete/ Forward/  
Save Contact/ Save Media/ Lock/  
Extract Address/ Message Info

## 5. Drafts

Displays saved draft messages.

1. Press , , .
2. Use  to highlight a Draft message. Options available are:

- Press  **Edit** to continue editing the message.
- Press the Right Soft Key  **Options** for the following options:

**Delete** Deletes the selected message from the Drafts folder.

**Save Contact Add New Contact/ Update Existing**

**Lock** Locks a message so that it cannot be deleted.

**Delete Multiple** Selective/  
All

## 6. Voicemail

Allows you to access new voice messages recorded in your voicemail. Your phone will notify you when you receive a new voice message.

### Checking Your Voicemail

1. Press **OK**, **Ⓜ**, **Ⓜ**.
2. Choose from the following options:
  - Press the Left Soft Key **Clear** to clear the voicemail counter.
  - Press **SEND** to listen to the message(s).
  - Press the Right Soft Key **Exit** to return to the Messaging menu.

## 7. Templates

Allows you to display, edit, and add text phrases. These text phrases allow you to reduce manual text input into messages.








1. Press **OK**, **Ⓜ**, **Ⓜ**.
2. Press the Left Soft Key **New** to create a new template.
3. Enter text and press **OK** **Save** to save the template.
4. Use **Ⓜ** to highlight a template and press the Right Soft Key **Options**, then highlight an option and press **OK** to select:

**Edit/ Delete**

# Messaging

## 8. Settings

Allows you to configure Messaging settings.

1. Press , , .
2. Use  to highlight **All Messages/ Text Message/ Picture Message/ Edit Voicemail Number** and press .
3. Use  to highlight one of the sub-menus and press  to select it.

### Message Settings Sub-Menu Descriptions

#### All Message

1. **Reply Setting (Text Message Only/ Selection)**  
With **Text Message Only** on, replies to messages will automatically start as text messages. With **Selection** on,

you will have the choice to reply with a Text or Picture Message.

2. **Auto Save (Auto Save/ Prompt/ Do Not Save)**

You can choose to automatically save messages in the Outbox, get prompted if you want to save the messages, or not save the messages at all.

3. **Auto Delete (On/ Off)**

With this feature on, read messages are automatically deleted when you exceed the storage limit.

4. **Entry Mode (T9Word/ Abc/ 123)**

Allows you to select the default input method.

5. **Signature (On/ Off/ Edit)**

Allows you to make/edit a signature to automatically send with your messages.

## Text Message

### 1. Auto View (On/ Off)

When set to On, new messages will automatically display on your screen when they are received.

### 2. Callback Number (On/ Off/ Edit)

With this feature on, you can input the callback number that will be automatically included when you send a message.

## Picture Message

### 1. Auto Receive (On/ Off)








With this set to On, Multimedia content will be automatically downloaded when a new picture message is received.

## Edit Voicemail Number

Allows you to manually enter the access number for your Voicemail Service. This feature should only be used when a VMS (Voicemail Service) access number is not provided from the network.

## 9. Delete All

Allows you to erase the messages stored in your Inbox, Outbox, or Drafts message folders. You can also erase all messages at the same time.


1. Press , , .
2. Use  to highlight Delete Inbox/ Delete Outbox/ Delete Drafts/ Delete All Messages and press .
3. Use  to highlight Yes/ No and press .

# Call History

## Call History

The Call History menu has lists of phone numbers and/or Contacts entries for calls you missed, received, and dialed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

### Note

To quickly view a list of all your recent calls, press SEND Key  from the Home screen.

### 1. Missed Calls

Allows you to view the list of missed calls; up to 50 entries.

1. Press , , .
2. Use  to highlight an entry.





### 2. Received Calls

Allows you to view the list of received calls; up to 50 entries.

1. Press , , .
2. Use  to highlight an entry.

### 3. Dialed Calls

Allows you to view the list of dialed calls; up to 50 entries.

1. Press , , .
2. Use  to highlight an entry.

### 4. All Calls

Allows you to view the list of all missed, received and dialed calls; up to 150 entries.

1. Press , , .
2. Use  to highlight an entry.


### 5. Call Timer

Allows you to view the duration of selected calls, by type.


1. Press , , .



## Call History/ Multimedia






- Use  to scroll through the list.

**Last Call/ Home Calls/ Roam Calls/ All Calls**

- Press the Left Soft Key .  
Reset to reset the call timer for the highlighted call type.

### 6. Data Counter





Allows you to view the amount of received and sent data.

- Press , , .
- Use  to scroll through the list.  
**Received Data/ Sent Data/ All Data**
- Press the Left Soft Key .  
Reset to reset the data counter for the highlighted data type.




## Multimedia

View, take, and share your digital pictures and audio right from your wireless phone.

### 1. Take Photo

- Press , , .
- Press  to access the following camera options (if necessary):
  - **Brightness** Allows you to adjust the brightness level.
  - **Resolution** 480X640/ 240X320/ 144X176/ 120X160
  - **Capture** Allows you to take a picture.
  - **Zoom** Allows you to adjust the Zoom level (not available at the highest resolution).
  - **Multishot** Off/ 3 shots/ 6 shots

## Multimedia

3. Press the Left Soft Key  **Gallery** to access **My Images** or press the Right Soft Key  **Options** for the following options:
  - **Options Tab**
    - Color Effects** Color/ Sepia/ Mono/ Negative
    - White Balance** Auto/ Sunny/ Cloudy/ Tungsten/ Fluorescent
    - Night Mode** On/ Off
    - Self Timer** Off/ 3 Seconds/ 5 Seconds/ 10 Seconds
    - Frame** On/ Off
  - **Settings Tab**
    - Quality** Fine/ Normal/ Economy
    - Shutter Sound** None/ Sound 1/ Sound 2/ Sound 3/ Say Cheese
    - Auto Save** On/ Off
    - Send Reminder** On/ Off
    - Reset** Yes/ No
4. Take a picture by pressing  **Capture**.
5. Select **Send**, **Send to Online Album**, or **View** after the picture is taken. **Send** will open a new Picture Message. **Send to Online Album** will send the picture to your online album for storage. **View** will offer the following options:
  - **Save** Allows you to save the photo to your phone.
  - **Gallery** Saves the photo and opens your My Images gallery.
  - **Send** Allows you to send by Picture Message, via Bluetooth, or to your Online Album.
  - **Set As** Allows you to set as the Wallpaper or as a Picture ID.
  - **Delete** Deletes the photo and returns to the Camera so you can take another picture.

## 2. Record Voice

Allows you to add, listen to, and erase short verbal reminders.

1. Press , , .
2. Press **Record** to record a new voice memo.
3. Talk into the microphone, then press **Stop**.
4. Once you've stopped the recording, press the Right Soft Key **Options** to access the following:

**Set As/ Rename/ Delete**

OR

Press the Left Soft Key **Save** to save the file. The default memo title is the date and time of recording.

OR

Press **Send** to send the file in a Picture Message or via Bluetooth.

## 3. Images

Allows you to view the saved images on your phone. You can also select images to customize your phone's Main Screen or Picture ID.

1. Press , , .
2. Use to highlight **My Images/ Default** then press .
3. Use to highlight an image. Once you have an image highlighted, you can:

- Press the Right Soft Key **Options** to access the following options (If you select **Edit**, please see the **Edit Options** section for available Edit options.):

## Multimedia

Set As/ Slide Show/ Edit/  
Image Effects/ Take Photo/  
Delete/ Rename/  
Lock/Unlock/ List View/  
File Info/ Sort By

- Press **OK** **View** to view the selected image.
- Press the Left Soft Key **Send** to send the selected image to somebody else.

### Edit Options

**Zoom** Allows you to zoom in/out of the image. Please note, it does not save the resulting image.

**Rotate** Rotates an image in steps of 90 degrees.

**Flip** Flips an image horizontally or vertically.

**Enhancement** Automatically enhances an image by enhancing white balance, contrast and local boost.

**Brightening** Brightens the image.

**White Balancing** Performs an automatic white balance adjustment for the image.

**Local Intensity Boost** This effect enhances images taken in poor light environments. The effect is especially useful when taking photos in direct light or for enhancing details in dark images.

## 4. Sounds

Allows you to access saved audio clips or create new ones on your phone.

1. Press **OK**, **F1**, **F1**.
2. Press the Left Soft Key **Voice** to record an audio clip.
  - Press the Left Soft Key **Sounds** to access My Sound.

3. Press **OK** **Record** to begin recording.
4. While recording, press the Left Soft Key **Pause** to pause, or **OK** **Stop** to stop recording.
5. When you are finished recording, press the Left Soft Key **Save** to save the audio clip, **OK** **Send** to send the audio clip to somebody else, or press the Right Soft Key **Options** to access additional options:  
**Set As** (Ringtone/ Contact ID/ Alert Sounds)/ **Rename/ Delete**.

OR

2. Use **Left Arrow** to highlight **My Sounds/ Default** and press **OK**.

3. Use **Right Arrow** to highlight the audio clip. The following options are available:

- Press the Left Soft Key **Send** to send the selected audio clip to somebody else. Please note that this option is not available for files in the Default folder.
- Press **OK** **Play** to play the highlighted audio clip.
- Press the Right Soft Key **Options** to access the following options:

For **My Sounds** files:

**Set As/ Record Voice/ Delete/Rename/ Lock/Unlock/ File Info/ Sort By**

For **Default** files:

**Set As (Ringtone/ Contact ID/ Alert Sounds)**

# easyedge<sup>SM</sup>

## easyedge<sup>SM</sup>

**easyedge<sup>SM</sup>** allows you to do more than just talk on your phone. **easyedge<sup>SM</sup>** is a technology and service that allows you to download and use applications on your phone. With **easyedge<sup>SM</sup>**, it is quick and easy to personalize your phone to suit your lifestyle and tastes. Just download the applications that appeal to you. From ringtones and wallpapers to games and productivity tools, you can be assured you will find something useful, practical, or downright entertaining. There are new applications constantly available for your use.

### Downloading Applications

You can download applications and use **easyedge<sup>SM</sup>** where service is available.


### Incoming Calls

When using applications, an incoming call will automatically pause the application and allow you to answer the call. When you complete your call, you can resume using the application.

## 1. easyedge Apps

1. Press , .

### Shortcut

From the Home screen, press the down arrow key  to start **easyedge<sup>SM</sup>**.

## My Schedule

### My Schedule

#### 1. Alarm Clock

Allows you to set up to five alarms. At the alarm time, any set alarm can sound (depending on your Master Volume settings) the tone of your choice, and an alarm message will be displayed on the LCD screen.

1. Press **OK**, **6**, **H**, **R**.
2. Use **↕** to highlight the alarm you wish to set, then press **OK** to select it.
3. Highlight **Set Time** and press the Left Soft Key **≡** **Set** to set an alarm time. Once you set the desired time, press **OK**.
4. Use **↕** to highlight **Repeat** (recurrence setting).

5. Press the Left Soft Key **≡** **Set** to select one of the following.  
**Once/ Daily/ Mon - Fri/ Weekends**
6. Use **↕** to highlight **Ringtone**, press the Left Soft Key **≡** **Set** and browse for a ringtone.
7. Press **OK** **Save**.

#### 2. Calendar

Allows you to store and access your agenda(s). Simply enter your appointments in the Calendar, and your phone can (depending on your settings) alert you with a reminder.

1. Press **OK**, **6**, **H**, **T**.
2. Use **↕** to highlight a day.

## My Schedule

- Moves to the previous day.
- Moves to the next day.
- Moves to the previous week.
- Moves to the next week.

3. Press the Left Soft Key **New**.

4. Use  to highlight the field you wish to edit, then press the Left Soft Key **Set** to edit the following schedule information:

- Subject
- End Time
- Repeat
- Ringtone
- Start Time
- Reminder
- Until

5. Press  **Save**.

### 3. Notepad

Allows you to add, read, edit, and erase notes to yourself.


1. Press , , .
2. Press the Left Soft Key **New** to write a new note.
3. Type the note, then press  **Save**.




A confirmation message displays briefly and your list of saved notes is displayed.






## My Schedule/ Browser

### Viewing a Notepad Entry

1. Access Notepad and highlight a saved note.
2. Press the Right Soft Key  **Options** to access the following available options:

-  **Delete**
-  **Edit**
-  **Delete All**

OR



To edit a note, highlight the entry, then press  **View** and press the Left Soft Key  **Edit**. You can also press the Right Soft Key  **Delete** to delete the note.

### Browser


The Browser feature allows you to view Internet content. Accessibility and selections within this feature are dependent upon your service provider. For specific information on the Web, contact your service provider.

### Start Browser

Allows you to initiate a Web session.

1. Press , .
2. Your default home page will load.








 





### Ending an Web Session

End a Web session by pressing .

## Browser

### Browser Menu

The Browser Menu provides the following toolbar options:

- **Home**  Returns you to the Homepage.
- **Back**  To go back to the previous page.
- **Forward**  If available, takes you back to the next page.
- **Bookmarks**  Takes you to the Bookmarks menu where you can add, edit, and delete your bookmarks.
- **Go to URL**  Allows you to enter a Web address to visit.
- **Refresh**  Allows you to reload the current Web page.
- **History**  Displays a list of visited web pages.
- **Clear Memory**  Allows you to clear the memory.
- **Search**  Directs you to the Google search engine.
- **Send Link**  Allows you to send the link of the current page via a text message.
- **Show URL**  Shows you the current URL.
- **Save Items**  Allows you to save items from the web page.
- **Settings**  Allows you to configure the following Browser settings:
  - Homepage** Allows you to set your Homepage.
  - Downloads** Allows you to configure whether you want to enable or disable image, background, and object downloads.

## Browser/ Tools



**Restart Browser** Allows you to restart the Browser.

**Scroll Mode** Allows you to customize the scrolling settings.

**Send Referrer** Allows you to turn the HTTP Send Referrer Header on or off.

**Key Press Timeout** Set the key press timeout.

**Connection Timeout** Set the connection timeout.

- **Advanced**  Shows you the information of the Browser, including the version and license information.
- **Exit**  Allows you to exit the Browser.

## Tools

Your phone's tools include: Voice Command, Calculator, My Menu, Ez Tip Calculator, World Clock, Stopwatch, and Unit Converter.


### 1. Voice Command

Allows you to use voice commands to use your phone, including to make phone calls quickly and easily by voice. This feature is useful for those who are driving or blind. It also announces time information by voice and allows you to check missed calls, messages and voicemails.

#### 1.1 Start Command

1. Press , , , .

OR

From the Home screen, press the Voice Command Key .

## Tools

### 1.1.1 Call <Name> or <Number>

1. Press **OK**, **V**, **1**, **1**, **1**.

OR

From the Home screen, press the Voice Command Key **Dv** and say "Call".

2. Say the Contact name (and phone type, if necessary) or number.

### 1.1.2 Voicemail

1. Press **OK**, **V**, **1**, **1**, **2**.

OR

From the Home screen, press the Voice Command Key **Dv** and say "Voicemail".

2. Press **SEND** to call Voicemail or say **Yes** or **No** when prompted.

### 1.1.3 Missed Calls

1. Press **OK**, **V**, **1**, **1**, **V**.

OR

From the Home screen, press the Voice Command Key **Dv** and say "Missed Calls".

2. The phone will prompt you to dial each number. Say **Yes** or **No** to proceed.

### 1.1.4 Messages

1. Press **OK**, **V**, **1**, **1**, **4**.

OR

From the Home screen, press the Voice Command Key **Dv** and say "Messages".

2. The phone will prompt you to dial each number from your messages. Say **Yes** or **No** to proceed.

### 1.1.5 Time & Date

1. Press **OK**, **V**, **R**, **R**, **S**.

OR

From the Home screen, press the Voice Command Key **V** and say "Time & Date".

### 1.1.6 Help

1. Press **OK**, **V**, **R**, **R**, **H**.

OR

From the Home screen, press the Voice Command Key **V** and say "Help".

### 1.2 Command Mode

Allows you to set Command Mode to Normal or Speed (The Speed setting allows you to access and use the Voice Command functions more quickly with a faster non-verbal prompt).

1. Press **OK**, **V**, **R**, **S**.

2. Select an option.

**Normal/ Speed**

### 1.3 Announce Alert

Allows you to customize Announce Alert. Announce Alert lets your hear more information about an incoming call or message instead of, or along with, your ringtone.

1. Press **OK**, **V**, **R**, **V**.

2. Select an option.

**Disable/ Announce/  
Announce + Ring**

### 1.4 Train Word

Allows you to train words for improved Voice Command responses.

1. Press **OK**, **V**, **R**, **F**.

2. Select an option.

**Voice Command/ Answer/  
Digit Dial**

## Tools

### 1.5 Best Match

Allows you to choose whether the phone displays 1 or up to the 4 closest matches when using the “Call <Name> or <Number>” function.

1. Press , , , .

2. Select an option.

1 Match/ 4 Matches

### 2. Calculator

Allows you to perform simple mathematical calculations.

1. Press , , .

2. Enter data.

- Use the keypad to enter numbers.
- Use to enter decimals.
- Use to insert parentheses.

- Press the Left Soft Key **Reset** to erase the entry.

- Press the Right Soft Key **Options** for additional calculating options.

- Use the Navigation Keys to enter functions.

3. Press to complete equation.

### 3. My Menu

Allows you quick access to your favorite menus. A maximum of 12 items can be stored in My Menu.

1. Press , , .

2. Highlight the location of your choice by using , then press **Set**.

3. Browse to the menu you wish to add to My Menu by using , then press **Set**.

## 4. Ez Tip Calculator

Allows you to quickly and easily estimate the tip and total amount of a bill by inputting the bill amount before tip, the tip percentage, and dividing it by the number of people paying.

1. Press **OK**, **E**, **4**.

## 5. World Clock

Allows you to determine the current time in another time zone or country.

1. Press **OK**, **E**, **S**.
2. Press the Left Soft Key **≡** **New** to open the map and press **OK** to zoom in.
3. Press the Left Soft Key **≡** **City** to see the cities located in the highlighted area.

OR

Press the Right Soft Key **≡** **Search** to search through all available cities.



4. Press **OK** to select the highlighted city.

## 6. Stopwatch

Allows you to use your phone as a stopwatch.






1. Press **OK**, **E**, **S**.
2. Press **OK** **Start** to start the Stopwatch and press **OK** **Stop** to stop it.
  - You can use the Lap function by pressing the Left Soft Key **≡** **Lap** to record up to 99 laps and lap times.

## Tools/ Settings

- After stopping the Stopwatch, press the Right Soft Key  **Reset** to reset if no laps were recorded. Otherwise, press the Left Soft Key  **Reset**.

### 7. Unit Converter

Allows you to convert units of Currency, Area, Length, Mass, Temperature, Volume and Velocity.

- Press , , , .
- Select a unit type.
- Use  to select the known unit type then enter the unit amount. The conversions will be calculated automatically.








## Settings

### 1. Sound

Allows you to customize your phone's sounds.

#### 1.1 Ringtones

Allows you to assign ringtones for incoming calls.

- Press , , , .
- Select **All Calls/ Caller ID/ No Caller ID/ Restricted Calls**.
- Select **My Sounds** or **Default**.
- Use  to highlight the ringtone.
- Press  **Play** to preview the ringtone or the Left Soft Key  **Set** to set the ringtone to your phone.



## 1.2 Volume & Vibrate

Allows you to set various volume settings.

1. Press **OK**, **B**, **R**, **T**.
2. Select **Master Volume/ Keypad/ Earpiece/ Speaker/ Vibrate Level**.
3. Use **^** to adjust the volume of the ringer, then press **OK** to save the setting.

## 1.3 Message Alerts

Allows you to select the alert tone for new message notifications and set the frequency of the Message Reminder.

1. Press **OK**, **B**, **R**, **Y**.
2. Select **Text Message/ Picture Message/ Voicemail/ All Messages/ Message Reminder**.

3. Select **My Sounds** or **Default**.



4. Use **^** to highlight the ringtone.
5. Press **OK** **Play** to preview the alert tone or the Left Soft Key **≡** **Set** to set the alert tone to your phone.  
For Message Reminder, choose from **Once/ Every 2 Minutes/ Every 15 Minutes/ Off** and press **OK**.

## 1.4 Alert Type

Allows you to select the alert types.

1. Press **OK**, **B**, **R**, **F**.
2. Use **^** to highlight the alert you wish to edit.  
**Call Alert/ Message Alert/ Schedule Alert/ Alarm Alert/ E911 Alert**

## Settings

- Use  to scroll through the following alert types:  
**Ring Only/ Vibrate Only/  
 Ring & Vibrate**
- Press  to save.

### 1.5 Service Alerts

Allows you to set any of the Service Alert preferences.

- Press , , , .
- Select an alert type.

#### 1.5.1 Minute Beep

Alerts you 10 seconds before the end of every minute during a call.

#### 1.5.2 Call Connect



Alerts you when the call is connected.

#### 1.5.3 Back to Top

Alerts you when you scroll through the end of a menu list.







#### 1.5.4 Low Battery

Alerts you when the battery charge level is low.

- Use  to highlight On/ Off, then press  (For Low Battery option, Announce/ Tone).

### 1.6 Power On/Off Tone

Allows you to set the phone to sound a tone when the phone is powered on and off.

- Press , , , .
- Use  to highlight On/ Off, then press .

## 2. Display

Allows you to customize your phone's display screen.

### 2.1 Wallpaper

Allows you to choose the kind of background to be displayed on the phone.

1. Press **OK**, **9/B**, **2/T**, **1/R**.
2. Select **My Images** or **Default**.
3. Press **OK** **View** to preview the wallpaper or the Left Soft Key **Set** to set the wallpaper to your phone.

### 2.2 Banner

Allows you to enter a string of characters which display on the LCD screen.

1. Press **OK**, **9/B**, **2/T**, **2/T**.
2. Use **<>** to scroll between **On/ Off**.

3. Use **↓** to highlight the Text field.

4. Press the Left Soft Key **ABC** to change the text entry options, input the desired text and press **OK** **Save** to save the banner or press the Right Soft Key **Cancel** to cancel editing your banner.

### 2.3 Backlight

Allows you to set the duration for illuminating the backlight.

1. Press **OK**, **9/B**, **2/T**, **3/Y**.
2. Highlight **Display Timer/ Keypad Timer/ Brightness**, then press **OK**.
3. Use **↓** to highlight a setting, then press **OK**.

## Settings

### 2.4 Menu Style

Allows you to view the Menu in either Icon or List view.

1. Press **OK**, **B**, **T**, **F**.
2. Highlight **Icon** or **List** and press **OK**.

### 2.5 Languages (Idiomas)

Allows you to use the bilingual feature according to your preference. Choose between English and Spanish.

1. Press **OK**, **B**, **T**, **G**.
2. Use **↑** to highlight **English** or **Español**, then press **OK**.

### 2.6 Clocks & Calendar

Allows you to select the type of clocks displayed on the main LCD screen.

1. Press **OK**, **B**, **T**, **H**.

2. Use **←** to scroll through **Normal Clock/ Analog Clock/ Digital 12 Clock/ Digital 24 Clock/ Dual Clock/ Calendar/ Off** and press **OK** **Set**.

### 2.7 Font Settings

Allows you to select the type of font displayed on the LCD screen.

1. Press **OK**, **B**, **T**, **Z**.
2. Highlight **Font Type/ Dial Font Style/ Dial Font Size** and press **OK**.
3. Use **↑** to highlight an option, then press **OK**.

Options for Font Type

**LG Gothic/ LG Greentea/ LG Mint/ LG Round/ LG Secret**

Options for Dial Font Style







Digital/ Blackboard/  
Sketchbook/ Sky/ Basic

Options for Dial Font Size

Normal/ Large

## 2.8 Word Prediction

Allows you to activate word prediction, a function that uses your past text entries to predict what your next word will be.




1. Press , , , .
2. Use  to highlight **On/Off**, then press .

## 3. Security

The Security menu allows you to secure the phone electronically.

### 3.1 Lock Phone



Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the Lock Code is entered. You can still receive phone calls and make emergency calls. You can modify the Lock Code in the Change Lock Code sub-menu of the Security menu.

1. Press , , .
2. Enter the four-digit Lock Code.





The default Lock Code is usually the last 4 digits of your phone number.

3. Press  **Lock Phone**.

## Settings

4. Use  to highlight an option, then press .

**Unlock** The phone remains unlocked by default, until it is locked manually.

**Lock** Locks the phone. When locked, you can receive incoming calls and make calls only to Emergency Numbers ( **Menu** >  **Settings** >  **Security** > Enter the four-digit Lock Code >  **Emergency Numbers**).

**On Power Up** The phone is locked when it is turned on.



### 3.2 Restrictions


Allows you to set restrictions for Calls, Messaging, Camera or **easyedge**<sup>SM</sup>.

1. Press , , .

2. Enter the four-digit Lock Code.

3. Press  **Restrictions**.

4. Use  to highlight **Incoming Calls/ Outgoing Calls/ Incoming Messages/ Outgoing Messages/ Camera/ easyedge & Browser**, then press .

5. Choose the type of restriction and press  to set.

6. Enter the four-digit Service Lock Code.

#### Note

You can receive the incoming calls from saved contacts on your phone when **Contacts Only** is on.

### 3.3 Emergency Numbers

Allows you to enter 3 emergency numbers. You can call these emergency numbers and 911, even when the phone is locked or restricted.

1. Press , , .
2. Enter the four-digit Lock Code.
3. Press **Emergency Numbers**.
4. Highlight one of the 3 options, then press to edit the emergency numbers.
5. When you are finished editing the number, press **Save** to save the emergency number or the Right Soft Key **Cancel** to cancel editing.

### 3.4 Change Lock Code

Allows you to enter a new four-digit Lock Code.

1. Press , , .
2. Enter the four-digit Lock Code.
3. Press **Change Lock Code**.
4. Use to highlight an option, then press .

**Phone Only** Allows you to change the Lock Code used to lock/unlock the phone.

**Call & Applications** Allows you to change the Service Lock Code that is used to access the Restrictions menu (see page 70).

5. Enter the four-digit Lock Code.

## Settings

6. Enter a new 4-digit Lock Code.
7. For confirmation, the phone will ask you to enter the new Lock Code again.

### 3.5 Master Reset

Allows you to reset your phone settings to the factory default settings.

1. Press **OK**, **B**, **Y**.
2. Enter the four-digit Lock Code.
3. Press **G** **Master Reset**.
4. A message will pop up warning you that your settings will be set to factory defaults. Press **OK** to proceed.
5. Use **^** **v** to highlight **Revert/Cancel** and press **OK**.

6. If you choose **Revert**, enter your four-digit Lock Code to confirm your selection.

## 4. Call Settings

The Call Settings menu allows you to designate how the phone handles both incoming and outgoing calls.

### 4.1 Answer Options

Allows you to determine how to answer an incoming call.

1. Press **OK**, **B**, **4**, **R**.
2. Use **^** **v** to highlight **SEND Key Only/ Any Key/ Auto with Handsfree**, then press **OK**.



## 4.2 Auto Retry

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

1. Press **OK**, **B**, **4**, **E**.
2. Use **↓** to highlight **Off/ Every 10 Seconds/ Every 30 Seconds/ Every 60 Seconds**, then press **OK**.

## 4.3 One Touch Dial

Allows you to initiate a Speed Dial call by pressing and holding the Speed Dial digit. If set to **Off**, Speed Dial numbers designated in your **Contacts** will not function.

1. Press **OK**, **B**, **4**, **E**.
2. Use **↓** to highlight **On/ Off**, then press **OK**.

## 4.4 Voice Privacy

Allows you to set the voice privacy feature for CDMA calls as **Enhanced** or **Standard**. CDMA offers inherent voice privacy. Check with your service provider for availability.

1. Press **OK**, **B**, **4**, **F**.
2. Use **↓** to highlight **Enhanced/ Standard**, then press **OK**.

## 4.5 Airplane Mode

Only allows you to use features on your phone that do not require wireless communications.

1. Press **OK**, **B**, **4**, **G**.
2. Read the displayed message and press **OK** to continue.
3. Use **↓** to highlight **On/ Off**, then press **OK**.

## Settings

### 4.6 TTY Mode

Allows you to attach a TTY (Teletype writer) device, enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY device.

1. Press **OK**, **9**, **4**, **5**.
2. Read the displayed message and press **OK** to continue.
3. Use **↕** to highlight **TTY Full/TTY + Talk/TTY + Hear/TTY Off**, then press **OK**.

### 5. Bluetooth

The UN200 is compatible with devices that support the Bluetooth® Headset, HandsFree, Dial Up Networking, Serial Port, Phonebook Access, Basic Printing, Object Push, File Transfer, and Human Interface profiles. You may create and store 20 pairings within the UN200 and connect to one device at a time. The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).

#### **Bluetooth QD ID B017358**

**Note**








Read the user guide of each Bluetooth® accessory that you are trying to pair with your phone because the instructions may be different.

The Bluetooth® features available on this handset may not be compatible with all Bluetooth® enabled devices. Your service provider or phone manufacturer cannot be held responsible for compatibility issues with devices not sold by the service provider or phone manufacturer.

## 5.1 Paired Devices

Pairing is the process that allows the handset to locate, establish and register 1-to-1 connection with the target device.

### For pairing new Bluetooth® device

1. Press , , , .
2. Follow the Bluetooth® accessory instructions to set the device to pairing mode.
3. Press the Left Soft Key  **Search**.
4. If Bluetooth® power is set to off, you will be prompted to turn the function on. Highlight **Yes** and press .
5. Select **New Search/Last Search**. The device will appear in the **Device Found** menu once it has been located. Highlight the device and press  **Pair**.
6. Depending on the type of device:

## Settings

- The phone will Auto-pair.
  - You will need to confirm matching codes.
  - You will need to enter a passkey. Consult the Bluetooth® accessory instructions for the correct passkey (typically "0000" - 4 zeroes). Enter the passkey and press **OK**.
7. The handset will prompt you for your connection preferences. Highlight **Always Ask** or **Always Connect** and press **OK**.
  8. Once connected, you will see the device listed in the **Paired Devices** menu.

### 5.2 Power

Allows you to set the Bluetooth® power to On/Off.

1. Press **OK**, **B**, **S**, **P**.
2. Use **^** to highlight **On/Off**, then press **OK**.

#### Note

By default, your device's Bluetooth® functionality is turned off.

### 5.3 My Visibility

Allows you to set the visibility of your Bluetooth® function.

1. Press **OK**, **B**, **S**, **Y**.
2. Use **^** to highlight **On/ Off**, then press **OK**.

## 5.4 My Bluetooth Info

Allows you to view information regarding the Bluetooth® function.

1. Press , , , .

## 6. System

The System menu allows you to designate specific system network settings.

### 6.1 Network

#### 6.1.1 System Select

Allows you to set up the phone producer's management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

1. Press , , , , .
2. Use to highlight **Home Only/ Automatic**, then press .

#### 6.1.2 Set NAM

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Press , , , , .
2. Use to highlight **NAM1** or **NAM2**, then press .

#### 6.1.3 Auto NAM

Allows the phone to automatically switch between programmed telephone numbers corresponding to the service provider area.

## Settings

1. Press **OK**, **S**, **H**, **I**, **Y**.
  2. Use **^** to highlight **On** or **Off**, then press **OK**.
2. Read the disclaimer and press the Right Soft Key **Next** to go to the next screen or Left Soft Key **Prev** to go to the previous screen. Press the Right Soft Key **OK** on the last screen.

### 6.1.4 Serving System

Identifies the serving system Channel Number and SID Number. This information should only be used for technical support.

1. Press **OK**, **S**, **H**, **I**, **F**.

## 6.2 Location

Allows you to turn On or Off the Location function on your phone. If set to On, location-based services are able to access your GPS (Global Positioning System) satellite-assisted location information.

1. Press **OK**, **S**, **H**, **E**.

3. Use **^** to highlight **On/ Off**, then press **OK**.

### Note

GPS satellite signals are not always transmitted, especially under bad atmospheric and environmental conditions, indoors etc.

## 7. Web Access Prompt

Allows you to turn the Web Access Prompt on or off.

1. Press **OK**, **S**, **C**.
2. Use **^** to highlight **On** or **Off**, then press **OK**.

## 8. Memory

Allows you to check out the memory status of your phone.

1. Press , , .
2. Use to highlight **Reserved Memory/ Multimedia** and press .

## 9. Phone Info

The Phone Info menu provides you with specific information about your phone.

1. Press , , .
2. Use to highlight **My Number/ Current Battery Level/ ESN/MEID/ Icon Glossary/ Version** and press .

## Tone Room Deluxe

The Tone Room Deluxe application allows you to browse and download new ringtones.

1. Press , .

## My Contacts Backup

My Contacts Backup safeguards your mobile phone's address book and automatically saves a copy of the names, phone numbers, and email addresses stored in your phone. You can also view, print, add, delete, and edit your contacts online.

1. Press , .

## PAC-MAN

Allows you to use the preloaded PAC-MAN application. User charges may apply.

1. Press , .

# Safety

## TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

### Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) \*

NCRP Report 86 (1986)

ICNIRP (1996)

\* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection.

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

### Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments



could damage the phone and may violate FCC regulations.

### Phone Operation

**NORMAL POSITION:** Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

### Tips on Efficient Operation

**For your phone to operate most efficiently:**

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

### Driving

Check the laws and regulations on the use of wireless phones in

the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

### Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

## Safety

### **Pacemakers**

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

### **Persons with pacemakers:**

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;

- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

### **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

### **Health Care Facilities**

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

### **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

### **Posted Facilities**

Turn your phone OFF in any facility where posted notices so require.

### **Aircraft**

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

### **Blasting Areas**

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

### **Potentially Explosive Atmosphere**

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

## Safety

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

### For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If

in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

### Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Use the correct adapter for your phone when using the battery pack charger abroad.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.

## Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery doesn't need to be empty before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, Browser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

## Safety

### Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Do not disassemble or crush the battery. It may cause a fire.

### General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.

- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, and pictures could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

## Safety

### Warning! Important safety information

#### Avoiding hearing damage

Permanent hearing loss may occur if you use your phone and/or headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use your phone and/or headset at high volume.

- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your phone, see the features guide for your phone.

#### Using your phone safely

Use of your phone while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using your phone if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.



## Using headsets safely

Use of headsets to listen to music while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using this device if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.



## FDA Consumer Update

The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

## 1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed

## Safety

by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

### 2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or

recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

## Safety

### 3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless

phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

### 4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies

that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or

salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

#### **5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?**

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be

## Safety

needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

### **6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?**

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The

project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

## 7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit

## Safety

takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website

(<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

### **8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?**

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio

Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of



energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

### **9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?**

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time

spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

## Safety

### 10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a

recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

### 11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is

now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs

when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

## **12. Where can I find additional information?**

For additional information, please refer to the following resources:

FDA web page on wireless phones  
(<http://www.fda.gov/Radiation-EmittingProducts/RadiationEmittingProductsandProcedures/HomeBusinessandEntertainment/CellPhones/default.htm>)

## Safety

Federal Communications  
Commission (FCC) RF Safety  
Program  
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on  
Non-Ionizing Radiation  
Protection  
(<http://www.icnirp.de>)

World Health Organization  
(WHO) International EMF  
Project  
(<http://www.who.int/emf>)

National Radiological Protection  
Board (UK)  
(<http://www.hpa.org.uk/radiation/>)

### 10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the

- speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
  3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
  4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
  5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not

## Safety

paying attention to the road or nearby vehicles.

6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip -- dial only a few numbers, check the road and your mirrors, then continue.
  7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car.
- Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations -- with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!
  9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to

be a “Good Samaritan” in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.

10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one

appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction’s local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

## Safety

### Consumer Information on SAR

#### (Specific Absorption Rate)

This model phone meets the government's requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from

industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC with the



phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2.0 cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.79 inches (2.0 cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

The FCC has granted an Equipment Authorization for this

## Safety

model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

The highest SAR value for this model phone when tested for use at the ear is 1.22 W/kg and when worn on the body, as described in this user's manual, is 0.79 W/kg. While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID.

To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed

somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

\*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

## FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining

noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device

## Safety

 
 
is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and

wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.

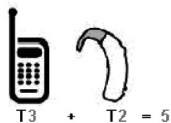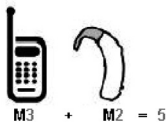

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This is synonymous for T ratings. This should provide the hearing aid user with “normal usage” while using their hearing aid with the

particular wireless phone. “Normal usage” in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

To enter that the Hearing Aid Compatibility rating for your phone is maintained, secondary transmitters such as Bluetooth components must be disabled during a call.

### HAC statement

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids.

It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility.

If you have questions about return or exchange policies, consult your service provider or phone retailer.

## Safety

For information about hearing aids and digital wireless phones

**Wireless Phones and Hearing Aid Accessibility**

<http://www.accesswireless.org/hearingaid/>

**FCC Hearing Aid Compatibility and Volume Control**

[http://www.fcc.gov/cgb/consumerfacts/hac\\_wireless.html](http://www.fcc.gov/cgb/consumerfacts/hac_wireless.html)

**Gallaudet University, RERC**

<http://tap.Gallaudet.edu/DigWireless.KS/DigWireless.htm>

**Hearing Loss Association of America [HLAA]**

<http://www.hearingloss.org/learn/cellphonetech.asp>

**The Hearing Aid Compatibility FCC Order**

[http://hraunfoss.fcc.gov/edocs\\_public/attachmatch/FCC-03-168A1.pdf](http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf)

## Accessories

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability. Optional items are sold separately.

---

### Battery Charger

The battery charger allows you to charge your phone battery.



---

### Battery

Standard battery is available.



## Limited Warranty Statement

### 1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S. including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service



Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

## **2. WHAT THIS WARRANTY DOES NOT COVER:**

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise,

## Limited Warranty Statement

including, but not limited to any implied warranty of marketability or fitness for a particular use.

- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

### 3. WHAT LG WILL DO:

“LG will, at its sole option, either repair, replace or refund the

purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.”

### 4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

### **5. HOW TO GET WARRANTY SERVICE:**

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

**Tel. 1-800-793-8896 or Fax. 1-800-448-4026**

Or visit <http://us.lgservice.com>. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets

P.O. Box 240007, Huntsville, AL 35824

**DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS.** Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

# Index

---

## 123

---

10 Driver Safety Tips  
100

---

## A

---

Accessories 111  
Airplane Mode 73  
Alarm Clock 55  
Alert Type 65  
All Calls 48  
Announce Alert 61  
Answer Options 72  
Auto Retry 73

---

## B

---

Backlight 67  
Banner 67  
Battery Charge Level  
23  
Best Match 62  
Bluetooth 74  
Browser 57

---

## C

---

Calculator 62  
Calendar 55  
Call History 48  
Call Settings 72  
Call Timer 48  
Call Waiting 26  
Caller ID 27  
Change Lock Code 71  
Charging the Battery  
23  
Clocks & Calendar 68  
Command Mode 61  
Consumer Information  
on SAR 104  
Contact List 34  
Contacts 34  
Contacts in Your  
Phone's Memory 29  
Contacts Options 31  
Correcting Dialing  
Mistakes 25

---

## D

---

Delete All 47  
Dialed Calls 48  
Display 67  
Drafts 44

---

## E

---

easyedge<sup>SM</sup> 54  
Emergency Numbers  
71  
Entering and Editing  
Information 28  
Ez Tip Calculator 63

---

## F

---

Favorites 35  
FCC Hearing-Aid  
Compatibility (HAC)  
Regulations for  
Wireless Devices 107  
FDA Consumer Update  
89  
Font Settings 68

---

**G**

Getting Started with Your Phone 22

Groups 36

---

**I**

Images 51

Important Safety

Precautions 1

Inbox 41

Index 116

---

**L**

Languages (Idiomas)  
68

Limited Warranty  
Statement 112

Location 78

Lock Mode 26

Lock Phone 69

---

**M**

Making a Call From  
Your Phone's Memory  
32

Making Calls 24

Master Reset 72

Memory 79

Menu Overview 19

Menu Style 68

Message Alerts 65

Messaging 37

Missed Calls 48

Multimedia 49

Mute Function 26

My Contacts Backup  
79

My Menu 62

My Schedule 55

My vCard 37

---

**N**

Network 77

New Picture Message  
40

New Text Message 37

Notepad 56

---

**O**

One Touch Dial 73

Outbox 43

---

**P**

PAC-MAN 79

Phone Info. 79

Phone Numbers With  
Pauses 29

Phone Overview 16

Power On/Off Tone 66

---

**Q**

Quick Access to  
Convenient Features  
26

Quick Volume  
Adjustments 26

---

**R**

Received Calls 48

Receiving Calls 25

Record Voice 51

Redialing Calls 25

Restrictions 70

Ringtones 64

# Index

---

## S

Safety 80  
Screen Icons 24  
Searching Your Phone's Memory 31  
Security 69  
Service Alerts 66  
Settings 46, 64  
Signal Strength 24  
Sound 64  
Sounds 52  
Speed Dialing 27  
Speed Dials 36  
Start Command 59  
Stopwatch 63  
System 77

---

## T

Table of Contents 4  
Take Photo 49  
Technical Details 10  
Templates 45  
Text Input 28

The Basics of Storing Contacts Entries 29  
The Battery 22  
TIA Safety Information 80  
Tone Room Deluxe 79  
Tools 59  
Train Word 61  
TTY Mode 74  
Turning the Phone On and Off 23

---

## U

Unit Converter 64  
Using Phone Menus 34

---

## V

Voice Command 59  
Voice Privacy 73  
Voicemail 45  
Volume & Vibrate 65

---

## W

Wallpaper 67  
Warning! Important safety information 88  
Web Access Prompt 78  
Welcome 9  
Word Prediction 69  
World Clock 63



