

Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

WARNING! *Violation of the instructions may cause serious injury or death.*



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.
3. Never store your phone in temperatures less than -4°F or greater than 122°F.



4. Do not dispose of your battery by fire or with hazardous or flammable materials.
5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



6. Do not use a hand-held phone while driving.
7. Do not use the phone in areas where its use is prohibited. (For example: aircraft)

Important Safety Precautions



1. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



2. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



3. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.

4. Do not use your phone in high explosive areas as the phone may generate sparks.



5. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



6. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.

7. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.



8. Do not disassemble the phone.



1. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
2. Do not hold or let the antenna come in contact with your body during a call.



3. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.



4. Store the battery out of reach of children.
5. Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



6. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



7. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
8. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



9. Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Table of Contents

Important Safety Precautions	1	Menus Overview	20
Table of Contents	4	Getting Started with Your Phone	23
Welcome	10	The Battery	23
Technical Details	11	Installing the Battery	23
Important Information	11	Removing the Battery	23
FCC Part 15 Class B Compliance	11	Charging the Battery	23
Technical Details	11	How to Install Your microSD™ Card	24
FCC RF Exposure Information	13	How to Remove Your microSD™ Card	25
Bodily Contact During Operation	13	Battery Charge Level	25
Vehicle-Mounted the External Antenna	14	Turning the Phone On and Off	26
FCC Notice and Cautions	14	Turning the Phone On	26
Part 15.19 statement	14	Turning the Phone Off	26
Part 15.21 statement	15	Signal Strength	26
Part 15.105 statement	15	Screen Icons	27
Phone Overview	16	Making Calls	27
		Correcting Dialing Mistakes	28

Redialing Calls	28	Searching Your Phone's Memory	35
Receiving Calls	28	Making a Call From Your Phone's Memory	36
Quick Access to Convenient Features	29	Using Phone Menus	38
Lock Mode	29	Messaging	38
Mute Function	29	1. New Text Message	38
Volume Quick Adjustment	29	2. New Picture Message	40
Call Waiting	30	3. Inbox	42
Caller ID	30	4. Sent	43
Speed Dialing	30	5. Drafts	45
Entering and Editing Information	32	6. Voicemail	45
Text Input	32	7. Templates	46
Key Functions	32	8. Settings	46
Contacts in Your Phone's Memory	33	8.1 All Messages	47
The Basics of Storing Contacts Entries	33	8.2 Text Message	47
Phone Numbers With Pauses	33	8.3 Picture Message	48
		8.4 Edit Voicemail #	48
		9. Delete All	48
		BREW	49

Table of Contents

1. BREW Apps	49	2. Received Calls	61
2. my apps	50	3. Dialed Calls	61
Web	51	4. All Calls	62
1. Start Browser	51	5. Call Timer	62
2. Web Settings	53	6. Data	62
		7. Data Counter	62
Multimedia	54	Music	63
1. Take Photo	54	1. All Songs	63
2. Record Voice	55	2. Playlists	63
3. Images	55	3. Recently Played	64
4. Audios	56	4. Artists	64
5. Shuffle	57	5. Genres	64
Contacts	58	6. Albums	64
1. New Contact	58	My Schedule	65
2. Contact List	59	1. Calendar	65
3. Groups	59	2. Notepad	65
4. Speed Dials	60	3. Alarm Clock	66
5. My Name Card	60	My Menu	66
Recent Calls	61	Bluetooth®	67
1. Missed Calls	61		

1. Paired Devices	67	4. World Clock	73
2. Power	68	5. Stopwatch	74
3. My Visibility	69	6. Unit Converter	74
4. My Bluetooth Name	69		
5. My Bluetooth Info	69	Settings	75
Tools	70	1. Sound	75
1. Voice Command	70	1.1 Ringers	75
1.1 Start Command	70	1.2 Volume	75
1.1.1 Call <Name> or <Number>	70	1.3 Message Alerts	75
1.1.2 Voicemail	70	1.4 Alert Type	76
1.1.3 Missed Calls	71	1.5 Service Alerts	76
1.1.4 Messages	71	1.6 Power On/Off Tone	77
1.1.5 Time & Date	71	1.7 Slide Tone	77
1.1.6 Help	71	2. Display	77
1.2 Command Mode	71	2.1 Wallpaper	77
1.3 Announce Alert	72	2.2 Banner	78
1.4 Train Word	72	2.3 Backlight	78
1.5 Best Match	72	2.4 Menu Style	78
2. Ez Tip Calc	72	2.5 Languages	79
3. Calculator	73	2.6 Clocks & Calendar	79
		2.7 Font Settings	79

Table of Contents

2.8 Word Prediction	80	8. Memory	87
2.9 Name Match for Dialing	80	9. BREW & Web	87
3. Keyguard Timer	80	9.1 BREW Info	87
4. Security	80	9.2. Web Settings	87
4.1 Lock Phone	80	0. Phone Info	88
4.2 Restrictions	81	Safety	89
4.3 Emergency #s	81	TIA Safety Information	89
4.4 Change Lock Code	82	Exposure to Radio Frequency Signal	89
4.5 Reset Default	82	Antenna Care	89
5. Call Settings	83	Phone Operation	90
5.1 Answer Options	83	Tips on Efficient Operation	90
5.2 Auto Retry	83	Driving	90
5.3 One-Touch Dial	83	Electronic Devices	90
5.4 Voice Privacy	84	Pacemakers	90
5.5 Airplane Mode	84	Persons with Pacemakers:	91
5.6 TTY Mode	84	Hearing Aids	91
6. PC Connection	85	Other Medical Devices	91
7. System	85	Health Care Facilities	91
7.1 Network	85	Vehicles	92
7.2 Location	86		

Posted Facilities	92
Aircraft	92
Blasting Areas	92
Potentially Explosive Atmosphere For Vehicles Equipped with an Air Bag	92 93
Safety Information	93
Charger and Adapter Safety	93
Battery Information and Care	94
Explosion, Shock, and Fire Hazards	94
General Notice	95
Warning! Important safety information	96
Avoiding hearing damage	96
Using your phone safely	97
Avoiding hearing damage	97
Using headsets safely	98
FDA Consumer Update	98
10 Driver Safety Tips	108
Consumer Information on SAR	112

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices	115
---	------------

Accessories	118
--------------------	------------

Limited Warranty Statement	119
---------------------------------------	------------

Index	123
--------------	------------

Some content in this user guide may differ from your phone depending on the phone software. Features and specifications are subject to change without prior notice.

Welcome

Thank you for choosing the **Script** cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, this compact phone offers:

- Significantly enhanced voice clarity.
- Slim and sleek design with internal antenna (Internal antenna described as antenna throughout this user guide).
- Large, easy-to-read, 9-line backlit LCD with status icons.
- Paging, messaging, voice mail, and caller ID.
- 25-Key external keypad and QWERTY internal keypad.
- Speakerphone feature.
- Menu-driven interface with prompts for easy operation and configuration.
- Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
- Bilingual (English and Spanish) capabilities.
- Bluetooth® wireless technology.
- Music capability and microSD™ card slot.

Note

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.

Technical Details

Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Technical Details

The **Script** is a trimode phone that operates on both (Code Division Multiple Access CDMA) frequencies: cellular services at 800 MHz and (Personal Communication Services PCS) at 1.9 GHz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard handoff, and dynamic RF power control technologies combine to reduce call interruptions.

Technical Details

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base

Station Controller), BTS (Base Station Transmission System), and MS (Mobile Station).

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000 ANSI TIA/EIA 553A	CDMA Dual Mode Air Interface 14.4kbps radio link protocol and inter-band operations IS-95 adapted for PCS frequency band cdma2000 1xRTT AirInterface
Network	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41-C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem operations Non-signaling data comm.
Service	TIA/EIA/IS-96-B TIA/EIA/IS-99 TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Sync Data and Fax Short message service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
Performance	TIA/EIA/IS-97 TIA/EIA/IS-98 ANSI J-STD-018 ANSI J-STD-019 TIA/EIA/IS-125	Cellular base station Cellular mobile station PCS personal station PCS base station Speech CODEC

Technical Details

* TSB-74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible. The table (on the previous page) lists some major CDMA standards.

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are

consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.79 inches (2.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.79 inches (2.0 cm) distance

Technical Details

between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted the External Antenna

(Optional, if available.)

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and vehicle-mounted the external antenna. For more information about RF exposure, visit the FCC website at www.fcc.gov.

FCC Notice and Cautions

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device

and its accessories must accept any interference received, including interference that causes undesired operation.

Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

Part 15.19 statement

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions:

(1) This device & its accessories

may not cause harmful interference.

- (2) This device & its accessories must accept any interference received, including interference that may cause undesired operation.

Part 15.21 statement

Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency

energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. if this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Phone Overview

 
Phone Overview



1. **Earpiece** Lets you hear the caller.
2. **LCD Screen** Displays messages and indicator icons. When the phone is turned on, power save mode automatically dims the screen and then darkens it if no keys are pressed.
3. **Left Soft Key** Use to access the Contact List when in Standby Mode. Performs the functions indicated by the text on the display immediately above it.
4. **Speakerphone Key** Use to turn Speaker On or Off.
5. **TALK Key** Use to place or answer calls.
6. **Alphanumeric Keypad** Use to enter numbers, characters and to select menu items.
7. **Vibrate Mode Key** Use to set Vibrate mode (from standby mode press and hold for about 3 seconds).
8. **Navigation Key** Use for quick access to Browser, Music, My Menu and BREW.
9. **Right Soft Key** Use to access Messaging when in Standby Mode. Performs the functions indicated by the text on the display immediately above it.
10. **BACK Key** Deletes single spaces or characters with a quick press, but press and hold to delete entire words. Will also back you out of menus, one level at a time.
11. **Menu/OK Key** Selects the function displayed at the bottom of the LCD between the Left and Right Soft Key functions.
12. **PWR/END Key** Use to turn the power on/off and to end a call. Also returns to the Standby Mode display screen.
13. **Keyguard Key** Use to lock the keys (from standby mode press and hold for about 1.5 seconds).
14. **Charger Port** Connects the phone to the battery charger or other available accessories.





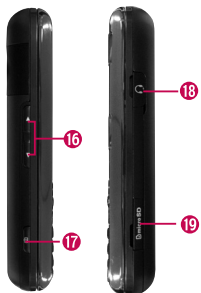

- 15. **Camera Lens** Use to take photos.
Keep it clean for optimal photo quality.
- 16. **Side Keys** Use to adjust the ringer volume in standby mode and the earpiece volume during a call.
- 17. **Side Camera Key** Use for quick access to Camera functions.
- 18. **Earphone Jack** Allows the use of a headset to hear caller's voice.
- 19. **microSD™ card slot** Insert microSD™ card for external memory. Use LG approved microSD™ card.



Navigation Shortcut Keys



-  **Browser Key** Use to access Browser.
-  **My Menu Key** Use to access My Menu.
-  **Music Key** Use to access Music.
-  **BREW Key** Use to access BREW.

Phone Overview

Entering Text With the QWERTY Keyboard

Your phone features a slide-out QWERTY keyboard, specifically designed for easy and comfortable text entry. The QWERTY keyboard uses the same layout and works just like the keyboard on your computer. The easiest way to enter text is using your thumbs to type on the QWERTY keyboard.



Function Key:

Press **FN** one time (while entering text):



is displayed on the bottom-left of the screen.

Corresponding special characters on the QWERTY keypad can be entered, one at a time.

Press **FN** two times (while entering text):



is displayed at the bottom-left of the screen. Corresponding special characters on the QWERTY keypad will be entered at every key press, until the Function Key is pressed again.

To enter text with the QWERTY keyboard:

1. In any text entry screen, slide open the QWERTY keyboard.
(The display automatically adjusts to landscape mode.)
2. Use your thumbs to enter text.
 - To change capitalization, press **SHIFT**.
 - To enter alternate characters on a key, press **FN** and then press the key. To lock the function key (as when entering a series of numbers), press **FN** twice.
 - To enter symbols, press the **SYM**, then select a symbol.
 - For additional text entry mode options, including Symbols and 123, press the Left Soft Key and select an option.

Menus Overview

Messaging

1. New Text Message
2. New Picture Message
3. Inbox
4. Sent
5. Drafts
6. Voicemail
7. Templates
8. Settings
 1. All Messages
 2. Text Message
 3. Picture Message
 4. Edit Voicemail#
9. Delete All
 1. Delete Inbox
 2. Delete Sent
 3. Delete Drafts
 4. Delete All Messages

BREW

1. BREW Apps
2. BREW Info

Web

1. Start Browser
2. Web Settings

Multimedia

1. Take Photo
2. Record Voice
3. Images
 - My Images
 - Default
4. Audios
 - My Ringers
5. Shuffle
 - Ringtone List
 - Wallpaper List

Contacts

1. New Contact
2. Contact List
3. Groups
4. Speed Dials
5. My Name Card

Recent Calls

1. Missed Calls
2. Received Calls
3. Dialed Calls
4. All Calls
5. Call Timer
6. Data
7. Data Counter

Music

1. All Songs
2. Playlists
3. Recently Played
4. Artists
5. Genres
6. Albums

My Schedule

1. Calendar
2. Notepad
3. Alarm Clock

My Menu

Tools

1. Voice Command
 1. Start Command
 2. Command Mode
 3. Announce Alert
 4. Train Word
 5. Best Match
2. Ez Tip Calc
3. Calculator
4. World Clock
5. Stopwatch
6. Unit Converter

Bluetooth

1. Paired Devices
2. Power
3. My Visibility
4. My Bluetooth Name
5. My Bluetooth Info

Settings

1. Sound
 1. Ringers
 2. Volume
 3. Message Alerts
 4. Alert Type
 5. Service Alerts
 6. Power On/Off Tone
 7. Slide Tone
2. Display
 1. Wallpaper
 2. Banner
 3. Backlight
 4. Menu Style
 5. Languages
 6. Clocks & Calendar
 7. Font Settings
 8. Word Prediction
 9. Name Match for Dialing
3. Keyguard Timer
4. Security

1. Lock Phone
2. Restrictions
3. Emergency #s
4. Change Lock Code
5. Reset Default
5. Call Settings
 1. Answer Options
 2. Auto Retry
 3. One-Touch Dial
 4. Voice Privacy
 5. Airplane Mode
 6. TTY Mode
6. PC Connection
 1. USB Modem
 2. USB Mass Storage
 3. Setting Reminder
7. System
 1. Network
 2. Location
8. Memory
 1. Save Options
 2. Phone Memory


Menu Overview

- 3. Card Memory

- 9. BREW & Web
 - 1. BREW Info
 - 2. Web Setting

- 0. Phone Info
 - 1. My Number
 - 2. ESN/MEID
 - 3. Icon Glossary
 - 4. Version

Menu Access

Press  **Menu** to access the twelve phone menus. There are two methods of accessing menus and submenus:

- Use the navigation key to highlight and select, or
- Press the number key that corresponds with the menu (or submenu).

Getting Started with Your Phone

The Battery

Note

It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level is shown at the top of the LCD screen.

Installing the Battery

Remove the battery cover by sliding it upward. Align the battery with the terminals near the bottom of the phone. Align the battery cover then slide it downward until it clicks into place.

Removing the Battery

1. Turn off the phone, then push the battery cover from down to up such as shown below.



2. While holding the battery cover, lift and remove the battery cover.
3. Lift the top of the battery out using the fingertip cutouts, then remove it.

Charging the Battery

 
To use the charger provided with your phone:

Warning! Use only the charger provided with the phone. Using any charger other than the one included with the **Script** may damage your phone or battery.

Getting Started with Your Phone

Notice

Please make sure that the 'B' Side faces up before inserting a charger or data cable into the charger port of your phone.

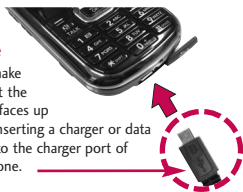

1. Plug the end of the adapter into the phone's charger port and the other end into an electrical outlet.
2. The charge time varies depending upon the battery level.



2. Insert the microSD™ card facing up and push in until it clicks into the slot. If you insert the card in the wrong direction, it may damage your phone or your card.

How to Install Your microSD™ Card

1. Locate the microSD™ slot on the right side of the phone and gently uncover the slot opening (microSD™ slot cover stays attached to the phone so you don't lose it).



How to Remove Your microSD™ Card

1. Gently press and release the exposed edge of the microSD™ card to eject it.
2. Remove the microSD™ card from the slot and replace the cover.

Note

Do not attempt to remove the microSD™ card while reading or writing to the card.

Battery Charge Level

The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying a warning message. If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.

Getting Started with Your Phone

Turning the Phone On and Off

 
Turning the Phone On

1. Install a charged battery or connect the phone to an external power source.
2. Press **END** for about 3 seconds until the LCD screen lights up.

Turning the Phone Off

1. Press and hold **END** until the display turns off.

Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars on the signal strength icon . The more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.

Note

The call quality is also affected by environmental factors such as weather conditions.

Screen Icons



To see the icon glossary, go to

 **Menu** ->  **Settings** ->

 **Phone Info** ->  **Icon**




 


 

Glossary on your phone.

Making Calls

1. Make sure the phone is turned on. If not, press  for about 3 seconds to turn it on.
2. Enter the phone number (include the area code if needed).
3. Press .

Note

If the phone is restricted, you can only dial phone numbers saved in the Emergency Numbers or your Contact List. To turn off this function:

 **Menu** ->  **Settings** ->
 **4 GH Security** -> **Lock Code** ->
 ->  **2 ABC Restrictions**->**Lock**
Code->  ->  **2 ABC Outgoing**
Calls ->  **1 BE Allow All** -> 

4. Press  to end the call.

Getting Started with Your Phone

Correcting Dialing Mistakes

If you make a mistake while dialing a number, press **BACK** once to erase the last digit entered, or hold down **BACK** for at least 2 seconds to go to the standby mode.

Redialing Calls

1. Press **TALK** twice to redial the last number you dialed. The All Calls list will display the 60 most recent calls. The last 120 numbers (40 missed, 40 received and 40 dialed) are stored in the call history list and you can also select any of these to redial.

Receiving Calls

1. When the phone rings and/or vibrates, press **TALK** to answer.

Tip

To choose answer options:

NEW OK Menu -> **#SPACE** Settings ->
5 .RL Call Settings ->
1 EF Answer Options. Choose from the following options:
TALK Key Only/ Any Key/ Auto Answer

Note


 


If you press **ENDO** or **A** (the side keys), while the phone is ringing, the ringing or vibration is muted for that call.

2. Press **ENDO** to end the call.



Quick Access to Convenient Features

Lock Mode



Keypad Mode Quick Activation

1. Press  Menu when the slide is closed.
2. Press  Settings.
3. Press  Keypad Timer.
4. Highlight a timer setting, then press  to select it.
7 Seconds/ 15 Seconds/
2 Minutes/ Always Off

Keypad Mode Quick Cancellation

1. Once locked, to deactivate Keypad, press Right Soft Key  Unlock, then press .

Mute Function

The Mute Function is used during a phone call. To quickly activate Mute press Left Soft Key  Mute, then to cancel press Left Soft Key  Unmute.

Volume Quick Adjustment

Use the side keys to adjust the ringer volume while in standby mode, and the earpiece volume during a phone call. The upper key increases the volume and the lower key decreases the volume.

Note



Keypad Volume is adjusted through the Sound Volume menu:

 Menu ->  Settings ->
 Sound ->  Volume ->
 Keypad

Quick Access to Convenient Features

Call Waiting

Your cellular service may offer call waiting. While a call is in progress one beep indicates an incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call. Check with your cellular service provider for information about this function.

1. Press  to receive a waiting call.
2. Press  again to switch between calls.

Caller ID

Caller ID displays the phone number or name of the incoming call. If the caller's identity is stored in Contacts, the name will appear along with the phone number. Check with your service provider to ensure they offer this feature.

Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly. A number key can be assigned to a specific phone number. By pressing and holding down a number key, your phone will recall the phone number associated from the Contact List and display it briefly while simultaneously dialing that phone number for you. Speed Dial Number 1 is set to Voice Mailbox by default and is unchangeable.

Dialing Single Digit Speed Dials (from 2 to 9)

Press and hold the Speed Dial number.


OR

Enter the Speed Dial number and press .

Dialing Double Digit Speed Dials (from 10 to 99)

Press the first digit and then press and hold the key of the second digit.

OR

Enter the first and second digits and press .


Entering and Editing Information


Text Input


You can input and edit your Banner, Calendar, Contacts, Alarm Clock, Notepad, and Messages plus much more.


When Entering Text Without the QWERTY


Key Functions


 **Left Soft Key:**
Press to scroll through the following text input modes: T9Word (T9WORD/T9Word/T9word) -> Abc (ABC/Abc/abc) -> 123 -> Symbols

 **Shift:** Press to change case.
T9 text : T9Word -> T9WORD -> T9word
Abc text : Abc -> ABC -> abc

 **Next:** In T9 mode, press to display other matching words.


 **Space:** Press to complete a word if text is in T9 mode or insert a space.

 **Clear:** Press to delete a single space or character. Hold to delete the whole message.

 **Punctuation:** Press to insert punctuation in a word and complete a sentence.




Contacts in Your Phone's Memory

The Basics of Storing Contacts Entries

1. From standby mode enter the phone number you want to save (up to 48 digits).
2. Press Left Soft Key  **Save**.
3. Select either **Save New** or **Update Existing**.

Note


Use **Update Existing** to add another phone number to a contact already stored in memory.

4. Use  to highlight a Label and press .
**Mobile 1/ Home/ Work/
Mobile 2/ Fax**
5. Enter a name for the phone number (up to 22 characters) and press . A confirmation message is displayed briefly.

Phone Numbers With Pauses

When you call automated systems, such as voice mail or credit billing numbers, you often have to enter a series of numbers to navigate through the system. Instead of entering these numbers by hand, you can store the numbers in your Contacts separated by special pause characters (W, P). There are two different types of pauses you can use when storing a number:

Wait (W)

The phone stops dialing until you press Left Soft Key  **Release** to advance to the next number.

Pause (P)

The phone waits 2 seconds before sending the next string of digits.

Contacts in Your Phone's Memory

Storing a Number with Pauses

1. Press **OK** **Menu**.
2. Press **5** **Contacts**.
3. Press **1** **New Contact**.
4. Enter a name (up to 22 characters).
5. Enter the number in any of the text fields presented (Mobile 1/ Home/ Work/ Mobile 2/ Fax).
6. While entering, press the Right Soft Key **Options**.
7. Press **3** **Wait** or **4** **Pause**.
8. Enter additional number(s) then press **OK**.



Adding a Pause to an Existing Number

1. While in Standby Mode, press Left Soft Key **Contacts** to display your Contacts alphabetically.
2. Use **Up/Down** to highlight the Contact entry to edit, then press **OK**.
3. Press Left Soft Key **Edit**.
4. Use **Up/Down** to highlight the number.
5. Press Right Soft Key **Options**.
6. Press **3** **Wait** or **4** **Pause**.
7. Enter additional number(s), then press **OK**.


Searching Your Phone's Memory

The **Script** phone is able to perform a dynamic search of the contents in your phone's memory. A dynamic search compares entered letters or numbers against the entries in your **Contacts**. A matching list is displayed in descending order. You can then select a number from the list to call or edit.





Scrolling Through Your Contacts

1. Press Left Soft Key  **Contacts** to display your **Contacts** alphabetically.
2. Use  to scroll through the list.

Searching by Letter

1. While in Standby Mode, press Left Soft Key  **Contacts** to display your **Contacts** alphabetically.
2. Press (or press repeatedly) the key on the keypad that corresponds with the search letter.

Contact List Options

1. While in Standby Mode, press Left Soft Key  **Contacts** and highlight a **Contact Entry**.
2. Press Right Soft Key  **Options**.
3. Select the search criteria in the **Contact List Search** menu (use  then press , or press the corresponding number on the keypad):

Contacts in Your Phone's Memory

1 ES **Contact List Search:** Search for contact either using Navigation or Search Window.

2 ABC **Send Message:** Send a text message or picture message, to the selected contact.

3 DEF **Delete:** Delete the selected entry in your Contacts.

4 GHI **Edit:** Edit the selected contact information.

5 JKL **Delete Multiple:** Choose from **Selective/ All** to delete multiple entries at one time.

6 MNO **Send via Bluetooth:** Send a contact(vCard) via Bluetooth®. In case Bluetooth® power is not on, a notice pops up to turn Bluetooth® on.






7 PQRS **Set Speed Dial/ Remove Speed Dial:** Set a speed dial or remove the speed dial.

Making a Call From Your Phone's Memory





Once you have stored phone numbers in your Contacts, you can place calls to those numbers quickly and easily.

- By pressing Talk Key **TALK** after searching for a phone number in Contacts or Call History and highlighting it.
- By using Speed Dialing.



From Contacts

1. While in Standby Mode, press Left Soft Key  **Contacts** to display your Contacts.
2. Use  to highlight the Contact entry, then press .
3. Use  to highlight the phone number.
4. Press  to place the call.


From Call History

1. Press  **Menu**.
2. Press  **Recent Calls**.
3. Use  to highlight the type of recent call, then press .

Missed Calls/ Received Calls/ Dialed Calls/ All Calls

4. Use  to highlight the phone number.
5. Press  to place the call.

Speed Dialing

For a single-digit Speed Dial, press and hold the digit or press the digit, then press . For a double-digit Speed Dial, press the first digit and hold the second digit or press the first and second digits, then press

.

Using Phone Menus


 
 
Messaging



The Script can store a total of up to 315 incoming messages and drafts. The information stored in the messages is determined by phone mode and service capability. Other limits such as available characters per message may exist, please check with your service provider for system features and capabilities.

1. New Text Message

Allows you to send text messages, pages, and e-mail transmissions. Each message will be formatted and sent according to the destination address.







The Basics of Sending a Text Message

1. Press , ,  .
2. Enter the recipient's address.

3. Press  to access the message screen.
4. Type your message (text or e-mail).
5. Press  **Send**.

A confirmation message is displayed.

Select Recipient(s) Using Options

1. Press , ,  .
2. Press Right Soft Key  **Options**.
3. Use  to highlight an option and press  .

Contacts To select a recipient from your Contact List.

Recent Calls To select a recipient from your Recent Calls.


Recent Messages Choose **Inbox/ Sent** to select a recipient

from your Recent Messages.

Groups Select a recipient from your Groups.






General/ Family/ Friends/ Colleagues/ Business/ School

Cancel Cancels editing your message.


- Complete your message and press  to send it, or go to **Options** (while entering text) to Save it.



Customize Your Text Message Using Options

While you are composing the text of a message you can insert customized text.

- Press , , .
- Enter the recipient's address.
- Use  or press  to highlight the text entry

window.

- Press Right Soft Key  **Options**.

- Use  to highlight an option and press .

The options available to customize your text message are:

Add Templates/ Signature


Save As Draft/ Templates

Priority Level Normal/ High

Callback # On/ Off

Delivery Notice On/ Off







Cancel Cancels editing your message.

- Complete your message and press  to Send.







Messaging

Message Icon Reference



Inbox

	New/Unread Text/Picture Message
	Opened/Read Text/Picture Message
	New/Unread Notification Message
	Opened/Read Notification Message
	Priority High
	MMS New/Read Priority High

Sent

	Failed Text/Picture Message
	Failed Multiple Text/Picture Messages
	Sent Message Pending
	Multi Messages Sent
	Sent Text/Picture Message
	Multiple Text/Picture Messages in transfer

Drafts


	Draft Text Message
	Draft Picture Message

2. New Picture Message








Allows you to send messages with Text, Image, and Audio.

- Press **SEND OK**, **1** **ES**, **2** **ARC**.
- Enter the recipient's address, or press Right Soft Key **↵** **Options** to search Contacts, and press **SEND OK** to select the desired contact. Other options are:
 - * Editing the Receiver
 - Contacts/ Recent Calls/ Recent Messages/ Groups/ Cancel
- Press **SEND OK** to access the text screen.
- Type your message.
- With the Image field highlighted press Left Soft Key **⇐** **Add**, highlight one of the

Messaging

options (below) available, and press  to select:

Image/Take Photo

6. Take the photo or use  to highlight a picture, then press Left Soft Key  **Set**.
7. With the highlight on **Audio**, press Left Soft Key  **Add**.
8. Press Left Soft Key  **Voice** to record a new Audio file.
9. Use  to highlight an audio file, then press Left Soft Key  **Set**.
10. With the highlight on **Subject**, enter the text.
11. Use Right Soft Key  **Options** to edit the individual field options (below):

* Editing the Text

Preview Shows your message before sending.

Add Templates/ Signature/ Slide

Go to Previous Slide/ Next Slide

Save As Draft/ Templates

Priority Level Normal/ High

Delivery Notice Enhanced/ Normal

Remove Image/ Audio/ Slide

Cancel Cancels the message.

* Editing Image

Preview/ Add Slide/ Go to/ Save As Draft/ Priority Level/ Delivery Notice/ Remove/ Cancel

* Editing Audio

Preview/ Add Slide/ Go to/ Save As Draft/ Priority Level/ Delivery Notice/ Remove/ Cancel

Messaging


* Editing Subject

Preview/ Add/ Go to/ Save
As/ Priority Level/ Delivery
Notice/ Remove/ Cancel

11. Press  to send.

3. Inbox

The phone alerts you in 2 ways when you receive a new message by:


- Displaying a notification message on the screen.
- Displaying the message icon  (It blinks when the message is urgent).

Received messages are displayed from newest to oldest.




Viewing Your Inbox

Up to 300 received messages (100 SMS, 100 MMS and 100 MMS Notification Messages) can be stored in the Inbox.

1. Press , **1** , **3** .

2. Use  to highlight an inbox message.

3. Press Left Soft Key

 **Reply** to reply,  **Chat** to start a chat session with the sender (not available with picture messages), or Right Soft Key  **Options** to **view** the message and access additional options.

For text messages the options are: **View/ Change View Type/ Delete/ Forward/ Save Contact/ Lock/ Message Info/ Delete Multiple**

For picture messages the options are: **Delete/ Forward/ Save Contact/ Lock/ Message Info/ Delete Multiple**

When viewing a particular text message and the **View Type** is set to **Detail View**, the Right Soft Key **Options** menu will contain the following options:

Delete Deletes the selected message.

Forward Forwards a received message to other destination address(es).

Save Contact Stores the callback number, e-mail address, and numbers in the received message into your Contacts.

Save as Templates Stores the message as a template for future messages.

Call Back Calls the number in the received message.

Go to website Accesses the website for messages with a URL.

Lock/Unlock Locks or unlocks the selected message.

Message Info Shows the message type priority and status.

Note

When you open a message in Chat Mode, the Options (with the Right Soft Key) available are:

View Last Message / Delete Last Chat / Delete All / Save Contact

Note

When you open picture messages, the options (with the Right Soft Key) available are:

Play Again/ Delete/ Forward/ Save Contact/ Save Media/ Lock/ Go to website/ Message Info

4. Sent

Up to 100 sent text messages or picture messages (50 SMS and 50 MMS) can be stored in the Sent folder. Access the Sent message list to view contents of sent messages and verify whether the transmission was successful or not.

Messaging

1. Press **OK**, **1**, **4**.
2. Use **↕** to highlight a sent message. Press Left Soft Key **↵** **Resend** to resend the message to the recipient, **VIEW OK** **View** to view the message, or Right Soft Key **≡** **Options** to access additional options (below):
Delete/ Forward/ Save Contact/ Lock/ Message Info/ Delete Multiple
3. While viewing the selected sent message, press Left Soft Key **↵** **Resend** to resend the message to the recipient, or Right Soft Key **≡** **Options** to access additional options (below):

Delete Deletes the selected message.

Forward Forwards a received message to other destination address(es).

Save Contact Stores the callback number, e-mail address, and numbers in the received message into your Contacts.

Save as Templates Stores the message as a template for future messages.

Lock/Unlock Locks or unlocks the selected message.

Message Info Shows the message type priority and status.

Note

For open picture messages, the options available are:

Play Again/ Delete/ Forward/ Save Contact/ Save Media/ Lock/ Go to website/ Message Info

5. Drafts

Displays saved messages and draft messages.

1. Press **MENU** **OK**, **1** **EA**, **5** **DL**.
2. Use **↓** to highlight a Saved message.

- Press **MENU** **OK** to **Edit**.
- Or press the Right Soft Key **≡** **Options** to view the options available (below):

Delete Deletes the selected message from the Drafts.

Save Contact Select **Save New/Update Existing** to store the callback number, e-mail address, and numbers in the received message into your Contacts or update an existing contact already stored in memory.

Lock/Unlock Locks a message so that it is not erased if the Erase Saved or Erase All feature is used.

Delete Multiple Selective/ All to delete multiple messages at one time.


6. Voicemail

Allows you to hear new voice messages recorded in your voice mail box. Your phone will alert you when you receive a new voice message.

Checking Your Voicemail Box

1. Press **MENU** **OK**, **1** **EA**, **6** **MNO**.
2. Choose from the following options:
 - Press Left Soft Key **≡** **Clear** to clear the voicemail counter.
 - Press **TALK** to listen to the message(s).


Messaging




- Press Right Soft Key  Exit to return to the Messaging menu.

7. Templates

Allows you to display, edit, and add text phrases. These text strings allow you to reduce manual text input into messages.

1. Press , , .
2. Press Left Soft Key  **New** to create a new template.


 





Enter text and press  to save the template.

3. Use  to highlight a template and press Right Soft Key  **Options**, then highlight an option and press  to select:

Delete/Edit

8. Settings

Allows you to configure settings for Messaging:

1. Press , , .
2. Use  to highlight **All Messages/ Text Message/ Picture Message/ Edit Voicemail #** then press .
3. Use  to highlight one of the settings and press  to select it.

Messaging Settings Sub-Menu Descriptions

8.1 All Messages

1. Auto Save (Auto Save/ Prompt/ Do Not Save)

With this feature on, messages are automatically saved in the Sent folder when transmitted.

2. Auto Delete (On/ Off)

With this feature on, read messages are automatically deleted when you exceed the storage limit.

3. Entry Mode

Allows you to select the default input method between T9Word, Abc and 123.

4. Signature (On/ Off/ Edit)

Allows you to make/edit a signature to automatically send with your messages.

5. Speed Messaging (On/ Off)

Allows you to send messages quickly to your Speed Dial contacts. Create a message, enter the text, then press Enter Number. Instead of entering a number, press and hold down the Speed Dial number; the message will automatically be sent to that Speed Dial.

8.2 Text Message

1. Auto View (On/ Off)

When set to On, new messages will automatically display on your screen when they are received.

2. Auto Play (On/ Off)

Allows the display to automatically scroll down while viewing messages.

Messaging

3. Callback # (On/ Off/ Edit)

With this feature on, you can input the callback number that will be automatically included when you send a message.

4. Delivery Notice (On/ Off)

8.3 Picture Message

1. Auto Receive (On/ Off)








With this set to On, attached content will automatically download when a new picture message is received.

8.4 Edit Voicemail

Allows you to manually enter the access number for Voicemail Service. This feature should only be used when a VMS (Voicemail Service) access number is not provided from the network.

9. Delete All

Allows you to erase the messages stored in your Inbox, Sent, or Drafts message folders. You can also erase all messages at the same time.

1. Press , , .
2. Use  to highlight an option: Delete Inbox/ Delete Sent/ Delete Drafts/ Delete All Messages then press .
3. Use  to highlight Yes/ No and press .

BREW

BREW

Brew allows you to do more than just talk on your phone. Brew is a technology and service that allows you to download and use applications on your phone. With Brew, it is quick and easy to personalize your phone to suit your lifestyle and tastes. Just download the applications that appeal to you. With a wide range of software available, from ringtones to games to productivity tools, you can be assured that you will find something useful, practical, or down right entertaining.

Downloading Applications

You can download applications and use Brew anywhere on the network, as long as your handset has a digital signal available. Most applications do not use a network connection while in use.

Incoming Calls


 
 

While downloading an application, incoming calls will automatically be sent to your voice mail, if available. If you do not have voice mail, downloading will not be interrupted by an incoming call, and the caller will receive a busy signal.

When using applications, an incoming call will automatically pause the application and allow you to answer the call. When you complete your call, you can resume using the application.

1. BREW Apps

Allows you to download selected applications while displaying the Brew Apps application list relayed from the Brew Apps server connection.

BREW



1. Press **YES** , **2** **ARC** .
2. Highlight **Yes** and press **YES**  to confirm.
3. Press  to switch to the **brew** tab.
4. Use  to highlight an option:
Browse Catalog/ Search

Note

If you attempt to download an application when the file memory is full, the following message will be displayed: "File Memory is full. To make enough storage space to install this app, the following app(s) will be temporarily disabled: ... You can restore disabled apps by simply starting them, at no additional cost. Proceed?". If you select Yes, the app(s) will be temporarily disabled.

2. my apps

Allows you to customize Brew settings.

1. Press **YES** , **2** **ARC** .
2. Highlight **Yes** and press **YES**  to confirm.
3. Select the application or open shop to browse and download apps.

Managing Your Brew Apps Applications

Download new applications and delete old ones at anytime.

Deleting Applications

Only removing an application deletes it completely from the memory of the phone. To restore an application once it has been deleted, you will be charged to download it again.

Web



Web

The Web feature allows you to view Internet content.


Accessibility and selections within this feature are dependent upon your service provider. For specific information on Web contact your service provider.

1. Start Browser

Allows you to initiate an Web session.

1. Press , .
2. An air time charges prompt can appear if the setting is enabled.
3. After a few seconds, you will see the home page.

Ending an Web Session

End an Web session by pressing .

Navigating Through the Browser

On-screen items may be presented in one of the following ways:

- **Numbered options**

You can use your numeric keypad or you can select the items by moving the cursor and pressing the appropriate Soft Key(s).

- **Links embedded in content**


You can act on the options or the links by using the Soft Keys at the bottom of the display screen.

Web


- **Text or numbers**

You can select the items by moving the cursor and pressing the appropriate Soft Keys.


Scrolling


Use  to scroll through the content if the current page does not fit on one screen. The currently selected item is indicated by a cursor on the screen.

Fast Scrolling




Press and hold  to quickly move the cursor up and down on the current screen.

Soft Keys

The Left Soft Key  is used primarily for first options or selecting an item, but its function may change depending on the content displayed.

The Right Soft Key  is used primarily for secondary options or a menu of secondary options.

Entering Text, Numbers, or Symbols

When prompted to enter text, the current text entry method appears above the Right Soft Key  as *abc*, *Sym*, *123*, etc. To change the input mode, press the Right Soft Key . To change to upper case, press .

Clearing Out Text/Numbers

Entered

When entering text or numbers, press **BACK** to clear the last number, letter, or symbol. Press and hold **BACK** to clear the input field completely.

Initiating a Phone Call From Web

You can make a phone call from Web if the site you are using supports the feature.

The browser connection is terminated when you initiate the call. After you end the call, your phone returns to the screen from which you initiated the call.

2. Web Settings

Allows you to select a browser alert type.

1. Press **MENU OK**, **#SPACE**, **9 MYX1**, **2 ABC**.









- Message Notification Automatic/ Prompt
- Prompt At Start/ At End/ Both/ None

Multimedia

Multimedia

View, take, and trade your digital pictures right from your wireless phone.

1. Take Photo

1. Press , , .
2. Set the brightness , zoom  and press Right Soft Key  Options to change other settings.
 - Use  to highlight an option (from the ones below) and press .

Resolution 960X1280/
480X640/ 240X320/
144X176/ 120X160

Quality Fine/ Normal/
Economy

Zoom

Brightness

Night Mode On/ Off

Self Timer Off/ 3 Seconds/
5 Seconds/ 10 Seconds

White Balance Auto/ Sunny/
Tungsten /Cloudy/
Fluorescent

Color Effects Color/ Sepia/
Mono/ Negative





Template On/ Off

Shutter Sound None/
Sound 1/ Sound 2/ Sound 3/
Say Cheese

Multishot Off/ 3 shots/
6 shots

Memory Storage Phone
Memory/ Card Memory

Auto-Save Enable/ Disable

3. Take a picture by pressing  **Take**.
4. Press Right Soft Key  **Delete**,  **Send**, or Left Soft Key  **Save**. Then choose from the following save options:




 

Save to Phone

Save to Card Memory

Set As Main Screen / Picture ID








2. Record Voice

Allows you to add, listen to, and erase short verbal reminders.






1. Press , **4 GHI**, **2 ABC**.
2. Press  **Record** to record a new voice memo.
3. Talk into the microphone, then press  **Stop**.
4. Press Left Soft Key  to **Save**. The default memo title is the date and time of recording.
5. While the highlight is still on the recording, press Right Soft Key  **Options** to access the following:
Set As/ Rename/ Delete

3. Images

Allows you to view images and to customize your phone's Main Screen or Picture and more.

1. Press , **4 GHI**, **3 DEF**.
2. Use  to highlight **My Images/ Default** then press .
3. Use  to highlight the image you want to display.
 - Press Right Soft Key  **Options** to access additional options when viewing an image. Use  to highlight an option (below) and press .
Set as/ File Filter/ Slide Show/ Edit/ Image Effects/ Take Photo/ Delete/ Rename/ Move/Copy/ Lock/ List View/ Information/ Delete Multiple/ Sort by/ Send via Bluetooth

Multimedia







- Press  **View** to view the selected image.
- Press Left Soft Key  **Send** to send the selected image to somebody else.
- Press  **Record** to begin recording.
- While recording, press Left Soft Key  **Pause** to pause, or  **Stop** to stop recording.






Note

Images in the Default folder may have less options available in the **Options** menu. They may also not be available for **Send via Bluetooth** or **Messaging**.

4. Audios

Allows you to listen to audio clips and more.











1. Press , , .
2. Press Left Soft Key  **Voice** to record an audio clip. From here, the options are:
 - Press Left Soft Key  **Audio** to return to the **Audios Folder**.
3. While browsing the audio files in the **Audios Folder**, use  to highlight the audio clip.

- Press Left Soft Key  **Send** to send the selected audio clip to somebody else.
- Press  **Play** to play the selected audio clip.
- Press Right Soft Key  **Options** to access additional options. Use  to highlight an option (below) and press :

Set as/ File Filter/ Record Voice/ Delete/ Rename/ Move/ Copy/ Lock/ Information/ Delete Multiple/ Sort by/ Send via Bluetooth

5. Shuffle

Allows you to set your wallpaper and ringtone to change randomly.

1. Press , **4** , **5** .
2. Use  to highlight **Ringtone List/ Wallpaper List** then press .
3. Press Left Soft Key  **Add**.
4. Use  to highlight the desired ringtones or wallpapers and press  to select them.
5. Press Left Soft Key  **Done** when you are finished selecting the ringtones or wallpapers you wish to add.
6. In main **Shuffle** screen (repeat Step 1), press Right Soft Key  **Options** and select **Set Ringtone / Set Wallpaper** to change the settings for the Shuffle function.

Contacts

Contacts

The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory.

Note

When you access your Contacts, the number in parentheses represents the number of entries you have stored (up to 1000).

1. New Contact

Allows you to add a new contact to your Contact List.








Note

Using this submenu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry through the Contact List.

1. Press **MENU**, **OK**, **5 XL**, **1 ER**.
2. Enter the name, then press **↵**.
3. Highlight the field you wish to store the contact information in.
4. Enter the phone number or e-mail address.
5. Continue adding the desired contact information to the entry.
6. When you are finished entering the desired contact information, press **MENU**, **OK**, **Save** to save the entry into your Contact List.









2. Contact List

Allows you to view your Contact List.

1. Press , , .
2. Choose from the following options:
 - Press  to scroll through your Contacts alphabetically.
 - Press Right Soft Key  **Options** to select one of the following:
 Contact List Search/ Send Message/ Delete/ Edit/ Delete Multiple/ Send via Bluetooth/ Set(Remove) Speed Dial
 - Press  **View** to view the contact's information.
 - Press Left Soft Key  **New** to store new contact information.

3. Groups










Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a whole group.

1. Press , , .
2. Choose from the following options:
 - Use  to highlight a group, then press  **View** to view the contacts in the selected group.
 - Press Left Soft Key  **New** to add a new group.
 - Use  to highlight a group, then press Right Soft Key  **Options** to choose from the following options:
 Delete/ Send Message/ Rename Group/ Set Ringtone/ Delete All

Contacts

4. Speed Dials







Allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.

1. Press , , .
2. Use  to highlight the desired Speed Dial location (or enter the Speed Dial digit), and press  **Assign**.
3. Use  to highlight the Contact then press .
4. Use  to highlight the number (if applicable), then press .

A confirmation message is displayed.

5. My Name Card

Allows you to view all of your personal Contact information including name and phone numbers.

1. Press , , .
2. Use  to highlight the feature you wish to edit, and press Left Soft Key  **Edit**.
3. Edit the information as desired and press .

Note


You cannot edit the default (Mobile 1) number, but you can add and edit additional phone numbers and other contact info.

Recent Calls

Recent Calls





The Recent Calls Menu is a list of the last phone numbers or Contacts entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Note

To view a quick list of all your recent calls, press TALK Key  while in standby mode.





1. Missed Calls

Allows you to view the list of missed calls; up to 40 entries.

1. Press , ,  .
2. Use  to highlight an entry.





2. Received Calls

Allows you to view the list of incoming calls; up to 40 entries.

1. Press , ,  .
2. Use  to highlight an entry.

3. Dialed Calls

Allows you to view the list of outgoing calls; up to 40 entries.

1. Press , ,  .
2. Use  to highlight an entry.

Recent Calls

4. All Calls

Allows you to view the list of missed, received and dialed calls; up to 120 entries.

1. Press **MENU OK**, **6 MNO**, **4 GHI**.
2. The history of all calls are displayed.

5. Call Timer

Allows you to view the duration of selected calls.

1. Press **MENU OK**, **6 MNO**, **5 JKL**.
2. Use **UP/DN** to highlight a call type (below).
Last Call/ Home Calls/
Roam Calls/ All Calls

6. Data

Allows you to view the list of data calls; up to 40 entries.

1. Press **MENU OK**, **6 MNO**, **6 MNO**.
2. Use **UP/DN** to highlight an entry.

7. Data Counter

Allows you to view the list of received and transmitted data calls.

1. Press **MENU OK**, **6 MNO**, **7 PQRS**.
2. Use **UP/DN** to highlight a data call category, then press **MENU OK** to exit.

Received Data/ Sent Data/
All Data

Music

Music

The **Script** comes equipped with a Music Player with many features. This Menu also allows you to transfer songs stored in your memory card. For the availability of this feature, there should be stored music in your memory card.

Note

Avoid Hearing Damage Warning:

Permanent hearing loss may occur if speakerphone, earphones or headphones are used at high volume over a long period of time.

You can adapt over time to a higher volume of sound, which may sound normal but can be damaging to your hearing.

We, therefore, recommend that you **DO NOT** turn on the handset in close proximity of your ears or if the earphones are plugged in.

Please set your music and call volume to a safe level.

1. All Songs

1. Press **MENU/OK**, **7 FPRS**, **1 ES**.
2. Use **↔** to select the music file and press **MENU/OK** **Play** to play or the Right Soft Key **↵**.

Options:

Add to Playlist/ Delete/ Information/ Delete Multiple (Selective/ All)

or (When playing music)

Repeat (Repeat Off/ Repeat One/ Repeat All)

Shuffle (On/ Off)

2. Playlists

Allows you to create and listen to Playlists.

1. Press **MENU/OK**, **7 FPRS**, **2 ABC**.





Music

2. Press the Left Soft Key  **New** to create a new playlist or press Right Soft Key  **Options** for the following options:

Create Playlist/ Import M3U file




3. Recently Played

Allows you to view the most recently played songs.

1. Press , **7** **PCRS**, **3** **DEF**.
2. Use  to highlight the recently played songs. Then press  **Play** to play or the Right Soft Key  **Clear** to clear the list.




4. Artists

Allows you to view and listen to your music by Artists.

1. Press , **7** **PCRS**, **4** **GHI**.
2. Use  to select the artist to view and press  to view the songs in your collection by that Artist.




5. Genres

Allows you to view and listen to your music by Genre.

1. Press , **7** **PCRS**, **5** **JKL**.
2. Use  to select the Genre to view and press .

6. Albums

Allows you to view and listen to your music by Album.










1. Press , **7** **PCRS**, **6** **MNO**.
2. Use  to select the Album and press  to view the songs from that Album.



My Schedule

My Schedule

1. Calendar

Allows you to store and access your agenda(s). Simply enter your appointments in the Calendar, and your phone will alert you with a reminder.

1. Press , , .
2. Use  to highlight the scheduled day.
 -  Moves cursor to the previous day.
 -  Moves cursor to the next day.
 -  Moves to the previous week.
 -  Moves to the next week.
3. Press Left Soft Key  **New**.





4. Use  to highlight the field you wish to edit, then press Left Soft Key  **Set** to edit your schedule information:

- Set Time
- Subject
- Reminder
- Repeat
- Repeat End
- Ringtone

5. Press  **Save**.

2. Notepad

Allows you to add, read, edit, and erase notes to yourself.

1. Press , , .
2. Press Left Soft Key  **New** to write a new note.

My Schedule/ My Menu

3. Alarm Clock

Allows you to set up to five alarms. At the alarm time, any set alarm will sound the tone of your choice, and an alarm message will be displayed on the LCD screen.

1. Press **VIEW/OK**, **8 TUV**, **3 DEF**.
2. Use **↵** to highlight the alarm you wish to set, then press **VIEW/OK** to select it.
3. Press Left Soft Key **≡ Set** to set the alarm time.
4. Use **↵** to highlight Repeat (recurrence setting).
5. Press **↵** to select one of the following.
Once/ Daily/ Mon - Fri/
Weekends

6. Use **↵** to highlight Ringtone, press Left Soft Key **≡ Set** and select a ringtone.
7. Press **VIEW/OK** Save.

My Menu

Allows you quick access to your favorite menus. A maximum of 12 items can be stored in My Menu.

1. Press **VIEW/OK**, **9 WXYZ**.
2. Select the location of your choice by using **↵**, then press **VIEW/OK**.
3. Select the menu you wish to add to My Menu by using **↵**, then press **VIEW/OK**.

Bluetooth®

Bluetooth®

The **Script** is compatible with devices that support the Bluetooth® headset and hands-free profile(s)*. You may create and store 20 pairings with the **Script** and connect to one device at a time. The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).

Bluetooth QD ID B014981

Note

- Read user guide of each Bluetooth® accessory that you are trying to pair with your phone because the instructions may be different.




Note*

- The Bluetooth® features available on this handset may not be compatible with all Bluetooth enabled devices. Your service provider or handset manufacturer cannot be held responsible for compatibility issues with devices not sold by the service provider or handset manufacturer.



1. Paired Devices

Pairing is the process that allows the handset to locate, establish and register 1-to-1 connection with the target device.

For pairing new Bluetooth® device


1. Press , ,  .
2. Follow the Bluetooth® accessory instructions to set the device to pairing mode.


Bluetooth®

3. Press Left Soft Key  **Search**.
4. If Bluetooth® power is set to off, you will be prompted to turn power on. Highlight Yes and press .

Note

By default, your device's Bluetooth® functionality is turned off.

5. Choose to conduct a **New Search** or to bring up the results of the **Last Search** (if applicable).
6. The device will appear in the **Add New Device** list once it has been located. Highlight the device and press .
7. The handset may prompt you for the passkey. Consult the Bluetooth® accessory instructions for the

appropriate passkey (typically "0000" - 4 zeroes). Enter the passkey and press .






Note

If pairing with another phone, you may be prompted to create/verify matching security codes.

8. Once pairing is successful, select between **Always Ask/Always Connect**.
9. Once connected, you will see the device listed in the Paired Devices menu.

2. Power

Allows you to set the power On/Off.

1. Press , , .
 2. Use  to select a setting, then press .
- On/ Off**

Note

By default, your device's Bluetooth® functionality is turned off.

3. My Visibility

Allows you to set the visibility of your Bluetooth® device.

1. Press **MENU OK**, *** SHFT**, **3 DEF**.
2. Use **↓** to select a setting, then press **MENU OK**.

Visible/ Hidden

Note

If you turn on My Visibility, your device is able to be searched by other in-range Bluetooth® devices.

4. My Bluetooth Name

Allows you to edit the name of the Bluetooth® device.

1. Press **MENU OK**, *** SHFT**, **4 CH**.
2. Hold down **BACK** to clear the existing name.
3. Use the alphanumeric keypad or slide out QWERTY keyboard to enter a new alias.
4. Press **MENU OK** to save and exit, or Right Soft Key **Cancel** to cancel editing.

5. My Bluetooth Info

Allows you to view the information of the Bluetooth® function.

1. Press **MENU OK**, *** SHFT**, **5 JKL**.

Tools




 
Tools

Your phone is equipped with helpful tools, including: Voice Command, Ez Tip Calc, Calculator, World Clock, Stopwatch, and Unit Converter.






1. Voice Command

Allows you to make phone calls quickly and easily by voice. Your phone recalls the number from your Contacts, displays it briefly, and then dials it. This menu also includes features that are useful for those who are driving or blind. It delivers time information by voice and allows you to check missed calls, messages and voicemails.





 
1.1 Start Command

- To enter the Voice Command Menu, press , , ,  .

1.1.1 Call <Name> or <Number>

- Press , , , ,  .
- Say the name as it is saved in your Contact List or say the number.

1.1.2 Voicemail

- Press , , , ,  .
- The phone will announce any new Voicemail(s).

1.1.3 Missed Calls

You can hear details about missed calls.

1. Press **SEND OK**, **0 + NEXT**, **1 END**, **1 END**, **3 DEF**.

1.1.4 Messages

This voice command feature will read out information from messages received.

1. Press **SEND OK**, **0 + NEXT**, **1 END**, **1 END**, **4 MSG**.

1.1.5 Time & Date

This voice command feature will read out the current time & date.

1. Press **SEND OK**, **0 + NEXT**, **1 END**, **1 END**, **5 CLK**.

1.1.6 Help

Allows you to view more information about the features in Voice Control.

1. Press **SEND OK**, **0 + NEXT**, **1 END**, **1 END**, **6 MIND**.

1.2 Command Mode

Allows you to choose between Normal or Speed settings. The Speed setting allows you to access the Voice Command functions more quickly with a non-verbal prompt.

1. Press **SEND OK**, **0 + NEXT**, **1 END**, **2 ABC**.
2. Select options.
Normal/ Speed

Tools

1.3 Announce Alert

Allows you to customize the Announce Alert function. Alert Announce allows you to hear more information about an incoming call in addition to, or instead of, the Ring/Ringtone.

1. Press **NEW OK**, **0 NEXT**, **1 ES**, **3 DEF**.

2. between the options: **Disable/Announce/ Announce + Ring**

1.4 Train Word

Allows you to train the voice recognition for improved results.

1. Press **NEW OK**, **0 NEXT**, **1 ES**, **4 GHT**.

2. Select options.
**Voice Command/ Answer/
Digit Dial**

1.5 Best Match

Allows you to customize Best Match settings.

1. Press **NEW OK**, **0 NEXT**, **1 ES**, **5 JKL**.

2. Select options.
1 Match/ 4 Matches

2. Ez Tip Calc

Allows you to quickly and easily estimate the tip and total amount of a bill by inputting the bill amount before tip, the tip percentage, and dividing it by the number of people paying.

1. Press **NEW OK**, **0 NEXT**, **2 ABC**.

3. Calculator

Allows you to perform simple mathematical calculations. You can enter numbers up to the eighth decimal place.

1. Press , , .
2. Enter data.
 - Use keypad to enter numbers.
 - Use or (on the QWERTY) to enter decimals.
 - Use or (on the QWERTY) to set as negative or positive.
 - Press Left Soft Key Clear to the entry.
 - Press Right Soft Key Operator for additional calculating options.

- Use Navigation Keys to enter functions.
- Press to complete equation.

4. World Clock









Allows you to determine the current time in another time zone or country.

1. Press , , .
2. Press Right Soft Key Cities to select a specific city and display the date/time in that location, then press .
3. Use to scroll through all available cities on the map.
4. Press to select the highlighted city.
5. Press Left Soft Key Set DST to set daylight saving time.

Tools

5. Stopwatch

Allows you to use the Stopwatch function of the phone.

1. Press , , ,  .
2. Press  **Start** to start, and press  **Stop** to stop.
 - You can use the Lap function by pressing Right Soft Key  **Lap** to record up to 20 laps and lap times.
3. Press Left Soft Key  **Reset** to reset.

6. Unit Converter

Allows you to convert units of Area, Length, Temperature, Mass, Volume and Velocity.

1. Press , , ,  .

Settings

Settings

1. Sound

Options to customize your phone's sounds:

1.1 Ringers

Allows you to assign ringtones for incoming calls.

1. Press **MENU OK**, **#SPACE**, **1 ER**, **1 ER**.
2. Select **All Calls/ Caller ID/ No Caller ID/ Restricted Calls/ Shuffle**.
3. The **Audios** folders will be displayed. Press **MENU OK** to open the desired folder.
4. Use **↔** to highlight the ringtone.
5. Press **MENU OK** **Play** to play the ringtone, and Left Soft Key **Set** to set the ringtone to your phone.

1.2 Volume

Allows you to set various volume settings.

1. Press **MENU OK**, **#SPACE**, **1 ER**, **2 ABC**.
2. Select **Master Volume/ Keypad/ Earpiece/ Speaker**.
3. Use **↕** to adjust the volume of the function, then press **MENU OK** to save the setting.

1.3 Message Alerts

Allows you to select the alert tone for a new message.

1. Press **MENU OK**, **#SPACE**, **1 ER**, **3 DEF**.
2. Select **Text Message/ Picture Message/ Voicemail/ All Messages/ Message Reminder**.
3. Use **↕** to select a setting, then press **MENU OK**.

Settings

1.4 Alert Type

Allows you to select the alert types.

1. Press **MENU**, **OK**, **#SPACE**, **1**, **ES**, **4**, **DIR**.

2. Use **↕** to highlight the alert you wish to edit.

**Call Alert/ Message Alerts/
Calendar Alert/ Alarm Alert**

3. Use **←** to scroll through the alert types.

**Ring Only/ Vibrate Only/
Ring & Vib**

4. Press **MENU**, **OK** to save.

1.5 Service Alerts

Allows you to set any of the 4 Alert options to On or Off.

1. Press **MENU**, **OK**, **#SPACE**, **1**, **ES**, **5**, **JKL**.

2. Select an alert option.

1.5.1 Minute Beep

Alerts you 10 seconds before the end of every minute during a call.

1.5.2 Call Connect

Alerts you when the call is connected.

1.5.3 Back to Top

Alerts you when you scroll through the end of a menu list.

1.5.4 Low Battery

Alerts you when the battery charge level is low.

3. Use **↕** to set **On/ Off**, then press **MENU**, **OK** (for Low Battery, the options are: **Announce/ Tone**)

1.6 Power On/Off Tone

Allows you to set the phone to sound a tone when the phone is powered on and off.

1. Press **MENU OK**, **#SPACE**, **1 EB**, **6 MIND**.
2. Use **↵** to set **On/ Off**, then press **MENU OK**.

1.7 Slide Tone

Allows you to set a tone that will play when you Slide your phone open or closed.

1. Press **MENU OK**, **#SPACE**, **1 EB**, **7 PORS**.
2. Use **↵** to set **On/ Off**, then press **MENU OK**.

2. Display

Options to customize your phone's display screen.

2.1 Wallpaper

Allows you to choose the kind of background to be displayed on the phone.

1. Press **MENU OK**, **#SPACE**, **2 ABC**, **1 EB**.
2. Select **Main Screen/ Shuffle**, then press **MENU OK**.

2.1.1 Main Screen

From the Main Screen browse the **My Images** or **Default** folders and press **MENU OK** **View** to view the image, and Left Soft Key **⏪** **Set** to set it as the wallpaper.




 





Settings

2.1.2 Shuffle

Allows you to set the Shuffle on the Main Screen to **On** or **Off**, you can also set the frequency in the **Repeat** field.






2.2 Banner

Allows you to enter a string of characters which display on the LCD screen.



1. Press , , , .
2. Use  to scroll between **On/ Off**.
3. Use  to highlight the text window.
4. Input text and press Left Soft Key  **Abc** to change text options,  **Save** to save, or Right Soft Key  **Cancel** to cancel editing your banner.

2.3 Backlight

Allows you to set the duration for illuminating the backlight.






1. Press , , , .
2. Choose a submenu (options below), then press .

Display/ Keypad

3. Use  to select a setting, then press .







2.4 Menu Style

Allows you to view the main Menu items as icons or on a list.

1. Press , , , .
2. Select **Icon** or **List** and press .






2.5 Languages


Allows you to use the bilingual feature according to your preference. Choose between English and Spanish.

1. Press , , , .
2. Use  to select **English** or **Spanish**, then press .

2.6 Clocks & Calendar




 

Allows you to select the type of clocks displayed on the main LCD.

1. Press , , , .
2. Switch between the options (below) using .



Normal Clock/ Analog Clock/ Digital Clock/ Dual Clock/ Calendar/ Off
3. Press Left Soft Key  Set to set.

2.7 Font Settings

Allows you to select the type of font displayed on LCD.

1. Press , , , .
2. Choose a sub-menu and press .

**Font Type/ Dial Font Style/
Dial Font Size**

3. Use  to highlight an option, then press .

Options for Font Type

LG Arial/ LG Script/ LG Serif

Options for Dial Font Style

**Robot/ Green Lawn/
Painter/ Basic**

Options for Dial Font Size

Normal/ Large

Settings

2.8 Word Prediction

Allows you to activate word prediction, a function that uses your past text entry to guess what your next word will be. The result can be much easier and faster text entry. Text entry mode must be in T9Word for this function to work.”

1. Press **MENU** **OK** , **#SPACE** , **2 ABC** , **8 TUV** .
2. Use **↕** to set **On/ Off**, then press **MENU** **OK** .

2.9 Name Match for Dialing

Allows you to turn Name Match for Dialing On or Off.

1. Press **MENU** **OK** , **#SPACE** , **2 ABC** , **9 WXYZ** .
2. Use **↕** to select a setting, then press **MENU** **OK** .

3. Keyguard Timer

Options to customize your phone's Keyguard Timer

1. Press **MENU** **OK** , **#SPACE** , **3 DEF** .
2. Select between **7 Seconds/ 15 Seconds/ 2 Minutes/ Always Off**

4. Security

The Security menu allows you to secure the phone electronically.

4.1 Lock Phone

Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can still receive phone calls and make emergency calls. You can modify the lock code by setting a New Lock code within the Security menu.

1. Press **MENU**, **OK**, **SPACE**, **4** **GHT** .
2. Enter the four-digit lock code and press **MENU**, **OK** .
The default lock code is commonly the last 4 digits of your phone number.
3. Press **1** **IE** **Lock Phone**.
4. Use **↵** to select an option, then press **MENU**, **OK** .

Unlock The phone will remain unlocked.

Lock The phone is locked until it is unlocked again. When locked, you can receive incoming calls and make only emergency calls.

On Power Up The phone is locked when it is turned on.

4.2 Restrictions

Allows you to restrict Calls, Messaging, Camera or Data.






1. Press **MENU**, **OK**, **SPACE**, **4** **GHT** .
2. Enter the four-digit lock code and press **MENU**, **OK** .
3. Press **2** **ABC** **Restrictions** and enter the four digit code.
4. Use **↵** to select between **Incoming Calls/ Outgoing Calls/ Incoming Messages/ Outgoing Messages/ Camera/ Data**, then press **MENU**, **OK** .

4.3 Emergency #s

Allows you to enter 3 emergency numbers. You can call these emergency numbers and 911, even when the phone is locked or restricted.







1. Press **MENU**, **OK**, **SPACE**, **4** **GHT** .

Settings

2. Enter the four-digit lock code and press .
3. Press  **Emergency #s.**
4. Press  to edit the emergency numbers.
5. When you are finished editing the number, press  **Save** to save, or Right Soft Key  **Cancel** to cancel editing.

4.4 Change Lock Code

Allows you to enter a new four-digit lock code.

1. Press , , .
2. Enter the four-digit lock code and press .
3. Press  **Change Lock Code** and select **Phone Only/Call & Applications**.
4. Enter a new 4-digit lock code and press .







Note



To change Call & Applications lock code, you will first be asked to re-enter the current lock code.

5. For confirmation, it will ask you to enter the new lock code again.

4.5 Reset Default

Allows you to reset your phone to the factory default settings.

1. Press , , .
2. Enter the four-digit lock code and press .
3. Press  **Reset Default.**
4. A message will pop up that says "Preference settings will be set to factory defaults. Press <OK> to continue." Press .







5. Use  to highlight an option (below) and press .
- Revert/ Cancel.

5. Call Settings

The Call Settings menu allows you to designate how the phone handles both incoming and outgoing calls.

5.1 Answer Options







Allows you to determine how to answer an incoming call.

1. Press , , , .
2. Use  to select a setting (from below), then press .

**TALK Key Only/ Any Key/
Auto Answer**

5.2 Auto Retry

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

1. Press , , , .
2. Use  to select a setting, then press .



**Off/ Every 10 Seconds/
Every 30 Seconds/
Every 60 Seconds**

5.3 One-Touch Dial

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Off, Speed Dial numbers designated in your Contacts will not function.

1. Press , , , .

Settings

- Use  to select a setting, then press .



On/ Off

5.4 Voice Privacy

Allows you to set the voice privacy feature for CDMA calls as Enhanced or Standard.

CDMA technology already offers inherent voice privacy. Check with your service provider for availability.

- Press , , , .

- Use  to select a setting, then press .



Enhanced/ Standard

5.5 Airplane Mode

Allows you to use features on your phone that do not require wireless communications.

- Press , , , .

- Read the displayed message and press  to continue.

- Use  to select a setting, then press .

On/ Off



5.6 TTY Mode

Allows you to attach a TTY (Teletype writer) device, enabling you to communicate with parties also using a TTY device.

A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

- Press , , , .

- Read the displayed message and press  to continue.

- Use  to select a setting, then press .

TTY Full/ TTY + Talk/
TTY + Hear/ TTY Off

6. PC Connection

Allows you to select the PC connection mode for your device.

1. Press **MENU**, **SPACE**, **6** **MENU**.
2. Use **DOWN** to select a setting, then press **MENU**.

USB Modem/ USB Mass
Storage/ Setting Reminder

7. System

The System menu allows you to designate specific system network settings.

7.1 Network

7.1.1 System Select

Allows you to set up the phone producer's management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

1. Press **MENU**, **SPACE**, **7** **PHONE**, **1** **ES**, **1** **ES**.
2. Use **DOWN** to highlight **Home Only / Automatic A / Automatic B** then press **MENU**.

Settings

7.1.2 Set NAM

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Press , , , , .
2. Use to highlight **NAM1** or **NAM2**, then press .

7.1.3 Auto NAM

Allows the phone to automatically switch between programmed telephone numbers corresponding to the service provider area.

1. Press , , , , .
2. Use to highlight **On** or **Off**, then press .

7.1.4 Serving System

Identifies the channel number of a system that is served as an SID Number. This information should only be used for technical support.

1. Press , , , , .

7.2 Location

Menu for GPS (Global Positioning System: Satellite assisted location information system) mode.

1. Press , , , .
2. Use to highlight a setting, then press .

Location On/ E911 Only

Note

GPS satellite signals are not always transmitted, especially under bad atmospheric and environmental conditions, indoors etc.

8. Memory

Allows you to check out the memory status of your phone and change Save options.

1. Press **MENU/OK**, **#SPACE**, **8 TUV**.
2. Use **↔** to highlight **Save Options/ Phone Memory/ Card Memory**, and press **MENU/OK**.

9. BREW & Web**9.1 BREW Info**

Allows you to choose whether you wish to see the data charges warning every time you start BREW.

1. Press **MENU/OK**, **#SPACE**, **9 WXYZ**, **1 ER**.
2. Select **Yes** or **No**.

9.2. Web Settings

Allows you to configure Web notification settings.

1. Press **MENU/OK**, **#SPACE**, **9 WXYZ**, **2 ABC**.
 - Message Notification Automatic/ Prompt
 - Prompt At Start/ At End/ Both/ None

Settings

Managing Your Brew Apps Applications






Download new applications and delete old ones at anytime.

Deleting Applications

Only removing an application deletes it completely from the memory of the phone. To restore an application once it has been deleted, you will be charged to download it again.

0. Phone Info

The Phone Info menu provides you with specific information pertaining to your phone model.

1. Press , , .
2. Use  to highlight an option and press , or press the corresponding number key.

**My Number/ ESN/MEID/
Icon Glossary/ Version**

Safety

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection.

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments

Safety

could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and

always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association

recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with Pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that

interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas

Safety

instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air.

Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations);

below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all times after reading it.

Caution! *Violation of the instructions may cause minor or serious damage to the product.*

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Use the correct adapter for your phone when using the battery pack charger abroad.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.

Safety

Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery doesn't need to be empty before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to

usage patterns and environmental conditions.

- Use of extended backlighting, Browser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug,

ensure that it's firmly connected. If not, it may cause excessive heat or fire.

- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and - terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Do not disassemble or crush the battery. It may cause a fire.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.

Safety

- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Warning! Important safety information

Avoiding hearing damage

Permanent hearing loss may occur if you use your phone and/or headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you

experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use your phone and/or headset at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your phone, see the features guide for your phone.

Using your phone safely

Use of your phone while

operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using your phone if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.

Avoiding hearing damage

Permanent hearing loss may occur if you use your headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

Safety

- Limit the amount of time you use headset at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your headset, please refer to the features guide for your headset.

Using headsets safely

Use of headsets to listen to music while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using this device if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.

FDA Consumer Update

The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known

adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF)

energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the

Safety

best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit

connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that

Safety

had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from

wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more

years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that

high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on

Safety

wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures.

The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website

(<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first

consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head.

Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these

Safety

products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not

demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by

other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method

to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and

Safety

performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

Commission (FCC) RF Safety Program
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project
(<http://www.who.int/emf>)

National Radiological Protection Board (UK)
(<http://www.hpa.org.uk/radiation/>)

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones
(<http://www.fda.gov/cellphones/>)
Federal Communications

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When

using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Don't take notes or look up

Safety

phone numbers while driving. If you are reading an address book or business card, or writing a “to-do” list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.

6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip -- dial only a few numbers, check the road and

your mirrors, then continue.

7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations -- with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or

medical emergency. Remember, it's a free call on your wireless phone!

9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your

wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

Safety

Consumer Information on SAR

(Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Counsel on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and

engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC

with the phone transmitting at its highest certified power level in all tested frequency bands.

Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2.0 cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.79 inches (2.0 cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

The FCC has granted an Equipment Authorization for this

Safety

model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

The highest SAR value for this model phone when tested for use at the ear is 1.51 W/kg and when worn on the body, as described in this user's manual, is 1.10 W/kg. While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID.

To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed

somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are

more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

 
 
Safety

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for

normal use. A sum of 6 is considered for best use.

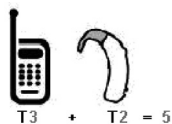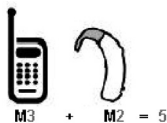

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This is synonymous for T ratings. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT

marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

For information about hearing aids and digital wireless phones

FCC Hearing Aid Compatibility and Volume Control

<http://www.fcc.gov/cgb/dro/hearing.html>

Gallaudet University, RERC

<http://tap.Gallaudet.edu/DigWireless.KS/DigWireless.htm>

Hearing Loss Association of America [HLAA]

<http://www.hearingloss.org/learn/cellphonetech.asp>

The Hearing Aid Compatibility FCC Order

http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf

Accessories

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability. Optional items are sold separately.

Battery Charger

The battery charger allows you to charge your phone.



Battery

Standard battery is available.



Vehicle Power Charger

The vehicle power charger allows you to operate the phone and trickle charge the phone's battery from your vehicle.



USB Cable



Limited Warranty Statement

1. *WHAT THIS WARRANTY COVERS:*

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or

transferable to any subsequent purchaser/end user.

- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service

Limited Warranty Statement

Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise,

which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.

including, but not limited to any implied warranty of marketability or fitness for a particular use.

- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. WHAT LG WILL DO:

“LG will, at its sole option, either repair, replace or refund the

purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.”

4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

Limited Warranty Statement

Limited Warranty Statement

LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

5. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit <http://us.lgservice.com>. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets

P.O. Box 240007, Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS. Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

Index

I

10 Driver Safety Tips
108

A

Accessories 118
Airplane Mode 84
Alarm Clock 66
Albums 64
Alert Type 76
All Calls 62
All Messages 47
All Songs 63
Announce Alert 72
Answer Options 83
Artists 64
Audios 56
Auto NAM 86
Auto Retry 83

B

Back to Top 76
Backlight 78

Banner 78
Battery Charge Level
25
Best Match 72
Bluetooth® 67
BREW 49
BREW & Web 87
BREW Apps 49
BREW Info 87

C

Calculator 73
Calendar 65
Call <Name> or
<Number> 70
Call Connect 76
Call Settings 83
Call Timer 62
Call Waiting 30
Caller ID 30
Change Lock Code 82
Charging the Battery
23
Clocks & Calendar 79

Command Mode 71
Consumer Information
on SAR 112
Contact List 59
Contacts 58
Contacts in Your
Phone's Memory 33
Correcting Dialing
Mistakes 28

D

Data 62
Data Counter 62
Delete All 48
Dialed Calls 61
Display 77
Drafts 45

E

Edit Voicemail # 48
Emergency #'s 81
Entering and Editing
Information 32
Entering Text With the

Index

QWERTY Keyboard 18
Ez Tip Calc 72

F

FCC Hearing-Aid
Compatibility (HAC)
Regulations for
Wireless Devices 115
FDA Consumer Update
98
Font Settings 79

G

Genres 64
Getting Started with
Your Phone 23
Groups 59

H

Help 71
How to Install Your
microSD™ Card 24
How to Remove Your
microSD™ Card 25

I

Images 55
Important Safety
Precautions 1
Inbox 42
Index 123

K

Keyguard Timer 80

L

Languages 79
Limited Warranty
Statement 119
Location 86
Lock Mode 29
Lock Phone 80
Low Battery 76

M

Main Screen 77
Making a Call From
Your Phone's Memory
36

Making Calls 27
Memory 87
Menu Style 78
Menus Overview 20
Message Alerts 75
Messages 71
Messaging 38
Minute Beep 76
Missed Calls 61, 71
Multimedia 54
Music 63
Mute Function 29
my apps 50
My Bluetooth Info 69
My Bluetooth Name
69
My Menu 66
My Name Card 60
My Schedule 65
My Visibility 69

N

Name Match for
Dialing 80
Network 85

New Contact 58
New Picture Message
40
New Text Message 38
Notepad 65

O

One-Touch Dial 83

P

Paired Devices 67
PC Connection 85
Phone Info 88
Phone Numbers With
Pauses 33
Phone Overview 16
Picture Message 48
Playlists 63
Power 68
Power On/Off Tone 77

Q

Quick Access to

Convenient Features
29

R

Received Calls 61
Receiving Calls 28
Recent Calls 61
Recently Played 64
Record Voice 55
Redialing Calls 28
Reset Default 82
Restrictions 81
Ringers 75

S

Safety 89
Safety Information 93
Screen Icons 27
Searching Your Phone's
Memory 35
Security 80
Sent 43
Service Alerts 76
Serving System 86

Set NAM 86
Settings 46, 75
Shuffle 57, 78
Signal Strength 26
Slide Tone 77
Sound 75
Speed Dialing 30
Speed Dials 60
Start Browser 51
Start Command 70
Stopwatch 74
System 85

T

Table of Contents 4
Take Photo 54
Technical Details 11
Templates 46
Text Input 32
Text Message 47
The Basics of Storing
Contacts Entries 33
The Battery 23
TIA Safety Information

Index

89
Time & Date 71
Tools 70
Train Word 72
TTY Mode 84
Turning the Phone On
and Off 26

Warning! Important
safety information 96
Web 51
Web Settings 53, 87
Welcome 10
Word Prediction 80
World Clock 73

U

Unit Converter 74
Using Phone Menus
38

V

Voice Command 70
Voice Privacy 84
Voicemail 45, 70
Volume 75
Volume Quick
Adjustment 29

W

Wallpaper 77

