



LX101 User Guide

Table of Contents

Introduction	i
Your Phone's Menu	ii
Getting Started	1
Setting Up Service	2
Getting Started	3
Setting Up Your Voicemail	4
Getting Help	5
Your Phone	7
Your Phone: The Basics	8
Front View of Your Phone	9
Viewing the Display Screen	13
Features of Your Phone	15
Turning Your Phone On and Off	17
Using Your Phone's Battery and Charger	18
Navigating Through Phone Menus	21
Displaying Your Phone Number	22
Making and Answering Calls	23
Entering Text	34
Controlling Your Phone's Settings	40
Sound Settings	41

Display Settings	46
Location Settings	49
Messages Settings	50
Airplane Mode	53
TTY Use	54
Phone Setup Options	56
Setting Your Phone's Security	60
Accessing the Security Menu	61
Using Your Phone's Lock Feature	61
Using Special Numbers	63
Erasing Phone Content	63
Resetting Default Settings	64
Resetting Your Phone	65
Controlling Your Roaming Experience	66
Understanding Roaming	67
Setting Your Phone's Roam Mode	69
Using Call Guard	70
Using Data Roam Guard	72
Managing History	73
Viewing History	74
History Options	75
Making a Call From History	76
Viewing History Thread	76
Saving a Phone Number From History	77

Prepend a Phone Number From History	78
Erasing History	79
Using Contacts	80
Adding a New Contact Entry	81
Finding Contact Entries	82
Contact Entry Options	83
Adding a Phone Number to a Contact Entry	84
Editing a Contact Entry's Phone Number	85
Assigning Speed Dial Numbers	86
Editing a Contact Entry	88
Selecting a Ringer Type for an Entry	88
Dialing Services	89
Using the Phone's Calendar and Tools	90
Using Your Phone's Calendar	91
Using Your Phone's Alarm Clock	96
Using Your Phone's Notepad	97
Using Your Phone's Tools	98
Using Your Phone's Voice Services	100
Managing Voice Memos	101

Service Features	103
Service Features: The Basics	104
Using Voicemail	105
Using SMS Text Messaging	115
Using Caller ID	118
Responding to Call Waiting	119
Making a Three-Way Call	119
Using Call Forwarding	121
Data Services	122
Data Service Applications	123
Getting Started With Data Services	123
Downloading Content	129
Exploring the Web	131
Data Services FAQs	133

Safety and Warranty Information135

Important Safety Information136

General Precautions137

Maintaining Safe Use of and Access to Your Phone138

Using Your Phone With a Hearing Aid Device140

Caring for the Battery141

Radiofrequency (RF) Energy143

Owner's Record145

Phone Guide Proprietary Notice145

Manufacturer's Warranty146

Manufacturer's Warranty147

Introduction

This **User Guide** introduces you to your wireless service and all the features of your new phone. It's divided into four sections:

- ◆ **Section 1:** Getting Started
- ◆ **Section 2:** Your Phone
- ◆ **Section 3:** Service Features
- ◆ **Section 4:** Safety and Warranty Information

Throughout this guide, you'll find tips that highlight special shortcuts and timely reminders to help you make the most of your new phone and service. The Table of Contents and Index will also help you quickly locate specific information.

You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, simply locate that section in the Table of Contents and go directly to that page. Follow the instructions in that section, and you'll be ready to use your phone in no time.

Your Phone's Menu

The following list outlines your phone's menu structure. For more information about using your phone's menus, see "Navigating Through Phone Menus" on page 21.

1. Web

2. Messaging

1. Voicemail

1. Call Voicemail / 2. Voicemail Details /
3. Clear Icon

2. Send Message

Go to Contacts

3. Messages

1. Reset Envelope / 2. Notification /
3. Callback Number / 4. Preset
Messages / 5. Signature

4. Settings

3. My Schedule

1. Alarm Clock

1. Alarm 1 / 2. Alarm 2 / 3. Alarm 3 /
4. Alarm 4 / 5. Alarm 5 /
6. Walk the Dog / 7. Quick Alarm

2. Calendar

3. Notepad

4. Voice Memo

4. History

5. Missed Alerts

6. Contacts

7. Tools

1. World Clock
2. Calculator
3. Activate/ Self-Service
4. Update Phone
5. Unit Converter

8. My Stuff

1. Games
2. Ringers
3. Screen Savers
4. Applications
5. Options

9. Settings

- | | |
|----------------------|--|
| 1. Display | |
| 1. Main Screen | 1. Screen Saver / 2. Backlight /
3. Menu Styles / 4. Foregrounds /
5. Picture ID |
| 2. Keypad Light | On / Off |
| 3. Language (Idioma) | English / Español |

2. Sounds

- | | |
|--------------------|---|
| 1. Volume | 1. Ringer / 2. Earpiece /
3. Speakerphone / 4. Keytones /
5. Messaging/ 6. Alarm & Calendar /
7. Applications / 8. Alerts /
9. Power On/Off |
| 2. Ringer Type | 1. Incoming Calls / 2. Messaging /
3. Alarm & Calendar |
| 3. Vibrate Type | 1. Incoming Calls / 2. Messaging /
3. Alarm & Calendar |
| 4. Alerts | 1. Beep Each Minute /
2. Out of Service / 3. Connect /
4. Signal Fade/Call Drop |
| 5. Keytones | 1. Tone Length / 2. Tone Volume |
| 3. Airplane Mode | |
| 4. Messaging | |
| 1. Reset Envelope | Message & Icon / Icon Only |
| 2. Notification | |
| 3. Callback Number | |
| 4. Preset Messages | None / Custom |
| 5. Signature | On / Off |
| 5. Keyguard | |

6. Text Entry

- | | |
|----------------------|--|
| 1. Auto-Capital | On / Off |
| 2. Auto-Space | On / Off |
| 3. Word Choice List | On / Off |
| 4. Word Prediction | On / Off |
| 5. Word Completion | On / Off |
| 6. Word Scan | On / Off |
| 7. Dual Language | On / Off |
| 8. Prediction Length | 2 + letter words / 3 + letter words /
4 + letter words |
| 9. Use My Words | On / Off |
| * My Words | |
| 0. Help | |
| 7. Phone Information | 1. Phone Number / 2. Icon Glossary /
3. Version / 4. Advanced |

8. More...

1. TTY

2. Call Setup

1. Auto-Answer /

2. Abbreviated Dialing /

3. Call Answer / 4. Contacts Match

3. Contacts Settings

1. Speed Numbers /

2. Show Secret/Hide Secret /

3. Services

4. Data

1. On/Off / 2. Net Guard /

3. Update Profile

5. Headset Mode

6. Location

On / Off

7. Navigation Keys

8. Restrict and Lock

1. Restrict Voice / 2. Lock Data /

3. Lock My Phone

9. Roaming

1. Set Mode / 2. Call Guard /

3. Data Roaming

*. Security

1. Lock My Phone /

2. Change Lock Code /

3. Special Numbers /

4. Edit Contacts List /

5. Delete/Reset

Section 1

Getting Started

Setting Up Service

In This Section

- ◆ Getting Started
 - ◆ Setting Up Your Voicemail
 - ◆ Getting Help
-

Setting up service on your new phone is quick and easy.


This section walks you through the necessary steps to unlock your phone, set up your voicemail, establish passwords, and contact your service provider for assistance with your wireless service.

Getting Started

Unlocking Your Phone

If your phone is locked, the main display will say "-Locked-" after it is powered on.

Follow these easy steps to unlock your phone:

1. Press and hold  to turn the phone on.
2. Press **UNLOCK** (right softkey).

Note: To select a softkey, press the softkey button directly below the softkey text that appears at the bottom left and bottom right of your phone's display screen. Softkey actions change according to the screen you're viewing and will not appear if there is no corresponding action available.



3. Enter your four-digit lock code. (For security purposes, the code is not visible as you type.)

Tip: If you can't recall your lock code, try using the last four digits of your wireless phone number or try 0000. If neither of these works, call your service provider.

Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your voicemail and personal greeting as soon as your phone is activated.

To set up your voicemail:

1. From standby mode, press and hold **1** .
2. Follow the system prompts to:
 - Create your passcode
 - Record your name announcement
 - Record your greeting
 - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding **1** , bypassing the need for you to enter your passcode)

Voicemail Passcode

You'll create your voicemail password (or pass code) when you set up your voicemail. For more information or to change your voicemail password, please contact your service provider.

For more information about using your voicemail, see “Using Voicemail” on page 105.

Getting Help

Directory Assistance

You have access to a variety of services and information through Directory Assistance, including residential, business, and government listings; assistance with local or long-distance calls; movie listings; and hotel, restaurant, shopping, and major local event information. There is a per-call charge, and you will be billed for airtime.

To call your wireless Directory Assistance:

▶ Press **4** ghl **1** ES **1** ES **TALK** .

 
 
Operator Services

Operator Services provides assistance when placing collect calls, when placing calls billed to a local telephone calling card or third party.

To access your wireless Operator Services:

▶ Press **0** next **TALK** .

For more information, call your service provider.



Section 2

Your Phone

 
Your Phone: The Basics

In This Section

- ◆ **Front View of Your Phone**
 - ◆ **Viewing the Display Screen**
 - ◆ **Features of Your Phone**
 - ◆ **Turning Your Phone On and Off**
 - ◆ **Using Your Phone's Battery and Charger**
 - ◆ **Navigating Through Phone Menus**
 - ◆ **Displaying Your Phone Number**
 - ◆ **Making and Answering Calls**
 - ◆ **Entering Text**
-

Your phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. This section will guide you through the basic functions and calling features of your phone.

Front View of Your Phone

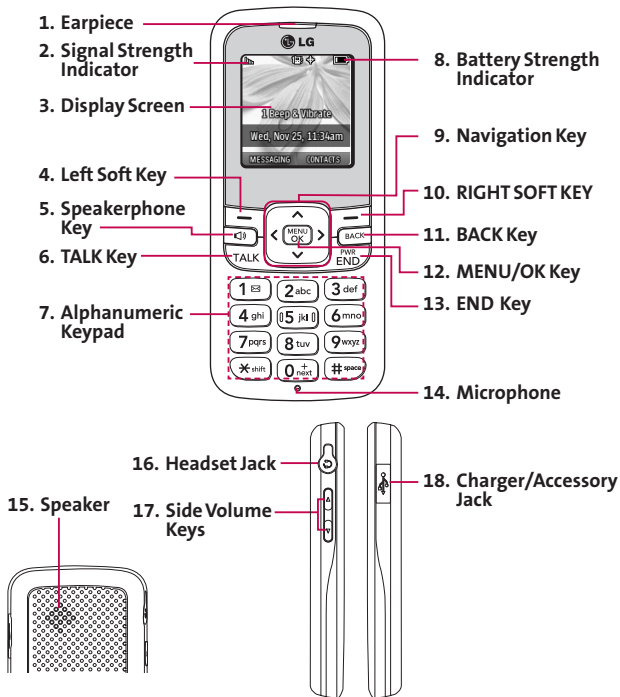

Key Functions

1. **Earpiece** lets you hear the caller and automated prompts.
2. **Signal Strength Indicator** represents the signal strength by displaying bars. The more bars displayed, the better the signal strength.
3. **Display Screen** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
4. **Left Soft Key** Use to access the Menu when in Standby Mode. Performs the functions indicated by the text on the display immediately above it.
5. **Speakerphone Key** lets you turn Speakerphone mode on or off. From Standby mode, press once to go to Recent History.
6. **TALK Key** allows you to place or receive calls, answer Call Waiting, and use Three-Way Calling.
7. **Alphanumeric Keypad** lets you enter numbers, letters, and characters, and navigate within menus.
8. **Battery Strength Indicator** represents the amount of remaining battery charge currently available in your phone. When all bars are displayed in the battery icon,

the phone's battery is fully charged. When no bars are displayed, the phone's battery is completely discharged or empty.



 








9. **Navigation Key** scrolls through the phone's menu options and acts as a shortcut key from standby mode.
 - Press **Up** to access **MESSAGES**.
 - Press **Down** to access **MY STUFF**.
 - Press **Right** to launch **WEB**.
 - Press **Left** to access **MY SCHEDULE**.
10. **Right Soft Key** Use to access Contacts when in Standby Mode. Performs the functions indicated by the text on the display immediately above it.
11. **BACK Key** deletes characters from the display in text entry mode. When in a menu, pressing the BACK key returns you to the previous menu. This key also allows you to return to the previous screen while using the Web.
12. **MENU/OK Key** lets you access the phone's Main Menu from standby mode, and selects the highlighted choice when navigating through a menu.

















13. **END Key** lets you turn the phone on or off, end a call, or return to Stand By mode. While in the main menu, it returns the phone to Standby mode and cancels your input. When you receive an incoming call, press to mute the ringer and send the incoming call to voicemail.
14. **Microphone** allows other callers to hear you clearly when you are speaking to them.
15. **Speaker** lets you hear the different ringers and sounds. The speaker also lets you hear the caller's voice in speakerphone mode.
16. **Headset Jack** allows you to plug a headset for convenient hands-free conversations.
17. **Side Volume Keys** allow you to adjust the ringer volume in standby mode or adjust the voice volume during a call. The volume keys can also be used to scroll up or down to navigate through the different menu options.
18. **Charger/Accessory Jack** allows you to connect the phone to the phone charger and to optional accessories, such as a USB cable.





Viewing the Display Screen

Your phone's display screen provides a wealth of information about your phone's status and options. This list identifies the symbols you'll see on your phone's display screen:

Note: To view a list of your phone's icons and descriptions, select **Menu > Settings > Phone Information > Icon Glossary**.

-  shows your current signal strength. (The more lines you have, the stronger your signal.)
-  means your phone cannot find a signal.
-  indicates you are "Roaming" off the home Network.
-  indicates data Service Active.
-  indicates data Service Inactive.
-  indicates data Service Unavailable.
-  indicates Airplane Mode.
-  indicates full battery.
-  indicates low battery.
-  indicates Ringer Only.
-  indicates Vibrate Only.

-  indicates 1 Beep.
-  indicates 1 Beep & Vibrate.
-  indicates Vibrate All.
-  indicates Ringer Off.
-  indicates Silence All.
-  indicates Ringer & Vibrate.
-  indicates Calendar.
-  indicates Missed Call Alert.
-  indicates New Urgent Message.
-  indicates New Messages.
-  indicates New Text Message.
-  indicates New Voicemail.
-  indicates Urgent Message.
-  indicates Location On.
-  indicates Location Off.
-  indicates TTY.

-  indicates Alarm Clock.
-  indicates Missed Calls.
-  indicates Incoming Calls.
-  indicates Outgoing Calls.

Features of Your Phone

Congratulations on the purchase of your phone. The LX101 by LG is an easy-to-use, lightweight and reliable phone that offers many significant features and service options. The following list previews some of those features of the phone:

- Digital dual-band capability allows you to make and receive calls while on your wireless network, and to roam on other 1900 and 800 MHz digital networks.
- Data service provides access to the wireless Internet in digital mode.
- Voicemail, SMS Text Messaging provide quick and convenient messaging capabilities.

- Games, ringtones, screen savers, and other applications can be downloaded to make your phone as unique as you are. Additional charges may apply.
- Your Contacts List allows you to store up to 600 entries, with up to seven phone numbers per entry.
- The Calendar offers several personal information management features to help you manage your busy lifestyle.
- The Location feature works in connection with available location-based services.
- T9 Text Input lets you quickly type messages with one keypress per letter.
- Speed dial lets you dial phone numbers with one or two keypresses.
- Data Roam Guard will alert you when you are roaming and using your browser or other online applications, giving you the option to continue using those applications while in the roaming area.

Turning Your Phone On and Off

Turning Your Phone On

To turn your phone on:

- ▶ Press and hold  for approximately two seconds.


Once your phone is on, it may display “Looking for Service”, which indicates that your phone is searching for a signal. When your phone finds a signal, it automatically enters standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for service by pressing any key (when your phone is turned on).

Turning Your Phone Off

To turn your phone off:

- ▶ Press and hold  for two seconds until you see the powering-down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

Using Your Phone's Battery and Charger

WARNING: Use only manufacturer-approved batteries and chargers with your phone. The failure to use a manufacturer-approved battery and charger may increase the risk that your phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage.

Battery Capacity

Your phone is equipped with a Lithium-Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 4 hours of continuous digital talk time.

When the battery reaches 5% of its capacity, the battery icon blinks. When there are approximately two minutes of talk time left, the phone sounds an audible alert and then powers down.

Note: Long backlight settings, searching for service, vibrate mode, and browser use affect the battery's talk and standby times.

Tip: Be sure to watch your phone's battery level indicator and charge the battery before it runs out of power.

Installing the Battery

To install the Li-Ion battery:

- ▶ To install, gently push the battery cover up (1), and insert the battery into the opening on the back of the phone. Align the battery terminals with the terminals on the phone and push down on the bottom until the battery snaps into place.



Removing the Battery

 
WARNING: Do not handle a damaged or leaking Li-Ion battery as you can be burned.

To remove the battery:

- ▶ To remove, push gently the cover of the battery up, and use your fingernail to take the battery out of the opening on the back of the phone. Put the cover back on.

Charging the Battery

Your phone's Li-Ion battery is rechargeable and should be charged as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you will lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon () blinks and the phone sounds a warning tone.

Always use a manufacturer-approved charger, travel charger, or vehicle power adapter to charge your battery.

Using the Charger

To use the charger provided with your phone:

- ▶ Plug the smaller end of the AC adapter into the phone's charger jack and the other end into an electrical outlet.

With the manufacturer-approved Li-Ion battery, you can recharge the battery before it becomes completely run down.

Navigating Through Phone Menus


The navigation key on your phone allows you to scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

To navigate through a menu, simply press the navigation key up or down. If you are in a first-level menu, such as **Settings**, you may also navigate to the next or previous first-level menu by pressing the navigation key right or left.





For a summary of your phone's menu, please see "Your Phone's Menu" on page ii.

Selecting Menu Items

As you navigate through the menu, menu options are highlighted. Select any numbered option by simply pressing

the corresponding number on the phone's keypad. You may also select any item by highlighting it and pressing .

For example, if you want to view your last incoming call :

1. Press  to access the main menu.
2. Select **History** by pressing  or by highlighting it and pressing .
3. Select a call history and press .

Backing Up Within a Menu

To go to the previous menu:

- ▶ Press .

To return to standby mode:

- ▶ Press .

Displaying Your Phone Number


Just in case you forget your phone number, your phone can remind you.

To display your phone number:





- ▶ Select **Menu > Settings > Phone Information > Phone Number**. (Your phone number and other information about your phone and account will be displayed.)

Making and Answering Calls

Making Calls

Placing a call from your phone is as easy as making a call from any landline phone. Just enter the number and press .

To make a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number from standby mode. (If you make a mistake while dialing, press  to erase one digit at a time. Press and hold  to erase the entire number.)
3. Press .
4. Press  to end the call.

Tip: To redial the most recent number in the Recent History, press **TALK** twice.

You can also place calls from your phone by Speed Dialing numbers from your Contacts, and using your Call History listings.

Dialing Options

When you enter numbers in standby mode and press **OPTIONS** (right softkey), you will see a variety of dialing options appear on the phone's display screen.

Tip: To speed dial a phone number from standby mode, press and hold the speed dial number. If the speed dial number is two digits, enter the first digit, and then press and hold the second digit.

- **Save** allows you to enter a seven- or ten-digit number (phone number and area code) and save the phone number in your Contacts.
- **Hard pause** allows you to enter a hard pause.
- **2-sec Pause** allows you to enter a two-second pause.


-or-

Press **SEND** (left softkey) to access a menu which you can use to send Text Message for the dialed number.

Answering Calls

To answer an incoming call:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)

2. Press  to answer an incoming call. (Depending on your phone's settings, you may also answer incoming calls by pressing any number key.)

Your phone can notify you of incoming calls in the following ways:

- The phone rings or vibrates.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. The caller's phone number may also be displayed, if available.

During an incoming call, the following options are also displayed. To select an option, highlight the option and press



- **Answer**
- **Silence** to mute the ringer.
- **Send to Voicemail** to send the call to your voicemail box.

Note: When your phone is off, incoming calls go directly to voicemail.

Ending a Call



To disconnect from a call when you are finished:

- ▶ Press  .


Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen.








To display a Missed Call entry from the notification screen:

- ▶ Highlight the entry and press  . (To dial the phone number, press  .)


To display a Missed Call entry from standby mode:

1. Select **Menu > Missed Alerts**.
2. Highlight the entry you wish to view and press  .

Calling Emergency Numbers

You can place calls to 911 (dial       ), even if your phone is locked or your account is restricted.

Note: When you place an emergency call, your phone automatically enters Emergency mode.

During an emergency call, a list of menu options is displayed onscreen. To select an option, highlight the desired option and press  . The following options are available.

- **My Phone Number** to display the phone's directory number.

To exit Emergency mode:

1. Press  to end a 911 call.
2. Press **Exit** (right softkey).

Note: When you are in Emergency mode, you can exit only from the options menu.


Enhanced 911 (E911) Information

This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.

When you place an emergency 911 call, the GPS feature of your phone begins to seek information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take 30 seconds or more to determine and report your approximate location.

IMPORTANT: Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your phone.

In-Call Options

Pressing **OPTIONS** (right softkey) during a call displays a list of available in-call features. To select an option, highlight the option and press . The following options may be available through the Options menu:

- **Speaker** to route the phone's audio through the speaker or through the earpiece.
- **Save** to save a phone number in your Contacts.
- **Contact Details** to display the contact details. (If the contact is saved in the Contacts.)
- **Main Menu** to display the phone's main menu.
- **3-Way Call** to initiate a three-way call.
- **Contacts** to display your Contacts list.
- **Voice Memo** to record the current conversation.
- **Phone Info** to check the phone number, version, etc.

Warning! Because of higher volume levels, do not place the phone near your ear during speakerphone use.

End-of-Call Options

After a call, the phone displays the phone number and the duration of the call.

To select one of the following options after a call has ended, press **OPTIONS** (right softkey):



New Group/ Contact Info (Save Contact)/ Delete/ Delete All

Note: Not all End-of-Call options are displayed for calls identified as No ID or Restricted.

Saving a Phone Number



You can store up to 7 phone number entries per Contact and 600 Contacts entries in your phone. Each entry's name can contain 64 characters. Your phone automatically sorts the Contacts entries alphabetically.

To save a number from standby mode:

1. Enter a phone number.
2. Press **OPTIONS** (right softkey), highlight **Save** and press .
3. Highlight **New Entry** for a new contact or **Existing Entry** to add a number to an existing contact and press .
4. Select **Mobile, Home, Work, Pager, Fax, or Other** for the phone label.
5. Enter a new contact name, or select the existing contact, and press **DONE** (left softkey) to save the new entry.

Finding a Phone Number

You can search Contacts for entries by name.

1. While in Standby Mode, press **CONTACTS** (right softkey) and enter the first letter or letters of an entry. (The more letters you letter, the more specific the search.)
2. To select an entry, highlight it and press . To dial a number, highlight it and press . You may need to press the right or left navigational keys to select one of many phone numbers that a contact can have.

Dialing and Saving Phone Numbers With Pauses


You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:

- **Hard Pause** sends the next set of numbers only after you press left softkey **SEND TONES**.
- **2-sec Pause** automatically sends the next set of numbers after two seconds.

Note: You can have multiple pauses in a phone number and combine two-second and hard pauses.

To dial or saved phone numbers with pauses:

1. Enter the phone number.
2. Press **OPTIONS** (right softkey) > **Hard Pause** or **2-sec Pause**. (Hard pauses are displayed as a "P" and two-second pauses as a "T")
3. Enter additional numbers.
4. Press  to dial the number.



- or -

To save the number in your Contacts list, press **OPTIONS** (right softkey), highlight **Save** and press .



Note: When dialing a number with a hard pause, press left softkey **SEND TONES** to send the next set of numbers.

Using Abbreviated Dialing

Abbreviated Dialing is similar to speed dialing. You can use either of the following abbreviated dialing features.


- **Contacts Match** – Retrieve any number saved in your Contacts by entering only three consecutive digits of the number. Highlight a Contact entry and press  to dial the matching number.
- **Prefix** – Prefix the first five or six digits (for example, the area code and prefix) to any four or five digits you enter. Press  to dial the resulting number. See page 57 for instructions on how to set this up.

To place a call using Contacts Match abbreviated dialing:

1. From standby mode, at least three digits of a Contact entry's phone number.
2. Use  to highlight contact match and press  to call the displayed number.




To place a call using Prefix abbreviated dialing:

Activate Abbreviated Dialing (see "Abbreviated Dialing on page 57).

1. From standby mode, the last four or five digits of the number.
2. Press .

Dialing From Contacts

Shortcut : From standby mode, press **Contacts** (right softkey) to list entries.

1. Press **Menu > Contacts**.
2. Select the entry you want to call and press  to dial the entry's default phone number.
– or –
To dial another number from the entry, select the name and press , and then select a number and press .

Using Speed Dialing

You can store up to 98 numbers in your phone's speed dial memory to make contacting friends and family as easy as pressing a button or two. With this feature, you can dial speed dial entries using one keypress for locations 2-9, or two keypresses for locations 10-99.

To use One-Touch Dialing for speed dial locations 2-9:

- Press and hold the appropriate key for approximately two seconds. The display confirms that the number has been dialed when it shows “Connecting...”.

To use Two-Touch Dialing for speed dial locations 10-99:

1. Press the first digit.
2. Press and hold the second digit for approximately two seconds. The display confirms that the number has been dialed when it shows “Connecting...”.

Entering Text

Entering Text With the Alphanumeric Keypad

Your phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contact entry or when using SMS Text Messaging).

To change the character input mode:

1. When in a text entry field, press **Mode**, or **Options**, (right softkey) and select **Text Mode** to change the character input mode.
2. Select one of the following options:

- **Abc** to cycle through the alpha characters associated with the letters on the keypad.
- **T9Word** to enter text using a predictive text entering system that reduces the amount of keys that need to be pressed while entering a word.
- **123** to enter numbers by pressing the numbers on the keypad.
- **Symbols** to enter symbols.
- **Emoticon** to enter colorful emoticons.
- **Settings** to enter messages settings.

Tip: When entering text, press the  key to change letter capitalization (**Abc** > **ABC** > **abc**).

Entering Characters Using T9 Text Input

T9 Text Input Mode lets you enter text in your phone by pressing keys just once per letter.

T9 Text Input analyzes the letters you enter using an intuitive word database and provides words that match the entry. (The word may change as you type.)

To enter a word using T9 Text Input:

1. Select the **T9Word** input mode. (See “To change the character input mode:” on page 34.)

2. Press the corresponding keys once per letter to enter a word. (For example, to enter the word “Bill,” press **2** abc **4** ghi **5** jkl **5** jkl .) (If you make a mistake, press **BACK** to erase a single character. Press and hold **BACK** to delete an entire entry.)

If the word you want is not selected after you have entered all the letters, press **0** ⁺ next to scroll through additional word selections. To accept a word and insert a space, press **#** space .

Adding a Word to the T9 Database

If a word you want to enter is not displayed as an option when you are using T9 Text Input, you can add it to the database.

To add a word to the T9 Text Input database:

1. Press the corresponding keys, when the desired word does not appear, scroll down the drop-down list to **Add Word?**
2. Clear the current entry and type in the desired word.
3. Press **Save** (left softkey)
4. The word will appear as an option the next time you scroll through options during Predictive Text Input.

For more information about T9 Text Input, visit the Nuance site at www.T9.com.

Entering Characters Using ABC Mode

1. Select **Abc** Mode. (See "To change the character input mode:" on page 34.)
2. Press the corresponding keys repeatedly until the desired letter appears. (For example, to enter the word "Bill," press **2 abc** twice, **4 ghi** three times, **5 jkl** three times, and **5 jkl** three times again.) (If you make a mistake, press **BACK** to erase a single character. Press and hold **BACK** to delete an entire entry.)

After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Characters toggle in the following order:


1 123 ., @ 1?!*# /	7 pqrs P Q R S 7
2 abc A B C 2	8 tuv T U V 8
3 def D E F 3	9 wxyz W X Y Z 9
4 ghi G H I 4	0 + next 0
5 jkl J K L 5	# space Space
6 mno M N O 6	* shift Shift

Entering Numbers, Symbols, Smileys, Emoticons, Preset Messages


To enter numbers:

- ▶ Select **123** mode and press the appropriate number key on the keypad. (See "To change the character input mode:" on page 34.)


To enter symbols:

- ▶ Select **Symbols** mode. (See "To change the character input mode:" on page 34.) To enter a symbol, scroll through the available symbols and press , or press the corresponding number key on the keypad.

To enter Emoticons:

- ▶ Select **Emoticons** mode. (See "To change the character input mode:" on page 34.) To enter an emoticon, scroll through the available emoticons and press , or press the corresponding number key on the keypad.

To enter preset messages:

1. Press the right softkey **Options** and select **Add Preset Messages** mode.
2. Scroll to the desired preprogrammed message and press .

Note: Preset messages make composing text messages even easier by allowing you to enter preset messages. You can add a preset a message of your own. (For more information on preset messages, please see “Managing Preset Messages” on page 52.)

Controlling Your Phone's Settings

In This Section

- ◆ Sound Settings
 - ◆ Display Settings
 - ◆ Location Settings
 - ◆ Messages Settings
 - ◆ Airplane Mode
 - ◆ TTY Use
 - ◆ Phone Setup Options
-

Using the menu options available on your phone, you can customize your phone to sound, look, and operate just the way you want it to. This section describes how you can change your phone's settings to best suit your needs. Take a few moments to review these options and to adjust or add settings that are right for you.

Sound Settings

Ringer Types


Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contact entries, types of calls, and types of messages.

Selecting Ringer Types for Incoming Calls




Your phone provides a variety of ringer options that allow you to customize your ring and volume settings. These options allow you to identify incoming calls by the ring.

To select a ringer type for Incoming calls:

1. Press **Menu > Settings > Sounds > Ringer Type > Incoming Calls**.
2. Select **Contact Entries** or **Unknown #s**. (You can identify incoming calls from contacts or unknown numbers by setting different ringer types.)
 - **Contact Entries**
 - **Contacts with default ringer**
 - **One Contact** You can set a specific ringer type for the calls from one specific contact.


- **Unknown #s**
 - You can set a ringer type for anonymous calls.
- 3. Select a category, and then use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option (depending on your current master volume settings).
- 4. Press  to assign the desired ringer.

Assigning Ringers to Contacts

1. Press  > **Settings > Sounds > Ringer Type > Incoming Calls > Contact Entries > One Contact.**
2. Highlight an entry and press .
3. Select a category, and then use your navigation key to scroll through the available ringers. You will hear a sample ringer as you highlight each option (depending on your current master volume settings).
4. Press  to assign the ringer.

Selecting Ringer Types for Messaging


To select a ringer type for messaging:

1. Select **Menu > Settings > Sounds > Ringer Type > Messaging**.
2. Select **Voicemail** or **Messages**.
3. Select a category, and then use your navigation key to scroll through the available ringers. You will hear a sample ringer as you highlight each option (depending on your current master volume settings).
4. Press  to assign the ringer.

Key Tone Settings

You can adjust your phone's key tone volume settings.


To select a tone volume:

1. Press **Menu > Settings > Sounds > Keytones**.
2. Select an option and press  .
 - **Tone Length** to select a key tone length. (Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.)
 - **Tone Volume** to select a keypress volume level.

Adjusting the Phone's Volume Settings

You can adjust your phone's volume settings to suit your needs and your environment.

To adjust your phone's volume settings:



1. Select **Menu > Settings > Sounds > Volume**.
2. Select **Ringer, Earpiece, Speakerphone, Keytones, Messaging, Alarm & Calendar, Applications, Alert or Power On/Off**.
3. Using the navigation key, choose a volume level and press .

Tip: You can adjust the Ringer volume in standby mode (or the Earpiece volume during a call) by using the volume keys on the left side of your phone.

Alert Notification

Your phone can alert you with an audible tone when you connect, change service areas, every minute during a voice call, or when a call has been connected.

To enable or disable alert sounds:

1. Select **Menu > Settings > Sounds > Alerts**.
2. Select **Beep Each Minute, Out of Service, Connect or Signal Fade/Call Drop** and press .
3. Select **On** or **Off** and press .

Silence All

The phone's Silence All option allows you to mute all sounds without turning your phone off.

To activate Silence All:

- ▶ Press the side volume key down repeatedly in standby mode. (The screen will display "Silence All")

To deactivate Silence All:

- ▶ Press the side volume key up repeatedly to select a desired volume level.

Display Settings

Changing the Text Greeting

The text greeting can be up to 12 characters and is displayed on your phone's screen in standby mode. You may choose to keep the phone's default greeting, or you may enter your own custom greeting.


To display or change your greeting:

1. Press **Menu > Settings > Display > Main Screen > Foregrounds > Greeting > (Set to) Custom.**
2. Use the directional keypad to highlight the second field and press **MENU OK**.
3. Use the keypad to enter a new custom greeting. (To erase the existing greeting one character at a time, press **BACK**. To erase the entire greeting, press and hold **BACK**.)
4. Press **MENU OK** and then the **Save** (left softkey) to save your greeting.

Changing the Backlight Time Length

The backlight setting you select how long the display screen and keypad are backlit after any keypress is made.

To change the display backlight setting:

1. Press **Menu > Settings > Display > Main Screen > Backlight**.
2. Select a time setting and press .

To change the keypad light setting:


1. Press **Menu > Settings > Display > Keypad Light**.
2. Press **ON/OFF** (left softkey).

Note: Long backlight settings affect the battery's talk and standby times.

Changing the Display Screen

Your phone offers options to customize what you see on the display screen when in standby mode.

To change the display image :


1. Press **Menu > Settings > Display > Main Screen > Screen Saver**.
2. Select **Preloaded** or **My Stuff**.
3. Use the navigation key to select an image and press  to view the image. (Once an image is displayed, you can use your navigation key to scroll through and view the other default images.)

4. Press **ASSIGN** (left softkey) to assign the desired image.

Changing the Phone's Menu Style

Your phone allows you to choose how the menu appears on your display screen.



To select the display's menu style:

1. Press **Menu > Settings > Display > Main Screen > Menu Styles**.
2. Use left/right on the directional keypad to select **Grid** to view each main menu item as a grid, or **List** to view the main menu as a list, and press .

Changing the Clock Display

Choose whether you want your phone's clock to be displayed in analog mode, digital mode, or with time and date.


To change the clock's appearance on the standby screen:

1. Press **Menu > Settings > Display > Main Screen > Foregrounds > Clock**.
2. Select **Normal Clock, Analog Clock, Digital Clock or Dual Clock**, and press .
3. Press  to apply the clock display setting.

Display Language

You can choose to display your phone's menus in English or in Spanish

To assign a language for the phone's display:

1. Press **Menu > Settings > Display > Language (Idioma)**.
2. Select **English** or **Español** and press .

Location Settings



Your phone is equipped with a Location feature for use in connection with location-based services.

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

Note: Turning Location on will allow the network to detect your position using GPS technology, making some applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

To enable your phone's Location feature:

1. Press **Menu > Settings > More... > Location**. (The Location disclaimer is displayed.)
2. Read the disclaimer and press **CONTINUE** (left softkey).
3. Select **On** or **Off** (left softkey).

When the Location feature is on, your phone's standby screen will display the  icon. When Location is turned off, the  icon will be displayed.


Messages Settings

Staying connected to your friends and family has never been easier. With your phone's advanced messaging capabilities, you can send and receive many text messages without placing a voice call.



Your phone's messaging settings make text messaging even faster and easier by letting you decide how you would like to be notified of new messages, letting you create a signature with each sent message, and letting you create your own preset messages, to name a few options.

Setting Message Notification

When you receive a text message, your phone can notify you by displaying an icon on your display screen. You can also choose to be notified with a larger pop-up message on your display screen.

1. Select **Menu > Settings > Messaging > Notification**.
2. Select **Message & Icon** or **Icon Only** and press .


Callback Number

1. Press **Menu > Settings > Messaging > Callback Number**.
2. Select **None**, **My Phone Number**, or **Other** and press .
(If you select **Other**, enter a number and press .)

Adding a Customized Signature

Each message you send can have a customized signature to reflect your personality.



To add a customized signature to each sent message:

1. Select **Menu > Settings > Messaging > Signature > Custom**. (If you do not wish to attach a signature to your outgoing messages, select **None**.)
2. Enter your signature and press . (See “Entering Text” on page 34.)

Managing Preset Messages

Your phone is loaded with 20 preset messages to help make sending text messages faster and easier. These messages, such as “Where are you?,” “Let’s get lunch,” and “Meet me at,” can be customized or deleted to suit your needs. You can even add your own preset messages to the list.

To edit or delete a preset message:

1. Select **Menu > Settings > Messaging > Preset Messages**.
(The list of preset messages is displayed.)
2. To edit or delete a preset message, highlight it and press **OPTIONS** (right softkey).
3. Scroll to **Edit** and edit the selected message (see “Entering Text” on page 34), and press .
– or –
Scroll to **Delete** and press , press **DELETE** (left softkey).


To add a new preset message:

1. Select **Menu > Settings > Messaging > Preset Messages**.
(The list of preset messages is displayed.)
2. To add a new message, select **ADD** (left softkey).

3. Enter your message (see “Entering Text” on page 34), and press **Save** (left softkey). (Your new message will be added to the beginning of the list.)

Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Games, Notepad, Voice Memos, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls, or access online information.

1. Select **Menu > Settings > Airplane Mode**. (The Airplane Mode disclaimer is displayed.)
2. Read the disclaimer and press **CONTINUE** (left softkey).
3. Select **On, Off, or On Power Up** and press .





While in Airplane Mode, your phone's standby screen will display “Phone Off.”



TTY Use

ATTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard-of-hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

When establishing your wireless service, please call your service provider via the state Telecommunications Relay Service (TRS) by first dialing    .

To turn TTY Mode on or off:

1. Select **Menu > Settings > More... > TTY**. (An informational message is displayed)
2. Press **CONTINUE** (left softkey).
3. Select **Enable TTY** to turn TTY mode on or select **Disable TTY** to turn TTY mode off.

Note: In TTY Mode, your phone will display the TTY access icon when a TTY device is connected to the headset jack.

Note: If TTY Mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

WARNING: 911 Emergency Calling



It is recommended that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears to be related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and PSAP community are currently working to resolve this.

Phone Setup Options

Shortcuts Using the Navigation Key

Your phone offers you the option of assigning shortcut keys to favorite or often-used functions. Pressing the navigation key left, right, up, or down in standby mode will launch your personally designated shortcuts.


To assign your shortcut keys:

1. Select **Menu > Settings > More... > Navigation Keys**. (An information window is displayed.)
2. Read the information and press **CONTINUE** (left softkey).
3. Select **Left Navigation, Right Navigation, Up Navigation, or Down Navigation** to assign a shortcut.
4. Using the navigation key or your keypad, select the desired shortcut and press .
5. Press  to return to standby mode.

Auto-Answer Mode

You may set your phone to automatically pick up incoming calls when connected to a hands-free headset.

To set Auto-Answer mode:

1. Select **Menu > Settings > More... > Call Setup > Auto-Answer**.
2. To select an option, highlight it and press .
 - **Off** to disable Auto-Answer.
 - **Headset** to answer calls automatically when the phone is connected to a hands-free device. Remember, your phone will answer calls in Auto-Answer mode even if you are not present.

Abbreviated Dialing

This allows you to dial a number quickly by having the phone auto-dial the first 5 or 6 digits, so you only have to dial the last 5 or 4 digits of a phone number.

To set your abbreviated dialing options:

1. Press **Menu > Settings > More... > Call Setup > Abbreviated Dialing**.

2. Select **ON** (left softkey) and enter a five- or six-digit number (for example, area code and prefix) and press



Call Answer Mode

You can determine how you would like to answer incoming calls on your phone.

To set call answer mode:

1. Select **Menu > Settings > More... > Call Setup > Call Answer**.
2. To select an option, highlight it and press .
 - **Any Key** to allow an incoming call to be answered by pressing any key (except the side volume keys, the BACK key or).
 - **TALK Only** to require to be pressed to answer all incoming calls.

Contacts Match


This allows you to turn the contacts matching feature on or off.

To set your contacts match options:

1. Press **Menu > Settings > More... > Call Setup > Contacts Match**.
2. Select **ON** or **OFF** (left softkey).

Text Entry

This allows you to customize text entry.

1. Select **Menu > Settings > Text Entry**.
2. Select **Auto-Capital, Auto-Space, Word Choice List, Word Prediction, Word Completion, Word Scan, Dual Language, Prediction Length, Use My Words, My Words, or Help** and press .

Your Phone's Settings

Setting Your Phone's Security

In This Section

- ◆ Accessing the Security Menu
 - ◆ Using Your Phone's Lock Feature
 - ◆ Using Special Numbers
 - ◆ Erasing Phone Content
 - ◆ Resetting Default Settings
 - ◆ Resetting Your Phone
-

By using the security settings on your phone, you receive peace of mind without sacrificing flexibility. This section will familiarize you with your phone's security settings. With several options available, you can customize your phone to meet your personal needs.

Accessing the Security Menu

All of your phone's security settings are available through the Security menu. You must enter your lock code to view the Security menu.

To access the Security menu:

1. Select **Menu > Settings > More... > Security**.
2. Enter your lock code to display the Security menu.

Tip: If you can't recall your lock code, try using the last four digits of your wireless phone number or try 0000. If neither of these works, call your service provider.

Using Your Phone's Lock Feature

Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911 or special numbers.

1. Press **Menu > Settings > More... > Security** and enter your lock code.
2. Select **Lock My Phone > Lock Now**. (To set your phone to lock the next time it is turned on, select **On Power Up**.)

Unlocking Your Phone

To unlock your phone:

1. From standby mode, press **UNLOCK** (right softkey).
2. Enter your lock code.

Changing the Lock Code

To change your lock code:

1. Select **Menu > Settings > More... > Security**, and then enter your lock code.
2. Select **Change Lock Code**, and then enter and re-enter your new lock code.

Calling in Lock Mode

You can place calls to 911 and to your special numbers when in lock mode. (For information on special numbers, see “Using Special Numbers” on page 65.)

To place an outgoing call in lock mode:


- ▶ To call an emergency number, or special number, enter the phone number and press **TALK**.

Using Special Numbers

Special numbers are important numbers that you have designated as being “always available.” You can call and receive calls from special numbers even if your phone is locked.

You can save up to 10 special numbers.

To add or replace a special number:


1. Select **Menu > Settings > More... > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Special Numbers**.
3. Select a location for your entry.
4. Enter the number and press .

Note: There are no speed dial options associated with special numbers.

Erasing Phone Content

Use the Security menu to quickly erase all the content you have created or stored in your phone.

1. Select **Menu > Settings > More... > Security** and enter your lock code.

2. Select **Delete/Reset**.
3. To select an option, highlight it and press .
 - **Delete Private Browser Data** to erase browsing data.
 - **Delete Contacts** to delete all the contents of your Contacts list.
 - **Delete My Stuff** to delete all the contents in My Stuff.
 - **Delete Messages** to delete all messages.
 - **Delete Voice Memo** to delete all voice memos.
 - **Reset All Settings**
 - **Reset Phone**
4. Select **Yes** (left softkey) to confirm the deletion.

Resetting Default Settings

Resetting the current default settings restores all the factory defaults, including the ringer types and display settings. Your Contacts, Call History, Calendar, and Messaging items are not affected.

To reset default settings:

1. Select **Menu > Settings > More... > Security** and enter your lock code.
2. Select **Delete/Reset > Reset All Settings**. (A disclaimer appears.)
3. Read the disclaimer and press **CONTINUE** (left softkey).
4. If you are certain that you would like to restore all the settings, select **RESET** (left softkey).

Resetting Your Phone

Resetting the phone restores all the factory defaults, including the ringer types and display settings. All data from Contacts, Messaging, Pictures, My Content, Tools, and Settings will be deleted, and preference settings will be set to factory defaults.

1. Select **Menu > Settings > More... > security** and enter your lock code.
2. Select **Reset Phone**. (You will see a disclaimer.)
3. Read the disclaimer and press **CONTINUE** (left softkey).
4. If you are certain that you would like to restore all factory settings, select **RESET** (left softkey).

Controlling Your Roaming Experience

In This Section


- ◆ Understanding Roaming
 - ◆ Setting Your Phone's Roam Mode
 - ◆ Using Call Guard
 - ◆ Using Data Roam Guard
-

Roaming is the ability to make or receive calls when you're off the home network. Your new dual-band LX101 by LG works anywhere on the available network and allows you to roam on other 1900 and 800 MHz digital networks where roaming agreements have been implemented with other carriers.

This section explains how roaming works as well as special features that let you manage your roaming experience.

Understanding Roaming

Recognizing the Roaming Icon on the Display Screen

 Your phone's display screen always lets you know when you're off the home network. Anytime you are roaming, the phone displays the roaming icon (). If you are roaming on a digital system, the roaming icon will be displayed along with the text – **Digital Roaming** –.

Tip: Remember, when you are using your phone off the available network, always dial numbers using 11 digits (1 + area code + number).

Roaming on Other Digital Networks

When you're roaming on other digital networks, your call quality and security will be similar to the quality you receive when making calls on the available network. However, you may not be able to access certain features, such as data services.


Note: If you're on a call when you leave the home network and enter an area where roaming is available, your call is dropped. If your call is dropped in an area where you think network service is available, turn your phone off and on again to reconnect to the home network.

Roaming

Checking for Voicemail Messages While Roaming

When you are roaming off the available network, you may not receive on-phone notifications of new voicemail messages. Callers can still leave messages, but you will need to periodically check your Voicemail for new messages if you are in a roaming service area for an extended period of time.

To check your voicemail while roaming:

1. Dial 1 + area code + your phone number.
2. When you hear your voicemail greeting, press .
3. Enter your passcode at the prompt and follow the voice prompts.

When you return to the available network, voicemail notification will resume as normal.


Setting Your Phone's Roam Mode

Your phone allows you to control your roaming capabilities. By using the **Roaming** menu option, you can set your Roaming preferences.

Set Mode

Choose from three different settings on your dual-band phone to control your roaming experience.

To set your phone's roam mode:

1. Press **Menu > Settings > More... > Roaming > Set Mode**.
2. To select an option, highlight it and press .
 - **Automatic** seeks network service. When network service is unavailable, the phone searches for an alternate system.
 - **Home Only** allows you to access the home network only and prevents roaming on other networks.

Roaming

Using Call Guard

Your phone has two ways of alerting you when you are roaming off the available network: the on screen roaming icon and Call Guard. Call Guard makes it easy to manage your roaming charges by requiring an extra step before you can place or answer a roaming call. (This additional step is not required when you make or receive calls while on the available network.)

To turn Call Guard on or off:

1. Press **Menu > Settings > More... > Roaming > Call Guard.**
2. Select **On** or **Off** (left softkey).

Note: Voice dialing and speed dialing are not available when you are roaming with Call Guard enabled.

To place roaming calls with Call Guard on:

1. From standby mode, dial 1 + area code + the seven-digit number and press **TALK**. (You can also initiate a call from the Contacts, Call History, or Messaging.)
2. Select **Yes**.


To answer incoming roaming calls with Call Guard on:

1. Press **TALK**. (A message will be displayed notifying you that roaming charges will apply.)
2. Select **Yes**.

Using Data Roam Guard

When Data Roam Guard is enabled, you will be asked if you want to continue using your browser or other online applications when you are in a data roaming area. When Data Roam Guard is turned off, your phone will establish or maintain a data connection in a data roaming area without asking you for permission.

To turn Data Roam Guard on or off:

1. Press **Menu > Settings > More... > Roaming > Data Roaming**.
2. Select **Default, Always Ask or Never Ask** and press .

Managing History

In This Section

- ◆ Viewing History
 - ◆ History Options
 - ◆ Making a Call From History
 - ◆ Viewing History Thread
 - ◆ Saving a Phone Number From History
 - ◆ Prepend a Phone Number From History
 - ◆ Erasing History
-


Call History keeps track of incoming calls, calls made from your phone, and missed calls. This section guides you through accessing and making the most of your Call History.

Viewing History

You'll find the Call History feature very helpful. It is a list of phone numbers (or Contact entries) for the most recent calls you placed, accepted, or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list, and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Contact entry name (if the phone number is in your Contacts).


To view a Call History entry:

1. Press **Menu > History**.
2. Highlight the entry you wish to view and press .

Note: Call History only records calls that occur while the phone is turned on. If a call is received while your phone is turned off, it will not appear in the phone's Incoming or Missed call logs.

Note: If you return a call from the voicemail menu, it will not appear in your phone's Outgoing call log.



History Options

For additional information and options on a particular call, highlight a Call History item by pressing . This feature displays the date and time of the calls, the phone number (if available), and the caller's name (if the number is already in your Contacts). By pressing **OPTIONS** (right softkey), you can select from the following options:

- **New Group** allows you to create a new group with the highlighted contacts in your History.
- **Save Contact** to save the number if it is not already in your Contacts.
- **Contact Details** allows you to view the contact information.
- **Delete** to delete the entry.
- **Delete All** to delete the entries."



 
Making a Call From History

To place a call from Call History:

1. Press  > **History**.
2. Highlight an entry and press .

Note: You cannot make calls from Call History to entries identified as **NoID** or **Restricted**.

Viewing History Thread





To view the History Thread for a contact (or number), press  > **History** > highlight a history item > . Your phone will display all events related to the contact. Press  again to choose from the following options:

- Call
- Send Message
- Save Contact / Contact Details
- Prepend
- Delete


Saving a Phone Number From History


Your phone can store up to 600 Contact entries. Contact entries can store up to a total of seven phone numbers each. Each entry's name can contain 64 characters.

To save a phone number from History:

1. Press **Menu > History**, then use your navigation key to select a History entry and press .
2. Press **Options** (right softkey), highlight **Save Contact** and press .
3. Select **New Entry** to create a new Contact entry for the number, or **Existing Entry** to save the number to an existing entry.
4. Use your navigation key to highlight the phone number type and then press .
5. Use the keypad to type in the new entry name and press .

— or —

Use your navigation key to scroll through your existing Contact entries, highlight a name, and press .




6. Use your navigation key to select other fields and press  to edit them.

Note: You cannot save phone numbers already in your Contacts or from calls identified as **No ID** or **Restricted**.


Prepend a Phone Number From History

If you need to make a call from History and you happen to be outside your local area code, you can Prepend the number by adding the appropriate prefix.

To prepend a phone number from History:

1. Press **Menu** > **History**, then select a History entry and press .
2. Press **Options** (right softkey) and scroll to **Prepend** and press .
3. Enter the prefix and press  to call the number.


— or —

Press **Options** (right softkey) and scroll to **Save** and press  to save the amended number in your Contacts.

Erasing History

To erase individual History entries, see “History Options” on page 75. To erase the all History items, follow the steps below:

To erase History:

1. Press  > **History**.
2. Press **OPTIONS** (right softkey) > **Delete All**.
3. If you are certain you want to erase the History, select **DELETE** (left softkey).

— or —

Select **CANCEL** (right softkey) to return to the previous menu.

Using Contacts

In This Section





- ◆ Adding a New Contact Entry
 - ◆ Finding Contact Entries
 - ◆ Contact Entry Options
 - ◆ Adding a Phone Number to a Contact Entry
 - ◆ Editing a Contact Entry's Phone Number
 - ◆ Assigning Speed Dial Numbers
 - ◆ Editing a Contact Entry
 - ◆ Selecting a Ringer Type for an Entry
 - ◆ Dialing Services
-

Now that you know the basics that make it easier to stay in touch with people and information, you're ready to explore your phone's more advanced features. This section explains how to use your phone's Contacts List, and helps you make the most of your contacts and time when you are trying to connect with the important people in your life.

Adding a New Contact Entry

Your phone can store up to 600 Contact entries. Contact entries can store up to a total of seven phone numbers, and each entry's name can contain 64 characters.

To add a new entry:

1. Select **Menu > Contacts > Add New**.
2. Scroll to **<New Contact>** and press .
3. Enter a name for the new entry and press . (See “Entering Text” on page 34.)
4. Scroll to **[Add Number]**, enter the phone number, and then press .
5. Select a number type (Mobile, Home, Work, Pager, Fax, or Other) and press .
6. Scroll down to additional fields and enter or edit information as desired.
7. Press **Done** (left softkey).

Shortcut: You can also begin by entering the phone number in standby mode and selecting **Options > Save**.



After you have saved the number, the new Contact entry is displayed.

Finding Contact Entries


There are several ways to find your Contact entries. Follow the steps outlined in the sections below to find entries from the Contacts menu.











Finding Entries




To find entries

1. Select **Menu > Contacts**.
2. Use the keypad to type the Contact's name.
3. Matching names will be displayed. Highlight the contact and press .
4. To dial the entry's default phone number, press .

Contact Entry Options



To access a Contact entry's options, press **Menu > Contacts**, highlight the contact, press **Options** (right softkey), highlight **Edit Contact** and press .

-  **[Add Name]** to edit the contact name on the entry.
-  **[Add Number]** to add a phone number to the entry. (See “Adding a Phone Number to a Contact Entry” on page 86.)
-  **[Add Email]** to add an email address to the entry.
-  **[Default Ringer]** to assign a preprogrammed or downloaded ringer.
-  **[Default Vibrate Type]** to assign a specific Vibration type for incoming calls from the Contact.
-  **[Memo]** to add a note, street address, or other information.
-  **[No Secret]** to select whether or not to hide the Contact as a Secret contact.
-  **[URL]** to add a Web site's URL to the entry.
-  **[IM]**
-  **[Address]**


-  [Birthday]
-  [Job Title]
-  [Company]

Adding a Phone Number to a Contact Entry

To add a phone number to an entry:




1. Press **Menu** > **Contacts** and highlight a contact entry.
2. Press **OPTIONS**(right softkey) > **Edit Contact** > **[Add Number]**.
3. Enter the new phone number and press .
4. Select a number type for the number and press .
5. Press **Done** (left softkey) to save the new number.

— or —

 
Press  and press **OPTIONS** (right softkey), and select **Set Speed Dial** to assign a speed dial number for the number. Then, press **Done** (left softkey) to save your new settings.

Editing a Contact Entry's Phone Number

To edit an entry's phone number:

1. Press **Menu** > **Contacts** and highlight a contact entry.
2. Press **OPTIONS** (right softkey) > **Edit Contact**.
3. Highlight the information field you wish to edit and press .
4. Press  to clear one digit at a time, or press and hold  to erase the entire number then enter the new number.
5. Press **DONE** (left softkey) to save the number.

– or –



Press  and **OPTIONS** (right softkey) for additional options. When you're finished, press **DONE** (left softkey) to save your contact.

Assigning Speed Dial Numbers



Your phone can store up to 98 phone numbers in speed dial locations. For details on how to make calls using speed dial numbers, see “Using Speed Dialing” on page 33.

Speed dial numbers can be assigned when you add a new Contacts entry, when you add a new phone number to an existing entry, or when you edit an existing number.

To assign a speed dial number to a new phone number:

1. Create a new Contact entry and phone number. (See “Adding a New Contact Entry” on page 81 or “Adding a Phone Number to a Contact Entry” on page 84.)
2. Press **OPTIONS** (right softkey).
3. Highlight **Set Speed Dial** and press .
4. Select an available speed dial location and press .
5. Press **DONE** (left softkey) to save the new speed dial number.



To assign a speed dial number to an existing phone number:

1. Go to Contacts, highlight and then open a Contact entry.
2. Highlight the phone number for which you wish to assign a speed dial number, and press **Options** (right softkey).
3. Highlight **Set Speed Dial** and press .
4. Select an available speed dial location and press .
5. Press **Done** (left softkey) to save the new speed dial number.

Note: If you attempt to assign an already in-use speed dial location to a new phone number, a dialog will appear asking if you wish to replace the existing speed dial assignment. Select **REPLACE** (left softkey) to assign the location to the new phone number and delete the previous speed dial assignment.

Editing a Contact Entry





To make changes to an entry:

1. Press **Menu > Contacts** and highlight a Contact entry.
2. Press **Options**(right softkey) > **Edit Contact**.
3. Highlight the part of the entry you wish to edit (**Name, Group, Ringer, etc.**) and press .
4. Add or edit the desired information and press .
5. Press **DONE**(left softkey) to save your changes.

Selecting a Ringer Type for an Entry

You can assign a ringer type to a Contacts entry so you can identify the caller by the ringer type. (See “Ringer Types” on page 41.)

To select a ringer type for an entry:

1. Press **Menu > Contacts** and highlight a Contact entry.
2. Press **Options**(right softkey) > **Edit Contact**.
3. Highlight the current ringer type () and press  to display the Ringer Type menu.
4. Select a ringer type and press .
5. Use your navigation key to scroll through available ringers. (When you highlight a ringer type, a sample ringer will sound.)
6. Highlight a ringer and press .

7. Press **DONE** (left softkey) to save the new ringer type.

Dialing Services

Your Contact list is preprogrammed with contact numbers for various Services.

To dial a service from your Contacts:

1. Select **Menu > Contacts > Option** (right softkey) > **Settings > Services**.
2. Select **Community Information, Non-Emergency Svcs, Traffic Information, TRS for TTY Users, Call Before You Dig**.

To dial a service from standby mode using your keypad:

1. Dial the appropriate service number:
 - **Community Information** – 2 abc 1 1
 - **Non-Emergency Services** – 3 def 1 1
 - **Traffic Information** – 5 jkl 1 1
 - **TRS for TTY Users** – 7 pqrs 1 1
 - **Call Before You Dig** – 8 tuv 1 1
2. Press to place the call.

Using the Phone's Calendar and Tools

In This Section

- ◆ Using Your Phone's Calendar
 - ◆ Using Your Phone's Alarm Clock
 - ◆ Using Your Phone's Notepad
 - ◆ Using Your Phone's Tools
-





Your phone is equipped with several personal information management features that help you manage your busy lifestyle. This section shows you how to use these features to turn your phone into a time management planner that helps you keep up with your contacts, schedules, and commitments. It takes productivity to a whole new level.







Using Your Phone's Calendar

Adding an Event to the Calendar

Your Calendar helps organize your time and reminds you of important events.

To add an event:

1. Select **Menu > My Schedule > Calendar**.
2. Using your navigation key, highlight the day to which you would like to add an event and press **ADD** (left softkey).
3. Select a time for the event by highlighting the time field and pressing  .
 - Using your keypad and/or navigation key, set the start and end time for the event and press  .
4. Select a title for the event by highlighting **[Content]** and pressing  .
 - Enter the event title and press  .


5. Select a repetition type for the event by highlighting the repeat field and pressing  .
 - Highlight **None**, **Daily**, **Mon - Fri**, **Select days**, **Weekly**, **Monthly**, or **Yearly** and press  .
6. Select an alarm time for the event by highlighting the alarm field and pressing  .
 - Highlight **None**, **On time**, **5 minutes**, **10 minutes**, **1 hour**, **1 day**, or **2 days** and press  .
7. Select a ringer type for the alarm by highlighting the ringer field and pressing  .
 - Highlight a ring tone and press  to select it.
8. Press **Save** (left softkey) to save the event.

Event Alerts

There are up to three ways your phone alerts you to scheduled events:

- By playing the assigned ringer type.
- By illuminating the backlight.

Event Alert Menu


When your phone is turned on and you have an event alarm scheduled, your phone can alert you and display the event summary. To silence the alarm and view the Alert, press .

When the alert goes off, press the appropriate softkey:

- **Dismiss** (right softkey) dismisses the notification.
- **Snooze** (left softkey) silences the alarm and schedules it to replay again in 9 minutes.

Viewing Events

To view your scheduled events:

1. Select **Menu > My Schedule > Calendar**.
2. Using your navigation key, highlight the day for which you would like to view events and press . (If you have events scheduled for the selected day, they will be listed in chronological order.)

Tip: In the calendar view, days with events are marked with a triangle on the top left of the day.

3. To display the details of an event listed in the schedule, highlight it and press .


Going to Today's Calendar Date

To go to the Calendar menu for today's date:

- ▶ Select **Menu** > **Tools** > **Calendar** > **Options** (right softkey) > **Go to Today**.

Erasing a Day's Events

To erase a day's scheduled events:

1. Select **Menu** > **Tools** > **Calendar**.
2. Using your navigation key, highlight the day for which you would like to erase events and press .

Tip: In the calendar view, days with events scheduled are marked with a triangle on the top left of the day.

3. Select **Options** (right softkey) > **Delete All**. (An alert will appear notifying you of the number of events to be erased.)
4. Select **DELETE** or **CANCEL** using the corresponding softkeys.

Note: If the day for which you are erasing events contains a repeating event, you will receive the following prompt: "All events will be deleted. Continue?" Press **DELETE** (left softkey) to continue. If you only want to delete 1 event, select **Delete** during step 3.

Deleting Events

To delete events scheduled before a specific time and date:

1. Select **Menu > Tools > Calendar > Options** (right softkey) > **Delete Old**.
2. Select the option to erase events older than **One Day**, **One Week**, **One Month**, or **One Year**. (A dialog will be displayed to inform you how many old events have been erased.)

Deleting All Events








To delete all scheduled events:

1. Select **Menu > Tools > Calendar > Options** (right softkey) > **Delete All**. (A dialog will be displayed informing you how many events will be erased.)
2. Select **Yes** to erase all events or **No** to return to the calendar view.

Using Your Phone's Alarm Clock

Your phone comes with a built-in alarm clock with multiple alarm capabilities.

To use the alarm clock:

1. Select **Menu > My Schedule > Alarm Clock**.
2. Select **Alarm 1, Alarm 2, Alarm 3, Alarm 4, Alarm 5, Walk the Dog** or **Quick Alarm**.
3. Turn the alarm on or off by highlighting the activation field and pressing  .
 - Select **On** or **Off** and press  .
4. Select a time for the alarm by highlighting the time field and pressing  .
 - Using your keypad and/or navigation key, set the alarm time and press  .
5. Select a repetition type for the alarm by highlighting the repeat field and pressing  .
 - Highlight **Once, Daily, Mon - Fri, Weekends** or **Select days** and press  .
6. Select a ringer type for the alarm by highlighting the ringer field and pressing  .
 - To browse the menus to select a ringer.
7. Press **SAVE** (left softkey) to save your alarm settings.


Using Your Phone's Notepad

Your phone comes with a notepad you can use to compose and store reminders and notes to help keep you organized.

 
To compose a note:

1. Select **Menu** > **My Schedule** > **Notepad** > **ADD** (left softkey).
2. Type your note using the alphanumeric and press **SAVE** (left softkey).

To read a saved note:

1. Select **Menu** > **My Schedule** > **Notepad**.
2. Highlight a note and press .

To delete saved notes:

1. Select **Menu** > **My Schedule** > **Notepad**.
2. Highlight a note and press .
3. Press **OPTIONS** (right softkey) > **Delete**.
4. Press **DELETE** (left softkey).

Using Your Phone's Tools

In addition to helping you be more efficient and organized, your phone offers useful and entertaining tools.

Using EZ Tip Calculator

To quickly and easily calculate tip amounts:


1. Select **Menu > Tools > Calculator > Ez Tip Calculator**.
2. Use your keypad and navigation key to enter the bill amount and desired tip percentage. (The correct tip will be calculated instantly.)
3. If you're splitting the check, highlight **Split** and enter the number of people in your party. (An equal split of the bill will be calculated and displayed.)

Using the Calculator

Your phone comes with a built-in calculator.

To use the calculator:

1. Select **Menu > Tools > Calculator > Calculator**.
2. Enter numbers using your keypad.
 - Press ***shift** to enter decimal points.
 - Press **#sign** to change the numeric value from positive to negative.

- Press **Clear** (left softkey) to clear all numbers.
3. Press  for the total.
- **Navigation Key Function** : Up(+)/ Down(-)/ Left(÷)/ Right(x)

Using the World Clock

To view the time in over 50 different locations:

1. Select **Menu > Tools > World Clock**.
2. Press **CITIES** (right softkey) to select a city.
— or —
Press the navigation key left or right to scroll through different time zones.
3. Press **SET DST** (left softkey).

Using the Unit Converter

1. Press **Menu > Tools > Unit Converter**.
2. Select **Length, Area, Mass, Volume, Temperature, or Velocity**.
3. Highlight the known unit type and enter the value. The conversion is displayed automatically.

Using Your Phone's Voice Services

In This Section

◆ Managing Voice Memos

This section includes easy-to-follow instructions on using managing voice memos.

Managing Voice Memos

You can use your phone's recording capability to record brief memos to remind you of important events, phone numbers, or grocery list items.

Recording Voice Memos

To record a voice memo:

1. Press **Menu** > **My Schedule** > **Voice Memo** > **RECORD** (left softkey).
2. Wait for the beep and then start speaking. (As it is recording, the timer counts up.)


To end the recording of your memo:

- ▶ Press **STOP** (right softkey).

To record a conversation during a phone call:

- ▶ During a call, press **OPTIONS** (right softkey) and scroll to **Voice Memo** and press  to begin recording.


To end the recording of your conversation:

- ▶ Press **Options** (right softkey), scroll to **Stop Voice Memo** and press  to end the recording.

Note: Your phone can store a total of **ten** minutes of memos.

Voice Memo Options

To play the voice memos you have recorded:

1. Press **Menu > My Schedule > Voice Memo**.
2. Scroll to the voice memo you wish to hear press .
Or, for more options press **OPTIONS** (right softkey).
 - **Set As** to assign the recording as a default ringer, a voicemail alert, a message alert, or a Contacts ringer.
 - **View Details** to view the selected voice memo information.
 - **Edit Title** to edit the selected voice memo title.
 - **Delete This** to erase the selected voice memo.
 - **Delete Multiple**
 - **Delete All**
 - **Memory Info**

—or—

Scroll to the voice memo and press  to play.

Erasing Voice Memos

To erase all voice memos:

1. Select **Menu > My Schedule > Voice Memo**.
2. Scroll to the voice memo you wish to delete and press **OPTIONS** (right softkey) > **Delete This, Delete Multiple, Delete All**.
3. Press **DELETE** (left softkey) to confirm that you want to erase all voice memos.

Section 3

Service Features

Service Features: The Basics

In This Section

- ◆ Using Voicemail
 - ◆ Using SMS Text Messaging
 - ◆ Using Caller ID
 - ◆ Responding to Call Waiting
 - ◆ Making a Three-Way Call
 - ◆ Using Call Forwarding
-



Now that you've mastered your phone's fundamentals, it's time to explore the calling features that enhance your wireless service. This section outlines your basic service features.

Using Voicemail

Setting Up Your Voicemail


All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Voicemail and personal greeting as soon as your phone is activated.

To set up your voicemail:

1. Press and hold .
2. Follow the system prompts to:
 - Create your passcode.
 - Record your name announcement.
 - Record your greeting.
 - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding , bypassing the need for you to enter your passcode).

Voicemail Notification

There are several ways your phone can alert you to a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By displaying  at the top of your screen.

New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.

To call your voicemail:

- ▶ Press and hold .

Note: Your phone accepts messages even when it is turned off. However, you are only notified of new messages when your phone is turned on and you are in your wireless service area.

Retrieving Your Voicemail Messages

You can review your messages directly from your phone or from any other touch-tone phone. To dial from your phone, you can either speed dial your voicemail or use the phone menus.

Using One-Touch Message Access


- ▶ Press and hold **1** (with a speech bubble icon) . (Your phone will dial your voicemail box.)

Using the Phone Menus to Access Your Messages

1. Select **Menu > Messaging > Voicemail**.
2. Press **TALK** to listen to your messages.

Note: You are charged for airtime minutes when you are accessing your voicemail from your phone.













Using Another Touch-Tone Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, press  .
3. Follow the voice prompts to access your mailbox.

Tip: When you call into voicemail, you first hear the header information (date, time, and sender information) for the message. To skip directly to the message, press **4** during the header.

Voicemail Button Guide

Here's a quick guide to your keypad functions while listening to voicemail messages. For further details and menu options, see "Voicemail Menu Key" on page 113.

 1 <small>ES</small>	 2 <small>abc</small>	 3 <small>def</small>
Date/Time	Send Reply	Advance
 4 <small>ghi</small>	 5 <small>jkl</small>	 6 <small>mno</small>
Replay	Rewind	Forward
 7 <small>pqrs</small>	 8 <small>tuv</small>	 9 <small>wxyz</small>
Erase	Call Back	Save
 <small>* shift</small>	 0 <small>+ next</small>	 <small># space</small>
Cancel	Help	Skip

Voicemail Options

Your phone offers several options for organizing and accessing your voicemail.

Using Expert Mode

Using the Expert Mode setting for your personal voicemail box helps you navigate through the voicemail system more quickly by shortening the voice prompts you hear at each level.

To turn Expert Mode on or off:

1. Press and hold **1** es to access your voicemail. (If your voicemail box contains any new or saved messages, press ***smith** to access the main voicemail menu.)
2. Enter your passcode.
3. Press **3** def to change your Personal Options, following the system prompts.
4. Press **3** def for Expert Mode.
5. Press **1** es to turn Expert Mode on or off.

Setting Up Group Distribution Lists

Create up to 20 separate group lists, each with up to 20 customers.

1. Press and hold **1** to access your voicemail. (If your voicemail box contains any new or saved messages, press ***mit** to access the main voicemail menu.)
2. Enter your passcode.
3. Press **3 def** to change your Personal Options, following the system prompts.
4. Press **1** for “Settings”.
5. Press **5 jkl** for Group Distribution Lists.
6. Follow the voice prompts to create, edit, rename, or delete group lists.

Callback

Return a call after listening to a message without disconnecting from voicemail.

- ▶ Press **8 tuv** after listening to a message. (Once the call is completed, you’re returned to the voicemail main menu.)

Voicemail-to-Voicemail Message

Record and send a voice message to other Voicemail users.

1. From the main voicemail menu, press **2abc** to send a message.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record and send your voice message.

Voicemail-to-Voicemail Message Reply

Reply to a voice message received from any other Voicemail user.

1. After listening to a voice message, press **2abc**.
2. Follow the voice prompts to record and send your reply.

Voicemail-to-Voicemail Message Forwarding

Forward a voice message, except those marked “Private,” to other Voicemail users.

1. After listening to a message, press **6mno**.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record your introduction and forward the voice message.

Voicemail-to-Voicemail Receipt Request

Receive confirmation that your voice message has been listened to when you send, forward, or reply to other users.

1. After you have recorded a message, press **1** to indicate you are satisfied with the message you recorded.
2. Press **4** to mark receipt requested.
3. Press **1** to send your voicemail message.

Continue Recording

When leaving a voice message, you can choose to continue recording even after you've stopped.

- ▶ Before pressing **1** to indicate that you are satisfied with the message you recorded, press **4** to continue recording.

Extended Absence Greeting

When your phone is turned off or you are off the available network for an extended period, this greeting can be played instead of your normal personal greeting.

1. From the main voicemail menu, press **3 def** for Personal Options.
2. Press **2 abc** for Greetings.
3. Press **3 def** to record an Extended Absence Greeting and follow the voice prompts to save.

Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice and text messages.

To clear the icon from the display screen:

1. Select **Menu > Messaging > Voicemail > Clear Icon**.
2. Press **CLEAR** (left softkey).

Vicemail Menu Key

Following the prompts on the voicemail system, you can use your keypad to navigate through the voicemail menu. The following list outlines your phone's voicemail menu structure.

- 1 Listen
 - 1 Date & Time Information
 - 2 Reply
 - 3 Advance 8 Seconds
 - 4 Replay
 - 5 Rewind
 - 6 Forward Message
 - 7 Erase
 - 8 Return Call
 - 9 Save
 - 0 Options
- 2 Send a Message
- 3 Personal Options
 - 1 Settings
 - 1 Skip Passcode
 - 2 Auto-Play
 - 3 Message Date & Time On/Off


- 4 ghi Change Passcode
- 5 jkl Group Distribution List
- 6 mno Numeric Pages
- * nmt Return to Personal Options Menu
- 2 abc Greetings
 - 1 es Change Main Greeting
 - 2 abc Change Recorded Name
 - 3 def Extended Absence Greeting
 - * nmt Return to Personal Options Menu
- 3 def Expert Mode On/Off
- 8 tuv Place a Call
- * nmt Disconnect

Using SMS Text Messaging

With SMS Text Messaging, you can send instant text messages from your phone to other people's messaging-ready wireless phones -- and they can send messages to you. When you receive a new message, you will be notified (according to your notification settings).

In addition, SMS Text Messaging includes a variety of preset messages, such as “I’m running late, I’m on my way,” that make composing messages fast and easy. You can also create and customize your preset messages (up to 100 characters) on your phone.

Composing SMS Text Messages

1. Press **Menu > Messaging > Send Message** and select a recipient:
 - **Go to Contacts** to select a recipient from your internal Contacts. (Contacts entries must contain a wireless phone number or an email address.)
 - **NEW ADDR** (right softkey) to use the keypad to enter the wireless phone number or email address of the person to whom you wish to send a message.
2. Press .
3. Enter the text you wish to send.
4. Press **SEND** (left softkey) to send the message.

Accessing SMS Text Messages

To read an SMS Text message:

- ▶ When you receive a text message, it will automatically display a notification on your phone's main display screen. To view received messages, press **Menu > Messages > Text Messages** and select the new messages.

To reply to an SMS Text message:

1. Press **Menu > Messaging > Send Message** select the message you wish to reply to.
2. Press **SEND** (left softkey) to start a new message.

Using Preset Messages

Preset messages make sending text messages to your friends, family, and coworkers easier than ever.

To add or edit preset messages:

1. Press **Menu > Settings > Messaging > Preset Messages > ADD** (left softkey).
2. Enter your new message or changes and press **MENU OK**.

Using Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, just follow these easy steps.

To block your phone number from being displayed for a specific outgoing call:


1. Press ***unit 6mno 7pqrs**.
2. Enter the number you want to call.
3. Press **TALK**.

To permanently block your number, call your service provider.

Responding to Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).

To respond to an incoming call while you're on a call:

- ▶ Press . (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- ▶ Press  again.

Tip: For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by entering ***70** before the number of the person you are calling. Call Waiting is automatically reactivated once you end the call.

Making a Three-Way Call

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

To make a Three-Way Call:

1. Enter a number you wish to call and press **TALK**.
2. Once you have established the connection, enter the second number you wish to call and press **TALK**. (This puts the first caller on hold and dials the second number.)
3. When you're connected to the second party, press **TALK** again to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all other callers are disconnected.

Using Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when Call Forwarding is activated.

To activate Call Forwarding:

1. Press ***shift** **7pqrs** **2abc** .
2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press **TALK** . (You will see a message and hear a tone to confirm the activation of Call Forwarding.)

To deactivate Call Forwarding:

1. Press ***shift** **7pqrs** **2abc** **0+next** .
2. Press **TALK** . (You will see a message and hear a tone to confirm the deactivation.)

Note: You may be charged a higher rate for calls you have forwarded.

Data Services

In This Section

- ◆ Data Service Applications
 - ◆ Getting Started With Data Services
 - ◆ Downloading Content
 - ◆ Exploring the Web
 - ◆ Data Services FAQs
-

Data service offers easy and amazing features you will really use. These services – including messaging, games, downloadable ringtones and screen savers, and portable Web access – let you have fun, stay in touch, and stay informed no matter where you go on the available network.

This section introduces these advanced services and walks you through the necessary steps to start taking advantage of data service.

Data Service Applications

Here is a brief list of the application types available through your phone. For more information, please contact your service provider.

Games – Download exciting games with full-color graphics and sound.

Ringers – Personalize your phone by downloading and assigning different ringers to numbers in your Contacts.

Screen Savers – Download unique images to use as screen savers – or make it easy to tell who's calling by assigning specific images to numbers in your Contacts.

Web – Access the Internet and up-to-date news and information from your phone.

Data Services

Getting Started With Data Services

This section will help you learn the basics of using your data service, including managing your user name, launching a data connection, and navigating the Web with your phone.

Your User Name

When you buy a phone and sign up for service, you're automatically assigned a user name, which is typically based on your wireless phone number.

When you use data services, your user name is submitted to identify you to the available network. The user name is also useful as a way to personalize services, and as an online virtual identity.

Your user name will be automatically programmed into your phone. You don't have to enter it.

Finding Your User Name

If you aren't sure what your user name is, you can easily find it on your phone.

To find your user name:

- You can find your user name under the **Phone Information** option in your phone's **Settings** menu (**Menu > Settings > Phone Information > Version**).

Launching the Web Browser

To launch the Web Browser:

- ▶ Select **Menu > Web**. (Your data services connection will open and your home page will be displayed.)

Note: If Net Guard is enabled and displayed, press **Connect** (left softkey) to continue and access the Web.

While connecting, the following will appear on the screen:
Connecting...

Net Guard

When you first launch data services, the Net Guard will appear to confirm that you want to connect. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed.




To change your Net Guard settings:

- ▶ Select **Menu > Settings > More... > Data > Net Guard** and choose an option:
 - **On** to activate the Net Guard.
 - **Off** to deactivate the Net Guard.

Note: When enabled, the Net Guard appears only once per session. The Net Guard does not appear if the phone is merely reconnecting due to a time-out.

Connection Status and Indicators

Your phone's display lets you know the current status of your data connection through indicators which appear at the top of the screen. The following symbols are used:

-  Your data connection is active (data is being transferred); the transmit/receive symbol will blink to indicate data transmission. Incoming voice calls go directly to voicemail; outgoing voice calls can be made, but the data connection will terminate.
-  Your data connection is dormant. (No data is being sent or received.) Though not currently active, when dormant the phone can restart an active connection quickly; voice calls can be made and received.
-  Your phone is not currently able to access data service features.

If no indicator appears, your phone does not have a current data connection.

Navigating in Data Services


Navigating data services is easy once you've learned a few basics. Here are some tips for getting around:

Softkeys

While using data services, the bottom line of your phone's display will contain softkeys. These keys are shortcut controls for navigation, and they correspond to the softkey buttons directly below the phone's display screen.

Tip: Depending on the context, the labels on the softkeys may change to indicate their function.

To use softkeys:

- ▶ Press the desired softkey button. (If an additional pop-up menu appears when you press the softkey button, select the menu items using your keypad [if they're numbered] or by highlighting the option and pressing .)

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything.

To scroll line by line:

- ▶ Press the navigation key up and down.


To scroll page by page:

- ▶ Press the volume buttons on the side of the phone.

Selecting

Once you've learned how to use the softkeys and scroll, you can start navigating through the Web.

To select onscreen items:

- ▶ Use the navigation key to highlight the desired item, and then press the desired softkey button (or press ).

Tip: You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "GO."

Tip: If the items on a page are numbered, you can use your keypad (number keys) to select an item.

Links appear as highlight-able text.

To select links:

- ▶ Highlight the link and press the appropriate softkey.

Going Back

To go back one page:

- ▶ Press the  key on your phone.


Note: The **BACK** key is also used for deleting text (like a BACKSPACE key) when you are entering text.

Going Home

To return to the home page:

▶ Press and hold .

– or –

Press **MENU** (right softkey) and select **Home** ().

Downloading Content

With data services and your new phone, you have access to a dynamic variety of Premium Service content, such as downloadable Games, Ringers, Screen Savers, and other applications.

Accessing the Download Menus


To access the download menus:

1. Select **Menu > My Stuff**.
2. Select the type of content you wish to download (**Games, Ringers, Screen Savers, Applications** or **Options**), and then select **Get New**. (Data Services will start and take you to the corresponding download menu.)

To access the download menus from the Web browser:

1. From the home page, select **Downloads > Ringers, Screen Savers, Applications** or **Games**.

Downloading an Item

Once you've selected an item you wish to download, highlight it and press . You will see a summary page for the item including its title, the download detail, and the cost. Select the Purchase link below the price to view the purchase confirmation page. Once on the purchase confirmation page, you will be shown more details about the download, as well as a link to view Terms & Conditions associated with the content.

To download a selected item:

1. From the information page, select the **Buy** link.
(The item will download automatically).
2. Select an option to continue:
 - Select **Use/Run/View** to assign the downloaded item (or to start it, in the case of a game or application). Your data session will end and you will be redirected to the appropriate phone menu screen.
 - Select **Set as** to assign a ringer or screen saver to a phone function.
 - Select **Shop** to browse for other items to download.

For complete information and instructions on downloading Games, Ringers and Screen Savers, contact your service provider.

Exploring the Web

With Web access on your phone, you can browse full-color graphic versions of your favorite Web sites, making it easier than ever to stay informed while on the go. Follow sports scores, breaking news and weather, and shop on your phone anywhere on the available network.

In addition to the features already covered in this section, the Data service home page offers access to these colorful, graphically rich Web categories, which may include **News, Weather, Entertainment, Sports, Money, Travel, Shopping,** and **Tools**, as well as other useful options such as **Search**. Many sites are available under more than one menu – choose the one that's most convenient for you.

Data Services

Using the Browser Menu

Although the home page offers a broad and convenient array of sites and services for you to browse, not all sites are supported, and certain functions, are not available. While navigating, the browser menu offers additional options to expand your use of the Web on your phone.

Opening the Browser Menu

You may open the browser menu anytime you're using the Browser, from any page you are viewing.

To open the browser menu:

- ▶ Press **MENU** (right softkey).


Options available under the browser menu include:

- **Home** to go back to the homepage.
- **Forward** to return to the next page.
- **Mark this page** allow the user to create a new bookmark.
- **My Bookmarks** allow the user navigate to an existing bookmark.
- **Search** to search the internet.
- **Send page** to open the text messaging client with the current URL as message body.
- **Go to Web Address** allow the user to navigate to a URL by entering it manually.
- **History** show allow the user to see recently viewed pages.
- **Page Info** show the user various information about a web page.
- **Browser Options** to choose font settings, privacy, etc.

Going to a Specific Web site

To go to a particular Web site by entering a URL (Web site address):

1. With the browser open, press **MENU** (right softkey) and Select **Go to Web Address**.

2. Use your keypad to enter a website address.
3. Press  to go to the website.

Note: Not all Web sites are viewable on your phone.

Restarting the Browser

If the browser appears to be malfunctioning or responding slowly, you can often fix the problem by simply restarting the browser.

To reset the browser:

1. Within the browser, press **MENU** (right softkey) to open the browser menu.
2. Select **Browser Options > Restart Browser**.

Data Services FAQs


How will I know when my phone is ready for data service?

Your user name will be displayed when you access **Menu > Settings > Phone Info > Version**.

How do I sign in for the first time?

You are automatically signed in to access data services when you use Browser menu.


How do I know when my phone is connected to data services?

Your phone automatically connects when data service is used or an incoming message arrives. Your phone will also display the  icon. (Connecting takes about 10-12 seconds.)

Can I make calls and use data services at the same time?

You cannot use voice and data services simultaneously. If you receive a call while data service is active, the call will be forwarded to voicemail. You can place an outgoing call anytime, but it will interrupt any in-progress data session.

When is my data connection active?

Your connection is active when data is being transferred. Incoming calls go directly to voicemail. When active, the  indicator flashes on your phone's display screen.

When is my data connection dormant?

If no data is received for 10 seconds, the connection goes dormant. When the connection is dormant, voice calls are allowed. (The connection may become active again quickly.) If no data is received for an extended period, the connection will be terminated.

Can I sign out of data services?

You can sign out without turning off your phone; however, you will not be able to use Web or other data services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may sign in again at any time. To sign out, go to **Menu > Settings > More... > Data > On/Off** (and select Off) in your phone's menu.

Section 4

Safety and Warranty Information

Important Safety Information

In This Section

- ◆ General Precautions
 - ◆ Maintaining Safe Use of and Access to Your Phone
 - ◆ Using Your Phone With a Hearing Aid Device
 - ◆ Caring for the Battery
 - ◆ Radiofrequency (RF) Energy
 - ◆ Owner's Record
 - ◆ Phone Guide Proprietary Notice
-

This phone guide contains important operational and safety information that will help you safely use your phone. Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.

General Precautions

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully extended, and over your shoulder.
- Try not to hold, bend, or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

Note: For the best care of your phone, only authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.

Maintaining Safe Use of and Access to Your Phone

Do Not Rely on Your Phone for Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore, you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services and/or mobile phone features are in use. Check with your local service provider for details.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radiofrequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF

signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer about any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in health-care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.

- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note: Never transport or store flammable gas, flammable liquid, or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that use your airtime balance.

Using Your Phone With a Hearing Aid Device

A number of phones offered by your service provider have been tested for hearing aid device compatibility. When some wireless phones are used with certain hearing devices (including hearing aids and cochlear implants), users may detect a noise which can interfere with the effectiveness of the hearing device.

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference noise they may generate. ANSI standard C63.19 was developed to provide a standardized means of measuring both wireless phone and hearing devices to determine usability rating categories for both.

Ratings have been developed for mobile phones to assist hearing device users find phones that may be compatible with their hearing device. Not all phones have been rated for compatibility with hearing devices. Phones

that have been rated have a label located on the box. Your LX101 has an M3 and a T3 rating.

These ratings are not guarantees. Results will vary depending on the user's hearing device and individual type and degree of hearing loss. If a hearing device is particularly vulnerable to interference noise, even a phone with a higher rating may still cause unacceptable noise levels in the hearing device. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements for hearing aid compatibility and are likely to generate less interference to hearing devices than unrated phones. (M4 is the better/higher of the two ratings.)

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. (T4 is the better/higher of the two ratings. Note that not all hearing devices have telecoils in them.)

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. LG is not aware of similar problems with LG phones resulting from the proper use of batteries and accessories approved by LG. Use only approved batteries and accessories found through LG. Buying the right batteries and accessories is the best way to ensure they're genuine and safe.

- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4° F to 140° F (-20° C to 60° C)

More than one month:

-4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Li-Ion) Batteries

Do not handle a damaged or leaking Li-Ion battery as you can be burned.

For safe disposal options of your Li-Ion batteries, contact your nearest authorized service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Radiofrequency (RF) Energy

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radiofrequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radiofrequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least 7/16 inch (1.5 centimeters) from your body when transmitting. Use of non-approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC Web site at www.fcc.gov.

Specific Absorption Rate (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the LX101 are:

Head: 1.3 W/kg; Body-worn: 1.0 W/kg

FCC Radiofrequency Emission

This phone meets the FCC Radiofrequency Emission Guidelines.

FCC ID number: BEJLG100C.

More information on the phone's SAR can be found from the following FCC Web site:

<http://www.fcc.gov/oet/fccid>.

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: LX101 by LG®

Serial No.:

Phone Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Manufacturer's Warranty

In This Section

◆ Manufacturer's Warranty

Your phone has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

Manufacturer's Warranty

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit, and its enclosed accessories, will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the unit and enclosed accessories shall be a period of one (1) year from the date of original purchase. The remaining warranty period for the unit being repaired or replaced shall be determined by presentation of the original sales receipt for the purchase of the unit.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser / end user.
- (3) The limited warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories, and all Canadian Provinces.
- (4) The external housing and cosmetic parts shall be free of major defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information satisfactory to LG to prove the date of purchase or exchange.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damage resulting from use of the product in ways other than its intended manner.
- (2) Defect or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, or spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) Alleged defects or malfunctions of the product if the Customer Service Department at LG was not notified by the consumer during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, expressed or implied, either in fact or by operations of law, statutory or otherwise, including, but not limited to, any implied warranty of marketability, merchantability, or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. WHAT LG WILL DO:

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusion of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

5. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call the following telephone number from anywhere in the continental United States:

LG Electronics Service

201 James Record Road

Huntsville, AL 35824

Tel. 1-800-793-8896 Email: <http://us.lgservice.com>

Please call or write for the location of the LGE authorized service center nearest you and the procedures for obtaining warranty claims.

A

Adding a New Contacts
Entry 81
Adding a Phone Number 84
Airplane/Music Mode 53
Alarm Clock 96
Answering Calls 25
Assigning Speed Dial
Numbers 86

B

Battery 18-21
Capacity 18
Charging 20
Installing 19
Removing 19
Browser Menu 131

C

Calculator 98
Calendar 91-95
Call History 73-79
Erasing 79
Making a Call From 76
Prepending a Phone
Number 78
Saving a Phone Number

From 77

Call History Options 75
Call Waiting 119
Caller ID 118
Calling Emergency Numbers
26
Contacts Entry Options 83

D

Data Services 122
Dialing Options 24
Dialing Services 89
Display Screen 13
Display Settings 46

E

Editing a Contacts 85
Editing a Contacts Entry 88
End-of-Call Options 29
Entering Text 34-39
Abc Mode 37
Preset Messages 39
Symbols 38

F

Features 15
Finding Contacts Entries 82

Front View 9

G

Getting Help 5

Getting Started 3

I

In-Call Options 28

Introduction i

K

Key Functions 10

L

Location Settings 49

Lock Code

 Changing 62

Locking Your Phone 61

M

Making Calls 23

Menu ii

Messaging Settings 50

Missed Call Notification 26

N

Notepad 97

P

Phone Number

 Displaying 23

 Finding 30

 Saving 29

Phone Setup Options 56

R

Roaming Experience 66

S

Saving a Phone Number 29

Security 60-65

 Security Menu 61

Selecting a Ring Type for an
Entry 88

Setting Up Service 2

Setting Up Your Voicemail 4

Setting Your Phone's Roam
Mode 69

SMS Text Messaging 115-
121

Sound Settings 41

Special Numbers 63

T

T9 Text Input 35

The Basics 8

TTY 54
Turning Your Phone Off 18
Turning Your Phone On and
Off 17

U

Understanding Roaming 67
Unlocking Your Phone 62
Using Call Guard 70
Using Contacts 80
Using Data Roam Guard 72
Using the Charger 21

V

Viewing History 74
Voicemail
 Menu Key 113
 Options 109
 Retrieving 107
 Setting Up 105

W

Warranty 147

