



简体中文  
ENGLISH

型号: LG-G920



CE 0700



ISSUE 1.0  
PRINTED IN KOREA

Part No. MMBB0124005

用户手册

## GPRS或MMS手机

用户手册

型号: LG-G920

请您在操作您的手机前仔细阅读此手册。  
并保留它作为将来的参考。

**简体中文**

# **GPRS或MMS手机**

**用户手册**

**型号：LG-G920**

请您在操作您的手机前仔细阅读此手册。  
并保留它作为将来的参考。



## 简介

恭喜您购买功能先进、外观小巧的LG-G920手机，此款手机设计为采用最新的数字移动通信技术进行操作。



- 本用户手册包含有关手机使用和操作的重要信息。请仔细阅读所有信息以获得手机的最佳性能，并防止因误用而造成的任何损坏。如果做出未在本用户手册中明确认可的更改或修改，可能导致手机的保修失效。



请阅读以下简单的准则。违反这些规定可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

### **暴露在射频能量之下**

#### **无线电波暴露和特定吸收率 (SAR) 信息**

此款LG-G920型手机已设计为遵守适用的无线电波暴露安全要求。此要求以相关的科学准则为基础，包括为确保所有人员（无论年龄和健康状况）安全而设计的安全容量。

- 无线电波暴露准则采用一种称为“特定吸收率”或SAR的测量单位。SAR测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同LG手机型号间的SAR水平可能有所差别，但它们均设计为符合相关的无线电波暴露准则。
- 国际非电离辐射防护委员会 (ICNIRP) 建议的SAR极限是在10克组织上平均为2W/kg。
- 由DASY4测试的本型号手机在耳边使用的最高SAR值为0.592W/kg (10g)。
- 有的国家（地区）采用由电气和电子工程师协会 (IEEE) 建议的SAR极限，对于居住在这些国家（地区）的居民，SAR数据信息是1克组织上平均为1.6W/kg（例如美国、加拿大、澳大利亚和中国台湾）。



## 关于安全有效使用手机的准则

### 产品保养和维护

**警告：**仅使用经核准为用于此特定手机型号的电池、充电器和配件。

**使用任何其它类型可能导致适用于此手机的认可或保修失效，并可能造成危险。**

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 使用干布清洁手机外壳。  
(不要使用如苯、稀释剂或酒精之类的溶剂)。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或交通卡旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用如耳机之类的配件。



## **有效的手机操作**

为了在耗电最省的情况下享受最佳性能，请：

- 当与其它任何话机通话时，拿起手机。  
当直接对着麦克风说话时，调整天线角度，使之朝上并高出您的肩膀。如果天线是可伸缩的，则在呼叫期间应将天线伸长。
- 如果您的手机支持红外线功能，切勿将红外线对准任何人的眼睛。

## **电子设备**

所有手机都可能产生干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗设备附近使用手机。  
不要将手机放在心脏起搏器上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

## **道路安全**

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 应将全部注意力集中在驾驶上。
- 如果有免持装置，请使用免持装置。
- 如果行驶条件需要，请在拨打或应答电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的或便携式的无线设备阻挡气囊。由于不适当的执行情况，可能造成严重伤害。



## 关于安全有效使用手机的准则

### **爆破区域**

不要在正进行爆破的地区使用手机。

请依照有关限制，并遵守任何规章或规定。

### **易爆环境**

- 不要在加油站内使用手机。不要在靠近燃料或化学品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

### **在飞机上**

无线设备可能对飞机造成干扰。

- 请在登机前关闭手机。
- 未经机务人员允许，不得在地面上使用手机。

### **儿童**

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

### **紧急电话**

并非在所有蜂窝网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急电话功能。请与当地的服务提供商核对。



## 电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用LG电池和充电器。LG充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要放在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。





# 目录

<b>LG-G920 功能</b> .....	<b>12</b>
•手机部件 .....	12
•具有DSC外观的130万像素数码相机 .....	17
•显示信息 .....	20
<b>开始</b> .....	<b>22</b>
•安装SIM卡和手机电池 .....	22
•充电 .....	24
•断开适配器 .....	25
•开机和关机 .....	26
•访问代码 .....	26
•限制密码 .....	27
<b>常规功能</b> .....	<b>28</b>
•拨打电话和应答电话 .....	28
•输入文本 .....	30
•电话本 .....	35
•呼叫中菜单 .....	35
•多方通话 .....	36
<b>菜单树</b> .....	<b>38</b>
<b>选择功能和选项</b> .....	<b>40</b>
<b>情景模式[菜单1]</b> .....	<b>41</b>
•振动[菜单1-1] .....	41
•静音[菜单1-2] .....	41
•私人[菜单1-3] .....	41
•大声[菜单1-4] .....	41



•耳机[菜单1-5] .....	41
•汽车[菜单1-6] .....	41
<b>通话记录[菜单2] .....</b>	<b>43</b>
•未接来电[菜单2-1] .....	43
•已接来电[菜单2-2] .....	44
•拨出电话[菜单2-3] .....	44
•删除最近呼叫[菜单2-4] .....	45
•通话计时[菜单2-5] .....	45
•通话计费[菜单2-6] .....	46
•话费设定[菜单2-7] .....	46
•GPRS信息[菜单2-8] .....	47
<b>工具[菜单3] .....</b>	<b>48</b>
•我的素材[菜单3-1] .....	48
•收藏[菜单3-2] .....	48
•单位转换器[菜单3-3] .....	49
•计算器[菜单3-4] .....	50
•时区设置[菜单3-5] .....	50
•语音备忘录[菜单3-6] .....	51
•激活红外[菜单3-7] .....	52
<b>管理器[菜单4] .....</b>	<b>53</b>
•电话簿[菜单4-1] .....	53
•闹钟[菜单4-2] .....	58
•日程表[菜单4-3] .....	58
•备忘录[菜单4-4] .....	60



## 目录

<b>信息[菜单5]</b> .....	<b>61</b>
• 文本信息[菜单5-1] .....	61
• 多媒体信息[菜单5-2] .....	65
• 语音邮件[菜单5-3] .....	69
• 小区广播[菜单5-4] .....	70
• 模板[菜单5-5] .....	71
• 名片[菜单5-6] .....	72
• 内存状态[菜单5-7] .....	73
<b>相机[菜单6]</b> .....	<b>74</b>
• 拍照[菜单6-1] .....	74
• 摄像[菜单6-2] .....	77
• 镜框拍摄[菜单6-3] .....	78
• 我的相册[菜单6-4] .....	79
• 我的电影[菜单6-5] .....	81
• 设定[菜单6-6] .....	82
• 内存状态[菜单6-7] .....	83
<b>多媒体[菜单7]</b> .....	<b>84</b>
• MP3播放器[菜单7-1] .....	84
• 游戏[菜单7-2] .....	87
• Java[菜单7-3] .....	87



<b>服务[菜单8]</b> .....	<b>90</b>
•互联网[菜单8-1] .....	90
•移动梦网[菜单8-2] .....	94
<b>设置[菜单9]</b> .....	<b>95</b>
•日期和时间[菜单9-1] .....	95
•通话设定[菜单9-2] .....	96
•手机设定[菜单9-3] .....	99
•保密设定[菜单9-4] .....	100
•网络设定[菜单9-5] .....	103
•GPRS设置[菜单9-6] .....	103
•恢复初始设定[菜单9-7] .....	104
<b>问题与回答</b> .....	<b>105</b>
<b>配件</b> .....	<b>108</b>
<b>技术数据</b> .....	<b>109</b>



## LG-G920 功能

### 手机部件

#### 手机正面



#### 1. 向上/向下侧键

- 按住此键在外LCD屏幕上显示当前时间。
- 当翻盖打开时，在待机模式控制按键音量。
- 在通话中控制听筒音量。
- 用这些按键在相机预览模式中进行放大/缩小。
- 在播放视频剪辑、MP3或玩游戏时控制音量。

**2. 充电器接头：**连接至电源适配器，以进行充电。在此连接USB 电缆以便使用PC Sync程序。

#### 3. 听筒

#### 4. 外LCD屏幕

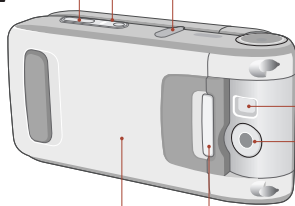 


## 手机背面

6. MP3播放器/互联网/  
相机设定菜单键。

5. 侧相机键

7. 耳机插孔



1. 闪光灯

2. 相机镜头

3. 电池盖

4. 电池门锁

1. 闪光灯

2. 相机镜头



### 备注

- 如果相机镜头上有灰尘，将会影响图像质量。

3. 电池盖

4. 电池门锁： 按住它打开电池盖。

5. 侧相机键： 按住此键打开相机模块。用此键拍摄照片。

6. MP3播放器/互联网/相机设定菜单键。

- 按住此键在手机合上的情况下打开或关闭MP3播放器。
- 打开手机后，长按此键可连接到互联网。
- (相机)在预览模式中，按此键可打开相机设定菜单并确认选择。

7. 耳机插孔： 在此处连接耳机。



## LG-G920 功能

### 翻盖打开的情况下





## 1. 听筒

2. **LCD屏幕**：全彩显示手机的状态图标、菜单项目、Web信息、图片等等。

## 3. 相机镜头

4. **确认/互联网键**：选择菜单选项并确认操作。

\* 在待机模式下，按下此键即可连接互联网。

5. **麦克风**：在通话中为保护隐私可以静音。（请参阅第36页。）


6, 12. **左软键/右软键**：这两个按键分别执行屏幕上其上方文字指示的功能。

7. **日程表键**：日程表菜单的快捷键。

8. **发送键**：拨打电话号码并应答来电。在待机模式中按此键，您可以快速访问最后的来电、去电和未接来电。

9. **特殊功能键** ():

- 在待机模式，按住此功能键直至通过语音拨号拨打电话。
- **自拍器**：在相机拍摄模式，按此键以激活/停用自拍器。可以用“计时模式”菜单[菜单6-6-4]设置希望的延时。（请参阅第82页。）

10. **闪光灯**：在预览模式中，可以通过按  打开或关闭闪光灯。可以用“闪光模式”菜单[菜单6-6-5]设置希望的闪光模式。（请参阅第82页。）





## LG-G920 功能

11. **导航键：**用于滚动查看菜单和移动光标。用以快速访问手机功能。
  - 向上导航键：在待机模式中按此键，您可以按姓名搜索电话本。
  - 向下导航键：收藏菜单的快捷键。
  - 向左导航键：“情景模式”菜单的快捷键。
  - 向右导航键：收信箱的快捷键。
13. **照相键：**用于照相和视频点播功能。
  - 在待机模式中，按一次此键可转到相机菜单。长按此键直接打开取景器。然后用此键拍摄照片。
14. **清除键：**每按一下删除一个字符。按住此键清除所有输入内容。 也可使用此键返回上一屏幕。
15. **结束/电源键：**用于结束呼叫或拒接呼叫，也用于返回待机模式。按住此键开关手机电源。
16. **字母数字键：**输入数字、字母和一些特殊字符。
17. **特殊功能键 (√#\*)：**
  - 在输入电话号码时，按住此键可输入一个休止符。
  - 闪光灯：在相机拍摄模式，利用此键可以打开或关闭闪光灯。
18. **挂绳插孔**



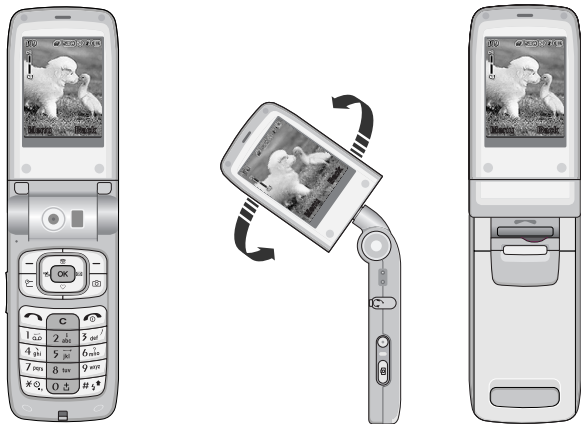 
## 具有DSC外观的130万像素数码相机

灵活的LCD屏幕可以顺时针旋转多达180度。它相当于取景器，让您可以轻松拍摄照片。当翻盖旋转180度时，您可以将主LCD屏幕作为外部屏幕使用。它几乎就是一部数码相机。



### 备注

- 不要用力旋转LCD屏幕。不要试图顺时针旋转LCD屏幕。



此状态让您可以自由拍摄。



## LG-G920 功能

将翻盖旋转180度，当翻盖关闭时，您可以将手机当作数码相机使用。



- ① 红外线端口
- ② 耳塞式麦克风插孔
- ③ 相机设定菜单/ 确认键：在预览模式，打开相机设定菜单并确认选择。



### 备注

- 在翻盖合上的情况下，也可以长按此键播放MP3文件。

- ④ 侧相机键：按住此键以使用相机功能。按此键拍摄照片。
- ⑤ 主LCD屏幕：在拍摄图片时，它相当于取景器。
- ⑥ 向上/向下侧键：用于向左或向右移动光标。可用这些按键进行缩放。

### 在翻盖关闭的状态下照相

1. 将翻盖旋转180度，使主LCD屏幕向外。
2. 按住此侧相机键(④)长达2秒钟。将打开相机模块，且预览屏幕开启。



### 备注

- 在预览模式下，如果2分钟内没有按键操作，则会关闭相机模块并返回待机模式。

3. 对准要拍摄的物体，然后按侧相机键(4)。拍摄的图片自动地保存在“我的相册”[菜单6-4]中。(请参阅第79页，以了解“我的相册”。)
4. 在拍摄之前，您可以通过按相机设定菜单键(3)，选择以下选项。在预览模式，无按键操作达1分钟将关闭相机模块，并且会返回到待机模式。



- ① **亮度**：有6级可供选择。
- ② **白平衡**：有5档设置可用：自动、日光、白炽灯、阴天和荧光灯。
- ③ **分辨率**：选择希望的分辨率。请参阅第76页。
- ④ **色彩模式**：有5种设置可供选择：彩色、单色、深褐色、蓝色和反色。

- ⑤ **拍摄模式**：在单拍和连拍之间进行选择。
- ⑥ **图片库**：拍摄照片后，可用此保存拍摄的照片。
- ⑦ **退出**：选择此项从设置菜单退出。



## LG-G920 功能

要在设置菜单之间移动，请使用向上/向下侧键(⑥)。

突出显示一项菜单之后，按相机设定菜单键(③)打开菜单。

用向上/向下侧键(⑥)选择需要的值，再按相机设定菜单键(③)确认。





 

### 显示信息

下表说明出现在手机显示屏上的各种指示符或图标。

### 屏幕图标

图 标	说 明
	指示网络信号的强度。
	指示呼叫正在进行中。
	指示目前正在另一网络上漫游。
	指示 GPRS 服务可用。
	指示已设置并开启闹钟。
	指示电池的充电状态。
	指示接收到文本信息。
	指示接收到语音邮件。
	指示接收到彩信。
	指示已启动呼叫转接功能。
	指示已设置振动铃声。
	指示接收到电子邮件信息。
	指示已启动“大声”情景模式。
	指示已启动“静音”情景模式。
	指示已启动“耳机”情景模式。
	指示已启动“汽车”情景模式。



图 标	说 明
	指示已启动“私人”情景模式。
	指示您可以使用 Push 信息服务。
	指示您在日程表菜单有所选日期的日程表。
	指示手机目前正在访问 WAP。
	指示您目前正在使用 GPRS。
	指示已进入安全页面。



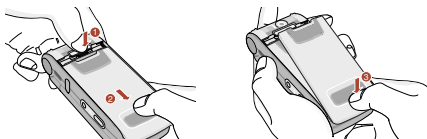 
## 开始

### 安装SIM卡和手机电池

在卸下电池前确保电源已关闭。

#### 1. 卸下电池盖。

按电池释放门，将电池盖沿着手机底部滑动。卸下电池盖。

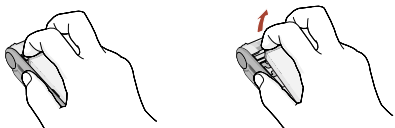 


#### 备注

- 如果在电源打开时从手机上卸下电池，可能导致手机出现故障。

#### 2. 卸下电池。

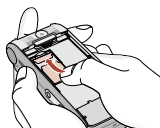 
握住电池边缘，将电池从电池室取出。





### 3. 安装SIM卡。

将SIM卡插入插槽内。将SIM卡滑进SIM卡插槽中。确保SIM卡以正确方式插入并且卡上的金色接触区域面朝下。要取出SIM卡，轻轻将卡向下按并反向推出。



插入SIM卡



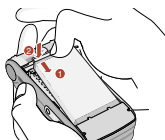 
取出SIM卡



#### 备注

- SIM卡的金属触点很容易因刮擦而损坏。操作时请对SIM卡多加注意。遵守随SIM卡提供的说明。

### 4. 安装电池。



先将电池后端插入电池室底部。

向下推电池前端，直至电池卡入到位。





## 开始

### 5. 更换电池盖。



将电池盖放到手机的适当位置，并滑动它直至门锁卡入到位。

## 充电

仅使用随手机提供的电源适配器。

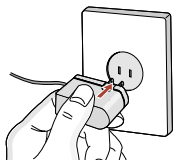 
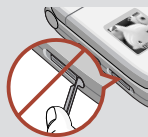 


1. 当电池正确装入手机后，将旅行适配器的导线连接到手机底部。取下充电器接头，并将它旋转180度。确保导线接头上的箭头朝向手机正面。



### 备注

- 不要折叠橡胶盖来打开手机充电器接头的保护盖。



2. 将适配器的另一端连接到电源插座。



### 小心

- 使用未经核准的配件可能损坏您的手机，并可能使保修失效。
- 不要强行插拔接头，这可能会损坏手机和(或)电源适配器。



### 备注

- 连接旅行适配器后，“正在充电”将显示在屏幕上。当电池完全耗尽后，手机需要很长一段时间才能显示“正在充电”。

## 断开适配器



1. 充电结束后，电池图标的移动条停止并且屏幕上显示“已满”字样。
2. 从电源插座上拨下适配器。按住接头两侧的灰色凸钮并拉出接头，将适配器从手机上断开。



### 备注


- 在首次使用手机之前，确保电池已完全充电。
- 不要在充电过程中取出电池或SIM卡。
- 如果出现电池未正确充电的情况，请使用电源键关闭并重新打开手机，然后再次对电池进行充电。在取出并重新装入电池之后，请尝试再次对电池进行充电。




## 开始

### 开机和关机

#### 开机

1. 在手机中装入电池，并将手机连接到诸如旅行适配器、点烟器适配器或免持汽车装置之类的外部电源。或者在手机中装入已充电的电池。
2. 按下  数秒钟，直到LCD屏幕亮起。
3. 视需要PIN码设置的状态而定，您可能需要输入PIN码。

#### 关机

1. 按下  数秒钟，直到LCD屏幕熄灭。

### 访问代码

您可以使用本节所述的访问代码来防止他人未经允许使用您的手机。可以使用**更换密码**功能[菜单9-4-5]来更改访问代码(除PUK和PUK2码)。请参阅第102页。

#### **PIN码(4至8位数字)**

PIN(个人身份号码)码防止他人未经允许使用您的SIM卡。PIN码通常随SIM卡提供。当**需要PIN码**设置为**开**时，每次开机时手机都会要求PIN码。当**需要PIN码**设置为**关**时，手机将直接连接到网络，而无需PIN码。

#### **PIN2码(4至8位数字)**

随某些SIM卡会提供PIN2码。仅当您的SIM卡支持此类功能时，才可以使用这些功能。请咨询网络运营商以获得进一步的信息。



### **PUK码(4至8位数字)**

更改被锁定的PIN码时需要PUK (PIN解锁密码)码。SIM卡可能会提供PUK码。如果未提供，请联系您的网络运营商以获得该密码。如果丢失了该密码，请同样与您的网络运营商联系。

### **PUK2码(4至8位数字)**

随某些SIM卡会提供PUK2码，更改被锁定的PIN2码时需要PUK2码。如果丢失了该密码，请同样与您的网络运营商联系。

### **安全密码(4至8位数字)**

安全密码防止他人未经允许使用您的手机。默认的安全密码设置为“0000”删除所有电话记录及激活恢复初始设定菜单时需要安全密码。并且，开关手机锁定功能以防止未经允许使用手机时，也需要安全密码。从保密设定菜单中可以修改安全密码默认设置。

### **限制密码**





当使用呼叫限制功能时需要限制密码。当预订了此功能时，您将从网络运营商处获得此密码。有关详细信息，请参阅第101页。





## 常规功能

### 拨打电话和应答电话



#### 拨打电话

1. 确保手机已开机。
2. 输入电话号码，包括区号。要编辑LCD屏幕上的电话号码，按向右/向左导航键将光标移到所需的位置，或者按清除键()一次删除一个数字。
  - ▶ 持续按住清除键()以删除整个号码。
3. 按发送键()呼叫该号码。
4. 要结束呼叫，按结束键()或右软键。也可以通过关闭翻盖来结束呼叫。

#### 使用发送键拨打电话

1. 在待机模式中，按发送键()，将显示最后的已接来电、拨出电话和未接来电号码。
2. 使用向上/向下导航键选择所需的号码。
3. 按。

#### 拨打国际电话

1. 持续按住键以输入国际前缀。+字符自动选择国际接入码。
2. 输入国家代码、地区代码和电话号码。
3. 按。

#### 结束呼叫


当完成呼叫后，按结束()键。



## 从电话本中拨打电话

您可以将常用的联系人姓名和电话号码保存在SIM卡和(或)手机内存中,这就是电话本功能。通过在电话本中查找所需的姓名,即可拨打相应电话号码。有关电话本功能的详细信息,请参阅第53-57页。

## 调节音量

如果需要在呼叫期间调节听筒音量,请使用侧键()。按上面的侧键以提高音量,按下面的侧键以降低音量。备注在待机模式中翻盖打开时,通过按侧键可以调节按键音音量。



### 备注

- 在待机模式中翻盖打开时,通过按侧键可以调节按键音音量。


## 应答电话

当接收到电话时,手机响铃并且外部LED指示灯闪烁。如果可以识别致电者,则会显示该致电者的电话号码(或保存在电话本中的姓名)。此款手机支持“来电者照片显示”功能。

1. 要应答来电,请打开翻盖。(当已将翻盖接听设置为接听模式时。请参阅第97页[菜单9-2-2]。)



### 备注

- 备注如果已将“任意键接听”设置为接听模式(请参阅第97页),则按除或右软键以外的任何按键可应答电话。



## 常规功能


- ▶ 要拒接来电，请在不打开翻盖的状态下按住手机左侧的侧键之一。
- ▶ 当使用电话本或其它菜单功能时，也可以应答电话。

2. 要结束呼叫，关闭翻盖或按 。

### 静音速拨模式(快速)

开机后，按住左导航键 ，可以激活静音速拨模式。

### 信号强度

您可以通过手机LCD屏幕上的信号指示符( ) 检查信号强度。信号强度会有所差别，尤其是在建筑物内。移到窗口附近可以改进接收质量。

### 输入文本

您可以使用手机键盘输入字母数字字符。例如，在电话本中存储姓名、写短信、创建个人问候语或者在日历中安排事件等，都需要输入文本。

本款手机提供以下文本输入方法。

#### T9模式

 
此模式允许以每个字母只需一次击键的方式输入单词。键盘上的每个按键对应于多个字母。T9模式自动将所击按键与内部词典进行比较，然后确定正确的单词，因此所需的击键次数比传统的ABC模式要少。有时这也称为预测性文本。

#### ABC模式

在此模式中，输入字母时，按标示为所需字母的按键一次、两次、三次或更多，直到显示该字母。




## 123模式（数字模式）

以每个数字一次击键的方式输入数字。要在文本输入区域中更改为123模式，按  键直到显示123模式。

## 更改文本输入模式

 



文本输入模式

1. 当处于允许输入字符的区域中时，在LCD屏幕的右下角可以看到文本输入模式指示符。
2. 通过按  更改文本输入模式。在LCD屏幕的右下角，可以查看文本输入模式。

## ► 使用T9模式

T9预测性文本输入模式允许您以最少的按键次数输入单词。当您按每个按键时，手机开始显示它根据内置词典认为正确的字符。您还可以在词典中添加新单词。当添加新单词时，手机将从词典中选择可能性最大的单词。

1. 当处于T9预测性文本输入模式时，通过按  到  键开始输入单词。每个字母按次键。
  - 在输入字母时，单词不断更改。请忽略屏幕上显示的单词，直至整个单词输入完毕。
  - 如果在完成输入之后单词仍不正确，按向下导航键一次或多次以循环选择其它单词。





## 常规功能



### 例

- 按 输入Good。
- 按 [向下导航键]输入Home。

- 如果供选单词列表中没有所需的单词，请使用ABC模式添加该单词。
  - 您可以选择T9模式的语言。按左软键[选项]，然后选择T9语言输入法选择T9模式的所需语言。手机的默认设置为“T9开启”模式。
2. 输入整个单词之后再对输入的内容进行编辑或删除。
  3. 按 键以空格结束每个单词。要删除字母。
    - ▶ 按 。按住 删除整个单词。



### 备注

- 要从文本输入模式中退出而不保存输入内容，按 。手机返回待机模式。

## ▶ 中文输入法

1. **ST(笔划)**：如何使用笔划来选择中文字符。在您依次输入中文笔划时，屏幕上将显示相关的中文字符。使用 键来查看符合条件的其它字符，按 钮选定字符。同样，使用 、 和 键可以查看更多类型的字符。  
例如) 要输入“你好”请依次按数字 、、，随后，您便可以看到第一个字符，现在“你”。请按 ，然后再按 按钮选定“好”。



按键	笔划	按键	笔划
	一		→
			? (通配符号)
	/		选择键
	\		

### 〈汉字笔划表〉

**2. PY(拼音):** “拼音”输入是通过中文字的英语发音来查找中文字符。

**拼音:** 当输入发音的第一个字母时，您便可以直接查找字符。

按键	英文字母	按键	英文字母
			MNO
	ABC		PQRS
	DEF		TUV
	GHI		WXYZ
	JKL		选择键

### 〈汉语拼音表〉

#### ► 使用ABC模式

使用 至 键输入文本。

1. 按标示为所需字母的按键:

- 按一次输入第一个字母
- 按两次输入第二个字母
- 依此类推

2. 要插入空格，按 键一次。要删除字母，按 键。按住 键以清除显示的所有内容。



## 常规功能



### 备注

- 有关可使用字母数字键输入的字符，请参阅下表了解更多信息。

按 键	按顺序显示的字符	
	大 写	小 写
1	., - ? ! ' @ : 1	., - ? ! ' @ : 1
2	<b>A B C 2</b>	<b>a b c 2</b>
3	<b>D E F 3</b>	<b>d e f 3</b>
4	<b>G H I 4</b>	<b>g h i</b>
5	<b>J K L 5</b>	<b>j k l 5</b>
6	<b>M N O 6</b>	<b>m n o 6</b>
7	<b>P Q R S 7</b>	<b>p q r s 7</b>
8	<b>T U V 8</b>	<b>t u v 8</b>
9	<b>W X Y Z 9</b>	<b>w x y z 9</b>
0	空格键, 0	空格键, 0

### ► 使用123(数字)模式

使用123模式，您可以在文本信息中输入数字(例如电话号码)。按与所需数字对应的按键，然后手动切换回适当的文本输入模式。



## 电话本

您可以将电话号码及其对应的姓名存储在SIM卡的内存中。此外，您还可以在手机内存中存储最多255个号码和姓名。

电话本菜单中以同样方式使用SIM卡和手机内存两者。(有关详细信息，请参阅第53-57页。)

## 呼叫中菜单

您的手机提供许多可以在呼叫期间使用的控制功能。要在呼叫期间访问 这些功能，按左软键[选项]。

## 呼叫期间

在手机屏幕上，在呼叫期间显示的菜单与在待机模式中显示的默认主菜单不同，下面对这些选项进行说明。


## 拨打第二个电话

您可以从电话本中查到号码以拨打第二个电话。按右软键，然后选择**查找**。要在呼叫期间将所拨的号码保存到电话本中，请按右软键，然后选择**新增**。

## 在两个呼叫之间切换


要在两个呼叫之间切换，按左软键，然后选择**切换通话**。

## 应答来电



要在手机响铃时应答来电，只需按  键。当您已处于呼叫中时，手机还能够提示您有新来电。听筒中发出提示音，显示屏上将显示第二个呼叫正在等待。此功能称为**呼叫等待**，仅当网络支持此功能时才可使用。有关如何激活和停用此功能的详细信息，请参阅第97页的**呼叫等待**[菜单9-2-4]。



## 常规功能

如果激活了呼叫等待功能，您可以按  或选择左软键，从而保持第一个呼叫并应答第二个呼叫。

### 拒接来电

只需按  键，您可以拒接来电而不作应答。在呼叫期间，您可以通过按左软键或通过按 ，拒绝接听来电。

### 使麦克风静音

在呼叫期间，您可以通过按 [菜单] 键，然后选择静音，使麦克风静音。通过选择关闭静音，可以解除手机的静音。当手机静音时，致电者不能听到您的声音，但您仍可以听到他们的声音。

### 在呼叫期间打开双音多频音调


要在呼叫期间打开双音多频音调，按左软键，然后选择开启双音多频。可以使用同样方式关闭双音多频音调。双音多频音调允许您的手机使用自动电话交换台。

### 多方通话

通过多方通话服务，您能够与多个致电者同时通话(如果您的网络运营商支持此功能)。仅当您具有一个活动的呼叫及一个保持的呼叫时(已应答这两个呼叫)，才可以建立多方通话。一旦建立多方通话，则建立多方呼叫的用户可以添加、断开或分离(即从多方通话中撤出，但仍与您相连接)呼叫。所有这些选项均在“通话中”菜单中提供。在多方通话中最多可以与五位致电者通话。开始之后，您即可以控制多方通话，并且只有您能将致电者加入多方通话。



## 拨打第二个电话

当目前已处于呼叫中时，您可以拨打第二个电话。输入第二个号码并按  键。当连接第二个呼叫之后，第一个呼叫自动置于保持状态。您可以通过按左软键，然后选择**切换通话**，在两个呼叫之间切换。

## 建立多方通话

保持一个呼叫，并在一个呼叫处于活动状态时，按左软键，然后选择**多方通话/加入**。

## 保持多方通话

按左软键，然后选择**保持通话**。

## 激活保持的各方通话

按左软键，然后选择**继续通话**。

## 向多方通话加入呼叫

要将呼叫加入现有的多方通话，按左软键，然后选择**多方通话/加入**。

## 在多方通话期间拨打私人电话

要与多方通话中的某个致电者进行私人通话，在屏幕上显示该致电者的号码，然后按左软键。选择**多方通话/私人**将所有致电者置于保持状态。

## 结束多方通话

要结束多方通话，请按此键 。您也可以通过在按左软键后选择**结束通话**来结束多方通话。



## 菜单树



### 1 情景模式

- 1 振动
- 2 静音
- 3 私人
- 4 大声
- 5 耳机
- 6 汽车



### 3 工具

- 1 我的素材
- 2 收藏
- 3 单位转换器
- 4 计算器
- 5 时区设置
- 6 语音备忘录
- 7 激活红外



### 2 通话记录

- 1 未接来电
- 2 已接来电
- 3 拨出电话
- 4 删除最近呼叫
- 5 通话计时
- 6 通话计费
- 7 话费设定
- 8 GPRS信息



### 4 管理器

- 1 电话簿
- 2 闹钟
- 3 日程表
- 4 备忘录



## 5 信息

- 1 文本信息
- 2 多媒体信息
- 3 语音邮件
- 4 小区广播
- 5 模板
- 6 名片
- 7 内存状态



## 6 相机

- 1 拍照
- 2 摄像
- 3 镜框拍摄
- 4 我的相册
- 5 我的电影
- 6 设定
- 7 内存状态



## 7 多媒体

- 1 MP3播放器
- 2 游戏
- 3 Java



## 8 服务

- 1 互联网
- 2 移动梦网  
SIM服务该功能视SIM卡  
和网络服务而定。



## 9 设置

- 1 日期和时间
- 2 通话设定
- 3 手机设定
- 4 保密设定
- 5 网络设定
- 6 GPRS设置
- 7 恢复初始设定

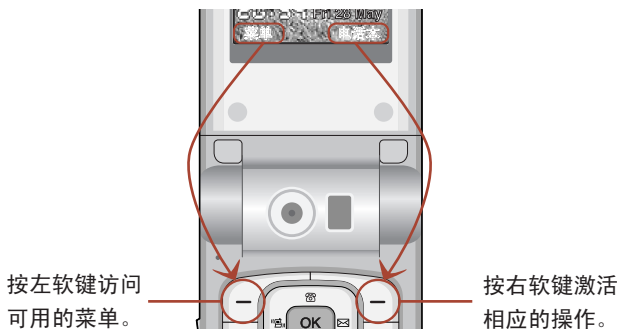 




## 选择功能和选项

本款手机提供一系列可供您自定义手机的功能。这些功能位于菜单和子菜单中，可以通过标记为 $[-]$ 和 $[-]$ 的两个软键来访问。

每个菜单和子菜单允许您查看和更改特定功能的设置。根据当前的操作环境，软键发挥的作用也不同。每个按键上方、屏幕底部一行的文字指示其当前的作用。





在“情景模式”中，您可以调节和自定义手机铃声，用于不同的事件、环境或群组。

有六种预设的情景模式：振动、静音、私人、大声、耳机和汽车。每种情景模式均可以加以个人化。

按“功能表”键( $\square$ ), 然后使用导航键选择情景模式。

### 更改情景模式[菜单1-X-1]

1. 屏幕上显示情景模式的列表。
2. 在情景模式列表中，滚动到要启动的情景模式，然后按左软键或“确定”键。
3. 然后，选择启动。



#### 备注

- 手机连接了耳机或免提套件时，将相应启动“耳机”情景模式或“汽车”情景模式。

### 自定义情景模式-更改[菜单1-X-1]/[菜单1-X-2]

您可以自定义除振动和静音以外的情景模式。在情景模式列表中，滚动到所需的情景模式。在按“OK”键或左软键后，选择个性化铃声。情景模式设置选项打开。按需要设置该选项。

- **来电提示：**设置来电提示类型。
- **铃声类型：**从列表中选择所需的铃声类型。使用向上/向下导航键 在列表中滚动。您可以在作出选择前听到所需的铃声。
- **铃声音量：**使用向上/向下导航键设置铃声的音量。
- **信息提示类型：**设置信息的提示类型。



## 情景模式[菜单1]

- **信息提示音**：选择信息的提示音。
- **按键音**：设置按键音的类型。
- **按键音量**：设置按键音的音量。
- **确认音音量**：设置确认音的音量。
- **开/关机音量**：设置开机/关机时的铃声音量。
- **自动应答**：(仅在耳机和汽车情景模式中) 您可以激活自动应答功能。在开启自动应答之前选择时间。
- **响铃设置**(仅在“私人”、“大声”、“耳机”和“汽车”情景模式时有效)：如果将此设为“开启”，在您有来电时，铃音将逐渐从第1级增大到您设定的级别。

### 自定义情景模式 - 提示对象[菜单1-1-2]/[菜单1-2-2]

您可以将手机设定为即使启动了“振动”情景模式或“静音”情景模式也提示群组中的来电。

1. 通过按左软键[开启]选择要提示的来电群组。
2. 按右软键[保存]可以保存设置。

### 自定义情景模式-重命名[菜单1-3-3]/[菜单1-4-3]

您可以将情景模式重命名为所要的任何名称。

可以重命名“私人”和“大声”情景模式。

1. 要更改情景模式的名称，在情景模式列表中滚动到该情景模式，在按“确定”键或左软键之后，选择**重命名**。
2. 键入所需的名称，然后按“确定”键或左软键[保存]。

## 通话记录[菜单2]



(视网络服务而定)

仅当网络支持服务区内的主叫线路识别(CLI)时，您才能检查未接来电、已接来电和拨出电话。

屏幕上显示电话号码和姓名(如果有)以及通话日期和时间。您还可以查看通话计时和计费。

按“功能表”键( $\square$ ), 然后使用导航键选择**通话记录**。

### 未接来电[菜单2-1]

此选项允许您查看最后10个未应答的来电。选择一个电话号码后，按发送键( $\square$ )可拨打该号码。按左软键[选项]，则以下选项可供使用。

- **写文本信息**：您可以发送文本信息到此号码。
- **写彩信**：您可以发送多媒体信息到此号码。
- **修改**：修改电话本条目。
- **保存(姓名未保存在电话本中时显示)**：通过在电话本中建立新的联系人保存号码。
- **添加至姓名(如果姓名未保存在电话本中时显示)**：可以将号码添加至现有的电话本条目。
- **删除**：从列表中删除该呼叫。
- **查看详情**：显示呼叫信息。



#### 备注


- 使用**删除最近呼叫**菜单[菜单2-4]，您可以从列表中删除所有通话记录。



## 通话记录[菜单2]

(视网络服务而定)

### 已接来电[菜单2-2]

此选项允许您查看最后10个来电。选择一个电话号码后，按发送键()可拨打该号码。在按左软键[选项]之后，您还可以：


- **写文本信息：**您可以发送文本信息到此号码。
- **写彩信：**您可以发送多媒体信息到此号码。
- **修改：**修改电话本条目。
- **保存(姓名未保存在电话本中时显示)：**通过在电话本中建立新的联系人保存号码。
- **添加至姓名(如果姓名未保存在电话本中时显示)：**可以将号码添加至现有的电话本条目。
- **删除：**从列表中删除该呼叫。
- **查看详情：**显示呼叫信息。



#### 备注

- 使用删除最近呼叫菜单[菜单2-4]，您可以从列表中删除所有通话记录。

### 拨出电话[菜单2-3]

此选项允许您查看最后10个去电(拨出或尝试)。选择电话号码后，则可以按下发送键()呼叫该号码。在按左软键[选项]之后，您还可以：

- **写文本信息：**您可以发送文本信息到此号码。
- **写彩信：**您可以发送多媒体信息到此号码。
- **修改：**修改电话本条目。
- **保存(姓名未保存在电话本中时显示)：**通过在电话本中建立新的联系人保存号码。



- **添加至姓名(如果姓名未保存在电话本中时显示)**: 可以将号码添加至现有的电话本条目。
- **添加至姓名(如果姓名未保存在电话本中时显示)**: 可以将号码添加至现有的电话本条目。
- **删除**: 从列表中删除该呼叫。
- **查看详情**: 显示呼叫信息。



#### 备注

- 使用删除最近呼叫菜单[菜单2-4]，您可以从列表中删除所有通话记录。

## 删除最近呼叫[菜单2-4]

使用此功能删除未接来电列表、已接来电列表或拨出电话列表。您也可以选择全部通话一次性删除所有通话列表。

## 通话计时[菜单2-5]

使用此功能查看来电和去电的持续时间。使用向上/向下导航键，您可以在屏幕底部查看每次通话的持续时间。按“确定”键或左软键[重设]可重设所选通话的计时器。为防止意外情况，您必须输入安全密码才能重设计时器。



- **最后通话**: 最后一次通话的时间长度
- **已接来电**: 来电的时间长度
- **拨出电话**: 去电的时间长度
- **全部通话**: 上次计时器重设之后，所有来电和去电的总时间长度。



## 通话记录[菜单2]

(视网络服务而定)



### 注意

- 服务提供商在发票上列出的实际时间可能与此不同，这取决于网络功能、计费的舍入方式等等。

## 通话计费[菜单2-6]

此网络服务允许您检查最后一次通话的费用和总通话费用。通话费用显示在LCD屏幕的底部。要重设通话费用，按左软键[重设]或“确定”键。您必须输入PIN2码。



### 注意

- 服务提供商在发票上列出的实际话费可能与此不同，这取决于网络功能、计费的舍入方式、税款等等。

## 话费设定[菜单2-7]

- **通话费用限制：**此网络服务允许您将通话费用限制为一定数目的收费单位或货币单位。您在拨打或接听电话时，不得超过指定的通话费用限制。在输入PIN2码之后，您可以更改通话费用限制。
- **设定费率：**您可以设置货币类型和单价。与您的服务提供商联系以了解收费单价。要在此菜单中选择货币或单价，您必须输入PIN2码。



### 备注

- 当达到话费限制时，则除紧急电话以外，您不能拨打任何电话。视SIM卡而定，您可能需要PUK2码来设置通话费用限制。



- **自动显示：**此网络服务允许您自动查看最后一次通话的费用。如果您在**自动显示**菜单中选择**开**，当结束最后一个通话后即可查看其费用。

## **GPRS信息[菜单2-8]**

您可以通过GPRS信息选项查看在网络上传输的数据量。此外，您也可以查看自己的在线时间。（GPRS的全称是“通用分组无线电业务”。）

### **WAP信息[菜单2-8-1]**

您可以查看使用WAP的数据量和所费时间。在所选的菜单中，按左软键[重设]或“确定”键清除计数器。

### **外部设备[菜单2-8-2]**

您可以查看通过诸如串行端口之类的外部设备使用GPRS的数据量和所费时间。

### **全部数据[菜单2-8-3]**

您可以查看通过WAP和外部设备的总数据量。





## 工具[菜单3]

按“功能表”键( $\square$ ), 然后使用导航键选择工具。

### **我的素材[菜单3-1]**

我的素材分为3个文件夹：图片库、动画和歌曲。通过WAP、彩信或EMS下载的内容存储在各个文件夹中。您可以查看、删除或控制已下载的内容。

#### **图片库[菜单3-1-1]**

使用左软键[选项], 可以通过短信或彩信发送图片, 将图片设为墙纸, 重命名或删除图片。

#### **动画[菜单3-1-2]**

使用左软键[选项], 可以通过彩信发送动画, 将动画设为墙纸, 重命名或删除动画。

#### **歌曲[菜单3-1-3]**

使用左软键[选项], 可以通过短信或彩信发送声音, 将声音设为铃声, 重命名或删除声音。

### **收藏[菜单3-2]**

在此菜单中, 您可以构建常用的菜单以便使用。

在待机模式下, 按( $\square$ )可访问“收藏”菜单。

1. 选择希望的位置(菜单数字1至9)后, 按左软键[添加]。
2. 按左软键[选择]选择要添加的菜单。菜单被添加到“收藏夹”菜单中, 并显示弹出信息“启动”。



### 备注

- 最多可以添加9个菜单。

定制“收藏夹”菜单后，在各个收藏菜单中，按左软键[选项]可使用以下选项。

- **选择：** 选择菜单。
- **更改：** 用其它菜单更改收藏菜单。
- **删除：** 删除选定的收藏菜单。
- **全部删除：** 删除所有收藏菜单。
- **查看详情：** 显示进入收藏菜单的路径。


### 单位转换器[菜单3-3]

此功能可将任何度量值从一种单位转换为另一种单位。可供进行转换的单位类型有4种：长度、面积、重量、体积。

1. 按左软键[单位]选择四种单位类型之一。
2. 按向下导航键移到“当前值”单位部分。
3. 使用向左/向右导航键选择要转换的单位。
4. 按向下导航键移到“转换值”单位部分。
5. 使用向左/向右导航键选择要转换到的目标单位。
6. 使用数字键输入数字。手机自动进行转换计算。



### 备注

- 您可以按  键输入小数点。



## 工具[菜单3]

### 计算器[菜单3-4]

使用此功能,您可以将手机作为计算器使用。计算器提供基本的数学运算功能:加、减、乘、除。

#### 使用计算器

1. 使用数字键输入第一个数字。
2. 按相应导航键选择数学运算功能。



#### 备注

- 要删除任何错误的输入并清空显示屏,按 **C** 键。
- 要输入小数点,按 **\*/.** 键。
- 要输入负号,按 **+/±** 键。

3. 要计算结果,按左软键[结果]或“确定”键。
4. 计算之后,按左软键[清除]返回初始状态。

### 时区设置[菜单3-5]

使用向左/向右导航键,您可以查看格林威治标准时间(GMT)和世界各地52个主要城市的时间。屏幕上显示城市名、当前日期和时间。

要选择您所位于的时区,请按以下步骤操作:

1. 按向左/向右导航键一次或多次,选择与您的时区对应的城市。屏幕上显示当地日期和时间。
2. 如果您想在待机模式中更改时间显示以反映正确的时间,按左软键[设定]。



### 备注

- 在“时区设置”菜单中每个城市的时区设置可能受网络条件的影响。

## 语音备忘录[菜单3-6]

您可以录制语音备忘录。最多可以录制3条语音备忘录，每条最长30秒。

使用左软键[选项]键，您可以播放或删除所录制的备忘录，或者录制新的语音备忘录。

### 新记录[菜单3-6-1]

1. 要录制语音备忘录，请选择“新记录”。
2. 一旦开始录音，屏幕上显示“录音中……”字样以及录音时间。
3. 完成录音之后，按左软键[保存]。



### 备注

- 如果所有备忘录位置均已满，您必须删除旧的备忘录之后才能录制新备忘录。

## 浏览列表[菜单3-6-2]

手机从最近的备忘录开始显示语音备忘录列表。您可以按左软键[选项]播放或删除所录制的备忘录。您也可以删除所有备忘录。



## 工具[菜单3]

### 激活红外[菜单3-7]

此功能允许您通过红外线端口发送或接收数据/传真。要使用红外线连接：

- 安装用于接收或发送数据/传真的调制解调器驱动程序。
- 安装您的网络提供商提供的网络拨号软件，或者安装传真应用程序以便与PC间进行传真呼叫。
- 配置并激活PC上的IrDA兼容红外线端口。
- 激活手机上的红外线功能：☰符号出现在显示屏底部右侧。
- 呼叫服务提供商所给的网络服务号码。

如果在激活该功能30秒内手机和IrDA兼容设备之间仍无信号，则该功能被自动停用。

有关详细信息，请联系您的网络提供商。



#### 备注

- PC Sync程序允许在PC和手机之间通过数据电缆交换数据。因此，如果想要使用此功能，您需要该配件装置。有关详细信息，您可以参考光盘上的PC Sync帮助文件。



按“功能表”键( $\square$ )。使用导航键选择管理器。

### 电话簿[菜单4-1]

您可以将电话号码及对应的姓名保存在SIM卡的内存中。此外，最多可以在手机内存中保存255个号码和姓名。

在待机模式中按左软键[功能表]，选择管理器→电话簿。

或者，在待机模式中按右软键[电话本]。

### 查找[菜单4-1-1]

1. 在待机模式中，按右软键[电话本]。选择查找。
2. 输入所需查找的姓名的开始部分，然后按左软键[查找]。
3. 找到所需的姓名之后，您可以按[发送]键拨打该号码。或者按左软键[选项]以使用以下选项。
  - **写文本信息**：使用此功能向该联系人写文本信息。
  - **写彩信**：使用此功能向该联系人写彩信。
  - **照片视图**：显示存储在电话本中的所有图片。您可以按照片查找电话本。
  - **语音**：录制所选电话本条目的姓名以便用于语音激活拨号。
  - **修改**：编辑姓名、号码、群组和照片。
  - **复制**：使用此功能将电话本条目从SIM复制到手机内存或从手机内存复制到SIM。选择是否保留原来的电话号码。
  - **删除**：删除电话本条目。
  - **查看详情**：查看所需姓名的详细信息。



## 管理器[菜单4]

### 新增[菜单4-1-2]

您可以使用此功能添加电话本条目。

共有两个内存：手机内存和SIM内存。要选择内存，请转到**保存至** [菜单4-1-8]。手机内存容量为255个条目。在手机内存中，您可以为每个姓名最多输入20个字符。SIM卡内存容量视SIM卡自身而定。

1. 在待机模式中，通过按右软键[电话本]，首先打开**电话本**。
2. 滚动以突出显示**新增**，然后按[确定]。
3. 您可以将电话本条目添加到SIM内存或手机内存中。要选择内存，请转到**保存至** [菜单4-1-8]。（请第参阅第57页。）
  - **将新条目添加到SIM内存中**  
您可以输入姓名和号码，选择群组，附加照片。（视SIM卡而定）
  - **将新条目添加到手机内存中**  
您可以输入姓名、号码、电子邮件地址和备忘录，选择群组，附加照片。

### 提示

- **暂停功能**：当呼叫自动化系统（例如语音邮件或信用记帐号码）时，您经常需要输入一系列的号码。您可以用暂停功能将号码储存在电话本中，而无需手动输入这些号码。通过按住 **[#, \*]**，在号码之间插入一个中止符。



### 备注

- 此款手机支持“来电者照片显示”功能。

## 快速拨号[菜单4-1-3]

您可以为联系人姓名分配从 **2 abc** 到 **9 wxyz** 的任意按键。直接按此键 2-3秒即可拨打相应号码。

1. 在待机模式中，通过按右软键[电话本]，首先打开**电话本**。
2. 滚动到**快速拨号**，然后按[确定]。
3. 要将号码添加到**快速拨号**，按左软键[添加]。在整个电话本中搜索姓名。
4. 通过按左软键[选择]，您可以更改或删除快速拨号号码、拨打电话或发送信息。

## 语音[菜单4-1-4]

您可以查看所有分配了语音激活拨号方式的电话号码。也可以按[发送]键直接拨打该号码。在使用向上/向下导航键选择电话号码之后，按左软键[选项]。可以看到以下子菜单。

- **新增**：添加新的电话号码用于语音激活拨号。
- **播放**：播放分配给该电话号码的语音标签。
- **更改**：更改分配给该电话号码的语音标签。
- **删除**：删除分配给该电话号码的语音标签。
- **全部删除**：删除所有语音激活拨号号码。





## 管理器[菜单4]



### 备注

- 您最多可以输入10个电话号码用于语音拨号。

### 群组[菜单4-1-5]

共有6个预定义的群组以及一个名为其它的附加群组，您可以在这些群组中创建列表。

1. 选择群组。将显示每个群组列表：**家人、重要人士、朋友、同事、组1、组2和其他。**
2. 按左软键[选项]，选择要管理的群组名称。除对于其他外，将显示以下子菜单。
  - **添加成员：**向群组添加成员。
  - **成员列表：**显示群组中成员的列表。
  - **群组来电铃声：**使用此功能选择当接收到来自群组中某个联系人的语音呼叫时使用的铃声类型。
  - **群组标志：**使用此功能选择当接收到来自群组中某个联系人的电话时显示的图标。
  - **重命名：**为群组分配新的名称。
  - **删除成员：**从群组删除成员。

### 全部复制[菜单4-1-6]

您可以在SIM卡内存和手机内存之间复制/移动条目。


- **SIM卡转到手机：**使用此功能将条目从SIM卡复制到手机内存。
- **手机转到SIM卡：**使用此功能将条目从手机内存复制到SIM卡。



可以使用以下选项。

- **保留原号码：**复制时保留原来的拨号号码。
- **删除原号码：**复制时删除原来的拨号号码。

### **全部删除[菜单4-1-7]**

您可以删除SIM、手机和语音列表中的所有条目。除语音以外，此功能要求安全密码。按返回待机模式。

### **保存至[菜单4-1-8]**

可以在SIM和手机之间选择用于电话本功能的内存。如果您选择自选，当添加条目时，手机将询问将号码保存到何处。

### **信息提示[菜单4-1-9]**

- **内存状态：**您可以检查SIM卡和手机内存的当前内存状态。
- **本手机号码视SIM而定：**使用此功能显示SIM卡中的电话号码。



## 管理器[菜单4]

### 闹钟[菜单4-2]

您可以将闹钟设为在指定的时间停止响铃。

1. **闹钟开/关**: 使用向左/向右导航键选择开。要停用闹钟功能, 选择关。
2. **闹钟时间**: 使用数字键输入闹钟时间。
3. **重复**: 使用向左/ 向右导航键, 根据需要选择一次、每天、每周和每月。
4. **闹钟音调**: 使用向左/向右导航键选择所需的音调。
5. 按左软键[设定]或“确定”键。

如果闹钟功能已启用, 待机模式中将显示 。当到达闹钟时间时, 手机将发出闹钟音调。

▶ 要关闭闹钟, 按右软键[退出]。

### 日程表[菜单4-3]

当进入此菜单时, 屏幕上出现日历。当前日期上有一方形光标。您可以使用导航键将光标移到另一日期。在日程表上, 您可以使用以下按键。

每按一下

后退一年。

前进一年。

或 后退一个月。

或 前进一个月。

要返回当前日期, 按 。



输入选定日期的日程表备注，


1. 按左软键[选择]并选择**新增**。
2. 输入备注。设置闹钟时间。
3. 根据需要在重复选项中进行选择。
4. 选择闹钟时间。



### 备注

- 即使手机已关机，日程表闹钟也将工作。

5. 按左软键[保存]或“确定”键。

在输入某个日期的日程表之后，该日期会以不同颜色显示并且有标志符()出现在显示屏右下侧。

此功能为您提醒日程安排。如果设置的话，手机将发出闹钟铃声。可以使用以下选项。

**新增：**您可以编辑最多30条备注，每条备注最多40个字符。

**查看日期：**使用此功能转到特定日期。使用数字键和向左/向右导航键输入日期。

**查看全部：**显示为所有日期设置的备注。使用向上/向下导航键浏览整个备注列表。

**日历：**返回日历。

**修改：**使用此功能编辑日程表。

**日程表铃声：**当到达有活动的日期和时间时，手机发出闹钟铃声。选择所需的闹钟铃声。

**删除：**使用此功能删除日程表。



## 管理器[菜单4]

**删除已过日程：**您可以删除已发出通知的过期日程表备注。

**全部删除：**使用此功能删除所有日程表。您需要确认此操作。

### 备忘录[菜单4-4]

#### 新增[菜单4-4-1]

使用此功能添加新备忘录。本款手机最多可以存储20条备忘录，每条备忘录最多可以有60个字符。输入备忘录内容，然后按左软键[选项]。

- **保存：**存备忘录。
- **T9语言输入法：**选择在备忘录中使用的T9语言。
- **退出编辑器：**从备忘录编辑器中退出。

#### 浏览列表[菜单4-4-2]

选择此菜单以检查保存的备忘录。

1. 选择备忘录。
2. 按左软键[选择]。



#### 备注

- 选定的备忘录打开。使用向下/向下导航键，您可以直接查看其它备忘录而无需回到备忘录列表。

3. 按左软键[选项]。可以使用以下选项。
  - **修改：**编辑所选的备忘录。
  - **删除：**删除所选的备忘录。
  - **全部删除：**删除所有备忘录。您需要确认此操作。





按“功能表”键( $\square$ ), 然后使用导航键选择信息。

### 文本信息[菜单5-1]

此款手机可接收语音邮件通知信息和短信服务(SMS)信息。

语音邮件和短信属于网络服务。请联系您的网络运营商以了解更多信息。

当  图标出现时, 说明接收到语音邮件。

当  图标出现时, 说明接收到新的文本信息。如果信息内存已满, 则会出现一则消息,  图标闪烁并且您无法接收任何新信息。使用收信箱菜单中的删除选项以删除无用的信息。

一旦信息内存中有空间, 则将收到任何未送达的SMS短信(假如有足够的空间)。

### 写短信[菜单5-1-1]

您可以撰写和编辑最多6页的文本信息。(大约918个字符)。

1. 键入您的信息。有关如何输入文本的详细信息, 请第参阅第30到34页(输入文本)。
2. 完成信息输入之后, 按左软键[选项]选择所需的选项。  
可以使用以下选项。
  - **发送:** 输入号码、从电话本中选择号码或选择最近的号码。您可以一次将一条短信最多发送给5个电话号码。
  - **保存到草稿箱:** 允许您保存信息以便以后发送。
  - **T9语言输入法:** 选择T9输入模式的语言。有关T9模式的详细信息, 请参阅第30到34页。
  - **清除文本:** 删除整个文本。
  - **退出编辑器:** 从写短信写短信菜单中退出。




## 信息[菜单5]

3. 当输入信息时，您也可以按右软键[附加]随短信发送附件。

- **符号：**您可以附加特殊字符。



### 备注

- 在键入信息的同时，还可以按()插入特殊字符。


- **图释：**可以输入手机中预设的各种图释。
- **图片：**您可以发送和接收包含图片的文本信息，称为“图片短信”。手机中提供几个预设的图片，您可以用来自其它来源的新图片代替这些图片。
- **动画：**通过EMS(增强短信服务)可以实现在短信中附加动画。您可以从手机中提供的15幅动画中选择。
- **声音：**如果有声音，可以在短信中附加声音。
- **常用短语：**可以使用手机中已设置的常用短语。
- **电话本：**可以在短信中添加电话号码。
- **名片：**可以附加自己的名片。

### 收信箱[菜单5-1-2]

可以搜索收到的文本信息和传呼信息，并可查看其内容。

收到的短信按时间顺序显示。

按“功能表”键，然后选择信息→文本信息→收信箱。

或者，可以在待机模式中按向右导航键()快速进行选择。



图标	说明
	已读SIM短信
	未读SIM短信
	已读短信
	未读短信
	已读状态报告
	未读状态报告



#### 备注

- SIM短信是指保存在SIM内存中的短信。网络将识别收到的短信是SIM短信或普通短信。

每条收到的短信具有以下选项。

按左软键[选项]。

- **回复短信：**回复所收到的短信。
- **转发：**将收到的短信转发给其它接收人。
- **回复电话：**拨打发送人的电话。
- **保存信息资料：**从短信中提取图片、声音、文本web页面或电子邮件地址。这些内容将被保存到“我的文件夹”、“电话本”或书签中。
- **删除：**从收信箱中删除所选短信。






## 信息[菜单5]

### 发信箱[菜单5-1-3]

在此菜单中，您可以浏览已发送短信的列表和内容，还可以确认发送是否成功。

图标	说明
	已发送SIM短信
	已发送短信

可以使用以下选项。

- **转发：**将当前短信转发给其它接收人。
- **删除：**从发信箱中删除所选短信。

### 草稿箱[菜单5-1-4]

在此菜单中，您可以查看保存为草稿的短信列表。使用向上/向下导航键在列表中滚动。按左软键[选项]可发送信息草稿。

### 设定[菜单5-1-5]

此菜单允许您设置默认的SMS信息。

- **信息类型：**设置默认的信息类型(文本、语音、传真、传呼、X.400、电子邮件和ERMES)。网络可以将信息转换为所选格式。
- **信息有效期：**设置当尝试向接收人发送文本信息时将文本信息保存在SMS中心的时间。可能的值有30分钟、1小时、6小时、1天、1星期及由网络运营商批准的最长时间。
- **信纸：**可以在文本信息中插入4幅信纸图像。
- **状态报告：**激活或停用报告功能。当激活此功能时，网络通知您短信是否已成功发送。




- **回复付费：**允许SMS短信的接收人通过您的信息中心向您发送回复(如果网络提供此服务)。
- **信息中心号码：**当发送文本信息时，保存或更改SMS中心的号码。您必须从服务提供商处获得此号码。
- **载体设定：**选择GPRS或GSM。有关设置所选载体、定价和连接速度的信息，请与您的网络运营商或服务提供商联系。

## **多媒体信息[菜单5-2]**

多媒体信息可以包含文本、图像和(或)声音剪辑。仅当您的网络运营商或服务提供商支持此功能时，才能使用多媒体信息。只有提供多媒体信息或电子邮件功能的设备可以收发多媒体信息。

### **写多媒体信息[菜单5-2-1]**

1. 输入文本信息。使用右软键，您可以通过T9输入模式输入符号、数字和图释。输入文本信息之后，按左软键[完成]。
2. 添加图像和(或)声音。可以使用向上/向下导航键移到下一部分。
3. 通过将光标移到  上，然后按“确定”键或左软键[选择]，可以添加幻灯片。也可以使用右软键[功能表]添加幻灯片。



#### **备注**

- 最多可以使用9幅幻灯片。



## 信息[菜单5]

4. 按右软键[功能表]可以使用以下选项。

- **发送:** 选择此功能发送多媒体短信。本款手机支持多个号码和电子邮件地址。
- **预览:** 显示要发送的多媒体短信。
- **保存:** 可以将多媒体短信保存在草稿箱中或保存为模板。
- **删除:** 删除已创建的短信。
- **屏幕持续时间:** 设置幻灯片的持续时间。使用数字键盘输入所需的持续时间。
- **屏幕格式:** 选择在何处对齐图像。
- **添加屏幕:** 在当前幻灯片之前或之后添加幻灯片。
- **删除屏幕:** 删除选定的屏幕

### 收信箱[菜单5-2-2]

当收到短信时，您将会收到提示。这些短信保存在收信箱中。您可以通过图标识别每条短信。有关详细信息，请参阅以下图标说明。

图 标	说 明
	已读普通彩信
	未读普通彩信
	已读通知彩信
	未读通知彩信
	已读高优先级彩信
	未读高优先级彩信
	已读低优先级彩信
	未读低优先级彩信



如果手机上提示“无空间”，您可以通过删除信息、媒体和应用程序获得空间。

- **计时器停止：**通常，图片以自动幻灯片的形式显示。但是，如果选择此菜单，您可以通过手动按左软键[下一个]查看下一张图片。
- **计时器启动：**选择此项可自动再次启动幻灯片放映。
- **前一页：**显示上一页。
- **重新启动：**从第一张幻灯片开始重新启动幻灯片放映。
- **保存邮件：**将多媒体信息保存为草稿或模板。
- **保存内容：**提取图片或声音。这些内容将保存在“我的文件夹”或“电话本”中。
- **详情：**显示有关所收到的彩信的相关信息，包括发送人地址、主题（仅对于多媒体短信）、彩信的日期及时间、彩信类型、彩信大小。
- **答复：**回复发送人。
- **全部答复：**回复所有发送人。
- **删除邮件：**删除当前短信。
- **转发：**将所选短信转发给其它接收人。

### 发信箱[菜单5-2-3]

使用此功能查看已发送的彩信。对于每条已发送的彩信，您可以查看发送状态。

图 标	说 明
	已发送



## 信息[菜单5]

- **计时器停止**：通常，图片以自动幻灯片的形式显示。但是，如果选择此菜单，您可以通过手动按左软键[下一个]查看下一图片。
- **计时器启动**：选择此项可自动再次启动幻灯片放映。
- **前一页**：显示上一页。
- **重放**：从第一张幻灯片开始重新启动幻灯片放映。
- **保存邮件**：将多媒体信息保存为草稿或模板。
- **保存内容**：保存诸如图像、声音和短信附件之类的项目。
- **详情**：显示有关发信箱的信息，包括主题（仅对于多媒体短信）、短信的日期及时间、短信类型、短信大小。
- **删除邮件**：删除当前短信。
- **转发**：将当前短信转发给其它接收人。

### 草稿箱[菜单5-2-4]

使用此菜单，您可以预设最多五条常用的多媒体信息。此菜单显示预设的多媒体短信列表。

可以使用以下选项。

- **发送**：选择此功能发送多媒体短信。本款手机支持多个号码和电子邮件地址。
- **预览**：显示要发送的多媒体短信。
- **保存**：可以将多媒体短信保存在草稿箱中或保存为模板。
- **删除**：删除已创建的短信。
- **屏幕持续时间**：设置幻灯片的持续时间。使用数字键盘输入所需的持续时间。
- **屏幕格式**：选择在何处对齐图像。



- **添加屏幕：**在当前幻灯片之前或之后添加幻灯片。
- **删除屏幕：**删除选定的屏幕

### **设定[菜单5-2-5]**

通过此菜单，您可以设置默认的多媒体短信信息。可以使用以下选项。

- **信息标题：**输入短信的标题。
- **幻灯片持续时间：**设置每幅幻灯片的持续时间。
- **对齐：**设置短信的对齐方式。
- **有效期：**设置在网络服务器上保存短信的时间。
- **自动下载**
  - **开：**如果选择此项，在接收时将自动下载短信。
  - **确认：**要求您确认是否下载短信。
  - **关：**暂不下载信息。
- **网络设定：**有关详细信息，请参阅第92页。

### **语音邮件[菜单5-3]**


此菜单提供访问语音邮箱的快速方法(如果网络提供语音邮箱)。在使用此功能之前，您必须输入从网络运营商处获得的语音服务号码。

当收到新的语音邮件时，屏幕上显示相应符号。请与网络提供商联系，了解有关其服务的详细信息，以便对您的手机正确进行配置。



## 信息[菜单5]

### 收听语音邮件[菜单5-3-1]

一旦选择此选项，只需按左软键[确定]即可收听语音邮件。您也可以在待机模式中按住[]键以收听语音邮件。

### 语音信箱[菜单5-3-2]

您可以进入和设置语音邮件中心。

### 小区广播[菜单5-4]

小区广播短信是网络向手机用户发送的文本信息。它们提供诸如天气报告、交通新闻、出租车、药店和股票行情之类的一般信息。每种类型的信息均有相关的服务号码，这可以从网络运营商处获得。当您收到信息服务短信时，将出现说明收到新短信的弹出信息或者直接显示 信息服务短信。在待机模式中，查看信息服务短信时可以使用以下选项。

### 接收[菜单5-4-1]

使用此功能开关广播短信的接收。

### 收信箱[菜单5-4-2]

可以搜索所收到的广播短信列表，或查看其内容。

### 栏目[菜单5-4-3]

#### (视网络和预订的服务而定)

要创建新栏目，按左软键[选项]，然后选择新增。如果已有栏目，您可以通过左软键[选项]来停用、编辑或删除它们。

### 来电提示[菜单5-4-4]

设置当收到新的广播信息时提示音的开关。



## 自动显示 [菜单5-4-5]

如果将此选项选择为开，所有收到的广播短信将自动显示在屏幕上。

## 语言 [菜单5-4-6]

### (视网络和预订的服务而定)

此选项允许您选择首选语言。将以所选语言显示广播短信。如果使用手机所支持的所有语言，请选择列表末尾的自动。

## 模板 [菜单5-5]

在该列表中有一些预定义的短信。您可以查看和编辑模板短信或创建新的短信。提供两种类型的模板：文本和多媒体。

## 文本信息 [菜单5-5-1]

- 请回电
- 我迟到了，马上就到。
- 你现在在哪？
- 我在途中。
- 十万火急。请联系。
- 我爱你。

可以使用以下选项。

- **修改：**使用此功能撰写新的短信，或者在常用短语列表中编辑所选短语。
- **删除：**从常用短语列表中删除所选的常用短语。
- **由文本信息发送：**使用此功能通过SMS短信发送所选的常用短语。





## 信息[菜单5]

- **由多媒体信息发送：**使用此功能通过MMS彩信发送所选的模板短信。
- **新增：**使用此功能创建新的常用短语。

### 多媒体信息[菜单5-5-2]

- **发送：**发送多媒体模板。支持多个号码和电子邮件地址。
- **预览：**显示多媒体短信草稿。
- **保存：**将多媒体短信保存为草稿或模板。
- **删除：**删除多媒体模板。
- **屏幕持续时间：**设置幻灯片的持续时间。使用数字键盘输入所需的持续时间。
- **屏幕格式：**选择在何处对齐图像。
- **添加屏幕：**在当前幻灯片之前或之后添加幻灯片。
- **删除屏幕：**删除突出显示的幻灯片。

### 名片[菜单5-6]

此选项帮助您制作自己的名片。

1. 按左软键[添加]。
2. 输入姓名、手机号码、办公室电话号码、传真号码和电子邮件地址。
3. 按左软键[保存]。对于名片，可以使用以下选项。
  - **修改：**使用此功能编辑名片。
  - **删除：**使用此功能删除名片。
  - **由文本信息发送：**使用此功能通过SMS短信发送名片。



### 备注

- 您也可以在撰写文本信息时使用添加功能附加名片。请参阅第62页。

- **由多媒体信息发送：**通过MMS彩信发送名片。

### 内存状态[菜单5-7]

您可以检查用于短信和彩信的当前内存状态。



## 相机[菜单6]

LG-G920有一个130万像素的数码相机，使您可以拍摄最大分辨率为1280x960（也称为SXGA）像素的照片。CMOS传感器保证了图片的高清晰度和质量。使用4倍变焦（视分辨率而定）、亮度控制、白平衡和彩色效果等附加功能，拍摄照片更加有趣。

集成闪光灯使您在极差光照条件下也能拍照。

还可以用集成相机录制视频剪辑。

按“菜单”键( $\square$ )。或者，您可以在待机模式中按 $\square$ 或 $\square$ 转到此菜单。

**！ 备注：** 如果电池电量太低，可能无法使用相机功能。

### 拍照[菜单6-1]

按“菜单”键，然后使用导航键选择照相→拍照。或者在待机模式下按相机热键( $\square$ 或 $\square$ )两秒多钟。您可以看到取景器。

在拍照之前，按左软键[功能表]设置以下值。



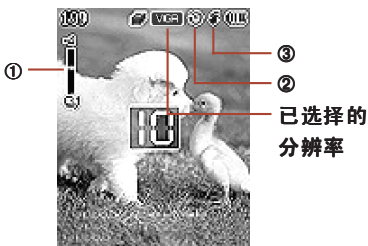 
① ② ③ ④ ⑤ ⑥ ⑦

- ① **亮度：** 有6级可供选择。
- ② **白平衡：** 有5档设置可用：自动、日光、荧光灯、阴天和白炽灯。
- ③ **分辨率：** 有关详情，请参阅第76页。
- ④ **色彩模式：** 有5种设置可供选择：彩色、单色、深褐色、蓝色和反色
- ⑤ **拍摄模式：** 在单拍和连拍之间进行选择。
- ⑥ **图片库：** 访问我的相册。拍摄照片后，可用此保存拍摄的照片。
- ⑦ **退出：** 选择此项从设置菜单退出。



要在菜单之间移动，请使用向左/向右导航键。突出显示一项菜单之后，按“确定”键打开菜单。用向左/向右导航键选择希望的值，然后按“确定”键进行确认。

在拍照之前，还可以使用以下按键。



① **缩放条：** 您可以使用向上/向下导航键调节放大/缩小倍数。此条显示缩放状态。最大变焦倍数取决于图片大小，如下所示。

SXGA (1x) / VGA (4x) / QVGA (4x) / Panorama (1x)

② **自拍器：** 要激活/停用自拍器，请按 。在自拍器激活时显示



#### 备注

- 可以用“计时模式”菜单[菜单6-6-4]设置希望的延时，计时器拍摄只对内屏有效。

③ **闪光灯：** 要打开/关闭闪光灯，请按 。在闪光灯打开时显示




#### 备注

- 可以用“闪光模式”菜单[菜单6-6-5]设置希望的闪光灯模式。



## 相机[菜单6]

 
### 拍摄单张静止图像 ( )

1. 在预览模式中，按左软键[功能表]打开相机设定菜单。
2. 用向左/向右导航键突出显示“拍摄模式”，然后按“确定”键。
3. 选择“单拍”模式 (  )。




#### 备注

- 在“单拍”模式中，可以在QVGA、VGA、SXGA和“全景”之间选择分辨率。QVGA(320X240)、VGA(640X480)、SXGA (1280X960)和“全景”(1280X640)。

4. 完成相机选项设置后，对准要拍摄的物体，并按“相机”键 (  )。听到“咔嚓”一声，照片被拍摄并自动保存在“我的相册”中 (请参阅第79页)。


### 连续拍摄多张照片 ( )

1. 在预览模式中，按左软键[功能表]打开相机设定菜单。
2. 用向左/向右导航键突出显示“拍摄模式”，然后按“确定”键。
3. 选择“连拍”模式 (  )。



#### 备注

- 在“连拍”模式中，可以在 QVGZ和VGA之间选择分辨率。

4. 完成相机选项设置后，对准要拍摄的物体，并按“相机”键 (  )。听到“咔嚓”一声，照片被拍摄并自动保存在“我的相册”中 (请参阅第79页)。



### 备注

- 你拍摄的所有照片将会自动保存在“我的相册”。

## 摄像 [菜单6-2]

您可以录制长达30分钟的视频。但这取决于分辨率、可用内存容量和数据压缩质量。

按“功能表”键，选择“相机”→“摄像”。

按“相机”键(📷)可在此菜单中录制视频剪辑。

1. 在拍摄前，按左软键[功能表]可设置希望的拍摄值。



① ② ③ ④ ⑤

- ① **亮度**：有6种级别可供选择。
- ② **白平衡**：有5档设置可用：自动、日光、白炽灯、阴天和荧光灯。
- ③ **分辨率**：选择希望的分辨率：QCIF (176X44)、S-QCIF (128X96)
- ④ **色彩模式**：有5种设置可供选择：单色、彩色和深褐色、蓝色和反色。
- ⑤ **退出**：选择此选项从设定菜单退出。

您还可以使用以下功能。

- **自拍器**：按
- **闪光灯**：按

2. 在拍摄前，按“确定”键或“相机”键(📷)可设置希望的拍摄值。“正在录制”出现在LCD屏幕上。



## 相机[菜单6]

3. 要停止录制，再按一次“相机”键或按“确定”键。剪辑自动地保存在“我的电影”[菜单6-5]中。按“相机”键可以录制其它视频剪辑。



### 备注



- 在拍摄过程中如果旋转翻盖，电影将会自动保存。
- 在摄像模式下不能改变焦距。

## 镜框拍摄[菜单6-3]

按“菜单”键，选择“相机”→“镜框拍摄”。

您可以享受用各种各样预设的镜框拍摄照片的乐趣。

有15种预设镜框。

1. 要选择希望的镜框来进行拍摄，按左软键[菜单]。
2. 用向左/向右导航键突出显示“框架”(  )，然后按“确定”键。
3. 选择希望的框架后按“确定”键。
4. 选择“退出”键(  )退出选项菜单后，按“照相”键拍摄照片。拍摄的照片自动保存在“我的相册”中(请参阅第79页)。



### 备注

- 镜框拍摄的分辨率固定为176x220像素。



## 我的相册[菜单6-4]

按“菜单”键，选择照相→我的相册。

所有在“照相”菜单中拍摄的静止图像均保存在此菜单中。


您可以查看、编排和发送手机中保存的图片。

1. 选择要全屏显示的图片并按“确定”键。按左软键[选项]访问以下子菜单。
  - **普通视图**：返回网格视图模式。
  - **由多媒体信息发送**：可以通过多媒体信息发送选定的图像。
  - **查看列表**：(在普通视图中显示)返回列表视图模式。



### 备注

- 有关详情，请参阅第65页上的“多媒体信息-写彩信”。
- 因为太大，分辨率为SXGA的图片不能通过彩信发送。手机将询问您是否调整图片的大小以便通过彩信发送。

- **添加到电话本**：可以将选定图像添加到电话本中的联络人。
- **幻灯片**：依次、连续地播放每幅图像。要暂停/恢复播放幻灯片，按左软键。要返回“我的照片”菜单，请按右软键。
- **设为墙纸**：可将选定图像设为内部LCD墙纸或外部LCD墙纸。
- **文件保护**：选择此项可以锁定选定的图像或解除图像的锁定。图像处于锁定状态时，“”显示在图像名称的左侧。锁定的图片不能被删除。





## 相机[菜单6]

- **编辑**: (在普通视图中显示) 选择图片的普通视图后, 您可以进行以下编辑。编辑后, 可通过按左软键[保存]来保存更改后的图像。原来的图片保持不变。
  - **滤镜效果**: 可以向图片添加各种各样的效果。使用左/右导航键从12种效果中选择希望的效果后, 按左软键[保存]。更改后的图片被储存。
  - **调整大小**: 可用左/右导航键更改图片大小。
  - **裁切**: 按右软键[变焦]后, 您可以用右/左软键放大/缩小图片。用导航键显示希望的部分。按“确定”键。裁切后的图像被保存。
    - ! **备注** 裁切后的图像不能被编辑。
  - **旋转**: 可以旋转图片90度、180度或270度。

下表显示各种分辨率下可用的照片编辑功能。

### ! 备注

分辨率 \ 照片编辑	滤镜效果	调整大小	裁切	旋转
QVGA (320X240)	0	X	0	0
VGA (640X480)	0	0	0	0
SVGA (800x600)	X	0	0	X
SXGA (1280X960)	X	0	0	X
全景 (1280X640)	X	0	0	X
裁切的图像 (176X220)	X	X	X	X
从全景调整大小而来的图片 (220X108)	X	X	X	X



- **重命名：**可以更改所选图像的标题。
- **删除：**可以删除所选的图像。
- **删除多个：**（在网格视图模式中显示）可以一次删除多个图像。按“确定”键在列表中选择要删除的图像，然后按左软键 [删除]。
- **全部删除：**可以删除手机中的所有图像。
- **查看详情：**可以检查选定图像的标题、分辨率、大小和日期与时间。

### **我的电影[菜单6-5]**

按“菜单”键，选择相机→我的电影。

打开所有已录制视频剪辑的列表。使用向上/向下导航键选择所需的视频剪辑，然后按“确定”键盘。您也可以使用左软键 [选项] 访问以下子菜单。

- **播放：**播放选定的视频剪辑。
- **文件保护：**选择此项可以锁定选定的视频剪辑或解除视频剪辑的锁定。视频剪辑处于锁定状态时，“🔒”显示在视频剪辑名称的左侧。
- **重命名：**您可以更改选定视频剪辑的标题。
- **删除：**删除选定的视频剪辑。
- **删除多个：**可以一次删除多个视频剪辑。按“确定”键在列表中选择要删除的视频剪辑，然后按左软键 [删除]。
- **全部删除：**您可以删除手机中的所有视频剪辑。在观看视频剪辑时，您可以使用以下键。



## 相机[菜单6]

在观看视频剪辑时，您可以使用以下键。

暂停/恢复播放	按“确定”键(OK)。
更改播放选项（一次或重复）	按左软键(←)。
快倒	按向左导航键(←)。
快进	按向右导航键(→)。
提高音量	按向上导航键(↑)。
降低音量	按向下导航键(↓)。
停止播放并返回“我的电影”	按清除键(C) 或右软键(→)。



### 备注

- 要退出播放屏幕，按右软键或或(C)数次。

## 设定[菜单6-6]

按“菜单”键，选择照相→设定。

在此菜单中，您可以设置以下选项。

- 1. 图像质量：**选择所需的图像拍摄质量。
- 2. 快门声音：**选择希望的快门声音。
- 3. 图库样式：**从“查看列表”和“网格视图”之间选择“图库样式”。
- 4. 计时模式：**激活自拍器时选择希望的延时。
- 5. 闪光模式：**从“一次”和“连续”之间选择希望的闪光灯模式。
  - **一次：**拍摄一张照片后，闪光灯关闭。



- **连续**：闪光灯保持启动状态。因此，“连续”闪光模式将更快的耗尽手机电池的电量。

**6. 幻灯片间隔**：从“3秒”和“5秒”之间选择希望的幻灯片间隔时间。

### **内存状态[菜单6-7]**

按“功能表”键，选择“相机”→“内存状态”。

可以检查手机的当前内存状态。图片、电影和MP3播放器共享内存。



## 多媒体[菜单7]

### MP3播放器[菜单7-1]

LG-G920有一个内置的集成MP3播放器。通过使用兼容耳机或通过内置听筒，您可以欣赏手机内存中的MP3音乐文件。



#### 备注

- 由于听筒的尺寸较小，在某些情况下声音可能失真，特别是在最大音量和低音部较多时。因此，建议您使用立体声耳机以便欣赏高质量的音乐。

MP3播放器支持：

- **MPEG-1 Layer III**：采样频率高达48KHz，位速率高达240Kbps，立体声
- **MPEG-1 Layer III**：采样频率高达24KHz，位速率高达2160Kbps，立体声

可以用销售包装盒中光盘上的 Mobile Agent 程序（或 PC Sync 程序）从兼容的电脑向手机中的内存传送MP3文件。用USB电缆（在相同的包装盒中附带）将手机连接到电脑时，需要安装驱动程序。选择LG-G920.inf。有关详情，请参阅光盘上的手册。



#### 备注

- 电脑应运行 Windows 98 SE、Windows 2000、Windows ME 或 Windows XP 操作系统。
- 除将MP3文件下载到手机以外，还可以通过USB电缆将手机拍摄的照片和电影上传到电脑。要下载铃声、墙纸或Java游戏，需要使用串行电缆。还可以用串行电缆管理电脑上的电话本、日程表和邮箱。有关附件的供应情况，请咨询授权经销商。


 


MP3文件列在MP3播放器菜单中[菜单7-1]。

1. 按“功能表”键，选择“多媒体”→“MP3播放器”。  
显示MP3曲目列表。
2. 按左软键[选项]访问以下菜单。
  - **播放**：从选择的曲目开始播放所有曲目。
  - **删除**：删除选择的曲目。
  - **全部删除**：删除所有曲目并清空MP3播放器内存。
  - **重命名**：选择此项重新命名选定的曲目。
  - **查看详情**：显示名称、运行时间和文件大小等曲目信息。
  - **内存状态**：可以检查手机的当前内存状态。



#### 备注

- MP3播放开始后，合上手机或打开手机并不影响MP3播放。在手机打开时，可以按结束键关闭MP3播放器。在手机合上时，可以按住手机右侧的MP3播放器键关闭播放器。



## 多媒体[菜单7]

### MP3播放器中的按键操作

在MP3曲目列表中使用以下快捷键。

要播放/要暂停	按 <b>OK</b> 。
要在播放期间更改重复选项 <b>→</b> : 一次, <b>↺</b> : 重复, <b>↻</b> : 全曲重复	反复按左软键 ( <b>←</b> )。
要快退当前曲目	按住左导航键 ( <b>←</b> ), 直至找到您希望的位置。
要快进当前曲目	按住右导航键 ( <b>→</b> ), 直至您找到希望的位置。
要跳到上一曲目	按左导航键 ( <b>←</b> )。
要跳到下一曲目	按右导航键 ( <b>→</b> )。
要停止播放	按 <b>C</b> 或右软键 ( <b>↵</b> )。
要调节音量	按手机左侧的侧键 ( <b>  </b> ) 或向上/向下导航键。



#### 备注

#### 播放MP3文件而不打开手机



MP3  
播放器  
器键

您可以在手机处于闭合状态的情况下启动MP3播放器。按住手机右侧的MP3播放器键 (**⊙**)。此键启动播放。

- ▶ 跳到下一曲目, 按MP3播放器键 (**⊙**)。
- ▶ 要停止播放, 按住MP3播放器键 (**⊙**)。
- ▶ 要调节音量, 使用手机左侧的侧键 (**||**)。



## 游戏[菜单7-2]

享受手机游戏为您带来的欢乐时光。有关进一步的详细信息，请参阅屏幕上的说明或帮助菜单。

## Java[菜单7-3]

Java是由Sun Microsystems开发的一项技术。与使用标准Netscape或微软Internet Explorer 浏览器下载Java Applet的方式相同，可以使用具有WAP 功能的手机下载Java MIDlet。视服务提供商而定，所有基于Java的程序(如Java游戏)均可以下载到手机上并运行。一旦下载之后，即可以在“应用”菜单内查看、选择、执行或删除Java 程序。Java程序文件以.JAD和.JAR格式保存在手机中。



### 备注

- JAR文件是Java程序的压缩格式，JAD文件是包含所有详细信息的描述文件。在下载之前，您可以从网络上的JAD文件中查看所有详细的文件说明。



### 备注

- 只有基于J2ME (Java2微版本) 的程序会在手机上运行。基于J2SE (Java2标准版本) 的程序只能在PC环境中运行。





## 多媒体[菜单7]

### 应用[菜单7-3-1]

“应用”菜单显示使用WAP下载的Java程序列表。在“应用”菜单内，可以选择、删除所有先前下载的程序，或者查看其详细信息。从“应用”菜单内的列表中，可以使用以下选项：

- **打开：**打开所选程序。该列表包括手机中已安装的所有Java程序。
- **删除：**删除所选程序。一旦删除，则无法恢复该程序，除非使用WAP再次下载。
- **详细资料：**显示有关所选程序的详细信息。其中包括程序名称、程序大小、程序版本、厂商信息、网站地址或 URL。
- **接入网络：**您可以选择“询问后进行”、“允许”和“禁止”。

### 下载[菜单7-3-2]

当使用WAP下载新的Java程序时，其下载地址称为书签。Java菜单包括用于下载Java程序的书签列表，可以从“下载”菜单中查看此书签列表。您可以连接、查看、编辑、删除和添加书签。

- **连接：**书签中的所选地址用于数据连接。在成功建立连接之后，即可从列表中下载所需的Java程序。
- **查看：**可以查看有关书签的详细信息，例如连接到特定站点所需的书签地址和书签标题等。
- **修改：**可以编辑所选书签。编辑书签是以“地址”→“标题”的顺序完成的。当创建新的标签时，须遵循相同顺序。
- **删除：**删除所选书签。可以从书签列表屏幕中完全删除所有书签。不能恢复已删除的书签，所以删除时务必小心。
- **新增：**添加新的书签。“新增”书签的顺序与“编辑”书签相同。从书签菜单中选择“新增”选项；或者当没有书签存在时，可以从书签列表屏幕中选择“新增”。



### 备注

 
- 在选择“连接”功能访问Java MIDlet提供商的服务器后，可以从众多Java程序中选择一個，并下载和安装到您的手机中。且连接到该服务器，即可按“搜索”按钮以查看有关所需程序的JAD信息。按“获取”按钮将开始下载和安装过程。下载和安装过程同步发生，一旦下载完毕，即可运行Java程序。可从“应用”菜单中选择已安装的Java程序以运行。

### 内存状态[菜单7-3-3]

使用WAP下载的程序存储在手机内存中。手机中有最大内存容量限制，一旦超出此限制，则无法存储更多程序。“查看信息”菜单允许您检查手机中可用的内存容量。



## 服务[菜单8]

按“功能表”键()，然后使用导航键选择“服务”。

### 互联网[菜单8-1]


您可以访问不同的WAP(无线应用协议)服务，如银行业务、新闻、天气预报和航班信息等。这些服务专为手机应用而设计，由WAP服务提供商负责进行维护。

向您的网络运营商及(或)希望使用其服务的服务提供商咨询，了解WAP服务的提供、定价和收费情况。服务提供商将向您提供有关如何使用其服务的说明。

请联系您的网络运营商以开通Internet帐户。要使用Web浏览器，您必须通过本手机号码菜单选项指定自己的手机号码(有关详细信息，请参阅第57页)。

要在待机模式中启动浏览器，请按住键。

一旦建立连接，屏幕上即显示主页。主页内容视服务提供商而定。




通过输入相应的URL地址，您可以访问任何网站页面。要在任何时间退出浏览器，按键。手机将返回待机模式。

### 使用WAP浏览器导航

您可以使用手机按键或WAP浏览器菜单上网。

### 使用手机按键

上网期间，手机按键的功能有所不同。

按 键	说 明
	将内容区域向上 / 向下滚动一行
	返回上一页
	选择选项并确认操作。



## 使用WAP浏览器菜单

当无线上网时，有多个菜单选项可供使用。



### 备注

- 视浏览器版本而定，WAP浏览器菜单可能有所不同。

## 主页[菜单8-1-1]

连接到主页。主页是在激活的网络设定中定义的站点。如果您未在激活的网络设定中定义该站点，则将由服务提供商定义。

## 书签[菜单8-1-2]

此菜单使您可以存储喜爱网页的URL以便以后访问。您还可以创建文件夹并在各个文件夹中管理书签。

要创建书签

1. 按左软键“选项”。
2. 选择“添加”，然后按“确定”键。
3. 输入希望的URL和标签，然后按“确定”键。

创建书签后，以下选项可供使用。

- **打开**：连接到选定的书签。
- **查看**：可以编辑选定书签的URL和/或标题。
- **添加**：选择此项创建新的书签。
- **新建文件夹**：选择此项创建新的文件夹。
- **删除**：删除选定的书签。



## 服务[菜单8]

您的手机中可能已经预先安装一些站点的书签(这些站点与LG不具结盟关系)。LG不对这些站点作出保证或认可。如果您选择访问这些站点,应如同访问任何其它站点一样注意安全并警惕其内容。

### Push信息[菜单8-1-3]

#### • Push收信箱

您可以从WAP服务提供商处预订Push信息。Push信息是新闻头条之类的通知,可以包含文本信息或WAP服务的地址。有关该服务的提供和预订情况,请联系您的WAP服务提供商。每当接收到新的Push信息时,服务提供商可以更新现有的Push信息。即使已将Push信息移到另一文件夹,也可以更新这些信息。Push信息过时后会自动删除。

- **信息:** 显示信息所收到的push信息的信息。
- **下载:** 使用所收到的push信息中的信息连接到特定站点。
- **删除:** 删除所选push短信。

#### • 接收

可以选择是否希望收到push信息。

### 网络设定[菜单8-1-4]

有关详细信息,请咨询您的网络运营商。

每个网络设定均有子菜单,如下所示:

- **启动:** 启动所选网络设定。
- **设定:** 使用此功能编辑和更改所选网络设定的WAP设置。
- **重命名:** 可以更改所选网络设定的名称。
- **删除:** 从列表中删除所选网络设定。
- **新增:** 可以添加新的网络设定。



### 备注

- 使用这些选项作出的更改可能影响彩信功能。

### 转到URL [菜单8-1-5]

您可以直接连接到所要的站点。必须输入特定URL才能成功连接。

### 缓存 [菜单8-1-6]

您已访问的信息或服务保存在手机的缓存内存中。

- **清除缓存 [菜单8-6-1]**  
删除缓存中保存的所有信息。
- **缓存查询 [菜单8-6-2]**  
设置是否通过缓存尝试进行连接。

### 安全设置 [菜单8-1-7]

显示可用证书的列表。

### 重新设定 [菜单8-1-8]

可以重设网络设定以返回初始设置。

### 浏览器版本 [菜单8-1-9]

显示WAP浏览器版本。



## 服务[菜单8]

### **移动梦网[菜单8-2]**

您的服务提供商可以通过SIM 卡提供如家庭银行业务、股市行情之类的特殊应用。如果已注册这些服务之一，该服务名称将出现在主菜单末尾。通过“移动梦网”菜单，您的手机能够满足将来的使用需要，并能够支持服务提供商所提供的额外服务。有关详细信息，请联系您的服务提供商。



“功能表”键( $\square$ ), 然后使用导航键选择设置。

### **日期和时间[菜单9-1]**

此选项允许您更改显示的当前时间和日期。可以使用以下选项。

#### **日期设定[菜单9-1-1]**

使用此功能输入年、月、日。您可以通过日期格式菜单选项更改日期格式。

#### **日期格式[菜单9-1-2]**

YYYY/MM/DD (年/月/日)

DD/MM/YYYY (日/月/年)

MM/DD/YYYY (月/日/年)

#### **时间设定[菜单9-1-3]**

使用此功能输入当前时间。您可以通过时间格式菜单选项选择时间格式。

#### **时间格式[菜单9-1-4]**

24小时制和12小时制。

#### **双时间显示[菜单9-1-5]**

可以将手机设为显示双时间时钟。选择“开”后，选择希望的双时间时区。

#### **每小时提示一次[菜单9-1-6]**

选择“开”，将手机设为每小时提示一次。





## 设置[菜单9]

### 通话设定[菜单9-2]

设定通话选项。

#### 呼叫转接[菜单9-2-1]

当激活此网络服务时，您可以将来电转接到另一号码，例如，您的语音信箱号码。有关详细信息，请联系您的网络运营商。选择转接选项之一，例如，选择正在通话时转接来电以在您的号码正忙时或拒接来电时转接语音来电。

可以使用以下选项。

**转接所有语音来电：**无条件地转接所有语音来电。

**正在通话时转接来电：**当手机正在使用时转接语音来电。

**无人接听时转接来电：**转接未应答的语音来电。

**无网络或关机时转接来电：**当手机关机或处于网络覆盖范围之外时转接语音来电。

**转接所有数据来电：**无条件地转接具有PC连接的号码。

**转接所有传真来电：**无条件地转接具有传真连接的号码。

每个选项具有以下菜单：



- **启动：**激活相应服务。
  - **转到语音信箱：**转发到短信中心。此功能不适用于转接所有数据来电和转接所有传真来电菜单。
  - **转到其它号码：**进入用于呼叫转接的号码。
  - **常用号码：**您可以查看最近的五个转接号码。
- **关闭：**取消所选的呼叫转接。
- **查询状态：**您可以查看服务的状态。

**全部取消：**取消所有呼叫转接设置。



## 接听模式[菜单9-2-2]

选择所需的接听电话模式。

- **翻盖接听**：当手机响铃时，只需打开翻盖即可接听电话。
- **任意键接听**：当手机响铃时，可以按除  键 和右软键 () 以外的任何按键接听电话。
- **按发送键接听**：只能按发送键接听电话。

## 发送号码[菜单9-2-3]

此网络服务允许您确定是否向接电人显示您的手机号码（“开”或“关”）。选择**自动设定**将手机重设为您已与服务提供商达成协议 的设置。

## 呼叫等待[菜单9-2-4]（网络服务）

当已在通话中时，网络将通知您有新入来电。选择**启动**以要求网络激活呼叫等待功能，选择**关闭**以要求网络停用呼叫等待功能，或选择**查询状态**以检查该功能是否已激活。

## 分钟提示[菜单9-2-5]

当设置为“开”时，在去电期间每隔一分钟手机鸣音一次，让您知道通话时间。

## 语音拨号[菜单9-2-6]

说出已添加到接触卡中的语音标签，即可拨打电话。任何字词都可以作为语音标签。在使用语音拨号之前，请注意：

- 语音标签与语言无关，而是由说话者的语音决定。
- 语音标签对背景噪音敏感。请在安静的环境中录制语音标签和进行语音拨号。



## 设置[菜单9]

- 当录制语音标签或通过说出语音标签拨打电话时，扬声器处于使用状态。举起手机距离嘴边和脸部较近的位置，这样近程传感器不会关闭扬声器。
- 过短的姓名无效。使用足够长的姓名，并避免对于不同号码使用相同姓名。
  - **自动：**使用此功能以在每当打开翻盖时即进入语音拨号模式。
  - **手动：**使用此功能以在按住星号（\*0#）键时进入语音拨号模式。



### 备注

- 所说的姓名必须与录制时所说的完全一致。这可能有所困难，例如，在嘈杂的环境中或紧急情况下，所以您不应在所有环境中都唯一性地依赖语音拨号方式。

### 自动重拨[菜单9-2-7]

选择开，如果拨打电话不成功，手机将最多重拨五次该号码。

### 封闭用户群组[菜单9-2-8]

这是一项网络服务，用于指定您可以呼叫和可以呼叫您的联系人群组。有关详细信息，请联系您的网络运营商或服务提供商。如果指定了群组索引，则其将用于所有去电。如果未指定群组索引，网络将使用优先索引。（存储在网络中的特定索引。）

- **预设：**选择此项可以激活上一个封闭用户群组索引。
- **开：**您可以编辑并激活封闭用户群组索引。
- **关：**停用此功能。



## **手机设定[菜单9-3]**

手机的许多功能都能够按您的喜好加以定制。通过手机设定菜单可以访问所有这些功能。

### **墙纸[菜单9-3-1]**

使用此功能设置在待机模式中LCD屏幕的显示画面。

### **背景灯[菜单9-3-2]**

使用此功能选择手机是否使用背景灯。将背景灯关闭，可以稍微延长待机/通话时间。

### **菜单颜色[菜单9-3-3]**

本款手机提供4种菜单颜色风格。通过滚动和按“选择”键设置菜单颜色。

### **问候语[菜单9-3-4]**

输入问候语，选择开。使用键盘输入问候语。在待机模式中问候语显示在屏幕上。

### **语言[菜单9-3-5]**

可以选择显示语言。当语言选项设置为自动时，将根据所使用的SIM卡语言自动选择语言。如果手机不支持SIM卡上的语言，则将使用英语。

### **网络名称[菜单9-3-6]**

选择手机打开或关闭时是否显示网络名称。



## 设置[菜单9]

### 保密设定[菜单9-4]

不同的密码用于保护手机的特定功能。有关各种密码，请第参阅第26-27页。

### 需要PIN码[菜单9-4-1]

当需要PIN码功能启用时，每次开机时必须输入PIN。因此，未经允许，任何不知道此PIN的人均无法使用您的手机。



#### 备注

- 在禁用需要PIN码功能之前，必须输入您的PIN。

可以使用以下选项：

- **开**：每次开机时必须输入PIN。
- **关**：手机开机后直接连接到网络。

### 话机锁[菜单9-4-2]

可以锁定手机。选择希望的话机锁选项。要更改话机锁选项，将提示您输入安全密码。

- ▶ 要解除手机锁定，按右软键，然后输入安全密码。



## 呼叫限制[菜单9-4-3] (视网络而定)

可以限制使用您的手机拨打和接听电话。此功能要求提供呼叫限制密码，您可以从服务提供商处获得此密码。

固定拨号启用后，如果试图拨打固定拨号列表以外的号码，信息“检查固定拨号”将出现。

可以使用以下选项：

- **所有拨出电话：**不能拨打电话。
- **拨出国际电话：**不能拨打国际电话。
- **国际漫游时拨打电话：**在国外时，只能向您目前所在的国家及您本国(网络提供商所在的国家)国内的号码拨打电话。
- **所有来电：**不能接收电话。
- **国际漫游时来电：**当在本国服务区以外的国家使用手机时，不能接收电话。
- **全部取消：**停用所有呼叫限制设置，恢复正常接收和拨打电话。
- **更改密码：**使用此功能设置和更改由服务提供商提供的呼叫限制密码。必须输入当前密码，才能指定新密码。输入新密码之后，必须再次输入以作确认。



### 备注

- 必须输入网络密码，才能使用呼叫限制服务。当呼叫受限时，在某些网络上仍允许拨打特定的紧急电话号码。



## 设置[菜单9]

### 固定拨号(FDN)[菜单9-4-4](视SIM卡而定)

如果SIM卡支持固定拨号功能，使用此功能限制为仅拨打所选的电话号码。要求PIN2码。

可以使用以下选项：

- **开**：使用此功能限制为仅拨打电话本中保存的电话号码。必须输入PIN2码。
- **关**：允许拨打任何号码。
- **号码列表**：使用此功能查看保存为固定拨号号码的号码。



#### 备注

- 并非所有SIM卡都具有PIN2。如果您的SIM卡没有PIN2，则不显示此菜单选项。

### 更换密码[菜单9-4-5]

更换密码功能允许您将当前密码更改为新密码。必须输入当前密码，才能指定新密码。

使用此功能更改访问密码：安全密码、PIN1码、PIN2码



#### 备注

- PIN：个人身份号码。



## 网络设定[菜单9-5]

通过网络设定功能，您可以指定当漫游时(本地区以外)是以自动、手动还是优先方式选择网络。



### 备注

- 对于本地网络以外的其它网络，仅当其与您本地网络之间具有有效的漫游协议时，才可以选择该网络。

## GPRS设置[菜单9-6]

GPRS(通用分组无线业务)是一种允许使用手机通过移动网络收发数据的技术。GPRS是允许以无线方式访问数据网络(如Internet)的数据载体。

在可以使用GPRS技术之前：

- 您需要预订GPRS服务。有关GPRS服务的提供和预订情况，请联系您的网络运营商或服务提供商。
- 您需要为通过GPRS使用的应用程序保存GPRS设置。

## 连接[菜单9-6-1]

您可以选择两种连接类型：1电源打开 2需要时。



### 备注

- 如果没有开通 GPRS 服务，并且已选择“自动”，则手机将定期尝试建立连接。





## 设置[菜单9]

### 外部设备[菜单9-6-2]

当通过外部设备经由GPRS使用互联网时，可以设置以下六种网络设定：重命名、APN、IP地址、DNS、用户ID和密码。

### 恢复初始设定[菜单9-7]

您可以将手机恢复为其默认配置。要恢复初始设定，请按以下步骤操作。

1. 选择恢复初始设定菜单选项。
2. 输入4位数的安全密码。



#### 备注

- 安全密码预先设置为0000。  
要更改安全密码，请第参阅第100页。



如果您的手机出现任何问题，请在将其送去维修或致电服务工程师之前，先在此处检查有无对该问题进行描述。

**问** 如何查看去电、已接来电和未接来电的列表？

**答** 按 。


**问** 如何清除所有通话记录？

**答** 按左软键，然后按   。

**问** 如何查看内存中保存的所有号码？

**答** 按右软键，然后按 。

**问**  不从屏幕上消失。

**答** 检查您是否在服务区内。如果一直看到 ，请关闭手机电源并等待大约2分钟，然后重新开机。如果问题仍然存在，请转移到另一区域并再次检查。

**问** 在某些区域内连接质量不佳或听不见。

**答** 在某些区域内，信号强度可能变化很大。请转移到另一位置。繁忙的网络通信可能影响连接能力或呼叫稳定性。

**问** 即使建立连接之后，连接质量不佳。

**答** 在某些区域内，信号强度可能变化很大。请转移到另一位置。繁忙的网络通信可能影响连接能力或呼叫稳定性。



## 问题与回答

**问** LCD显示屏不亮起。

**答** 取出并更换电池，然后开机。如果手机仍无法开机，请将电池充电并重试。

**问** 当与特定区域内的特定电话连接时，可以听到回声。

**答** 这称为“回声现象”。如果音量过高会发生这种现象，或者由对方一端机器的特殊属性(半电子电话交换机)而导致。

**问** 手机变热。

**答** 在长时通话期间，或者如果长时间使用游戏/Internet，手机可能会发烫。这是正常现象，对于手机的使用寿命或性能没有影响。

**问** 手机的待机时间逐渐缩短。

**答** 电池的寿命是有限的。当电池的持续时间只是其原先的一半时，则需要更换。请只使用认可的备件。

**问** 电池的使用时间缩短。


**答** 如果电池使用时间缩短，可能是由于使用环境、通话音量大或信号微弱等因素造成。

**问** 当使用电话本条目拨打电话时，未拨出任何号码。

**答** 使用电话本“搜索”功能检查所保存的号码是否正确。如果必要，重新保存。



**问** 不能接收电话。

**答** 手机是否开机(按下三秒以上)? 是否接入了正确的蜂窝网络? 是否已设置来电限制选项?

**问** 我找不到锁定、PIN或PUK码或密码。

**答** 默认锁定密码为‘0000’。如果遗忘或丢失锁定密码, 请联系您的手机经销商。如果遗忘或丢失PIN或PUK码, 或者未收到此类密码, 请联系您的网络服务提供商。



## 配件

有多种配件可用于您的手机。您可以根据个人的通信要求选择这些配件。关于配件的供应情况，请咨询本地经销商。



### 随机提供的适配器

此适配器用于在家中或办公室中充电。



 
### 电池

提供标准电池。



### 耳机

用于免提操作。包括听筒和麦克风。



### 数据电缆套件

将手机连接到PC。



### 备注

- 务必使用正品LG配件。否则可能导致保修失效。
- 在不同地区提供的配件可能不同：如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。



### 常规

---

产品名称：LG-G920

系统：GSM 900/DCS 1800

### 环境温度

---

最高：+55°C

最低：-10°C



## 备忘录

**ENGLISH**

# **GPRS & MMS Phone**

## **USER MANUAL**

### **MODEL: LG-G920**

Please read this manual carefully  
before operating your mobile phone.  
And retain it for future reference.





## Introduction

Congratulations on your purchase of the advanced and compact LG-G920 mobile phone, designed to operate with the latest digital mobile communication technology.



- This user guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.



Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.

### **Exposure to radio frequency energy**

#### **Radio wave exposure and Specific Absorption Rate (SAR) information**

This mobile phone model LG-G920 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.592 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue (for example USA, Canada, Australia and Taiwan).



## Guidelines for safe and efficient use

### Product care and maintenance

**Warning: Use only batteries, charger and accessories approved for use with this particular phone model.**

**The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.**

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliance such as a TV, radio or personal computer.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit.  
(Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously.

### Efficient phone operation

To enjoy optimum performance with minimum power consumption please:



- Hold the phone as you speak to any other telephone. While speaking directly into the microphone, angle the antenna in a direction up and over your shoulder. If the antenna is extendable/retractable, it should be extended during a call.
- If your mobile phone supports infrared, never direct the infrared ray at anyone's eye.

## **Electronics devices**

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over the pacemaker, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

## **Road Safety**

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your motor vehicle such as car stereo, safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause serious injury due to improper performance.



## Guidelines for safe and efficient use

### Blasting area

Do not use the phone where blasting is in progress.

Observe restrictions, and follow any regulations or rules.

### Potentially explosive atmospheres

- Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

### In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the ground without crew permission.

### Children

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

### Emergency calls

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.



## **Battery information and care**

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.



# Table of contents

<b>LG-G920 features</b> .....	<b>12</b>
• Parts of the phone .....	12
• 1.3 Mega pixel digital camera with DSC look .....	17
• Display information .....	20
<b>Getting started</b> .....	<b>22</b>
• Installing the SIM card and the handset battery .....	22
• Charging the battery .....	24
• Disconnecting the adapter .....	25
• Turning your phone on and off .....	26
• Access codes .....	26
• Barring password .....	27
<b>General functions</b> .....	<b>28</b>
• Making and answering calls .....	28
• Entering text .....	30
• Phonebook .....	34
• In-call menu .....	34
• Multiparty or conference calls .....	36
<b>Menu tree</b> .....	<b>38</b>
<b>Selecting functions and options</b> .....	<b>40</b>
<b>Profiles [Menu 1]</b> .....	<b>41</b>
• Vibrate only [Menu 1-1] .....	41
• Silent [Menu 1-2] .....	41
• General [Menu 1-3] .....	41
• Loud [Menu 1-4] .....	41
• Headset [Menu 1-5] .....	41
• Car [Menu 1-6] .....	41



<b>Call register [Menu 2]</b> .....	<b>43</b>
• Missed calls [Menu 2-1] .....	43
• Received calls [Menu 2-2] .....	44
• Dialed calls [Menu 2-3] .....	45
• Delete recent calls [Menu 2-4] .....	45
• Call durations [Menu 2-5] .....	45
• Call costs [Menu 2-6] .....	46
• Cost settings [Menu 2-7] .....	46
• GPRS information [Menu 2-8] .....	47
<b>Tools [Menu 3]</b> .....	<b>48</b>
• My stuff [Menu 3-1] .....	48
• Favorite [Menu 3-2] .....	49
• Unit converter [Menu 3-3] .....	50
• Calculator [Menu 3-4] .....	50
• World time [Menu 3-5] .....	51
• Voice recorder [Menu 3-6] .....	52
• Activate IrDA [Menu 3-7] .....	52
<b>Organiser [Menu 4]</b> .....	<b>54</b>
• Phonebook [Menu 4-1] .....	54
• Alarm clock [Menu 4-2] .....	58
• Scheduler [Menu 4-3] .....	59
• Memo [Menu 4-4] .....	61
<b>Messages [Menu 5]</b> .....	<b>62</b>
• Text messages [Menu 5-1] .....	62
• Multimedia messages (MMS) [Menu 5-2] .....	66
• Voice messages [Menu 5-3] .....	71





## Table of contents

• Info service [Menu 5-4] .....	72
• Templates [Menu 5-5] .....	73
• Name card [Menu 5-6] .....	75
• Memory status [Menu 5-7] .....	75
<b>Camera [Menu 6] .....</b>	<b>76</b>
• Take pictures [Menu 6-1] .....	77
• Take movies [Menu 6-2] .....	80
• Frame shot [Menu 6-3] .....	81
• My photo gallery [Menu 6-4] .....	81
• My movie gallery [Menu 6-5] .....	83
• Camera settings [Menu 6-6] .....	85
• Memory status [Menu 6-7] .....	85
<b>Multimedia [Menu 7] .....</b>	<b>86</b>
• MP3 player [Menu 7-1] .....	86
• Game [Menu 7-2] .....	89
• Java [Menu 7-3] .....	89
<b>Service [Menu 8] .....</b>	<b>93</b>
• Internet [Menu 8-1] .....	93
• SIM service [Menu 8-2] .....	97
<b>Settings [Menu 9] .....</b>	<b>98</b>
• Date & Time [Menu 9-1] .....	98
• Call settings [Menu 9-2] .....	99
• Phone settings [Menu 9-3] .....	102
• Security settings [Menu 9-4] .....	104
• Network settings [Menu 9-5] .....	107



---

- GPRS settings [Menu 9-6] ..... 107
- Factory reset [Menu 9-7] ..... 108

**Q&A** ..... 109

**Accessories** ..... 112

**Technical data** ..... 113



## LG-G920 features

### Parts of the phone

#### Front view



#### 1. Up/down side keys

- Press and hold down this key to display the current time on the sub LCD.
- Controls the volume of keypad tone in standby mode with the clamshell open.
- Controls the earpiece volume during a phone call.
- Use these keys to zoom in/out in the camera preview mode.
- Controls the volume during the playback of the video clips, MP3, or games.

**2. Charger connector:** Connect the mains adapter here for charging. Also connect the USB cable here to use the PC sync program.

#### 3. Speaker

#### 4. Sub LCD

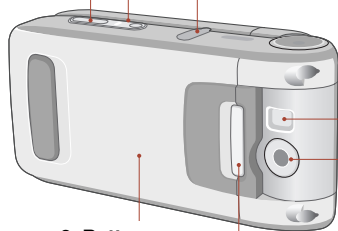 


## Rear view

6. MP3 player/ Camera setting menu key

5. Side camera key

7. Headset jack



1. Flash

2. Camera lens

3. Battery cover

4. Battery latch

1. Flash

2. Camera lens



### Note

- If there is dirt on the camera lens, it could affect the image quality.

**3. Battery cover**

**4. Battery latch:** Press this to open the battery cover.

**5. Side camera key:** Press and hold down this key to open the camera module. And use this key to take a shot.

**6. MP3 player/ Internet/ Camera setting menu key**

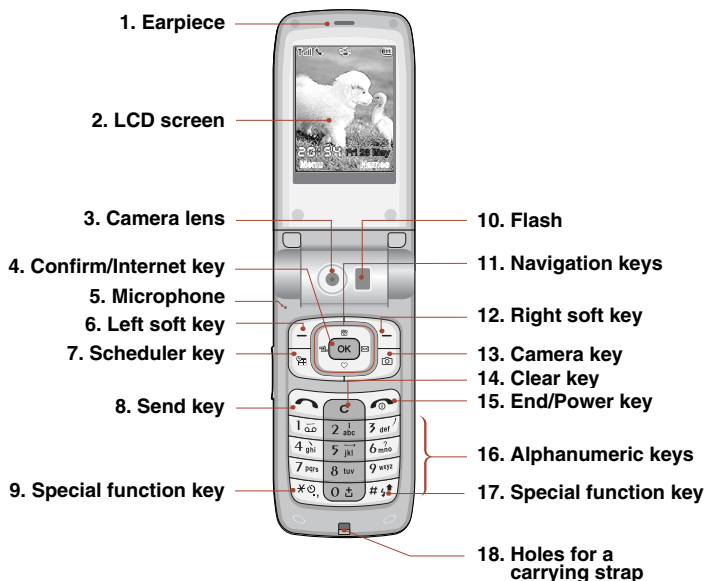 
- Press and hold down this key to turn on/off the MP3 player when the phone is closed.
- After opening the phone, a long press of this key connects to the Internet.
- (Camera) In the preview mode, press this key to open the camera setting menu and confirm the selection.

**7. Headset jack:** Connect a headset here.



## LG-G920 features

### Open view





### 1. Earpiece

**2. LCD screen:** Displays phone status icons, menu items, Web information, pictures and more in full colour.

### 3. Camera lens

**4. Confirm/Internet key:** Selects menu options and confirms actions.

\* In standby mode, holding this key down connects to the Internet.

**5. Microphone:** Can be muted during a call for privacy. (See page 35.)


**6. 12. Left soft key / Right soft key:** Each of these keys performs the function indicated by the text on the screen immediately above it.

**7. Scheduler key:** A shortcut key to the Scheduler menu.

**8. Send key:** Dials a phone number and answers incoming calls. You can also quickly access the latest incoming, outgoing and missed calls by pressing the key in standby mode.

**9. Special function key** ()

- In standby mode, press and hold down this key to make a call by voice dialling.
- Self-timer: In camera shot mode, press this key to activate/deactivate the self-timer. You can set the desired delay time using **Timer mode** menu [Menu 6-6-4]. (See page 85.)

**10. Flash:** In preview mode, you can turn the flash on/off by pressing . And you can set the desired flash mode using the **Flash mode** menu [Menu 6-6-5]. (See page 85.)

**11. Navigation keys:** Use to scroll through menus and move the cursor. You can also use these keys for quick access to the following functions.

- Up navigation key: By pressing this key in standby mode, you can search the phonebook by name.
- Down navigation key: A shortcut key to the Favorite menu.



## LG-G920 features

- Left navigation key: A shortcut key to the Profiles menu.
  - Right navigation key: A shortcut key to the message inbox.
- 13. Camera key:** Use for camera feature.
- In standby mode, press this key once to go to the Camera menu. Long press of this key directly opens the viewfinder. Then use this key to take a shot.
- 14. Clear key:** Deletes a character by each press. Hold the key down to clear all input. Also use this key to go back to the previous screen.
- 15. End/Power key:** Used to end a call or reject a call and also to go back to standby mode. Hold this key down to turn the phone on/off.
- 16. Alphanumeric keys:** Enter numbers, letters and some special characters.
- 17. Special function key ( $\sqrt{\#;^*}$ )**
- Press and hold down to enter a pause while keying in a phone number.
  - Flash: In camera shot mode, with this key you can turn the flash on/off.
- 18. Holes for a carrying strap**



### 1.3 Mega pixel digital camera with DSC look

The flexible LCD screen rotates ANTICLOCKWISE up to 180 degrees. It functions as a viewfinder, and enables you to take pictures with ease and pizzazz. When the clamshell is turned 180 degrees, you can use the main LCD screen as an external one. It's almost a digital camera.



#### Note

- Do not try to rotate the LCD screen clockwise. Do not rotate the LCD screen by force.



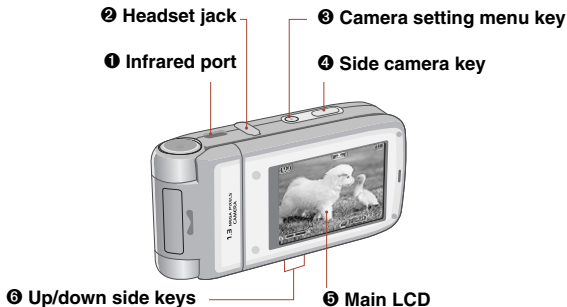 
This state enables you to take self-shots.





## LG-G920 features

After turning the clamshell 180 degrees, and in the clamshell closed state, you can use the phone as a digital camera.



### ① Infrared port

### ② Headset jack

③ **Camera setting menu / confirm key:** In the preview mode, opens the camera setting menus and confirms the choice.



### Note

- You can also play the MP3 files by long press of this key, when the clamshell is closed.

④ **Side camera key:** Press and hold down this key to open the camera module. And press this key to take a shot.

⑤ **Main LCD:** When you take a picture, functions as the viewfinder.

⑥ **Up/down side keys:** Use to move the cursor to the left or right. And you can zoom in/out using these keys.

## Taking pictures in the clamshell closed state

1. Turn the clamshell 180 degrees to make the main LCD outside.
2. Press and hold down the side camera key (④) for over 2 seconds. It opens camera module and the preview screen opens.



### Note

- In the preview mode, no key operation for 2 minute will close the camera module and go back to standby mode.

3. Focus on the subject to capture, then press the side camera key (4). The captured image is automatically saved in **My photo gallery** [Menu 6-4]. (Refer to page 81 regarding **My photo gallery**.)
4. Before taking a shot, you can set the following options by pressing the camera setting menu key (6).



- 1 **Brightness:** 6 grades are available.
- 2 **White Balance:** 5 settings are available: Auto, Daylight, Incandescent, Cloudy, and Flourescent.
- 3 **Resolution:** Select the desired resolution. Refer to page 79.
- 4 **Color Mode:** 5 settings are available: Color, Mono, Sepia, Blue, and Negative.
- 5 **Shot Mode:** Select between Single shot and Multiple shot.
- 6 **Photo gallery:** After taking a shot, you can use this to check out the captured image.
- 7 **Exit:** Select this to exit from the setting menu.

To move between setting menus, use up/down side keys (6).

After highlighting a menu, press the camera setting menu key (3) to open the menu.

Select the desired value using the up/down side keys (6) and press the camera setting menu key (3) to confirm it.


















## LG-G920 features








### Display information

The table below describes various display indicators or icons that appear on the phone's display screen.

#### On-Screen Icons

Icon	Description
	Indicates the strength of the network signal.
	Indicates a call is in progress.
	Indicates that you are roaming on another network.
	Indicates that GPRS service is available.
	Indicates the alarm has been set and is on.
	Indicates the status of the battery charge.
	Indicates the receipt of a text message.
	Indicates the receipt of a voice message.
	Indicates the receipt of a MMS message.
	Indicates that Call divert function is activated.
	Indicates that the vibration ringer has been set.
	Indicates the receipt of an e-mail message.
	Indicates the Loud profile is activated.
	Indicates the Silent profile is activated.
	Indicates the Headset profile is activated.



Icon	Description
	Indicates the Car profile is activated.
	Indicates the General profile is activated.
	Indicates that you can use the push message service.
	Indicates that you have a schedule for the selected day in the schedule menu.
	Indicates that the phone is accessing the WAP.
	Indicates that you are using GPRS.
	Indicates that you entered the security page.



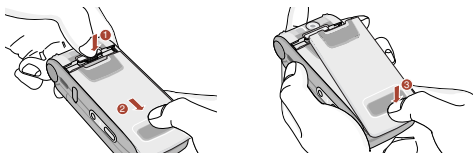 
## Getting started

### Installing the SIM card and the handset battery

Make sure the power is off before you remove the battery.

#### 1. Remove the battery cover.

Press the battery release latch and slide the battery cover toward the bottom of the phone. And remove the battery cover.

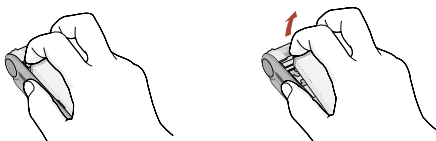 


#### Note

- Removing the battery from the phone when the power is on may cause the phone to malfunction.

#### 2. Remove the battery.

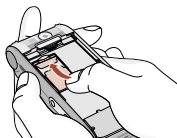 
Hold the top edge of the battery and lift the battery from the battery compartment.





### 3. Install the SIM card.

Insert the SIM card into the holder. Slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.



To insert the SIM card



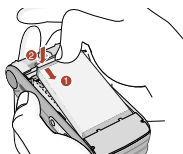 
To remove the SIM card



#### Note

- The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.

### 4. Install the battery.



Insert the bottom of the battery first into the bottom edge of the battery compartment. Push down the top of the battery until it snaps into space.



## Getting started

### 5. Replace the battery cover.

Lay the battery cover in place of the phone and slide it until the latch clicks.



## Charging the battery

Only use the mains adapter supplied with your phone.

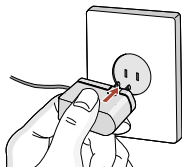 


1. With the battery in position on the phone, connect the lead from the mains adapter to the left side of the phone. Lift the charger connector lid off and turn it 180 degrees. Make sure that the arrow on the lead connector is facing towards the front of the phone.



### Note

- Do not fold the rubber lid to open the lid of the charger connector on the phone.



2. Connect the other end of the adapter to the power outlet.



### Caution

- Use of unauthorised accessories could damage your phone and invalidate your warranty.
- Do not force the connector as this may damage the phone and/or the mains adapter.



### Note

- “Charging” appears on the screen after connecting the mains adapter. If the battery is totally discharged, it may take a few minutes before this appears.

## Disconnecting the adapter



1. When charging is finished, the moving bars of the battery icon stop and ‘Full’ is displayed on the screen.
2. Unplug the adapter from the power outlet. Disconnect the adapter from the phone by pressing the grey tabs on both sides of the connector and pull the connector out.



### Note

- Ensure the battery is fully charged before first using the phone.
- Do not remove the battery or SIM card while charging.
- In the case the battery is not properly charged, please turn the phone off and on using the power key, then recharge the battery. After detaching and reattaching the battery, please recharge the battery.







## Getting started

### Turning your phone on and off

#### Turning your phone ON

1. Install a battery to the handset and connect the phone to an external power source such as the mains adapter, cigarette lighter adapter or hands-free car kit. Or install a charged battery pack to the handset.
2. Press  for a few seconds until the LCD screen is turned on.
3. Depending on the status of the PIN code request setting you may need to enter your PIN code.

#### Turning your phone OFF

1. Press  for a few seconds until the LCD screen is turned off.

### Access codes

You can use the access codes described in this section to avoid unauthorised use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using the **Change codes** feature [Menu 9-4-5]. See page 106.

#### PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorised use. The PIN code is usually supplied with the SIM card. When the **PIN code request** is set to **Enable**, your phone will request the PIN code every time the phone is switched on. When the **PIN code request** is set to **Disable**, your phone connects to the network directly without the PIN code.



### **PIN2 code (4 to 8 digits)**

The PIN2 code, supplied with some SIM cards, is required to access functions such as **Advice of Call Charge** and **Fixed dial number**. These functions are only available if supported by your SIM card. Check with your network for further information.

### **PUK code (4 to 8 digits)**

The PUK (PIN Unblocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your network operator for the code. If you lose the code, also contact your network operator.

### **PUK2 code (4 to 8 digits)**

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, also contact your network operator.

### **Security code (4 to 8 digits)**

The security code protects the unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the **Reset settings** menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorised use of the phone. The security code default setting can be modified from the **Security settings** menu.

### **Barring password**

The barring password is required when you use the **Call barring** function. You obtain the password from your network operator when you subscribe to this function. See page 105 for further details.



## General functions

### Making and answering calls

#### Making a call

1. Make sure your phone is switched on.
2. Enter a phone number, including the area code. To edit a number on the LCD screen, press the right/left navigation keys to move the cursor to the desired position or simply press the clear key (C) to erase one digit at a time.
  - ▶ Press and hold the clear key (C) to erase the entire number.
3. Press the send key (↵) to call the number.
4. To end the call, press the end key (⏏) or the right soft key. You can also end the call by closing the folder.

#### Making a call using the send key

1. In standby mode, press the send key (↵), and the latest incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the up/down navigation key.
3. Press ↵.

#### Making an international call

1. Press and hold the (03) key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press ↵.

#### Ending a call

When you have finished your call, press the end (⏏) key.



## Making a call from the phonebook

You can save the names and phone numbers dialed regularly in the SIM card and/or phone memory, which is Phonebook. You can dial a number by simply looking up the desired name in the Phonebook. For further details on the Phonebook feature, please refer to page 54-58.

## Adjusting the volume

If you want to adjust the earpiece volume during a call, use the side keys (|). Press the up side key to increase and down side key to decrease the volume.



### Note

- In standby mode, pressing the side keys adjusts the key tone volume.


## Answering a call

When you receive a call, the phone rings. If the caller can be identified, the caller's phone number (or name and image if saved in the phonebook) is displayed. This phone supports the Photo Caller ID feature.

1. To answer an incoming call, open the phone. (When **Flip open** has been set as the answer mode. See page 100 [Menu 9-2-2].)




### Note

- If **Any key** has been set as the answer mode (see page 100), any key press will answer a call except for the  or the right soft key.

 


## General functions


- ▶ To reject an incoming call, press and hold one of the side keys on the left side of the phone without opening the phone.
- ▶ You can answer a call while using the Phonebook or other menu features.

2. To end the call, close the folder or press the  key.

### Manner mode (Quick)

You can activate the manner mode by pressing and holding down the left navigation key () after opening the phone.

### Signal strength

You can check the strength of your signal by the signal indicator () on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving near to a window may improve reception.

### Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in the phonebook, writing a message, creating a personal greeting or scheduling events in the calendar all require entering text.

The following text input methods are available in the phone.

#### T9 mode

 
This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.



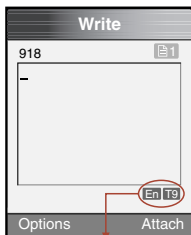 
## ABC mode

This mode lets you enter letters by pressing the key labeled with the required letter once, twice, three times or more until the letter is displayed.

 
## 123 mode (Number mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed.

## Changing the text input mode

 
 


text input mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the lower right corner of the LCD screen.
2. Change the text input mode by pressing . You can check the current text input mode in the lower right corner of the LCD screen.

## ► Using the T9 mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary. You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.



## General functions

- The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.
- If the word is still incorrect after typing completely, press the down navigation key once or more to cycle through the other word options.



### Example

- Press to type **Good**.
- Press [Down navigation key] to type **Home**.

- If the desired word is missing from the word choice list, add it using the ABC mode.
  - You can select the language of the T9 mode. Press the left soft key [Options], then select **T9 languages**. Select the desired language of T9 mode. You can also turn off the T9 mode by selecting **T9 off**. The default setting on the phone is T9 enabled mode.
2. Enter the whole word before editing or deleting any keystrokes.
  3. Complete each word with a space by pressing the key.
    - ▶ To delete letters, press . Press and hold down to erase entire words.

 
 


 
 
 
### Note

- To exit from the text input mode without saving your input, press . The phone goes back to standby mode.



## ► Using the ABC mode

 
Use the  to  keys to enter your text.

1. Press the key labeled with the required letter:
  - Once for the first letter
  - Twice for the second letter
  - And so on
2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to clear the whole display.



### Note

- Refer to the table below for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Upper case	Lower case
	., - ? ! ' @ : 1	., - ? ! ' @ : 1
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
0	Space key, 0 (Long press)	Space key, 0 (Long press)





## General functions

### ► Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a text message (a telephone number, for example).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

### Phonebook

You can store phone numbers and their corresponding names in the memory of your SIM card. In addition, you can store up to 255 numbers and names in the phone memory.

The SIM card and phone are both used in the same way in the **Phonebook** menu. (Refer to page 54-58 for details.)

### In-call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key [Options].

#### **During a call**

The menu displayed on the handset screen during a call is different to the default main menu displayed when in standby mode, and the options are described below.

#### **Making a second call**


You can get a number you wish to dial from the phonebook to make a second call. Press the right soft key then select **Search**. To save the dialled number into the phonebook during a call, press the right soft key then select **Add new**.


#### **Switching between two calls**

To switch between two calls, press the left soft key then select **Swap**.





## Answering an incoming call

To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting. This feature, known as **Call waiting**, is only available if your network supports it. For details of how to activate and deactivate it see **Call waiting** [Menu 9-2-4] on page 100.

If **Call waiting** is activated, you can put the first call on hold and answer the second, by pressing  or by selecting left soft key, then **Hold & Answer**. You can end the current call and answer the waiting call by selecting left soft key and then **End & Answer**.

## Rejecting an incoming call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the left soft key [Menu] key and selecting the **Conference / Reject** or by pressing the .

## Muting the microphone

You can mute the microphone during a call by pressing the [Menu] key then selecting **Mute on**. The handset can be unmuted by selecting **Mute off**. When the handset is muted, the caller cannot hear you, but you can still hear them.

## Switching DTMF tones on during a call

To turn DTMF tones on during a call, press the left soft key, and then select **DTMF on**. DTMF tones can be turned off the same way. DTMF tones allow your phone to make use of an automated switchboard.




## General functions

### **Multiparty or conference calls**

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network operator supports this feature. A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls can be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call. These options are all available from the In-Call menu. The maximum callers in a multiparty call are five. Once started, you are in control of the multiparty call, and only you can add callers to the multiparty call.

### **Making a second call**

You can make a second call while currently on a call. Enter the second number and press the  key. When the second call is connected, the first call is automatically placed on hold. You can swap between calls by pressing the left soft key then selecting Swap.

### **Setting up a conference call**

Place one call on hold and while the active call is on, press the left soft key and then select the **Conference / Join all**.

### **Putting a conference call on hold**

Press the left soft key, then select the **Conference / Hold all**.

### **Activate the conference call on hold**

Press the left soft key, then select the **Conference / Join all**.



## Adding calls to the conference call

To add a call to an existing conference call, press the left soft key, then select the **Conference / Join all**.


## Displaying callers in a conference call

To scroll through the numbers of the callers who make up a conference call on the handset screen, use the up/down navigation keys.

## Taking a private call during a conference call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the **Conference / Private** to put all the other callers on hold.

## Ending a conference call

To end a conference call, press the  key. You can also end a conference call by selecting **End call** after pressing the left soft key.



# Menu Tree



## 1 Profiles

- 1 Vibrate only
- 2 Silent
- 3 General
- 4 Loud
- 5 Headset
- 6 Car



## 2 Call register

- 1 Missed calls
- 2 Received calls
- 3 Dialed calls
- 4 Delete recent calls
- 5 Call durations
- 6 Call costs
- 7 Cost settings
- 8 GPRS information



## 3 Tools

- 1 My stuff
- 2 Favorite
- 3 Unit converter
- 4 Calculator
- 5 World time
- 6 Voice recorder
- 7 Activate IrDA



## 4 Organiser

- 1 Phonebook
- 2 Alarm clock
- 3 Scheduler
- 4 Memo



## 5 Messages

- 1 Text messages
- 2 Multimedia messages (MMS)
- 3 Voice messages
- 4 Info service
- 5 Templates
- 6 Name card
- 7 Memory status



## 6 Camera

- 1 Take pictures
- 2 Take movies
- 3 Frame shot
- 4 My photo gallery
- 5 My movie gallery
- 6 Camera settings
- 7 Memory status



## 7 Multimedia

- 1 MP3 player
- 2 Game
- 3 Java



## 8 Service

- 1 Internet
- 2 SIM service  
This menu depends on the SIM card and network services.



## 9 Settings

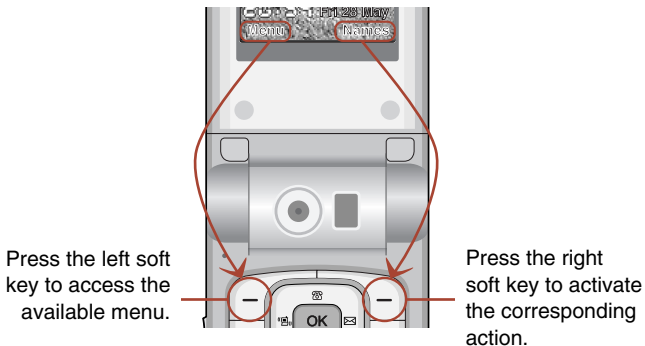 
- 1 Date & Time
- 2 Call settings
- 3 Phone settings
- 4 Security settings
- 5 Network settings
- 6 GPRS settings
- 7 Factory reset



## Selecting functions and options

Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked (☐) and (☐). Each menu and sub-menu lets you view and alter the settings of a particular function

The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.





In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups.

There are six preset profiles: **Vibrate only**, **Silent**, **General**, **Loud**, **Headset** and **Car**. Each profile can be personalised.

Press the Menu key ( $\square$ ) and select **Profiles** using navigation keys.

### Changing the profile [Menu 1-x-1]

1. A list of profiles is displayed.
2. In the profile list, scroll to the profile you want to activate and press the left soft key [Select] or OK key.
3. Then, select **Activate**.



#### Note

- When a headset or a hands-free kit is connected to the phone, **Headset** profile or **Car** profile is automatically activated respectively.

### Customising profiles – Personalise [Menu 1-x-1]/[Menu 1-x-2]

You can customise profiles except **Vibrate only** and **Silent**. Scroll to the desired profile in the profile list. After pressing the OK key or the left soft key, select **Personalise**. The profile setting options open. Set the options as required.

- **Incoming call alert:** Set the alert type for incoming calls.
- **Ring tone:** Select the desired ring tone from the list. Scroll through the list using up/down navigation keys. You can hear the desired tone prior to making a selection.
- **Ring volume:** Select the desired volume level of the ringing tone.
- **Message alert type:** Set the alert type for messages.





## Profiles [Menu 1]

- **Message tone:** Select the alert tone for messages.
- **Keypad tone:** Select the desired keypad tone.
- **Keypad volume:** Set the desired volume level of the keypad tone.
- **Effect sound volume:** Set the desired volume level of effect sound.
- **Power on/off volume:** Set the desired volume level of the ringing tone when switching the phone on/off.
- **Automatic answer:** (only in **Headset** profile and **Car** profile) You can activate the automatic answer feature. Select the time before answering automatically.
- **Powerbell setting:** (only in **General**, **Loud**, **Headset**, and **Car** profiles) If you set this **On**, the ringing volume will gradually increase from level 1 up to the level you set when you receive a call.

### Customising profiles – Alert for [Menu 1-1-2]/[Menu 1-2-2]

You can set the phone to alert for the calls from some caller groups even when **Vibrate only** profile or **Silent** profile is activated.

1. Tick the caller groups to alert for by pressing the left soft key [On].
2. Press the right soft key [Save] to save the setting.

### Customising profiles – Rename [Menu 1-3-3]/[Menu 1-4-3]

You can rename a profile and give it any name you want. **General** profile and **Loud** profile can be renamed.

1. To change the name of a profile, scroll to the profile in the profile list and after pressing the OK key or the left soft key, select **Rename**.
2. Key in the desired name and press the OK key or the left soft key [Save].

## Call register [Menu 2]



(Dependent on the network service)

You can check the record of missed, received, and dialled calls only if the network supports Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times and costs.

Press the Menu key ( $\square$ ) and select **Call register** using navigation keys.

### Missed calls [Menu 2-1]

This option lets you view the last 10 unanswered calls. After selecting a phone number, you can make a call to the number by pressing the send key ( $\square$ ). And using the left soft key [Options], the following options are available.

- **Write text message:** You can send a text message to this number.
- **Write multimedia message:** You can send a multimedia message to this number.
- **Edit:** Edits the phonebook entry.
- **Save (Shown if the name is not saved in the phonebook):** Saves the number creating a new contact in the phonebook.
- **Add to name (Shown if the name is not saved in the phonebook):** You can add the number to an existing phonebook entry.
- **Delete:** Deletes the call from the list.
- **View details:** Displays the call information.



#### Note


- You can delete all the call records from the list using the **Delete recent calls** menu [Menu 2-4].



## Call register [Menu 2]

(Dependent on the network service)

### Received calls [Menu 2-2]

This option lets you view the last 10 incoming calls. After selecting a phone number, you can make a call to the number by pressing the send key () . And using the left soft key [Options], the following options are available.


- **Write text message:** You can send a text message to this number.
- **Write multimedia message:** You can send a multimedia message to this number.
- **Edit:** Edits the phonebook entry.
- **Save (Shown if the name is not saved in the phonebook):** Saves the number creating a new contact in the phonebook.
- **Add to name (Shown if the name is not saved in the phonebook):** You can add the number to an existing phonebook entry.
- **Delete:** Deletes the call from the list.
- **View details:** Displays the call information.



#### Note

- You can delete all the call records from the list using the **Delete recent calls** menu [Menu 2-4].

### Dialled calls [Menu 2-3]

This option lets you view the last 10 outgoing calls (called or attempted). After selecting a phone number, you can make a call to the number by pressing the send key () . And using the left soft key [Options], the following options are available.

- **Write text message:** You can send a text message to this number.
- **Write multimedia message:** You can send a multimedia message to this number.
- **Edit:** Edits the phonebook entry.



- **Save (Shown if the name is not saved in the phonebook):** Saves the number creating a new contact in the phonebook.
- **Add to name (Shown if the name is not saved in the phonebook):** You can add the number to an existing phonebook entry.
- **Delete:** Deletes the call from the list.
- **View details:** Displays the call information.



#### Note

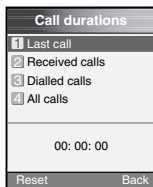 
- You can delete all the call records from the list using the **Delete recent calls** menu [Menu 2-4].

## Delete recent calls [Menu 2-4]

Use this to clear up the missed call list, received call list, or dialled call list. You can also clear up all call lists at a time by selecting **All calls**.

## Call durations [Menu 2-5]

Use this to view the duration of your incoming and outgoing calls. You can check each call duration at the bottom of screen while scrolling using the up/down navigation keys. Pressing the OK key or the left soft key [Reset] resets the call timer of selected call. To prevent accidental reset, you are requested to enter the security code.



- **Last call:** Length of the last call
- **Received calls:** Length of the incoming calls
- **Dialled Calls:** Length of the outgoing calls
- **All calls:** Total length of all calls made or received calls since the timer was last reset.



## Call register [Menu 2]

(Dependent on the network service)



### Notice

- The actual time invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, etc.

## Call costs [Menu 2-6]

This network service allows you to check the last call cost and the total call cost. The call cost is displayed on the bottom of the LCD screen. To reset the call cost, press the left soft key [Reset] or the OK key. You are requested to enter the PIN2 code



### Note

- The actual cost invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, taxes, etc.

## Cost settings [Menu 2-7]

- **Call cost's limit:** This network service allows you to limit the cost of your calls to the number of charging units or units of currency. You can make or receive a call up to the specified cost limit. You can change the call cost's limit after entering the PIN2 code.
- **Set tariff:** You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the **Currency** or **1 Unit** in this menu, you need the PIN2 code.



### Note

- When all units have been used, no calls can be made except emergency calls. Depending on the SIM card, you need the PIN2 code to set a call cost limit.

- **Auto display:** This network service allows you to see automatically the cost of your last call. If you select **On** in **Auto display** menu, you can see the cost of the last call when the call is released.

## **GPRS information [Menu 2-8]**

You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you are online. (GPRS stands for General Packet Radio Service.)

### **WAP information [Menu 2-8-1]**

You can check the data volume and the time spent using WAP.

On the selected menu, pressing the left soft key [Reset] or the OK key clears the counter.

### **External device [Menu 2-8-2]**

You can check the data volume and the time spent using GPRS with an external device such as a serial port.

### **Total data [Menu 2-8-3]**

You can check the total amount of data through WAP and the external device.



## Tools [Menu 3]

Press the Menu key ( $\square$ ) and select **Tools** using navigation keys.

### **My stuff [Menu 3-1]**

**My stuff** My stuff is organised into 4 folders: Picture, Video, Animation, and Sound. The downloaded contents through WAP, MMS or EMS are stored in each folder. You can view, delete or control the downloaded contents.

#### **Picture [Menu 3-1-1]**

Using the left soft key [Options], you can send a picture via SMS or MMS, set it as a wallpaper, rename or delete it.

#### **Animation [Menu 3-1-2]**

Using the left soft key [Options], you can send an animation via MMS, set it as a wallpaper, rename or delete it.

#### **Sound [Menu 3-1-3]**

Using the left soft key [Options], you can send a picture via SMS or MMS, set it as a ringtone, rename or delete it.



## Favorite [Menu 3-2]

In this menu, you can construct your own menu with the frequently used menus for easy access.

In standby mode, you can access the Favorite menu by pressing the down navigation key ( $\nabla$ ).

1. After selecting the desired location from the menu number 1 to 9, press the left soft key [Add].
2. Select the menu you wish to add by pressing the left soft key [Select]. The menu is added in the Favorite menu, with the pop-up message, "Activated".



### Note

- You can add up to 9 menus.

After making up the Favorite menu, in each favorite menu, the following options are available by pressing the left soft key [Options].

- **Select:** Selects the menu.
- **Change:** You can change the favorite menu with the another menu.
- **Delete:** Deletes the selected favorite menu.
- **Delete all:** Deletes all the favorite menus.
- **View details:** Displays the route to the favorite menu.





## Tools [Menu 3]

### Unit converter [Menu 3-3]

 
This converts any measurement from one unit to another.

There are 4 types that can be converted into units: Length, Surface, Weight and Volume.

1. Select one of four unit types by pressing the left soft key [Unit].
2. Move to the Current unit section by pressing the down navigation key.
3. Select the unit you want to convert using the left/right navigation keys.
4. Move to the Convert unit section by pressing the down navigation key.
5. Select the unit you want to convert to, using the left/right navigation keys.
6. Input numbers using the numeric keys. Conversion is calculated automatically.



#### Note

- You can input a decimal number by pressing the  key.

### Calculator [Menu 3-4]

Using this feature, you can use the phone as a calculator.



 
The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

#### Using the calculator

1. Enter the first number using the numeric keys.
2. Press the corresponding navigation key to select a mathematical function.



### Note

- To erase any mistake or clear the display, use the  key.
- To include a decimal point, press the  key.
- To include a minus sign, press the  key.

3. To calculate the result, press the left soft key [Result] or OK key.
4. After calculation, press the left soft key [Clear] to return to the initial state.

## World time [Menu 3-5]

You can check the current time of Greenwich Mean Time (GMT) and 52 major cities around the world, using the left/right navigation keys.

The screen shows the city name, current date and time.

To select the time zone in which you are located, proceed as follows:

1. Select the city corresponding to your time zone by pressing the left/right navigation keys one or more times. The local date and time are displayed.
2. If you want to change the time display in standby mode to the selected time, press the left soft key [Set].



### Note

- The time zone setting of each city in **World time** menu may be affected by network condition.



## Tools [Menu 3]

### Voice recorder [Menu 3-6]

You can record a memo. You can record up to 3 voice memos up to a maximum of 30 seconds each.

You can play or delete the recorded memo or record new voice memo using the left soft key [Options] key.

#### Record new [Menu 3-6-1]

1. To record a voice memo, select **Record new**.
2. Once recording is started, the message 'Recording...' and the recording time is displayed.
3. When you finish recording, press the left soft key [Save].



#### Note

- If all memo locations are full, you must delete an old memo before recording a new one.

#### View list [Menu 3-6-2]


The phone shows the voice memo list, starting with the most recent memo. You can play or delete the recorded memo, or send it via MMS by pressing the left soft key [Options]. You can also delete all the memos.

### Activate IrDA [Menu 3-7]

This feature allows you to send or receive data/fax through the infrared port. To use an infrared connection:

- Install the modem driver for receiving or sending the data/fax.
- Install the network dial-up software supplied by your network provider or fax application program for a fax call on your PC.
- Configure and activate an IrDA-compliant infrared port on your PC.



- Activate the infrared feature on the phone; the  symbol appears on the right side at the bottom of the display.
- Call the network service number given to you by the service provider.

If there is no communication between your phone and the IrDA-compliant device within 30 seconds of activation of the feature, it is automatically deactivated.

For further details, contact your network provider.



### Note

- PC Sync is a program for data exchange between PC and the phone by a data cable. Therefore, if you want to use this function, you need the accessory kit. For more information, you can use the PC Sync Help file on the CD.
- With this IrDA feature, you can transfer anything you want such as phonebook entries, messages, pictures, video clips, etc.



## Organiser [Menu 4]

Press the Menu key ( $\square$ ). Select **Organiser** using navigation keys.

### Phonebook [Menu 4-1]

You can save phone numbers and their corresponding names in the memory of your SIM card. In addition, you can save up to 255 numbers and names in the phone memory.

Press the left soft key [Menu] in standby mode, then select **Organiser** → **Phonebook**.

Or, press the right soft key [Names] in standby mode.

### Search [Menu 4-1-1]

1. In standby mode, press right soft key [Names]. Select **Search**.
2. Enter the start of the name that you wish to find.
3. After finding the desired name, you can make a call to the number by pressing the send key ( $\square$ ). Or press the left key [Options] to use the following options.
  - **Write text message:** Use this to write a text message to the name.
  - **Write multimedia message:** Use this to write a multimedia message to the name.
  - **Photo view:** Shows all the images stored in the phonebook. You can search the phonebook by the photo.
  - **Voice:** Record the name of the selected phonebook entry for voice-activated dialling.
  - **Edit:** Edits the name, number the listing group and photo.
  - **Copy:** Use this to copy the phonebook entry from SIM to the phone memory or vice versa. Select whether to keep the original phone number or not.
  - **Delete:** Deletes the phonebook entry.
  - **View details:** To view details of the selected name.



## Add new [Menu 4-1-2]

You can add a phonebook entry using this function.

There are 2 memories: Phone memory and SIM memory. To select the memory, go to **Set memory** [Menu 4-1-8]. The phone memory capacity is 255 entries. You can enter up to 20 characters in each name in the phone memory. The SIM card memory capacity depends on the SIM card.

1. Open the **Phonebook** first by pressing the right soft key [Names] in standby mode.
2. Scroll to highlight **Add new**, and press [OK]
3. You can add new phonebook entries to SIM memory or the phone memory. To select the memory, go to **Set memory** [Menu 4-1-8]. (Refer to page 58.)

### • Adding new entries into SIM memory

You can enter a name and a number, select the caller group, and attach a photo image. (Depends on the SIM)

### • Adding new entries into the phone memory

You can enter a name, numbers, E-mail address and memo, select the caller group, and attach a photo image.

### Tip

- Pause feature: When you call automated systems (such as voice mail or credit billing numbers), you often have to enter a series of numbers. Instead of entering these numbers by hand, you can store the numbers in the phonebook using the Pause feature. Between numbers to insert a pause, press and hold down **[#5\*]**.



 

### Note

- This phone supports the Photo caller ID feature.



## Organiser [Menu 4]

### Speed dials [Menu 4-1-3]

You can assign any of the keys  to  with a name list entry. You can call directly by pressing this key for 2-3 seconds.

1. Open the **Phonebook** first by pressing the right soft key [Names] in standby mode.
2. Scroll to **Speed dials**, then press [OK].
3. To add a number to **Speed dials**, press the left soft key [Add]. Search the name through the phonebook.
4. You can change or delete a speed dial number, make a call or send a message by pressing the left soft key [Options].

### Voice list [Menu 4-1-4]

You can check all the phone numbers which have voice-activated dialling assigned to them. You can also call directly by pressing the [Send] key. After selecting a phone number using up/down navigation keys and press the left soft key [Options]. You can see the following submenus.

- **Add new:** Adds a new phone number for voice-activated dialling.
- **Play:** Plays back the voice tag assigned to the phone number.
- **Change:** Changes the voice tag assigned to the phone number.
- **Delete:** Deletes the voice assigned to the phone number.
- **Delete all:** Deletes all voice-activated dialling numbers.



#### Note

- You can enter up to 10 phone numbers for voice dial.



## Caller groups [Menu 4-1-5]

There are 6 pre-defined groups, as well as one additional group labeled **Others**, where you can create lists.

1. Select **Caller groups**. Every group list will be displayed: **Family**, **VIP**, **Friends**, **Colleague**, **Group 1**, **Group 2**, and **Others**.
2. Select the group name that you want to manage by pressing the left soft key [Options]. The following submenus will be displayed except for **Others**.
  - **Add member**: Add a member to the group.
  - **Member list**: Displays the member list in the group.
  - **Group ring tone**: Use this to select the ring tone to be used when you receive a voice phone call from a person in the group.
  - **Group icon**: Use this to select the graphic icon to be displayed when you receive a call from a person in the group.
  - **Rename**: Assigns a new name to the group.
  - **Delete member**: Delete a member from the group.

## Copy all [Menu 4-1-6]

You can copy/move entries from the SIM card memory to the phone memory and vice versa.

- **SIM to Phone**: Use this to copy the entry from the SIM Card to Phone memory.
- **Phone to SIM**: Use this to copy the entry from the Phone memory to the SIM Card.

The following options are available.


- **Keep original**: When copying, the original dial numbers are kept.
- **Delete original**: When copying, the original dial numbers will be erased.





## Organiser [Menu 4]

### Delete all [Menu 4-1-7]

You can delete all entries in the **SIM**, **Phone**, and **Voice list**. Except for Voice list, this function requires the security code. Press  to return to standby mode.

### Set memory [Menu 4-1-8]





You can select the memory for the Phonebook feature between the SIM and the phone. If you select **Variable**, when adding entry, the phone will ask where to save the number.

### Information [Menu 4-1-9]

- **Check memory:** You can check the current memory status of the SIM card and phone memory.
- **Own number (SIM dependent):** Use this to display your phone number in the SIM card.

### Alarm clock [Menu 4-2]

You can set the alarm to go off at a specified time.

1.  **Alarm on/off:** Select **On** using the left/right navigation key. To deactivate the alarm function, select **Off**.
2.  **Alarm time:** Enter the alarm time using the numeric keys.
3.  **Repetition:** Select the desired one from **Once**, **Daily**, **Weekly** and **Monthly** using the left/right navigation key.
4.  **Alarm melody:** Select the desired alarm melody using the left/right navigation key.
5. Press the left soft key [Set] or the OK key.




 


 

When the alarm function is activated,  is shown in standby mode.


When the alarm time is reached, it sounds the alarm melody.

► To turn off the alarm, press the right soft key [Quit].

## Scheduler [Menu 4-3]


When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using navigation keys. On the calendar, you can use the following keys.

Each press of	 skips back a year.
	 skips forward a year.
	 or  skips back a month.
	 or  skips forward a month.

To go back to the today's date, press .

To enter a schedule note on the selected day,


1. Press the left soft key [Select] and select **Add new**.
2. Enter a note. And set the alarm time.
3. Select the desired one from the repetition options.
4. Select when to alarm.

 **Note:** The Scheduler alarm will work even if the phone is switched off.

5. Press the left soft key [Save] or the OK key.



## Organiser [Menu 4]

After a schedule is entered on a date, the date is shown in a different colour and  appears on the right bottom of the screen.

This function reminds you of your schedule. The phone will sound an alarm tone if you set the phone to do so.

The following options are available.

**Add new:** You can edit a maximum of 40 characters and take up to 30 notes.

**View all schedules:** Shows the notes that are set for all days. Use the up/down navigation keys to browse through the note lists.

**Go to date:** Use this to jump to a specific date. Enter the date using the numeric keys and the left/right navigation keys

**Calendar:** Goes back to the calendar.

**Edit:** Use this to edit the schedule.

**Scheduler tone:** The phone can sound an alarm tone when the scheduled date and time for an event has been reached. Select the desired alarm tone.

**Delete:** Use this to delete the schedule

**Delete past:** You can delete expired schedule notes that have already been notified.

**Delete all:** Use this to delete all schedules. You are asked to confirm this action.



## Memo [Menu 4-4]

### Add new [Menu 4-4-1]

Use this to add a new memo. The phone can store up to 20 memos and 60 characters for each memo. Input the memo and then press the left soft key [Options].

- **Save:** Allows you to save the memo.
- **T9 languages:** Select the T9 language to use in the memo.
- **Exit editor:** Allows you to exit from the memo editor.

### View list [Menu 4-4-2]

Select this menu to check the memos you've taken.

1. Select a memo.
2. Press the left soft key [Select].



#### Note

- The selected memo is opened. And using the up/down navigation keys, you can directly view the other memos without going back to the memo list.

3. Press the left soft key [Options]. The following options are available.
  - **Edit:** You can edit the selected memo.
  - **Delete:** Deletes the selected memo.
  - **Delete All:** Deletes all memos. You are asked to confirm this action.




## Messages [Menu 5]


Press the Menu key ( $\square/f$ ) and select **Messages** using navigation keys.


### Text messages [Menu 5-1]

Your phone receives voice mail notification messages and Short Message Service (SMS) messages.

Voice mail and SMS are network services. Please contact your network operator for more information.

When the  icon appears, you have received voice mail.

When the  icon appears, you have received a new text message.

If the message memory is full, a message is displayed, the  icon flashes and you cannot receive any new messages.

Use the **Delete** option in the **Inbox** menu to delete obsolete messages.

Once there is space in the message memory, any undelivered SMS messages will be received (provided sufficient space is available).

### Write [Menu 5-1-1]

You can write and edit text messages up to 6 pages. (approximately 918 characters)


1. Key in your message. For details on how to enter text, refer to page 30 through 34 (Entering Text).
2. After you complete the message, press the left soft key [Options] to select required option. The following options are available.
  - **Send** : Enter the number or select the number from the phonebook or the recent numbers using the left soft key [Options]. You can send a message up to 5 phone numbers at a time.



- **Save to draft:** Allows you to save the message so that it can be sent later.
  - **T9 languages:** Select the language for T9 input mode. You can also deactivate T9 input mode by selecting 'T9 off'. For further details on the T9 mode, refer to page 30 through 32.
  - **Clear text:** Erases the whole text.
  - **Exit editor:** Allows you to exit from the **Write** menu.
3. You can also send attachments with the message by pressing the right soft key [Attach], while you're entering a message.
- **Symbol:** You can attach special characters.



#### Note

- You can also insert special characters by pressing () while keying in a message.

- **Emoticon:** You can put various emoticons preset in the phone.
- **Picture:** You can send and receive text messages that contain pictures, known as 'Picture messages'. Several preset pictures are available in the phone and they can be replaced with new ones received from other sources.
- **Animation:** Attaching an animation in a message can be done through EMS (Enhanced Messaging Service). You can select any of 15 animations in the phone.
- **Sound:** If available, you can attach a sound available for a short message.
- **Text template:** You can use text templates already set in the phone.
- **Phone number:** You can add phone numbers in the message.
- **Name card:** You can attach your name card.




## Messages [Menu 5]







### Inbox [Menu 5-1-2]

Received text messages and page messages can be searched and the contents can be viewed.

Received messages are displayed in date order.

Press the menu key and select **Messages** → **Text message** → **Inbox**.

Or, you can take a shortcut by pressing the right navigation key (  ) in standby mode.

Icon	Description
	Read SIM message
	Unread SIM message
	Read message
	Unread message
	Read delivery report
	Unread delivery report



#### Note

- SIM message refers to the message saved in the SIM memory. And the network distinguishes an incoming message into the SIM message or just message.





Each received message has the following options available. Press the left soft key [Options].

- **Reply:** Replies to the received message.
- **Forward:** Forwards a received message to other recipients.
- **Return call:** Calls the sender's phone.
- **Extract:** Extracts a picture, sound, text web page or email address from the message. These will be saved in My folder, Phonebook, or bookmarks.
- **Delete:** Deletes the selected message from the Inbox.

### Outbox [Menu 5-1-3]

You can view the list and contents of sent messages in this menu and can also verify if the transmission was successful.

Icon	Description
	Sent SIM message
	Sent message

The following options are available.

- **Forward:** Forwards the current message to other recipients.
- **Delete:** Deletes the selected message from the Outbox.

### Draft [Menu 5-1-4]

In this menu, you can see the message list saved as draft. Scroll through the list using the up/down navigation keys. You can send draft messages by pressing the left soft key [Options].





## Messages [Menu 5]

### Settings [Menu 5-1-5]

This menu lets you set up the default SMS information.


- **Message types:** Sets the default message type (Text, Voice, Fax, Paging, X.400, E-mail, and ERMES). The network can convert the messages into the selected format.
- **Validity period:** Sets the length of time for which your text messages will be saved at the SMS center while attempts are made to deliver them to the recipient. Possible values are 30 minutes, 1 hour, 6 hours, 1 day, 1 week and the maximum authorised by your network operator.
- **Paper:** You can insert one of 4 wallpaper images to a text message.
- **Delivery report:** Activates or deactivates the report function. When this function is activated, the network informs you whether or not your message has been delivered.
- **Pay for reply:** Allows the recipient of your SMS message to send you a reply via your message centre, if the service is provided by the network.
- **Message centre number:** Saves or changes the number of your SMS centre when sending text messages. You must obtain this number from your service provider.
- **Bearer setting:** Selects GPRS or GSM. Contact your network operator or service provider for information related to setting a selected bearer, pricing and connection speed.

### Multimedia messages (MMS) [Menu 5-2]

A multimedia message can contain text, images, and/or sound clips. This feature can be used only if it is supported by your network operator or service provider. Only the devices that offer compatible multimedia message or e-mail features can receive and send multimedia messages.



## Write [Menu 5-2-1]

1. Key in the text message. Using the right soft key, you can input symbols, numbers and emoticons, or select the text input mode. After the text message input, press the left soft key [Done].
2. Add an image and/or sound. You can move to the next section using the up/down navigation.
3. You can add a slide by moving the cursor on , then pressing the OK key or the left soft key [Select]. You can also add a slide using the right soft key [Menu].



### Note

- Up to 9 slides are affordable.









4. Press the right soft key [Menu]. The following options are available.
  - **Send:** Select this to send the multimedia message. This phone supports multiple numbers and e-mail addresses.
  - **Preview:** Displays the multimedia message you wish to send.
  - **Save:** You can save the multimedia message in draft or as a template.
  - **Delete:** Deletes the message you're been creating.
  - **Slide duration:** Set the slide duration. Enter the desired duration using the numeric keypad.
  - **Slide format:** Select where to align the image.
  - **Add slide:** Adds a slide before of after the current slide.
  - **Remove slide:** Deletes the selected slide.



## Messages [Menu 5]

### Inbox [Menu 5-2-2]

You will be alerted when you have received messages. They will be saved in the Inbox. You can identify each message by icons. For details, see the icon description below.

Icon	Description
	Read normal message
	Unread normal message
	Read notification message
	Unread notification message
	Read high priority message
	Unread high priority message
	Read low priority message
	Unread low priority message

If the phone has 'No space for messages', you can make space by deleting messages, media and applications.

- **Timer stop:** The Timer stop menu is displayed when you receive a message including various pictures. Usually, the pictures are sequentially displayed automatically. However, if you select this menu, you can see the next picture by pressing the left soft key [Next] manually.
- **Timer start:** Select this to activate the slide show automatically again.
- **Previous slide:** Displays the previous page.



- **Restart:** Restarts the slide show from the first slide.
- **Save message:** Saves a multimedia message in draft form or as a template.
- **Save items:** Extracts pictures or sounds. They will be saved in My folder or Phonebook.
- **Details:** Displays information about received messages: Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.
- **Reply:** Replies to the sender.
- **Reply all:** Replies to all senders.
- **Delete message:** Deletes the current message.
- **Forward:** Forwards the selected message to other recipients.

### Outbox [Menu 5-2-3]

Use this to see sent messages. For each sent message, you can see the delivery status.

Icon	Description
	Sent

- **Timer stop:** The Timer stop menu is displayed when you receive a message including various pictures. Usually, the pictures are sequentially displayed automatically. However, if you select this menu, you can see the next picture by pressing the left soft key [Next] manually.
- **Timer start:** Select this to activate the slide show automatically again.
- **Previous slide:** Displays the previous page.



## Messages [Menu 5]

- **Restart:** Restarts the slide show from the first slide.
- **Save message:** Saves a multimedia message in draft form or as a template.
- **Save items:** Extracts pictures or sounds. They will be saved in My folder or Phonebook.
- **Details:** Displays information about received messages: Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.
- **Delete message:** Deletes the current message.
- **Forward:** Forwards the selected message to other recipients.

### Draft [Menu 5-2-4]

Using this menu, you can preset up to five multimedia messages that you use most frequently. This menu shows the preset multimedia message list.

The following options are available.

- **Send:** Select this to send the multimedia message. This phone supports multiple numbers and e-mail addresses.
- **Preview:** Displays the multimedia message you wish to send.
- **Save:** You can save the multimedia message in draft or as a template.
- **Delete:** Deletes the message you're been creating.
- **Slide duration:** Set the slide duration. Enter the desired duration using the numeric keypad.
- **Slide format:** Select where to align the image.
- **Add slide:** Adds a slide before of after the current slide.
- **Remove slide:** Deletes the selected slide.



## Settings [Menu 5-2-5]

Via this menu, you can set up the default multimedia message information.


The following options are available.

- **Message title:** Enter the message title.
- **Slide duration:** Set the duration of each slide.
- **Alignment:** Select where to align the image.
- **Valid period:** Set the duration for keeping messages on the network server.
- **Auto download**
  - **On:** If you select this, messages are downloaded automatically on receipt.
  - **Confirm:** Requires you to confirm you want to download the message.
  - **Off:** Defers downloading messages.
- **Profiles:** See page 96 for further information.

## Voice messages [Menu 5-3]

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network).

Before using this feature, you must enter the voice server number obtained from your network operator.

When a new voice message is received, the  symbol will be displayed on the screen. Please check with your network provider for details of their service in order to configure the handset correctly.



## Messages [Menu 5]

### Listen to voice messages [Menu 5-3-1]

Once this option has been selected, simply press the left soft key [OK] to listen to voice messages. You can also hold down the [1] key in standby mode to listen to voice messages.

### Voice mail centre [Menu 5-3-2]

You can input and set the voice mailbox centre.

### Info service [Menu 5-4]

Info service messages are text messages sent by the network to mobile phone users. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. Each type of information is associated with a number, which can be obtained from the network operator. When you receive an info service message, a popup message will indicate a new message receipt or the info service message will be displayed directly. In standby mode, the following options are available when viewing info service messages.

#### Receive [Menu 5-4-1]

Use this to enable or disable the reception of broadcast messages.

#### Inbox [Menu 5-4-2]

The list of received broadcast messages can be searched and the contents viewed.

#### Topics [Menu 5-4-3]

##### (Dependent to network and subscription)

To create new topics, press the left soft key [Options] then select **Add new**. If you already have topics, you can deactivate, edit, or delete them by using the left soft key [Options].



### **Alert [Menu 5-4-4]**

Set alert **On** or **Off** for a new broadcast message.

### **Auto display [Menu 5-4-5]**

If you select this option **On**, all received broadcast messages will be automatically displayed.

### **Languages [Menu 5-4-6] (Dependent to network and subscription)**

This option lets you select the preferred languages. Cell broadcast messages will be displayed in the selected language. If you use all the languages supported by the phone, select **Automatic** at the end of the list.

### **Templates [Menu 5-5]**

There are pre-defined messages in the list. You can view and edit the template messages or create new messages. Two types of templates are available: Text and Multimedia.

#### **Text messages [Menu 5-5-1]**

- **Please call me back.**
- **I'm late. I will be there at...**
- **Where are you now?**
- **I'm on the way.**
- **Top urgent. Please contact.**
- **I love you.**





## Messages [Menu 5]

The following options are available.

- **Edit:** Use this to write a new message or edit the selected template message from the text template list.
- **Delete:** Deletes the selected template message from the text template list.
- **Send via text message:** Use this to send the selected template message by SMS.
- **Send via multimedia message:** Use this to send the selected template message by MMS.
- **Add new:** Use this to create a new template.

### Multimedia messages [Menu 5-5-2]

- **Send:** Sends the multimedia template. Supports multiple numbers and email addresses.
- **Preview:** Displays the draft multimedia message.
- **Save:** Saves multimedia messages in draft form or as templates.
- **Delete:** Deletes the multimedia template.
- **Slide duration:** Set the slide duration. Enter the desired duration using the numeric keypad.
- **Slide format:** Select where to align the image.
- **Add Slide:** Adds a slide before or after the current slide.
- **Remove Slide:** Deletes the highlighted slide.



## **Name card [Menu 5-6]**

This option helps you to make your own name card.

1. Press the left soft key [Add].
2. Key in the name, mobile phone number, office number, Fax number, and E-mail address.
3. Press the left soft key [Save]. With the name card, the following options are available.
  - **Edit:** Use this to edit the name card.
  - **Delete:** Use this to delete the name card.
  - **Send via text message:** Use this to send the name card by SMS.



### **Note**

- You can also attach the name card when you write a text message using the **Attach** function. See page 63.

- **Send via multimedia message:** Sends the name card by MMS.

## **Memory status [Menu 5-7]**

You can check the current memory status for Text messages and Multimedia messages.



## Camera [Menu 6]

LG-G920 has a 1.3 Mega pixel digital camera which allows you to take pictures at a maximum resolution 1280x960 pixels (also known as SXGA). The CMOS sensor guarantees high definition and quality of the images. Taking pictures will be more fun thanks to the additional functions such as the 4x Zoom (depending on the resolution), Brightness control, White balancing and Colour effects.

And the integrated flash allows you to take pictures even when light conditions are poor.

With the integrated camera, it is also possible to record a video clip.

Press the Menu key ( $\square$ ) and select **Camera** using navigation keys.

Or, you can go to this menu by pressing  $\square$  or  $\square$  in standby mode.

**!** **Note:** If the battery is too low, you may not use the Camera feature.



## Take pictures [Menu 6-1]

Press the Menu key and select **Camera** → **Take pictures**. Or, press the camera hot key ( or longer than 2 seconds in standby mode. You can see the viewfinder.

Before taking a shot, press the left soft key [Menu] to set the following values.



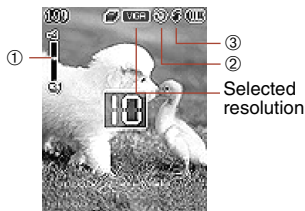 
- ① **Brightness:** 6 grades are available.
- ② **White Balance:** 5 settings are available: Auto, Daylight, Incandescent, Cloudy, and Flourescent.
- ③ **Resolution:** Refer to the page 79 for further information.
- ④ **Color Mode:** 5 settings are available: Color, Mono, Sepia, Blue and Negative.
- ⑤ **Shot Mode:** Select between Single shot and Multiple shot.
- ⑥ **Photo gallery:** Access the My photo gallery. After taking a shot, you can use this to check out the captured image.
- ⑦ **Exit:** Select this to exit from the setting menu.

To move between the setting menus, use left/right navigation keys. After highlighting a menu, press the OK key to open the menu. Select the desired value using left/right navigation keys and press the OK key to confirm it.



## Camera [Menu 6]

You can also use the following keys before taking a shot.



- ① **Zooming bar:** You can zoom in/out using the up/down navigation keys ( $\overline{\square}$ ,  $\overline{\nabla}$ ) or up/down side keys. And this bar shows the zooming state. The maximum zoom scale depends on the image size as follows.

SXGA(1x) / VGA(4x) / QVGA(4x) / Panorama(1x)

- ② **Self timer:** To activate/deactivate the self-timer, press  $\overline{[*0]}$ . When the self-timer is activated,  $\overline{0}$  is shown.



### Note

- You can set the desired delay time using **Timer mode** menu [Menu 6-6-4].

- ③ **Flash:** To turn the flash on/off, press  $\overline{[*#]}$ . When the flash is on,  $\overline{#}$  is shown.



### Note

- You can set the desired flash mode using **Flash mode** menu [Menu 6-6-5].

## Taking a single still shot ( $\overline{[S]}$ )

- In the preview mode, press the left soft key [Menu] to open the camera setting menu.
- Highlight the **Shot Mode** using left/right navigation keys and press the OK key.




3. Select the **Single Shot** mode (  ).




#### Note

- In the Single shot mode, you can select the resolution from QVGA (320X240), VGA (640X480), SXGA (1280X960), and Panorama (1280X640).

4. After finishing camera option setting, focus on the subject to capture and press the Camera key (  ). With a click, the image is captured and then automatically saved in the **My photo gallery** (See page 81).


### Taking multiple shots in succession ( )

1. In the preview mode, press the left soft key [Menu] to open the camera setting menu.
2. Highlight the **Shot Mode** using left/right navigation keys and press the OK key.
3. Select the **Multiple Shot** mode (  ).



#### Note

- In the Multiple shot mode, you can select the resolution between QVGA (9 shots) and VGA (3 shots).

4. After finishing camera option setting, focus on the subject to capture and press the Camera key (  ). With a click, the image is captured and then automatically saved in the **My photo gallery** (See page 81).




## Camera [Menu 6]

### Take movies [Menu 6-2]

You can record the video up to 30 minutes. But it depends on the resolution, the available memory capacity, and the quantity of data to be compressed.

Press the Menu key and select **Camera** → **Take movies**.


 
You can record a video clip in this menu by pressing the Camera key ()

1. Before shooting, you can set the desired shooting values by pressing the left soft key [Menu].



- ① **Brightness:** 6 grades are available.
- ② **White Balance:** 5 settings are available: Auto, Daylight, Incandescent, Cloudy, and Flourescent.
- ③ **Resolution:** Select the desired resolution from QCIF(176X44), S-QCIF(128X96), and MMS. Select MMS for a video clip to send using a multimedia message.
- ④ **Color mode:** 5 settings are available: Color, Mono, Sepia, Blue, and Negative.
- ⑤ **Exit:** Select this to exit from the setting menu.

You can also use the following features. (For more information, see page 78.)

- Self timer: Press the .
- Flash: Press the .



2. Press the Camera key to start recording a video clip. "Recording" appears on the LCD screen.
3. To stop recording, press the Camera key again. It is automatically saved in **My movie gallery** [Menu 6-5]. And you can keep recording another video clip by pressing the Camera key.



## Frame shot [Menu 6-3]

Press the Menu key and select **Camera** → **Frame shot**.

You can enjoy taking a shot in diverse preset frames. There are 15 preset frames.

1. To select the desired frame to take a shot in, press the left soft key [Menu].
2. Highlight the Frame (  ) using left/right navigation keys and press the OK key.
3. After selecting the desired frame, press the OK key.
4. After exiting from the option menu by selecting Exit (  ), take a shot by pressing the Camera key. The captured image is automatically saved in the **My photo gallery** (See page 81).



### Note

- The resolution of the frame shots is fixed to 176x220 pixel.

## My photo gallery [Menu 6-4]

Press the Menu key and select **Camera** → **My photo gallery**.

All the still images taken in the **Take pictures** menu are stored in this menu. You can view, organise and send the pictures saved in your phone.

1. Select the picture you want a full screen of and press the OK key. Or press the left soft key [Options] to access the following sub-menus.
  - **Normal view:** You can view one image at a time.
  - **Multi view/List view:** (Shown in the normal view) Go back to the multi view/list view mode.
  - **Send via multimedia message:** You can send the selected image via a multimedia message.






## Camera [Menu 6]



### Note

- For details, refer to **Multimedia messages – Write** on page 67.
- Because of the big size, the pictures of which resolution is SXGA cannot be sent via MMS. The phone will ask if you want to resize the picture in order to send it via MMS.

- **Add to phonebook:** You can add the selected image to a phonebook contact to use the Photo Caller ID feature.
- **Slide show:** Plays back every image in succession. To pause/resume the slide show, press the left soft key. To stop the slide show and go back to My photo gallery, press the right soft key.
- **Set as wallpaper:** You can set the selected image as the internal LCD wallpaper or external LCD wallpaper.
- **File protect:** You can lock/unlock the selected image by selecting this. When an image is locked, “” is shown on the left of the image name. The locked images cannot be deleted.
- **Edit:** (Shown in the normal view) After selecting the normal view of an image, you can edit it as follows. After editing, the changed image can be saved by pressing the left soft key [Save]. And the original image is retained.
  - Effect filters: You can give various effects to the image. After selecting the desired effect from 12 effect filters using the left/right navigation key, press the left soft key [Save]. The changed image is stored.
  - Resize: You can change the image size using the left/right navigation key.
  - Trim: After pressing the right soft key [Zoom], you can zoom in/out with the right/left soft keys. And display the desired part using the navigation keys. Press the OK key. The trimmed image is saved.
    - ! **Note:** Trimmed images cannot be edited.
  - Rotate: You can rotate the image 90, 180, or 270 degrees.



The table below shows the available photo edit features in each resolution.

**Note**

Resolution	Photo edit	Effect filters	Resize	Trim	Rotate
QVGA (320X240)		O	X	O	O
VGA (640X480)		O	O	O	O
SXGA (1280X960)		X	O	O	X
PANORAMA (1280X640)		X	O	O	X
Trimmed image (176X220)		X	X	X	X
The resized image from PANORAMA (220X108)		X	X	X	X

- **Rename:** You can change the name of the selected image.
- **Delete:** Deletes the selected image.
- **Multiple delete:** (Shown in the multi view mode) You can delete several images at a time. Select the images to delete through the list by pressing the OK key, then press the left soft key [Delete].
- **Delete all:** Deletes all the images in your phone.
- **View details:** You can check the title, resolution, size, and date and time of the selected image.


## My movie gallery [Menu 6-5]

Press the Menu key and select **Camera** → **My movie gallery**.

 
 
 
 
 
 
 
 
The list of all the recorded video clips opens. Select the desired video clip using up/down navigation keys, then press the OK key. Or you can access the following submenu using the left soft key [Options].



## Camera [Menu 6]


- **Play:** Plays the selected video clip.
- **File protect:** You can lock/unlock the selected video clip by selecting this. When a video clip is locked, “” is shown on the left of the video clip name.
- **Rename:** You can change the title of the selected video clip.
- **Delete:** Deletes the selected video clip.
- **Multiple delete:** You can delete several video clips at a time. Select the video clips to delete through the list by pressing the OK key, then press the left soft key [Delete].
- **Delete all:** You can delete all the video clips in your phone.

While watching a video clip, you can use the following keys.

To pause/resume the playback.	Press OK key (  ).
To change the play option (between once and repeat).	Press Left soft key (  ).
To skip backward.	Use Left navigation key (  ).
To skip forward.	Use Right navigation key (  ).
To increase the volume.	Press Up navigation key (  )/Up side key.
To decrease the volume.	Press Down navigation key (  )/Down side key.
To stop playback and go back to the My movie gallery.	Press Clear key (  ) or Right soft key (  ).



### Note

- To exit from the playback screen, press the right soft key or  several times.



## **Camera settings [Menu 6-6]**

Press the Menu key and select **Camera** → **Camera settings**.

In this menu, you can set the following options.

- 1. Image quality:** Select the desired image quality to be captured. The higher image quality, the more memories are used.
- 2. Shutter sound:** Select the desired shutter sound.
- 3. Gallery style:** Select the desired My photo gallery style between **List view** and **Multi view**.
- 4. Timer mode:** Select the desired delay time when activating the self-timer.
- 5. Flash mode:** Select the desired flash mode between **Once** and **Continuous**.
  - **Once:** After taking one shot, the flash is turned off.
  - **Continuous:** The flash keeps activated. Therefore, **Continuous** flash mode will consume the phone's battery faster.
- 6. Slideshow interval:** Select the desired slideshow interval between **3 sec** and **5 sec**.

## **Memory status [Menu 6-7]**

Press the Menu key and select **Camera** → **Memory status**.

You can check the current memory status on the phone. **Images**, **Movie** and **MP3 Player** share the memory.



## Multimedia [Menu 7]

### MP3 player [Menu 7-1]

The LG-G920 has an integrated MP3 player built-in. You can enjoy listening to MP3 music files on a memory in your phone using a compatible headset or via the internal loudspeaker.

#### Note



- Because of the small dimension of the speaker, in some cases the audio could be distorted, especially at maximum volume and when there are lots of bass sounds. Therefore, we recommend you to use the stereo headset in order to appreciate the high quality of your music.

The MP3 player supports:

- **MPEG-1 Layer III:** Sampling frequency up to 48KHz, Bit rate up to 240Kbps, stereo.
- **MPEG-1 Layer III:** Sampling frequency up to 24KHz, Bit rate up to 160Kbps, stereo.

You can transfer MP3 files from a compatible PC to the memory in your phone using the Mobile Agent program (or PC sync program) on the CD-ROM in the sales package. When you connect the phone to a PC using the USB cable (supplied in the same package), you need to install a driver. Select **LG-G920.inf**. For further details, refer to the CD-ROM manual.



### Note

- The PC should run Windows 98 SE, Windows 2000, Windows ME, or Windows XP operating system.
- Besides downloading the MP3 files to the phone, you can upload the pictures and movies taken on the phone to the PC using the USB cable. To download the ring tones, wallpaper, or Java games, the serial cable is required. And you can also manage the phonebook, scheduler, and message box on the PC with the serial cable. Consult with the authorised dealer for availability of accessories.

The MP3 files are listed in the **MP3 player** menu [Menu 7-1].



1. Press the Menu key and select **Multimedia** → **MP3 player**.  
The MP3 track list is shown up.
2. Press the left soft key [Options] to access the following menu.
  - **Play**: Plays back all the tracks starting the selected track.
  - **Delete**: Deletes the selected track.
  - **Delete all**: Deletes all the tracks and clears up the MP3 player memory.
  - **Rename**: Select this to rename the selected track.
  - **Details**: Displays the track information such as the name, running time, and file size.
  - **Memory status**: You can check the current memory status of the phone.



## Multimedia [Menu 7]







 



 



### Note

- Once MP3 play has been started, closing the phone or opening the phone doesn't affect the MP3 playback. You can turn off the MP3 player by pressing the End key () when the phone is open. And when the phone is closed, you can turn off the player by pressing and holding down the MP3 player key () on the right side of the phone.

### Key operations in the MP3 player

You can use the following shortcut keys in the MP3 track list.

To play back/pause	Press the  .
To change repeat options during playback  : Once,  : Repeat,  : All repeat	Press the left soft key (  ) repeatedly.
To rewind the current track	Press and hold the left navigation key (  ) until you find the spot you'd like to listen to.
To fast forward the current track	Press and hold the right navigation key (  ) until you find the spot you'd like to listen to.
To skip to the previous track	Press the left navigation key (  ).
To skip to the next track	Press the right navigation key (  ).
To stop playback	Press (  ) or the right soft key (  ).
To adjust the volume	Use the side keys (  ) on the left side of the phone or up/down navigation keys.



## Note

### Playing MP3 files without opening the phone



MP3  
player  
key

You can activate the MP3 player in the phone closed state.

Press the MP3 player key (⊙) on the right side of the phone. It launches playing back.

- ▶ To skip to the next track, press the MP3 player key (⊙).
- ▶ To stop playback, press and hold down the MP3 player key (⊙).
- ▶ To adjust the volume, use the side keys (⏪) on the left side of the phone.

## Game [Menu 7-2]

You can enjoy a game on the phone. For further details, use the on-screen instruction or help menu.

## Java [Menu 7-3]

Java is a technology developed by Sun Microsystems. Similar to the way you would download the Java Applet using the standard Netscape or MS Internet Explorer browsers, Java MIDlet can be downloaded using the WAP enabled phone.

Depending on the service provider, all Java based programs such as Java games can be downloaded and run on a phone. Once downloaded, the Java program can be viewed within the Applications menu where you can select, execute, or delete. The Java program files saved in the phone are in .JAD and .JAR formats.





## Multimedia [Menu 7]



### Note

- The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.



### Warning

- Only J2ME (Java 2 Micro Edition) based programs will run in a phone environment. The J2SE (Java 2 Standard Edition) based programs will only run in a PC environment.

## Applications [Menu 7-3-1]

Application menu displays the list of Java programs downloaded using the WAP. All previous downloaded programs can be selected, deleted, or viewed in detail within the Application menu. From the list within the Application menu, the following options are available:

- **Open:** Open the selected program. The list includes all Java programs installed in the phone.
- **Delete:** Delete the selected program. Once deleted, you will not be able to restore the program unless it is downloaded again using the WAP.
- **Information:** Displays detailed information on the selected program. This includes the program name, program size, program version, vendor information and the website address or the URL.



## Download [Menu 7-3-2]

When a new Java program is downloaded using the WAP, the address from which a download takes place is known as a bookmark. The Java menu includes a bookmark list for downloading Java programs and this bookmark list can be viewed from the Download menu. You can connect, view, edit, delete, and add new bookmarks.

- **Connect:** Selected address in the bookmark is used for data connection. After successful connection, desired Java program can be downloaded from the list.
- **View:** Detailed information on a bookmark can be viewed such as the address of bookmark and title of bookmark required for connecting to certain sites.
- **Edit:** Selected bookmark can be edited. Editing a bookmark is done in the order of Address → Title. When creating a new bookmark, same order is followed.
- **Delete:** Selected bookmark is deleted. All bookmarks can be deleted completely from the bookmark list screen. Deleted bookmark cannot be restored so caution is required when deleting bookmarks.
- **Add new:** New bookmark is added. The same order used during Edit bookmark applies to Add new bookmark. Select the Add new option from the bookmark menu or when no bookmark exists, then the Add new can be selected from the bookmark list screen.



## Multimedia [Menu 7]



### Note

- After selecting the Connect function to access the Java MIDlet Provider's server, you may choose one of many Java programs to download and install into your phone. Once connected to the server, the Go button can be pressed to view the JAD information on a desired program. The Get button will begin the download and install process. The download and install process will take place simultaneously and once download is complete you can immediately run the Java program. The installed Java program can be selected to run at a later time from the Application menu.

### Memory status [Menu 7-3-3]

The downloaded programs using the WAP are stored in the phone memory. There is a maximum memory capacity in a phone and once you exceed this memory, you will not be able to store any more programs. This menu allows you to check the available memory capacity in a phone.




### Internet [Menu 8-1]

Press the Menu key (  ) and select **Service** using navigation keys.


You can access various WAP (Wireless Application Protocol) services such as banking, news, weather reports and flight information. These services are specially designed for mobile phones and they are maintained by WAP service providers.

Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.

Please contact your network operator to open your Internet account. To use the Web Browser, you must indicate your phone number via the **Own number** menu option (See page 58 for further details.).

To launch the browser in standby mode, press and hold down the  key.

Once connected, the homepage is displayed. The content depends on the service provider.

You can access any website page by entering its URL address. To exit the browser at any time, press the  key. The phone will return to the standby mode.

### Navigating with the WAP browser


 
 
You can surf the Internet using either the phone keys or the WAP browser menu.

### Using the phone keys

When surfing the Internet, the phone keys function differently to phone mode.



## Service [Menu 8]

Key	Description
	Scrolls each line of the content area
	Returns to the previous page
	Selects options and confirms actions

### Using the WAP browser menu

There are various menu options available when surfing the Wireless Web.



#### Note

- The WAP browser menus may vary, depending on your browser version.

### Home [Menu 8-1-1]

Connect to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.

### Bookmarks [Menu 8-1-2]

This menu allows you to store the URL of favourite web pages for easy access at a later time. You can also create folders and organise the bookmarks in each folder.

To create a bookmark

1. Press the left soft key [Options].
2. Select **New bookmark** and press the OK key.
3. Enter the desired URL and title and press the OK key.



After creating bookmarks, the following options are available.

- **Connect:** Connects to the selected bookmark.
- **Edit:** You can edit the URL and/or the title of the selected bookmark.
- **New bookmark:** Select this to create a new bookmark.
- **New folder:** Select this to create a new folder.
- **Delete:** Deletes the selected bookmark.

Your phone may have some pre-installed bookmarks for sites not affiliated with LG. LG does not warrant or endorse these sites. If you choose to access them, you should use the same security or content precautions as you would with any site.

## Push messages [Menu 8-1-3]

### • Push inbox

You can order Push messages from WAP service providers. Push messages are notifications of, for example, news headlines and they can contain a text message or the address of a WAP service. For availability and subscription, contact your WAP service provider. Service providers can update an existing Push message every time a new Push message is received. Messages can be updated even if you have moved them to another folder. When Push messages expire, they are deleted automatically.

- **Information:** Shows the information of received push messages.
- **Load:** Connects to a specific site using the information in the received push message.
- **Delete:** Deletes the selected push message.

### • Receive

You can choose whether or not you wish to receive push messages.



## Service [Menu 8]

### Profiles [Menu 8-1-4]

For more information, consult your network operator.

Each profile has submenus as follows:

- **Activate:** Activates the selected profile.
- **Settings:** Use this to edit and change WAP settings for the selected profile.
- **Rename:** You can change the selected profile's name.
- **Delete:** Deletes the selected profile from the list.
- **Add new:** You can add a new profile



#### Note

- The changes using these options may affect the MMS function.

### Go to URL [Menu 8-1-5]

You can connect directly to the site you want. To do this, you need to enter a specific URL.

### Cache settings [Menu 8-1-6]

The information or services you have accessed are saved in the cache memory of the phone.

- **Clear cache**

Removes all context saved in cache.

- **Cache check**

Set a value whether a connection attempt is made through cache or not.



### **Security certificates [Menu 8-1-7]**

A list of the available certificates is shown.

### **Reset profiles [Menu 8-1-8]**

You can reset profiles to return to original settings.

### **WAP information [Menu 8-1-9]**

The WAP browser version is displayed.


### **SIM service [Menu 8-2]**

Your service provider can offer special application through SIM card, such as home banking, stock market, etc. If you are registered for one of these services, the service name will appear at the end of the main menu. With the SIM service menu, your phone is future-proof and will support additions to your service provider's service. For further information, contact your service provider.





## Settings [Menu 9]

Press the Menu key (  ) and select **Settings** using navigation keys.

### **Date & Time [Menu 9-1]**

This option lets you change the current time and date displayed. The following options are available.

#### **Set date [Menu 9-1-1]**

Use this to enter the day, month and year. You can change the date format via the **Date format** menu option.

#### **Date format [Menu 9-1-2]**

YYYY/MM/DD (year/month/day)

DD/MM/YYYY (day/month/year)

MM/DD/YYYY (month/day/year)

#### **Set time [Menu 9-1-3]**

Use this to enter the current time. You can choose the time format via the **Time format** menu option.

#### **Time format [Menu 9-1-4]**

24 hours

12 hours

#### **Dual time [Menu 9-1-5]**

You can activate the phone to run dual time clocks. After selecting **On**, select the desired dual time zone.

#### **Beep every hour [Menu 9-1-6]**

You can set the phone to beep every hour by selecting **On**.



## Call settings [Menu 9-2]

To set the options related to calls.

### Call divert [Menu 9-2-1]

When this network service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your network operator.

Select one of the divert options, for example, select **If busy** to divert voice calls when your number is busy or when you reject incoming calls.

The following options are available.

**All voice calls:** Diverts all voice calls unconditionally.

**If busy:** Diverts voice calls when the phone is in use.

**If no reply:** Diverts voice calls which you do not answer.

**If out of reach:** Diverts voice calls when the phone is switched off or out of coverage.

**All data calls:** Diverts to a number with a PC connection unconditionally.

**All fax calls:** Diverts to a number with a fax connection unconditionally.

Each option has the following menu:

- **Activate:** Activates the corresponding service.
  - **To voice mail:** Forwards to message centre. This function does not apply to **All data calls** and **All fax calls** menus.
  - **To other number:** Input the number for call diverting.
  - **Favourite number:** You can check the recent five diverted numbers.
- **Cancel:** Cancels the selected call divert.
- **View status:** You can check the status of the service.


 
**Cancel all:** Cancels all call divert settings.



## Settings [Menu 9]

### Answer mode [Menu 9-2-2]

Select the desired mode to answer a call.

- **Flip open:** When the phone rings, you can answer a call simply by opening the folder.
- **Any key:** When the phone rings, you can answer a call by pressing any key except the  key and the right soft key ().
- **Only send key:** You can answer a call only by pressing the send key.

### Send my number [Menu 9-2-3]

This network service lets you decide whether your phone number is displayed (**On**) or hidden (**Off**) from the person you are calling.

Select **Set by network** to reset the phone to the setting that you have agreed upon with your service provider.

### Call waiting [Menu 9-2-4] (Network Service)

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, **Cancel** to request the network to deactivate call waiting, or **View status**, to check if the function is active or not.


### Minute minder [Menu 9-2-5]

When set to On, the phone will beep every minute during an outgoing call to keep you informed of the length of the call.



## Voice dial [Menu 9-2-6]

You can make a phone call by speaking a voice tag that has been added to a contact card. Any spoken word(s) can be a voice tag. Before using voice-activated dialling, note that:

- Voice tags are not language dependent. They are dependent on the speaker's voice.
- Voice tags are sensitive to background noise. Record them and make calls in a quiet environment.
- When recording a voice tag or making a call by saying a voice tag, the loudspeaker is in use. Hold the phone at a short distance away from your mouth and face so that the proximity sensor does not turn the loudspeaker off.
- Very short names are not accepted. Use long enough names and avoid similar names for different numbers.
  - **Automatic:** Use this to enter voice-activated dialling mode whenever you open the folder.
  - **Manual:** Use this to enter voice-activated dialling mode by holding the star () key.



### Note

- You must say the name exactly as you said when you recorded it. This may be difficult, for example, in a noisy environment or during an emergency, so you should not rely solely upon voice-activated dialling in all circumstances.



## Settings [Menu 9]

### Auto redial [Menu 9-2-7]

Select **On**, and your phone will make a maximum of five attempts to connect the call after an unsuccessful call attempt.

### Closed user group [Menu 9-2-8]

This is a network service that specifies the group of people who you can call and who can call you. For more information, contact your network operator or service provider. If a group index is specified, it is used for all outgoing calls. If no group index is specified, the network will use the preferential index.

(A specific index is stored in the network.)

- **Preset:** Select this to activate the previous CUG index.
- **On:** You can edit the CUG indexes and activate it.
- **Off:** Deactivates this function.

### Phone settings [Menu 9-3]

Many features of your phone can be customised to suit your preferences. All of these features are accessed via the **Phone settings** menu.

### Wallpaper [Menu 9-3-1]

Use this to set up the display on the internal/external LCD screen in standby mode.



### **Backlight [Menu 9-3-2]**

Use this to select whether or not the phone uses the backlight. A small increase in standby/talk time can be achieved by turning the backlight off.

### **Menu colour [Menu 9-3-3]**

Your phone provides you with 4 menu colour themes. Set the menu colour by scrolling and pressing the left soft key [Select].

### **Greeting note [Menu 9-3-4]**

To enter a greeting note, select **On**. And input a greeting note using the keypad. The greeting note is displayed in standby mode.

### **Languages [Menu 9-3-5]**

You can select the display language. When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used. English will be set if the language on the SIM card is not supported by the phone.

### **Network name [Menu 9-3-6]**

Select whether to display the network name when the phone is turned on/off.



## Settings [Menu 9]

### Security settings [Menu 9-4]

Various passwords are used to protect certain features of your phone. Refer to page 26-27 for the various passwords.

#### PIN code request [Menu 9-4-1]

When the **PIN code request** feature is enabled, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.



#### Note

- Before disabling the **PIN code request** feature, you must enter your PIN.

The following options are available:

- **Enable:** You must enter the PIN each time the phone is switched on.
- **Disable:** The phone connects directly to the network when you switch it on.

#### Phone lock [Menu 9-4-2]

You can lock your phone. Select the desired phone lock option. To change the phone lock option, you are asked to enter the security code.

- ▶ To unlock the phone, press the right soft key and enter the security code.



## Call barring service [Menu 9-4-3] (Network dependent)

Call barring lets you restrict the making and receiving of calls with your phone. For this function, you need the barring password, which you can obtain from your service provider.

The following options are available:

- **All outgoing:** No call can be made.
- **Outgoing international:** International calls cannot be made.
- **Outgoing international except home country:** When abroad, calls can be made only to numbers within the current country and to your home country, the country where your home network provider is located.
- **All incoming:** No call can be received.
- **Incoming when abroad:** Calls cannot be received when you are
- **Cancel all barrings:** All call barring settings are deactivated; calls can be made and received normally.
- **Change password:** Use this to set and change the call barring password obtained from your service provider using this option. You must enter the current password before you can specify a new one. Once you have entered a new password, you are asked to confirm it by entering it again.



### Note

- To use **Call barring service**, you must input the network password. When calls are barred, calls may be possible to certain emergency numbers on some networks.





## Settings [Menu 9]

### Fixed dial number (FDN) [Menu 9-4-4] (SIM dependent)

Use this to restrict your outgoing calls to selected phone numbers, if this function is supported by your SIM card. The PIN2 code is required.

When FDN is activated, if you try to dial a number not included in the FDN list, the message “Check FDN” will appear.

The following options are available:

- **Enable:** Use this to only call phone numbers saved in the phonebook. You must enter your PIN2 code.
- **Disable:** Allows you to call any number.
- **Number list:** Use this to view the numbers saved as fixed dial numbers.



#### Note

- Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.

### Change codes [Menu 9-4-5]

The **Change codes** feature lets you change your current password to a new one. You must enter the current password before you can specify a new one.

Use this to change the access codes: **Security code**, **PIN1 code**, **PIN2 code**



#### Note

- PIN: Personal Identification Number.



## Network settings [Menu 9-5]

The **Network settings** feature enables you to indicate whether the network used when roaming (outside your home area) is selected: Automatic, Manual, Preferred.



### Note

- You can select a network other than your home network only if it has a valid roaming agreement with your home network.

## GPRS settings [Menu 9-6]

GPRS (General Packet Radio Service) is a technology that allows mobile phones to be used for sending and receiving data over the mobile network. GPRS is a data bearer that enables wireless access to data network such as the Internet.

Before you can use GPRS technology:

- You need to subscribe to the GPRS service. For availability and subscription to GPRS service, contact your network operator or service provider.
- You need to save the GPRS settings for the applications used over GPRS.

### Attach [Menu 9-6-1]

If you select **Power on** and you are in a network that supports GPRS, the phone registers to the GPRS network and sending short messages will be done via GPRS. Also, starting an active packet data connection, for example, to send and receive e-mail, is quicker. If you select **When needed**, the phone will use a GPRS connection only if you start an application or action that needs it. The GPRS connection is closed after it is no longer required by any application.



## Settings [Menu 9]



### Note

- If there is no GPRS coverage and you have chosen Automatic, the phone will periodically try to establish a connection.

### External device [Menu 9-6-2]

When you use Internet via GPRS by using external device, you can set the following six profiles: **Rename, APN, IP address, DNS, User ID, and Password.**

### Factory reset [Menu 9-7]

You can reset your phone to its default configuration. To do so, proceed, as follows.

1. Select the **Factory reset** menu option.
2. Enter the 4-digit security code.




### Note

- The security code is preset to 0000. To change this, refer to page 104.

 
 
 


Please check to see if any problem which you may have with your phone is described here before taking it for service or calling a service engineer.

 
**Q** How do I view the list of outgoing calls, incoming calls and missed calls?

**A** Press .


**Q** How do I clear all call history?

**A** Press the left soft key and then   .

**Q** How do I view all numbers saved in the memory?

**A** Press the right soft key and then .

**Q**  does not disappear from the screen.

**A** Check whether you are in a service area. If you continue to see , turn off the power and wait for approximately 2 minutes before turning it back on. If there is no change, relocate to another area and check again.

**Q** Connection is poor or is not audible in certain areas.

**A** In certain areas, signal strength can vary dramatically. Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.



## Q&A

**Q** Connection is poor even when established.

**A** In certain areas, signal strength can vary dramatically.

Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.

**Q** LCD does not turn on.

**A** Remove and replace the battery and turn on the power. If the phone still does not turn on, charge the battery and try again.

**Q** An echo can be heard during connection with a certain telephone in a certain area.

**A** It is called 'Echo Phenomenon'. It occurs if the volume is too high or caused by special properties (semi electronic telephone exchange) of the machine on the other end.

**Q** The phone gets warm.

**A** During long calls, or if camera/games/Internet are used for a long time, the phone may become hot. This is perfectly normal and has no effect upon the life of the product or performance.


**Q** Standby duration of the phone gradually becomes shorter.

**A** Batteries have a limited life. When the battery lasts for half its original time, it requires replacement. Only use authorised replacement parts.

**Q** Usage time of battery becomes shorter.

**A** If the battery time is short, it may be due to the user environment, or large volume of calls, or weak signals.



- Q** No number is dialled when you recall a phonebook entry.
- A** Check that the numbers have been saved correctly, by using the phonebook Search feature. Resave them, if necessary.
- Q** You cannot be contacted.
- A** Is your phone switched on (  pressed for more than three seconds)? Are you accessing the right cellular network? Have you set an incoming call barring option?
- Q** I cannot find the lock, PIN, or PUK code, or password?
- A** The default lock code is **'0000'**. If you forget or lose the lock code, contact your phone dealer. If you forget or lose a PIN or PUK code, or if you have not received such a code, contact your network service provider.



## Accessories

There are a variety of accessories available for your mobile phone. You can select these according to your personal communication requirements. Consult your local dealer for availability.



### Supplied adapter

This adapter lets you charge the while at home or in the office.



 
### Battery

Standard battery is available.



### Stereo headset

Allows hands-free operation. Includes earpiece and microphone.



### Data cable kit

Connects your phone to a PC.



### Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions: please check with our regional service company or agent for further enquiries.



### General

---

Product name : LG-G920

System : GSM900 / DCS 1800

### Ambient Temperatures

---

Max : +55°C

Min : -10°C



# Declaration of Conformity



LG Electronics

This model complies with the essential requirements of Article 3 of the R&TTE 1999/5/EC Directive, if used for its intended use.

1. Health (Article 3.1.a of the R&TTE Directive)
2. Safety (Article 3.1.a of the R&TTE Directive)
3. Electromagnetic compatibility (Article 3.1.b of the R&TTE Directive)
4. Efficient use of the radio frequency spectrum (Article 3.2 of the R&TTE Directive)

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned articles of the directive.

If available, write the contact person(s)

**Mr. Jin Seog, Kim**  
LG Amsterdam Branch Office  
Capronilaan 6, 1119 NR Schiphol-rijik,  
The Netherlands  
(Tel.) +31-20-655 7774

**Mr. Ji Jong, Jeon**  
LG Electronics Inc. GSM Division  
Emerald BD, 1042 Hogye-Dong, Dongan-Gu  
Anyang-city, Kyuonki-Do  
431-080, Korea

# CE 0700