



LG® LX125 Phone Guide

 
 
 


Table of Contents

Introduction	i
Section 1: Getting Started	1
1A. Setting Up Service	3
Getting Started	4
Setting Up Your Voicemail	5
Getting Help	6
Section 2: Your Phone	7
2A. Your Phone: The Basics	9
Front View of Your Phone	10
Viewing the Display Screen	13
Features of Your Phone	14
Turning Your Phone On and Off	16
Using Your Phone's Battery and Charger	17
Displaying Your Phone Number	20
Making and Answering Calls	20
Entering Text	30
2B. Controlling Your Phone's Settings	35
Sound Settings	36
Display Settings	40
Location Settings	46
Messaging Settings	47
Airplane Mode	50
TTY Use With Your Wireless Service	51
Phone Setup Options	53

2C. Setting Your Phone's Security	57
Accessing the Security Menu	58
Using Your Phone's Lock Feature	58
Restricting Your Phone	60
Using Special Numbers	61
Erasing the Contacts	62
Resetting Your Phone	63
Security Features for Data Services	64
2D. Controlling Your Roaming Experience	66
Understanding Roaming	67
Setting Your Phone's Roam Mode	70
Controlling Roaming Charges Using Call Guard	71
2E. Navigating Through Menus	73
Menu Navigation	74
Menu Structure	74
Viewing the Menus	75
2F. Managing Call History	79
Viewing History	80
Call History Options	81
Making a Call From Call History	82
Saving a Phone Number From Call History	82
Prepending a Phone Number From Call History	83
Deleting Call History	84
2G. Using the Contacts	85
Adding a New Contacts Entry	86
Finding Contacts Entries	87
Contacts Entry Options	89

Adding a Phone Number to a Contacts Entry	90
Editing a Contacts Entry's Phone Number	91
Assigning Speed Dial Numbers	92
Creating Voice Dial Tags	93
Editing a Contacts Entry	94
Selecting a Ringer Type for an Entry	95
Dialing Your Wireless Services	96
2H. Using the Phone's Calendar and Tools	97
Using Your Phone's Calendar	98
Using Your Phone's Alarm Clock	103
Using Your Phone's Notepad	104
Using Your Phone's Tools	105
2I. Using Your Phone's Voice Services	107
Using Voice-Activated Dialing	108
Managing Voice Memos	110
Section 3: Service Features	113
3A. Service Features: The Basics	115
Using Voicemail	116
Using SMS Text Messaging	126
Using Caller ID	129
Responding to Call Waiting	130
Making a Three-Way Call	131
Using Call Forwarding	132
3B. Data Services	133
Data Services Applications	134
Getting Started With Data Services	135
Accessing Messaging	142

Downloading Premium Services Content	145
Exploring the Web	148
Data Services FAQs	154
Section 4: Safety and Warranty Information	157
4A. Safety	159
Getting the Most Out of Your Reception	160
Maintaining Safe Use of and Access to Your Phone	161
Caring for the Battery	163
Using Your Phone With a Hearing Aid Device	164
Acknowledging Special Precautions and the FCC Notice	166
Owner's Record	168
Phone Guide Proprietary Notice	168
4B. Manufacturer's Warranty	169
Manufacturer's Warranty	170
Index	173

 
 
 
Introduction

This **Phone Guide** introduces you to your wireless service and all the features of your new phone. It's divided into four sections:

- ◆ **Section 1:** Getting Started
- ◆ **Section 2:** Your Phone
- ◆ **Section 3:** Service Features
- ◆ **Section 4:** Safety and Warranty Information




Throughout this guide, you'll find tips that highlight special shortcuts and timely reminders to help you make the most of your new phone and service. The Table of Contents and Index will also help you quickly locate specific information.




You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, simply locate that section in the Table of Contents and go directly to that page. Follow the instructions in that section, and you'll be ready to use your phone in no time.



Section 1

      Getting Started





Section 1A

Setting Up Service

Setting Up Service

In This Section

- ◆ Getting Started
 - ◆ Setting Up Your Voicemail
 - ◆ Getting Help
-

Setting up service on your new Phone is quick and easy. This section walks you through the necessary steps to unlock your phone, set up your voicemail, establish passwords, and contact service provider for assistance with your wireless service.

Getting Started

Unlocking Your Phone

To unlock your phone, follow these easy steps:

1. Press and hold **END** to turn the phone on.
2. Press **Unlock** (right softkey).

Note: To select a softkey, press the softkey button directly below the softkey text that appears at the bottom left and bottom right of your phone's display screen. Softkey actions change according to the screen you're viewing and will not appear if there is no corresponding action available.

3. Enter your four-digit lock code. (For security purposes, the code is not visible as you type.)

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or your wireless Phone number or try 0000 or NATL (6285). If none of these work, call your service provider.

Setting Up Your Voicemail

All unanswered calls to Your wireless Phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your voicemail and personal greeting as soon as Your wireless Phone is activated.

To set up your voicemail:

1. From standby mode, press and hold **1**.
2. Follow the system prompts to:
 - Create your pass code
 - Record your greeting
 - Record your name announcement
 - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding **1**, bypassing the need for you to enter your pass code)

Note: Voicemail Passcode
You'll create your voicemail password (or pass code) when you set up your voicemail. For more information or to change your voicemail password, please contact your service provider.

For more information about using your voicemail, see “Using Voicemail” on page 116.

Getting Help

Directory Assistance

You have access to a variety of services and information through Directory Assistance, including residential, business, and government listings; assistance with local or long-distance calls; movie listings; and hotel, restaurant, shopping, and major local event information. There is a per-call charge, and you will be billed for airtime.

To call your wireless Directory Assistance:

▶ Press **4 1 1 TALK**.

Operator Services

Operator Services provides assistance when placing collect calls or when placing calls billed to a local telephone calling card or third party.

To access your wireless Operator Services:




▶ Press **0 TALK**.




For more information, call your service provider.

Note: Operator Services may not be available in all Affiliate areas.

Section 2

      Your Phone





Section 2A


Your Phone: The Basics

In This Section

- ◆ **Front View of Your Phone**
 - ◆ **Viewing the Display Screen**
 - ◆ **Features of Your Phone**
 - ◆ **Turning Your Phone On and Off**
 - ◆ **Using Your Phone's Battery and Charger**
 - ◆ **Displaying Your Phone Number**
 - ◆ **Making and Answering Calls**
 - ◆ **Entering Text**
-

Your Phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. This section will guide you through the basic functions and calling features of your phone.

Front View of Your Phone

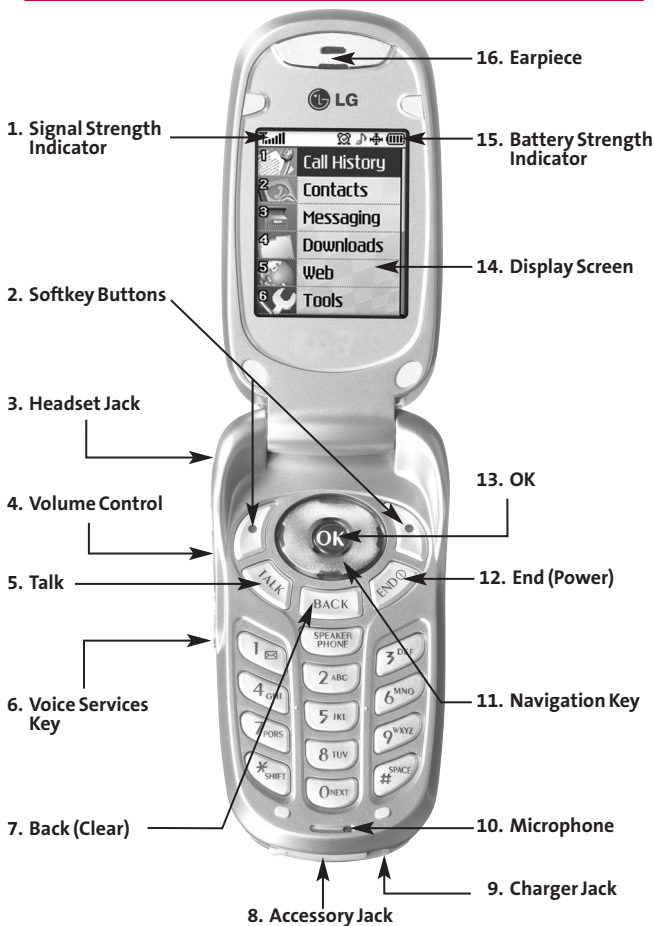

Key Functions

1. **Signal Strength Indicator** represents the signal strength by displaying bars. The more bars displayed, the better the signal strength.
2. **Softkey Buttons** let you select softkey actions or menu items corresponding to the bottom left and right lines on the display screen.
3. **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations.
4. **Volume Control** allows you to adjust the ringer volume in standby mode (with the flip open) or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options. To mute the ringer during an incoming call, press the volume key up or down.
5. **Talk** allows you to place or receive calls, answer Call Waiting, use Three-Way Calling, or activate Voice Dial.
6. **Voice Services Key** for quick access to voice dials. Also press and hold during standby mode or during a conversation to record a voice memo.
7. **Back (Clear)** deletes characters from the display in text entry mode. When in a menu, press the Back key to return to the previous menu. This key also allows you to return to the previous screen in a your wireless web session.
8. **Accessory Jack** allows you to connect optional accessories, such as a USB cable.
9. **Charger Jack** connects the phone to the battery charger.
10. **Microphone** allows the other caller to hear you clearly when you are speaking to them.













11. **Navigation Key** scrolls through the phone's menu options and acts as a shortcut key from standby mode.
 - Press **Up** to access **Messaging**.
 - Press **Down** to access **Downloads**.
 - Press **Right** to **Find/Add Entry**.
 - Press **Left** to view your **Scheduler** or your own customized shortcut.
12. **End (Power)** ends a call. Press and hold this key for two seconds to turn your phone on or off. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to enter silent mode and mute the ringer.
13. **OK** selects the highlighted choice when navigating through a menu.
14. **Display Screen** displays all the information needed to operate your phone, such as the call status, the internal phone book's contact list, the date and time, the signal and battery strength, etc.
15. **Battery Strength Indicator** represents the amount of remaining battery charge currently available in your phone. When all bars are displayed in the battery icon, the phone's battery is fully charged. When no bars are displayed, the phone's battery is completely discharged or empty.
16. **Earpiece** lets you hear the caller and automated prompts.















Viewing the Display Screen

Your phone's display screen provides a wealth of information about your phone's status and options. This list identifies the symbols you'll see on your phone's display screen:

Tip:

To view a list of your phone's icons and descriptions, from the main menu select **Settings > Phone Info > Icon Glossary**.

-  indicates your phone is using SSL (Secure Sockets Layer) protocol for client/server communication.
-  shows your current signal strength. (The more lines you have, the stronger your signal.)
-  means your phone cannot find a signal.
-  tells you a call is in progress.
-  indicates you are "roaming" off the enhanced Nationwide your wireless Network.
-  indicates you have new text messages.
-  indicates you have new voicemail messages. (Press and hold **1** to call your voicemail box.)
-  indicates you have New Msgs & Voicemails.
-  indicates your phone's location feature is on.
-  indicates your phone's location feature is off.
-  indicates your wireless web connection is active (data is being transferred).
-  indicates your wireless web connection is dormant (no data is being sent or received).

-  indicates your phone is not currently able to access your wireless web service features.
-  indicates ringer volume is set to vibrate.
-  indicates Silence All mode is set.
-  indicates your phone is operating in TTY mode.
-  indicates battery charge level (icon shown is full).
-  indicates outgoing calls number.
-  indicates missed calls number.
-  indicates incoming calls number.
-  indicates alarm is activated.
-  indicates ringer is activated.
-  indicates speaker is activated.
-  Charging indicates battery needs to be recharged.
-  High+Vib indicates ringer/vibrate mode is set.
-  Downloads indicates an item has been downloaded to your phone.

Note: Display indicators help you manage your roaming charges by letting you know when you're off the Nationwide your wireless Network and whether you're operating in digital or analog mode. (For more information, see Section 2D: Controlling Your Roaming Experience on page 71.)

Features of Your Phone

Congratulations on the purchase of Your wireless web Phone. The LX125 by LG is lightweight, easy-to-use, and reliable, and it also offers many significant features and service options. The following list previews some of those features and

provides page numbers where you can find out more:

- Digital dual-band/tri-mode capability allows you to make and receive calls while on the Nationwide your wireless Network and to roam on other analog and 1900 and 800 MHz digital networks where roaming agreements have been implemented (page 66).
- SMS Text Messaging and your wireless Mail provide quick and convenient messaging capabilities (pages 126 and 141, respectively).
- Games, ringers, screen savers, and other applications can be downloaded to make Your wireless Phone as unique as you are (page 145). Additional charges may apply.
- The Contacts list allows you to store up to 500 entries, with up to five phone numbers per entry (page 86).
- The built-in Calendar offers several personal information management features to help you manage your busy lifestyle (page 98).
- Your phone is equipped with a Location feature for use in connection with location-based services that may be available in the future (page 46).
- Your phone's external LCD display allows you to monitor the phone's status and to see who's calling without opening the phone.
- T9 Text Input lets you quickly type messages with one key press per letter (see page 31).
- Speed dial lets you dial phone numbers with one or two key presses (see page 29).

Turning Your Phone On and Off

Turning Your Phone On

To turn your phone on:

- ▶ Press and hold **END** for approximately two seconds.

Once your phone is on, it may display “Searching for Service,” which indicates that your phone is searching for a signal. When your phone finds a signal, it automatically enters standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for your wireless Service by pressing any key (when your phone is turned on).

Tip: The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

Turning Your Phone Off

To turn your phone off:

- ▶ Press and hold **END** for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

Using Your Phone's Battery and Charger

Battery Capacity

Your wireless Phone is equipped with a Lithium Ion (Lilon) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 3.5 hours of continuous digital talk time (up to 1.8 hours in analog).

When the battery reaches 5% of its capacity, the battery icon blinks. When there are approximately two minutes of talk time left, the phone sounds an audible alert and then powers down.

Note: Long backlight settings, searching for service, vibrate mode, and browser use affect the battery's talk and standby times.

Tip: Be sure to watch your phone's battery level indicator and charge the battery before it runs out of power.

Installing the Battery

To install the Lilon battery:

To install the battery, you must first remove the phone battery cover. To remove the battery cover, turn the phone upside down, press the release button down, and push the battery cover away.



1. Insert the battery (label side facing up) into the cavity at a 45-degree angle. (The metal contacts must be aligned with and touching the metal prongs.)
2. Press down on the battery until it snaps into place.



Removing the Battery


To remove your battery:

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. To remove the battery cover, turn the phone upside down, press the release button down, and push the battery cover away.
3. Pull downward on the upper end of the battery with your finger tip and remove the battery from the phone at a 45-degree angle.



Charging the Battery

Your wireless Phone's Lilon battery is rechargeable and should be charged as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you will lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon  blinks and the phone sounds a warning tone.

Always use a approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

Warning! Using the wrong battery charger could cause damage to your phone and void the warranty.

Using the Charger

To use the travel charger provided with your phone:

- ▶ Plug the round end of the AC adapter into the phone's charger jack and the other end into an electrical outlet.
 - A **red indicator light** on the phone lets you know the battery is charging.
 - A **green indicator light** lets you know that the battery is at least 90 percent charged.

It takes approximately 3 hours to fully recharge a completely rundown battery. With the approved Lilon battery, you can recharge the battery before it becomes completely run down.

Displaying Your Phone Number

Just in case you forget your phone number, Your wireless Phone can remind you.

To display your phone number:

- ▶ Press **Menu** (left softkey) to access the main menu, select **Settings** (**7**), **Phone Info**, and **My Phone Number**. (Your phone number and other information about your phone and account will be displayed.)

Making and Answering Calls

Making Calls

Placing a call from Your wireless Phone is as easy as making a call from any land line phone. Just enter the number and press **TALK**, and you're on your way to clear calls.

To make a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number from standby mode. (If you make a mistake while dialing, press **BACK** to erase one digit at a time. Press and hold **BACK** to erase the entire number.)
3. Press **TALK**. (To make a call when you are roaming and Call Guard is enabled, highlight **Roam Call** and press **TALK**. See "Call Guard" on page 71.)
4. Press **END** or close the phone when you are finished.

Tip: When the **TALK** key is pressed twice, it will redial the last Recent Call from the Recent Calls Log, which can either be incoming, outgoing or missed.

When making calls off the Nationwide your wireless Network, always dial using 11 digits (1 + area code + phone number).

You can also place calls from Your wireless Phone by using your Call History listings (page 82).

Dialing Options

When you enter numbers in standby mode, you will see a variety of dialing options appear as softkeys on the phone's display screen.

- **Call:** Dials the phone number.

Tip: To speed dial a phone number from standby mode, press and hold the speed dial number. If the speed dial number is two digits, enter the first digit, then press and hold the second digit. (For information on setting up speed dial numbers, see "Assigning Speed Dial Numbers" on page 92.) (This feature will not work when you are roaming off the Nationwide your wireless Network; when roaming you must dial using eleven digits [1 + the area code + the seven-digit phone number.]

- **Send message:** Sends a text message to that number.
- **Save:** Save the phone number in your Contacts. (See "Saving a Phone Number" on page 25.)
- **Find:** Display Contacts entries that contain the entered numbers. (See "Finding a Phone Number" on page 26.)
- **Hard pause:** Insert a hard pause. (See "Dialing and Saving Phone Numbers With Pauses" on page 27.)
- **2-sec pause:** Insert a 2-second pause. (See "Dialing and Saving Phone Numbers With Pauses" on page 27.)

Answering Calls

To answer an incoming call:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press **TALK** to answer an incoming call. (Depending on your phone's settings, you may also answer incoming calls by opening the phone or by pressing any number key. See "Call Answer Mode" on page 54 for more information.)

Your wireless Phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The indicator light flashes.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the phone book entry's name is displayed. The caller's phone number may also be displayed, if available.

If Call Answer is set to **TALK Only**, the following options are also displayed. To select an option, press the corresponding softkey button.

- **Quiet** to mute the ringer.
- **Ignore** to send the call to your voicemail box.

Answering a Roam Call With Call Guard Enabled

Call Guard is an option that helps you manage your roaming charges when making or receiving calls while outside the Nationwide your wireless Network. Please see Section 2D: Controlling Your Roaming Experience for more information about roaming.

To answer a call when you are roaming and Call Guard is enabled:

- ▶ Select **Answer** to answer the call. (See “Call Guard” on page 71 for additional information.)

Note: When your phone is off, incoming calls go directly to voicemail.

Ending a Call

To disconnect a call when you are finished:

- ▶ Close the phone or press **END**.

Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen.

To display the Missed Call entry from the notification screen:

- ▶ Highlight the entry and press **OK**. (To dial the phone number, press **TALK**.)

To display a Missed Call entry from standby mode:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Call History** (**1**) and select **Missed Calls**.
3. Highlight the entry you wish to view and press **OK**.

Calling Emergency Numbers

You can place calls to 911 (dial **9** **1** **1** and press **TALK**), even if your phone is locked or your account is restricted.

In-Call Options

During a call, your phone displays menu options. The following options are available through the Actions menu: (To select an option, highlight the option and press **OK**.)

- **Mute** or **Unmute** to mute your microphone, or to unmute the microphone if it was muted earlier.
- **Speaker On** or **Speaker Off** routes the phone's audio through the speaker or through the earpiece.
 - ▶ Select **Speaker On** to route the phone's audio through the speaker. (You can adjust the speaker volume using the volume keys on the side of the phone.)
 - ▶ Select **Speaker Off** to use the phone's earpiece.

Warning! Due to higher volume levels, do not place the phone near your ear during speaker phone use.

- **3-Way Call** to set up a three-way conversation.
- **Contacts** to access the Contacts menu.
- **Recent Calls** to access the Recent Calls list.
- **Send message** to send a text message.
- **Record Voice Memo** allows you to record the current conversation.
- **Notepad** displays the phone's electronic notepad.
- **Menu** displays the phone's main menu.

End-of-Call Options

After receiving a call from or making a call to a phone number that is not in your Contacts, the phone number and the duration of the call are displayed. The right softkey displays the **Save** option. Select this option if you wish to add the new number to your Contacts. (See “Saving a Phone Number” below.)

After receiving a call from or making a call to a phone number that is already in your Contacts, the Contacts entry name and phone number and the duration of the call are displayed. To select one of the following options after a call has ended, highlight it and press **OK**:

Save to save the phone number in your Contacts list.

View to view the Contacts entry if the number is already in your Contacts list.

Note: The End-of-Call options are not displayed for calls identified as No ID or Restricted.

Saving a Phone Number

Your wireless Phone can store up to five phone numbers in each of 500 Contacts entries. Each entry's name can contain 32 characters. Your phone automatically sorts the Contacts entries alphabetically. (For more information, see Section 2G: Using the Contacts on page 85.)

To save a number from standby mode:

1. Enter a phone number.
2. Scroll to **Save** and press **OK**.
3. Select **New Entry** for a new contact or **Existing Entry** to add a number to an existing contact and press **OK**.

- Use the numeric keypad to enter the new contact name and press **OK** to save the new entry.
– or –
Search for an existing contact name and press **OK** to save the new number.
- Press **Done** (left softkey) to save the new entry.

Finding a Phone Number

You can search Contacts entries for phone numbers that contain a specific string of numbers.

To find a phone number:

- Enter one or more digits in standby mode. (The more numbers you enter, the more specific the search becomes.)
- Scroll to **Find** or **Phone book Match** and press **OK**.
- To display the Contacts entry that contains the phone number, highlight the entry and press **OK**.
- To dial the number, scroll to **Call** and press **OK**.

Tip: You can also dial the number by highlighting it and pressing **TALK** during step 3 above.

Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:

- **Hard pause** sends the next set of numbers when you press the left softkey button.
- **2-second pause** automatically sends the next set of numbers after two seconds.

Note: You can have multiple pauses in a phone number and combine 2-second and hard pauses.

To dial or save phone numbers with pauses:

1. Enter the phone number.
2. Scroll to either **Hard pause** or **2-sec pause** and press **OK**. (Hard pauses are displayed as a “P” and 2-second pauses as a “T”.)
3. Enter additional numbers.
4. Press **TALK** to dial the number.

–or–

To save the number in your Contacts list, highlight **Save** and press **OK**.

Note: When dialing a number with a hard pause, press **OK** to send the next set of numbers.

Dialing From the Contacts

To dial directly from a Contacts entry:

1. Press **Menu** (left softkey) to access the main menu. Contacts may also be accessed by pressing right on the navigation key from the idle screen.
2. Select **Contacts** (**2**).
3. Scroll to **Find/Add Entry** and press **OK** .

Shortcut: Press **Right** on the Navigation key to list entries.

4. Use your Navigation key to scroll through the Contacts list, then highlight your desired entry.
5. Press **TALK** to dial the entry's default phone number.

–or–

To dial another number from the entry, press **OK** , highlight the desired number, and press **TALK** .

Plus (+) Code Dialing

When placing international calls, you can use Plus Code Dialing to automatically enter the international access code for your location (for example, 011 for international calls made from the United States).

To make a call using Plus Code Dialing:

1. Press and hold **0** until a “+” appears on your phone display.
2. Dial the country code and phone number you're calling and press **TALK** . (The access code for international dialing will automatically be dialed, followed by the country code and phone number.)

Using One-Touch/Two-Touch Speed Dialing

You can store up to ninety-eight numbers in your phone's speed dial memory to make contacting friends and family as easy as pressing a button or two. With this feature, you can dial Speed Dial entries using one key press for locations 2-9 or two key presses for locations 10-99.

To use One-Touch Dialing for Speed Dial locations 2-9:

- ▶ Press and hold the appropriate key for approximately two seconds. The display confirms that the number has been dialed when it shows "Calling..."

To use Two-Touch Dialing for Speed Dial locations 10-99:

1. Press the first digit.
2. Press and hold the second digit for approximately two seconds. The display confirms that the number has been dialed when it shows "Calling..."

Note: Speed dialing is not available when you are roaming; when you are roaming off the Nationwide your wireless Network, you must always dial using eleven digits (1 + area code + number).

Entering Text

Selecting a Character Input Mode

Your wireless Phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry or when using your wireless Mail and SMS Text Messaging).

To change the character input mode:

1. When you display a screen where you can enter text, select **Mode** (right softkey).
2. Select one of the following options:
 - **Abc** to cycle through the alpha characters associated with the letters on the keypad (see page 33).
 - **T9Word** to enter text using a predictive text entering system that reduces the number of keys that need to be pressed while entering a word (see page 31).
 - **123** to enter numbers by pressing the numbers on the keypad (see page 34).
 - **Symbols** to enter symbols (see page 34).
 - **Smileys** to enter “emoticons” (see page 34).
 - **Preset Msg** to enter pre-programmed messages (see page 34).

Tip:

When entering text, press the * (Shift) key to change letter capitalization (**Abc** > **ABC** > **abc**).

Entering Characters Using T9 Text Input

T9 Text Input lets you enter text in Your wireless Phone by pressing keys just once per letter. (To select the **T9 Word** mode when entering text, see “Selecting a Character Input Mode” on page 30.)

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.)

To enter a word using T9 Text Input:

1. Select the **T9 Word** character input mode. (See “Selecting a Character Input Mode” on page 30.)
2. Press the corresponding keys once per letter to enter a word (for example, to enter the word “Bill,” press **2** **4** **5** **5**). (If you make a mistake, press **BACK** to erase a single character. Press and hold **BACK** to delete an entire entry.)

If the word you want does not display after you have entered all the letters, press **0** to scroll through additional word selections. To accept a word and insert a space, press **#**.

Adding a Word to the T9 Database

If a word you want to enter does not display as an option when you are using T9 Text Input, you can add it to the database.

To add a word to the T9 Text Input database:

1. Select the **Abc** character input mode. (See “Selecting a Character Input Mode” on page 30.)
2. Enter the word using multi-tap text entry. (See “Entering Characters by Tapping the Keypad” on page 33.) The word will appear as an option the next time you scroll through options during T9 Text Input.

For more information about T9 Text Input, visit the Tegic Web site at www.T9.com.

Entering Characters by Tapping the Keypad

To enter characters by tapping the keypad:

1. Select the **Abc** mode (see “Selecting a Character Input Mode” on page 30).
2. Press the corresponding keys repeatedly until the desired letter appears (for example, to enter the word “Bill,” press **2** twice, **4** three times, **5** three times, and **5** three times again). (If you make a mistake, press **BACK** to erase a single character. Press and hold **BACK** to delete an entire entry.)

By default, the first letter of an entry is capitalized and the following letters are lowercase. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Characters scroll in the following order:

1	.,@1'?!*# /
2	ABC2
3	DEF3
4	GHI4
5	JKL5
6	MNO6
7	PQRS7
8	TUV8
9	WXYZ9
0	0
#	Space
*	Shift

Entering Numbers, Symbols, Smileys and Canned Messages

To enter numbers:

- ▶ Select the **123** mode and press the appropriate key. (See “Selecting a Character Input Mode” on page 30).

To enter symbols:

- ▶ Select the **Symbols** mode. (See “Selecting a Character Input Mode” on page 30.) To enter a symbol, press the appropriate key indicated on the display.

To enter “emoticons” (smileys):

- ▶ Select the **Smileys** mode and press the appropriate key. (See “Selecting a Character Input Mode” on page 30.)

To enter canned messages:

1. Select the **Pre-set Msg** mode. (See “Selecting a Character Input Mode” on page 30.)
2. Scroll to the desired pre-programmed message and press **OK**.

Note: Canned messages make composing text messages even easier by allowing you to enter preset messages, such as “Meet me at,” “Let’s get lunch,” or a customized canned message of your own. (For more information on canned messages, please see “Managing Pre-set Messages” on page 49.)

Section 2B

Controlling Your Phone's Settings

In This Section

- ◆ Sound Settings
 - ◆ Display Settings
 - ◆ Location Settings
 - ◆ Messaging Settings
 - ◆ Airplane Mode
 - ◆ TTY Use With Your Wireless Service
 - ◆ Phone Setup Options
-

Your Phone's Settings

Using the menu options available on Your wireless Phone, you can customize your phone to sound, look, and operate just the way you want it to. This section describes how you can change your phone's settings to best suit your needs. Take a few moments to review these options and to adjust or add settings that are right for you.

Sound Settings

Ringer Types

Ringer types help you identify incoming calls and messages. You can assign ringer types to individual phone book entries, types of calls, and types of messages.

- **Preprogrammed Ringers** include a variety of standard ringer types and familiar music.
- **Vibrating Ringer** alerts you to calls or messages without disturbing others.
- **Downloaded Ringers** can be downloaded right to your phone. (See “Downloading Premium Services Content” on page 145.)

Selecting Ringer Types for Voice Calls

Your wireless Phone provides a variety of ringer options that allow you to customize your ring and volume settings. These options allow you to identify incoming calls by the ring.

To select a ringer type for voice calls:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Sounds** and press **OK** .
4. Scroll to **Ringers** and press **OK** .
5. Select the menu under **Caller ID**, **No Caller ID**, or **Roaming** and press **OK** . (The list of preprogrammed ringers displays).
6. Press the navigation button left or right to select **Default**, **Voice Memo**, or **Download** ringers.

7. Press the navigation button down to select the desired Ringer.
8. Press **OK** to Save and exit.

Selecting Ringer Types for Messages

To select a ringer type for messages:

1. Press **Menu** (left Softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Sounds** and press **OK**.
4. Scroll to **Alerts** and press **OK**.
5. Scroll to **Voicemail Alerts** or **Message Alerts** and press **OK**. (The list of preprogrammed ringers displays.)
6. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
7. Press **OK** to assign the desired ringer.

Selecting a Key Tone Length

Your phone allows you to select the duration of the audible tones accompanying a key press. (Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.)

To select a key tone length:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Sounds** and press **OK** .
4. Scroll to **KeyTones** and press **OK** .
5. Select **Short Tones** or **Long Tones** and press **OK** .

Adjusting the Phone's Volume Settings

You can adjust your phone's volume settings to suit your needs and your environment.

To adjust your phone's volume settings:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Sounds** and press **OK** .
4. Scroll to **Volume** and press **OK** .
5. Scroll to **Ringer, Earpiece, Key Beep, Application, or Power On/Off** and press **OK** .
6. Using the navigation key, choose a volume level and press **OK** .

Tip:

You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the volume key on the left side of your phone.

Alert Notification

Your wireless Phone can alert you with an audible tone when you change service areas, once a minute during a voice call, when a call has been connected, or when your phone's signal is fading.

To enable or disable alert sounds:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Sounds** and press **OK** .
4. Scroll to **Alerts** and press **OK** .
5. Select **Service Change**, **Minute Beep**, **Call Connect** or **Signal Fade** and press **OK** .
6. Select **On** or **Off** and press **OK** .

Your Phone's Settings

Silence All

There may be times when you need to silence your phone entirely. The phone's Silence All option allows you to mute all sounds without turning your phone off.

To activate Silence All:

- ▶ With the phone open, press and hold the volume key down in standby mode. (The screen will display "Silence All.")

To deactivate Silence All:

- ▶ Press the volume key up repeatedly to select a desired volume level.

Display Settings

Changing the Text Greeting

The text greeting can be up to sixteen characters and is displayed on your phone's screen in standby mode. You may choose to keep the phone's default greeting ("your wireless"), or you may enter your own custom greeting.

To display or change your greeting:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Display** and press **OK** .
4. Scroll to **Greeting** and press **OK** .
5. Select **Custom** using the navigation key and press **OK** .
6. Use the numeric keypad to enter a new custom greeting. (See "Entering Text" on page 30.) (To erase the existing greeting one character at a time, press **BACK** . To erase the entire greeting, press and hold **BACK** .)
7. Highlight **Save** and press **OK** to save your new greeting.

Changing the Backlight Time Length

The backlight setting lets you select how long the display screen and keypad are backlit after any key press is made.

To change the backlight setting:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Display** and press **OK** .

4. Scroll to **Backlight** and press **OK**.
5. Select **Main LCD** or **Keypad** and press **OK**.
6. Using the navigation key, select a time setting and press **OK**.

Note: Long backlight settings affect the battery's talk and standby times.

Changing the Display Screen

Your new your wireless Phone offers options for what you see on the display screen while powering on or off and when in standby mode.

To change the display images:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Display** and press **OK**.
4. Scroll to **Screen Saver** and press **OK**. (The list of default images displays.)
5. Press the navigation key left or right to display **Default** or **Download**.
6. Press the navigation key up or down and press **OK** to view the image. (Once an image is displayed, you can use your navigation key to scroll through and view the other default images.) For more information on downloading images, see "Downloading Premium Services Content" on page 145.)
7. Press **OK** to assign the desired image.

Changing the Display Screen for Incoming Calls

You can set the color or downloaded image (screen saver) to be shown on the Incoming Calls display.

Follow these steps:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Display** and press **OK** .
4. Scroll to **Incoming Calls** and press **OK** .
5. Select **Caller ID, No Caller ID** or **Roaming** and press **OK** .
6. Press the navigation key up or down and press **OK** to view the image. (Once an image is displayed, you can use your navigation key to scroll through and view the other default images.)
7. Press **OK** to assign the desired image.

Changing the Contrast

You can adjust your screen's contrast (brightness) to suit your surroundings.

To adjust the display's contrast:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Display** and press **OK** .
4. Scroll to **Contrast** and press **OK** .
5. Press your navigation key left or right to adjust the screen contrast and press **OK** .

Changing the Phone's Menu Style

Your wireless Phone allows you to choose how the menu appears on your display screen.

To select the display's menu style:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Display** and press **OK** .
4. Scroll to **Menu Style** and press **OK** .
5. Select **Icon** to view the main menu as an animated icon or **List** to view the main menu as a list and press **OK** .

Changing the Theme Skin

You can customize your phone's display appearance by selecting a color scheme to reflect your personality.

To change the display's theme skin:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Display** and press **OK** .
4. Scroll to **Theme Skins** and press **OK** .
5. Select **Blue Color**, **Metal Skin**, **Stars Skin**, or **Lime Color** and press **OK** .

Changing the Clock Display

Choose whether you want your phone's clock to display in analog mode, digital mode, or with time and date.

To change the clock's appearance on the standby screen:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Display** and press **OK** .
4. Scroll to **Clock** and press **OK** .
5. Scroll to **Main LCD** or **Front LCD** and press **OK** .
6. If you selected **Main LCD**, select **Normal Clock**, **Analog Clock**, **Digital Clock** or **Dual Clock**. If you selected **Front LCD**, select **Time&Date**, or **Time Only**.
7. Use your navigation key to highlight a setting and press **OK** .

Changing the Text Input Font

This setting allows you to adjust the display appearance when entering text (for example, when using the notepad or when adding a Contacts entry).

To change the text input font:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Display** and press **OK** .
4. Scroll to **Font Size** and press **OK** .
5. Select **Message**, **Browser**, or **Notepad** and press **OK** .
6. Select a desired size and press **OK** .

Changing the Power Save Mode

This feature helps conserve your battery power by restricting the display.

To change the power save mode:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Display** and press **OK** .
4. Scroll to **Power Save Mode** and press **OK** .
5. Select **30 seconds**, **60 seconds**, **90 seconds**, or **Off** and press **OK** .

Changing the Status Light Mode

This feature shows the status of your phone by blinking the light.

To change the status light mode:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Display** and press **OK** .
4. Scroll to **Status Light** and press **OK** .
5. Select **On** or **Off** and press **OK** .





Location Settings



Your wireless Phone is equipped with a Location feature for use in connection with location-based services that may be available in the future.

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

Note: Even if the Location feature is enabled, no service may use your location without your express permission, unless the service called cannot identify the caller.

To enable your phone's Location feature:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** ().
3. Scroll to **Location** and press  . (The Location disclaimer displays.)
4. Read the disclaimer and press  .
5. Select **On** or **Off** press  .

When the Location feature is on, your phone's standby screen will display the  icon. When Location is turned off, the  icon will display.

Messaging Settings

Staying connected to your friends and family has never been easier. With your phone's advanced messaging capabilities, you can send and receive many different kinds of text messages without placing a voice call. (For more information, see "Using SMS Text Messaging" on page 126.)

Your phone's messaging settings make text messaging even faster and easier. Now you can choose how you would like to be notified of new messages, automatically append a callback number and/or a customized signature with each outgoing message, and create and edit your phone's canned messages.

Your Phone's Settings

Displaying Pop-up Messages

When you receive a text message, your phone notifies you by displaying an icon on your display screen. You can also choose to have the entire text message pop up on your display screen.

To display pop-up messages:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Messaging** and press **OK** .
4. Scroll to **Notification** and press **OK** .
5. Select **Msg & Icon** or **Icon Only** and press **OK** .

Callback Number

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Messaging** and press **OK** .
4. Scroll to **Callback Number** and press **OK** .
5. Select **None**, **My Phone Number**, or **Other** and press **OK** .
(If you select **Other**, enter a number and press **OK** .)

Adding a Customized Signature

Each message you send can have a customized signature to reflect your personality.

To add a customized signature to each sent message:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Messaging** and press **OK** .
4. Scroll to **Signature** and press **OK** .
5. Select **Custom** and press **OK** . (If you do not wish to attach a signature to your outgoing messages, select **None** and press **OK** .)
6. Enter your signature and press **OK** . (See “Entering Text” on page 30.)

Managing Pre-Set Messages

Your phone is pre-set with twenty canned messages to help make sending text messages faster and easier. These messages, such as “Where are you?,” “Let’s get lunch,” and “Meet me at,” can be customized or deleted to suit your needs. You can even add your own canned messages to the list.

To edit or delete a pre-set message:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Messaging** and press **OK**.
4. Scroll to **Preset Message** and press **OK**. (The list of pre-set messages displays.)
5. To edit or delete a canned message, highlight it and press **OK**.
6. Scroll to **Edit** and press **OK**, edit the selected message (see “Entering Text” on page 30), and press **OK**.

–or–

Scroll to **Erase** and press **OK**, then select **Erase** to delete the selected message. (Select **Cancel** to cancel the deletion.)

To add a new pre-set message:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Messaging** and press **OK**.
4. Scroll to **Preset Message** and press **OK**. (The list of pre-set messages displays.)

5. To add a new canned message, scroll to **<Add New>** and press **OK**.
6. Enter your canned message (see “Entering Text” on page 30), and press **OK**. (Your new message will be added to the end of the list.)

Airplane Mode

Airplane Mode allows you to use many of your phone’s features, such as Games, Notepad, Voice Memos, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.

To set your phone to Airplane Mode:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Setup/Others** and press **OK**.
4. Scroll to **Airplane Mode** and press **OK**. (The Airplane Mode disclaimer displays.)
5. Read the disclaimer and press **OK**.
6. Select **On** or **Off** and press **OK**.

While in Airplane Mode, your phone’s standby screen will display “Phone Off.”



TTY Use With Your Wireless Service

ATTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

When establishing your wireless service, please call Your service provider via the state Telecommunications Relay Service (TRS) by first dialing **7 1 1 TALK**. Then provide the state TRS with this number: 866-727-4889.

Your Phone's Settings

To turn TTY Mode on or off:

1. Press **# # 8 8 9 #** from standby mode. (An informational message displays.)
2. Press **OK**.
3. Select **Enable TTY** and press **OK** to turn TTY Mode on.

– or –

Select **Disable TTY** and press **OK** to turn TTY Mode off.

Note: In TTY Mode, your phone will display the TTY access icon.

If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

**IMPORTANT
NOTICE:**

911 Emergency Calling

Service provider recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs) rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and PSAP community are currently working to resolve this.

Phone Setup Options

Shortcut

Your phone offers you the option of assigning a navigation key shortcut to a favorite or often-used function. Once you assign the key (Up, Down, Right, or Left), you can then press the navigation key in standby mode to launch your personally designated shortcut.

To assign your shortcut key:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Setup/Others** and press **OK** .
4. Scroll to **Shortcuts** and press **OK** . (An informative window displays.)
5. Read the information and press **OK** .
6. Select Left Navigation, Right Navigation, Up Navigation, or Down Navigation and press **OK** .
7. Using the navigation key or your keypad, select the desired shortcut you would like to assign and press **OK** .
8. Press **END** to return to standby mode.

Call Answer Mode

You can determine how to answer incoming calls on your phone, whether you want to be required to press **TALK**, to press any number key, or simply to open the phone.

To set call answer mode:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Setup/Others** and press **OK**.
4. Scroll to **Answer Call** and press **OK**.
5. To select an option, highlight it and press **OK**.
 - **Flip Open/Any Key** to allow an incoming call to be answered by opening the phone or by pressing any key.
 - **TALK Only** to require **TALK** to be pressed to answer all incoming calls.

Auto-Answer Mode

You may set your phone to automatically pick up incoming calls when connected to an optional hands-free car kit.

To set Auto-Answer mode:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Setup/Others** and press **OK** .
4. Scroll to **Auto-Answer** and press **OK** .
5. To select an option, highlight it and press **OK** .
 - **Off** to disable Auto-Answer.
 - **Car-Kit/HeadSet** to answer calls automatically when the phone is connected to a hands-free car kit or a headset (sold separately). Remember, your phone will answer calls in Auto-Answer mode even if you are not present.

Your Phone's Settings

Dialing Match

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Setup/Others** and press **OK** .
4. Scroll to **Dialing Match** and press **OK** .
5. Select **Abbreviated Dialing**, **Contacts Match**, or **Speed Dial** and press **OK** .
6. Select **Enabled** or **Disabled** and press **OK** .
7. (Abbreviated Dialing only.) If you enable **Abbreviated Dialing**, enter a five- or six-digit prefix and press **OK** .

Plus Code Dialing

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Setup/Others** and press **OK** .
4. Scroll to **Plus Code Dialing** and press **OK** .
5. Select **Enable/Disable, Int'l Dial Prefix** (to enter your default international country code), or **Info** and press **OK** .

Display Language

You can choose to display Your wireless Phone's onscreen menus in English or in Spanish.

To assign a language for the phone's display:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Setup/Others** and press **OK** .
4. Scroll to **Language** and press **OK** .
5. Select **English** or **Spanish** and press **OK** .

Section 2C

Setting Your Phone's Security

In This Section

- ◆ Accessing the Security Menu
 - ◆ Using Your Phone's Lock Feature
 - ◆ Restricting Your Phone
 - ◆ Using Special Numbers
 - ◆ Erasing the Contacts
 - ◆ Resetting Your Phone
 - ◆ Security Features for Data Services
-

By using the security settings on Your wireless Phone, you receive peace of mind without sacrificing flexibility. This section will familiarize you with your phone's security settings. With several options available, you can customize your phone to meet your personal needs.

Accessing the Security Menu

All of your phone's security settings are available through the Security menu. You must enter your lock code to view the Security menu.

To access the Security menu:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Security** and press **OK** .
4. Enter your lock code to display the Security menu.

Tip:

If you can't recall your lock code, try using the last four digits of either your Social Security number or your wireless Phone number or try 0000 or NATL (6285). If none of these work, call Customer Service at 1-888-211-4PCS (4727).

Using Your Phone's Lock Feature

Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911, or special numbers. (See "Using Special Numbers" on page 61.)

To lock your phone:

1. From the Security menu, scroll to **Lock Phone** and press **OK** .
2. Highlight **Lock now** and press **OK** . (To set your phone to lock the next time it is turned on, select **On power up** and press **OK** .)

Unlocking Your Phone

To unlock your phone:

1. From standby mode, press **Unlock** (right softkey).
2. Enter your lock code.

Changing the Lock Code

To change your lock code:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Security** and press **OK** .
4. Enter your lock code. (The Security menu is displayed.)
5. Scroll to **Change Lock** and press **OK** .
6. Enter your new lock code.
7. Re-enter your new lock code.

Calling in Lock Mode

You can place calls to 911 and to your special numbers when in lock mode. (For information on special numbers, see “Using Special Numbers” on page 61.)

To place an outgoing call in lock mode:

- ▶ To call an emergency number, or special number, enter the phone number and press **TALK** .

Restricting Your Phone

There may be occasions when you want to limit the numbers your phone can call. You can use the Restrict Calls setting to do just that. (The Restrict Calls setting does not apply to 911.)

To restrict your phone:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Security** and press **OK** .
4. Enter your lock code. (The Security menu is displayed.)
5. Scroll to **Restrict** and press **OK** .
6. Select **Unlock, Restrict All, Special Numbers, or Contacts Only** and press **OK** .
 - **Unlock** Allows all calls to be made without any restrictions. (Default setting.)
 - **Restrict All** Allows you to restrict all calls.
 - **Special Numbers** Allows you to call only the ten numbers stored in the Special Number section in the Security menu. You can receive incoming calls from anyone.
 - **Contacts Only** Allows you to call only the entries saved in the contacts. You can receive incoming calls from anyone.

Note: "Lock Code" is displayed when your restriction is set to **Contacts Only** and you make a call to a saved number or try to edit an existing entry.

Using Special Numbers

Special numbers are important numbers that you have designated as being “always available.” You can call and receive calls from special numbers even if your phone is locked.

You can save up to ten special numbers in addition to your Contacts entries (the same number may be in both directories).

To add or replace a special number:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Security** and press **OK** .
4. Enter your lock code. (The Security menu is displayed.)
5. Scroll to **Special #** and press **OK** .
6. Select a location for your entry and press **OK** .
7. Enter the number and press **OK** .

Note: There are no Speed Dial options associated with special numbers.

Erasing the Contacts

You can quickly and easily erase all of the contents of your Contacts.

To erase all the names and phone numbers in your Contacts:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Security** and press **OK** .
4. Enter your lock code. (The Security menu is displayed.)
5. Scroll to **Erase Contacts** and press **OK** .
6. If you are certain you would like to erase all of your internal Contacts entries, select **Erase all #s** and press **OK** .

Resetting Your Phone

Resetting the phone restores all the factory defaults, including the ringer types and display settings. The Contacts, Call History, Scheduler, and Messaging are not affected.

To reset your phone:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Security** and press **OK** .
4. Enter your lock code. (The Security menu is displayed.)
5. Scroll to **Reset Phone** and press **OK** . (A disclaimer appears.)
6. Read the disclaimer and press **OK** .
7. If you are certain that you would like to restore all of the factory settings, select **Yes** and press **OK** .

Security Features for Data Services

Enabling and Disabling Data Services

You can disable Data Services without turning off your phone; however, you will not have access to all Data Services, including Web and messaging. Disabling your wireless web will avoid any charges associated with Data Services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may enable Data Services again at any time.

To disable Data Services:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Web** and press **OK**.
4. Select **Disable Web** and press **OK**. (A message will appear.)
5. Select **Disable Web** and press **OK** to confirm that you want to sign out.

To enable Data Services:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Web** and press **OK** .
4. Scroll to **Enable Web** and press **OK** . (The browser will launch.)
5. Press **OK** to enable Data Services.

Section 2D

Controlling Your Roaming Experience

In This Section


- ◆ Understanding Roaming
 - ◆ Setting Your Phone's Roam Mode
 - ◆ Controlling Roaming Charges Using Call Guard
-

Roaming is the ability to make or receive calls when you're off the Nationwide your wireless Network. Your new dual band/tri-mode LX125 by LG works anywhere on the Nationwide your wireless Network and allows you to roam on other analog and 1900 and 800 MHz digital networks where we've implemented roaming agreements with other carriers.

This section explains how roaming works as well as special features that let you manage your roaming experience.

Understanding Roaming

Recognizing the Roaming Icon on the Display Screen

Your phone's display screen always lets you know when you're off the Nationwide your wireless Network. Any time you are roaming, the phone displays the roaming icon (). If you are roaming on an analog system, the roaming icon will display along with the text **– Analog Roam –**.

Tip: Remember, when you are using your phone off the Nationwide your wireless Network, always dial numbers using 11 digits (1 + area code + number).

Note: Unless your wireless service Plan includes roaming, you will pay a higher per-minute rate for roaming calls.

Roaming on Other Digital Networks

When you're roaming on digital networks, your call quality and security will be similar to the quality you receive when making calls on the Nationwide your wireless Network. However, you may not be able to access certain features, such as your wireless web.

Note: If you're on a call when you leave the Nationwide your wireless Network and enter an area where roaming is available, your call is dropped. If your call is dropped in an area where you think your wireless Service is available, turn your phone off and on again to reconnect to the Nationwide your wireless Network.

Roaming

Roaming on Analog Networks

When you roam on analog networks, you will experience a similar quality provided by other analog carriers today. Although some features, such as your wireless web, will be unavailable, you can still make and receive calls and access voicemail. If you are accustomed to your wireless Service, you may notice some of the following differences when using analog service:


- You are more likely to experience static, cross-talk, fade-out, and dropped calls.
- Some features which are standard on the enhanced Nationwide your wireless Network, such as call waiting, your wireless web, and direct international dialing, are unavailable.
- Though callers can leave voicemail messages while you are roaming, you will not receive notification until you return to the Nationwide your wireless Network. (See “Checking for Voicemail Messages While Roaming” on page 69.)
- There are security and privacy risks (eavesdropping and cloning) that exist with conventional analog services today.
- Your battery’s charge will deplete more quickly and you will need to recharge it more often when you use your phone for analog roaming.

Note: When using your phone in analog mode, the phone may feel warm. This is normal for analog operation.

Checking for Voicemail Messages While Roaming

When you are roaming off the Nationwide your wireless Network, you will not receive on-phone notification of new voicemail messages. Callers can still leave messages, but you will need to periodically check your voicemail for new messages if you are in a roaming service area for an extended period of time.

To check your voicemail while roaming:

1. Dial 1+area code+Your wireless Phone number.
2. When you hear your voicemail greeting, press .
3. Enter your pass code at the prompt and follow the voice prompts.

When you return to the Nationwide your wireless Network, voicemail notification will resume as normal.



Roaming

Setting Your Phone's Roam Mode

Your wireless Phone allows you to control your roaming capabilities. By using the **Roaming** menu option, you can determine which signals your phone accepts.

Set Mode

Choose from three different settings on your dual-band phone to control your roaming experience.

To set your phone's roam mode:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Roaming** and press **OK** .
4. Scroll to **Set Mode** and press **OK** .
5. To select an option, highlight it and press **OK** .
 - **Automatic** seeks your wireless Service. When your wireless Service is unavailable, the phone searches for an alternate system.
 - **Home Only** allows you to access the Nationwide your wireless Network only and prevents roaming on other networks.
 - **Roaming Only** forces the phone to seek a roaming system. The previous setting (Home Only or Automatic) is restored the next time the phone is turned on.

Controlling Roaming Charges Using Call Guard

Your phone has two ways of alerting you when you are roaming off the Nationwide your wireless Network: the onscreen roaming icon and Call Guard. Call Guard makes it easy to manage your roaming charges by requiring an extra step before you can place or answer a roaming call. (This additional step is not required when you make or receive calls while on the Nationwide your wireless Network.)

To turn Call Guard on or off:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Roaming** and press **OK** .
4. Scroll to **Call Guard** and press **OK** .
5. Highlight **On** or **Off** and press **OK** .

Note: Voice Dialing and Speed Dialing are not available when you are roaming with Call Guard enabled.

Roaming

To place roaming calls with Call Guard on:

1. From standby mode, dial 1 + area code + the seven-digit number and press **TALK**. (You can also initiate a call from the Contacts, Call History, or Messaging.)
2. Select **Roam Call** (**1**).

To answer incoming roaming calls with Call Guard on:

1. Press **TALK**. (A message will appear notifying you that roaming charges will apply.)
2. Select **Answer** (**1**).

Reminder: If the Call Guard feature is set to **On**, you need to take extra steps to make and receive roaming calls.

Section 2E

Navigating Through Menus

In This Section

- ◆ Menu Navigation
 - ◆ Menu Structure
 - ◆ Viewing the Menus
-

Every function and feature of Your wireless Phone can be accessed through an onscreen menu. This section is a road map to using your LX125 by LG . Please take a few moments to learn your way around and you'll find your phone easier to use.



Menus

Menu Navigation

The navigation key on Your wireless Phone allows you to scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

To navigate through a menu, simply press the navigation key up or down. If you are in a first-level menu, such as **Settings**, you may also navigate to the next or previous first-level menu by pressing the navigation key right or left.

Menu Structure

Selecting Menu Items

As you navigate through the menu, menu options are highlighted. Select any numbered option by simply pressing the corresponding number on the phone's keypad. You may also select any item by highlighting it and pressing **OK**.

For example, if you want to view your last incoming call:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Call History** by pressing **1** or by highlighting it and pressing **OK**. (It may already be highlighted.)
3. Select **Incoming Calls** by highlighting it and pressing **OK**. (If you have received any calls, they are displayed on the screen.)

Backing Up Within a Menu

To go to the previous menu:

- ▶ Press **BACK**.

To return to standby mode:

- ▶ Press **END**.

Viewing the Menus

Menu Diagram

The following list outlines your phone's menu structure.

1. Call History

Outgoing Calls
 Incoming Calls
 Missed Calls
 Delete Calls

Outgoing Calls/Incoming Calls/
 Missed Calls/All Calls

2. Contacts

Find/Add Entry
 Groups
 Speed Dials
 Voice Dials
 My Phone Number
 Services

Customer Service/Dir Assistance/
 Operator

3. Messaging

Send message
 Inbox
 Outbox
 Draft
 Picture Messaging
 Instant Message
 Voicemail
 Edit Folder

Call Voicemail/Clear Icon
 Create Folder/Erase Folder

Menus

4. Downloads

Games	Get New Games/My Content Manager
Ringers	Get New Ringers/My Content Manager
Screen Savers	Get New Screen Savers/My Content Manager
Applications	Get New Applications/My Content Manager
<Memory Status>	

5. Web

Launch

6. Tools

Scheduler	
Alarm Clock	Alarm 1/Alarm 2/Alarm 3/Quick Alarm
Voice Memo	
Notepad	
Ez Tip Calc	
Calculator	
World Clock	

7. Settings

Sounds

Ringers	Caller ID/No Caller ID/Roaming
Key Tones	Short Tones/Long Tones
Volume	
Ringer	[Volume levels]
Earpiece	[Volume levels]
Key Beep	[Volume levels]
Application	[Volume levels]
Power On/Off	[Volume levels]

Alerts

Voicemail Alerts	Silent/Custom/Vib & Sound/Vib once/ 1 Low beep/Low beeps/1 Loud beep/ Loud beeps
Message Alerts	Silent/Custom/Vib & Sound/Vib once/ 1 Low beep/Low beeps/1 Loud beep/ Loud beeps
Service Change	On/Off
Minute Beep	On/Off
Call Connect	On/Off
Signal Fade	On/Off

Display

Greeting	Custom/Off
----------	------------

Backlight	
Main LCD	8 seconds/15 seconds/Always off/ Always on
Keypad	8 seconds/15 seconds/30 seconds/ Always off
Screen Saver	Default/Download
Incoming Calls	Caller ID/No Caller ID/Roaming
Contrast	
Menu Style	Icon/List
Theme Skins	Blue Color/Metal Skin/Stars Skin/ Lime Color
Clock	
Main LCD	Normal Clock/Analog Clock/ Digital Clock/Dual Clock
Front LCD	Time&Date/Time Only
Font Size	
Message	Small/Normal/Large
Browser	Small/Normal/Large
Notepad	Small/Normal/Large
Power Save Mode	30 seconds/60 seconds/90 seconds/Off
Status Light	On/Off
Web	
Enable Web (Disable Web)	
Net Guard	On/Off
Update Web Profile	
Roaming	
Set Mode	Automatic/Home Only/Roaming Only
Call Guard	On/Off
Location	On/Off
Messaging	Notification/Callback Number/ Signature/Preset Message [Enter Lock Code]
Security	
Lock Phone	Unlock/Lock now/On power up
Restrict	Unlock/Restrict All/Special Numbers/ Contacts Only
Change Lock	
Special #	
Erase Contacts	Erase all #s/Cancel
Reset Phone	Yes/No
Voice Dial	Activate/Train Words
Setup/Others	

Shortcuts	Left Navigation/Right Navigation/ Up Navigation/Down Navigation
Answer Call	Flip Open/Any Key, TALK Only
Auto-Answer	Off, Car-Kit/HeadSet
Dialing Match	Abbreviated Dialing/Contacts Match/ Speed Dial
Plus Code Dialing	Enable/Disable, Int'l Dial Prefix, Info
Auto Volume	On/Off
Language	English/Spanish
TTY Mode	Enable TTY/Disable TTY
Airplane Mode	On/Off
Update Phone SW	
Phone Info	My Phone Number/Version/ Icon Glossary/Advanced

Section 2F

Managing Call History

In This Section

- ◆ Viewing History
 - ◆ Call History Options
 - ◆ Making a Call From Call History
 - ◆ Saving a Phone Number From Call History
 - ◆ Prepending a Phone Number From Call History
 - ◆ Deleting Call History
-

The **Call History** keeps track of incoming calls, calls made from Your wireless Phone, and missed calls. This section guides you through accessing and making the most of your Call History.

Call History

Viewing History

You'll find the Call History feature very helpful. It is a list of the last 20 phone numbers (or Contacts entries) for calls you placed, accepted, or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Contacts entry name (if the phone number is in your Contacts). Duplicate calls (same number and type of call) may only appear once on the list.

To view a Call History entry:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Call History** (**1**).
3. Scroll to **Outgoing Calls, Incoming Calls, Missed Calls, or Delete Calls** and press **OK** .
4. Highlight the entry you wish to view and press **OK** .

Call History Options

For additional information and options on a particular call, highlight a Call History entry and press **OK**. This feature displays the date and time of the call, the phone number (if available), and the caller's name (if the number is already in your Contacts). By pressing **OK**, you can select from the following options:

- **Call** to dial the number.
- **Save** to save the number if it is not already in your internal Contacts. (See “Saving a Phone Number From Call History” on page 82.)
- **Send message** to send a message.
- **Prepend** to add numbers to the beginning of the selected number. (See “Prepending a Phone Number From Call History” on page 83.)
- **Erase** to delete the entry.
- **Next** to view the next entry.
- **Prev** to view the previous entry.

Tip: You can also view the next Call History entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

Making a Call From Call History

To place a call from Call History:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Call History** (**1**).
3. Scroll to **Outgoing Calls**, **Incoming Calls**, or **Missed Calls** and press **OK**.
4. Use your navigation key to select a Call History entry and press **TALK**.

Note: You cannot make calls from Call History to entries identified as **No ID** or **Restricted**.

Saving a Phone Number From Call History

Your wireless Phone can store up to 200 Contacts entries. Contacts entries can store up to a total of 5 phone numbers, and each entry's name can contain 32 characters.

To save a phone number from Call History:

1. Use your navigation key to select a Call History entry and press **OK**.
2. Scroll to **Save** and press **OK**.
3. Select **New Entry** to create a new internal Contacts entry for the number or **Existing Entry** to save the number to an existing entry.

4. Use your navigation key to highlight the information you want to edit, then press **OK**.
5. Use the keypad to type in the new entry name and press **OK**.

–or–

Use your navigation key to scroll through your existing phone book entries, highlight a name, and press **OK**.

After you have saved the number, the new Contacts entry is displayed. (See “Contacts Entry Options” on page 89.)

Note: You cannot save phone numbers already in your Contacts or from calls identified as **No ID** or **Restricted**.

Prepending a Phone Number From Call History

If you need to make a call from Call History and you happen to be outside your local area code, you can add the appropriate prefix by prepending the number.

To prepend a phone number from Call History:

1. Select a Call History entry and press **OK**.
2. Scroll to **Prepend** and press **OK**.
3. Enter the prefix and press **TALK** to call the number.

–or–

Scroll to **Save** and press **OK** to save the amended number in your phone book.

Call History

Deleting Call History

To erase individual Call History entries, see “Call History Options” on page 81.

To erase Call History:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Call History** (**1**).
3. Scroll to **Delete Calls** and press **OK** .
4. Scroll to **Outgoing Calls**, **Incoming Calls**, **Missed Calls**, or **All Calls** and press **OK** . (A confirmation dialog will appear.)
5. If you are certain you want to erase the call history, scroll to **Erase** and press **OK** .

–or–

Scroll to **Cancel** and press **OK** to return to the previous menu.

Section 2G

Using the Contacts

In This Section

- ◆ Adding a New Contacts Entry
 - ◆ Finding Contacts Entries
 - ◆ Contacts Entry Options
 - ◆ Adding a Phone Number to a Contacts Entry
 - ◆ Editing a Contacts Entry's Phone Number
 - ◆ Assigning Speed Dial Numbers
 - ◆ Creating Voice Dial Tags
 - ◆ Editing a Contacts Entry
 - ◆ Selecting a Ringer Type for an Entry
 - ◆ Dialing your wireless Services
-

Now that you know the basics that make it easier to stay in touch with people and information, you're ready to explore your phone's more advanced features. This section explains how to use your phone's Contacts and helps you make the most of your contacts and time when you are trying to connect with the important people in your life.

Adding a New Contacts Entry

Your wireless Phone can store up to 500 Contacts entries. Contacts entries can contain up to a total of 5 phone numbers (up to 600 numbers total), and each entry's name can contain 32 characters.

To add a new entry:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Contacts** (**2**).
3. Scroll to **Find/Add Entry** and press **OK** .
4. Scroll to **<New Entry>** and press **OK** .
5. Enter a name for the new entry and press **OK** . (See "Entering Text on page 30.)
6. Scroll to [Add Number], enter the phone number, then press **OK** .
7. Select a label field (Mobile, Home, Office, Fax, or Pager) and press **OK** .
8. Scroll down to additional fields and enter or edit information as desired.
9. Press **Done** (left softkey).

Shortcut: You can also begin by entering the phone number in standby mode and selecting Save. (See "Saving a Phone Number" on page 25.)

After you have saved the number, the new Contacts entry is displayed. (See "Contacts Entry Options" on page 89.)

Finding Contacts Entries

There are several ways to display your Contacts entries: by name, by speed dial number, by group, and by voice dial tags. Follow the steps outlined in the sections below to display entries from the Contacts menu.

Finding Names

To find Contacts entries by name:

1. Press **Menu** (left softkey) to access the main menu.
 2. Select **Contacts** (**2**).
 3. Scroll to **Find/Add Entry** and press **OK** .
 4. Scroll through all the entries using your navigation key.
 5. Enter the first letter of a name or part of a name (such as “ave” for “Dave”). (The more letters you enter, the more your search narrows.)
 6. To display an entry, highlight it and press **OK** .
 7. To dial the entry’s default phone number, press **TALK** .
- or–

To display additional internal Contacts entries, press the navigation key left or right.

Shortcut: From standby mode, press the navigation key right to display the Find/Add Entry screen.

Finding Group Entries

To find entries designated as part of a group:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Contacts** (**2**).
3. Scroll to **Groups** and press **OK**.
4. Scroll through the group titles using your navigation key. To display entries belonging to a group, highlight the group and press **OK**.
5. To display an entry within the group, highlight it and press **OK**.
6. To dial the entry's default phone number, press **TALK**.

–or–

To display additional group entries, press the navigation key left or right.

Finding Speed Dial Numbers

To find phone numbers you have stored in speed dial locations:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Contacts** (**2**).
3. Scroll to **Speed Dials** and press **OK**.
4. Scroll through speed dial entries using your navigation key. Speed dial numbers are displayed in numeric order.
–or–
Enter the number of a speed dial location using your keypad.
5. To display an entry's speed dial options, highlight it and press **OK**.

– or –

To dial the speed dial number, press **TALK**.







Finding Voice Dial Numbers

To find phone numbers you have stored in Voice Dial:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Contacts** (**2**).
3. Scroll to **Voice Dials** and press **OK**.
4. Scroll through voice dial entries using your navigation key.
5. To display an entry's voice dial options, highlight it and press **OK**.

Contacts Entry Options


To access a Contacts entry's options, display the entry, highlight **<Edit Entry>** and press **OK**. To select an option, highlight it and press **OK**.

-  **[Add Number]** to add a phone number to the entry. (See "Adding a Phone Number to a Contacts Entry" on page 90.)
-  **Add Email** to add an email address to the entry.
-  **No Group** to assign the entry to a group.
-  **Default** to assign a preprogrammed or downloaded ringer.
-  **[Memo]** to add a note, street address, or other information.
-  **LG Animation** to assign an image type to the entry.

-  [URL] to add a web site's URL to the entry.

Tip: You can view the next entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

To edit Avatar:

1. Display a Contacts entry (see “Finding Contacts Entries” on page 87).
2. Scroll to <Edit Entry> and press **OK**.
3. Highlight  **LG Animation** and press **OK**.
4. Press the navigation key left or right, select **Avatar** and press **OK**.
5. Press the navigation key up or down to select **Hair**, **Deco**, **Clothes**, or **Face**.
6. Press the navigation key left or right, select the desired image and press **OK** (left softkey).
7. Press **Save** (left softkey) to save the avatar.
8. Press **Done** (left softkey) to save the Contacts entry.

Note: After editing and saving Avatar, the entry's image type is changed from Default to **Avatar**.

Adding a Phone Number to a Contacts Entry

To add a phone number to an entry:

1. Display a Contacts entry (see “Finding Contacts Entries” on page 87).
2. Scroll to <Edit Entry> and press **OK**.
3. Highlight **[Add Number]** and press **OK**.

4. Enter the new phone number and press **OK**.
5. Select a label for the number and press **OK**.
6. Press **Done** (left softkey) to save the new number.

–or–

Press **Options** (right softkey), assign a Speed Dial or Voice Dial for the number, then press **Done** (left softkey) to save your new settings.

Editing a Contacts Entry's Phone Number

To edit an entry's phone number:

1. Display a Contacts entry (see page 91).
2. Scroll to **<Edit Entry>** and press **OK**.
3. Highlight the number you wish to edit and press **OK**.
4. Press **OK** again to edit the number.
5. Press **BACK** to clear one digit at a time, or press and hold **BACK** to erase the entire number.
6. Re-enter or edit the number and press **OK**.
7. Select a label for the number and press **OK**.
8. Press **Done** (left softkey) to save the number.

–or–

Press **Options** (right softkey) for additional options. When you're finished, press **Done** (left softkey) to save your new settings.

Assigning Speed Dial Numbers

Your phone can store up to 99 phone numbers in speed dial locations. For details on how to make calls using speed dial numbers, see “Using One-Touch/Two-Touch Speed Dialing” on page 29.

Speed dial numbers can be assigned when you add a new Contacts entry, when you add a new phone number to an existing entry, or when you edit an existing number.

To assign a Speed Dial number to a new phone number:

1. Add a phone number to a new or to an existing Contacts entry. (See “Adding a New Contacts Entry” on page 86 or “Adding a Phone Number to a Contacts Entry” on page 90.)
2. Press **Options** (right softkey).
3. Highlight **Set Speed Dial** and press **OK**.
4. Select an available speed dial location and press **OK**.
5. Scroll to **Set Speed Dial** and press **OK**.
(A confirmation will display.)
6. Press **Done** (left softkey) to save the new Speed Dial.

To assign a Speed Dial number to an existing phone number:

1. Display a Contacts entry. (See “Finding Contacts Entries” on page 87.)
2. Scroll to **<Edit Entry>** and press **OK**.
3. Highlight the phone number for which you wish to assign a speed dial number, and press **Options** (right softkey).
4. Highlight **Set Speed Dial** and press **OK**.

5. Select an available speed dial location and press **OK**.
6. Scroll to **Set Speed Dial** and press **OK**.
(A confirmation will display.)
7. Press **Done** (left softkey) to save the new Speed Dial.

Note: If you attempt to assign an already in-use speed dial location to a new phone number, a dialog will appear asking if you wish to replace the existing speed dial assignment. Select **Yes** to assign the location to the new phone number and delete the previous speed dial assignment.

Creating Voice Dial Tags

Your phone can store up to 30 phone numbers in voice dial tags.

To record a new voice dial:

1. Display a Contacts entry. (See "Finding Contacts Entries" on page 87).
2. Scroll to **<Edit Entry>** and press **OK**.
3. Highlight the number to which you wish to add a voice dial.
4. Press **Options** (right softkey).
5. Highlight **Set Voice Dial** and press **OK**.
6. Scroll to **OK** and press **OK**.
7. Record your voice dial after the prompt. (Your recording will play back.)
8. Repeat the voice dial as prompted. (A confirmation will display.)
9. Press **Done** (left softkey) to save the new voice dial.

Note: To add a voice dial to a new entry or a new phone number, enter the number (see "Adding a New Contacts Entry" on page 86 or "Adding a Phone Number to a Contacts Entry" on page 90), then follow steps 4-9 above.

Note: When recording Voice Dial tags, do it in a quiet environment and without the aid of an accessory (for example, a headset or hands-free car kit).

Editing a Contacts Entry

To make changes to an entry:

1. Display an internal Contacts entry.
2. Scroll to **<Edit Entry>** and press **OK**.
3. Highlight the part of the entry you wish to edit (**Name**, **Group**, **Ringer**, etc.) and press **OK**.
4. Add and/or edit the desired information and press **OK**.
5. Press **Done** (left softkey) to save your changes.

Selecting a Ringer Type for an Entry

You can assign a ringer type to a Contacts entry so you can identify the caller by the ringer type. (See “Ringer Types” on page 36.)

To select a ringer type for an entry:

1. Display a Contacts entry.
2. Scroll to **<Edit Entry>** and press **OK**.
3. Highlight the current ring type and press **OK**.
4. Press the navigation key to the right and highlight the desired Ringer Category.
5. Use your navigation key to scroll through available ringers. (When you highlight a ringer type, a sample ringer will sound.)
6. Highlight your desired ringer and press **OK**.
7. Press **Done** (left softkey) to save the new ringer type.

— or —

1. Display a Contacts entry and scroll to **<Edit Entry>** and press **OK**.
2. Highlight the current ring type and press the navigation key right or left to display available ringer types. (To hear a preview, select a ringer and press **OK**; press **OK** again to return to the **Edit** menu.)
3. When you’ve selected your desired ringer, press **Done** (left softkey) to save the new ringer type.

Dialing Your Wireless Services

Your Contacts list is preprogrammed with contact numbers for various your wireless Services.

To dial a service from your Contacts:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Contacts** (**2**).
3. Scroll to **Services** and press **OK** .
4. Scroll to **Customer Service**, **Dir Assistance**, or **Operator** and press **TALK** .

To dial a service from standby mode using your keypad:

1. Dial the appropriate service number:
 - **Customer Service** – * **6 1 1**
 - **Dir Assistance** – **4 1 1**
 - **Operator** – **0**
2. Press **TALK** to place the call.

Section 2H

Using the Phone's Calendar and Tools

In This Section

- ◆ Using Your Phone's Calendar
 - ◆ Using Your Phone's Alarm Clock
 - ◆ Using Your Phone's Notepad
 - ◆ Using Your Phone's Tools
-

Your wireless Phone is equipped with several personal information management features that help you manage your busy lifestyle. This section shows you how to use these features to turn your phone into a time management planner that helps you keep up with your contacts, schedules, and commitments. It takes productivity to a whole new level.

Using Your Phone's Calendar

Adding an Event to the Calendar

Your Calendar helps organize your time and reminds you of important events.

To add an event:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Tools** (**6**).
3. Scroll to **Scheduler** and press **OK** .
4. Using your navigation key, highlight the day to which you would like to add an event and press **Add** (left softkey).

Tip: Press the navigation key up or down to scroll by week through the Calendar.

5. Select a time for the event by highlighting the time field and pressing **OK** .
 - Using your keypad and/or navigation key, set the start and end time for the event and press **OK** . Press your navigation key left or right to switch between entry fields.
6. Select a title for the event by highlighting [**Content**] and pressing **OK** .
 - Enter the event title and press **OK** . (See “Entering Text” on page 30).

7. Select a repeating status for the event by highlighting the repeat field and pressing **OK**.
 - Highlight **None**, **Daily**, **Mon - Fri**, **Weekly**, **Monthly**, or **Yearly** and press **OK**.
8. Select an alarm time for the event by highlighting the alarm field and pressing **OK**.
 - Highlight **None**, **On time**, **5 minutes**, **10 minutes**, **1 hour**, **1 day**, or **2 days** and press **OK**.
9. Select a ringer type for the alarm by highlighting the ringer field and pressing **OK**.
 - Highlight your desired ringer and press **OK**.
10. Press **Save** (left softkey) to save the event.

Shortcut:

You can select an event's repeating status, alarm time, and ringer type by highlighting the desired field and pressing the navigation key right or left to scroll through the available options. Once you've chosen the desired option, just press the navigation key down to proceed to the next item.

Event Alerts

There are several ways Your wireless Phone alerts you of scheduled events:

- By playing the assigned ringer type.
- By illuminating the backlight.
- By flashing the LED.

Event Alert Menu

When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the event summary. To silence the alarm and reset the schedule, press **OK**.

To view additional options, press the appropriate softkey.

- **Dismiss** (right softkey).
- **Snooze** (left softkey) silences the alarm and schedules it to replay again in 5 minutes.

Viewing Events

To view your scheduled events:

1. From the main menu, select **Tools** (**6**).
2. Scroll to **Scheduler** and press **OK**.
3. Using your navigation key, highlight the day for which you would like to view events and press **OK**. (If you have events scheduled for the selected day, they will be listed in chronological order).

Tip: In the calendar view, days with events scheduled are underlined.

4. To display the details of an event listed in the schedule, highlight it and press **OK**.

Going to Today's Calendar Menu

To go to the Calendar menu for today's date:

1. From the main menu, select **Tools** (**6**).
2. Scroll to **Scheduler** and press **OK** .
3. Press **Options** (right softkey).
4. Scroll to **Go to today** and press **OK** .

Erasing a Day's Events

To erase a day's scheduled events:

1. From the main menu, select **Tools** (**6**).
2. Scroll to **Scheduler** and press **OK** .
3. Using your navigation key, highlight the day for which you would like to erase events and press **OK** .

Tip: In the calendar view, days with events scheduled are underlined.

4. Press **Options** (right softkey) and Scroll to **Erase all** and press **OK** . (An alert will appear notifying you of the number of events to be erased.)
5. Scroll to **Erase** or **Cancel** and press **OK** .

Note: If the day for which you are erasing events contains a repeating event, you will receive the following prompt: "This is a recurring event." Select **Erase all** to erase all occurrences of the event, or **Cancel** to cancel the deletion of the repeating event.

Purging Events

To delete events scheduled before a specific time and date:

1. From the Scheduler menu, press **Options** (right softkey).
2. Scroll to **Erase old** and press **OK**.
3. Select the option to erase events older than **One week**, **One month**, **One year**, or **One day** and press **OK**.
(A dialog will display to inform you how many old events have been erased.)

Purging All Events

To delete all scheduled events:

1. From the Scheduler menu, press **Options** (right softkey).
2. Scroll to **Erase all** and press **OK**. (A dialog will display informing you that all events will be erased.)
3. Select **Erase** to erase all events or **Cancel** to return to the calendar view.

Using Your Phone's Alarm Clock

Your phone comes with a built-in alarm clock with multiple alarm capabilities.

To use the alarm clock:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Tools** (**6**).
3. Scroll to **Alarm Clock** and press **OK** .
4. Scroll to **Alarm 1**, **Alarm 2**, **Alarm 3**, or **Quick Alarm** and press **OK** .
5. Turn the alarm on or off by highlighting the activation field and pressing **OK** .
 - Select **On** or **Off** and press **OK** .
6. Select a time for the alarm by highlighting the time field and pressing **OK** .
 - Using your keypad and/or navigation key, set the alarm time and press **OK** .
7. Select a repeating status for the alarm by highlighting the repeat field and pressing **OK** .
 - Highlight **Once**, **Daily**, **Mon - Fri**, or **Weekends** and press **OK** .
8. Select a ringer type for the alarm by highlighting the ringer field and pressing **OK** .
 - Highlight your desired ringer and press **OK** .
9. Press **Save** (left softkey) to save your alarm settings.

Using Your Phone's Notepad

Your wireless Phone comes with a notepad you can use to compose and store reminders and notes to help keep you organized.

To compose a note:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Tools** (**6**).
3. Scroll to **Notepad** and press **OK** .
4. Scroll to **<Add New>** and press **OK** .
5. Type your note using the numeric keypad and press **OK** . (See “Entering Text” on page 30).

To read a saved note:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Tools** (**6**).
3. Scroll to **Notepad** and press **OK** .
4. Highlight a note and press **OK** .

To delete saved notes:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Tools** (**6**).
3. Scroll to **Notepad** and press **OK** .
4. Highlight a note and press **OK** .
5. Press **Erase** (right softkey).
6. Scroll to **Erase** and press **OK** .

Using Your Phone's Tools

In addition to helping you be more efficient and organized, Your wireless Phone offers useful and entertaining tools.

Using EZ Tips






To quickly and easily calculate tip amounts:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Tools** (**6**).
3. Scroll to **Ez Tip Calc** and press **OK** .
4. Use your keypad and navigation key to enter the bill amount and desired tip percentage. (The correct tip will be calculated instantly.)
5. If you're splitting the check, highlight **Split** and enter the number of people in your party. (An equal split of the bill will be calculated and displayed.)

Using the Calculator



Your phone comes with a built-in calculator.

To use the calculator:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Tools** ().
3. Scroll to **Calculator** and press  .
4. Enter numbers using your keypad.
 - Press  to enter decimal points.
 - Press  to change the numeric value from positive to negative.
 - Press **Clear** (left softkey) to clear all numbers.
5. Press  for the total.

World Clock

To view the time in over fifty different locations:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Tools** ().
3. Scroll to **World Clock** and press  .
4. Press **Cities** (right softkey) to select a city.

— or —

Press the navigation key left or right to scroll through different time zones.

Section 21

Using Your Phone's Voice Services

In This Section

- ◆ Using Voice-Activated Dialing
 - ◆ Managing Voice Memos
-


Your wireless Phone's Voice Services let you place calls using your voice, store voice reminders, and record memos right on your phone. This section includes easy-to-follow instructions on using voice-activated dialing and managing voice memos.

Using Voice-Activated Dialing

You can use a voice dial tag to automatically dial a phone number in your Contacts. (A voice dial tag is a command you record and use to place calls without using the keypad.) Your phone can store up to 30 voice dial tags.

Making a Call Using Voice-Activated Dialing





To use a voice dial tag to call a phone number:

1. Press  (side call key).
2. Follow the voice prompts and recite the entry's voice dial tag into your phone's microphone.

Tip: Record voice dial tags in a quiet environment and without the aid of an accessory (for example, a headset or hands-free car kit).

Programming Voice Dial Tags

To program a voice dial tag:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Contacts** ().
3. Scroll to **Voice Dials** and press .
4. Scroll to **<Record New>** and press .
5. Enter or highlight the entry (name) in the Contacts and press .

Tip: If an entry has more than one number, press the navigation key right or left to select the desired number, then press **OK**.

6. After you are prompted to say the name you wish to program, wait for the beep and then say the name into your phone's microphone.
7. Respond to the prompt by repeating the name after the beep.

Reviewing Voice Dial Tags

To review voice dial tags:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Contacts** (**2**).
3. Scroll to **Voice Dials** and press **OK** .
4. Highlight the voice dial entry you want to review and press **OK** .
5. Highlight an option and press **OK** .
 - **Play** to play the selected voice dial tag.
 - **Re-record** to re-record the voice dial tag.
 - **Erase** to erase the voice dial tag. Select **Erase** to erase; select **Cancel** to cancel.

Erasing All Voice Dial Tags

To erase all voice dial tags:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Contacts** (**2**).
3. Scroll to **Voice Dials** and press **OK** .
4. Scroll to **<Erase All>** and press **OK** .
5. Select **Erase All** to erase all recorded voice dial tags; select **Cancel** to cancel.

Managing Voice Memos

You can use your phone's Voice Services to record brief memos to remind you of important events, phone numbers, or grocery list items.

Recording Voice Memos

To record a voice memo:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Tools** (**6**).
3. Scroll to **Voice Memo** and press **OK** .
4. Scroll to **<Record New>** and press **OK** . (The phone prompts you to start recording after the beep.)
5. Wait for the beep and then start speaking. (As it is recording, the phone displays a countdown timer that shows how many seconds are left for recording.)

To end the recording of your memo:

- ▶ Press **OK** .

To record a conversation during a phone call:

- ▶ During a call, scroll to **Record Voice Memo** and press **OK** . (A one minute counter is displayed on the screen to indicate the amount of time a single voice memo can be recorded.)

To end the recording of your conversation:

- ▶ Scroll to **Stop** and press **OK** to end the recording prior to the countdown completion.

Note: Your phone can store a total of 3 minutes of memos.

Voice Memo Options

 
 
 
To play the voice memos you have recorded:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Tools** (**6**).
3. Scroll to **Voice Memo** and press **OK** .
4. Scroll to the voice memo you wish to hear and press **OK** .
 - **Play** to play the selected voice memo.
 - **Set As** to assign the recording as a default ringer, a voicemail alert, message alert, or a Contacts ringer.
 - **View Details** to view the selected voice memo information.
 - **Edit Title** to edit the selected voice memo title.
 - **Erase** to erase the selected voice memo.
5. Scroll to **Play** and press **OK** .

Erasing Voice Memos




To erase all voice memos:




1. Press **Menu** (left softkey) to access the main menu.
2. Select **Tools** (**6**).
3. Scroll to **Voice Memo** and press **OK** .
4. Scroll to **<Erase All>** and press **OK** .
5. Scroll to **Yes**, and press **OK** to confirm that you want to erase the voice memo.



Section 3

      Service Features





Section 3A

Service Features: The Basics

Service Features

In This Section

- ◆ Using Voicemail
 - ◆ Using SMS Text Messaging
 - ◆ Using Caller ID
 - ◆ Responding to Call Waiting
 - ◆ Making a Three-Way Call
 - ◆ Using Call Forwarding
-

Now that you've mastered your phone's fundamentals, it's time to explore the calling features that enhance your wireless service. This section outlines your basic your wireless Service features.

Using Voicemail

Setting Up Your Voicemail

All unanswered calls to Your wireless Phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up Your wireless Voicemail and personal greeting as soon as your phone is activated.


To set up your voicemail:

1. Press and hold **1**.
2. Follow the system prompts to:
 - Create your pass code
 - Record your greeting
 - Record your name announcement
 - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding **1**), bypassing the need for you to enter your pass code)

Note: If you are concerned about unauthorized access to your voicemail account, Service provider recommends you enable your voicemail passcode.

Voicemail Notification

There are several ways Your wireless Phone alerts you of a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By the LED blinking red.
- By displaying  at the top of your screen.

New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.

To call your voicemail:

- ▶ Press and hold **1**.

To display your Missed Log:

- ▶ Press **exit** (right softkey).

Important: When you are roaming off the Nationwide your wireless Network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + Your wireless Phone number. When your voicemail answers, press (*) and enter your pass code. You will be charged roaming rates when accessing voicemail while roaming off the Nationwide your wireless Network.

Note: Your phone accepts messages even when it is turned off. However, you are only notified of new messages when your phone is turned on and you are in your wireless Service Area.

Retrieving Your Voicemail Messages

You can review your messages directly from Your wireless Phone or from any other touch-tone phone. To dial from Your wireless Phone, you can either speed dial your voicemail or use the menu keys.

Using One-Touch Message Access

- ▶ Press and hold **1** . (Your phone will dial your voicemail box.)

Using the Menu Keys on Your Phone to Access Your Messages

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Messaging** (**3**).
3. Scroll to **Voicemail** and press **OK**.
4. Press **TALK** to listen to your messages.

Note: You are charged for airtime minutes when you are accessing your voicemail from Your wireless Phone.

Using a Phone Other Than Your wireless Phone to Access Messages

1. Dial Your wireless Phone number.
2. When your voicemail answers, press *****.
3. Enter your pass code.

Tip: When you call into voicemail, you first hear the header information (date, time, and sender information) for the message. To skip directly to the message, press **4** during the header.

Voicemail Button Guide

Here's a quick guide to your keypad functions while listening to voicemail messages. For further details and menu options, see "Voicemail Menu Key" on page 124.

1	2	3
Date/Time	Send Reply	Advance
4	5	6
Replay	Rewind	Forward
7	8	9
Erase	Call Back	Save
*	0	#
Cancel	Help	Skip

Vicemail Options

Your wireless Phone offers several options for organizing and accessing your voicemail.

Using Expert Mode

Using the Expert Mode setting for your personal voicemail box helps you navigate through the voicemail system more quickly by shortening the voice prompts you hear at each level.

To turn Expert Mode on or off:

1. Press and hold **1** to access your voicemail. (If your voicemail box contains any new or saved messages, press ***** to access the main voicemail menu.)
2. Press **3** to change your Personal Options, following the system prompts.
3. Press **4** for Expert Mode.
4. Press **1** to turn Expert Mode on or off.

Setting Up Group Distribution Lists

Create up to 20 separate group lists, each with up to 20 customers.

1. Press and hold **1** to access your voicemail. (If your voicemail box contains any new or saved messages, press ***** to access the main voicemail menu.)
2. Press **3** to change your Personal Options, following the system prompts.
3. Press **2** for Administrative Options.

4. Press **5** for Group Distribution Lists.
5. Follow the voice prompts to create, edit, rename, or delete group lists.

your wireless Callback

Return a call after listening to a message without disconnecting from voicemail.

- ▶ Press **8** after listening to a message. (Once the call is complete, you're returned to the voicemail main menu.)

Voicemail-to-Voicemail Message

Record and send a voice message to other your wireless Voicemail users.

1. From the main voicemail menu, press **2** to send a message.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record and send your voice message.

Voicemail-to-Voicemail Message Reply

Reply to a voice message received from any other your wireless Voicemail user.

1. After listening to a voice message, press **2**.
2. Follow the voice prompts to record and send your reply.

Voicemail-to-Voicemail Message Forwarding

Forward a voice message, except those marked “Private,” to other your wireless Voicemail users.

1. After listening to a message, press **6**.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record your introduction and forward the voice message.

Voicemail-to-Voicemail Receipt Request

Receive confirmation that your voice message has been listened to when you send, forward, or reply to other your wireless users.

1. After you have recorded a message, press **1** to indicate you are satisfied with the message you recorded.
2. Press **4** to mark receipt requested.
3. Press **1** to send your voicemail message.

Continue Recording

When leaving a voice message, you can choose to continue recording even after you've stopped.

- ▶ Before pressing **1** to indicate that you are satisfied with the message you recorded, press **4** to continue recording.

Extended Absence Greeting

When your phone is turned off or you are off the Nationwide your wireless Network for an extended period, this greeting can be played instead of your normal personal greeting.

1. From the main voicemail menu, press **3** for Personal Options.
2. Press **3** for Greetings.
3. Press **3** to record an Extended Absence Greeting.

Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice and text messages.

To clear the icon from the display screen:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Messaging** (**3**).
3. Scroll to **Voicemail** and press **OK**.
4. Scroll to **Clear Icon** and press **OK**.
5. Select **Yes** or **No** and press **OK**.

Voicemail Menu Key

Following the prompts on the voicemail system, you can use your keypad to navigate through the voicemail menu. The following list outlines your phone's voicemail menu structure.

- 1** Listen
 - 1** Envelope Information
 - 2** Reply
 - 3** Advance 8 Seconds
 - 4** Replay
 - 5** Rewind
 - 6** Forward Message
 - 7** Erase
 - 8** Callback
 - 9** Save
 - 0** Options
- 2** Send a Message
- 3** Personal Options
 - 1** Notification Options
 - 1** Phone Notification
 - 2** Numeric Paging to a your wireless Phone
 - *** Return to Personal Options Menu
 - 2** Administrative Options
 - 1** Skip Pass code
 - 2** Autoplay
 - 3** Message Date & Time On/Off
 - 4** Change Pass code
 - 5** Group Distribution List
 - *** Return to Personal Options Menu
 - 3** Greetings

- 1 Personal Greetings
- 2 Name Announcement
- 3 Extended Absence Greeting
- * Return to Personal Options Menu
- 4 Expert Mode (On/Off)
- 9 Place a Call
- * Disconnect

Service Features

Using SMS Text Messaging

With SMS Text Messaging, you can use a person's wireless phone number to send instant text messages from Your wireless Phone to their messaging-ready phone – and they can send messages to you. When you receive a new message, it will automatically display on your phone's screen. (See "Displaying Pop-up Messages" on page 47.)

In addition, SMS Text Messaging includes a variety of pre-set messages, such as "I'm running late, I'm on my way," that make composing messages fast and easy. You can also customize your own pre-set messages (up to 160 characters) from Your Phone.

Composing SMS Text Messages

To compose an SMS Text message:

1. Press **Menu** (left softkey) to access the main menu. Messaging may also be accessed by pressing up on the navigation key from the idle screen.
2. Select **Messaging** (**3**).
3. Scroll to **Send message** and press **OK** .
4. Input a new phone number or email address and select the entry method you prefer:
 - **Mobile** to use the keypad to enter the wireless phone number of the person to whom you wish to send a message.
 - **Email** to enter the recipient's email address.
 - **From Contacts** to select a recipient from your internal Contacts (qualifying Contacts entries must contain a wireless phone number or an email address).
 - **Recent List** to select a recipient from your recent lists.

5. Press **OK** to save the recipient. (To include additional recipients, input a new phone number or email address. You may include up to 10 recipients per message.)
6. Press **Next** (left softkey) when you are finished selecting/entering recipients, and compose a message or use the canned (pre-set) messages or smileys (icons) and press **OK**.
 - To type a message, use your keypad to enter your message. Use the right softkey to select a character input mode. (See “Entering Text” on page 30.)
 - To use a canned message or a smiley, press the right softkey, select **Smileys** or **Preset Msg**, then highlight your desired message or emoticon and press **OK**.

Note: For more information about using and managing pre-set (canned) messages, see “Managing Pre-Set messages” on page 49.

7. Scroll to **Priority** and press your navigation key right or left to set the message priority (**Normal** or **Urgent**).
8. Press **Send** (left softkey) to send the message.

Accessing SMS Text Messages

To read an SMS Text message:

- ▶ When you receive a text message, it will automatically appear on your phone's main display screen, depending on your settings (see "Displaying Pop-up Messages" on page 47). Use your navigation key to scroll down and view the entire message.

To reply to an SMS Text message:

1. While the message is open, press **Options** (right softkey) and then select **Reply**.
2. Scroll to **[Message]** and press **OK**.
3. Compose your reply or use the pre-set messages or icons.
 - To type a message, use your keypad to enter your message. Use the right softkey to select a character input mode. (See "Entering Text" on page 30.)
 - To use a canned message or a smiley, press the right softkey, select **Smileys** or **Preset Msg**, highlight your desired message or emoticon, and press **OK**.
4. Scroll to **Priority** and press your navigation key right or left to set the message priority (**Normal** or **Urgent**).
5. Press **Send** (left softkey) to send the message.

Using Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, just follow these easy steps.

To block your phone number from being displayed for a specific outgoing call:

1. Press ***** **6** **7**.
2. Enter the number you want to call.
3. Press **TALK**.

To permanently block your number, call your service provider.

Responding to Call Waiting

When you're on a call, Call Waiting alerts you of incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).

To respond to an incoming call while you're on a call:

- ▶ Press **TALK**. (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- ▶ Press **TALK** again.

Tip:

For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing ***70** before placing your call. Call Waiting is automatically reactivated once you end the call.

Making a Three-Way Call

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

To make a Three-Way Call:

1. Enter a number you wish to call and press **TALK**.
2. Once you have established the connection, enter the second number you wish to call and press **TALK**. (This puts the first caller on hold and dials the second number.)
3. When you're connected to the second party, press **TALK** again to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

Note: Call Waiting and Three-Way Calling are not available while roaming off the Nationwide your wireless Network.

Using Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when Call Forwarding is activated.

To activate Call Forwarding:

1. Press *** 7 2**.
2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press **TALK**. (You will see a message and hear a tone to confirm the activation of Call Forwarding.)

To deactivate Call Forwarding:

1. Press *** 7 2 0**.
2. Press **TALK**. (You will see a message and hear a tone to confirm the deactivation.)

Note: You are charged a higher rate for calls you have forwarded.

Section 3B

Data Services

In This Section

- ◆ Data Services Applications
 - ◆ Getting Started With Data Services
 - ◆ Accessing Messaging
 - ◆ Downloading Premium Services Content
 - ◆ Exploring the Web
 - ◆ Data Services FAQs
-

Data Services

Data Services brings you clarity you can see and hear with advanced multimedia services. These features – including your wireless Messaging, games, downloadable ringers and screen savers, and portable Web access – are easy to learn and use. Clearly, it's a whole new way to look at wireless.

This section introduces these advanced services and walks you through the necessary steps to start taking advantage of Data Services.

Data Services Applications

Here is a brief list of the applications available through your Phone. For more information, please contact your service provider.

Messaging Send emails and chat on your phone.

Games Play exciting games with full-color graphics, sound, and vibration. Choose from over 250 games to play anytime.

Ringers Personalize your phone by downloading and assigning different ringers to numbers in your phone book.

Screen Savers Download unique images to use as screen savers—or make it easy to tell who's calling by assigning specific images to numbers in your phone book.

Web Experience full-color graphic versions of popular Web sites from your phone.

Getting Started With Data Services

With your phone and your wireless service, you are ready to start enjoying the advantages of your data services. This section will help you learn the basics of using Your data services, including managing your User name, launching a web connection, and navigating the Web with your phone.

Your User Name

When you buy a phone and sign up for service, you're automatically assigned a user name, which is typically based on your wireless phone number

When you use data services, your user name is submitted to identify you to the available network. The user name is also useful as a way to personalize Web services and as an online virtual identity.

Your user name will be automatically programmed into your phone. You don't have to enter it.

Finding Your User Name

If you aren't sure what your user name is, you can easily find it on your phone.

To find your User Name:

- You can find your User name under the **Phone Info** option in your phone's **Settings** menu (**Menu > Settings > Phone Info**).

Launching a Data Connection

To launch a your data services connection:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Web** (**5**). (Your data services connection will launch and the your data services home page will display.)

Shortcut: You can also press the navigation key right to launch the Web.

Note: If Net Guard is enabled and displayed (see page 137), press **OK** (right softkey) to continue and launch the Web.

While connecting, the following will appear on the screen:

Web Connecting....

If you had a previous your data services connection, the last page you visited will display when you launch your browser. When this occurs, you may not see the “Connecting...” message when you launch the session. Though the browser is open, you are not currently in an active data session - that is, no data is being sent or received. As soon as you navigate to another page, the active session will launch and you will see the “Connecting...” message.

Net Guard

When you first connect to the Web, the Net Guard will appear to confirm that you want to connect. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed.




To change your Net Guard settings:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** (**7**).
3. Scroll to **Web** and press **OK** .
4. Scroll to **Net Guard** and press **OK** .
5. Choose an option:
 - **On** to activate the Net Guard.
 - **Off** to deactivate the Net Guard.

Note: When enabled, the Net Guard appears only once per session. The Net Guard does not appear if the phone is merely re-connecting due to a time-out.

Connection Status and Indicators

Your phone's display lets you know the current status of Your data services connection through indicators which appear at the top of the screen. The following symbols are used:

-  Your data services connection is active (data is being transferred); the transmit/receive symbol will blink to indicate data transmission. Incoming voice calls go directly to voicemail; outgoing voice calls can be made, but the your data services connection will terminate.
-  Your data services connection is dormant (no data is being sent or received). Though not currently active, when dormant the phone can restart an active connection quickly; voice calls can be made and received.
-  Your phone is not currently able to access your data services features.

If no indicator appears, your phone does not have a current your data services connection. To launch a connection, see “Launching a Data Connection” on page 136.

Navigating the Web

Navigating through menus and Web sites during a your data services session is easy once you've learned a few basics. Here are some tips for getting around:

Softkeys

During a your data services session, the bottom line of your phone's display contains one or more softkeys. These keys are shortcut controls for navigating around the Web, and they correspond to the softkey buttons directly below the phone's display screen.

Tip: Depending on which Web sites you visit, the labels on the softkeys may change to indicate their function.

To use softkeys:

- ▶ Press the desired softkey button. (If an additional pop-up menu appears when you press the softkey button, select the menu items using your keypad [if they're numbered] or by highlighting the option and pressing **OK**.)

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some Web sites.

To scroll line by line through Web sites:

- ▶ Press the navigation key up and down.

To scroll page by page through Web sites:

- ▶ Press the volume buttons on the side of the phone.

Selecting

Once you've learned how to use softkeys and scroll, you can start navigating the Web.

To select on-screen items:

- ▶ Use the navigation key to highlight the desired item, then press the desired softkey button (or press **OK**).

Tip: You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "OK."

If the items on a page are numbered, you can use your keypad (number keys) to select an item. (The tenth item in a numbered list may be selected by pressing the **0** key on your phone's keypad, even though the number 0 doesn't appear on the screen.)

Links, which appear as underlined text, allow you to jump to different Web pages, select special functions, or even place phone calls.

To select links:

- ▶ Highlight the link and press the appropriate softkey.

Going Back

To go back one page:

- ▶ Press the **BACK** key on your phone.

Note: The **BACK** key is also used for deleting text (like a BACKSPACE key) when you are entering text.

Going Home

To return to the your data services home page from any other Web page:

▶ Press and hold **BACK**.

—or—

Press **Menu** (right softkey) and select **Home** (**1**).

Data Services

Messaging

Accessing Messaging

Now you can send emails and text messages and participate in Web-based chatrooms right from your phone. Messaging allows you to stay connected to friends, family, and co-workers 24 hours a day anywhere on the Nationwide your wireless Network.

Message Types

There are many types of text messaging available on your phone. These include SMS Text Messaging (see page 126), Instant Messaging, and Chat.

(your wireless Voicemail provides voicemail-to-mailbox messaging. For information on using your phone's voicemail feature, see "Using Voicemail" on page 116.)

Accessing Instant Messaging

Data services also provides you with access to popular instant messaging (IM) clients.

To access instant messaging clients from your phone:

1. From the your data services home page, select **Messaging**.
2. Select **Instant Messaging**.
3. Select an IM provider.
4. Use your keypad to enter the required sign in information for the selected provider, such as user name and/or password, and select **Sign In**. (Your IM screen for the selected provider will display.)

Note: The information required for sign in will vary depending on the instant messaging provider you are accessing.

5. Follow the onscreen instructions to read, reply to, compose, send, and manage your IM account.

Accessing Wireless Chatrooms

Data services gives you the ability to join wireless chatrooms from your phone, to send text messages and icons to chatroom participants, or to launch a one-on-one (private) chatroom.

To access a chatroom from the browser:

1. Press **Web** (right softkey) to launch the browser.
2. Select **Messaging**.
3. Select **Chat**.
4. Select **Enter**. (You will see a disclaimer for Wireless Chat.)
5. Select **I Agree** (left softkey) to accept the disclaimer.
6. Use your keypad to enter a nickname and select **Enter**. (The chat menu will display.)
7. Select a chatroom from the menu (for example, "Friends" or "Singles") and press **Go** (left softkey) to enter.
8. Once in the chatroom, you may scroll through the postings to read messages from other chatroom participants and use your keypad to enter your own messages.

Downloading Premium Services Content

With data services and your new your data services Phone, you have access to a dynamic variety of Premium Service content, such as downloadable Games, Ringers, Screen Savers, and other applications. (Additional charges may apply.) The basic steps required to access and download Premium Service content are outlined below.

Accessing the Download Menus

To access the your data services download menus:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Downloads** (**4**).
3. Select the type of file you wish to download (**Games, Ringers, Screen Savers, Applications, or Memory Status**) and press **OK**.
4. Select **Get New** and press **OK**. (The browser will launch and take you to the corresponding download menu.)

To access the your data services download menus from the Web browser:

1. From the your data services home page, select **Downloads**.
2. Select **Games, Ringers, Screen Savers, or Applications** to go to the corresponding download menu. (For more information on navigating the Web, see “Navigating the Web” on page 139.)

Selecting an Item to Download

You can search for available items to download in a number of ways:

- **Featured** displays a rotating selection of featured items.
- **Categories** allows you to narrow your search to a general category, such as Movie/TV Themes for Ringers or College Logos for Screen Savers. (There may be several pages of available content in a list. Select **Next 9** to view additional items.)
- **Search** allows you to use your keypad to enter search criteria to locate an item. You may enter an entire word or title or perform a partial-word search (for example, entering “goo” returns “Good Ol’ Boy,” “The Good, the Bad, and the Ugly,” and “Goofy - Club”).

Downloading an Item

Once you've selected an item you wish to download, highlight it and press **OK** or press **OK** (left softkey). You will see a summary page for the item including its title, the vendor, the download detail, the file size, and the cost. Links allow you to view the **License Details** page, which outlines the price, license type, and length of license for the download, and the **Terms of Use** page, which details the Premium Services Terms of Use and your responsibility for payment.

To download a selected item:

1. From the information page, select **Buy**. (The item will download automatically. When the **New Download** screen appears, the item has been successfully downloaded to your phone.)

Note: If you have not previously purchased an item, you will be prompted to create your purchasing profile.

2. Select an option to continue:
 - Select **Use** (left softkey) to assign the downloaded item (or to launch, in the case of a game or application). Your data services session will end and you will be redirected to the appropriate phone menu screen.
 - Select **Shop** (right softkey) to browse for other items to download.
 - Press **END** to quit the browser and return to standby mode.

For more information about downloading Games, Ringers, Screen Savers, and Applications, contact your service provider.

Exploring the Web

With Web access on your phone, you can browse full-color graphic versions of your favorite Web sites, making it easier than ever to stay informed while on the go. Follow sports scores and breaking news and weather and shop on your phone anywhere on the Nationwide your wireless Network.

In addition to the features already covered in this section, the your data services home page offers access to these colorful, graphically rich Web categories, including **News, Weather, Entertainment, Sports, Finance, Travel, Shopping, Tools, and Business Links**, as well as useful management options including **My Account** and **Search**. Many sites are available under more than one menu – choose the one that's most convenient for you.

Using the Browser Menu

Navigating the Web from your phone using the your data services home page is easy once you get the hang of it. For details on how to navigate the Web, select menu items, and more, see “Navigating the Web” on page 139.

Although the your data services home page offers a broad and convenient array of sites and services for you to browse, not all sites are represented, and certain functions, such as going directly to specific Web sites, are not available. For these and other functions, you will need to use the browser menu. The browser menu offers additional functionality to expand your use of the Web on your phone.

Opening the Browser Menu

The browser menu may be opened anytime you have an active your data services session, from any page you are viewing.

To open the browser menu:

- ▶ Press the right softkey. (The browser menu will display in a drop-down list.)

Options available under the browser menu include:

- **Home.** Returns the browser to the your data services home page.
- **Forward.** Returns you to a previously viewed page (after having used the **BACK** key).
- **Bookmarks.** Allows you to bookmark the current site, access bookmarked sites, and manage your bookmarks.
- **Go to URL.** Allows you to navigate directly to a Web site by entering its URL (Web site address).
- **History.** Keeps a list of links to your most recently visited sites. To navigate to a site, highlight it and press **OK**, then select **Connect**.
- **Search.** Launches a Google search.
- **Refresh.** Reloads the current Web page.
- **Advanced.** Displays additional options:
 - **Restart Browser.** Refreshes the current browser session.
 - **Delete Cookies.** Deletes “cookies” stored in browser memory.
 - **Homepage.** Allows you to select your browser’s home page.

- **Multimedia.** Configures your multimedia preferences.
- **View Title Region.** Displays a site's title information.
- **Scroll Mode.** Configures your scrolling options.
- **Send Referrer.** Allows you to turn Send Referrer on or off.
- **Connection Timeout.** Lets you set your browser's automatic time-out duration.
- **Key Press Timeout.** Lets you set the key press interval before automatically proceeding to the next character.
- **Security.** Displays your browser's security settings.
- **Show URL.** Displays the URL (Web site address) of the site you're currently viewing.
- **Send URL.** Allows you to send the current URL as a text message.
- **About....** Displays technical information about the browser, its version, and the encryption version, and provides links to Certificate Information for the various components.

Creating a Bookmark

Bookmarks allow you to store the address of your favorite Web sites for easy access at a later time.

To create a bookmark:

1. Go to the Web page you want to mark.
2. Press the right softkey to display the browser menu.
3. Select **Bookmarks**.
4. Select **Mark Site** and press **OK** twice to save the bookmark.

Note: Bookmarking a page does not store the page contents, just its address.

Some pages cannot be bookmarked. Whether a particular Web page may be marked is controlled by its creator.

Data Services

Accessing a Bookmark

To access a bookmark:

1. Press the right softkey to display the browser menu.
2. Select **Bookmarks**.
3. Scroll to highlight the bookmark you'd like to access and press **OK** to go to the Web site (or press the number corresponding to the bookmark you wish to access).

Deleting a Bookmark

To delete a bookmark:

1. Press the right softkey to display the browser menu.
2. Select **Bookmarks**.
3. Scroll to highlight the bookmark you'd like to delete and press **Menu** (right softkey).
4. Select **Delete** from the menu. (A confirmation screen will display.)
5. Select **Yes** (right softkey) to remove the bookmark.

Going to a Specific Web site

To go to a particular Web site by entering a URL (Web site address):

1. Press the right softkey to display the browser menu.
2. Select **Go to URL**.
3. Select the **URL** field and press **OK**.
3. Use your keypad to enter the URL of the Web site you wish to go to and press **OK**.
4. Press **OK** again to go to the Web site.

Note: Not all Web sites are viewable on your phone.

Reloading a Web Page

To reload (refresh) a Web page:

1. Press the right softkey to display the browser menu.
2. Select **Refresh**. (The browser will reload the current Web page.)

Restarting the Web Browser

If the Web browser appears to be malfunctioning or stops responding, you can usually fix the problem by simply restarting the browser.

To restart the Web browser:

1. Press the right softkey to display the browser menu.
2. Select **Advanced**.
3. Select **Restart Browser** and press **OK**.

Data Services FAQs


How will I know when my phone is ready for your data services service?

Your User name will display when you access **Menu > Settings > Phone Info > My Phone Number**.

How do I sign-in for the first time?

You are automatically signed in to access your data services when you turn on your phone.


How do I know when my phone is connected to your data services?

Your phone automatically connects when your data service is used or an incoming message arrives. Your phone will also display the  icon. (Connecting takes about 10-12 seconds.)

Can I make calls and use your data services at the same time?

You cannot use voice and data services simultaneously. If you receive a call while data service is active, the call will be forwarded to voicemail. You can place an outgoing call anytime, but it will interrupt any in-progress data session.

When is my data connection active?

 
 
 
Your connection is active when data is being transferred. Outgoing calls are allowed; incoming calls go directly to voicemail. When active, the  indicator flashes on your phone's display screen.

When is my data connection dormant?

If no data is received for 10 seconds, the connection goes dormant. When the connection is dormant, voice calls are allowed. (The connection may become active again quickly.) If no data is received for an extended period of time, the connection will terminate.




Can I sign out of data services?

You can sign out without turning off your phone; however, you will not be able to browse the Web or use other data services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may sign in again at any time. To sign out, go to **Settings** (7) > **Web** > **Disable Web** in your phone's menu.



Section 4

   Safety and Warranty Information



Section 4A

Safety

In This Section

- ◆ **Getting the Most Out of Your Reception**
 - ◆ **Maintaining Safe Use of and Access to Your Phone**
 - ◆ **Caring for the Battery**
 - ◆ **Using Your Phone With a Hearing Aid Device**
 - ◆ **Acknowledging Special Precautions and the FCC Notice**
 - ◆ **Owner's Record**
 - ◆ **Phone Guide Proprietary Notice**
-

Part of getting the most out of your phone is learning how the phone works and how to care for it. This section outlines performance and safety guidelines that help you understand the basic features of your phone's operation.

Getting the Most Out of Your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability; you can also check it yourself by pressing any key. Anytime the Power Save feature is activated, a message is displayed on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits Radio Frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining Your Phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- For optional call performance, please do not obstruct the internal antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.

Note: For the best care of your phone, only Service provider authorized personnel should service your phone and accessories. Faulty service may void the warranty.

Maintaining Safe Use of and Access to Your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from Radio Frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note: Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase Your wireless Invoice.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4° F to 140° F (-20° C to 60° C)

Safety

More than one month:

-4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Lilon) Batteries

For safe disposal options of your Lilon batteries, contact your nearest authorized service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Note: For safety, do not handle a damaged or leaking Lilon battery.

Using Your Phone With a Hearing Aid Device

Your wireless Phone has been tested for hearing aid device compatibility. When some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated will have the rating on the box. The LX125 by LG has an M3 rating.

Note: Note: Phones rated M3 or M4 meet FCC requirements and may generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to successfully use a phone that has been tested and rated as Hearing Aid compatible. Trying the phone with your hearing device is the best way to evaluate it for your personal needs. Should you experience interference when using your LX125 with your hearing device, it is suggested that you promptly return the phone to


 

 

the store. It is further suggested you experiment with multiple phones (even those not labeled with an M3 or M4) while in the retail store to find the one that works best with your hearing device.

Hearing devices may also be measured for immunity to this type of interference. Your hearing aid device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from wireless phones.



Getting the Best Hearing Device Experience with Your LX125 by LG

One way to minimize interference is to set the phone's Display and Keypad backlight settings to ensure the minimum time interval.

To ensure the minimum interference from your Main Display's backlight, follow these steps:

1. Press **Menu** (left softkey) to access the main menu.
2. Select **Settings** .
3. Scroll to **Display** and press .
4. Scroll to **Backlight** and press .
5. Select **Main LCD** and press .
6. Select the minimum time interval setting (**8 seconds** or **Always off**) and press .

To ensure the minimum interference from the Keypad backlight, follow these steps:

1. From step 5 above, select **Keypad** and press .
2. Select the minimum time interval setting (**8 seconds** or **Always off**) and press .

Acknowledging Special Precautions and the FCC Notice

FCC Notice

This phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protections Association, One Batterymarch Park, Quincy, MA 02269, Attn.: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least 7/16 inch (1.5 centimeters) from your body when transmitting. Use of non-approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC Website at www.fcc.gov.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the LX125 are:

AMPS mode (Part 22):

Head: 1.020 W/kg; Body-worn: 0.924 W/kg

CDMA mode (Part 22):

Head: 0.511 W/kg; Body-worn: 0.501 W/kg

PCS mode (Part 24):

Head: 0.996 W/kg; Body-worn: 0.539 W/kg

FCC Radiofrequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines.

FCC ID number: BEJLX125. More information on the phone's SAR can be found from the following FCC Website: <http://www.fcc.gov/oet/fccid>.

Safety

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: your wireless web Phone LX125 by LG

Serial No.:

Phone Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Phone Guide template version 5a_int (July 2005)

Section 4B

Manufacturer's Warranty

In This Section

◆ Manufacturer's Warranty

Your wireless Phone has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

Warranty

Manufacturer's Warranty

Limited Warranty Statement

1. WHAT THIS WARRANTY COVERS :

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG INFOCOMM INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

4. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call call the following telephone number from anywhere in the continental United States:

LG Electronics MobileComm Inc.
201 James Record Road Huntsville, AL 35824
Tel. 1-800-793-8896 Fax. 1-800-448-4026
www.lgeservice.com

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS. Please call or write for the location of the LGIC authorized service center nearest you and for the procedures for obtaining warranty claims.

Index

A

Airplane Mode 50
 Alarm Clock 103
 Answering Calls 22
 Auto-Answer Mode 55

B

Backlight 40
 Battery 17-19
 Capacity 17
 Charging 18
 Installing 17
 Removing 18
 Using the Charger 19
 Bookmarks 151-152
 Accessing 151
 Creating 151
 Deleting 152
 Browser Menu 149

C

Calculator 106
 Calendar 101-102
 Call Answer Mode 54
 Call Forwarding 132
 Call Guard 71
 Call History 80-84
 Erasing 84
 Making a Call From 82
 Options 81
 Prepending a Phone
 Number 83

Saving a Phone Number
 From 82
 Viewing 80
 Call Waiting 130
 Caller ID 129
 Canned Messages 34, 49
 Chat 144
 Clock Display 44
 Contacts 86-96
 Adding a New Contacts
 Entry 86
 Adding a Phone Number
 90
 Assigning Speed Dial
 Numbers 92
 Contacts Entry Options 89
 Dialing From the Contacts
 28
 Editing a Contacts Entry
 94
 Editing a Contacts Entry's
 Phone Number 91
 Erasing the Contacts 62
 Finding Contacts Entries
 87
 Selecting a RingType for
 an Entry 95

D

Data Services
 Dialing Your Wireless Services 96
 Directory Assistance 6
 Operator Services 6
 Applications 134
 Chat 144
 Downloading Content 145
 FAQs 154
 Home Page 141
 Launching 136
 Messaging 142
 Navigating the Web 139
 Net Guard 137
 Security Features 64
 User Name 135
Dialing Options 21
Display Language 56
Display Screen 13, 41
Downloading 145

E

Entering Text 30-34
 Abc Mode 33
 Canned Messages 34
 emoticons 34
 Numbers 34
 Selecting Mode 30
 Symbols 34
 T9 Text Input 31
EZ Tips 105

I

Instant Messaging 143

K

Key Functions 11
Key Tones 38

L

Location 46
Lock Code
 Changing 59
Locking Your Phone 58

M

Making Calls 20
Menu Navigation 74
Menu Style 43
Messaging
 Displaying Pop-up Messages 47
 Selecting Ringer Types 37
 Signature 48

N

Net Guard 137

P

Phone (Illus.) 10
Phone Number
 Displaying 20
 Finding 26
 Saving 25
 With Pauses 27

Phone Settings 35-56
 Airplane Mode 50
 Auto-Answer Mode 55
 Call Answer Mode 54
 Display Settings 40-45
 Location Settings 46
 Messaging Settings 47
 Shortcut 53
 Sound Settings 36-39
 TTY Use 51
 Plus Code Dialing 28, 56
 Pop-up Messages 47
 Pre-Set Messages 49

R
 Resetting Your Phone 63
 Ringer Types 36
 Roaming 67-72
 Setting Roam Mode 70

S
 Saving a Phone Number 25
 Security 58-65
 Security Menu 58
 Silence All 39
 SMS Text Messaging 126
 Accessing 128
 Composing 126
 Special Numbers 61
 Speed Dialing 29
 Assigning Numbers 92

 
 
 
T
 T9 Text Input 31
 Text Greeting 40
 Three-Way Calling 131
 TTY Use 51
 Turning Your Phone On and Off 16

U
 Unlocking Your Phone 59
 Using Your Phone With a Hearing Aid Device 164

V
 Voice Memos 110-111
 Voice Services 107-111
 Voice-Activated Dialing 108
 Voicemail
 Menu Key 124, 125
 Options 120
 Retrieving 118
 Setting Up 5, 116
 While Roaming 69
 Volume 38

W
 Warranty 169-172
 Web 148-153

Notes



Notes

