



Visit us at : <http://www.lgservice.com>

LG

ENGLISH

ITALIANO

ESPAÑOL

FRANÇAIS

DEUTSCH

РУССКИЙ

LG

Deluxe Wired Remote Controller

Owner's & Installation Manual

**Models: PQRCUDS0
PQRCUDS0B
PQRCUDS0S**

IMPORTANT

- Please read this installation manual completely before installing the product.
- Installation work must be performed in accordance with the national wiring standards by authorized personnel only.
- Please retain this installation manual for future reference after reading it thoroughly.

TABLE OF CONTENTS

■ Safety Precautions	3~4
■ Part Description	5~6
■ Wired remote controller switch information	7
■ Installation Method	8
■ Necessary functions before using	9~11
• Trial Operation	9
• Setting the Central Control Address	10
• ESP Function	11
■ How to use the Mode Selection Button	12~16
• Cooling Operation	12
• Heating Operation	13
• Auto-Operation	14
• Dry(Dehumidification) Operation	15
• Fan Operation	15
• Fan Speed Selection	16
■ Sub Function	17
• Auto Swing	17
• Plasma	18
• Ventilation	19
• Heater	19
■ Special Function	20
• Child Lock	20
• Vane control	21
• Swirl Swing	22
• Room Temperature Display	23
• Easy reservation	23
• Setting the current time	24
• Weekday reservation	25
• Different Mode Operation	26


Note) Please, refer to indoor's manual for product's detail information of subfunction


Safety Precautions

- The installation requires expert skills, and it should be installed by the service center or other shops specialized in the installation and recognized by our company.
- For all the problems arising after installation by someone who has no relevant qualifications, LG will not provide free service.
- The following safety cautions are provided to prevent unexpected dangers or losses.

⚠ WARNING : If the user does not follow the mandatory items, it may result in serious injury or death.

⚠ CAUTION : If the user does not follow the mandatory items, it may cause personal injury or property damage.


 : Warning and Caution are to call the user's attention to the possible danger. Read and follow them carefully in order to prevent a safety accident.

 : Warning and Caution are indicated in this guide and the product itself to help protect the users from danger.


⚠ WARNING

■ Installation

Entrust installation of the product to the service center because improper installation may cause fire, an electric shock, explosion, and physical injury.

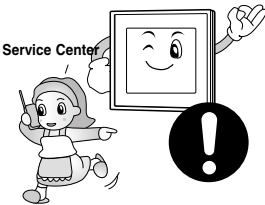


Use the original parts in order to prevent fire, an electric shock, explosion, and product breakdown.

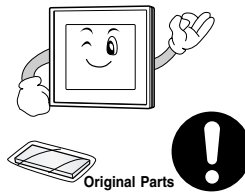


Keep combustible and/or inflammable materials away from the product in order to prevent fire or product breakdown.




Do not disassemble, repair, or modify the product at your discretion in order to prevent fire or an electric shock.

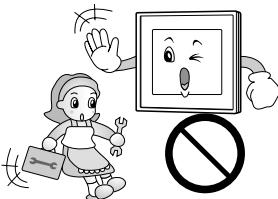

Do not install the product in wet and humid areas in order to prevent product breakdown.

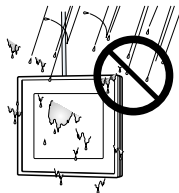


 Do not expose the product to the sun in order to prevent product breakdown.



■ In-use


Do not modify or lengthen the power cable at your discretion. It may cause fire or an electric shock.

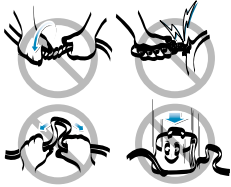


Do not place a heating device near the product. It may cause fire.




Do not drop water on to the product. It may cause an electric shock or product breakdown.

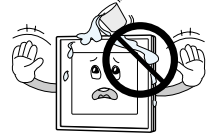

Do not place something heavy on the power cable. It may cause fire or an electric shock.

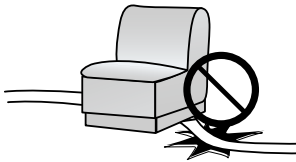

Do not place a heavy thing on the product. It may cause product breakdown.

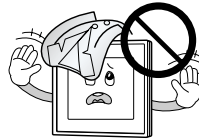


If the product was submerged under water, ask the service center for instruction. It may cause fire or an electric shock unless you do that.



▲ CAUTION

Make sure children or senior citizens use the product under proper observation in order to prevent safety accident.

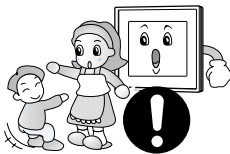

Do not subject the product to shock. It will cause product breakdown.




Do not pick the product with a sharp tool. It may cause product breakdown with the damage to its parts.




■ In-use


Do not clean the product with strong cleanser such as solvent. Use soft clothes in order to prevent fire or product deformation.

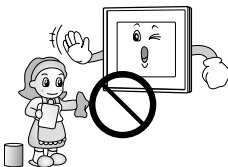


Do not touch the product with a wet hand. Do not pull the lead cable. It may cause product breakdown or an electric shock.

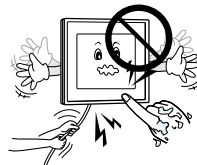


Part Description

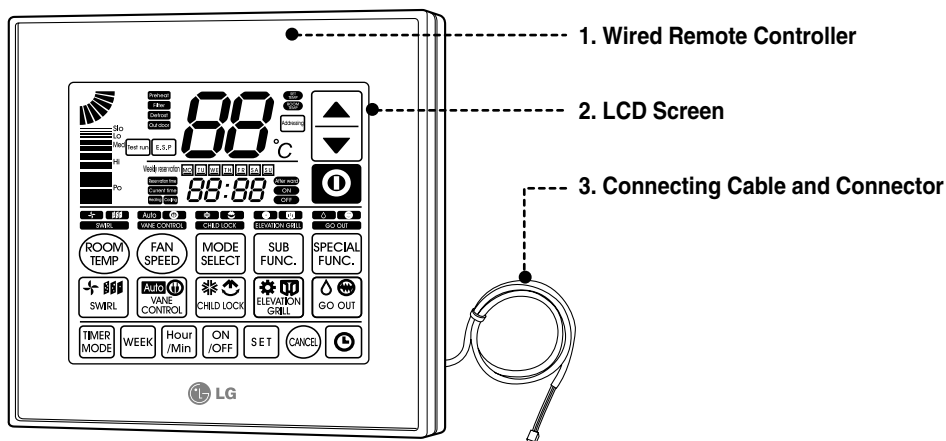

Accessory

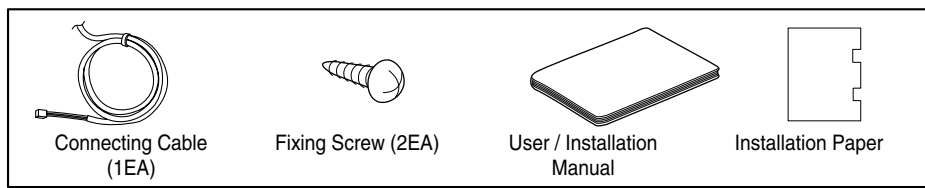


Deluxe Wired Remote Controller

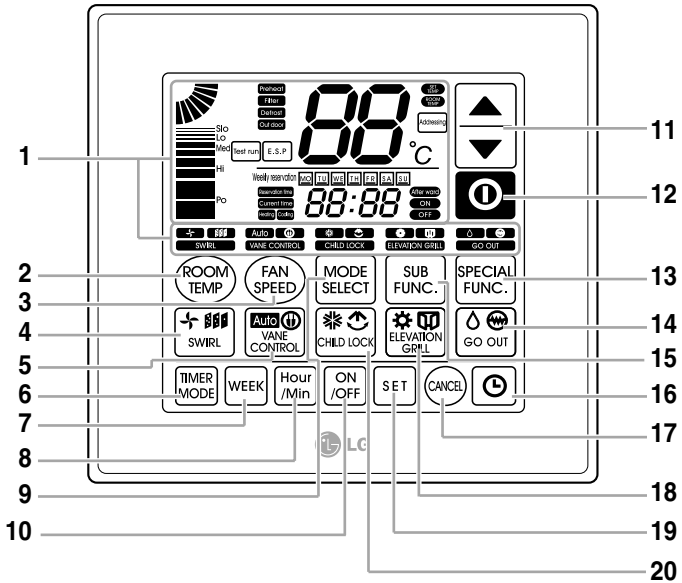

- 1. Operation Display Panel
- 2. Room Temperature Button
- 3. Fan Speed Button
- 4. Fan / Plasma / Swirl Swing Button
- 5. Automatic / Vane Control Button
- 6. Timer Mode Button
- 7. Date Selection Button
- 8. Hour / Minute Button
- 9. Mode Selection Button
- 10. On / Off Button for reservation
- 11. Temperature Control Button
- 12. On / Off Button
- 13. Special Function Button
- 14. Dehumidification / Heater Button
- 15. Sub Function Button
- 16. Easy Reservation Button
- 17. Cancel Button
- 18. Heating / Ventilation Button
- 19. Setting Button
- 20. Cooling / Auto Swing / Child Lock Button

Each function will be shown on the display panel for three second or so when the initial power is on. The analog panel enables you to use the remote controller with a touch of your own finger without pressing any extra button. However, if you press more than one button at the same time, it may cause malfunction.

Wired remote controller switch information

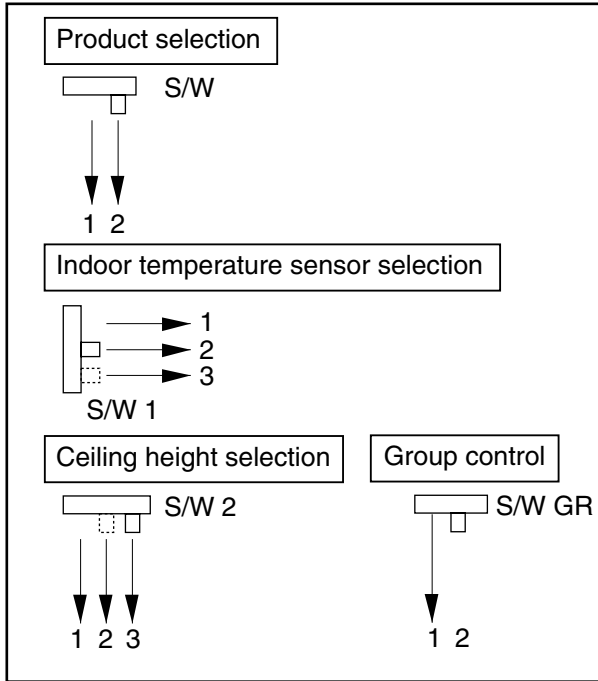

Product selection switch

1. Cooling ONLY product
2. HEAT PUMP product

Indoor temperature sensor selection switch

1. Use the temperature sensor on the remote controller
2. Use the temperature sensor on the product.
3. Use the sensor with the lower temperature between the remote controller and the product

Ceiling height selection switch

1. Low ceiling
2. Standard ceiling
3. High ceiling

Group control switch


1. For individual control use
2. For group control use

* When changing the product selection switch and group control switch, the power must be reconnected to reflect the changes.

Installation Method

1 Put the installation paper on the place and determine the position and height of the fixing screws of the wired remote controller.



- Refer to the printed side of the installation paper.

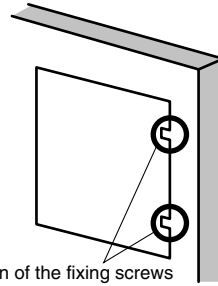

2 Plug the connecting cable into the indoor unit.

- The product is being shipped with the cable connected only to the remote controller. Put each cable to the remote controller according to the color match

 
Be careful not to alter the colors of the remote controller connection cables.

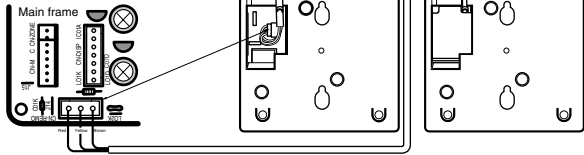


Side of remote Controller Side of Indoor Unit

3 Remove the installation paper before installing the remote controller so that it can fit into the right place.

Fixing the remote controller

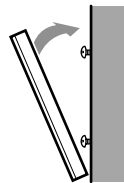

Fixing the connecting cable

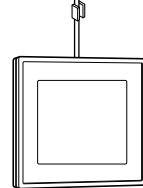

* When installing the wired remote controller, do not install it so that it is buried to the wall. (This can cause error in the temperature sensor)

* When installing multiple wired remote controllers horizontally in one location, leave a minimum distance apart (2cm). (This can cause error in the temperature sensor)

* Do not install the cable with a distance of 50 m or longer. (This can cause communication error.)

* When installing the cable, check whether the connector between the remote controller and the product is installed properly. The connector will not be connected when installed in opposite sides.


Supply the power after connecting wired remote controller.

When you need to change wired remote controller, switch off the main power and change it Before switch off the main power if changed the wired remote controller , you can't use the option function of the indoor unit.

Necessary functions before using

Trial Operation

The trial operation is to check the installation status of the product. The temperature will not be controlled during trial operation. Instead the product will operate in several modes such as cooling, strong wind, comp-on.

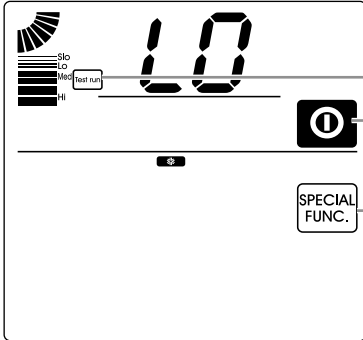

1 The trial operation is to check the installation status of the product. The temperature will not be controlled. Instead the product will operate in several modes such as cooling, strong wind, comp-on.

2 If you want to do the trial operation, press the Special Function button and then select the trial operation mode.


3 Then the product will begin the trial operation and the display will be like the following picture.

4 The trial operation will continue for 18 minute or so and the product will go into standby mode.

4 If you want to cancel the trial operation during the process, press the On/Off button.

* This function might not be available for Multi Product like Multi V system.

Setting the Central-Control Address

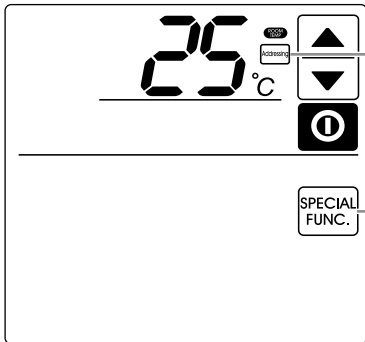

1 Press the Special Function button.

2 Press the address setting button. Press the temperature-increasing button to change the group number. Press the temperature-decreasing button to change the indoor unit number. The number of the central control address group is "2." And the number of the indoor unit is "5."

3 If you press the address setting button, the addressing setting mode will be unset.


* If you connect the indoor unit to the central controller, you should set the network address of the indoor unit so that the central controller could recognize it.

* The central control address is composed of the group number and the indoor-unit number.

Note : The remote controller displays 'HL' if central controller has locked the remote controller .

ESP Function

E.S.P function is setting the volume of each air flow. It is for the convenience of installation. It is recommended that you should not use this function whild using the remote controller.

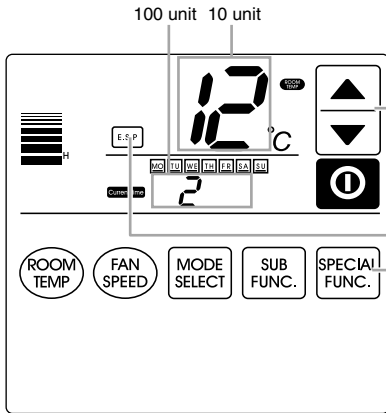

1 Press the Special Function button.

2 Press the E.S.P button.


3 Set the volume of each air flow (Low, Medium, Hi) by using the temperature control button. Press the air flow button to select the air flow.
(The value of E.S.P could be adjusted from 1 to 225.)
(The figure on the left shows when the strong wind's ESP value has been set to 212.)

4 If you press the E.S.P button one more time, the E.S.P value will be set and the setting mode will be unset.

* The E.S.P value is set at the proper value at the factory. So it is highly recommended that you should do not change the E.S.P value at your discretion.

How to use the Mode Selection Button

Cooling Operation

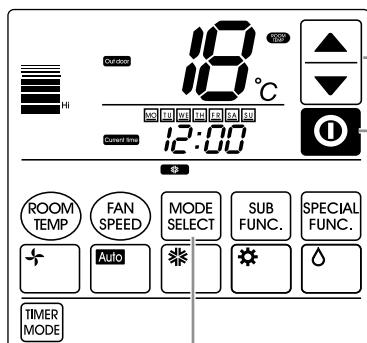

1 Cooling operation will begin if you press the On/Off button.

2 Press the temperature button and set the expected temperature lower than the current room temperature. (18~30°C)



A click of the button will increase the expected temperature by 1°C

A click of the button will decrease the expected temperature by 1°C.

If the expected temperature is set higher than the current room temperature, the cooling function will not begin and just the blowing operation will continue.

3 Press the operation selection button and choose one of the functions among blowing, automation, heating, and dehumidification if you want another operation mode during the operation.

4 If you press the On/Off button, the cooling operation will stop.


What is the three-minute delay function?

The function to protect the compressor delays the output of cool air when operating instantly after interrupting the cooling operation.

Cooling operation restarts after 3 minutes when the compressor starts to operate.

- You can choose the expected temperature from 18(C to 30(C).
- It is recommended that the ideal difference of the temperature between indoors and outdoors should be less than 5°C.

Heating Operation

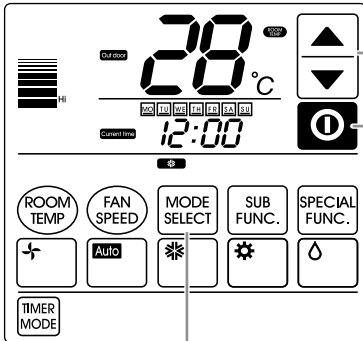

1 Press the heating button after pressing the On/Off button of the remote controller.

2 Set the expected room temperature higher than the current room temperature. (16–30°C)



A click of the button will increase the desired temperature by 1°C.

A click of the button will decrease the desired temperature by 1°C.

* If the expected temperature is set lower than the current room temperature, the heating operation will not begin and just the blowing operation will continue.

3 Press the operation selection button and choose one of the functions among blowing, automation, heating, and dehumidification if you want another operation mode during the operation.


4 If you press the On/Off button, the heating operation will stop.

What is the three-minute delay function?

It will take a time for the product to blow warm air. The delay is just to protect the compressor. The room will be heated with warm air after three minutes when the compressor begins operation.

■ The cooling-only model will not do heating function.

Auto-Operation

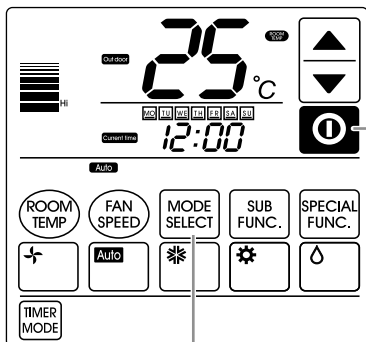

1 Press the On/Off button and then press the Automatic Operation button.

2 When the room temperature is lower than the expected temperature: Heating Operation.
When the room temperature is higher than the expected temperature: Cooling temperature.

3 Press the operation selection button and choose one of the functions among blowing, automation, heating, and dehumidification if you want another operation mode during the operation.

4 If you press the On/Off button, the cooling operation will stop.


※ The cooling-only model will show "AI" on the temperature display.

AI could be adjusted by five levels (-2, -1, 0, +1, +2).

※ This auto-operation is not related to "Auto Change Over" function.

Dehumidification Operation

Dehumidification Operation: Dehumidification by lowering temperature slightly

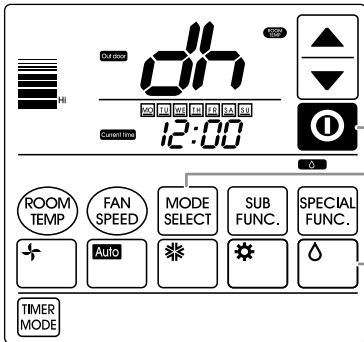


- 1** Press the On/Off button on the remote controller.
- 2** Select the dehumidification function by pressing the Mode selection button.
- 3** When the dehumidification is being done, "dh" will be shown on the display panel
- 4** Press the operation selection button and choose one of the functions among blowing, automation, heating, and dehumidification if you want another operation mode during the operation.

If used during the rainy season or high humidity, you can have both of effective dehumidifying and air conditioning effect.

* Temperature control is not available in the Dehumidification Operation.

Fan Operation

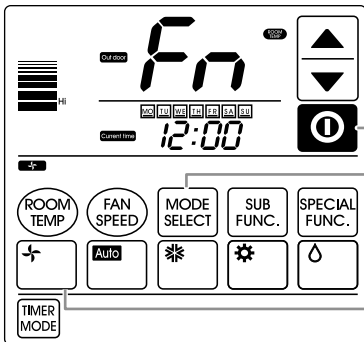


- 1** Press the On/Off button on the remote controller.
- 2** Select the Fan function by pressing the Mode selection button.
- 3** When the Fan is being done, "fn" will be displayed on the display panel.
- 4** Press the operation selection button and choose one of the functions among heating, automation, cooling and dehumidification if you want another operation mode during the operation.

- Fan operation does not output cool air, but just the fan air.
- By giving out air that has no difference of temperature with the indoors, it allows ventilation of the room.

* Temperature control is not available in the air fan operation.


Fan Speed Selection

You can easily control the fan speed.

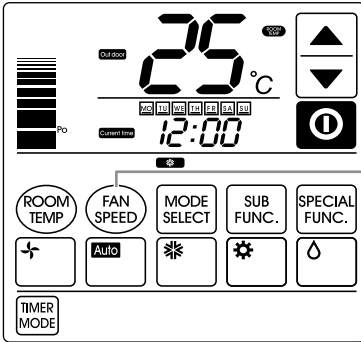


- 1 Select the proper fan speed which you want by pressing the fan speed button on the remote controller.
 - If you press the fan speed button, the strength of the fan speed will change in the order of Low → Medium Hi → Power.
 - If the product is not compatible with the fan speed control, it will not function as your selection.

Fan Speed Selection in Cooling Operation

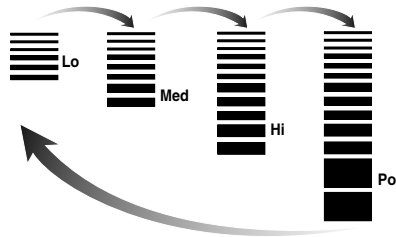

Fan Speed Selection in Heating, Dry, Fan, Auto-Operation

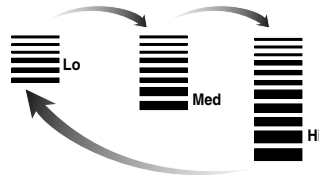


- If the indoor unit is compatible with the slo fan speed, you can adjust the air flow slow level.

Sub Function

Auto Swing

You can control the wind direction easily.

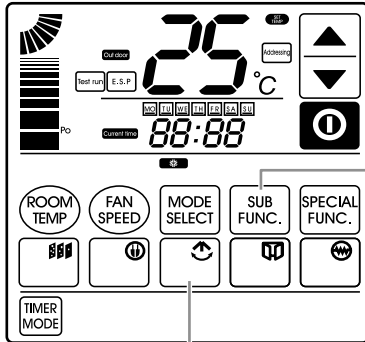

1 Press the Sub function button on the remote controller.


2 Press the automatic Auto Swing button.

3 A click of Auto Swing button will turn on/off the indicator.

* If the product is not compatible with the automatic wind direction mode, it will not operate automatically.

Plasma

You can use the plasma function.

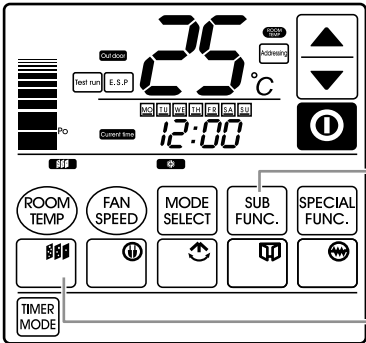


1 Press the Sub function button.

2 Press the Plasma button.

- A click of the Plasma button will turn on/off the indicator.
- If the product is not compatible with the Plasma function, it will not do the Plasma function even though the indicator is turned on.
- Plasma Function is possible when only product is operating.
- Please press the Plasma button in Fan Mode, If you want to operate only plasma function.

Ventilation

You can use the ventilation function.

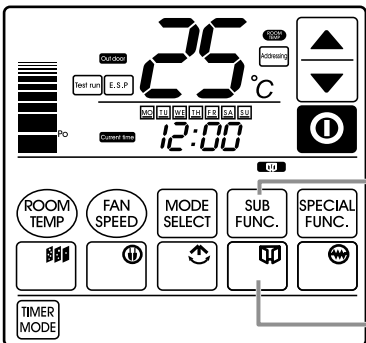


1 Press the Sub function button of the remote controller.

2 Press the ventilation button.

- A click of the ventilation button will turn on/off the indicator.
However, even when the remote controller that does not have the ventilation function displays ventilation, the actual product does not operate for ventilation.

Heater

You can use the heater function.

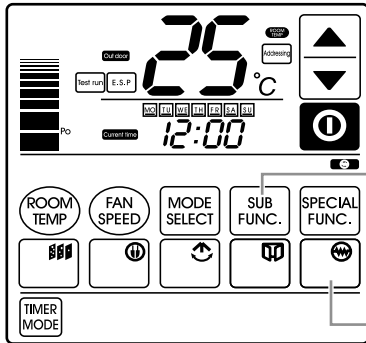

1 Press the Sub function button.

2 Press the heater button.



- A click of the heater button will turn on/off the indicator.
- If the product is not compatible with the heating function, it will not do the heating function.

Special Function

This is a function to prevent tampering of settings by children or others.

Child Lock

You can use the child lock function.

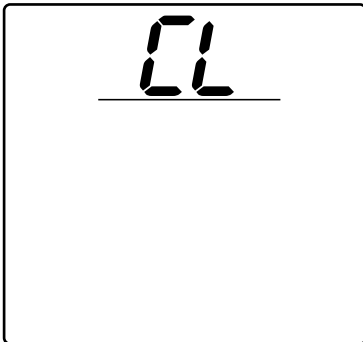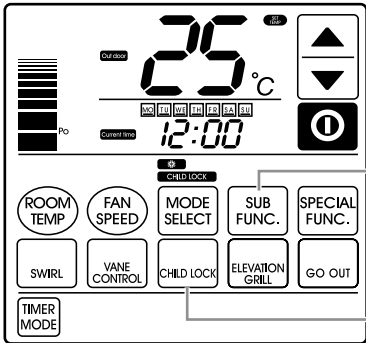


1 Press the Special Function button of the remote controller.

2 Press the child lock button.


- A click of the child lock button will turn on/off the indicator.
- If you press another button while adjusting child lock function, the temperature display will show CL for three seconds and then the operation will come back to the original mode.
- If you want use the child lock function in standby mode, select child lock and press the On/Off button within three seconds. Then the standby mode will change into the child lock mode.
- If you want to cancel the child lock function in the standby mode, just press the child lock button.

Vane control

You can control the angle of the vane.

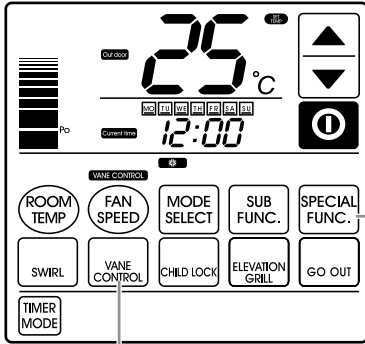

- 1** Select the Advanced Selection button on the control panel of the remote controller.
- 2** Press the Vane Control button.
Press the Vane Control button one more time to control the top and bottom vane.
- 3** You will see the screen shown on the left.
- 4** Press the Temperature Adjustment button to adjust the two vane angles from P0 to P5.
- 5** Press the Vane Control button one more time to control the remaining two vane angles.
- 6** Press the Vane Control button one more time to return to the original mode.

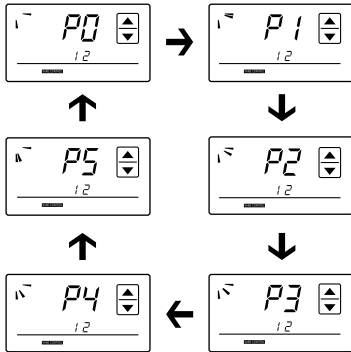


- The vane angle that has been set does not change even when the air conditioner is turn off and on again (default is P0)



Swirl Swing

You can use the swirl swing.

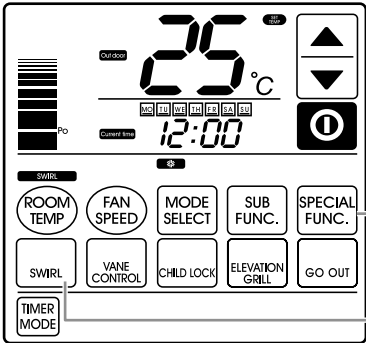


1 Press the Special Function button of the remote controller.

2 Press the swirl swing button.

- A click of the swirl swing will turn on/off the indicator.
- If the product is not compatible with the swirl swing function, it will not do the function even though the indicator is turned on.

Room Temperature Display

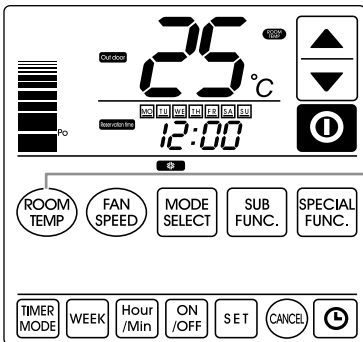


1 If you press indoor temperature button on the remote controller, the indoor temperature displays for 5 seconds. The display goes to a previous screen after 5 seconds.

Indoor temperature display may differ according to a Slide S/W1 setting on the remote controller.


※ There would be some difference between actual temperature you feel and room temperature of remote controller , because the temperature of the position is not uniform which the remote controller is located on.

Easy Reservation

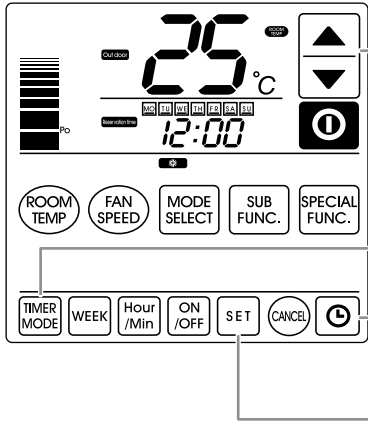

- 1** Press Timer mode button on the remote controller.
- 2** Press easy reservation button.
- 3** You can change the values by pressing the temperature control buttons. Choose a desired reservation time.
- 4** By pressing the setting button, set your easy reservation time
 Power-on reservations can be set only when not in operation
 - You can set reservation from 1 to 24 hours
- 5** Power-off reservation can be set only when in operation
 - If power-on reservation was set, it will start operating after the set time
 - If power-off reservation was set, it will stop operating after the set time
 - Excessive use of air conditioning is bad for your health. Please set a moderate amount of time for your reservation.
 - It works wired remote controller's reservation time, if preset time by wireless and wired remote controller at the same time .


Setting the current time

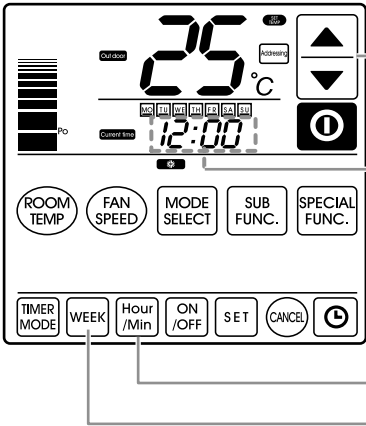

- 1** You can set the current time by pressing the time display. When the time display is selected, a window for date and time setting shows up.
- 2** Press the date selection button. If you press the date selection button, the day of the week will flash. Then you can choose the proper day in the order of Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, and Sunday.
- 3** If you press the hour/minute selection button, the hour digits will flash so that you can adjust it by pressing the temperature control button. If you press the hour/minute button one more time, the minute digits will flash. You can adjust it by pressing the temperature control button.
- 4** After adjusting time, press the setting button so that the current configuration can be saved.

Weekday reservation

Weekday reservation is the function to set the time to turn on and off for each day during the week from Monday through Sunday.

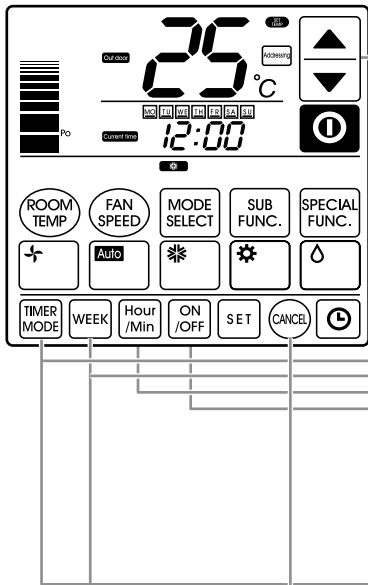


- 1** Press the Reservation Mode button on the control panel of the remote controller.
- 2** Select the day of week to set using the Day Selection button.
- 3** After selecting the day of week, select the time to turn on the air conditioner using the Time/Minute button. Press the Time/Minute button one more time to set the minute using the Temperature Adjustment button and press the set button.
- 4** After pressing the On/Off button decide the time to turn off the air conditioner using the Temperature Adjustment button. Press the Set button when completed. If the Off icon blinks for a while and then stops on the time display panel, it is successfully set.
- 5** To set for other days of the week, press the Day button and set the time in the same procedure. Press the Reservation button to exit the reservation mode.
- 6** To cancel the Weekday reservation function, press the Reservation mode and then Cancel.

If you see an outline box around the day of week, it means that time to start and end have been set. When selecting the Reservation mode, other Function button cannot be entered.

- It works wired remote controller's reservation time, if preset time by wireless and wired remote controller at the same time .

Different Mode Operation

When One outdoor unit have several indoor units,Different Mode Operation is which each indoor unit operate different mode.

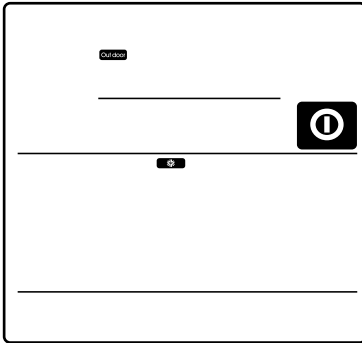

- 1** If one indoor unit operate heating Mode while several indoor units are operating Cooling Mode, Outdoor segment and Cooling segment are blinking like screen on the left
 - It means operation of cooling Mode in outdoor unit
- 2** If one indoor unit operate Cooling or Dehumidification Mode while several indoor units is operating Heating Mode, Outdoor segment and Cooling segment is blinking
 - It means operation of Heating Mode in outdoor unit.
- 3** When push the On/Off button, the indoor unit operate mode automatically which other indoor unit is operating for 5 second later.
 - If the product is not compatible with the Different Mode Operation, Screen will be displayed CH07.
 - If CH07 is displayed , please change the mode.
 - Different Mode Operation is not error

