



Visit us at : <http://www.lgservice.com>

LG

ENGLISH

ITALIANO

ESPAÑOL

FRANÇAIS

DEUTSCH

РУССКИЙ

# LG

## Simple Wired Remote Controller

### *Owner's & Installation Manual*

*Models: PQRCFCS0*

#### IMPORTANT

- Please read this installation manual completely before installing the product.
- Installation work must be performed in accordance with the national wiring standards by authorized personnel only.
- Please retain this installation manual for future reference after reading it thoroughly.

# TABLE OF CONTENTS

■ <b>Safety Precautions</b> .....	3~4
■ <b>Part Description</b> .....	5~6
■ <b>Installation Method</b> .....	7
■ <b>Necessary functions before using</b> .....	8~10
• <b>Trial Operation</b> .....	8
• <b>Setting the Central Control Address</b> .....	9
• <b>ESP Function</b> .....	10
■ <b>How to use the Mode Selection Button</b> .....	11~17
• <b>Cooling Operation</b> .....	11
• <b>Heating Operation</b> .....	12
• <b>Auto-Operation</b> .....	13
• <b>Dry(Dehumidification) Operation</b> .....	14
• <b>Fan Operation</b> .....	14
• <b>Fan Speed Selection</b> .....	15
• <b>Indoor Temperature Display</b> .....	16
• <b>Child Lock</b> .....	17

# Safety Precautions

- The installation requires expert skills, and it should be installed by the service center or other shops specialized in the installation and recognized by our company.
- For all the problems arising after installation by someone who has no relevant qualifications, LG will not provide free service.
- The following safety cautions are provided to prevent unexpected dangers or losses.

**⚠ WARNING :** If the user does not follow the mandatory items, it may result in serious injury or death.

**⚠ CAUTION :** If the user does not follow the mandatory items, it may cause personal injury or property damage.



: Warning and Caution are to call the user's attention to the possible danger. Read and follow them carefully in order to prevent a safety accident.

 


: Warning and Caution are indicated in this guide and the product itself to help protect the users from danger.


## ⚠ WARNING

### ■ Installation

Entrust installation of the product to the service center because improper installation may cause fire, an electric shock, explosion, and physical injury.

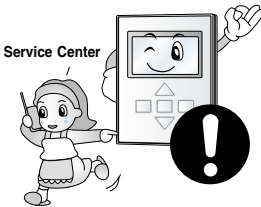

 
Use the original parts in order to prevent fire, an electric shock, explosion, and product breakdown.

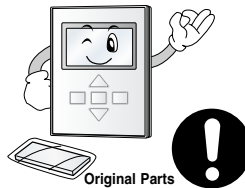


Keep combustible and/or inflammable materials away from the product in order to prevent fire or product breakdown.



 
Do not disassemble, repair, or modify the product at your discretion in order to prevent fire or an electric shock.

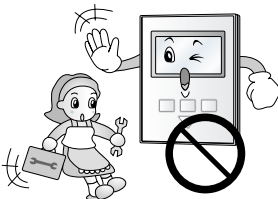

 Do not install the product in wet and humid areas in order to prevent product breakdown.

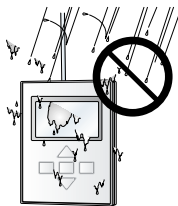


 Do not expose the product to the sun in order to prevent product breakdown.



■ In-use

 
Do not modify or lengthen the power cable at your discretion. It may cause fire or an electric shock.

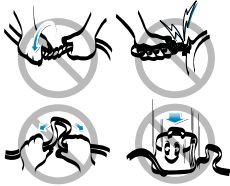


Do not place a heating device near the product. It may cause fire.



 
Do not drop water on to the product. It may cause an electric shock or product breakdown.

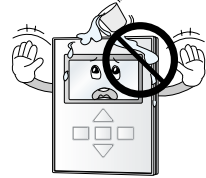

 
Do not place something heavy on the power cable. It may cause fire or an electric shock.

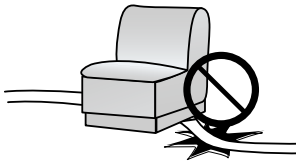

 Do not place a heavy thing on the product. It may cause product breakdown.

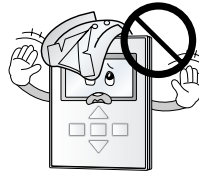


 If the product was submerged under water, ask the service center for instruction. It may cause fire or an electric shock unless you do that.

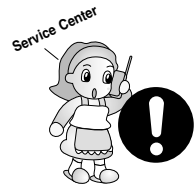

▲ CAUTION

 
Make sure children or senior citizens use the product under proper observation in order to prevent safety accident.

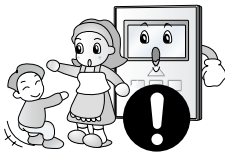

Do not subject the product to shock. It will cause product breakdown.




 Do not pick the product with a sharp tool. It may cause product breakdown with the damage to its parts.



■ In-use

 
Do not clean the product with strong cleanser such as solvent. Use soft clothes in order to prevent fire or product deformation.

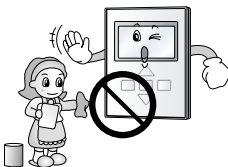


Do not touch the product with a wet hand. Do not pull the lead cable. It may cause product breakdown or an electric shock.




# Part Description

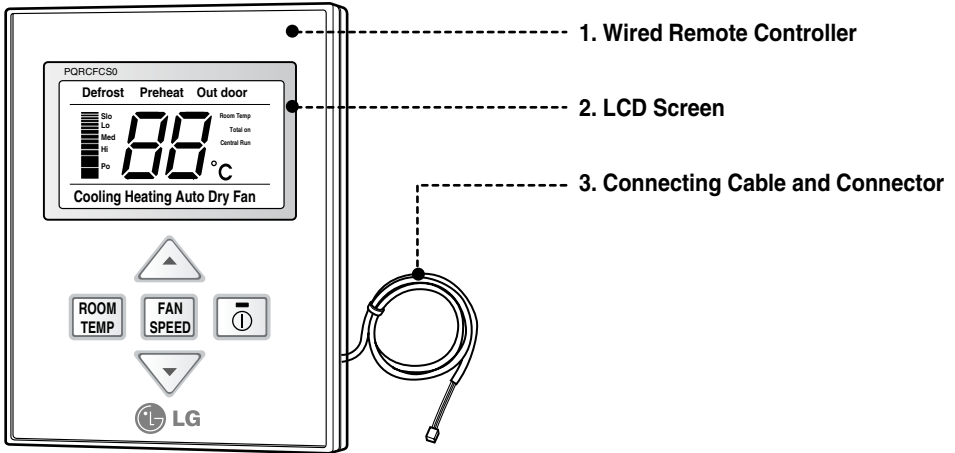 

## Accessory

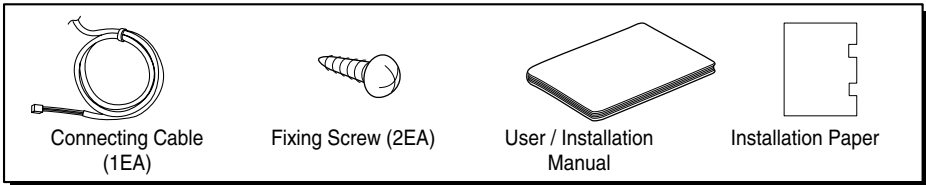 

# Simple Wired Remote Controller

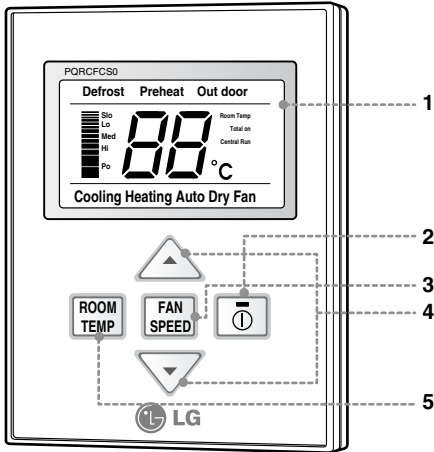 


- 1. Operation Display Panel
- 2. On/Off Function
- 3. Fan Speed Button
- 4. Temperature Control Button
- 5. Room Temperature Check Button


Each function will be shown on the display panel for three second or so when the power is applide at first.

# Installation Method

 
- 1** Put the installation paper on the place and determine the position and height of the fixing screws of the wired remote controller.
- Refer to the printed side of the installation paper.

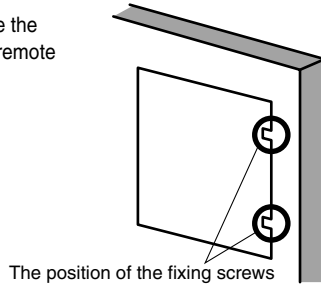

 - 2** Plug the connecting cable into the indoor unit.
- The product is being shipped with the cable connected only to the remote controller. Fix the connecting cable with the cable rack.

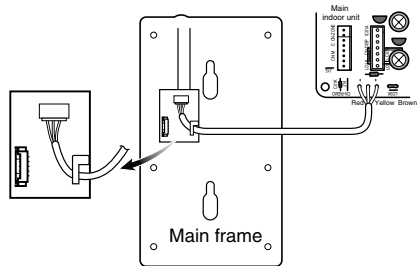

 - 3** Remove the installation paper before installing the remote controller so that it can fit at the right place.

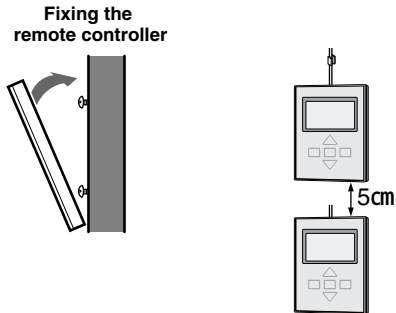

\* Do not embed the remote controller into the wall. (It may cause the breakdown of the temperature sensor.)

\* If you want to install a number of remote controller at the same place in a vertical line, install them at regular intervals of 5cm. (It may cause the breakdown of the temperature sensor.)


Supply the power after connecting wired remote controller.

When you need to change wired remote controller, switch off the main power and change it. If the wired remote controller is changed before switching off the main power, the option function of the indoor unit can't be used. (option function like "slo" fan speed selection)

## Necessary functions before using
 
### Trial Operation

The trial operation is to check the installation status of the product. The temperature will not be controlled during trial operation. Instead the product will operate in several modes such as cooling, strong wind, comp-on.

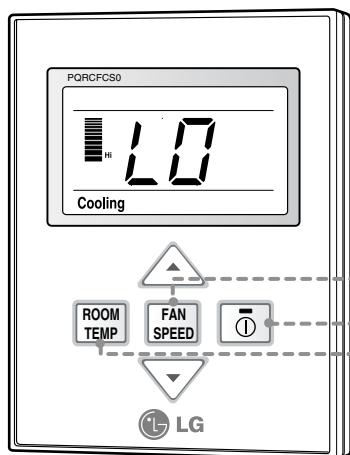

- 1** If you want to set the trial operation mode, press the Room Temperature button and the fan speed button same time for three seconds.
- 2** Then the product will begin the trial operation and the display will be like as shown on left side picture.
- 3** If you want to cancel the trial operation mode, just press the On/Off button.
- 4** The trail operation will shut down automatically after 18 minutes and system will go to the standby mode.


\* This function might not be available for Multi Product like Multi V system.



## Setting the Central-Control Address

 Please set the address while using the central controller.


You don't need to set address if you don't use central controller.

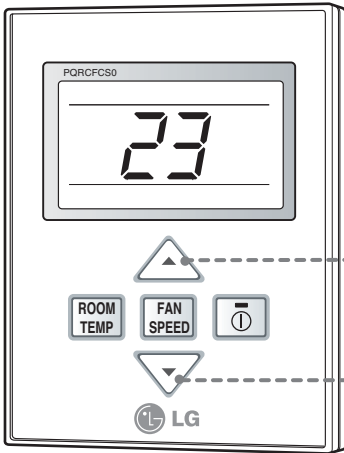

**1** If you want to set the address on the display panel, press both temperature control buttons (▲/▼) same time for three seconds.

**2** Press the temperature-increasing button to change the group number. Press the temperature-decreasing button to change the indoor unit number.  
e.g. As shown on the left side panel, it displays 23.  
Group No. : 2  
Indoor Unit No. : 3

 **3** Set the address by pressing both temperature control buttons again (▲/▼) same time for three seconds.

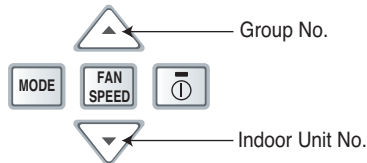


- If you connect the indoor unit to the central controller, you should set the network address of the indoor unit so that the central controller could recognize it.
- The center-control address is composed of the group number and the indoor-unit number.

※ If you set the control status of the group, that you can't the central control and wireless remote control.

## ESP Function

 E.S.P function is setting the volume of each fan speed. It is for the convenience of installation. It is recommended that you should not use this function while using the remote controller.

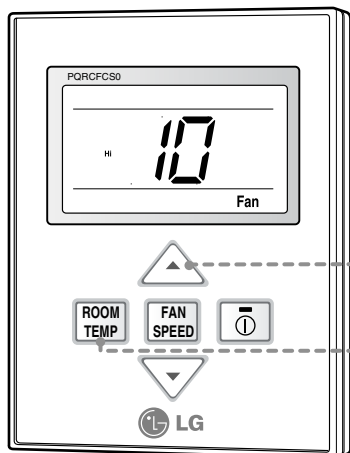


**1** Press the room temperature button and temperature increasing button ▲ same time for three seconds

**2** Set the volume of each fan speed(Low, Medium, Hi) by using the temperature control button. Press the fan speed button to select the fan speed. The value of E.S.P can be adjusted from 1 to 255.

**3** If you press the On/Off button while setting the ESP function, it will be canceled. (The picture on the left side is the example of setting the Hi wind to ESP 10.)

**4** Press the room temperature button and the temperature increasing button (▲) at the same time for three seconds. Then the ESP setting will be activated after the temperature display flashes three times.

 
EX)

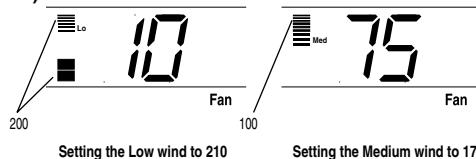

\* The E.S.P value is set at the proper value at the factory. So it is highly recommended that you should do not change the E.S.P value at your discretion.

# How to use the Mode Selection Button
 
## Cooling Operation

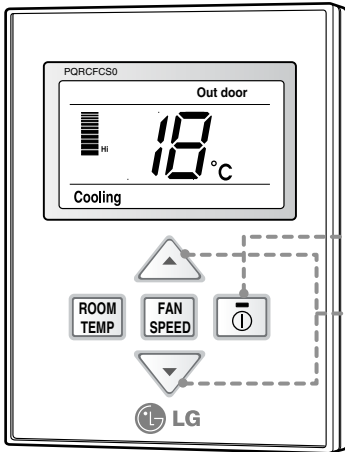

**1** If you want to start the cooling operation, press the On/Off button. The cooling mode can be set from Central Controller only.

**2** Press the temperature button and set the desired temperature lower than the current room temperature. (18~30°C)



A click of the button will increase the desired temperature by 1°C.

A click of the button will decrease the desired temperature by 1°C.

\* If the desired temperature is set higher than the current room temperature, the cooling function will not begin and just the fan operation will continue.

**3** If you want to change mode during the operation, the operation mode will be changed by only Central Controller.

**4** If you press On/Off button again, the cooling operation will stop.


### What is the three-minute delay function?

 The function to protect the compressor delays the output of cool air when operating instantly after interrupting the cooling operation.

Cooling operation restarts after 3 minutes when the compressor starts to operate.

- You can choose the expected temperature from 18°C to 30°C.
- It is recommended that the ideal difference of the temperature between indoors and outdoors should be less than 5°C.

## Heating Operation

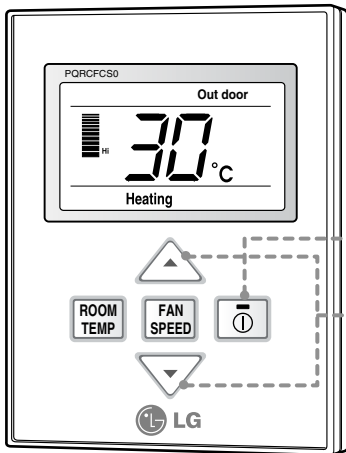

**1** If you want to start the heating operation, press the On/Off button. The heating mode can be set from Central Controller only.

**2** Set the desired room temperature higher than the current room temperature. (16~30°C)



A click of the button will increase the desired temperature by 1°C.

A click of the button will decrease the desired temperature by 1°C.

\* If the desired temperature is set lower than the current room temperature, the heating function will not begin.

**3** If you want to change mode during the operation, the operation mode will be changed by Central Controller.


**4** If you press On/Off button again, the heating operation will stop.

### What is the three-minute delay function?

 It will take a time for the product to blow warm air. The delay is just to protect the compressor. The room will be heated with warm air after three minutes when the compressor begins operation.

■ The cooling-only model will not do heating function.

## Auto-Operation

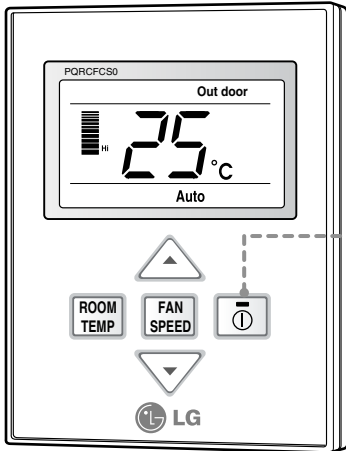


- 1** Set the operation mode to auto-operation by central controller after pressing the On/Off button.
- 2** When the room temperature is lower than the desired temperature: Heating Operation starts  
[For Heat Pump Models only]  
  
When the room temperature is higher than the desired temperature: Cooling Operation starts
- 3** If you want to change Mode during the operation, the operation mode will be changed by central controller.

\* This auto-operation is not related to "Auto Change Over" function.

## Dry(Dehumidification) Operation

 Dry(Dehumidification) by lowering temperature slightly

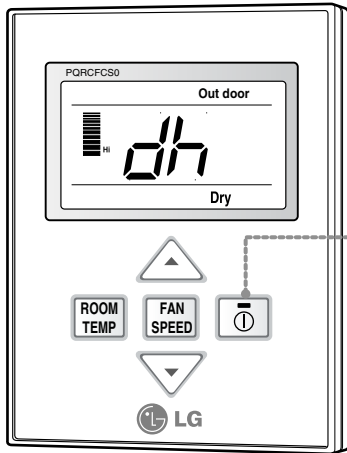


**1** If you want to start the dry operation, press On/Off button. The dry operation can be set from Central Controller only.

**2** When the dry operation is selected, "dh" will be shown on the display panel as shown on the left side.

**3** If it is used during rainy season or high humidity, you can have both effective dehumidifying and air conditioning effect.

\* Temperature control is not available during the dry operation.

## Fan Operation

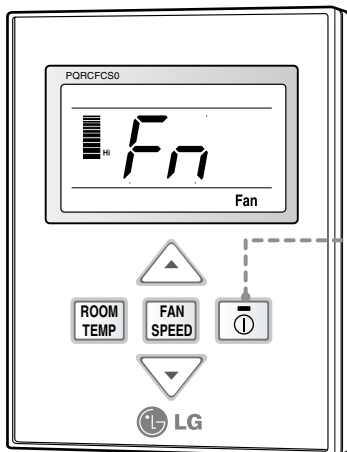 

**1** If you want to start the fan operation, press the On/Off button. The fan operation can be set from Central Controller only.

**2** When the fan operation is selected, "Fn" will be displayed on the display panel.


**3**

 - Fan operation does not give cold air, but just the fan air.
- By giving out air that has no difference of temperature with the indoors, it allows circulation of the room.

\* Temperature control is not available in the fan operation.


## Fan Speed Selection

You can easily control the fan speed.

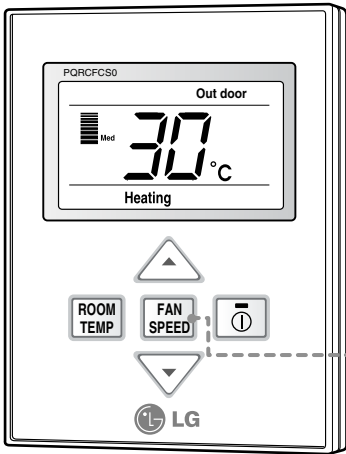


- 1** Select the proper fan speed which you want by pressing the fan speed button on the remote controller.
  - If you press the fan speed button, the fan speed will change in the order of Low>Medium>Hi>Power.
  - The initial fan speed is "Hi"
  - If the product is not compatible with the fan speed control, it will not function as per your selection.


### Fan Speed Selection in Cooling Operation

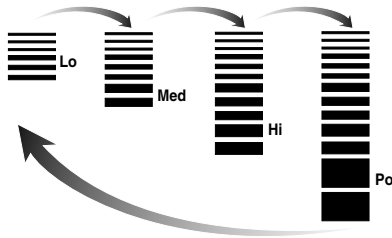 

### Fan Speed Selection in Heating, Dry, Fan and Auto-Operation

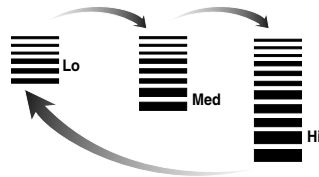 

## Indoor Temperature Display

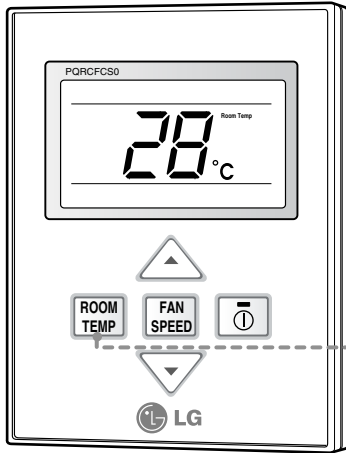 


- 1** When the room temperature button is pressed on the remote controller, the indoor temperature will be displayed for about 5 seconds, then goes back to the previous screen.



## Child Lock

 This is a function to prevent tampering of settings by children or others.

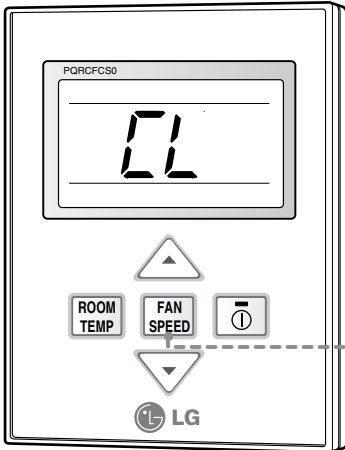

- 1** You can use the child lock function by pressing both temperature increasing button and fan speed button for three seconds. In the initial setting of the child lock function, "CL" will be displayed on the display panel and then it will come back to the original mode. Now a click of another button will not be recognized and the "CL" is being shown on the display panel for three seconds due to child lock.
- 2** If you want to cancel the child lock mode, press the temperature increasing button and the fan speed button again for three seconds.



