

HOW TO WASH / धुलाई का तरीका

4 Put the appropriate amount of detergent and the laundry into the wash tub. And add water to the desired water level. अब धोषा दम में निश्चित मात्रा में डिटरजेंट एवं कपड़े डाल दें। पानी को निर्धारित स्तर तक भर दें।

5 Press Power SW धारर स्विच को दबाएं।

6 Select the wash selector to "GENTLE", "NORMAL", "STRONG" according to kinds and quantity of the laundry. धोषा सलेक्टर को कपड़ों की किस्म और मात्रा के हिसाब से "जेन्टिल", "नॉर्मल" या "स्ट्रॉंग" पर रखें।

7 Set the desired wash time. अब धुलाई का समय सेट कर दें।

8

9 When washing is finished, select the drain selector to "DRAIN" position and drain the water धुलाई के बाद ड्रेन सलेक्टर को ड्रेन पर कर दें और पानी निकाल दें।

10 Spinning in the spin dryer basket:

11

HOW TO RINSE / खंगालने (रिन्स) का तरीका

Interim spin rinse / थोड़ा स्पिन रिन्स (रिन्स से थोड़ा खंगालना)

1 After washing

2 Set the water selector to "SPIN". धीरे-धीरे सलेक्टर को "स्पिन" पर कर दें।

3 Allow the water to flow appropriately. अब उसमें पानी भर दें।

4 Turn off the water supply, close the safety cover-2 and spin dryer cover. पानी की सहाई बन्द करके सेफ्टी कवर-2 और स्पिन ड्रायर कवर दक दें।

5 Set the desired spin time

6 After spinning

Economical water supply rinse / खंगालने (रिन्स) में पानी की बचत

1 Set the drain selector to "WASH" RINSE position and feed appropriate water to the tub. ड्रेन सलेक्टर को "वॉश" रिन्स स्थिति में रखें और दम में निश्चित मात्रा में पानी भर लें।

2 Set the rinse time with the wash timer

3 Put the laundry into the spin dryer basket and set the spin time with the spin timer.

4 Put the laundry into the wash tub and repeat 1 to 3 course

12

HOW TO RINSE / खंगालने (रिन्स) का तरीका

Continuous water supply rinse / चलेते पानी में कपड़े खंगालना (रिन्स)

1 The course is to rinse while feeding water continuously / इस तरीके में कपड़े चलते पानी में खंगाले जाते हैं।

1 Set the drain selector to "WASH" RINSE position.

2 Put the laundry into the wash tub and open the water faucet.

3 Set the rinse time with the wash timer and feed water continuously.

HOW TO SPIN / निचोड़ने का तरीका

1. Put the laundry evenly into the spin dryer basket.

2. Put the laundry down lightly.

3. Place the safety cover horizontally on the top of the laundry.

4. Close the spin dryer cover.

5. Set the spin timer according to the following table.

SPIN TIME GUIDE / समय तालिका

Type of clothing / कपड़े की श्रेणी

Spin Time / समय

13

REFERENCE / संदर्भ

TABLE 1. WEIGHT GUIDE FOR CLOTHES / कपड़ों के वजन के निर्देश

TABLE 2. GUIDE FOR WASHING / धुलाई के निर्देश (WP-9220)

TABLE 3. GUIDE FOR WASHING (WITHOUT SOAK) / धुलाई के निर्देश (सॉक के बिना)

TABLE 4. GUIDE FOR WASHING (WITH SOAK) / धुलाई के निर्देश (सॉक के साथ)

Notes / टिप्पणियाँ:

CAUTION / सावधानी:

AFTER FINISHING WASH / धुलाई पूरी होने के बाद

14

Owner's Manual

PLEASE READ THIS MANUAL CAREFULLY AND THOROUGHLY BEFORE OPERATING THIS UNIT. THIS WASHING MACHINE IS DESIGNED AND MANUFACTURED FOR HOUSEHOLD USE ONLY.

MODEL : WP-9220

15

CARE AND MAINTENANCE / देखभाल और सफाई

Be sure to disconnect the power cord from the electric outlet before starting care and maintenance.

Washing machine / वाशिंग मशीन

Pulsator / पल्सेटर

Overflow filter & Rotation filter-C / ओवर फ्लो फिल्टर व रोटेशन फिल्टर-सी

1

2

3

4

5

6

1*

2*

3*

15

CARE AND MAINTENANCE / देखभाल और सफाई

Spin dryer basket / स्पिन ड्रायर बास्केट

1

2

3

4

5

6

7

Troubleshooting Guide / गड़बड़ी का पता लगाना

Before requesting service / सर्विस से पहले

Troubles / गड़बड़ी

Checking points / जाँच करें

16

SPECIFICATIONS / माप

WP-9220* / WP-9224

WP-9521 / WP-9526S

WP-1020 / WP-1021S / WP-1022M

WP-9852 / WP-1262S

17

Installation Check sheet

Customer Copy

Model No. : _____ Job No. : _____ Dt. of pur. : _____

Name Of Customer : _____ M/C. S. No. : _____

Address : _____ Tel/ Mob : _____

Signature Of Customer _____ Date : _____ Time : _____

Company Copy

Model No. : _____ Job No. : _____ Dt. of pur. : _____

Name Of Customer : _____ M/C. S. No. : _____

Address : _____ Tel/ Mob : _____

Signature Of Customer _____ Date : _____ Time : _____

Customer Remarks If Any:

Signature Of Customer _____ Date : _____ Time : _____

For Best Use, Please Read the User's Manual Properly.

18

WARRANTY

This LG Washing Machine comes with 2 year warranty, from the date of purchase, that comprises of a 2 year warranty on all Parts except LinT filter, knobs, Inlet/outlet hose & Top Covers, subject to that the warranty card bears the rubber stamp, date and signature of our Authorized Dealer.

Terms & Condition

1. The warranty is confined to the first purchaser of the Washing Machine only & is non-transferable.

2. Repairs & replacements will be carried out by the dealer from whom the product has been purchased, or through the Authorized Service Centers of LGELI. In case the customer shifts the place of residence during warranty period, it is advised to contact Authorized Service Centre directly or call our help line.

3. Repairs under warranty shall be carried out by an authorized service personnel only. The details of centralized helpline are attached.

4. For units installed beyond municipal limits of the jurisdiction of company's Authorized Service Center, it is responsibility of the purchaser to contact the nearest authorized service center and bring the unit to the authorized service center at its own cost and risk. All expenses incurred in collecting the units or parts thereof from the company's authorized service center, as well as expenses incurred with depulizing of service personnel/technicians towards conveyance and other incidentals etc. will be borne by the customer. Local Charges for transportation and handling charges may vary from location to location. Customers are advised to verify before. In case the customer desires to bring the unit on its own to the Authorized Service Center, the same shall be at its own risks & consequences.

5. The concerned authorized service center will advise the customer whether to effect the repairs at site or at the authorized service center.

6. Call registered with the centralized helpline/Authorized service center, wherein only cleaning of the unit/parts in the unit due to dust accumulation on portions of the unit, general expensures/returning, are not to be considered as defects.

7. In case of repairs or replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty. Replacement of parts would be purely at the discretion of LGELI, alone. In case the replacement of the entire unit is being made, (subject to the sole discretion of LGELI), the same model shall be replaced and in the event such model has been discontinued, it shall be replaced with the model of price equivalent at the time of purchase.

8. In case of any damage to the product/customer abuse/repairs by un-authorized personnel's/misuse detected/ by the Authorized Service Center personnel, the warranty conditions are not applicable and repairs will be done subject to availability of parts and on a chargeable basis only.

9. This warranty shall not cover any consequential or resulting liability, damage or loss to property or life arising directly or indirectly out of any defect in the Washing Machine. The company's obligation under this warranty shall be limited to repair or providing replacement of defective parts only under the warranty period.

10. The company or its Authorized Service Center reserves the right to retain any part/s or component replaced at its discretion. In the event of a defect being noticed in the equipment during warranty period.

11. While the company will make every effort to carry out repairs at the earliest, it however is made expressly clear that the company is under no obligation to do so in a specified period of time.

12. Warranty does not cover accessories external to the equipment supplied by the dealer.

13. If any coloured internal or external components are replaced, there will be commitment to ensure that the shades match with the original or other components. The replaced shades, patterns, tints may be in use for any time during the warranty period for any reason. 10. Only courts in state of Delhi and places where LGELI has it's branch office shall have the jurisdiction for settling any claims, disputes arising under the warranty.

Warranty is not applicable in any of the following cases:

1. The warranty card is not completed properly at the time of purchase. 2. The completed warranty card is not presented to authorized service personnel at the time of service of the product. 3. The product is not operated according to instructions given in the Operating Instruction Booklet. 4. Defects are caused by improper or reckless use, which shall be determined by the company personnel. 5. Any repair work is carried out by persons other than authorized service personnel. 6. Defects are caused by due to causes beyond control like lightning, abnormal voltage, acts of God or while in transit to service center or purchaser's residence. 7. The warranty is not valid in case, the serial number is deleted, defected or altered. 8. Damage to the product or any part/s due to transportation or shifting is not covered by warranty. 9. This warranty will automatically terminate on the expiry of the warranty period of 24 months, even if the Washing Machine may not be in use for any time during the warranty period for any reason. 10. Only courts in state of Delhi and places where LGELI has it's branch office shall have the jurisdiction for settling any claims, disputes arising under the warranty.

CUSTOMER'S COPY

MODEL No. : _____ DATE OF PURCHASE : _____

UNIT SERIAL No. : _____

CUSTOMER NAME & ADDRESS _____

DEALER NAME & ADDRESS _____

TEL. _____ TEL. _____

Customer's Signature _____ Dealer's Signature _____

This Card is valid only if it is filled in and stamped by our authorised dealer on the date of purchase.

19

