

Power source	ON SPECIFICATION LABEL
Water Level	H : 50 Litres
Water Pressure	Less than 100kPa (1kg/cm <sup>2</sup> )
Dimension	700 x 430 x 920 mm. (W x D x H)
Weight	For Non-Pump Model 19 kg
	For Pump Model 19.6 kg

How to read the manufactured month and year from the label stuck on the back of the product.

EX) 7 0 1 T W A A 0 0 0 1

Serial No.  
Password code  
Product code  
Month  
Year (The last digit to year)

Main service part list : Refer to below listed part name when you need service call.

Part name	Remark
- WASH MOTOR	90 W (Output)
- SPIN MOTOR	25-40 W (Output)
- S.D.BASKET	PLASTIC
- CYCLE TIMER ASSEMBLY	
- CAPACITOR	
- GEAR CASE ASSEMBLY	

P/No. : MFL38271101

8

## WASHING MACHINE OWNER'S MANUAL

MODEL : WP-750(N,R)(P)/WP-800(N,R)(P)  
WP-791(N,R)(P)

Please read the operating instructions carefully and thoroughly before installing and operating your washing machine.  
This washing machine is designed and manufactured for household use only

**Specification**  
(N,R) : Pulsator Type  
(P) : Pump Model Only  
P/No. : MFL38271101


## CAUTION

### CAUTION

<b>Installation Area</b> <ul style="list-style-type: none"> <li>• Avoid area exposed to snow, rain, or where humidity is high. It may cause electric shock.</li> </ul>	<b>Heat</b> <ul style="list-style-type: none"> <li>• Avoid electric heater, candle light, cigarette light, bug smoker, etc. near the machine. It may ignite or deform plastic part.</li> </ul>
<b>Switch Area</b> <ul style="list-style-type: none"> <li>• Avoid watering on the switch area. It may cause electric shock or fire.</li> </ul>	<b>Hot water</b> <ul style="list-style-type: none"> <li>• Avoid using hot water over 50 °C. It may deform plastic parts or cause malfunction.</li> </ul>
<b>Volatile Material</b> <ul style="list-style-type: none"> <li>• Do not use volatile material such as Benzene, Gasoline, bug killer.</li> <li>• Do not leave strong alkaline substance such as bleach inside the tub. Damage on plastic surface and rubber parts may occur.</li> </ul>	<b>In Operation</b> <ul style="list-style-type: none"> <li>• Do not insert the hand inside the spin dryer basket while the machine is in operation (Do not let children climb on the machine or climb into the tub. Injury may occur.)</li> <li>• Do not drain the water out of the wash tub while the spin dryer basket is in operation. Otherwise the spin motor could be damaged.</li> </ul>
<b>Installation</b> <ul style="list-style-type: none"> <li>• Install the washing machine on a horizontal support. Otherwise, it may cause vibration and noise.</li> </ul>	<b>Power Cord</b> <ul style="list-style-type: none"> <li>• If the power supply cord is damaged, it must only be replaced by the manufacture or its service agent or a similarly qualified person in order to avoid a hazard.</li> </ul>
<ul style="list-style-type: none"> <li>• Be sure to disconnect the power cord from the electric outlet before starting care and maintenance.</li> </ul>	<b>Electric Outlet</b> <ul style="list-style-type: none"> <li>• Avoid connecting several electric devices to single outlet. It may cause fire.</li> </ul>
<ul style="list-style-type: none"> <li>• Be sure to earth the washer to prevent electric shock. To reduce the risk of electric shock, do not install the washer in humid spaces.</li> </ul>	
<b>Connecting the drain hose</b>	
<b>For Non-Pump Model</b> <ul style="list-style-type: none"> <li>• Be sure to reroute the hose so that it is not kinked; kinks or sharp bending in the hose will prevent proper drainage.</li> <li>• Make sure water is drained smoothly by placing a base under the machine or by applying other appropriate mean.</li> </ul>	
<b>For Pump Model</b> <ul style="list-style-type: none"> <li>• L ≤ 1 m.</li> </ul>	

2

## FEATURES

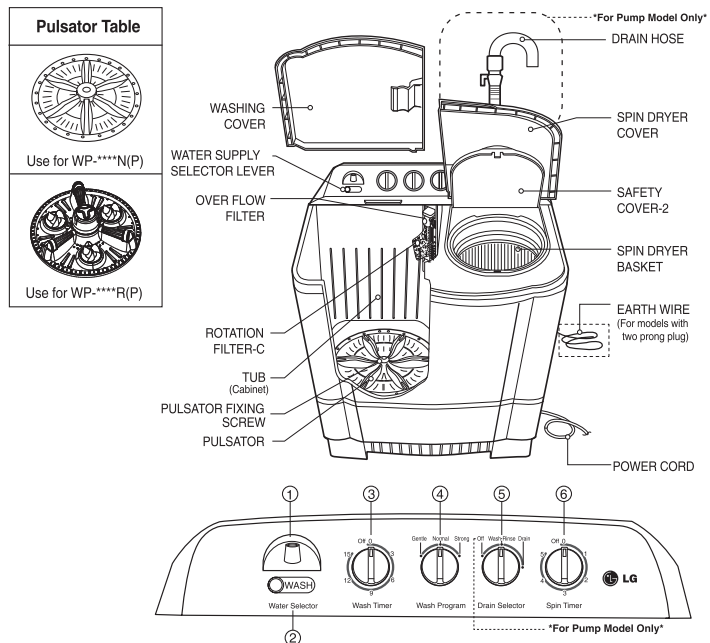

- Water Supply Inlet**  
Connect here with the inlet hose from the water faucet to feed water to the tub.
- Water Selector**  
Select "WASH" to supply water for washing and rinsing and "SPIN" for spin shower rinse.
- Wash Timer**  
Select the desired time for washing or rinsing.
- Wash Program**  
Set the program to "Gentle", "Normal", "Strong" according to kinds and quantity of the laundry.

- Drain Selector**
  - **For Non-Pump Model**  
Select "Wash • Rinse" for washing and rinsing and "Drain" to drain the water out of the tub.
  - **For Pump Model**  
Select "Wash • Rinse" for washing, rinsing and turn off the drain pump and "Drain" to drain the water out of Cabinet, and "Off" to turn off the drain pump.
- Spin Timer**  
Connect here with the inlet hose from the water faucet to feed water to the tub.

3

