



Washing Machine

Owner's manual

F1211SDR(5)	F1212SDR(5)	F1218SDR(5)	F1219SDR(5)
F1011SDR(5)	F1012SDR(5)	F1018SDR(5)	F1019SDR(5)
F1211NDR(5)	F1212NDR(5)	F1218NDR(5)	F1219NDR(5)
F1011NDR(5)	F1012NDR(5)	F1018NDR(5)	F1019NDR(5)
F1211TDR(5)	F1212TDR(5)	F1218TDR(5)	F1219TDR(5)
F1011TDR(5)	F1012TDR(5)	F1018TDR(5)	F1019TDR(5)
F1220SDR(5)	F1221SDR(5)	F1222SD(5)	F1223SDR(5)
F1020SDR(5)	F1021SDR(5)	F1022SD(5)	F1023SDR(5)
F1220NDR(5)	F1221NDR(5)	F1222ND(5)	F1223NDR(5)
F1020NDR(5)	F1021NDR(5)	F1022ND(5)	F1023NDR(5)
F1220TDR(5)	F1221TDR(5)	F1222TD(5)	F1223TDR(5)
F1020TDR(5)	F1021TDR(5)	F1022TD(5)	F1023TDR(5)

Thank you for buying a LG Fully Automatic Washing machine.
Please read your owner's manual carefully, it provides instructions
on safe installation, use and maintenance.
Retain it for future reference.
Record the model and serial numbers of your washing machine.

P roduct Features



■ Protection against creases

With the alternate rotation of the drum, creasing in the laundry is minimized.



■ More economical by Intelligent Wash System

Intelligent Wash System detects the amount of load and water temperature, and then determines the optimum water level and washing time to minimize energy and water consumption.



■ Child-Lock

The child-lock system is to be used for preventing children from pressing any button to change the program during operation.



■ Low noise speed control system

By sensing the amount of load and balance, it evenly distributes load to minimize the spinning noise level.



■ Direct Drive System

The advanced Brushless DD motor rotates the drum directly without belt and pulley.



■ Tub Clean function

This special cycle uses higher water level with higher spin speed to clean the inside of the washer.

C ontents

Warnings.....	3
Specifications.....	4
Installation.....	6
Care before washing.....	11
Adding detergent.....	12
Function / How to use washer	
F1211(12)S/N/TDR(5) / F1011(12)S/N/TDR(5).....	13
F1218(19)S/N/TDR(5) / F1018(19)S/N/TDR(5).....	20
F1220S/N/TDR(5) / F1020S/N/TDR(5).....	28
F1221S/N/TDR(5) / F1021S/N/TDR(5).....	35
F1222S/N/TD(5) / F1022S/N/TD(5).....	42
F1223S/N/TDR(5) / F1023S/N/TDR(5).....	49
Display.....	55
Maintenance.....	57
Troubleshooting guide.....	60
Terms of Warranty.....	63

Warnings

READ ALL INSTRUCTIONS AND EXPLANATION OF THE INSTALLATION BEFORE USE

WARNING!

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, personal injury, or loss of life.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury to persons when using the washer, follow basic precautions, including the following:

- Before installation, check exterior damages. If it has, do not install.
- Do not install or store the washer where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the washer or attempt any servicing unless specifically recommended in the user-maintenance instructions or published user-repair instructions that you understand and have the skills to carry out.
- Keep the area underneath and around your appliances free of combustible materials such as lint, paper, rags, chemicals, etc.
- Close supervision is necessary if this appliance is used by or near children. Do not allow children to play on, with, or inside this or any other appliances.
- Keep small animals away from the appliance.
- Do not leave the washer door open.
An open door could entice children to hang on the door or crawl inside the washer.
- Never reach into washer while it is moving. Wait until the drum has completely stopped.
- The laundry process can reduce the flame retardant of fabrics.
- To avoid such a result, carefully follow the garment manufacturer's wash and care instructions.
- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.) which may ignite or explode. Oil may remain in the tub after a whole cycle resulting in fire during drying. So, do not load oiled clothes.
- Do not slam the washer door closed or try to force the door open when locked. This could result in damage to the washer.
- When the machine runs high temperature, the front door may be very hot. Don't touch it.
- To minimize the possibility of electric shock, unplug this appliance from the power supply or disconnect the washer at the household distribution panel by removing the fuse or switching off the circuit breaker before attempting any maintenance or cleaning.
- When unplugging power cord, do not pull out by grasping the cord. Otherwise, the power cord may be damaged.
- Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.
- Before discarding an old machine unplug it. Render the plug useless. Cut off the cable directly behind the appliance to prevent misuse.
- When a product was under water, please call service center. There is a risk of electric shock and fire.

*** Do not push down the door excessively, when washer door open.
This could topple over the washer.**

SAVE THESE INSTRUCTIONS


GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinance.

- Do not use an adapter or otherwise defeat the grounding plug.
- If you don't have the proper outlet, consult an electrician.

WARNING: Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the appliance is properly grounded. Do not modify the plug provided with the appliance - if it does not fit the outlet, have a proper outlet installed by a qualified electrician.


S pecifications

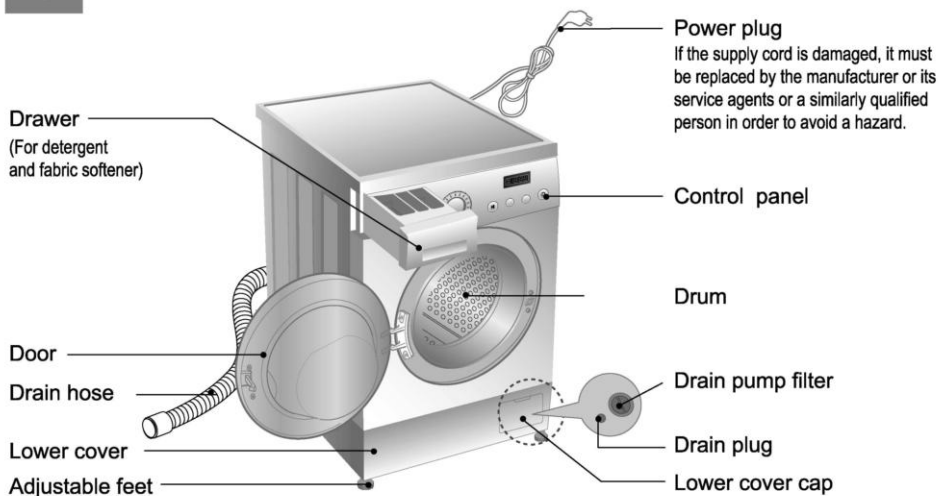

Name	FRONT LOADING WASHING MACHINE		
Wash capacity	4 kg (SD) (5)	6 kg (ND) (5)	8 kg (TD) (5)
Power supply	220 – 240 V ~, 50 Hz		
Size (W)x(D)x(H)	600mm x 360mm x 850mm	600mm x 440mm x 850mm	600mm x 550mm x 850mm
Weight/Max.Watt	56kg / 2000W	59kg / 1700W	64kg / 2100W
Water consumption	48 ℓ	56 ℓ	56 ℓ
Permissible water pressure	0,3 – 10 kgf/cm ² (30-1000 kPa)		

* The appearance and specifications may be varied without notice to raise the units quality.

■ Accessories

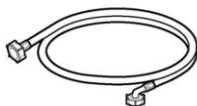

Inlet hose 1EA



Spanner

S pecifications

Model	F1011SDR F1011NDR F1011TDR	F1211SDR F1211NDR F1211TDR
Spin speed	No spin / Rinse Hold / 400 / 600 / 800 / 1000	No spin / Rinse Hold / 400 / 600 / 800 / 1000 / 1200

Model	F1012SDR F1012NDR F1012TDR	F1212SDR F1212NDR F1212TDR
Spin speed	No spin / Rinse Hold / 400 / 600 / 800 / 1000	No spin / Rinse Hold / 400 / 600 / 800 / 1000 / 1200

Model	F1018SDR F1018NDR F1018TDR	F1218SDR F1218NDR F1218TDR
Spin speed	No spin / 400 / 600 / 800 / 1000	No spin / 400 / 600 / 800 / 1000 / 1200

Model	F1019SDR F1019NDR F1019TDR	F1219SDR F1219NDR F1219TDR
Spin speed	No spin / 400 / 600 / 800 / 1000	No spin / 400 / 600 / 800 / 1000 / 1200

Model	F1020SDR F1020NDR F1020TDR	F1220SDR F1220NDR F1220TDR
Spin speed	No spin / 400 / 600 / 800 / 1000	No spin 400 / 800 / 1000 / 1200

Model	F1021SDR F1021NDR F1021TDR	F1221SDR F1221NDR F1221TDR
Spin speed	No spin / Rinse Hold / 400 / 600 / 800 / 900 / 1000	No spin / Rinse Hold / 400 / 600 / 800 / 1000 / 1200

Model	F1022SD F1022ND F1022TD	F1222SD F1222ND F1222TD
Spin speed	No spin / Rinse Hold / 400 / 800 / 1000	No spin / Rinse Hold / 400 / 800 / 1200

Model	F1023SDR F1023NDR F1023TDR	F1223SDR F1223NDR F1223TDR
Spin speed	No spin / Rinse Hold / 400 / 600 / 800 / 900 / 1000	No spin / Rinse Hold / 400 / 600 / 800 / 1000 / 1200

I nstallation

Install or store where it will not be exposed to temperatures below freezing or exposed to the weather. Properly ground washer to conform with all governing codes and ordinances. The base opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.


In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the appliance guarantee.

■ Transit bolts



The appliance is fitted with transit bolts to prevent internal damage during transport.

- Packing and all transit bolts must be removed before using the washer.

- When unpacking the base, be sure to remove the additional packing support in the middle of the base packing.

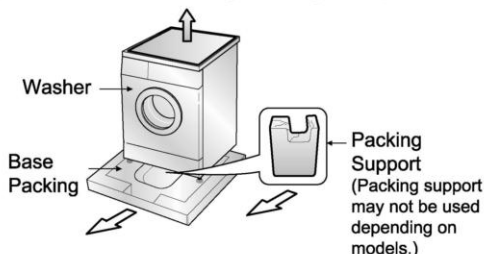


■ Removing transit bolts

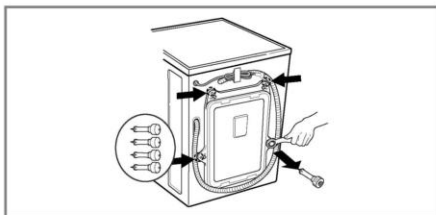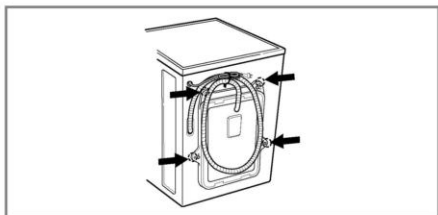

1. To prevent internal damage during transport, the special 4 bolts are locked. Before operating the washer, remove the bolts along with the rubber bungs.
 - If they are not removed, it may cause heavy vibration, noise and malfunction.
2. Unscrew the 4 bolts with the spanner supplied.
3. Take out the 4 bolts along with the rubber bungs by slightly twisting the bung. Keep the 4 bolts and the spanner for future use.
 - Whenever the appliance is transported, the transit bolts must be refitted.
4. Close the holes with the caps supplied.

I nstallation

■ Installation place requirement

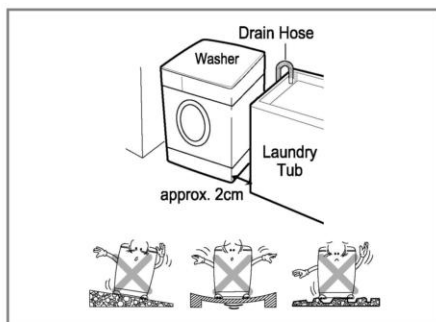

Level floor :


Allowable slope under entire washer is 1°

Power outlet :

Must be within 1.5 meters of either side of location of washer. Do not overload the outlet with more than one appliance.

Additional Clearance :

For wall, door and floor modeling is required.
(10cm : rear / 2cm: right & left side)

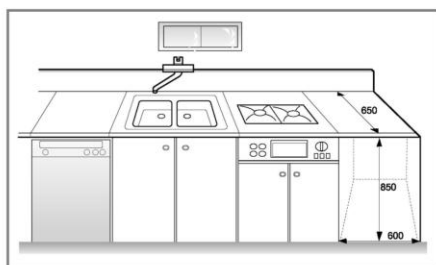

Do not place or store laundry products on top of washer at any times. They can damage the finish or controls.

■ Positioning

Install the washer on a flat hard floor.

Make sure that air circulation around the washer is not impeded by carpets, rug etc.

- Never try to correct any unevenness in the floor with pieces of wood, cardboard or similar materials under the washer.
- If it is impossible to avoid positioning the washer next to a gas cooker or coal burning stove, an insulating (85x60cm) covered with aluminum foil on the side facing the cooker or stove, must be inserted between the two appliances.
- The washer must not be installed in rooms where the temperature can drop below 0°C.
- Please ensure that when the washer is installed, it is easily accessible for the engineer in the event of a breakdown.
- With the washer installed adjust all four feet using the transit bolt spanner provided ensuring the appliance is stable, and a clearance of approximately 20mm is left between the top of the washer and the underside of the work-top.

I nstallation

■ Electrical connection

1. Do not use an extension cord or double adapter.
 2. If the supply cord is damaged, it must be replaced by the manufacturer or its service agents or similarly qualified person in order to avoid a hazard.
 3. Always unplug the machine and turn off the water supply after use.
 4. Connect the machine to an earthed socket in accordance with current wiring regulations.
 5. The appliance must be positioned so that the plug is easily accessible.
- Repairs to the washing machine must only be carried out by qualified personnel. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local service center.
 - Do not install your washing machine in rooms where temperature below freezing may occur. Frozen hoses may burst under pressure. The reliability of the electronic control unit may be impaired at temperatures below freezing point.
 - If the appliance is delivered in the winter months and temperatures are below freezing, place the washing machine at room temperature for a few hours before putting it into operation.

CAUTION

CONCERNING THE POWER CORD


Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

■ Connecting water supply hose

Washing Machine is to be connected to the water mains using new hose-sets and old hose-sets should not be used.

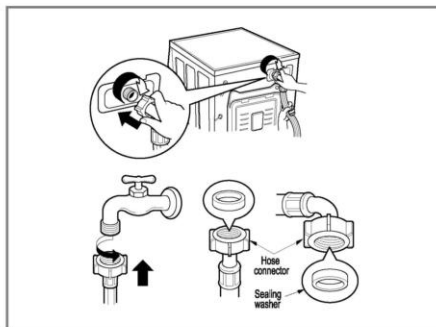

- ▶ Water supply pressure must be between 30kPa and 1000kPa (0.3~10kgf/cm²)
- ▶ Don't strip or crosstread when connecting Inlet hose to the valve.
- ▶ If the water supply pressure is more than 1000kPa, a decompression device should be installed.
- Two rubber seals are supplied with the water inlet hoses. They are used for preventing water leaks.
- Make sure the connection to taps is tight enough.
- Periodically check the condition of the hose and replace the hose if necessary.
- Make sure that there is no kink on the hose and that it is not crushed.

NOTE

After completing connection, if water leaks from the hose, repeat the same steps. Use the most conventional type of faucet for water supply. In case the faucet is square or too big, remove the spacing ring before inserting the faucet into the adaptor.

I nstallation



CAUTION

This equipment is not designed for maritime use or for use mobile installations such as caravans, aircraft etc. Turn off the stopcock if the machine is to be left for any length of time (e.g. holiday), especially if there is no floor drain (gully) in the immediate vicinity.



When disposing of the appliance, cut off the mains cable, and destroy the plug. Disable the door lock to prevent young children being trapped inside.

Packaging material (e.g. Films, Styrofoam) can be dangerous for children. There is a risk of suffocation! Keep all packaging well away from children.

■ Installation of drain hose

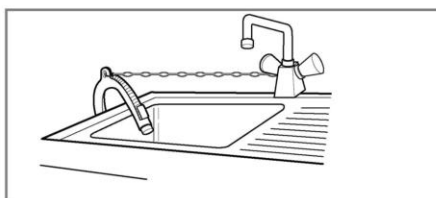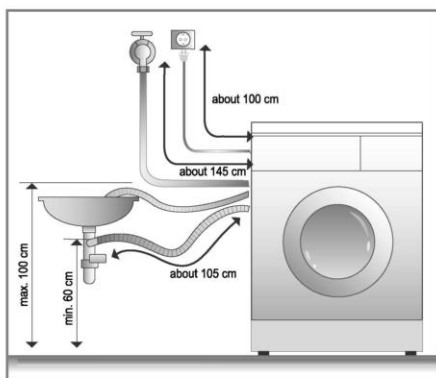

- When installing the drain hose sink, secure it tightly with a string.
- Proper securing of the drain hose will protect the floor from damage due to water leakage.

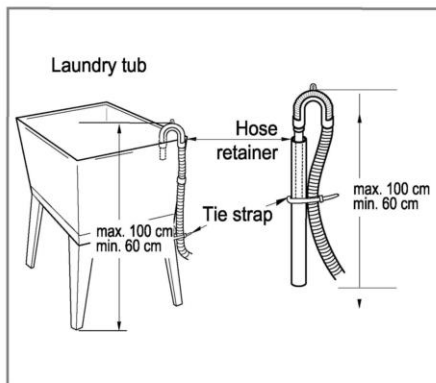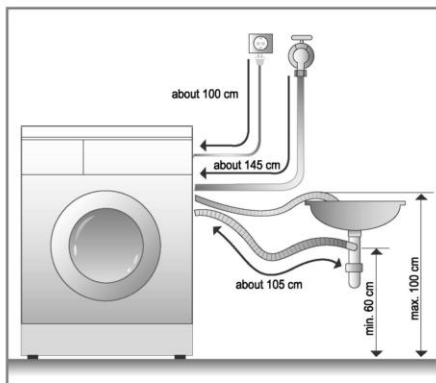

- The drain hose should not be placed higher than 100 cm above the floor otherwise the water would not drain or would drain slowly.
- Proper securing of the drain hose will protect the floor from damage due to water leakage.
- When the drain hose is too long, do not force back into the washer. This will cause abnormal noise.

I nstallation


■ Level adjustment



1. Adjusting the washing machine level properly prevents excessive noise and vibration. Install the appliance on a solid and level floor surface, preferably in a corner of the room.

NOTE

Timber or suspended type flooring may contribute to excessive vibration and unbalance errors.

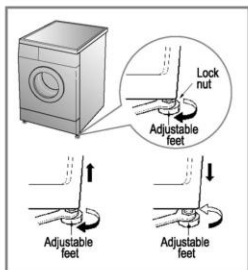


2. If the floor is uneven, adjust the adjustable feet as required. (do not insert pieces of wood etc. under the feet) Make sure that all four feet are stable and resting on the floor and then check that the appliance is perfectly level (use a spirit level).

✳ **After the washer is level, tighten the lock nuts up towards of the base of the washer. All lock nuts must be tightened.**

NOTE

In the case that the washing machine is installed on a raised platform, it must be securely fastened in order to eliminate the risk that it might fall off.

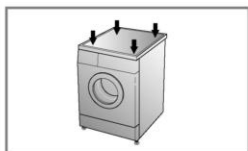

DIAGONAL CHECK

When pushing down the edges of the washing machine top plate diagonally, the machine should not move up and down at all. (Please, check both of two directions) If machine rocks when pushing the machine top plate diagonally, adjust the feet again.

■ Concrete floors

- The installation surface must be clean, dry and level.
- Install washer on a flat hard floor.

■ Tile floors (Slippery floors)


- Position each foot on the Tread Mate and level the machine to suit. (Cut Tread Mate into 70x70 mm sections and stick the pieces on to the dry tile where machine is to be placed.)

✳ **Tread Mate is a self adhesive material used on ladders & steps that prevents slipping.**

■ Wooden floors (Suspended floors)

- Wooden floors are particularly susceptible to vibration.
- To prevent vibration we recommend you place rubber cups under each foot, at least 15mm thick under the washer, secured to at least 2 floor beams with screws.
- If possible install the washer in one of the corners of the room, where the floor is more stable.

✳ **You can obtain the rubber cups (p/no.4620ER4002B) from the LG spares dept.**

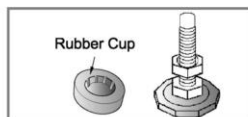

WARNING!

- Proper placement and levelling of the washer ensure long, regular and reliable operation.
- The washer must be absolutely horizontal and stand firmly in position.
- It must not "Seesaw" across corners under load.
- The installation surface must be clean, free from floor wax and other lubricant coatings.
- Do not let the feet of the washer get wet. If feet of the washer get wet, slipping may occur.

Care before washing

■ Before the first washing

Select a cycle (COTTON 60°C, add a half load of detergent) allow the unit to wash without clothing. This will remove residues and water from the drum that may have been left during manufacturing.

■ Caring before washing

1. Care Labels

Look for a care label on your clothes. This will tell you about the fabric content of your garment and how it should be washed.

2. Sorting

To get the best results, sort clothes into loads that can be washed with the same wash cycle. Water temperature and spin speed and different fabrics need to be washed in different ways. Always sort dark colors from pale colors and whites. Wash separately as dye and lint transfer can occur causing discoloration of white etc. If possible, do not wash heavily soiled items with lightly soiled one.

Soil (Heavy, Normal, Light)	Color (White, Lights, Darks)	Lint (Lint producers, Collectors)
<i>Separate clothes according to amount of soil.</i>	<i>Separate white fabrics from colored fabrics.</i>	<i>Wash lint producers and lint collectors separately.</i>
Lint producers: bathrobes, towels. Lint collectors: Synthetic, velveteen, socks.		

3. Caring before loading

■ Combine large and small items in a load. Load large items first. Large items should not be more than half the total wash load.

Do not wash single items. This may cause an out-of-balance load. Add one or two similar items.




- Check all pockets to make sure that they are empty. Items such as nails, hair clip, matches, pens, coins and keys can damage both your washer and your clothes.



- Close zippers, hooks and strings to make sure that these items don't snag on other clothes.



- Pre treat dirt and stains by brushing a little detergent dissolved in water onto stains like collars and cuffs to help shift dirt.

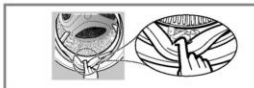

- Check the folds of the flexible gasket (gray) and remove any small articles, if any.



- Check inside of the drum and remove any left items in it for next wash cycle.




- Remove any clothing or items on the flexible gasket to prevent clothing and the gasket damages.

A dding detergent


■ Adding detergent and fabric softener

1. The Dispenser Drawer

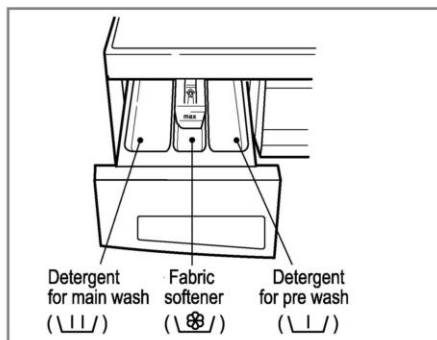

- Main wash only → \\|\\|
- Pre Wash + Main Wash → \\|\\| \\|\\|

2. Adding Fabric Softener

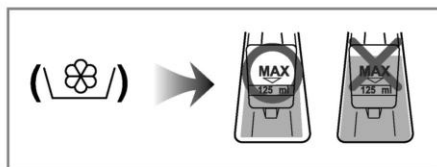

- Do not exceed the maximum fill line. Overfilling can cause early dispensing of the fabric softener which could stain clothes.
- Do not leave the fabric softener in the detergent drawer for more than 2 days. (Fabric softener could harden)
- Softener will automatically be added during the last rinse cycle.
- Do not open the drawer when water is supplied.
- Solvents (benzene, etc) are not allowable.

NOTE Do not pour fabric softener directly on the clothes.

3. Detergent dosage

- The detergent should be used according to the instruction of the detergent manufacture.
- If too much detergent is used, too many suds can occur and this will decrease the washing result or cause heavy load to the motor.
- Use powder detergent only for the front loading washer.

*** If suds occur too much, please reduce the detergent amount.**

- Detergent usage may need to be adjusted for water temperature, water hardness, size and soil level of the load. For best results, avoid oversudsing.

4. Water softener

- A water softener, such as Anti limescale (Calgon) can be used to cut down on the use of detergent in extremely hard water areas. Dispense according to the amount specified on the packaging. First add detergent and then the water softener.

- Use the quantity of detergent as for soft water.

* Tips

Full load : according to manufacturer's recommendation.

Part load : 3/4 of the normal amount.

Minimum load : 1/2 of full load.

- Detergent is flushed from the dispenser at the beginning of the cycle.

■ Recommended courses according to the laundry type F1011(12)S/N/TDR(5) / F1211(12)S/N/TDR(5)

Program	Fabric Type	Proper Temp.	Option	Maximum Load		
				F1011(12)SDR(5) F1211(12)SDR(5)	F1011(12)NDR(5) F1211(12)NDR(5)	F1011(12)TDR(5) F1211(12)TDR(5)
COTTON	First check if laundry is machine washable. (white cotton, linen towel, and sheets...)	95°C	INTENSIVE RINSE+ PRE WASH RINSE HOLD CREASE CARE	Rating	Rating	Rating
	Color fast garments (shirts, night dresses, pajamas...) and lightly soiled white cotton (underwear...)	60°C (30°C, 40°C)				
COTTON QUICK	Cotton which is lightly soiled.	40°C		Rating	Rating	Rating
SYNTHETIC	Polyamide, Acrylic, Polyester	40°C (30°C, 60°C)		Less than 1.5 kg	Less than 2.0 kg	Less than 3.0 kg
QUICK 30	Colored Laundry which is lightly soiled fast.	30°C	INTENSIVE RINSE HOLD CREASE CARE	Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
HAND WASH/ WOOL	"Hand Wash" marked laundry or machine washable woolens	40°C (Cold)	INTENSIVE RINSE+ RINSE HOLD CREASE CARE	Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
DELICATE	Delicate laundry easily damaged (silk, curtains...)	30°C (Cold, 40°C)		Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
DUVET	Cotton bedding with filling, duvet, pillow, blanket, sofa cover with light filling.	30°C (40°C)		1 king size (9 Tog)		
BABY CARE	Laundry for infant	95°C (60°C)	INTENSIVE RINSE+ PRE WASH RINSE HOLD CREASE CARE	Less than 3.0 kg	Less than 4.0 kg	Less than 6.0 kg

* INTENSIVE: When washing heavily soiled laundry you can increase effectiveness by choosing **Intensive** option.

Program setting with **Intensive** option for test in accordance or in conformity with EN60456 and IEC60456.

* RINSE+: Used to introduce an additional rinse, which may assist in removing traces of detergent residue.


* PRE WASH: If the laundry is heavily soiled, **Pre Wash** course is recommended.

* MEDIC RINSE: For high effectiveness or more purity in rinse operation you can choose **Medic Rinse** option.


H ow to use washer

F1011S/N/TDR(5) / F1211S/N/TDR(5)
F1012S/N/TDR(5) / F1212S/N/TDR(5)

F1211S/N/TDR(5) / F1011S/N/TDR(5)

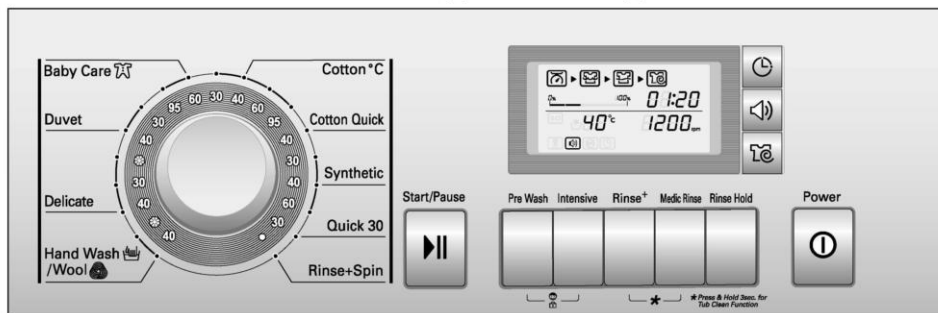

F1212S/N/TDR(5) / F1012S/N/TDR(5)

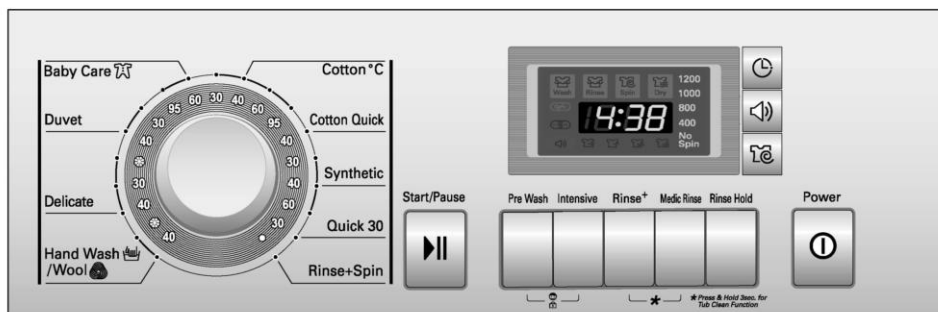

1. Cotton automatically selected upon power on.

- Press the **Power** button to start.
- Press the **Start/Pause** button.

※ INITIAL CONDITIONS

- Wash: main wash
- Rinse: 3 times
- Spin:
 - 1000 rpm [F1011(12)S/N/TDR(5)]
 - 1200 rpm [F1211(12)S/N/TDR(5)]
- Water temperature : 60°C
- Program: COTTON


2. Manual Selecting

- Press the **Power** button to start.
- Select the conditions which you want to use, by turning the **Program** dial and pressing each button.
- Press the **Start/Pause** button.

For selecting the each conditions, please refer to the page 15-19.

H ow to use washer


F1011S/N/TDR(5) / F1211S/N/TDR(5)
F1012S/N/TDR(5) / F1212S/N/TDR(5)

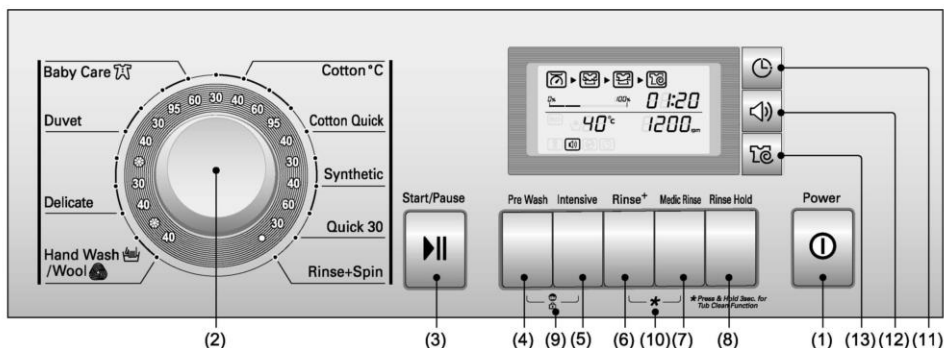

- | | | |
|---------------------------|-------------------------|-------------------------|
| (1) Button: Power | (5) Button: Intensive | (9) Child Lock |
| (2) Dial: Program | (6) Button: Rinse+ | (10) Tub Clean |
| (3) Button: Start / Pause | (7) Button: Medic Rinse | (11) Button: Time Delay |
| (4) Button: Pre Wash | (8) Button: Rinse Hold | (12) Button: Beeper |
| | | (13) Button: Spin |

Power

1. Power

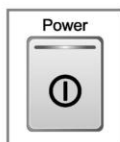

- Press the **Power** button to turn power on and off.
- To cancel the **Time Delay** function, the power button should be pressed.


2. Initial Program

- When the **Power** button is pressed, the washer is ready for COTTON program. And the other initial conditions as follows.
- So, if you want to advance into the washing cycle without changing the program, just press the **Start/Pause** button and then the washer will proceed.

Initial program

- [F1011S/N/TDR(5) / F1012S/N/TDR(5)]
- Cotton Program 60°C/1000 rpm;
- [F1211S/N/TDR(5) / F1212S/N/TDR(5)]
- Cotton Program 60°C/1200 rpm.

Program

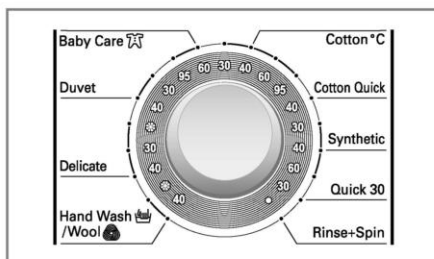


- 9 programs are available according to the laundry type.
- When **Start/Pause** button is pressed, the COTTON program is automatically selected.
- By turning the **Program** dial, the program is selected in order of:

COTTON - COTTON QUICK - SYNTHETIC - QUICK 30 - RINSE+SPIN - HAND WASH/WOOL - DELICATE - DUVET - BABY CARE

Lamp will light up to indicate selected program.

Regarding to the laundry type for each program, please refer to the page 13.

Option

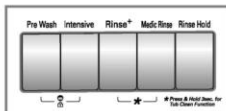

- Needed option can be activated by pressing a specific button.

1. Pre Wash

- If the laundry is heavily soiled, **Pre Wash** course is effective.
- **Pre Wash** is available in COTTON, COTTON QUICK, SYNTHETIC.

2. Intensive

- If the laundry is heavily soiled **Intensive** option is effective.
- By selecting the **Intensive** option, the wash time may be extended, depending on the program selected.
- This option is not available with QUICK 30 program.

3. Rinse+

- For additional rinse which may assist in removing traces of detergent residue.
- By selecting **Rinse+** function, the rinse time and the rinse water are increased.

4. Medic Rinse

- For high effectiveness or more purity in rinse operation you can choose **Medic Rinse** option.

The required lamp will light up for identification.

2. Rinse Hold

- Is selected by pressing the **Rinse Hold** button this function leaves clothes in the machine; suspended in the water after a rinse without entering into spin.
- To proceed through to a drain or spin, once the **Rinse Hold** function is completed using to program dial scroll to the required program.

Start/Pause



1. Start

- This **Start/Pause** button is used to start wash cycle or pause the wash cycle.

2. Pause

- If temporary stop of wash cycle is needed, press the **Start/Pause** button.
- When in **Pause**, the power is turned off automatically **after 4 minutes**.

Door Lock



F1011S/N/TDR(5)
F1211S/N/TDR(5)

F1012S/N/TDR(5)
F1212S/N/TDR(5)

- Lights whenever the door of the washer is locked.
- The door can be unlocked by pressing the **Start/Pause** button to stop the washer.
- The door can be opened after a short delay.

H ow to use washer


F1011S/N/TDR(5) / F1211S/N/TDR(5)
F1012S/N/TDR(5) / F1212S/N/TDR(5)

Child lock




If you choose to lock the buttons on the control assembly to prevent tampering this function may be selected.

- **Child Lock** can be set by pressing the **Intensive** button and **Pre Wash** button simultaneously. (About three seconds)

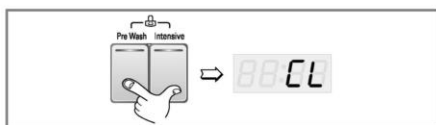


F1011S/N/TDR(5) / F1211S/N/TDR(5)
F1012S/N/TDR(5) / F1212S/N/TDR(5)

- When **Child Lock** is set, all buttons are locked except for **Power** button.
- To deactivate **Child Lock** system, press **Intensive** and **Pre Wash** buttons simultaneously again. (About three seconds)

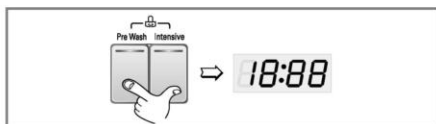

F1011S/N/TDR(5) / F1211S/N/TDR(5)
F1012S/N/TDR(5) / F1212S/N/TDR(5)

- To change to the desired program, while in **Child Lock** mode.
- Press both **Intensive** and **Pre Wash** together once again. (About three seconds)
- Press the **Start/Pause** button.
- Select the desired program and press the **Start/Pause** button again.

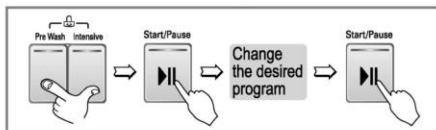


- The **Child Lock** can be set at any time and it is automatically canceled when operational errors occur.

Tub Clean



- **Tub Clean** course can be set by pressing and holding **Rinse+** and **Medic Rinse** buttons simultaneously. When **Tub Clean** course is set, display **Tub Clean**, and all buttons are inoperable, except for **Power** button.

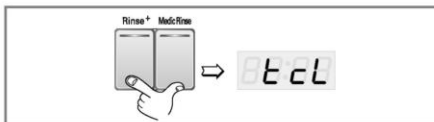

- **Tub Clean** is special cycle to clean the inside of the washer. This cycle uses higher water level with higher spin speed. Perform this cycle regularly.

How to use the **Tub Clean** cycle:

1. Remove any clothing or items from the washer and close the door.
2. Open the dispenser drawer and add Anti limescale (Calgon) to the Main wash compartment.

NOTE: Do not add any detergent to the detergent compartments. Excessive suds may generate and leak from the washer.

3. Close the dispenser drawer slowly.
4. Power On and then press and hold **Rinse+** and **Medic Rinse** buttons for 3 seconds. then **Tub Clean** is displayed in LED
5. Press the **Start/Pause** button to start.
6. After the cycle is complete, leave the door open to dry around the washer door opening, flexible gasket and door glass.




WARNING!

If there is a small child, be careful not to leave the door open for too long.

H ow to use washer

F1011S/N/TDR(5) / F1211S/N/TDR(5)
F1012S/N/TDR(5) / F1212S/N/TDR(5)

Time delay

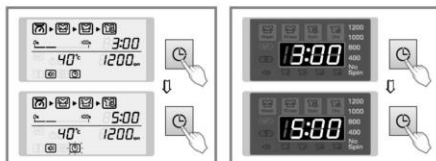


F1011S/N/TDR(5)
F1211S/N/TDR(5)

F1012S/N/TDR(5)
F1212S/N/TDR(5)

- Preparing washing before starting **Time Delay**:
 - Turn on the water tap.
 - Load laundry and close the door.
 - Place the detergent and fabric softener in the drawer.
- How to set **Time Delay**:
 - Press **Power** button.
 - Turn the **Program** dial to select the program you require.
 - Press **Time Delay** button and set the desired time.
 - Press the **Start/Pause** button.
- If **Time Delay** button is pressed, "3:00" is displayed. The maximum delayed time is 19 hours and the minimum time is 3 hours.
- Each pressing of the button advances on **Time delay** by one hour.
- To cancel the **Time Delay**, press the **Power** button.
- **Time Delay** is "expected time" from the present to the completion of washing cycle or selected process (wash, rinse, spin).
- According to the condition of water supply and temperature, the delayed time and the actual washing time may vary.

Spin

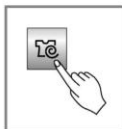

- By pressing the **Spin** button, the spin speed can be chosen.

1. Spin selection

- Spin speed is available according to the program as follows.

F1011S/N/TDR(5) / F1012S/N/TDR(5)

- **COTTON / COTTON QUICK / SYNTHETIC / QUICK 30 / RINSE+SPIN / HAND WASH/WOOL**
No spin - 400-600-800-1000
- **DELICATE / DUVET / BABY CARE**
No spin - 400-600-800

WD-1234(0~9)S/N/TK / WD-1233(0~9)S/N/TK

- **COTTON / COTTON QUICK / QUICK 30 / RINSE+SPIN**
No Spin - 400 - 600 - 800 - 1000 - 1200
- **SYNTHETIC / HAND WASH/WOOL**
No Spin - 400 - 600 - 800 - 1000
- **DELICATE / DUVET / BABY CARE**
No Spin - 400 - 600 - 800


2. No spin

- For work without spin, press the **Spin** button until light indicator on control panel will be off.

H ow to use washer

F1011S/N/TDR(5) / F1211S/N/TDR(5)
F1012S/N/TDR(5) / F1212S/N/TDR(5)

Water temp.

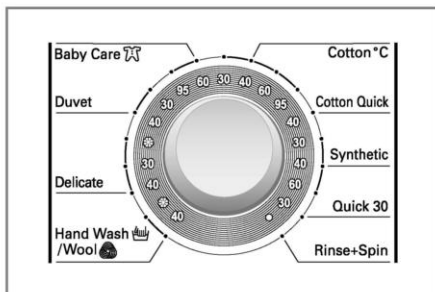

- By turning the **Program** dial, the water temperature can be selected.

- Cold


- 30°C / 40°C / 60°C / 95°C

- Water temperature can be selected according to the program.

The required temperature lamp will light up for identification.

For the more detailed information, please refer to the page 13.

Beeper

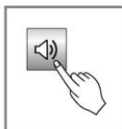

- **Beeper** can be activated by pressing specific button.

- **Beeper** function can be set at any time and it is automatically canceled when operational errors occur.

■ Recommended courses according to the laundry type F1018(19)S/N/TDR(5) / F1218(19)S/N/TDR(5)

Program	Fabric Type	Proper Temp.	Option	Maximum Load		
				F1018(19)SDR(5) F1218(19)SDR(5)	F1018(19)NDR(5) F1218(19)NDR(5)	F1018(19)TDR(5) F1218(19)TDR(5)
COTTON	First check if laundry is machine washable. (white cotton, linen towel, and sheets...)	95°C	INTENSIVE RINSE+ PRE WASH RINSE HOLD CREASE CARE	Rating	Rating	Rating
	Color fast garments (shirts, night dresses, pajamas...) and lightly soiled white cotton (underwear...)	60°C (30°C, 40°C, 60°C - Eco)				
COTTON QUICK	Cotton which is lightly soiled.	40°C		Rating	Rating	Rating
SYNTHETIC	Polyamide, Acrylic, Polyester	40°C (30°C, 60°C)		Less than 1.5 kg	Less than 2.0 kg	Less than 3.0 kg
QUICK 30	Colored Laundry which is lightly soiled fast.	30°C	INTENSIVE RINSE HOLD CREASE CARE	Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
HAND WASH/ WOOL	"Hand Wash" marked laundry or machine washable woolens	30°C (Cold)	INTENSIVE RINSE+ RINSE HOLD CREASE CARE	Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
DELICATE	Delicate laundry easily damaged (silk, curtains...)	30°C (Cold, 40°C)		Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
DUVET	Cotton bedding with filling, duvet, pillow, blanket, sofa cover with light filling.	60°C (95°C)		1 king size (9 Tog)		
BABY CARE	Laundry for infant	95°C (60°C)	INTENSIVE RINSE+ PRE WASH RINSE HOLD CREASE CARE	Less than 3.0 kg	Less than 4.0 kg	Less than 6.0 kg

* **INTENSIVE**: When washing heavily soiled laundry you can increase effectiveness by choosing **Intensive** option.

Program setting with **Intensive** option for test in accordance or in conformity with EN60456 and IEC60456.

* **PRE WASH**: If the laundry is heavily soiled, **Pre Wash** course is recommended.


* **CREASE CARE**: If you want to prevent crease, select **Crease Care** button.

* **MEDIC RINSE**: For high effectiveness or more purity in rinse operation you can choose **Medic Rinse** option.


H ow to use washer

F1018S/N/TDR(5) / F1218S/N/TDR(5)
F1019S/N/TDR(5) / F1219S/N/TDR(5)

F1018S/N/TDR(5) / F1218S/N/TDR(5)

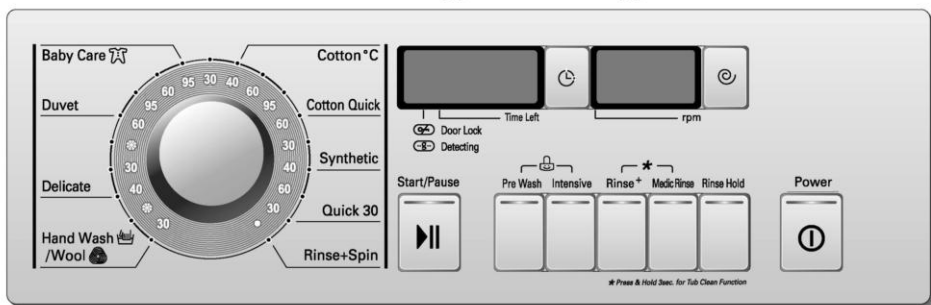

F1019S/N/TDR(5) / F1219S/N/TDR(5)

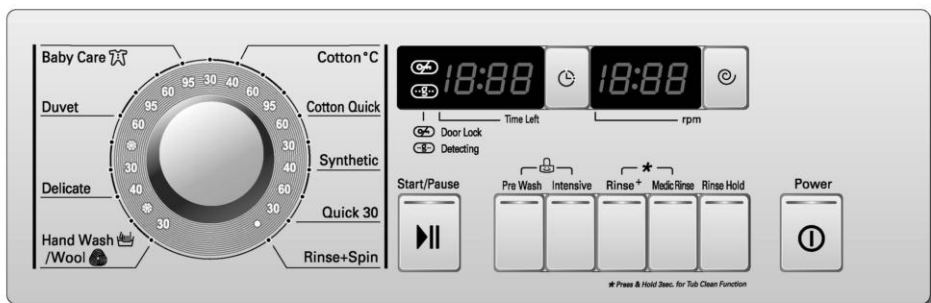

1. Cotton automatically selected upon power on.

- Press the **Power** button to start.
- Press the **Start/Pause** button.

※ INITIAL CONDITIONS

- **Wash: main wash**
- **Rinse: 3 times**
- **Spin:**
 - **1000 rpm**
[F1018S/N/TDR(5) / F1019S/N/TDR(5)]
 - **1200 rpm**
[F1218S/N/TDR(5) / F1219S/N/TDR(5)]
- **Water temperature : 60°C**
- **Program: COTTON**


2. Manual Selecting

- Press the **Power** button to start.
- Select the conditions which you want to use, by turning the **Program** dial and pressing each button.
- Press the **Start/Pause** button.

For selecting the each conditions, please refer to the page 22-26.

How to use washer

F1018S/N/TDR(5) / F1218S/N/TDR(5)
F1019S/N/TDR(5) / F1219S/N/TDR(5)

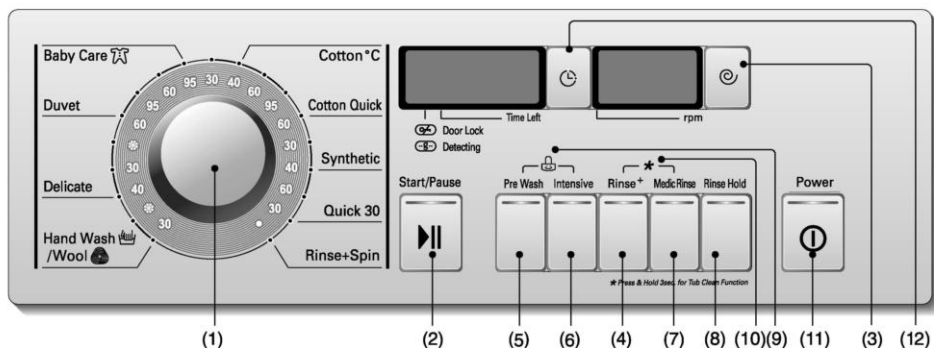


- (1) Dial: Program
(2) Button: Start / Pause
(3) Button: Spin
(4) Button: Rinse+

- (5) Button: Pre Wash
(6) Button: Intensive
(7) Button: Medic Rinse
(8) Button: Rinse Hold

- (9) Child Lock
(10) Tub Clean
(11) Button: Power
(12) Button: Time Delay

Option

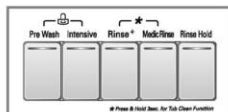

- Needed option can be activated by pressing a specific button.

1. Intensive

- If the laundry is heavily soiled **Intensive** option is effective.
- By selecting the **Intensive** option, the wash time may be extended, depending on the program selected.
- This option is not available with QUICK 30 program.

2. Rinse Hold

- Is selected by pressing the **Rinse Hold** button this function leaves clothes in the machine; suspended in the water after a rinse without entering into spin.
- To proceed through to a drain or spin, once the **Rinse Hold** function is completed using to program dial scroll to the required program.

3. Rinse+

- For additional rinse which may assist in removing traces of detergent residue.
- By selecting **Rinse+** function, the rinse time and the rinse water are increased.

4. Pre Wash

- If the laundry is heavily soiled, **Pre Wash** course is effective.
- **Pre Wash** is available in COTTON, COTTON QUICK, SYNTHETIC.

5. Medic Rinse


- For high effectiveness or more purity in rinse operation you can choose **Medic Care Rinse** option. It can be chosen in all course with the exception of HAND WASH/WOOL, DELICATE, QUICK 30.

The required lamp will light up for identification.

H ow to use washer

F1018S/N/TDR(5) / F1218S/N/TDR(5)
F1019S/N/TDR(5) / F1219S/N/TDR(5)


Отжим

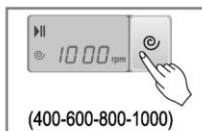

F1018S/N/TDR(5)
F1218S/N/TDR(5)



F1019S/N/TDR(5)
F1219S/N/TDR(5)

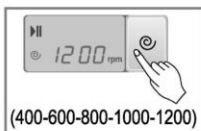

WD-1034(0~9)S/N/TK
WD-1234(0~9)S/N/TK



WD-1033(0~9)S/N/TK
WD-1233(0~9)S/N/TK

- By pressing the **Spin** button, the spin speed can be chosen.

1. Spin selection

- Spin speed is available according to the program as follows.

F1018S/N/TDR(5) / F1019S/N/TDR(5)

- **COTTON / COTTON QUICK / SYNTHETIC / QUICK 30 / RINSE+SPIN / HAND WASH/WOOL**
No spin - 400-600-800-1000
- **DELICATE / BEDCOVER / BABY CARE**
No spin - 400-600-800

F1218S/N/TDR(5) / F1219S/N/TDR(5)

- **COTTON / COTTON QUICK / QUICK 30 / RINSE+SPIN**
No Spin - 400 - 600 - 800 - 1000 - 1200
- **SYNTHETIC / HAND WASH/WOOL**
No Spin - 400 - 600 - 800 - 1000
- **DELICATE / BEDCOVER / BABY CARE**
No Spin - 400 - 600 - 800

2. No spin

- For work without spin, press the **Spin** button until light indicator on control panel will be off.

3. Spin only


- Press the **Power** button.
- Set the desired spin speed by pressing the **Spin** button.
- Press the **Start/Pause** button.

The required lamp will light up for identification.

Changing the language

WD-1233(0~9)S/N/TK


- When the power is off, press the time delay button and power button simultaneously.

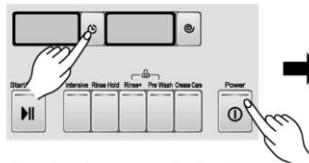

- The language is finally selected by pressing the spin button.



- Turn the program dial to select the language.

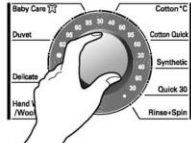

- Power will be off automatically, after changing language.


- Confirm the selected language after power on again.



How to use washer


F1018S/N/TDR(5) / F1218S/N/TDR(5)
F1019S/N/TDR(5) / F1219S/N/TDR(5)

Child lock

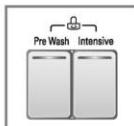


If you choose to lock the buttons on the control assembly to prevent tampering this function may be selected.

- **Child Lock** can be set by pressing the **Intensive** button and **Pre Wash** button simultaneously. (About three seconds)

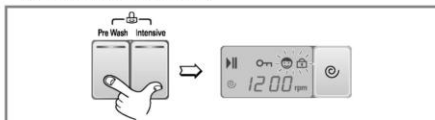


F1018S/N/TDR(5) / F1218S/N/TDR(5)

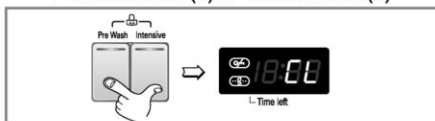


F1019S/N/TDR(5) / F1219S/N/TDR(5)

- When **Child Lock** is set, all buttons are locked except for **Power** button.
- To deactivate **Child Lock** system, press **Intensive** and **Pre Wash** buttons simultaneously again. (About three seconds)

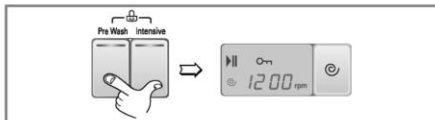


F1018S/N/TDR(5) / F1218S/N/TDR(5)

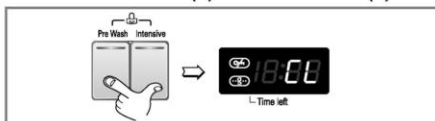


F1019S/N/TDR(5) / F1219S/N/TDR(5)

- To change to the desired program, while in **Child Lock** mode.
- Press both **Intensive** and **Pre Wash** together once again. (About three seconds)
- Press the **Start/Pause** button.
- Select the desired program and press the **Start/Pause** button again.

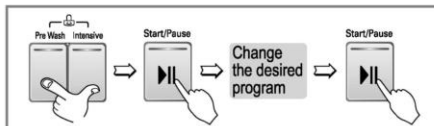

- The **Child Lock** can be set at any time and it is automatically canceled when operational errors occur.

Water temp.

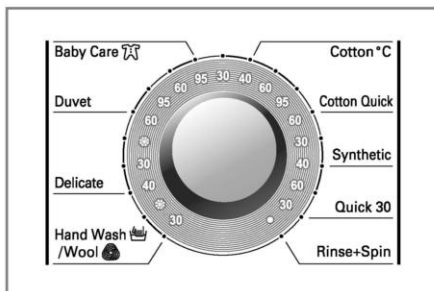

- By turning the **Program** dial, the water temperature can be selected.

- Cold
- 30°C / 40°C / 60°C / 95°C

- Water temperature can be selected according to the program.


The required temperature lamp will light up for identification.

For the more detailed information, please refer to the page 20.


H ow to use washer

F1018S/N/TDR(5) / F1218S/N/TDR(5)
F1019S/N/TDR(5) / F1219S/N/TDR(5)

Time delay

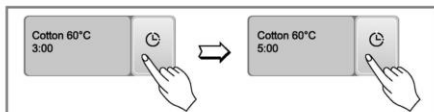


F1018S/N/TDR(5) / F1218S/N/TDR(5)

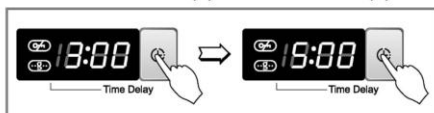

F1019S/N/TDR(5) / F1219S/N/TDR(5)

- Preparing washing before starting **Time Delay**:
 - Turn on the water tap.
 - Load laundry and close the door.
 - Place the detergent and fabric softener in the drawer.
- How to set **Time Delay**:
 - Press **Power** button.
 - Turn the **Program** dial to select the program you require.
 - Press **Time Delay** button and set the desired time.
 - Press the **Start/Pause** button.
- If **Time Delay** button is pressed, "3:00" is displayed. The maximum delayed time is 19 hours and the minimum time is 3 hours.
- Each pressing of the button advances on **Time delay** by one hour.
- To cancel the **Time Delay**, press the **Power** button.
- **Time Delay** is "expected time" from the present to the completion of washing cycle or selected process (wash, rinse, spin).
- According to the condition of water supply and temperature, the delayed time and the actual washing time may vary.

Program

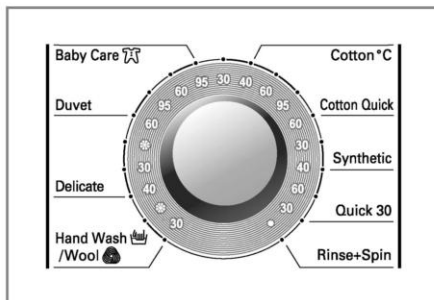

- 10 programs are available according to the laundry type.
- When **Start/Pause** button is pressed, the COTTON program is automatically selected.
- By turning the **Program** dial, the program is selected in order of:

COTTON - COTTON QUICK - SYNTHETIC - QUICK 30 - RINSE+SPIN - HAND WASH/WOOL - DELICATE - DUVET - BABY CARE

Lamp will light up to indicate selected program.

Regarding to the laundry type for each program, please refer to the page 20.

H ow to use washer

F1018S/N/TDR(5) / F1218S/N/TDR(5)
F1019S/N/TDR(5) / F1219S/N/TDR(5)

Power



1. Power

- Press the **Power** button to turn power on and off.
- To cancel the **Time Delay** function, the power button should be pressed.

2. Initial Program

- When the **Power** button is pressed, the washer is ready for COTTON program. And the other initial conditions as follows.
- So, if you want to advance into the washing cycle without changing the program, just press the **Start/Pause** button and then the washer will proceed.

Initial program

- [F1018S/N/TDR(5) / F1019S/N/TDR(5)]
- **Cotton Program 60°C/1000 rpm;**
- [F1218S/N/TDR(5) / F1219S/N/TDR(5)]
- **Cotton Program 60°C/1200 rpm.**

Door Lock



F1018S/N/TDR(5)
F1218S/N/TDR(5)



F1019S/N/TDR(5)
F1219S/N/TDR(5)

- Lights whenever the door of the washer is locked.
- The door can be unlocked by pressing the **Start/Pause** button to stop the washer.
- The door can be opened after a short delay.

Start/Pause



1. Start

- This **Start/Pause** button is used to start wash cycle or pause the wash cycle.

2. Pause

- If temporary stop of wash cycle is needed, press the **Start/Pause** button.
- When in **Pause**, the power is turned off automatically **after 4 minutes**.

Detecting




F1018S/N/TDR(5)
F1218S/N/TDR(5)




F1019S/N/TDR(5)
F1219S/N/TDR(5)

- While the "Detecting" is shown in the display the machine rotates slowly and detects how many laundries are loaded in the drum. It will take a few seconds.
- Available in COTTON and SYNTHETIC.

Tub Clean

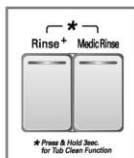

- **Tub Clean** course can be set by pressing and holding **Rinse+** and **Medic Rinse** button simultaneously. When **Tub Clean** course is set, display **Tub Clean**, and all buttons are inoperable.

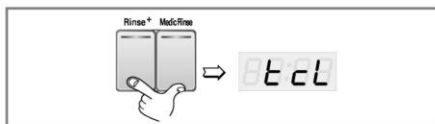

- **Tub Clean** is special cycle to clean the inside of the washer. This cycle uses higher water level with higher spin speed. Perform this cycle regularly.

How to use the **Tub Clean** cycle:

1. Remove any clothing or items from the washer and close the door.
2. Open the dispenser drawer and add Anti limescale (Calgon) to the Main wash compartment.

NOTE: Do not add any detergent to the detergent compartments. Excessive suds may generate and leak from the washer.

3. Close the dispenser drawer slowly.
4. Power On and then press and hold **Rinse+** and **Medic Rinse** button for 3 seconds. then **Tub Clean** is displayed in LED
5. Press the **Start/Pause** button to start.
6. After the cycle is complete, leave the door open to dry around the washer door opening, flexible gasket and door glass.



WARNING!

If there is a small child, be careful not to leave the door open for too long.

■ Recommended courses according to the laundry type F1020S/N/TDR(5) / F1220S/N/TDR(5)

Program	Fabric Type	Proper Temp.	Option	Maximum Load		
				F1220SDR(5) F1020SDR(5)	F1220NDR(5) F1020NDR(5)	F1220TDR(5) F1020TDR(5)
COTTON	Color fast gaments (shirts, night dresses, pajamas...) and lightly soiled white cotton (underwear...)	60°C (Cold, 30°C, 40°C, 95°C)	SOAK PRE WASH RINSE+SPIN SPIN ONLY BIO INTENSIVE	Rating	Rating	Rating
COTTON QUICK	Cotton which is lightly soiled.	40°C		Rating	Rating	Rating
SYNTHETIC	Polyamide, Acrylic, Polyester	60°C (Cold, 30°C, 40°C)		Less than 1.5 kg	Less than 2.0 kg	Less than 3.0 kg
BABY CARE	Laundry for infant	95°C (40°C, 60°C)	RINSE+SPIN SPIN ONLY INTENSIVE	Less than 3.0 kg	Less than 4.0 kg	Less than 6.0 kg
DELICATE	Delicate laundry easily damaged (silk, curtains...)	40°C (Cold, 30°C)		Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
WOOL/SILK	Machine washable woolens with pure new wool only.			Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
HAND WASH	"Hand Wash " marked delicate and wool laundry.			Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
QUICK 30	Colored Laundry which is lightly soiled fast.	30°C (Cold, 40°C)		Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
DUVET	Cotton bedding with filling, duvet, pillow, blanket, sofa cover with light filling.	30°C (Cold, 40°C)		1 king size (9 Tog)		

* INTENSIVE: When washing heavily soiled laundry you can increase effectiveness by choosing **Intensive** option.

Program setting with **Intensive** option for test in accordance or in conformity with EN60456 and IEC60456.

* PRE WASH: If the laundry is heavily soiled, **Pre Wash** course is recommended.

H ow to use washer

F1020S/N/TDR(5) / F1220S/N/TDR(5)



1. Cotton automatically selected upon power on.

- Press the **Power** button to start.
- Press the **Start/Pause** button.

※ INITIAL CONDITIONS

- Wash: main wash
- Rinse: 3 times
- Spin:
 - 1000 rpm
[F1020S/N/TDR(5)]
 - 1200 rpm
[F1220S/N/TDR(5)]
- Water temperature : 60°C
- Program: COTTON


2. Manual Selecting

- Press the **Power** button to start.
- Select the conditions which you want to use, by turning the **Program** dial and pressing each button.
- Press the **Start/Pause** button.


For selecting the each conditions, please refer to the page 30-34.

H ow to use washer

F1020S/N/TDR(5) / F1220S/N/TDR(5)

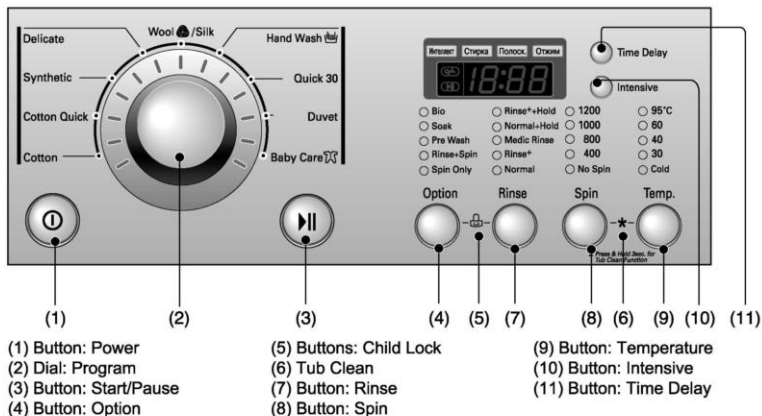

Program

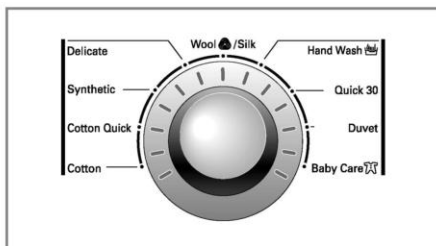

- 9 programs are available according to the laundry type.
- When **Start/Pause** button is pressed, the COTTON program is automatically selected.
- By turning the **Program** dial, the program is selected in order of:

COTTON - COTTON QUICK - SYNTHETIC -
 DELICATE - WOOL/SILK - HAND WASH -
 QUICK 30 - DUVET - BABY CARE

Lamp will light up to indicate selected program.

Regarding to the laundry type for each program, please refer to the page 28.

Power



1. Power

- Press the **Power** button to turn power on and off.
- To cancel the **Time Delay** function, the **Power** button should be pressed.

2. Initial Program

- When the **Power** button is pressed, the washer is ready for COTTON program. And the other initial conditions as follows.
- So, if you want to advance into the washing cycle without changing the program, just press the **Start/Pause** button and then the washer will proceed.

Initial program

- [F1020S/N/TDR(5)]
 - Cotton Program 60°C/1000 rpm;
- [F1220S/N/TDR(5)]
 - Cotton Program 60°C/1200 rpm.

H ow to use washer

F1020S/N/TDR(5) / F1220S/N/TDR(5)

Start/Pause



1. Start

- This **Start/Pause** button is used to start wash cycle or pause the wash cycle.

2. Pause

- If temporary stop of wash cycle is needed, press the **Start/Pause** button.
- When in pause, the power is turned off automatically **after 4 minutes**.

Detecting



- While the "Detecting" is shown in the display the machine rotates slowly and detects how many laundries are loaded in the drum. It will take a few seconds.
- Available in COTTON and SYNTHETIC.

Door Lock



- Lights whenever the door of the washer is locked.
- The door can be unlocked by pressing the **Start/Pause** button to stop the washer.
- The door can be opened after a short delay.

Option

- ☐ Bio
- ☐ Soak
- ☐ Prewash
- ☐ Rinse+Spin
- ☐ Spin Only

Option



By pressing the **Option** button, all Option functions may be selected.

1. Bio

- If you want to eliminate protein stains (milk, blood, chocolate...), you may select **Bio** function by pressing the **Option** button. (You can select **Bio** function when temperature is higher than 60°C in COTTON, COTTON QUICK and SYNTHETIC).

2. Soak

- Use this mode to wash normal clothes or thick and heavy clothes which are excessively dirty.
- Available in COTTON, COTTON QUICK and SYNTHETIC.

3. Pre Wash

- Use this option for load that need pretreatment. Add 17 minutes **Pre Wash**.
- When using **Pre Wash** option, do not use liquid detergent in the main wash compartment. Use powder for the main wash.
- Available in COTTON, COTTON QUICK and SYNTHETIC.


4. Rinse+Spin

- Use this option to **Rinse** and then **Spin**.

5. Spin Only


- When you want **Spin Only**, select this option.

Child lock

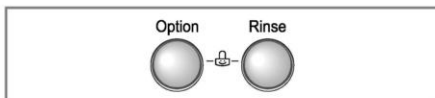


If you choose to lock the buttons on the control assembly to prevent tampering this function may be selected.


- **Child Lock** can be set by pressing the **Option** and **Rinse** button simultaneously. (About three seconds)

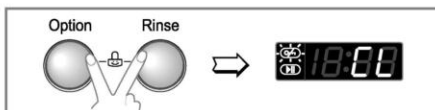

- When **Child Lock** is set, all buttons are locked.
- To deactivate **Child Lock** system, press and hold the **Option** and **Rinse** button simultaneously again (About three seconds).

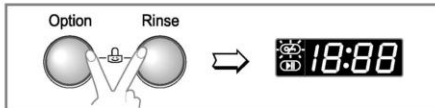


- To change to the desired program, while **Child Lock** mode is set.
- Press both **Option** and **Rinse** together once again. (About three seconds)
- Press the **Start/Pause** button.
- Select the desired program and press the **Start/Pause** button again.

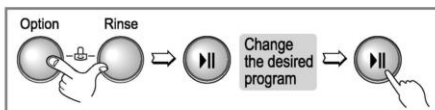

- The **Child Lock** can be set at any time and it is automatically canceled when operational errors occur.

Rinse

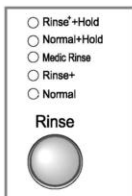

- By pressing the **Rinse** button, the Rinse type can be selected.

1. Rinse+Hold

- Is selected by pressing the **Rinse+Hold** button repeatedly this function leaves clothes in the washer; suspended in the water after a rinse without entering into spin.
- To proceed through to a **Spin**, once the **Rinse+Hold** function is completed using to **Program** dial scroll to the required program.

2. Normal+Hold

- Using **Normal+Hold** button the additional **Hold** function leaves clothes in the washer.

3. Medic Rinse

- For high effectiveness or more purity in rinse operation you can choose **Medic Rinse** option.

4. Rinse+


- Used to additional rinse, which may assist in removing traces of detergent residue.
- By selecting **Rinse+** function, the rinse time and the rinse water are increased.

5. Normal

- COTTON / COTTON QUICK / SYNTHETIC / BABY CARE
performs 3 Rinses
- WOOL/SILK / HAND WASH /QUICK 30 / DELICATE / DUVET
performs 2 Rinses

The required lamp will light up for identification.

Time Delay

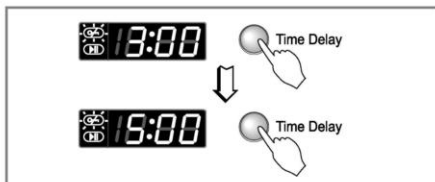

• Preparing washing before starting **Time Delay**:

- Turn on the water tap.
- Load laundry and close the door.
- Place the detergent and fabric softener in the drawer.


• How to set **Time Delay**:

- Press **Power** button.
- Turn the **Program** dial to select the program you require.
- Press **Time Delay** button and set the desired time.
- Press the **Start/Pause** button. (":." blinks.)


• If **Time Delay** button is pressed, "3:00" is displayed. The maximum delayed time is 19 hours and the minimum time is 3 hours.

- Each pressing of the button advances on **Time delay** by one hour.
- To cancel the time delay, press the **Power** button.
- **Time Delay** is "expected time" from the present to the completion of washing cycle or selected process (wash, rinse, spin).
- According to the condition of water supply and temperature, the delayed time and the actual washing time may vary.

Spin

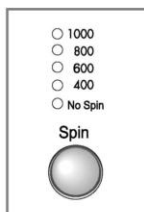

[F1020S/N/TDR(5)]

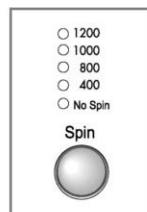

[F1220S/N/TDR(5)]

- By pressing the **Spin** button, the spin speed can be chosen.

1. Spin selection

- Spin speed is available according to the program as follows.

F1020S/N/TDR(5)

- **COTTON / COTTON QUICK / QUICK 30 / SYNTHETIC.**
No Spin - 400 - 600 - 800 - 1000
- **WOOL/SILK / HAND WASH / DUVET / BABY CARE / DELICATE.**
No Spin - 400 - 600 - 800

F1220S/N/TDR(5)

- **COTTON / COTTON QUICK / QUICK 30 / SYNTHETIC.**
No Spin - 400 - 800 - 1000 - 1200
- **WOOL/SILK / HAND WASH / DUVET.**
No Spin - 400 - 800 - 1000
- **BABY CARE / DELICATE.**
No Spin - 400 - 800

2. No spin


- If **No Spin** is selected, the washer stops after draining water.

The required lamp will light up for identification.


How to use washer

F1020S/N/TDR(5) / F1220S/N/TDR(5)

Tub Clean

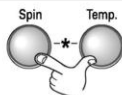

- **Tub Clean** course can be set by pressing and holding **Spin** and **Temp** button simultaneously.
When **Tub Clean** course is set, display **Tub Clean**, and all buttons are inoperable.

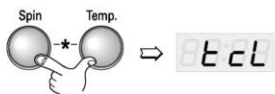

- **Tub Clean** is special cycle to clean the inside of the washer. This cycle uses higher water level with higher spin speed. Perform this cycle regularly.

How to use the **Tub Clean** cycle:

1. Remove any clothing or items from the washer and close the door.
2. Open the dispenser drawer and add Anti limescale (Calgon) to the Main wash compartment.
NOTE: Do not add any detergent to the detergent compartments. Excessive suds may generate and leak from the washer.
3. Close the dispenser drawer slowly.
4. Power On and then press and hold **Spin** and **Temp** button for 3 seconds. then **Tub Clean** is displayed in LED
5. Press the **Start/Pause** button to start.
6. After the cycle is complete, leave the door open to dry around the washer door opening, flexible gasket and door glass.



WARNING!

If there is a small child, be careful not to leave the door open for too long.

Water Temp.

- ☐ 95°C
- ☐ 60
- ☐ 40
- ☐ 30
- ☐ Cold

Temp



- By pressing the **Temp.** button, the water temperature can be selected.

- **Cold**

- **30°C / 40°C / 60°C / 95°C**

- Water temperature can be selected as below according to the program.

- **COTTON QUICK**

40°C – 60°C

- **COTTON**

Cold – 30°C – 40°C – 60°C – 95°C

- **BABY CARE**

40°C – 60°C – 95°C

- **SYNTHETIC**

Cold – 30°C – 40°C – 60°C

- **DELICATE / WOOL/SILK / QUICK 30 / HAND WASH / DUVET**

Cold – 30°C – 40°C

For the more detailed information, please refer to the page 28.

The required temperature lamp will light up for identification.

Intensive



Intensive

- If the laundry is heavily soiled **Intensive** option is effective.
- By selecting the **Intensive** option, the wash time may be extended, depending on the program selected.
- To use this option press the **Intensive** button once before the wash program is started.

■ Recommended courses according to the laundry type

F1021S/N/TDR(5) / F1221S/N/TDR(5)

Program	Fabric Type	Proper Temp.	Option	Maximum Load		
				F1221SDR(5) F1021SDR(5)	F1221NDR(5) F1021NDR(5)	F1221TDR(5) F1021TDR(5)
COTTON	First check if laundry is machine washable. (white cotton, linen towel, and sheets...)	95°C	MEDIC RINSE INTENSIVE RINSE+ PRE WASH CREASE CARE	Rating	Rating	Rating
	Color fast garments (shirts, night dresses, pajamas...) and lightly soiled white cotton (underwear...)	60°C (30°C, 40°C)				
COTTON QUICK	Cotton which is lightly soiled.	40°C				
SYNTHETIC	Polyamide, Acrylic, Polyester	40°C (30°C, 60°C)		Less than 1.5 kg	Less than 2.0 kg	Less than 3.0 kg
QUICK 30	Colored Laundry which is lightly soiled fast.	30°C	RINSE+	Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
HAND WASH/ WOOL	"Hand Wash" marked laundry or machine washable woolens	30°C (Cold)	INTENSIVE RINSE+	Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
DELICATE	Delicate laundry easily damaged (silk, curtains...)	30°C (Cold, 40°C)		Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
DUVET	Cotton bedding with filling, duvet, pillow, blanket, sofa cover with light filling.	30°C (Cold, 40°C)	MEDIC RINSE INTENSIVE RINSE+ CREASE CARE	1 king size (9 Tog)		
BABY CARE	Laundry for infant	95°C	MEDIC RINSE INTENSIVE RINSE+ PRE WASH CREASE CARE	Less than 3.0 kg	Less than 4.0 kg	Less than 6.0 kg

* PRE WASH: If the laundry is heavily soiled, **Pre Wash** course is recommended.


* INTENSIVE: When washing heavily soiled laundry you can increase effectiveness by choosing **Intensive** option.

Program setting with **Intensive** option for test in accordance or in conformity with EN60456 and IEC60456.

* MEDIC RINSE: For high effectiveness or more purity in rinse operation you can choose **Medic Rinse** option.

* RINSE+: Used to introduce an additional rinse, which may assist in removing traces of detergent residue.

* CREASE CARE: If you want to prevent crease, select **Crease Care** button.

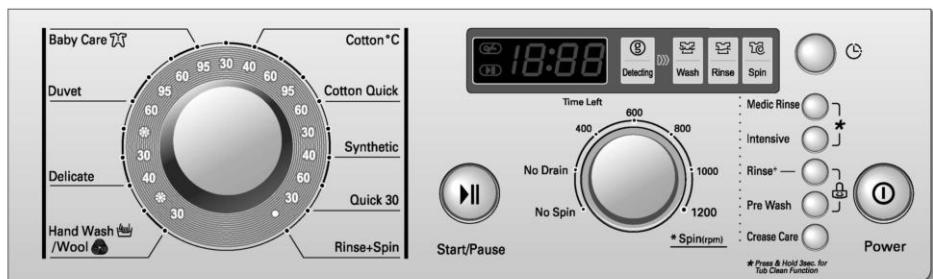

1. Cotton automatically selected upon power on.

- Press the **Power** button to start.
- Press the **Start/Pause** button.

※ INITIAL CONDITIONS


- **Wash: main wash**
- **Rinse: 3 times**
- **Spin:**
 - 1000 rpm [F1021S/N/TDR(5)]
 - 1200 rpm [F1221S/N/TDR(5)]
- **Water temperature : 60°C**
- **Program: COTTON**

2. Manual Selecting

- Press the **Power** button to start.
- Select the conditions which you want to use, by turning the **Program** dial and pressing each button.
- Press the **Start/Pause** button.


For selecting the each conditions, please refer to the page 37-41.

Tub Clean

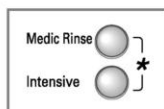

- **Tub Clean** course can be set by pressing and holding **Intensive** and **Medic Rinse** button simultaneously.

When **Tub Clean** course is set, display **Tub Clean**, and all buttons are inoperable.

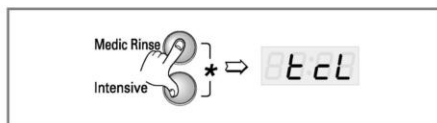

- **Tub Clean** is special cycle to clean the inside of the washer. This cycle uses higher water level with higher spin speed. Perform this cycle regularly.


How to use the **Tub Clean** cycle:

1. Remove any clothing or items from the washer and close the door.
 2. Open the dispenser drawer and add Anti limescale (Calgon) to the Main wash compartment.
- NOTE:** Do not add any detergent to the detergent compartments. Excessive suds may generate and leak from the washer.
3. Close the dispenser drawer slowly.
 4. Power On and then press and hold **Intensive** and **Medic Rinse** button for 3 seconds. then **Tub Clean** is displayed in LED
 5. Press the **Start/Pause** button to start.
 6. After the cycle is complete, leave the door open to dry around the washer door opening, flexible gasket and door glass.



WARNING!

If there is a small child, be careful not to leave the door open for too long.

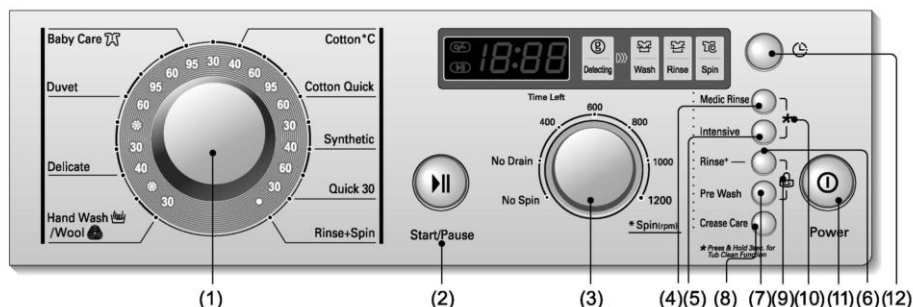


- (1) Dial: Program
 (2) Button: Start / Pause
 (3) Dial: Spin
 (4) Button: Medic Rinse

- (5) Button: Intensive
 (6) Button: Rinse+
 (7) Button: Pre Wash
 (8) Button: Crease Care

- (9) Buttons: Child Lock
 (10) Tub Clean
 (11) Button: Power
 (12) Button: Time Delay

Option

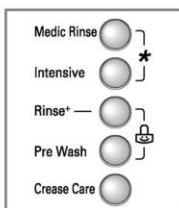

- Needed option can be activated by pressing a specific button.

1. Medic Rinse

- For high effectiveness or more purity in rinse operation you can choose **Medic Rinse** option.
- It can be chosen in all course with the exception of COTTON QUICK, QUICK 30, HAND WASH/WOOL, DELICATE.

2. Intensive

- If the laundry is heavily soiled **Intensive** option is effective.
- By selecting the **Intensive** option, the wash time may be extended, depending on the program selected.
- This option is not available with QUICK 30 program.

3. Rinse+

- For additional rinse which may assist in removing traces of detergent residue.
- By selecting **Rinse+** function, the rinse time and the rinse water are increased.

4. Pre Wash


- If the laundry is heavily soiled, **Pre Wash** course is effective.
- **Pre Wash** is available in COTTON, COTTON QUICK, SYNTHETIC.

5. Crease Care


- If you want to prevent crease, select this button with spin speed.

The required lamp will light up for identification.

Spin

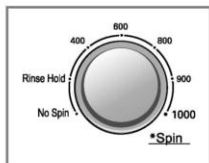

[F1021S/N/TDR(5)]

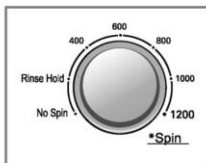

[F1221S/N/TDR(5)]

- By turning the **Spin** dial, the spin speed can be chosen.

1. Spin selection

- Spin speed is available according to the program as follows.

F1021S/N/TDR(5)

- COTTON / COTTON QUICK / SYNTHETIC / QUICK 30 / RINSE+SPIN / HAND WASH/WOOL.**
No Spin – Rinse Hold – 400 – 600 – 800 – 900 – 1000
- DELICATE / DUVET / BABY CARE.**
No Spin – Rinse Hold – 400 – 600 – 800

F1221S/N/TDR(5)

- COTTON / COTTON QUICK / QUICK 30 / RINSE+SPIN.**
No Spin – Rinse Hold – 400 – 600 – 800 – 1000 – 1200
- SYNTHETIC / HAND WASH/WOOL.**
No Spin – Rinse Hold – 400 – 600 – 800 – 1000
- DELICATE / DUVET / BABY CARE.**
No Spin – Rinse Hold – 400 – 600 – 800

2. No spin

- If **No Spin** is selected, the washer stops after draining water.

3. Rinse Hold

- Rinse Hold** is selected by pressing the **Spin** dial repeatedly this function leaves clothes in the machine; suspended in the water after a rinse without entering into spin.
- To proceed through to a drain or spin, once the **Rinse Hold** function is completed using to **Program** dial and **Spin** dial to the required program. (Spin)

4. Spin only


- Press the **Power** button.
- Set the desired spin speed by pressing the **Spin** dial.
- Press the **Start/Pause** button.

The required lamp will light up for identification.

H ow to use washer

F1021S/N/TDR(5) / F1221S/N/TDR(5)

Water temp.

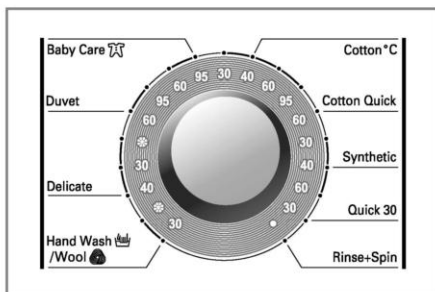


- By turning the **Program** dial, the water temperature can be selected.
- **Cold**
- **30°C / 40°C / 60°C / 95°C**
- Water temperature can be selected according to the program.

The required temperature lamp will light up for identification.


For the more detailed information, please refer to the page 35.

Child Lock

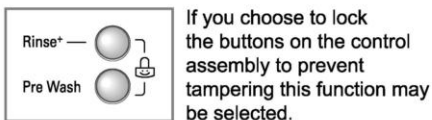

If you choose to lock the buttons on the control assembly to prevent tampering this function may be selected.


- **Child Lock** can be set by pressing the **Rinse+** button and **Pre Wash** button simultaneously. (About three seconds)

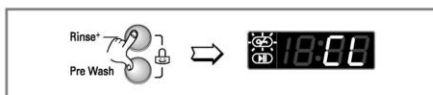

- When **Child Lock** is set, all buttons are inoperable except for **Power** button.
- To deactivate **Child Lock** system, press **Rinse+** and **Pre Wash** buttons simultaneously again. (About three seconds)



- To change to the desired program, while **Child Lock** mode is set.
 - Press both **Rinse+** and **Pre Wash** together once again. (About three seconds)
 - Press the **Start/Pause** button.
 - Select the desired program and press the **Start/Pause** button again.

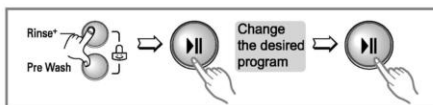


- The **Child Lock** can be set at any time and it is automatically canceled when operational errors occur.

How to use washer


F1021S/N/TDR(5) / F1221S/N/TDR(5)

Time Delay

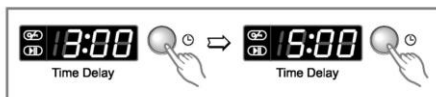

- Preparing washing before starting **Time Delay**:
 - Turn on the water tap.
 - Load laundry and close the door.
 - Place the detergent and fabric softener in the drawer.
- How to set **Time Delay**:
 - Press **Power** button.
 - Turn the **Program** dial to select the program you require.
 - Press **Time Delay** button and set the desired time.
 - Press the **Start/Pause** button. (":" blinks.)
- If **Time Delay** button is pressed, "3:00" is displayed. The maximum delayed time is 19 hours and the minimum time is 3 hours.
- Each pressing of the button advances on **Time delay** by one hour.
- To cancel the time delay, press the **Power** button.
- **Time Delay** is "expected time" from the present to the completion of washing cycle or selected process (wash, rinse, spin).
- According to the condition of water supply and temperature, the delayed time and the actual washing time may vary.

Program

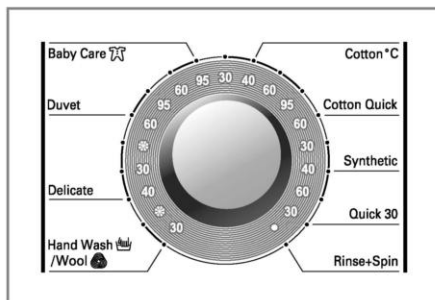

- 10 programs are available according to the laundry type.
- When **Start/Pause** button is pressed, the COTTON program is automatically selected.
- By turning the **Program** dial, the program is selected in order of:
COTTON - COTTON QUICK - SYNTHETIC - QUICK 30 - RINSE+SPIN - HAND WASH/WOOL - DELICATE - DUVET - BABY CARE

Lamp will light up to indicate selected program.

Regarding to the laundry type for each program, please refer to the page 35.

How to use washer

F1021S/N/TDR(5) / F1221S/N/TDR(5)

Power



Power

1. Power

- Press the **Power** button to turn power on and off.
- To cancel the **Time Delay** function, the **Power** button should be pressed.

2. Initial Program

- When the **Power** button is pressed, the washer is ready for COTTON program. And the other initial conditions as follows.
- So, if you want to advance into the washing cycle without changing the program, just press the **Start/Pause** button and then the washer will proceed.

Initial program

- **[F1021S/N/TDR(5)]**
- Cotton Program 60°C/1000 rpm;
- **[F1221S/N/TDR(5)]**
- Cotton Program 60°C/1200 rpm.

Door Lock



- Lights whenever the door of the washer is locked.
- The door can be unlocked by pressing the **Start/Pause** button to stop the washer.
- The door can be opened after a short delay.

Start/Pause



Start/Pause

1. Start

- This **Start/Pause** button is used to start wash cycle or pause the wash cycle.

2. Pause

- If temporary stop of wash cycle is needed, press the **Start/Pause** button.
- When in **Pause**, the power is turned off automatically **after 4 minutes**.

Detecting



- While the "Detecting" is shown in the display the machine rotates slowly and detects how many laundries are loaded in the drum. It will take a few seconds.
- Available in COTTON and SYNTHETIC.

■ Recommended courses according to the laundry type F1022S/N/TD(5) / F1222S/N/TD(5)


Program	Fabric Type	Proper Temp.	Option	Maximum Load		
				F1222SD(5) F1022SD(5)	F1222ND(5) F1022ND(5)	F1222TD(5) F1022TD(5)
COTTON	First check if laundry is machine washable. (white cotton, linen towel, and sheets...)	95°C	MEDIC CARE RINSE INTENSIVE PRE WASH CREASE CARE	Rating	Rating	Rating
	Color fast garments (shirts, night dresses, pajamas...) and lightly soiled white cotton (underwear...)	60°C (Cold, 30°C, 40°C)				
COTTON QUICK	Cotton which is lightly soiled					
SYNTHETIC	Polyamide, Acrylic, Polyester	40°C (Cold, 30°C, 60°C)	INTENSIVE	Less than 1.5 kg	Less than 2.0 kg	Less than 3.0 kg
QUICK 30	Colored Laundry which is lightly soiled fast.	30°C (Cold, 40°C)		Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
HAND WASH/ WOOL	"Hand Wash" marked laundry or machine washable woolens	30°C (Cold, 40°C)		Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
DELICATE	Delicate laundry easily damaged (silk, curtains...)	30°C (Cold, 40°C)		Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
BEDCOVER	Only for bedcover	60°C (95°C)	MEDIC CARE RINSE INTENSIVE CREASE CARE	Rating	Rating	Rating
BIO CARE	For elimination of protein stains	60°C (95°C)	MEDIC CARE RINSE INTENSIVE PRE WASH CREASE CARE	Rating	Rating	Rating
BABY CARE	Laundry for infant	95°C (60°C)		Less than 3.0 kg	Less than 4.0 kg	Less than 6.0 kg
BOILING CARE	For elimination of remnant detergent after boiling wash	95°C		Rating	Rating	Rating
BULKY	Thick laundry absorbing much water (Jumper)	30°C (Cold)	INTENSIVE	Rating	Rating	Rating

* MEDIC RINSE: For high effectiveness or more purity in rinse operation you can choose **Medic Rinse** option.

* PRE WASH: If the laundry is heavily soiled, **Pre Wash** course is recommended.

* INTENSIVE: When washing heavily soiled laundry you can increase effectiveness by choosing **Intensive** option. Program setting with **Intensive** option for test in accordance or in conformity with EN60456 and IEC60456.

* CREASE CARE: If you want to prevent crease, select **Crease Care** button.

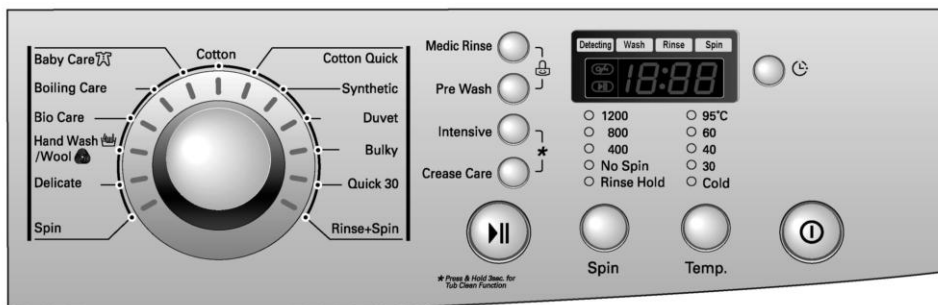

1. Cotton automatically selected upon power on.

- Press the **Power** button to start.
- Press the **Start/Pause** button.

※ INITIAL CONDITIONS

- **Wash: main wash**
- **Rinse: 3 times**
- **Spin:**
 - 1000 rpm
[F1022S/N/TD(5)]
 - 1200 rpm
[F1222S/N/TD(5)]
- **Water temperature: 60°C**
- **Program: COTTON**


2. Manual Selecting

- Press the **Power** button to start.
- Select the conditions which you want to use, by turning the **Program** dial and pressing each button.
- Press the **Start/Pause** button.

For selecting the each conditions, please refer to the page 44-48.

How to use washer

F1022S/N/TD(5) / F1222S/N/TD(5)

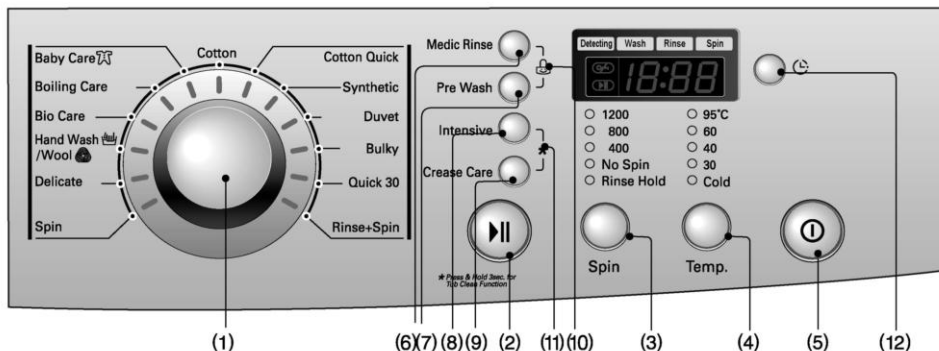

(1) Dial: Program

(2) Button: Start/Pause

(3) Button: Spin

(4) Button: Temp.

(5) Button: Power

(6) Button: Medic Rinse

(7) Button: Pre Wash

(8) Button: Intensive


(9) Button: Crease Care

(10) Buttons: Child Lock

(11) Tub Clean

(12) Time Delay

Option

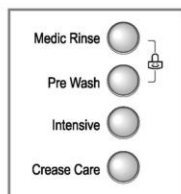

- Needed option can be activated by pressing a specific button.

1. Medic Rinse

- For high effectiveness or more purity in rinse operation you can choose **Medic Rinse** option.
- It can be chosen in all course with the exception of COTTON QUICK, QUICK 30, HAND WASH/WOOL, DELICATE, BULKY.

2. Pre Wash

- If the laundry is heavily soiled, **Pre Wash** course is effective.
- **Pre Wash** is available in COTTON, SYNTHETIC, BIO CARE, BABY CARE and BOILING CARE.

3. Intensive


- If the laundry is heavily soiled **Intensive** option is effective.
- By selecting the **Intensive** option, the wash time may be extended, depending on the program selected.

4. Crease Care


- If you want to prevent crease, select this button with spin speed.

The required lamp will light up for identification.

Spin

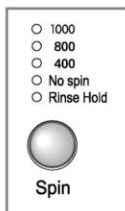

[F1022S/N/TD(5)]

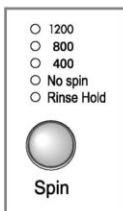

[F1222S/N/TD(5)]

- After selecting the spin course, the spin speed can be chosen by pressing the **Spin** button.

1. Spin selection

- Spin speed is available according to the program as follows.

F1022S/N/TD(5)

- COTTON / RINSE+SPIN / QUICK 30 / BIO CARE / BULKY / SYNTHETIC / HAND WASH/WOOL.
Rinse Hold - No spin - 400 - 800 - 1000

- DELICATE / BEDCOVER / BABY CARE / BOILING CARE / COTTON QUICK.
Rinse Hold - No spin - 400 - 800

F1222SD(5)

- COTTON / RINSE+SPIN / QUICK 30 / BIO CARE / BULKY / SYNTHETIC / HAND WASH/WOOL.
Rinse Hold - No spin - 400 - 800 - 1200

- DELICATE / BEDCOVER / BABY CARE / BOILING CARE / COTTON QUICK.
Rinse Hold - No spin - 400 - 800

F1222ND(5)

- COTTON / RINSE+SPIN / QUICK 30 / BIO CARE / BULKY.
Rinse Hold - No spin - 400 - 800 - 1200

- DELICATE / BEDCOVER / BABY CARE / BOILING CARE / COTTON QUICK / SYNTHETIC / HAND WASH/WOOL.
Rinse Hold - No spin - 400 - 800

2. No spin


- If **No Spin** is selected, the washer stops after draining water.

3. Rinse Hold

- **Rinse Hold** is selected by pressing the **Spin** button repeatedly this function leaves clothes in the machine; suspended in the water after a rinse without entering into spin.
- To proceed through to a drain or spin, once the **Rinse Hold** function is completed using to **Program** dial and **Spin** button to the required program. (Spin)

The required lamp will light up for identification.

Water Temp.

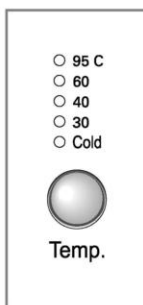

- By pressing the **Temp.** button, the water temperature can be selected.

- Cold
- 30°C / 40°C / 60°C / 95°C

- Water temperature can be selected according to the program.

For the more detailed information, please refer to the page 42.

The required temperature lamp will light up for identification.


How to use washer

F1022S/N/TD(5) / F1222S/N/TD(5)

Tub Clean



- **Tub Clean** course can be set by pressing and holding **Intensive** and **Crease Care** button simultaneously. When **Tub Clean** course is set, display **Tub Clean**, and all buttons are inoperable.

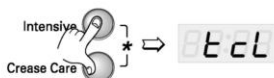

- **Tub Clean** is special cycle to clean the inside of the washer. This cycle uses higher water level with higher spin speed. Perform this cycle regularly.

How to use the **Tub Clean** cycle:


1. Remove any clothing or items from the washer and close the door.
2. Open the dispenser drawer and add Anti limescale (Calgon) to the Main wash compartment.
NOTE: Do not add any detergent to the detergent compartments. Excessive suds may generate and leak from the washer.
3. Close the dispenser drawer slowly.
4. Power On and then press and hold **Intensive** and **Crease Care** button for 3 seconds. then **Tub Clean** is displayed in LED
5. Press the **Start/Pause** button to start.
6. After the cycle is complete, leave the door open to dry around the washer door opening, flexible gasket and door glass.



WARNING!

If there is a small child, be careful not to leave the door open for too long.

Child Lock

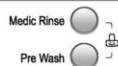


If you choose to lock the buttons on the control assembly to prevent tampering this function may be selected.


- **Child Lock** can be set by pressing the **Medic Rinse** button and **Pre Wash** button simultaneously. (About three seconds)



- When **Child Lock** is set, all buttons are in operable except for **Power** button.
- To deactivate **Child Lock** system, press **Medic Rinse** and **Pre Wash** buttons simultaneously again. (About three seconds)

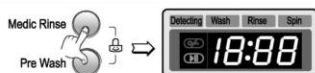

- To change to the desired program, while in **Child Lock** mode is set.
 - Press both **Medic Rinse** and **Pre Wash** together once again. (About three seconds)
 - Press the **Start/Pause** button.
 - Select the desired program and press the **Start/Pause** button again.

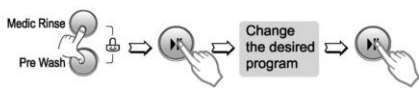


- The **Child Lock** can be set at any time and it is automatically canceled when operational errors occur.

H ow to use washer


F1022S/N/TD(5) / F1222S/N/TD(5)

Time Delay

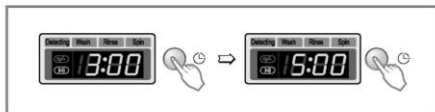

- Preparing washing before starting **Time Delay**
 - Turn on the water tap.
 - Load laundry and close the door.
 - Place the detergent and fabric softener in the drawer.
- How to set **Time Delay**:
 - Press **Power** button.
 - Turn the **Program** dial to select the program you require.
 - Press **Time Delay** button and set the desired time.
 - Press the **Start/Pause** button. (":" blinks.)
- If **Time Delay** button is pressed, "3:00" is displayed. The maximum delayed time is 19 hours and the minimum time is 3 hours.
- Each pressing of the button advances on time delay by one hour.
- To cancel the time delay, press the **Power** button.
- **Time Delay** is "expected time" from the present to the completion of washing cycle or selected process (wash, rinse, spin).
- According to the condition of water supply and temperature, the delayed time and the actual washing time may vary.

Program

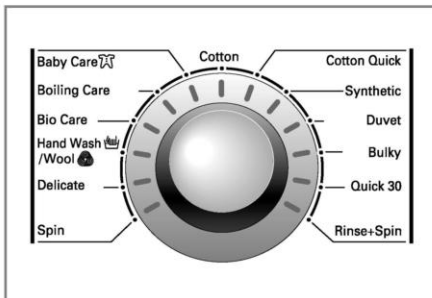

- 13 programs are available according to the laundry type.
- When **Start/Pause** button is pressed, the COTTON program is automatically selected.
- By turning the **Program** dial, the program is selected in order of
 COTTON – COTTON QUICK – SYNTHETIC – BEDCOVER – BULKY – QUICK 30 – RINSE+SPIN – SPIN – DELICATE – HAND WASH/WOOL – BIO CARE – BOILING CARE – BABY CARE.

Lamp will light up to indicate selected program.

Regarding to the laundry type for each program, please refer to the page 42.

Power



1. Power

- Press the **Power** button to turn power on and off.
- To cancel the **Time Delay** function, the **Power** button should be pressed.

2. Initial Program

- When the **Power** button is pressed, the washer is ready for COTTON program. And the other initial conditions as follows.
- So, if you want to advance into the washing cycle without changing the program, just press the **Start/Pause** button and then the washer will proceed.

Initial program

- [F1022S/N/TD(5)]
- **Cotton Program 60°C/1000 rpm;**
- [F1222S/N/TD(5)]
- **Cotton Program 60°C/1200 rpm.**

Start/Pause



1. Start

- This **Start/Pause** button is used to start wash cycle or pause the wash cycle.

2. Pause

- If temporary stop of wash cycle is needed, press the **Start/Pause** button.
- When in pause, the power is turned off automatically **after 4 minutes**.

Detecting



- While the "Detecting" is shown in the display the machine rotates slowly and detects how many laundries are loaded in the drum. It will take a few seconds.
- Available in COTTON and SYNTHETIC.

Door Lock



- Lights whenever the door of the washer is locked.
- The door can be unlocked by pressing the **Start/Pause** button to stop the washer.
- The door can be opened after a short delay.

■ Recommended courses according to the laundry type F1023S/N/TDR(5) / F1223S/N/TDR(5)

Program	Fabric Type	Proper Temp.	Option	Maximum Load		
				F1223SDR(5) F1023SDR(5)	F1223NDR(5) F1023NDR(5)	F1223TDR(5) F1023TDR(5)
COTTON	First check if laundry is machine washable. (white cotton, linen towel, and sheets...)	95°C	INTENSIVE RINSE+ PRE WASH MEDIC RINSE	Rating	Rating	Rating
	Color fast garments (shirts, night dresses, pajamas...) and lightly soiled white cotton (underwear...)	60°C (30°C, 40°C)				
COTTON QUICK	Cotton which is lightly soiled	40°C				
SYNTHETIC	Polyamide, Acrylic, Polyester	40°C (30°C, 60°C)		Less than 1.5 kg	Less than 2.0 kg	Less than 3.0 kg
BABY CARE	Laundry for infant	95°C (60°C)		Less than 3.0 kg	Less than 4.0 kg	Less than 6.0 kg
DELICATE	Delicate laundry easily damaged (silk, curtains...)	30°C (Cold, 40°C)	INTENSIVE RINSE+	Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
HAND WASH/ WOOL	"Hand Wash" marked laundry or machine washable woolens			Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg
QUICK 30	Colored Laundry which is lightly soiled fast.	30°C		Less than 1.0 kg	Less than 1.5 kg	Less than 2.0 kg

* INTENSIVE: When washing heavily soiled laundry you can increase effectiveness by choosing **Intensive** option.

Program setting with **Intensive** option for test in accordance or in conformity with EN60456 and IEC60456.


* RINSE+: Used to introduce an additional rinse, which may assist in removing traces of detergent residue.

* MEDIC RINSE: For high effectiveness or more purity in rinse operation you can choose **Medic Rinse** option.

* PRE WASH: If the laundry is heavily soiled, **Pre Wash** course is recommended.

H ow to use washer

F1023S/N/TDR(5) / F1223S/N/TDR(5)

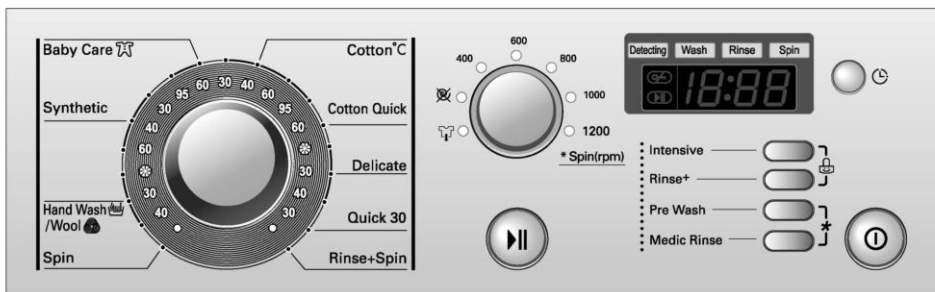

1. Cotton automatically selected upon power on.

- Press the **Power** button to start.
- Press the **Start/Pause** button.

※ INITIAL CONDITIONS


- **Wash:** main wash
- **Rinse:** 3 times
- **Spin:**
 - 1000 rpm
F1023S/N/TDR(5)
 - 1200 rpm
F1223S/N/TDR(5)
- **Water temperature :** 60°C
- **Program:** COTTON

2. Manual Selecting

- Press the **Power** button to start.
- Select the conditions which you want to use, by turning the **Program** dial and pressing each button.
- Press the **Start/Pause** button.


For selecting the each conditions, please refer to the page 51-54.

Tub Clean

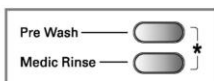

- **Tub Clean** course can be set by pressing and holding **Pre Wash** and **Medic Rinse** buttons simultaneously.

- When **Tub Clean** course is set, display **Tub Clean**, and all buttons are inoperable.

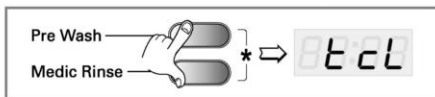

- **Tub Clean** is special cycle to clean the inside of the washer. This cycle uses higher water level with higher spin speed. Perform this cycle regularly.


How to use the **Tub Clean** cycle:

1. Remove any clothing or items from the washer and close the door.
 2. Open the dispenser drawer and add Anti limescale (Calgon) to the Main wash compartment.
- NOTE:** Do not add any detergent to the detergent compartments. Excessive suds may generate and leak from the washer.
3. Close the dispenser drawer slowly.
 4. Power On and then press and hold **Pre Wash** and **Medic Rinse** buttons for 3 seconds. then **Tub Clean** is displayed in LED
 5. Press the **Start/Pause** button to start.
 6. After the cycle is complete, leave the door open to dry around the washer door opening, flexible gasket and door glass.




H ow to use washer

F1023S/N/TDR(5) / F1223S/N/TDR(5)

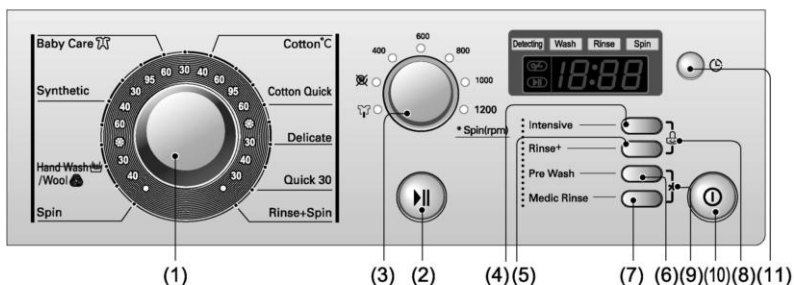

- | | | |
|-------------------------|-------------------------|-------------------------|
| (1) Dial: Program | (5) Button: Rinse+ | (9) Tub Clean |
| (2) Button: Start/Pause | (6) Button: Pre Wash | (10) Button: Power |
| (3) Dial: Spin | (7) Button: Medic Rinse | (11) Button: Time Delay |
| (4) Button: Intensive | (8) Buttons: Child Lock | |

Program

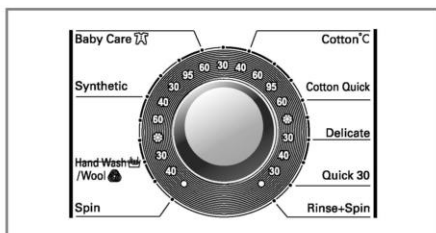

- 9 programs are available according to the laundry type.
- When **Start/Pause** button is pressed, the COTTON program is automatically selected.
- By turning the **Program** dial, the program is selected in order of:

COTTON - COTTON QUICK - DELICATE - QUICK 30 - RINSE+SPIN - SPIN - HAND WASH/WOOL - SYNTHETIC - BABY CARE.

Lamp will light up to indicate selected program.

Regarding to the laundry type for each program, please refer to the page 49.

Power



1. Power

- Press the **Power** button to turn power on and off.
- To cancel the **Time Delay** function, the **Power** button should be pressed.

2. Initial Program

- When the **Power** button is pressed, the washer is ready for COTTON program. And the other initial conditions as follows.
- So, if you want to advance into the washing cycle without changing the program, just press the **Start/Pause** button and then the washer will proceed.

Initial program

- [F1023S/N/TDR(5)]
 - Cotton Program/Main wash/Normal Rinse
 - 1000 rpm / 60°C
- [F1223S/N/TDR(5)]
 - Cotton Program/Main wash/Normal Rinse
 - 1200 rpm / 60°C

How to use washer

F1023S/N/TDR(5) / F1223S/N/TDR(5)

Start/Pause



1. Start

- This **Start/Pause** button is used to start wash cycle or pause the wash cycle.

2. Pause

- If temporary stop of wash cycle is needed, press the **Start/Pause** button.
- When in **Pause**, the power is turned off automatically **after 4 minutes**.

Detecting




- While the "Detecting" is shown in the display the machine rotates slowly and detects how many laundries are loaded in the drum. It will take a few seconds.
- Available in COTTON and SYNTHETIC.

Door Lock



- Lights whenever the door of the washer is locked.
- The door can be unlocked by pressing the **Start/Pause** button to stop the washer.
- The door can be opened after a short delay.

Option

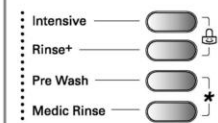

- Needed option can be activated by pressing a specific button.

1. Intensive

- If the laundry is heavily soiled **Intensive** option is effective.
- By selecting the **Intensive** option, the wash time may be extended, depending on the program selected.
- This option is not available with QUICK 30 program.

2. Rinse+

- For additional rinse which may assist in removing traces of detergent residue.
- By selecting **Rinse+** function, the rinse time and the rinse water are increased.

3. Pre Wash

- If the laundry is heavily soiled, **Pre Wash** course is effective.
- **Pre Wash** is available in COTTON, SYNTHETIC and COTTON QUICK.

4. Medic Rinse

- For high effectiveness or more purity in rinse operation you can choose **Medic Rinse** option. It can be chosen in all course with the exception of HAND WASH/WOOL, DELICATE, QUICK 30.

H ow to use washer

F1023S/N/TDR(5) / F1223S/N/TDR(5)

Child lock



If you choose to lock the buttons on the control assembly to prevent tampering this function may be selected.

- **Child Lock** can be set by pressing the **Rinse+** and **Intensive** button simultaneously. (About three seconds)



- When **Child Lock** is set, all buttons are locked.
- To deactivate **Child Lock** system, press and hold the **Rinse+** and **Intensive** button simultaneously again (About three seconds).



- To change to the desired program, while **Child Lock** mode is set.
- Press both **Rinse+** and **Intensive** together once again. (About three seconds)
- Press the **Start/Pause** button.
- Select the desired program and press the **Start/Pause** button again.



- The **Child Lock** can be set at any time and it is automatically canceled when operational errors occur.

Time Delay



- Preparing washing before starting **Time Delay**:

- Turn on the water tap.
- Load laundry and close the door.
- Place the detergent and fabric softener in the drawer.

- How to set **Time Delay**:

- Press **Power** button.
- Turn the **Program** dial to select the program you require.
- Press **Time Delay** button and set the desired time.
- Press the **Start/Pause** button. (":." blinks.)

- If **Time Delay** button is pressed, "3:00" is displayed. The maximum delayed time is 19 hours and the minimum time is 3 hours.


- Each pressing of the button advances on **Time delay** by one hour.

- To cancel the time delay, press the **Power** button.


- **Time Delay** is "expected time" from the present to the completion of washing cycle or selected process (wash, rinse, spin).

- According to the condition of water supply and temperature, the delayed time and the actual washing time may vary.

Spin

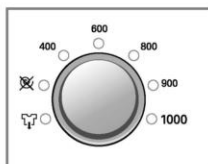

[F1023S/N/TDR(5)]

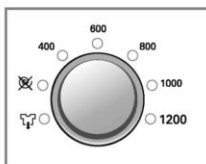

[F1223S/N/TDR(5)]

- By turning the **Spin** dial, the spin speed can be chosen.

1. Spin selection

- Spin speed is available according to the program as follows.

F1023S/N/TDR(5)

- **COTTON / COTTON QUICK / SYNTHETIC / HAND WASH/WOOL / BABY CARE / QUICK 30.**
No Spin – Rinse Hold – 400 – 600 – 800 – 900 – 1000
- **DELICATE.**
No Spin – Rinse Hold – 400 – 600 – 800

F1223S/N/TDR(5)


- **COTTON / COTTON QUICK / QUICK 30.**
No Spin – Rinse Hold – 400 – 600 – 800 – 1000 – 1200
- **HAND WASH/WOOL / SYNTHETIC / BABY CARE.**
No Spin – Rinse Hold – 400 – 600 – 800 – 1000
- **DELICATE.**
No Spin – Rinse Hold – 400 – 600 – 800

2. No spin

- If **No Spin** is selected, the washer stops after draining water.

The required lamp will light up for identification.

Water Temp.

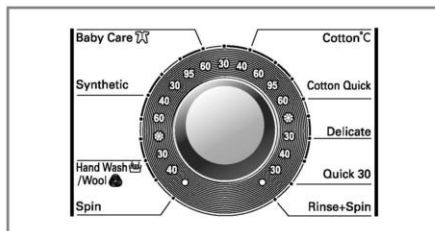

- By turning the **Program** dial, the water temperature can be selected.

- **Cold**
- 30°C / 40°C / 60°C / 95°C

- Water temperature can be selected according to the program.

The required temperature lamp will light up for identification.

For the more detailed information, please refer to the page 49.

H ow to use washer

Display

1. Special function display

- When **Child Lock** is selected, the "CL", or "🔒" is displayed.
- When **Time Delay** is selected, it shows the remaining time to finish the selected program.

2. Self diagnosis display

- If the machine encounters a fault during operation, the associated fault will be displayed.

- "PE": Water pressure sensing error
- "FE": Problem of overfilling water
- "dE" ("Door open"): Door is not closed
- "LE": Over load in motor
- "EE": Over load in motor
- "IE" ("No water supply"): Water inlet trouble
- "DE" ("Not draining"): Drainage trouble
- "UE" ("No spinning"): Unbalanced load
- "tE": Water temperature trouble
- "PF": The washer experienced a power failure.

If these error letters are displayed, please refer to the troubleshooting page 62 and follow the guide.

3. Completion of washing

- When washing cycle is completed, "End" is displayed on the "Multi display".



F10(12)21S/N/TDR(5)



F10(12)18S/N/TDR(5)




F10(12)20S/N/TDR(5)

F10(12)22S/N/TDR(5)

F10(12)23S/N/TDR(5)



F10(12)19S/N/TDR(5)

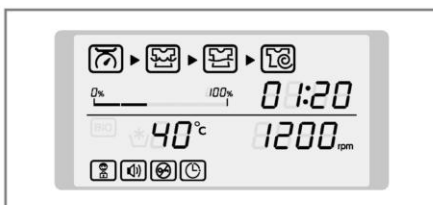

F10(12)11S/N/TDR(5)



F10(12)12S/N/TDR(5)

H ow to use washer

Time Left

- During washing cycle, the remaining washing time is displayed.
- Recommended program by manufacturer.

Program	F1011(12)S/N/TDR(5) F1211(12)S/N/TDR(5)	F1018(19)S/N/TDR(5) F1218(19)S/N/TDR(5)	F1020S/N/TDR(5) F1220S/N/TDR(5)	F1021S/N/TDR(5) F1221S/N/TDR(5)	F1022S/N/TDR(5) F1222S/N/TDR(5)	F1023S/N/TDR(5) F1223S/N/TDR(5)
COTTON (95°C)	1:49	1:57	1:59	1:43	1:49 (44)	1:50
COTTON (60°C)	1:38	1:40	1:45	1:39	1:55 (50)	1:40
COTTON QUICK	1:24	1:26	1:30	1:33	1:35	1:34
SYNTHETIC	1:24	1:20	1:50	1:17	1:19	1:20
DELICATE	1:13	0:52	1:00	0:51	0:51	0:52
HAND WASH/WOOL	0:49	0:47		0:52	0:49	0:47
WOOL/SILK			0:56			
HAND WASH			0:56			
DUVET	1:13	1:15	1:26	1:30	1:31	1:29
QUICK 30	0:30	0:30	0:30	0:30	0:30	0:30
BIO CARE					2:27 (22)	
BABY CARE	2:27	2:24	2:20	2:24	2:24	2:13
BOILING CARE					2:17	
BULKY					0:59	
RINSE+SPIN	0:16	0:18		0:17	0:23 (18)	0:21
SPIN		0:13			0:18 (13)	0:13

- The washing time and water temperature may vary by the amount of laundry, water pressure, and other washing conditions.
- If an unbalanced load is detected or if the suds removing program operates, the wash time may be extended. (Max. increasing time is 45 minutes.)


Maintenance

- * Before cleaning the washer interior, unplug the electrical power cord to avoid electrical shock hazards.
- * When disposing of the appliance, cut off the mains cable, and destroy the plug. Disable the door lock to prevent young children being trapped inside.


■ The water inlet filter

- "No water supply" (iE) error message will blink on the control panel when water does not enter the detergent drawer.
- If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged.


It is therefore a good idea to clean it from time to time.

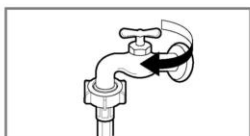

1. Turn off the water tap.

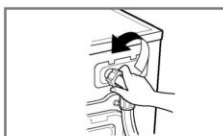

2. Unscrew the water inlet hose.

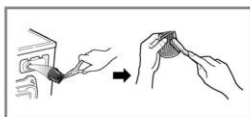

3. Clean the filter using a hard bristle brush.



4. Tighten up the inlet hose.

■ The drain pump filter


- * The drain filter collects threads and small objects left in the laundry.

Check regularly that the filter is clean to ensure smooth running of your machine.


▲ CAUTION

Open the pump filter to remove whatever any threads or objects. Be careful when draining if the water is hot.

1. Open the lower cover cap (①) by using a coin. Drain plug (②) to pull out the hose.

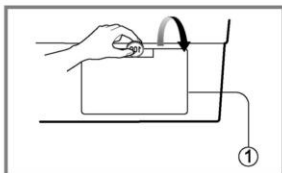

2. Unplug the drain plug (②), allowing the water to flow out. At this time use a vessel to prevent water flowing on to the floor. When water does not flow any more, turn the pump filter (③) open to the left.

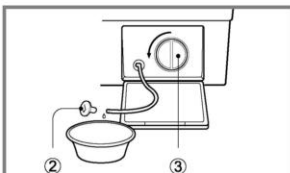


3. Remove any foreign material from the pump filter (③). After cleaning, turn the pump filter (③) clockwise and insert the drain plug (②) to the original place. Close the lower cover cap.



Maintenance

■ Dispenser drawer

- * After a while detergents and fabric softeners leave a deposit in the drawer.
- It should be cleaned from time to time with a jet of running water.
- If necessary it can be removed completely from the machine by pressing the catch downwards and by pulling it out.
- To facilitate cleaning, the upper part of the fabric softener compartment can be removed.

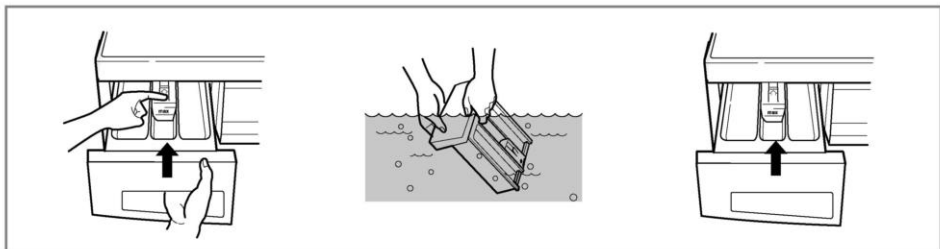

■ The drawer recess

- * Detergent can also accumulate inside the recess which should be cleaned occasionally.
- Once you have finished cleaning, replace the drawer and run a rinse cycle without laundry.



■ The washing drum

- If you live in a hard water area, limescale may continuously build up in places where it cannot be seen and thus not easily removed.
- Over time the build up of scale clogs appliances, and if it is not kept in check these may have to be replaced.
- Although the washing drum is made of Stainless steel, specks of rust can be caused by small
- metal articles (paper clips, safety pins) which have been left in the drum.
- The washing drum should be cleaned from time to time.
- If you use descaling agents, dyes or bleaches, make sure they are suitable for washing machine use.
- * Descaler may contain chemicals that may damage part of your washing machine.
- * Remove any spots with a stainless steel cleaning agent.
- * Never use steel wool.

Maintenance

■ Cleaning your washer

1. Exterior

Proper care of your washer can extend its life. The outside of the machine can be cleaned with warm water and a neutral non abrasive household detergent. Immediately wipe off any spills. Wipe with damp cloth. Try not to hit surface with sharp objects.



WARNINGS

Do not use methylated spirits, diluents or similar products.

2. Interior

Dry around the washer door opening, flexible gasket and door glass.
Run washer through a complete cycle using hot water.
Repeat process if necessary.

NOTE

Remove hard water deposits using only cleaners labeled as safe for washing machine.

■ Cold condition

If the washer is stored in an area where freezing may occur or moved in freezing temperatures, follow these instructions to prevent damage to the washer:

1. Turn off water supply tap.
2. Disconnect hoses from water supply and drain water from hoses.
3. Plug electrical cord into a properly grounded electrical outlet.
4. Add 1gallon(3.8L) of nontoxic recreational vehicle (RV) antifreeze into an empty wash drum. Close the door.
5. Set spin cycle and let washer spin for 1minute to drain out all water.
Not all of the RV antifreeze will be expelled.
6. Unplug electrical power cord, dry the drum interior, and close the door.
7. Remove dispenser drawer, drain and dry excessive water from the compartments.
8. Store washer in an upright position.
9. To remove antifreeze from washer after storage, run empty washer through a complete cycle using detergent. Do not add wash load.

Troubleshooting guide












* This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately
When the machine does not function properly or does not function at all, check the following points before you contact your service provider.

Symptom	Possible Cause	Solution
Rattling and clanking noise	<ul style="list-style-type: none"> Foreign objects such as coins or safety pins maybe in drum or pump. 	Stop washer and check drum and drain filter. If noise continues after washer is restarted, call your authorised service centre.
Thumping sound	<ul style="list-style-type: none"> Heavy wash loads may produce a thumping sound. This is usually normal. 	If sound continues, washer is probably out of balance. Stop and redistribute wash load.
Vibrating noise	<ul style="list-style-type: none"> Have all the transit bolts and packing been removed? Are all the feet resting firmly on the ground? Wash load may be unevenly distributed in drum. 	<p>If not removed during installation. Refer to Installation guide for removing transit bolts.</p> <p>Adjusting washing horizontal level.</p> <p>Stop washer and rearrange wash load.</p>
Water leaks	<ul style="list-style-type: none"> Fill hoses or drain hose are loose at tap or washer. House drain pipes are clogged. 	<p>Check and tighten hose connections.</p> <p>Unclog drain pipe. Contact plumber if necessary.</p>
Oversudsing	Too much detergent or unsuitable detergent may cause excessive foaming which may result in water leaks.	It is necessary to decrease the quantity of detergent. The type of detergent should match the washing machine type. Oversudsing may provoke water leaking.
Water does not enter washer or it enters slowly	<ul style="list-style-type: none"> Water supply is not adequate in area. Water supply tap is not completely open. Water inlet hose(s) are kinked. 	<p>Check another tap in the house.</p> <p>Fully open tap.</p> <p>Straighten hose.</p>
Water in the washer does not drain or drains slowly	<ul style="list-style-type: none"> The filter of the inlet hose(s) clogged. Drain hose is kinked or clogged. The drain filter is clogged. 	<p>Check the filter of the inlet hose.</p> <p>Clean and straighten the drain hose.</p> <p>Clean the drain filter.</p>


Troubleshooting guide

Symptom	Possible Cause	Solution
Washer does not start	<ul style="list-style-type: none"> Electrical power cord may not be plugged in or connection may be loose. House fuse blown, circuit breaker tripped, or a power outage has occurred. 	<p>Make sure plug fits tightly in wall outlet.</p> <p>Reset circuit breaker or replace fuse. Do not increase fuse capacity. If problem is a circuit overload, have it corrected by a qualified electrician.</p>
Washer will not spin	<ul style="list-style-type: none"> Water supply tap is not turned on. Check that the door is firmly shut. 	<p>Turn on water supply tap.</p> <p>Close the door and press the Start/Pause button. After pressing the Start/Pause button, it may take a few moments before the clothes washer begins to spin. The door must lock before spin can be achieved.</p>
Door does not open		<p>Once started, the door can not be opened for safety reasons. Wait one or two minutes before opening the door to give the electric locking mechanism time to release.</p>
Wash cycle time delayed		<p>The washing time may vary by the amount of laundry, water pressure, water temperature and other usage conditions. If the imbalance is detected or if the suds removing program works, the wash time shall be increased.</p>

Troubleshooting guide

Symptom	Possible Cause	Solution
 ("No water supply")	<ul style="list-style-type: none"> Water supply is not adequate in area. Water supply taps are not completely open. Water inlet hose(s) are kinked. The filter of the inlet hose(s) are clogged. 	Check another tap in the house. Fully open tap. Straighten hose(s). Check the filter of the inlet hose.
 ("Not draining")	<ul style="list-style-type: none"> Drain hose is kinked or clogged. The drain filter is clogged. 	Clean and straighten the drain hose. Clean the drain filter.
 ("No spinning")	<ul style="list-style-type: none"> Load is too small. Load is out of balance. The appliance has an imbalance detection and correction system. If individual heavy articles are loaded (ex. bath mat, bath robe, etc.) this system may stop spinning or even interrupt the spin cycle altogether. 	Add 1 or 2 similar items to help balance the load. Rearrange load to allow proper spinning. If the laundry is still too wet at the end of the cycle, add smaller articles of laundry to balance the load and repeat the spin cycle.
 ("Door open")	 <ul style="list-style-type: none"> Is the door opened? 	Close the door. If "dE" is not released, call for service.
	<ul style="list-style-type: none"> The thermistor is out of order. 	Unplug the power plug and call for service.
	<ul style="list-style-type: none"> Water overfills due to the faulty water valve. 	Close the water tap. Unplug the power plug. Call for service.
	<ul style="list-style-type: none"> Water level sensor has malfunctioned. 	
	<ul style="list-style-type: none"> Over load in motor. 	
	<ul style="list-style-type: none"> Over load in motor. 	
	<ul style="list-style-type: none"> The washer experienced a power failure. 	Restart the cycle.

Terms of Warranty

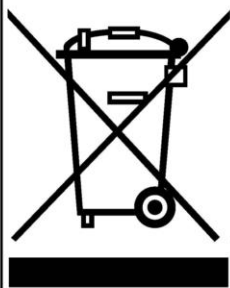

DISPOSAL OF YOUR OLD APPLIANCE

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

What Is Not Covered:

- Service trips to your home to teach you how to use the product.
- If the product is connected to any voltage other than that shown on the rating plate.
- If the fault is caused by accident, neglect, misuse or Act of God.
- If the fault is caused by factors other than normal domestic use or use in accordance with the owner's manual.
- Provide instruction on use of product or change the set-up of the product.
- If the fault is caused by pests for example, rats or cockroaches etc..
- Noise or vibration that is considered normal for example water drain sound, spin sound, or warming beeps.
- Correcting the installation for example, levelling the product, adjustment of drain.
- Normal maintenance which recommended by the owner's manual.
- Removal of foreign objects / substances from the machine, including the pump and inlet hose filter for example, grit, nails, bra wires, buttons etc.
- Replace fuses in or correct house wiring or correct house plumbing.
- Correction of unauthorized repairs.
- Incidental or consequential damage to personal property caused by possible defects with this appliance.
- If this product is used for commercial purpose, it is not warranted.
(Example: Public places such as public bathroom, lodging house, training center, dormitory)
- If the product is installed outside the normal service area, any cost of transportation involved in the repair of the product, or the replacement of a defective part, shall be borne by the owner.



LG Electronics Inc.