



LG

Life's Good

OWNER'S MANUAL Micro Hi-Fi System

Please read this manual carefully before operating your set and retain it for future reference.

XP16DAB(XP16DAB, XPS16F)

P/NO : MFL67307508

Safety Information



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.



CAUTION: This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service centre.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. **DO NOT STARE INTO BEAM.**

CAUTION concerning the Power Cord

Most appliances recommend they be placed upon a dedicated circuit;

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service centre. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Disposal of your old appliance



1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

CE LG Electronics hereby declares that this/ these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC, 2006/95/EC, and 2009/125/EC.

European representative :

LG Electronics Service Europe B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands (Tel : +31-(0)36-547-8888)

- The appliance is not intended for use by young children or infirm persons without supervision.
- Young Children should be supervised to ensure that they do not play with appliance.
- If the appliance is supplied from a cord extension set or an electrical portable outlet device, the cord extension set on electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.

Table of Contents

1 Getting Started

- 2 Safety Information
- 5 Unique Features
- 5 Accessories
- 5 Playable file Requirement
 - 5 – MP3/WMA music file requirement
 - 5 – Compatible USB Devices
 - 5 – USB device requirement
- 6 Remote control
- 7 Front panel
- 7 Rear panel

2 Connecting

- 8 Connecting to speakers
 - 8 – Attaching the speakers to the unit
- 8 Optional Equipment Connection
 - 8 – USB Connection
 - 8 – PORT. IN Connection

3 Operating

- 9 Basic Operations
 - 9 – CD/ USB Operations
 - 9 – Selecting a folder
- 10 Other Operations
 - 10 – Programmed Playback
 - 10 – Displaying file information (ID3 TAG)
 - 10 – Turn off the sound temporarily
- 10 Radio Operations
 - 10 – Listening to the radio
 - 10 – Presetting the Radio Stations
 - 10 – Deleting all the saved stations
 - 11 – Improving poor FM reception
 - 11 – Listening to the DAB
 - 11 – Aligning the service names
 - 11 – DAB scan
 - 11 – Deleting all of the saved DAB scan stations
- 11 Sound adjustment
 - 11 – Setting the surround mode

- 12 Advanced Operations
 - 12 – Compatible iPod/iPhone
 - 13 – Listening to music from your external device
 - 13 – Recording to USB
 - 13 – Pausing recording
 - 13 – To select recording bit rate and speed

4 Troubleshooting

- 15 Troubleshooting

5 Appendix

- 16 Specifications
- 17 Maintenance
 - 17 – Handling the Unit
 - 17 – Notes on Discs
- 17 Trademarks and Licenses

Unique Features

USB Direct Recording

Records music to your USB device.

Portable In


Listens to music from your portable device. (MP3, Notebook, etc)

Made for iPod


Enjoy music from iPod with simple connection.

Accessories

Please check and identify the supplied accessories.

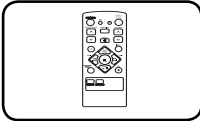

Remote Control (1)

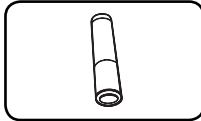

Battery (1)

Playable file Requirement

MP3/WMA music file requirement

MP3/WMA file compatibility with this unit is limited as follows :

- Sampling Frequency : 32 - 48 kHz (MP3), 32 - 48 kHz (WMA)
- Bit rate : 32 - 320 kbps (MP3), 40 - 320 kbps (WMA)
- Maximum files : Under 999
- File extensions : ".mp3"/".wma"
- CD-ROM file format : ISO9660/ JOLIET
- We recommend that you use "Easy-CD Creator", which creates an ISO 9660 file system.

Compatible USB Devices

- MP3 Player : Flash type MP3 player.
- USB Flash Drive : Devices that support USB2.0 or USB1.1.
- The USB function of this unit does not support all USB devices.


USB device requirement

- Devices which require additional program installation when you have connected it to a computer, are not supported.
- Do not extract the USB device while in operation.
- For a large capacity USB, it may take longer than a few minute to be searched.
- To prevent data loss, back up all data.
- If you use a USB extension cable or USB hub, the USB device is not recognized.
- Using NTFS file system is not supported. (Only FAT(16/ 32) file system is supported.)
- This unit is not supported when the total number of files is 1 000 or more.
- External HDD, Card readers, Locked devices, or hard type USB devices are not supported.
- USB port of the unit cannot be connected to PC. The unit cannot be used as a storage device.


1

Getting Started

Remote control

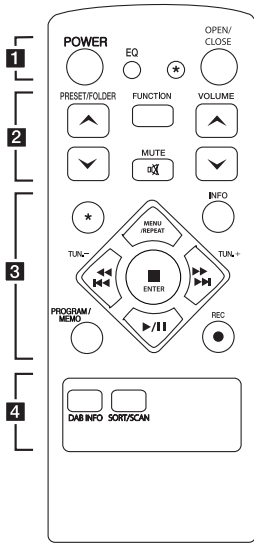

Battery Installation

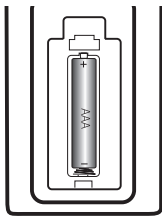

Remove the battery cover on the rear of the Remote Control, and insert one (size AAA) battery with **+** and **-** matched correctly.

..... **1**

POWER : Switches the unit ON or OFF.

EQ : Chooses sound impressions.

***** : The button is not available for any function.

OPEN/CLOSE : Opens and closes the disc tray.

..... **2**

PRESET/FOLDER \wedge /V : Searches for a folder of MP3/WMA files. When a CD/ USB containing MP3/ WMA files in several folders is being played, press **PRESET/FOLDER \wedge /V** to select the folder you want to play. Choose a 'preset number' for a radio station.

FUNCTION : Selects the function and input source.

VOLUME \wedge /V : Adjusts speaker volume.

MUTE : Mutes the sound.

..... **3**

***** : The button is not available for any function.

INFO : Checks information about your music. MP3 files often come with tags. The tag gives the Title, Artist, Album or Time information.

MENU/REPEAT :

- Listens to your tracks repeatedly or randomly. (only in CD/USB)
- Move to the previous menu(iPod).

TUN. -/+ : Selects the radio station.

◀◀◀/▶▶▶▶▶ (Skip/Search):

- Skips Fast backward or Forward.
- Searches for a section within a track.

■ ENTER :

- Stops playback or recording.
- Choose an item(iPod).

▶/|| (Play/Pause) : Starts or pauses playback.

PROGRAM/MEMO :

- For storing radio stations if you have saved radio stations using **PROGRAM/MEMO**, you can scroll through them and select one.
- Listens to your tracks in any order.

● REC : USB direct recording.

..... **4**


DAB INFO :

- DAB radio type.
- Changes the display information of DAB channel.


SORT/SCAN:

- Searches radio stations by radio type.
- Aligning the service names DAB band scanning.

Front panel

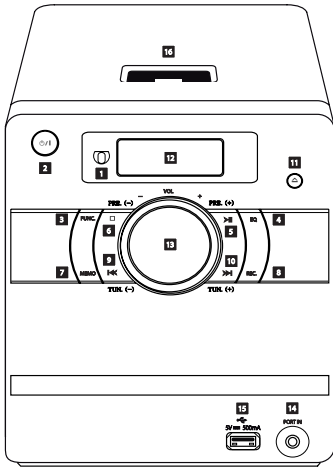

Rear panel

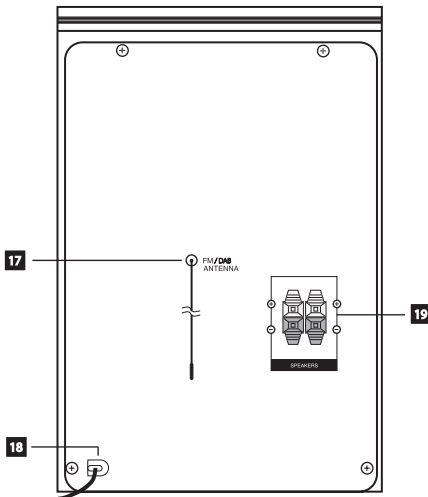

- 1 Remote sensor**
- 2** (Power ON/OFF)
- 3 FUNC.**
Selects the function or input source.
- 4 EQ**
Chooses sound impressions.
- 5** / PRE. +
Starts playback and pauses.
Chooses a preset number for a radio station.
- 6** STOP/PRE. -
Stops playback or recording.
Chooses a preset number for a radio station.
- 7 MEMO**
On the CD/USB mode, you can make your own playlist.
On FM mode, you can save radio stations.
- 8 REC.**
Recording to USB.
- 9** (Skip/Search)/ TUN. -
- 10** (Skip/Search)/ TUN. +
- 11** (Open/Close)
You can use it when inserting or removing CDs.
- 12 Display window**
- 13 VOLUME**
- 14 PORT. IN**
- 15 USB Port**
You can play or recording sound files by connecting the USB device.
- 16 iPod dock**
- 17 FM/(DAB) ANTENNA**
- 18 Power cord**
- 19 Speaker terminal**

Connecting to speakers


2

Connecting

Attaching the speakers to the unit

To connect the cable to the unit, press each plastic finger pad to open the connection terminals on the unit. Insert the wire and release the finger pad.

Connect the black stripe of each wire to the terminals marked - (minus) and the other end to the terminals marked + (plus).

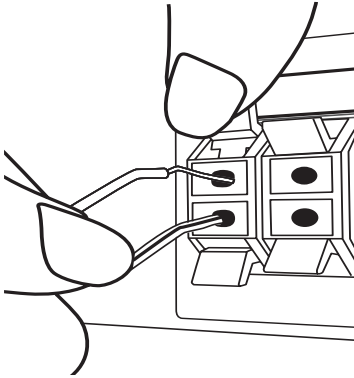


Caution

The speakers contain magnet parts, so color irregularity may occur on the TV screen or PC monitor screen. Please use the speakers far away from either TV screen or PC monitor.

Optional Equipment Connection

USB Connection

Connect the USB Memory (or MP3 player, etc.) to the USB port on the front of the unit.

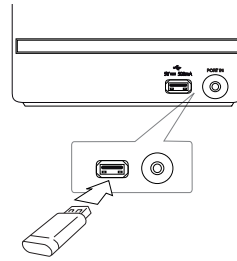


Note

Removing the USB Device from the unit

1. Choose a different function/mode or press **■** twice in a row.
2. Remove the USB device from the unit.
3. You can only recharge your iPod through USB port. To listen to music on iPod, refer to the page 12.

PORT. IN Connection

Connect an output (earphone or line out) of portable device (MP3 or PMP etc) to the PORT. IN connector.

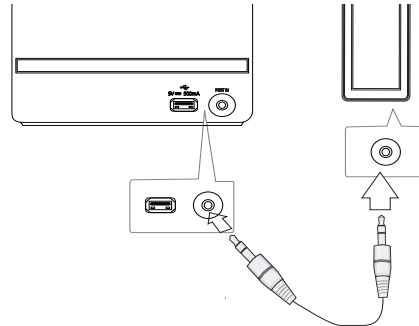

Basic Operations

CD/ USB Operations

1. Insert the disc by pressing **OPEN/CLOSE** or connect the USB device to the USB port.
2. Select the **CD** or **USB** function by pressing **FUNCTION** on the remote control or **FUNC.** on the unit.
3. Select a file (or track) you want to play by pressing **◀◀◀◀/▶▶▶▶**.

To	Do this
Stop	Press ■ on the remote control or □ on the unit.
Playback	Press ▶/ on the remote control or > on the unit.
Pause	During playback, press ▶/ on the remote control or > on the unit.
Skipping to the next/previous track/ file	During playback, press ◀◀/▶▶ on the unit or ◀◀◀◀/▶▶▶▶ on the remote control to go to the next track/ file or to return to the beginning of the current track/ file. Press ◀◀◀◀ on the remote control or ◀◀ on the unit twice briefly to step back to the previous track/ file.
Searching for a section within a track	Press and hold ◀◀/▶▶ on the unit or ◀◀◀◀/▶▶▶▶ on the remote control during playback and release it at the point you want to listen to.
Playing repeatedly or randomly	Press MENU/REPEAT on the remote control repeatedly, the display change in the following order, RPT1 -> RPT DIR (only MP3/WMA) -> RPT ALL -> RANDOM -> OFF

Selecting a folder

1. Press **PRESET/FOLDER ^/V** on the remote control repeatedly until a desired folder appears.
2. Press **▶/||** on the remote control or **>||** on the unit to play it. The first file of folder will play.



Other Operations

Programmed Playback

The program function enables you to store your favorite files from any disc or USB device.

A program can contain 20 tracks.

1. Insert a CD or USB and wait for it to be order.
2. Press **PROGRAM/MEMO** on the remote control or Press **MEMO** on the unit in stop status.
3. Press **I<<</>>>I** on the unit or **I<<<</>>>>I** on the remote control in stop status.
4. Press **PROGRAM/MEMO** on the remote control or **MEMO** on the unit again to save and select a next track.
5. Press **▶/II** on the remote control or **>II** on the unit to play the programmed music files.
6. To clear your selection, press **■** on the remote control or **□** on the unit twice.

! Note

The programs are also cleared when the disc or USB device is removed, the unit is powered off or the function is switched to others.

Displaying file information (ID3 TAG)

While playing an MP3 file containing file information, you can display the information by pressing INFO.

Turn off the sound temporarily

Press **MUTE** button on your remote to mute your unit.

You can mute your unit, for example, to answer the telephone, the mute symbol "M" is displayed in the display window of unit.

Radio Operations

Listening to the radio

1. Press FUNCTION until TUNER (FM/ DAB) appears in the display window. The last received station is tuned in.
2. **[FM]**
Press and hold TUN.-/+ for about two seconds until the frequency indication starts to change. Scanning stops when the unit tunes in a station.
Or
Press TUN.-/+ repeatedly.
[DAB]
Press TUN.-/+ and press **▶/II**.

3. Adjust the volume by rotating VOLUME on the front panel or by pressing VOL +/- on the remote control.

Presetting the Radio Stations

You can preset 50 stations for FM/ DAB. Before tuning, make sure that you have turned down the volume.

1. Press FUNCTION until the TUNER (FM/ DAB) appears in the display window.
2. **[FM]**
Select the desired frequency by using TUN.-/+.
[DAB]
Press TUN.-/+ and press **▶/II**.
3. Press PROGRAM/MEMO a preset number will flash in the display window.
4. Press PRESET/FOLDER **▲/▼** on the remote control to select the preset number you want.
5. Press PROGRAM/MEMO. The station is stored.
6. Repeat the steps 2 to 5 to store other stations.
7. Press PRESET/FOLDER **▲/▼** repeatedly on the remote control to select the preset station you want.

Deleting all the saved stations

1. Press and hold **PROGRAM/MEMO** for two seconds. "ERASE ALL" will flash up on the unit display.
2. Press **PROGRAM/MEMO** to erase all saved radio stations.

Improving poor FM reception

Press **▶/||** on the remote control. This will change the tuner from stereo to mono and usually improve the reception.

Listening to the DAB

You can change the display information of the currently broadcasting DABchannel. Press **DAB INFO.** on the remote control repeatedly, the display changes in the following order, SERVICE -> PTY NAME -> FREQ -> DLS -> QUALITY -> ENSEMBLE

Select a display mode and then press **◀◀/▶▶**, the initials of the servicename are displayed.

- SERVICE** Displays the Name of the channel for the current broadcast.
- PTY NAME** Displays the Type of the channel for the current broadcast.
- FREQ** Displays the frequency of the channel for the current broadcast.
- DLS** It displays the current Scroll of the channel which is selected.
- QUALITY** It displays the current strength of the broadcast signal.
- ENSEMBLE** Displays the Ensemble of the channel for the current broadcast.

Aligning the service names

Press **SORT/SCAN** on the remote control to display the sorting mode of DAB broadcastings. Then, press the button once again to change the mode.

Default sort: The service names are aligned in a scanning order.

Name sort: The service names are aligned in an alphabetical order.

DAB scan

Press **SORT/SCAN** on the remote control for longer than 3 seconds, all of the DAB bands are scanned. Then press it again, scanning will be cancelled.

Deleting all of the saved DAB scan stations

Press and hold **DAB INFO.** on the remote control for 3 seconds. "DAB INIT" will be displayed. Press **DAB INFO.** to erase all the saved stations.

Sound adjustment

Setting the surround mode

This system has a number of pre-set surround sound fields. You can select a desired sound mode by using **EQ.**

The displayed items for the Equalizer may be different depending on sound sources and effects.

On Display	Description
AUTO EQ	Sets the sound equalizer on the mode that is the most similar to the genre which is included in the MP3 ID3 tag of song files.
POP CLASSIC ROCK	This program lends an enthusiastic atmosphere to the sound, giving you the feeling you are at an actual pop, classic or rock concert.
BASS BLAST	Reinforce the treble, bass and surround sound effect.
BYPASS	You can enjoy the sound without equalizer effect.


Note

Maybe you need reset the surround mode, after switching the input, sometimes even after the sound track changed.

Advanced Operations

You can enjoy the sound with your iPod. For details about iPod, refer to the iPod User Guide.

1. Connect the iPod firmly.

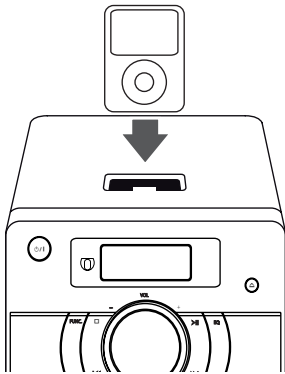

If you turn this unit on, with your iPod connected or docked it will automatically turn on and recharging will start.

2. Press **FUNC.** on the unit or **FUNCTION** on the remote control to select iPod function. You can operate your iPod through an iPod's display by using the supplied remote control and also control on your iPod.

To	Do this	
	ON UNIT	ON REMOTE
Pauses or restart	>	▶/
Skip	<</>>	◀◀◀◀/ ▶▶▶▶
Search	Press and hold <</>>	Press and hold ◀◀◀◀/ ▶▶▶▶
Move to the Previous menu	-	MENU/REPEAT
Move to the desired item	-	PRESET/ FOLDER ^/V

Choosers a item	-	■ ENTER
-----------------	---	------------

Compatible iPod/iPhone

- We recommend installing the latest software version.
- The unit supports the models as follows/ iPod nano 1 G, 2 G, 3 G, 4 G, 5 G, 6 G/ iPod classic/ iPod 4 G, 5 G/ iPod touch 2 G, 3 G, 4 G/ iPhone 3 G, 4. For some models, the unit may not operate depending on the firmware version.
- Depending on your iPod's software version, you may not control your iPod from the player.

! Note

- If this unit displays an error message, follow the message. An error message "ERROR".
 - Your iPod is not connected firmly.
 - This unit recognizes your iPod as an unknown device.
 - Your iPod is exceptionally low in power.
 - ➔ The battery needs to be charged.
 - ➔ If you charge the battery while iPod is extremely low in power, it may take longer to be charged.
- iPod does not support recording function when connected.
- Depending on your iPod's software version, it may not be possible to control your iPod from this unit. We recommend installing the latest software version.
- If you use an application, make a call, or send and receive SMS text message, etc. on iPod touch or iPhone, disconnect it from iPod dock of this unit and then use it.
- If you have a problem with your iPod, please visit www.apple.com/support/ipod.

Listening to music from your external device

This unit can be used to play music from many types of external device.
(Refer to the page 8)

1. Connect the external device to the PORT. IN connector of the unit.
2. Turn the power on by pressing **⏻/I (Power)**.
3. Select the PORTABLE function by pressing **FUNC.** on the unit or **FUNCTION** on the remote control.
4. Turn the external device and start it playing.

Recording to USB

1. Connect the USB device to the unit.
2. Select a function by pressing **FUNC.** on the unit or **FUNCTION** on the remote control.

One track recording - You can record to USB after playing a file you want.

All tracks recording - You can record to USB after stop.

Program list recording - After showing the programmed list, you can record it to USB.

3. Start the recording by pressing **REC.** on the unit or **● REC** on the remote control.
4. To stop recording, press **■** on the remote control or **□** on the unit.

Pausing recording

During recording, press **REC.** on the unit or **● REC** on the remote control to pause recording. Press it again to restart recording. (Only Radio, Portable)

To select recording bit rate and speed

1. Press **REC.** on the unit or **● REC** on the remote control for longer than 3 seconds.
2. Use **|<</>>|** on the unit or **⏪⏪⏪/⏩⏩⏩** or remote control to select the bit rate.
3. Press **REC.** on the unit or **● REC** on the remote control again to select the recording speed.
4. Press **|<</>>|** on the unit or **⏪⏪⏪/⏩⏩⏩** on the remote control to select a desired recording speed; (Only AUDIO CD)

X1 SPEED

- You can listen to music while recording it.




X2 SPEED

- You can just record the music file.

5. Press **REC.** on the unit or **● REC** on the remote control to finish the setting.
6. To stop recording, press **□** on the unit or **■** on the remote control.

Note

- You can check the recording percentage rate for the USB record on the display window during the recording. (MP3/WMA CD Only)
- During recording MP3/WMA, there is no sound.
- When you stop recording during playback, the file that has been recorded at that time will be stored. (AUDIO CD Only)
- Do not remove the USB device or turn off the unit during USB recording. If not, an incomplete file may be made and not deleted on PC.
- If USB recording does not work, the message like "NO USB", "ERROR", "FULL" or "NO REC" is displayed on the display window.
- Multi card reader device or External HDD can not be used for USB recording.
- A file is recorded by about 512 Mbyte when you record for a long term.
- When you stop recording during playback, the file will not be stored.
- You may not store more than 999 files.
- It'll be stored as follows.

AUDIO CD	MP3/WMA	The other source*
 CD_REC TRK_001 TRK_002 : : :	 FILE_REC ABC(File name) DEF(File name) : : :	 EXT_REC AUDIO_001 AUDIO_002 : : :

* : TUNER, PORTABLE and the like.
 * The DAB function does not support recording function.

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

**Be responsible
 Respect copyrights**

Troubleshooting

Problem	Cause & Correction
No Power.	<ul style="list-style-type: none"> • The power cord is not plugged in. Plug in the power cord. • Check whether electricity failed. Check the condition by operating other electronic devices.
No sound.	<ul style="list-style-type: none"> • Check whether you select right function. Press FUNCTION and check the selected function. • Speaker cables are not connect correctly. Connect the speaker cables correctly. • The volume is set to minimum. Use the volume controller to adjust the volume.
The unit does not start playback.	<ul style="list-style-type: none"> • An unplayable disc is inserted. Insert a playable disc. • No disc is inserted. Insert a disc. • The disc is dirty. Clean the disc. (Refer to the page 17) • The disc is inserted upside down. Place the disc with the label or printed side facing upwards.
Radio stations cannot be tuned in properly.	<ul style="list-style-type: none"> • The antenna is positioned poorly. Adjust its position. • The signal strength of the radio station is too weak. Tune to the station manually. • No stations have been preset or preset stations have been cleared (when tuning by scanning preset channels). Preset some radio stations, see page 10 for details.
The remote control does not work properly.	<ul style="list-style-type: none"> • The remote control is not pointed at the remote sensor of the unit. Point the remote control at the remote sensor of the unit. • The remote control is too far from the unit. Operate the remote control within about 16 ft (5 m). • There is an obstacle in the path of the remote control and the unit. Remove the obstacle. • The battery in the remote control is exhausted. Replace the battery with new one.
iPod does not work.	<ul style="list-style-type: none"> • Check whether the player is connected to the unit correctly. Connect it to the unit correctly.





Specifications

General	
Power supply	100 - 240 V ~ 50 - 60 Hz or 200 - 240 ~ 50/60Hz
Power consumption	20 W
Net Weight	2.0 kg
External dimensions (W x H x D)	164 x 209 x 201 mm
Operating conditions Temperature	5 °C to 35 °C (41 °F to 95 °F)
Operating humidity	5 % to 85 %

Tuner	
FM Tuning Range	87.5 to 108.0 MHz or 87.50 to 108.00 MHz

Amplifier	
Output Power	5 W + 5 W

CD	
Frequency Response	40 Hz to 20 kHz
Signal-to-noise ratio	70 dB
Dynamic range	55 dB

USB	
USB Version	USB 2.0 or USB 1.1
Bus Power Supply	DC 5 V  500 mA iPod DC 5 V  1 A

Speakers	
Type	1 Way 1 Speaker
Impedance	6 Ω
Rated Input Power	5 W
Max. Input Power	10 W
Net Dimensions (WxHxD)	140 x 206 x 148 mm
Net Weight(1EA)	1.3 kg

- Design and specifications are subject to change without notice.

Maintenance

Handling the Unit

When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

Keeping the exterior surfaces clean

Do not use volatile liquids such as insecticide spray near the unit.

Wiping with strong pressure may damage the surface.

Do not leave rubber or plastic products in contact with the unit for a long period of time.

Cleaning the unit

To clean the player, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzene, or thinner, as these might damage the surface of the unit.

Maintaining the Unit

The unit is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality could be diminished. For details, please contact your nearest authorized service centre.

Notes on Discs

Handling Discs

Never stick paper or tape on the disc.

Storing Discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

Cleaning Discs

Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.

Trademarks and Licenses



iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

iPhone is a trademark of Apple Inc. "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with iPod, iPhone may affect wireless performance.



The 'DAB Digital Radio' logo and the stylised 'r' mark® and © Digital One Ltd."

