



ENGLISH

MAGYAR

ČEŠTINA

HRVATSKI

SRPSKI

SLOVENČINA

БЪЛГАРСКИ

МАКЕДОНСКИ

POLSKI

ROMÂNĂ

OWNER'S MANUAL Micro Hi-Fi System

Please read this manual carefully before operating your set and retain it for future reference.

TA106 (TA106, TAS106F)



MF167323215

Safety Information



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's

enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.



CAUTION: This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center. Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM.

CAUTION concerning the Power Cord

Most appliances recommend they be placed upon a dedicated circuit;

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Disposal of your old appliance



1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



LG Electronics hereby declares that this/ these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC, 2006/95/EC, and 2009/125/EC.

European representative :

LG Electronics Service Europe B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands (Tel : +31-(0)36-547-8888)

You have to set the disc format option to [Mastered] in order to make the discs compatible with the LG players when formatting rewritable discs. When setting the option to Live File System, you cannot use it on LG players.

(Mastered/ Live File System : Disc format system for Windows Vista)

Table of Contents

1 Getting Started

- 2 Safety Information
- 6 Unique Features
- 6 Accessories
- 6 Playable file Requirement
 - 6 – MP3/ WMA music file requirement
 - 6 – Compatible USB Devices
 - 6 – USB device requirement
- 7 Remote control
- 8 Front panel
- 9 Rear panel

2 Connecting

- 10 Connecting to speakers
 - 10 – Attaching the speakers to the unit
- 10 System cable Connection
- 11 Optional Equipment Connection
 - 11 – PORT. IN Connection
 - 11 – Video Connection
 - 11 – AUX IN Connection
- 12 – USB Connection
- 12 – Antenna Connection

3 Operating

- 13 Basic Operations
 - 13 – CD/ USB Operations
- 13 Other Operations
 - 13 – Programmed Playback
 - 13 – Displaying file information (ID3 TAG)
 - 13 – Turn off the sound temporarily
- 14 Radio Operations
 - 14 – Listening to the radio
 - 14 – Presetting the Radio Stations
 - 14 – Deleting all the saved stations
 - 14 – Improving poor FM reception
 - 14 – Seeing information about a Radio station
- 15 Sound adjustment
 - 15 – Setting the surround mode
 - 15 – Adjusting the sound
- 16 Setting the Clock
 - 16 – Using your player as an alarm clock
- 17 – Sleep Timer Setting
- 17 – Dimmer
- 17 Advanced Operations
 - 17 – Playing the iPod
 - 18 – Compatible iPod
 - 18 – Listening to music from your external device
 - 19 – Recording to USB
 - 19 – Pausing recording
 - 19 – To select recording bit rate and speed

4 Troubleshooting

- 20 Troubleshooting
- 20 – General

5 Appendix

- 21 Trademarks and Licenses
- 22 Specifications
- 23 Maintenance
- 23 – Notes on Discs
- 23 – Handling the Unit

1

2

3

4

5

Unique Features

USB Direct Recording

Records music to your USB device.

Portable In

 
Listens to music from your portable device. (MP3, Notebook, etc)

Accessories


Please check and identify the supplied accessories.




FM Antenna (1)

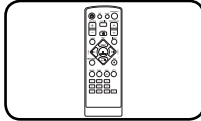


Remote Control (1)

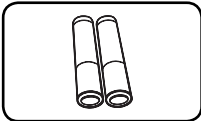 


Batteries (2)

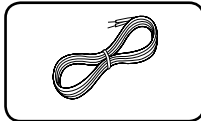 

Speaker Cables (2)

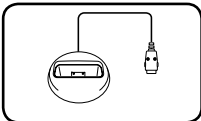 

iPod Cradle (1)

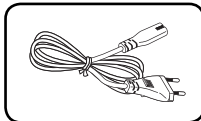 

AC power cable (1)

Playable file Requirement

MP3/ WMA music file requirement

MP3/ WMA file compatibility with this unit is limited as follows :

- Sampling frequency : within 32 to 48 kHz (MP3), within 32 to 48 kHz (WMA)
- Bit rate : within 32 to 320 kbps (MP3), 40 to 192 kbps (WMA)
- Maximum files : Under 999
- File extensions : ".mp3"/ ".wma"
- CD-ROM file format : ISO9660/JOLIET
- We recommend that you use Easy-CD Creator, which creates an ISO 9660 file system.

 
Compatible USB Devices

- MP3 Player : Flash type MP3 player.
- USB Flash Drive :
Devices that support USB2.0 or USB1.1.
- The USB function of this unit does not support all USB devices.


USB device requirement

- Devices which require additional program installation when you have connected it to a computer, are not supported.
- Do not extract the USB device while in operation.
- For a large capacity USB, it may take longer than a few minute to be searched.
- To prevent data loss, back up all data.
- If you use a USB extension cable or USB hub, the USB device is not recognized.
- Using NTFS file system is not supported. (Only FAT(16/ 32) file system is supported.)
- This unit is not supported when the total number of files is 1 000 or more.
- External HDD, Card readers, Locked devices, or hard type USB devices are not supported.
- USB port of the unit cannot be connected to PC. The unit cannot be used as a storage device.

Remote control

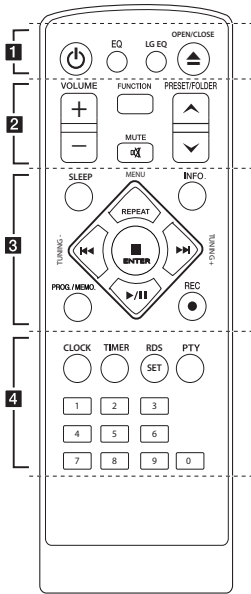

Battery Installation

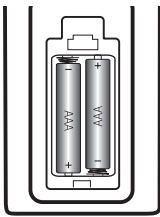 

Remove the battery cover on the rear of the Remote Control, and insert two (size AAA) batteries with $+$ and $-$ matched correctly.

..... **1**
⏻ (POWER): Switches the unit ON or OFF.

EQ: Chooses sound impressions.

LG EQ: Selects a Natural or Local Specialization equalizer effect by using LG EQ.

▲ OPEN/CLOSE: Opens and closes the disc tray.

..... **2**
VOLUME +/-: Adjusts speaker volume.

FUNCTION: Selects the function and input source.

PRESET/FOLDER ▲/▼: Searches for a folder of MP3/ WMA files. When a CD/ USB containing MP3/ WMA files in several folders is being played, press **PRESET/ FOLDER ▲/▼** selects to the folder you want to play. Choose a 'preset number' for a radio station.

⏻ MUTE: Mutes the sound.

..... **3**
SLEEP: Sets the system to turn off automatically at a specified time. (Dimmer : The display window will be darken by half)

INFO.: Checks information about your music. MP3 files often come with tags. The tag gives the Title, Artist, Album or Time information.

REPEAT/MENU :

- Listens to your tracks repeatedly or randomly. (only in CD/USB)
- Move to the desired item.

TUNING +/-: Selects the radio station.

⏮/⏭ (Skip/Search):

- Skips Fast backward or Forward.
- Searches for a section within a track.

■ ENTER: Stops playback or recording.

▶/⏸ (Play/Pause): Starts or pauses playback.

PROG./MEMO.:

- For storing radio stations if you have saved radio stations using **PROG./MEMO.**, you can scroll through them and select one.

- Listens to your tracks in any order.

● REC: USB direct recording.

..... **4**
CLOCK: For setting the clock and checking the time.

 
TIMER: With the TIMER function you can turn USB, CD play and TUNER reception on or off at a desired time.

SET/RDS: Confirms the setting/ RDS (Radio Data System). (Refer to page 14)

PTY: Searches radio stations by radio type.

0-9 numerical buttons: Selects numbered tracks, files, or preset number.

Front panel

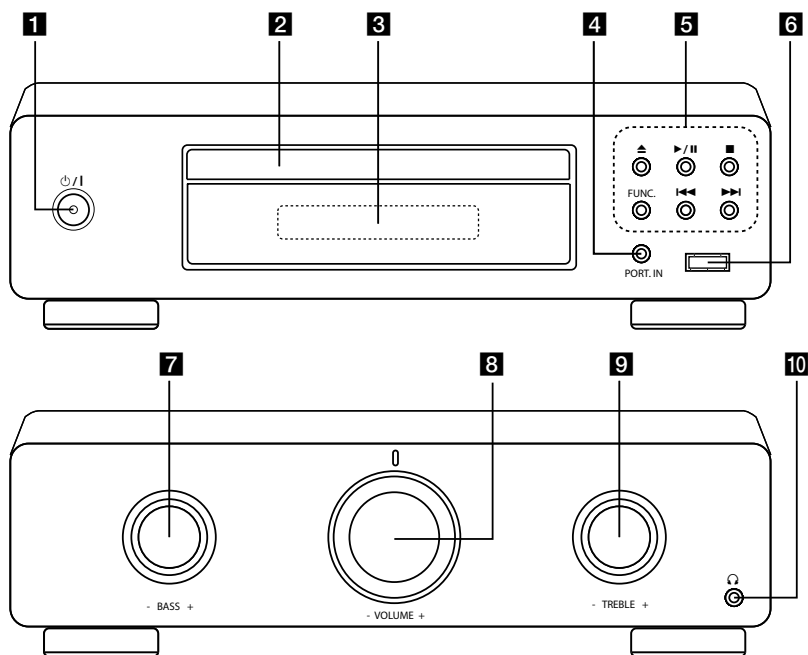

1 (POWER)

Switches the unit ON or OFF.

2 **Disc tray**

3 **Display window**

Shows the current status of the unit.

4 **PORT. IN**

Connects to a portable player with audio outputs.

5 (OPEN/CLOSE)

Opens or closes the disc tray.

(PLAY / PAUSE)

Starts playback.

Pauses playback temporarily, press again to exit pause mode.

(STOP)

Stops playback.

FUNC. (FUNCTION)

Changes the input source or function.

(Skip/Search):

Goes to next or previous file/track.

Searches backward or forward (Press and hold)

Tunes in the desired radio station.

6 **USB Port**

Connects an USB device.

7 **BASS -/+**

8 **VOLUME -/+**

 
Adjusts speaker volume.

9 **TREBLE -/+**

10

Headphone jack

Rear panel

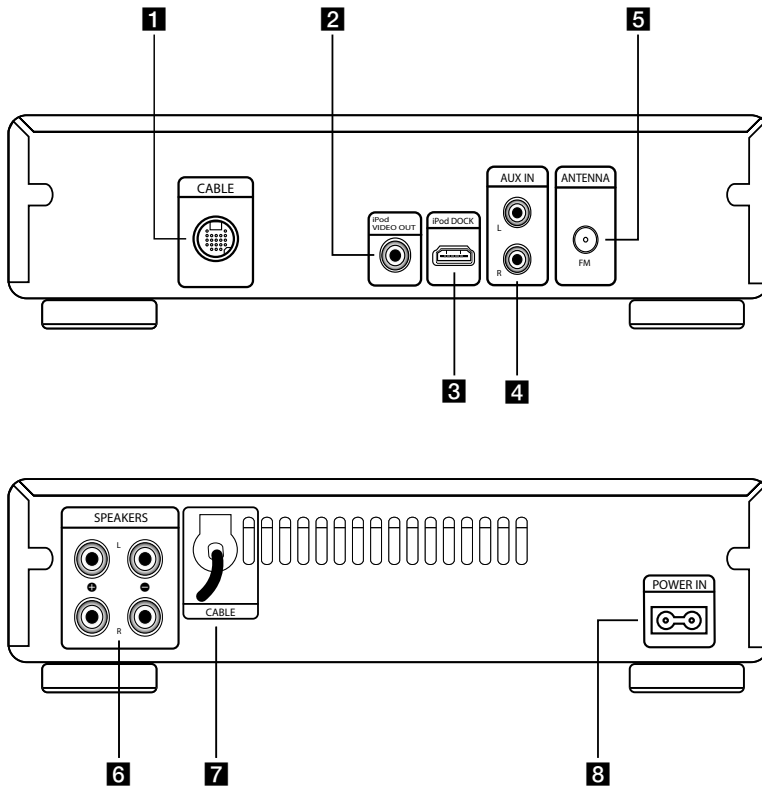

1 CABLE

2 iPod VIDEO OUT

3 iPod DOCK

Connect to the furnished iPod cradle.

4 AUX IN

5 ANTENNA (FM)

6 SPEAKERS

Connects the speaker cables.

7 CABLE

 
8 POWER IN

Connecting to speakers

Attaching the speakers to the unit

1. Loosen the knob by turning it counterclockwise.
2. Insert the bare part of the wire into the hole in side of each terminal.
3. Tighten the knob by turning it clockwise to secure the wire.

Connect the red stripe of each wire to the terminals marked + (plus) and the other end to the terminals marked - (minus).

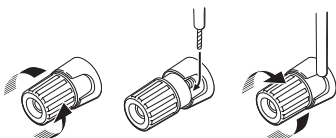


Caution

The speakers contain magnet parts, so color irregularity may occur on the TV screen or PC monitor screen. Please use the speakers far away from either TV screen or PC monitor.

System cable Connection

 
Your unit consists of two separate parts, CD player and an integrated Tuner/Amplifier. Before you can use your unit, the separate parts must be connected with the system connection cable.

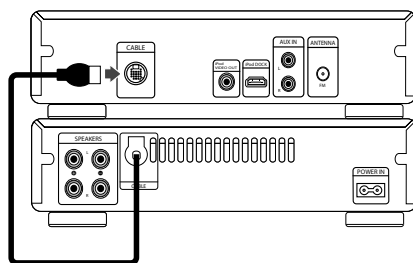

Optional Equipment Connection

PORT. IN Connection

 
Connect an output of portable device (MP3 or PMP etc) to the PORT. IN input connector. The portable cable is not supplied as an accessory.

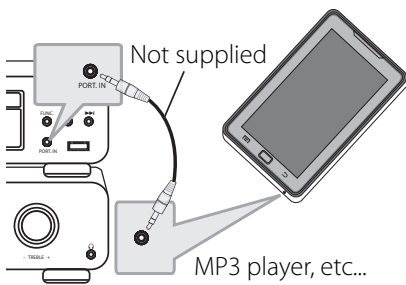

Video Connection

Connect the iPod VIDEO OUT jack on the unit to the video in jack on the TV using a video cable.

 You can hear the sound through the system's speakers.

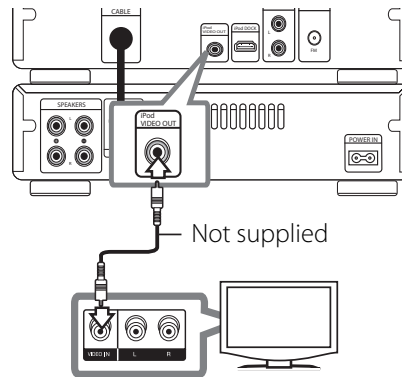


2

Connecting

AUX IN Connection

 Connect an Output of auxiliary device to the AUX (L/R) INPUT Connector.

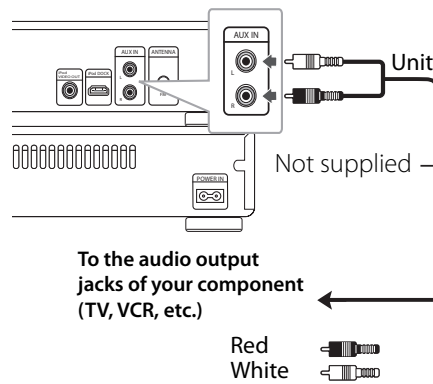


! Note

If your TV has only one output for audio (mono), connect it to the left (white) audio jack on the unit.

USB Connection

 Connect the USB port of USB Memory (or MP3 player, etc.) to the USB port on the front of the unit.

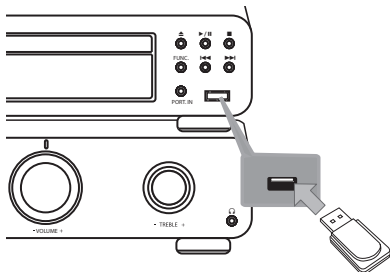


! Note

- Removing the USB Device from the unit
 1. Choose a different function/ mode or press **ENTER** twice in a row.
 2. Remove the USB device from the unit
- You can only recharge your iPod through USB port. To listen to music on iPod, refer to the page 17.

Antenna Connection

 Connect the FM antenna for listening to the radio. Connect the FM Wire antenna to the FM antenna connector.

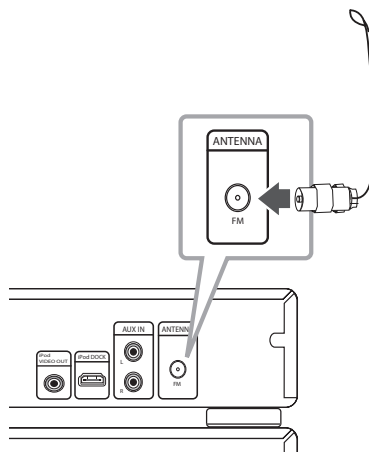

! Note

After connecting, stretch the opposite side of the cable to any direction where it is able to receive incoming radio broadcast from outside. There may be a various way of stretching it.

Basic Operations

CD/ USB Operations

1. Insert the disc by pressing **▲** (OPEN/CLOSE) or connect the USB device to the USB port.
2. Select the CD or USB function by pressing **FUNCTION** on the remote control or **FUNC.** on the unit.
3. Select a file (or track) you want to play by pressing **◀◀/▶▶**.

To	Do this
Stop	Press ■ .
Playback	Press ▶/II .
Pause	Press ▶/II .
Skipping to the next/ previous track/ file	During playback, press ◀◀/▶▶ to go to the next track/ file or to return to the beginning of the current track/ file. Press ◀◀ twice briefly to step back to the previous track/ file.
Searching for a section within a track	Press and hold ◀◀/▶▶ during playback and release it at the point you want to listen to.
Searching for a section within a folder	Press PRESET/FOLDER ▲/▼ and then ▶/II .
Playing repeatedly or randomly	Press REPEAT/MENU on the remote control repeatedly, the display change in the following order: OFF -> REPEAT TRK -> REPEAT DIR (Only MP3/WMA files) -> REPEAT ALL -> RANDOM

Other Operations

Programmed Playback

The program function enables you to store your favorite files from any disc or USB device.

A program can contain 20 tracks.

1. Insert a CD or USB and wait for it to be order.
2. Press **PROG./MEMO.** on the remote control in stop status.
3. Press **◀◀/▶▶** on the unit or on the remote control in stop status.
4. Press **PROG./MEMO.** again to save and select a next track.
5. Press **▶/II** to play the programmed music files.
6. To clear your selection, press **■ ENTER**, **PROG./MEMO.** and then **■ ENTER**.

Note

The programs are also cleared when the disc or USB device is removed, the unit is powered off or the function is switched to others.

Displaying file information (ID3 TAG)

While playing an MP3 file containing file information, you can display the information by pressing **INFO.**

Turn off the sound temporarily

Press **⏸ MUTE** to mute your unit.

You can mute your unit, for example, to answer the telephone, the "MUTE" is displayed in the display window.

Radio Operations

Be sure that FM aerial is connected.
(Refer to the page 12)

Listening to the radio

1. Press **FUNCTION** until FM appears in the display window.
The last received station is tuned in.
2. Press and hold **TUNING -/+** for about two seconds until the frequency indication starts to change, then release. Scanning stops when the unit tunes in a station.

Or

- Press **TUNING -/+** repeatedly.
3. Adjust the volume by rotating **VOLUME +/-** on the unit or by pressing **VOLUME +/-** on the remote control repeatedly.

Presetting the Radio Stations

You can preset 50 stations for FM.

Before tuning, make sure to turn down the volume.

1. Press **FUNCTION** until FM appears in the display window.
2. Select the desired frequency by pressing **TUNING -/+**.
3. Press **PROG./MEMO**. a preset number will flash in the display window.
4. Press **PRESET/FOLDER ^ / V** to select the preset number you want.
5. Press **PROG./MEMO**. The station is stored.
6. Repeat steps 2 to 5 to store other stations.
7. To listen a preset station, press **PRESET/FOLDER ^ / V**.

Deleting all the saved stations

1. Press and hold **PROG./MEMO**. for two seconds. "ERASE ALL" will flash up on the unit display.
2. Press **PROG./MEMO**. to erase all saved radio stations.

Improving poor FM reception

Press **►/II** on the unit or **►/II** on the remote control. This will change the tuner from stereo to mono and usually improve the reception.

Seeing information about a Radio station

The FM tuner is supplied with the RDS (Radio Data System) facility. This shows information about the radio station being listened to. Press **SET/RDS** repeatedly to cycle through the various data types. :

PS (Programme Service Name)	The name of the channel will appear in the display.
PTY (Programme Type Recognition)	The programme type (e.g. Jazz or News) will appear in the display.
RT (Radio Text)	A text message contains special information from the broadcast station. This text may scroll across the display.
CT (Time controlled by the channel)	This shows the time and date as broadcast by the station.

You can search the radio stations by programme type by pressing **SET/RDS**. The display will show the last PTY in use. Press **PTY** one or more times to select your preferred programme type. Press and hold **◀◀/▶▶**. The tuner will search automatically. When a station is found the search will stop.

Sound adjustment

Adjusting the sound

You can adjust the BASS and TREBLE by rotating **BASS** or **TREBLE**.

Setting the surround mode

This system has a number of pre-set surround sound fields. You can select a desired sound mode by using **EQ** on the remote control.

The displayed items for the Equalizer may be different depending on sound sources and regions.

On Display	Description
NATURAL	You can enjoy comfortable and natural sound.
Local Specialization equalizer	Regionally optimized sound effect. (FORRO/ FUNK/ SERTANEJO/ DANGDUT/ ARABIC/ PERSIAN/ INDIA/ REGUETON/ MERENGUE/ SALSA/ SAMBA/ CUMBIA/ AFRO)
AUTO EQ	Realizes the sound equalizer that is the most similar to the genre of which is included in the MP3 ID3 tag of song files.
POP CLASSIC JAZZ ROCK	This program lends an enthusiastic atmosphere to the sound, giving you the feeling you are at an actual rock, pop, jazz or classic concert.
MP3 -- OPT	This function is optimized for compressible MP3 file. It improves the treble sound.
BASS BLAST	Reinforces the treble, bass and surround sound effect.
VIRTUAL	You can enjoy more virtual surround sound.
BYPASS	You can enjoy the sound without equalizer effect.

Setting the Clock

1. Turn the unit on.
2. Press **CLOCK** for at least 2 seconds.
3. Choose time mode by pressing **◀◀/▶▶**.
 - AM 12:00 (for an AM and PM display) or 0:00 (for a 24 hour display)
4. Press **SET/RDS** to confirm your selection.
5. Select the hours by pressing **◀◀/▶▶**.
6. Press **SET/RDS**.
7. Select the minutes by pressing **◀◀/▶▶**.
8. Press **SET/RDS**.

3

Operating

Using your player as an alarm clock

1. Turn the unit on.
2. Press **TIMER**. Each functions flashes.
3. Press **SET/RDS** when the function you want to be woken by is showing.
4. "ON TIME" will be displayed. This is your desired time to unit turns on. Press **◀◀/▶▶** to change the hours and minutes and press **SET/RDS** to save.
5. The "OFF TIME" will be displayed. This is your desired time to unit turns off.
6. Press **◀◀/▶▶** to change the hours and minutes and press **SET/RDS** to save.
7. Press **◀◀/▶▶** to change the volume and press **SET/RDS** to save. The clock icon "🕒" shows that the alarm is set.
8. Press **TIMER** button 2 times. You can check the setting status.



Note

- If you set the clock time, you can check the time by pressing **CLOCK** even when the player is turned off.
- If you set the clock time and alarm, you can check the alarm icon "🕒" by pressing **CLOCK** even when the player is turned off.
- If you set the clock time and alarm, you can check the alarm icon "🕒" and setting information by pressing **TIMER** even when the unit is turned off. Then this function will working in everyday.

Sleep Timer Setting

Press **SLEEP** repeatedly to select delay time between 10 and 180 minutes. After the delay time, unit will turn off.

To cancel the sleep function, press **SLEEP** repeatedly until "SLEEP 10" appears, and then press **SLEEP** once again while "SLEEP 10" is displayed.

! Note

- You can check the remaining time before the unit turns off.
- Press **SLEEP**. The remaining time appears in the display window.
- Sleep function will be working after dimmer.

Dimmer

 
Press **SLEEP** once. The display window will be darkening by half. To cancel it, press **SLEEP** repeatedly until dim off.

Advanced Operations

Playing the iPod

You can enjoy the sound with your iPod. For details about iPod, refer to the iPod User Guide.

1. Connect the iPod cradle.
2. Connect the iPod firmly.

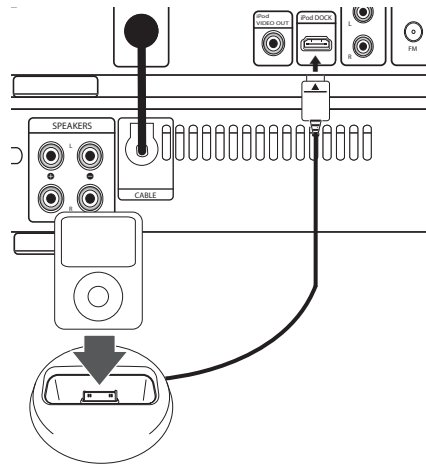

3

Operating

If you turn this unit on, your iPod is automatically turned on and recharging starts.

3. Press **FUNC.** on the unit or **FUNCTION** on the remote control to select iPod function. You can operate your iPod through an iPod's display by using the supplied remote control and also control on your iPod.

! Note

- With iPod cradle connected to iPod DCK, you can also connect VIDEO cable to iPod VIDEO OUT (Refer to page 11).
- You can control through both the TV and iPod or iPhone in order to play music files, and watch movie clips, and look at the pictures which are saved to iPod or iPhone.
- Depending on the iPod, make sure that select Videos > Video settings, and then set TV Out to Ask or On from your iPod. For details about Video Settings, refer to the iPod User Guide.

To	Do this	
	ON UNIT	ON REMOTE
Pauses or restart	▶/II	▶/II
Skip	⏮/⏭	⏮/⏭
Search	Press and hold ⏮/⏭	Press and hold ⏮/⏭
Move to the previous menu	-	REPEAT /MENU
Move to the desired item	-	PRESET/ FOLDER ^/V
Chooses a item	■	■ ENTER

Compatible iPod

- We recommend installing the latest software version.
- The unit supports the models as follows:
iPod nano 1 G, 2 G, 3 G, 4 G, 5 G, 6 G/
iPod classic/ iPod 5 G/
iPod touch 2 G, 3 G, 4 G/ iPhone 3 G, 3GS, 4.
For some models, the unit may not operate depending on the firmware version.
- Depending on your iPod's software version, you may not control your iPod from the player.

Note

- If this unit displays an error message, follow the message. An error message "ERROR".
 - Your iPod is not connected firmly.
 - This unit recognizes your iPod as an unknown device.
 - Your iPod is exceptionally low in power.
 - ➔ The battery needs to be charged.
 - ➔ If you charge the battery while iPod is extremely low in power, it may take longer to be charged.
- iPod does not support recording function when connected.
- Depending on your iPod's software version, it may not be possible to control your iPod from this unit. We recommend installing the latest software version.
- If you use an application, make a call, or send and receive SMS text message, etc. on iPod touch or iPhone, disconnect it from iPod dock of this unit and then use it.
- If you have a problem with your iPod, please visit www.apple.com/support/ipod.

Listening to music from your external device

The unit can be used to play the music from many types of external device. (Refer to the page 11)

1. Connect the external device to the PORT. IN connector of the unit.
Or
Connect the external device to the AUX IN connector of the unit.
2. Turn the power on by pressing **⏻/I** (POWER).
3. Select the PORTABLE function or AUX function by pressing **FUNC.** on the unit or **FUNCTION** on the remote control.
4. Turn the external device and start it playing.

Recording to USB

1. Connect the USB device to the unit.
2. Select a function by pressing **FUNC.** on the unit or **FUNCTION** on the remote control.

One track recording - You can record to USB after playing a file you want.

All tracks recording - You can record to USB after stop.

Program list recording - After showing the programmed list, you can record it to USB.

3. Start the recording by pressing or **REC** on the remote control.
4. To stop recording, press **■** on the unit or **ENTER** on the remote control.

Pausing recording

During recording, press **REC** on the remote control to pause recording. Press it again to restart recording. (Only Radio/ Portable/ AUX)

To select recording bit rate and speed

1. Press **REC** on the remote control for longer than 3 seconds.
2. Use **◀▶** on the unit or remote control to select the bit rate.
3. Press **REC** on the remote control again to select the recording speed.
4. Press **◀▶** on the unit or on the remote control to select a desired recording speed; (Only AUDIO CD)

X1 SPEED

- You can listen to music while recording it.

X2 SPEED

- You can just record the music file.

5. Press **REC** on the remote control to finish the setting.

Note

- You can check the recording percentage rate for the USB record on the display window during the recording. (MP3/ WMA CD Only)
- During recording MP3/ WMA, there is no sound.
- When you stop recording during playback, the file that has been recorded at that time will be stored. (AUDIO CD Only)
- Do not remove the USB device or turn off the unit during USB recording. If not, an incomplete file may be made and not deleted on PC.
- If USB recording does not work, the message like "NO USB", "ERROR", "FULL" or "NO REC" is displayed on the display window.
- Multi card reader device or External HDD can not be used for USB recording.
- A file is recorded by about 512 Mbyte when you record for a long term.
- When you stop recording during playback, the file will not be stored.
- You may not store more than 999 files.
- It'll be stored as follows.

AUDIO CD	MP3/ WMA	The other source*
CD_REC TRK_001 TRK_002 : : :	FILE_REC ABC(File name) DEF(File name) : : :	EXT_REC AUDIO_001 AUDIO_002 : : :

* : TUNER, Portable and the like.

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

**Be responsible
Respect copyrights**

Troubleshooting

General

Problem	Cause & Correction
No Power.	<ul style="list-style-type: none"> The power cord is not plugged in. Plug in the power cord. Check whether electricity failed. Check the condition by operating other electronic devices.
No sound.	<ul style="list-style-type: none"> Check whether you select right function. Press FUNCTION and check the selected function. If not, connect speaker cables correctly. Speaker cables connected correctly.
The unit does not start playback.	<ul style="list-style-type: none"> An unplayable disc is inserted. Insert a playable disc. No disc is inserted. Insert a disc. The disc is dirty. Clean the disc. (Refer to the 23 page) The disc is inserted upside down. Place the disc with the label or printed side facing upwards.
Radio stations cannot be tuned in properly.	<ul style="list-style-type: none"> The antenna is positioned or connected poorly. Connect the antenna securely. The signal strength of the radio station is too weak. Tune to the station manually. No stations have been preset or preset stations have been cleared (when tuning by scanning preset channels). Preset some radio stations, see page 14 for details.
The remote control does not work properly.	<ul style="list-style-type: none"> The remote control is too far from the unit. Operate the remote control within about 23 ft (7 m). There is an obstacle in the path of the remote control and the unit. Remove the obstacle. The batteries in the remote control are exhausted. Replace the batteries with new ones.
iPod does not work.	<ul style="list-style-type: none"> Check whether the player is connected to the unit correctly. Connect it to the unit correctly.

Trademarks and Licenses



iPod is a trademark of Apple Inc., registered in the U.S. and other countries.


 
iPhone is a trademark of Apple Inc. "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with iPod, iPhone may affect wireless performance.



Specifications

General	
Power requirements	Refer to the main label.
Power consumption	Refer to the main label.
Dimensions (W x H x D)	240 X 136 X 240 mm
Net Weight (Approx.)	2.9 kg
Operating temperature	5 °C to 35 °C (41 °F to 95 °F)
Operating humidity	5 % to 90 %
Bus Power Supply	USB DC 5 V  500 mA iPod DC 5 V  1 A

Inputs/ Outputs	
PORT. IN	0.5 Vrms (3.5 mm stereo jack)
ANALOG AUDIO IN	0.6 Vrms (1 kHz), 600 Ω, RCA jack (L, R) x 1
iPod VIDEO OUT	1.0 V (p-p), 75 Ω, sync negative, RCA jack x 1

Tuner	
FM Tuning Range	87.5 to 108.0 MHz or 87.50 to 108.00 MHz

Amplifier	
Stereo mode	50 W + 50 W

CD	
Frequency Response	40 Hz to 20 kHz
Signal-to-noise ratio	75 dB
Dynamic range	more than 80 dB

Front Speaker	
Type	2 Way 2 speaker
Impedance Rated	8 Ω
Input Power	50 W
Max. Input Power	100 W
Net Dimensions (W x H x D)	160 X 266 X 206 mm
Net Weight	2.15 kg

- Design and specifications are subject to change without notice.

Maintenance

Notes on Discs

Handling Discs

Never stick paper or tape on the disc.

Storing Discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

Cleaning Discs

Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.

Handling the Unit

When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

Keeping the exterior surfaces clean

Do not use volatile liquids such as insecticide spray near the unit.

Wiping with strong pressure may damage the surface.

Do not leave rubber or plastic products in contact with the unit for a long period of time.

Cleaning the unit

To clean the player, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzene, or thinner, as these might damage the surface of the unit.

Maintaining the Unit

The unit is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality could be diminished. For details, please contact your nearest authorized service center.

