



ENGLISH

ESPAÑOL

ITALIANO

OWNER'S MANUAL

DVD Player with Digital Tuner

Please read this manual carefully before operating your set and retain it for future reference.

DP829H



MFL67441135

Safety Information



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.



CAUTION: This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center. Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure.

CAUTION concerning the Power Cord

Most appliances recommend they be placed upon a dedicated circuit;

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Notes on Copyrights

- This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited.
- Under the U.S. Copyright laws and Copyright laws of other countries, unauthorized recording, use, display, distribution, or revision of television programs, videotapes, DVDs, CDs and other materials may subject you to civil and/or criminal liability.

Disposal of your old appliance



1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Disposal of waste batteries/ accumulators



1. When this crossed-out wheeled bin symbol is attached to batteries/ accumulators of Your product it means they are covered by European Directive 2006/66/EC.
2. This symbol may be combined with chemical symbols for mercury(Hg), cadmium(Cd) or lead(Pb) if the battery Contains more that 0.0005% of mercury,0.002% of cadmium or 0.004% of lead.
3. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
4. The correct disposal of Your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health.
5. For more detailed information about disposal of Your old batteries/ accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product.

CE LG Electronics hereby declares that this/ these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC, 2006/95/EC and 2009/125/EC.

European Standards Centre:

Krijgsman 1, 1186 DM Amstelveen The Netherlands

- Please note that this is NOT a Customer Service contact point. For Customer Service Information, see Warranty Card or contact the dealer that you purchased this product.

Notes on Discs

- Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints do not get on the surface. Never stick paper or tape on the disc.
- After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

Notes on the Unit

- Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.
- To clean the unit, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.
- The unit is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality could be diminished. For details, please contact your nearest authorized service center.

Table of Contents

1 Getting Started

- 2 Safety Information
- 6 Introduction
 - 6 – About the “Ø” Symbol Display
 - 6 – Symbols Used in this Manual
 - 6 – Supplied Accessories
 - 6 – Playable Discs
 - 6 – Regional Code
- 7 – File compatibility
- 8 Remote control
- 9 Front panel
- 9 Rear panel

2 Connecting

- 10 Connecting to your TV
 - 10 – Connecting antenna
 - 10 – Connecting Video / Audio cable
 - 10 – Connecting SCART cable
 - 11 – Connecting Component Video cable
 - 11 – Connecting HDMI cable
 - 11 – Resolution Setting
- 12 Connecting to an Amplifier
 - 12 – Connecting Audio cable
 - 12 – Connecting COAXIAL (digital audio) cable
 - 12 – Connecting HDMI cable
- 13 – General about digital broadcast

3 System Setting

- 14 Settings
 - 14 – Adjust the Setup Settings
 - 14 – [LANGUAGE] Menu
 - 14 – [DISPLAY] Menu
 - 15 – [AUDIO] Menu
 - 15 – [LOCK] Menu
 - 15 – [OTHERS] Menu
 - 16 DVB-T or DAB settings
 - 16 – Adjust the DVB-T or DAB Settings
 - 16 – [TV] Menu
 - 17 – [TIME] Menu

- 17 – [LOCK] Menu
- 18 – [OTHERS] Menu
- 18 – Displaying the channel information
- 18 – Changing the Channel
- 18 – Changing the Channel with Channel list
- 19 The digital EPG
 - 19 – Using the digital EPG
 - 19 – About the digital EPG
 - 19 – Viewing a Teletext service
- 20 – Selecting teletext page
- 20 – Special Teletext Functions

4 Operating

- 21 General Playback
 - 21 – Selecting an operating mode
 - 21 – Playing a Disc
 - 21 – Playing a file
 - 21 – On-Screen display
- 22 – General operation
- 22 Advanced Playback
 - 22 – Movie
 - 23 – Music
 - 23 – Photo

5 Troubleshooting

- 24 Troubleshooting

6 Appendix

- 25 Area Code List
- 26 Language Code List
- 27 Specifications
- 27 Trademarks and Licenses

1

2

3

4

5

6






Introduction

About the “⊘” Symbol Display


“⊘” may appear on your TV display during operation and indicates that the function explained in this owner’s manual is not available on that specific media.

Symbols Used in this Manual


A section whose title has one of the following symbols are applicable only to the disc or file represented by the symbol.

	DVD-Video, DVD±R/RW
	Audio CDs
	Video files contained in the USB/Disc
	Audio files contained in the USB/Disc
	Photo files contained in the USB/Disc


Supplied Accessories

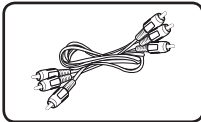


RCA Video/Audio cable (1)

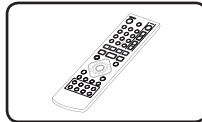

Remote control (1)

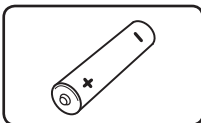



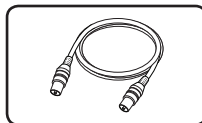


Battery (1)



RF Cable (1)

Playable Discs

	DVD-VIDEO (8 cm / 12 cm disc) - Discs such as movies that can be purchased or rented.
	DVD±R (8 cm / 12 cm disc) - Video mode and finalized only - Supports the dual layer disc also
	- DVD±R discs that contain Video, Audio or Photo files.
	DVD-RW (8 cm / 12 cm disc) - VR mode, Video mode and finalized only - DVD-RW discs that contain Video, Audio or Photo files.
	DVD+RW (8 cm / 12 cm disc) - Video mode and finalized only - DVD+RW discs that contain Video, Audio or Photo files.
	Audio CD (8 cm / 12 cm disc)
	CD-R/RW (8 cm / 12 cm disc) - CD-R/RW discs that contain audio titles, Video, Audio or Photo files.

Note

You have to set the disc format option to [Mastered] in order to make the discs compatible with the players when formatting rewritable discs. When setting the option to Live System, you cannot use it on player. (Mastered/Live File System: Disc format system for windows Vista)

Regional Code

This unit has a regional code printed on the rear of the unit. This unit can play only DVD discs labeled same as the rear of the unit or “ALL”.

File compatibility

Overall

Available File extensions: “.avi”, “.mpg”, “.mpeg”, “.mp3”, “.wma”, “.jpg”, “.jpeg”

- The file name is limited to 35 characters.
- Depending on the size and number of the files, it may take several minutes to read the contents on the media.

Maximum Files/Folder: Less than 600 (total number of files and folders)

CD-R/RW, DVD±R/RW Format: ISO 9660

Video Files

Available resolution size: 1280 x 720 (W x H) pixels

Playable subtitle: SubRip (.srt/.txt), SAMI (.smi), SubStation Alpha (.ssa/.txt), MicroDVD (.sub/.txt), VobSub (.Sub), SubViewer 2.0 (.sub/.txt), TMLayer (.txt), DVD Subtitle System (.txt),

Playable Codec format: “DIVX3.xx”, “DIVX4.xx”, “DIVX5.xx”, “XviD”, “MP43”, “3IVX”

Playable Audio format: “Dolby Digital”, “DTS” “PCM”, “MP3”, “WMA”

Sampling frequency: within 8 to 48 kHz (MP3), within 32 to 48 kHz (WMA)

Bit rate (MP3/WMA): within 8 to 320 kbps (MP3), within 32 to 192 kbps (WMA)

Bit rate (DivX):

less than 7.2 Mbps (CD-R/RW)

less than 9.7 Mbps (USB, DVD±R/RW)

! Note

This unit does not support files that are recorded with GMC^{*1} or Qpel^{*2}. Those are video encoding techniques in MPEG4 standard, like DivX have.

*1 GMC – Global Motion Compensation

*2 Qpel – Quarter pixel

Audio Files

Sampling frequency: within 8 to 48 kHz (MP3), within 32 to 48 kHz (WMA)

Bit rate: within 8 to 320 kbps (MP3), within 32 to 192 kbps (WMA)

Photo Files

Photo size: Less than 2M recommended.


- Progressive and lossless compression photo image files are not supported.

Notes of USB Device

- This unit supports USB device with FAT16 or FAT32 format.
- Do not extract the USB device during operation (play, etc.).
- A USB device which requires additional program installation when you have connected it to a computer, is not supported.
- USB device: USB device that supports USB1.1 and USB2.0.
- Movie, music and photo files can be played. For details of operations on each file, refer to relevant pages.
- Regular back up is recommended to prevent data loss.
- If you use a USB extension cable, USB HUB or USB Multi-reader, the USB device may not be recognized.
- Some USB device may not work with this unit.
- Digital camera and mobile phone are not supported.
- USB Port of the unit cannot be connected to PC. The unit cannot be used as a storage device.

Remote control

1
Getting Started

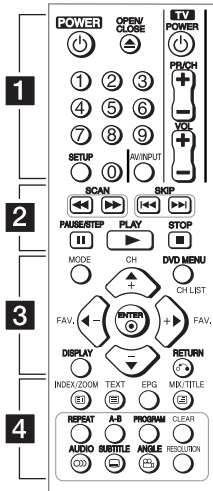

..... **1**

POWER (⏻): Switches the unit ON or OFF.

OPEN/CLOSE (⏮): Opens and closes the disc tray.

Numerical buttons: Selects numbered items in a menu.

SETUP: Accesses or exits the setup menu.

TV Control Buttons: Control the sound volume, channel, sources, and power On/Off on TV.

..... **2**

SCAN (◀▶): Searches backward or forward.

SKIP (◀◀▶▶): Goes to the next or previous chapter / track / file.

PAUSE/STEP (⏸): Pauses playback.

PLAY (▶): Starts playback.

STOP (■): Stops playback.

..... **3**

MODE: Switches a operation mode (DVB-T, DAB or Disc).

CH (+/-): Scans up or down through memorized channels in DVB-T or DAB mode.

DVD MENU: Accesses or exits the DVD menu.

CH LIST: Displays the channel list.

FAV. (+/-): Tunes to your favorite channels.

▲/▼/◀/▶: Navigates the menus.

ENTER (⊙): Confirms menu selection.

DISPLAY: Accesses or exits On-Screen Display.

RETURN (↶): Moves backward or exit the menu. Changes to the USB mode.

..... **4**

INDEX (≡) / **ZOOM:** Moves to Index screen or page 100 in the teletext mode. Enlarges video image in disc mode.

TEXT (≡): Switches between teletext mode and normal TV viewing.

EPG: Displays the EPG menu.

MIX (≡) / **TITLE:** Displays the teletext pages superimposed on the TV picture. Accesses the disc's title menu in disc mode, if available.

Color buttons: Use when tuned to a teletext program of a digital broadcast. The function of each button will be described on-screen, and changes depending on the screen being displayed.

REPEAT: Repeats a chapter, track, title or all.

A-B: Repeats a section.

PROGRAM: Enters the program edit mode.

CLEAR: Removes a track number on the Program List

AUDIO (⊕): Selects an audio language or audio channel.

SUBTITLE (⊕): Selects a subtitle language.

ANGLE (⊕): Selects a DVD camera angle, if available.

RESOLUTION: You can change the resolution depending on your TV.

Battery Installation


Remove the battery cover on the rear of the Remote Control, and insert a R03 (size AAA) battery with ⊕ and ⊖ matched correctly.

Code number to control TVs

While holding down TV POWER button, press the number buttons to select the Maker code for your TV (see the table below). Release TV POWER button.

Maker	Code Number
LG	1(Default), 2
Zenith	1, 3, 4
GoldStar	1, 2
Samsung	6, 7
Sony	8, 9
Hitachi	4


Front panel

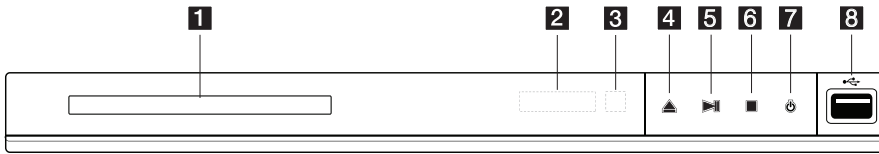

- | | |
|-------------------------|---------------------------|
| 1 Disc Tray | 5 ▶ (Play/Pause) |
| 2 Display window | 6 ■* (Stop) |
| 3 Remote sensor | 7 ⏻ (Power) |
| 4 ▲ (Open/Close) | 8 USB Port |

* **MODE**: Switches a operation mode (DVB-T, DAB or Disc)

Rear panel

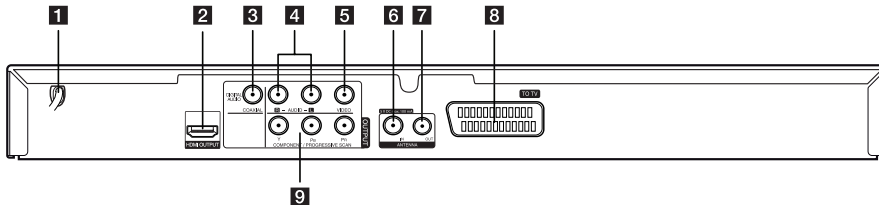

- | | |
|---|---|
| 1 AC power cord | 6 ANTENNA IN |
| 2 HDMI OUTPUT | 7 ANTENNA OUT |
| 3 DIGITAL AUDIO OUTPUT (COAXIAL) | 8 SCART (TO TV) |
| 4 AUDIO OUTPUT (Left/Right) | 9 COMPONENT / PROGRESSIVE SCAN
OUTPUT (Y Pb Pr) |
| 5 VIDEO OUTPUT | |

Connecting to your TV


Connecting antenna

Antenna connection

Connect the Terrestrial TV antenna to the ANTENNA IN jack on the unit. If you want to use an indoor antenna, use one with a signal amplifier rated at 5V, 100mA and set [Antenna Feed 5V] to [ON] in the setup menu. (See page 17)


Antenna connection to your TV

Connect one end of the RF cable to ANTENNA OUT jack on the unit and other end to ANTENNA IN jack on your TV. Passes the signal from the ANTENNA IN jack to your TV/monitor.

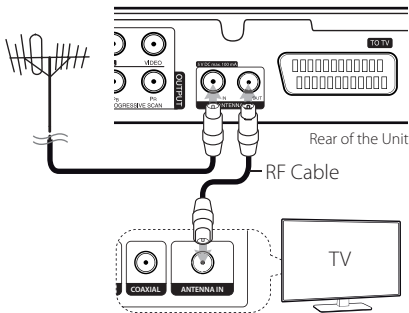

Connecting Video / Audio cable


Connect the VIDEO/AUDIO OUTPUT on the unit to VIDEO/AUDIO IN on TV with Video/Audio cable, such as VIDEO with yellow, AUDIO Left/Right with white/red.

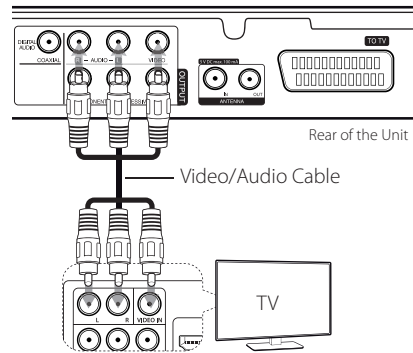

Connecting SCART cable

Connect the TO TV jack on the unit and your TV using the SCART cable.


For SCART connections, resolution must be set to 576i(480i) by pressing RESOLUTION button.

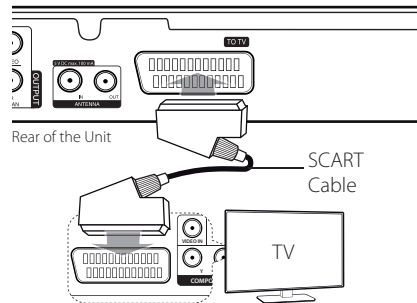

- You must set the [TV Output Select] option to [RGB] on the setup menu to use this connection.

Connecting Component Video cable


Connect the COMPONENT/PROGRESSIVE SCAN OUTPUT jacks on the unit to the corresponding input jacks on the TV using Component video cable, such as Y with green, P_B with blue, and P_R with red.

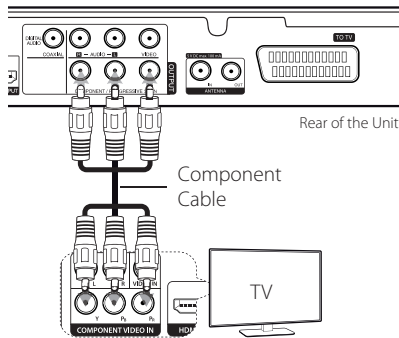

- You must set the [TV Output Select] option to [YPbPr] on the setup menu to use this connection.
- You should still connect the AUDIO cable between the unit and TV.

Connecting HDMI cable

Connect the HDMI OUTPUT on the unit to the HDMI IN on compatible TV with HDMI cable. (Type A, High Speed HDMI™ Cable)

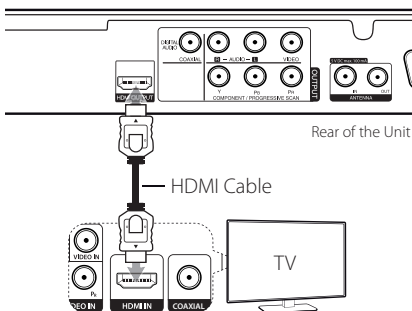

Additional Information for HDMI

- When you connect a HDMI or DVI compatible device, make sure of the following:
 - Try switching off the HDMI/DVI device and this unit. Next, switch on the HDMI/DVI device and leave it for around 30 seconds, then switch on this unit.
 - The connected device's video input is set correctly for this unit.
 - The connected device is compatible with 720x576i(480i), 720x576p(480p), 1280x720p, 1920x1080i or 1920x1080p video input.
 - The 1080p, 720p and 576p(480p) resolutions are the progressive scan applied resolution.
- Not all HDCP-compatible DVI devices will work with this unit.
- The picture will not be displayed properly with non-HDCP device.

Resolution Setting


You can change the resolution using RESOLUTION button.

- The unit is able to provide a 1080p full HD image to most 1080p-capable TVs in the market today. However, there are some 1080p TVs available from certain companies that are limited in the types of 1080p images that can be accepted. Specifically, 1080p-capable TVs that don't accept images in 60Hz can't display an image from this unit.
- For 720p, 1080p and 1080i resolution on the Component / progressive scan output, only non-copy protected discs can be played back. If the disc is copy protected, it will be displayed at the 576p(480p) resolution.
- Depending on your TV, some of the resolution settings may result in the picture disappearing or an abnormal picture appearing. In this case, press RESOLUTION repeatedly until the picture re-appears.

Connecting to an Amplifier


Connecting Audio cable

Connect the AUDIO OUTPUT on the unit to 2CH AUDIO IN on amplifier with Audio cable, such as AUDIO Left/Right with white/red.

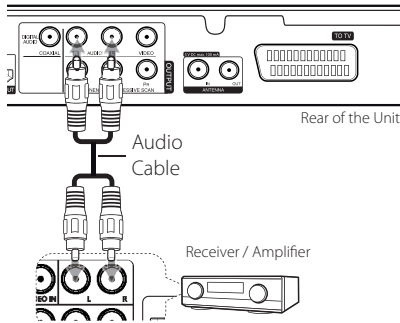

Connecting COAXIAL (digital audio) cable

Connect one of the unit's DIGITAL AUDIO OUTPUT (COAXIAL) jacks to the corresponding jack on your amplifier.

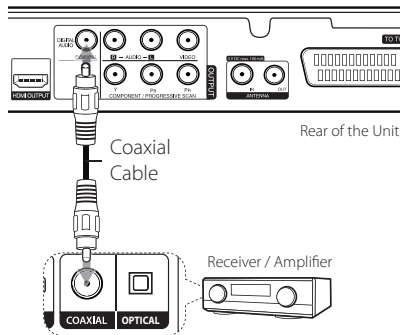

- If your TV is not capable of handling 96 kHz sampling frequency, set the [Sample Freq.] option to [48 kHz] on the setup menu.
- If your TV is not equipped with Dolby Digital and MPEG decoder, set the [Dolby Digital] and [MPEG] options to [PCM] on the setup menu.
- Changing the resolution when the unit is connected with HDMI connector may result in malfunctions. To solve the problem, turn off the unit and then turn it on again.

! Note


- If the audio format of the digital output does not match the capabilities of your amplifier, the amplifier will produce a strong, distorted sound or no sound at all.
- To see the audio format of the current disc in the on-screen display, press AUDIO.
- This unit does not perform internal (2 channel) decoding of a DTS sound track. To enjoy DTS multi channel surround, you must connect this unit to a DTS compatible amplifier via one of this unit's digital audio outputs.

Connecting HDMI cable

Connect the HDMI OUTPUT on the unit to the HDMI IN on amplifier with HDMI cable.

(Type A, High Speed HDMI™ Cable).

Connect the HDMI OUT jack on amplifier to HDMI IN jack on TV with HDMI cable, if the amplifier has HDMI OUTPUT jack.

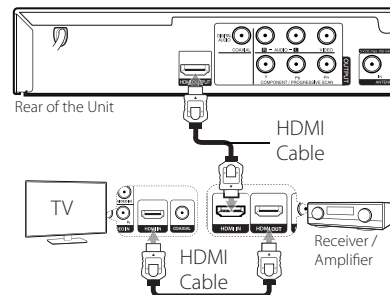

General about digital broadcast

Picture and sound

Digital TV is a transmission technology that replaces the traditional analogue technique.

This means that several TV channels, radio channels and other digital services can be transmitted on the same space as just one channel took up before. As a consumer you get access to many more channels and services than before at the same time as they are received with perfect picture and audio quality.

Coverage

Before buying this product it is anticipated that you have made sure that there are digital transmissions covering your region.

Antenna / Signal source

Depending on the reception your unit may be connected to a simple indoor antenna or to an existing outdoor antenna system. If you live in a flat you should make sure that the digital terrestrial signals are distributed to your wall antenna outlet. If you have your own antenna system you must make sure that it is equipped with antennas, filter and/or amplifier that can handle those frequencies that the digital channels are transmitted on.

Cable-TV

Please observe that this unit is not designed for the reception of regular digital cable-TV signals (QAM-signal). Despite this, operators of smaller cable networks may have chosen to distribute the digital terrestrial signals (COFDM-signal) in the network. In this case this unit may well be used. Check with your landlord if you are insecure about what type of TV-signal that is provided in the wall antenna outlet.

Settings

When the unit is turned-on at the first time, you have to select the desired language.

Adjust the Setup Settings

You can change the settings of the unit in the [Setup] menu.

1. Press SETUP.
2. Use ▲/▼ to select the first setup option, and press ► to move to the second level.
3. Use ▲/▼ to select a second setup option, and press ► to move to the third level.
4. Use ▲/▼ to select a desired setting, and press ENTER (⊙) to confirm your selection.

[LANGUAGE] Menu

Menu Language

Select a language for the Setup menu and on-screen display.

Disc Audio/Subtitle/Menu

Select a language for the Disc Audio/Subtitle/Menu.

[Original]: Refers to the original language in which the disc was recorded.

[Other]: To select another language, press number buttons then ENTER (⊙) to enter the corresponding 4-digit number according to the language code list. (See page 26) If you make a mistake while entering number, press CLEAR to delete numbers then correct it.

[Off](for Disc Subtitle): Turn off Subtitle.

[DISPLAY] Menu

TV Aspect

Select which screen aspect to use based on the shape of your TV screen.

[4:3]: Select when a standard 4:3 TV is connected.

[16:9]: Select when a 16:9 wide TV is connected.

Display Mode

If you selected 4:3, you'll need to define how you would like widescreen programs and films to be displayed on your TV screen.

[Letterbox]: This displays a widescreen picture with black bands at the top and bottom of the screen.

[Panscan]: This fills the entire 4:3 screen, cropping the picture as necessary.

TV Output Select

Select an option according to the TV connection type.

[RGB]: When your TV is connected with the TO TV (SCART) jack.

[YPbPr]: When your TV is connected with the COMPONENT/PROGRESSIVE SCAN OUTPUT jacks on the unit.

[AUDIO] Menu

Set the player's Audio options according to various disc output type you use.

Dolby Digital / DTS / MPEG

Select the type of digital audio signal to use the DIGITAL AUDIO OUTPUT jack.

[Bitstream]: Select to connect DIGITAL AUDIO OUTPUT jack to an amplifier with Dolby Digital, DTS or MPEG decoder.

[PCM] (for Dolby Digital / MPEG): Select to connect DIGITAL AUDIO OUTPUT jack to an amplifier without Dolby Digital or MPEG decoder.

[Off] (for DTS): Select to connect DIGITAL AUDIO OUTPUT jack to an amplifier without DTS decoder.

Sample Freq. (Frequency)

Selects the sampling frequency of the audio signal between [48kHz] and [96kHz].

DRC (Dynamic Range Control)

Make the sound clear when the volume is turned down (Dolby Digital only). Set to [On] for this effect.

Vocal

Set to [On] only when a multi-channel karaoke DVD is playing. The karaoke channels on the disc mix into normal stereo sound.

[LOCK] Menu

Firstly, you have to create the 4-digit password on [Area Code] to use the LOCK menu.

If you forget your password you can reset it. First, remove the disc in the unit. Display setup menu then input the 6-digit number "210499". The "P CLr" appear in the display window and the password is deleted.

Rating

Select a rating level. The lower the level, the stricter the rating. Select [Unlock] to deactivate the rating.

Password

Sets or changes the password for lock settings.

Area Code

To input the standardized area code referring the Area Code List on page 25.

[OTHERS] Menu

B.L.E (Black Level Expansion)

Select On or Off to expand the black level or not. It just operates when TV system is set to NTSC.

DivX(R) VOD

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DVB-T or DAB settings

When the first time to turn on the unit, the "First time installation" menu will appear. Select [YES] and press ENTER (⊙) for auto channel scanning. (see "Auto Scan" below for details)

Adjust the DVB-T or DAB Settings

1. Press MODE to select the DVB-T or DAB mode.
2. Press SETUP.
3. Use ▲/▼ to select the first setup option, and press ► to move to the second level.
4. Use ▲/▼ to select a second setup option, and press ► to move to the third level.
5. Use ▲/▼ to select a desired setting, and press ENTER (⊙) to confirm your selection.

[TV] Menu

Auto Scan

This option automatically scans and sets the available channels. Currently selected mode (TV or Radio) will not be changed after the Auto channel scanning.

[Country]: Use ◀/▶ select a country where you operate this unit.

[Auto Scan]: Use ▼/◀/▶ to select [Yes] then press ENTER (⊙) to start the channel scanning.

TV Channel / Radio Channel

Displays the TV or Radio channel list.

Use ► to select the [Select] then press ENTER (⊙) to display the channel list. You can also display the channel list pressing CH LIST while in DVB-T or DAB mode.

While displaying channel list, press ◀/▶ to display favorite channel list.

Channel Class

This option allows you to set the favorite channel. Use ▲/▼ select the a channel and press ENTER (⊙) to set the favorite class on each channel. (shows Fav icon on top of the screen)




Channel Edit

This option allows you to edit the channels.

[Add]: This option allows you to add a new channel. Use ▲/▼ to select the channel and press ENTER (⊙) to add the selected channel.

[Select]: This option allows you to delete or move the preset channels. To move the location of the preset channel, use ▲/▼/◀/▶ to highlight the channel you want to move on the [Move] column and press ENTER (⊙). Use ▲/▼ to move the selected channel to the desired position and then press ENTER (⊙) to complete move.

To delete a preset channel, use ▲/▼/◀/▶ to highlight the channel you want to delete on the [Delete] column and press ENTER (⊙). The marked channel will not be displayed on the channel list. Press ENTER (⊙) again to clear the ✕ mark.

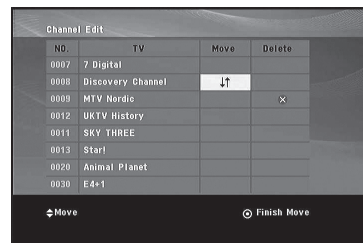

Aspect Ratio

Selects the aspects ratio of the connected TV.

[4:3 PS]: Select this when connecting to a standard 4:3 screen TV and prefer the wide picture on the entire screen cuts off the portions that do not fit.

[4:3 LB]: Select this when connecting to a standard 4:3 screen TV and prefer the wide picture with bands on the upper and lower portions of the screen.

[16:9]: Select this when connecting to a wide-screen TV.

Antenna Feed 5V

If you are using an indoor antenna, use one with a signal amplifier rated at DC 5 V, 100 mA and set this option to [ON].

[ON]: Power is supplied to the connected antenna.

[OFF]: The unit does not supply power to the connected antenna.

[TIME] Menu

Set the channel that broadcasts a clock signal and the clock will be set automatically. If the clock that has automatically set is different with your local clock, you can adjust time using [Time Offset] option (For example, when summer time is started in local area).

Press ► to select [Time Offset] option. Press ▲/▼ to select a value then press ENTER (⊙) (Off, +/-30 min, +/-60 min, +/-90 min, +/-120 min). Select "Off" if the clock that has automatically set is identified with your local clock.

[LOCK] Menu

To access the [Change Pin], [Channel Lock], [Parental Guidance] options, you must enter the 4-digit password. If you have not yet entered a password you are prompted to do so. Enter a 4-digit password. Enter it again to verify. If you make a mistake while entering number, press CLEAR to delete numbers.

If you forget your password, you can reset it. Display the SETUP menu. Input '210499' and press ENTER (⊙). The password has now been cleared.

Change Pin

Changes the password. Enter the new password twice after entering the current password.

Channel Lock

You can lock certain unsuitable channels to prevent children from accessing them, use ▲/▼ to select a channel you want to lock and then press ENTER (⊙) to lock the channel. If you want to watch a locked channel. You should input the password.

Parental Guidance

Blocks TV programs that you or your family may not wish to watch, based on the rating scheme set.

Select a rating then press ENTER (⊙).

[3 Years] - [18 Years]: Rating [3 Years] has the most restrictions and rating [18 Years] is the least restrictive.

[Blocking Off]: Permits all programs.

[OTHERS] Menu

OTA (Over the Air)

Your unit is able to keep the built-in digital tuner up to date with the latest software. The unit does it automatically at regular interval. While the unit is in updating, there may have a disruption in reception for a few hours. The reception should return to normal after the update is complete. This unit must be plugged into AC power to receive updates. Do not unplug your unit while an update is in progress. The update is not available during viewing digital text or EPG menu.

[ON]: Updates the software when this unit is turned on.

[OFF]: Select this if you do not want to do not use this function.

Default Setting

You can reset the unit to its original factory settings. Press ENTER (⊙) while [Select] option is selected. Select [Yes] on the pop-up message to return to the default setting.

Displaying the channel information

In DVB-T or DAB mode, press DISPLAY to display the information displayed on-screen. If you press DISPLAY twice, the signal strength and quality will appear on the screen.



- 1** Indicates channel number, station name, and the present time.
- 2** Indicates the channel signal strength, quality.

Changing the Channel

Use CH - / + on the remote control to change the channel in memory to select a channel directly.

Changing the Channel with Channel list

You can display channel list using the CH LIST button and switch into other channel on the channel list.



In DVB-T or DAB mode, press CH LIST to display the channel list. Select your desired channel using the ▲/▼ and press ENTER (⊙) to change another channel. You can switch the channel list to All or Favorite by pressing ◀/▶.

The digital EPG

Using the digital EPG

1. Press MODE to select the DVB-T or DAB mode.
2. Press EPG to display the EPG menu.
3. Use ▲/▼/◀/▶ to select a program.

About the digital EPG

The digital EPG shows a table of scheduled digital TV programs and detailed information about individual program. The digital EPG screen consists of program information, channel list and general program list.

Note that the unit's clock must be set to the correct time and date to ensure all relevant EPG information is displayed.




Viewing a Teletext service

Teletext is a free broadcasting service by some TV stations which gives up-to-the-minute information on news, weather, television programs, share prices and many other topics.

The unit gives you access to teletext which is greatly improved in various aspects such as text and graphics. This teletext can be accessed by special teletext services and specific services which broadcast teletext.

In DVB-T mode, use numbered (0-9) buttons or CH - / + on the remote control to change the channel which broadcast teletext. Press TEXT to access the teletext.

Follow the indications on teletext and move onto the next or previous step by pressing color (Red or Green) or ▲/▼ buttons. Press TEXT or RETURN (↵) to turn the teletext off and return to TV viewing.

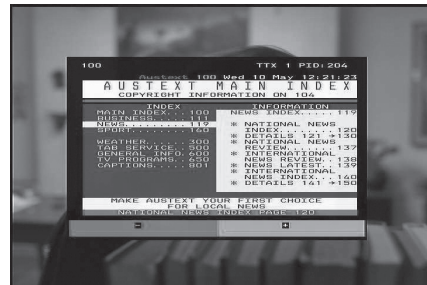

Selecting teletext page

Enter the desired page number as a three digit number with the numbered buttons. If during selection you press a wrong number, you must complete the three digit number and then enter the correct page number again.

Use Red/Green buttons to move up and down pages.

Special Teletext Functions

MIX button

Displays the teletext pages superimposed on the TV picture. To switch the TV picture off press this button again.

INDEX button

Moves to Index screen or page 100 in the teletext mode.

General Playback

Selecting an operating mode

You must select one of the operating modes before operating. Press MODE repeatedly to change the mode among DVB-T, DAB or Disc.

Disc: You should select the Disc mode before using playback functions or disc setup setting.

DVB-T: You should select the DVB-T mode before watching TV channel or using TV setup setting.

DAB: You should select the DAB mode before listening to the radio or using radio setup setting.

Playing a Disc **DVD** **ACD**

1. Press OPEN/CLOSE (▲), and place a disc on the disc tray.
2. Press OPEN/CLOSE (▲) to close the disc tray
For the most DVD-ROM discs, playback starts automatically.

For the Audio CD, select a track using ▲/▼/◀/▶, and press PLAY (▶) or ENTER (⊙) to play the Track.

Playing a file **MOVIE** **MUSIC** **PHOTO**

1. Press OPEN/CLOSE (▲) to place a disc on the disc tray, or connect the USB device.
2. Select a file using ▲/▼/◀/▶, and press PLAY (▶) or ENTER (⊙) to play the file.

RETURN (↶)	Changes between Disc and USB Device.
TITLE	Changes the mode. (Music → Photo → Movie)

On-Screen display **DVD** **MOVIE**

You can display and adjust various information and settings about the content.

1. While playback, press DISPLAY to show various playback information.
2. Select an option using ▲/▼.
3. Use ◀/▶ and numerical button to adjust the selected option value.
4. Press DISPLAY to exit the On-Screen display.

2/6	Current title number/total number of titles
01/33	Current chapter number/total number of chapters
C 0:01:44 T 1:51:39	Elapsed playing time Selected total time of current title/file
1. ENG D/D 3/2. 1 CH	Selected audio language or channel
1. KOR	Selected subtitle
1/1	Selected angle/total number of angles

General operation

To	Do this
Playback	Press PLAY (▶)
Pause	Press PAUSE/STEP (⏸)
Stop	Press STOP (■)
Skip to the next or previous	Press ◀◀ or ▶▶ during playback
Fast forward or fast reverse	Press ◀◀ or ▶▶ during playback.
Resume playback	Press STOP (■) during playback to save the stopped point. <ul style="list-style-type: none"> • Press STOP (■) once: Displayed ⏸ on the screen (Resume Stop) • Press STOP (■) twice: Displayed ■ on the screen (Complete Stop)
System Select	You must select the appropriate system mode for your TV system. Remove any disc that might be in the unit, press and hold PAUSE/STEP (⏸) for more than five seconds to be able to select a system (PAL, NTSC).
Screen Saver	Leave the unit in Stop mode for about five minutes, then the screen saver appears. If the Screen Saver is displayed for five minutes, the unit automatically turns itself off.
Last Scene Memory	Turn off the unit, then the unit memorize the lastly viewed scene even if disc is inserted again after removal or unit is turned on after off with same disc. (DVD/ Audio CD only)

Advanced Playback

Movie **DVD** **MOVIE**

To	Do this
Display disc menu	Press DVD MENU. (DVD Only)
Play repeatedly	Press REPEAT during playback. To select an option to be repeated, Press REPEAT repeatedly. <ul style="list-style-type: none"> • DVD: Chapter/ Title/ Off • MOVIE: Track/ All/ Off
Play frame-by-frame	Press PAUSE/STEP (⏸) while Video file playback and press PAUSE/STEP (⏸) repeatedly to play Frame-by-Frame playback.
Repeat a specific portion	Press A-B at the beginning of the portion you wish to repeat and again at the end of the portion. To return to normal playback, press A-B to select [Off].
Set the desired starting time of playback	Searches for the starting point of entered time code. Press DISPLAY then select clock icon. Enter a time then press ENTER (⊙). For example, to find a scene at 1 hour, 10 minutes, and 20 seconds, enter "11020" and press ENTER (⊙). If you enter the wrong number, press CLEAR to enter again.
Change the subtitle code page (Video file only)	Press and hold SUBTITLE for 3 seconds during playback. The language code will appear. Press ◀/▶ to select another language code until the subtitle is displayed properly and then press ENTER (⊙)
Slow down the playing speed (Forward only)	While the playback is paused, press ▶▶ repeatedly to play various speeds of slow motion. Press PLAY (▶) to continue play at normal speed.

Watch an enlarged video During playback or pause mode, press ZOOM repeatedly to select zoom mode.
 ZOOM: 100% → 200% → 300% → 400% → 100%
 ▲/▼/◀/▶: Move through the zoomed picture.

Music ACD MUSIC


 


To	Do this
Play repeatedly	Press REPEAT during playback. To select an item to be repeated, Press REPEAT repeatedly. • TRACK / ALL / (REFEAT Off)
Create or delete your own program	Press the PROGRAM to select desired file and then,  mark appears on screen. Using ▲/▼ and ENTER (⊙) to add a music file(s) on the program list, If you add desired music file(s), press PROGRAM to end edit program list. To clear a music file(s) from the program list, select the music file you want to clear then press CLEAR in program edit mode. To clear all music file(s) from the program list, select [Clear All] then press ENTER (⊙) in program edit mode.
Display file information (ID3 TAG)	While playing a MP3 file containing file information, you can display the information by pressing DISPLAY repeatedly. • Depending on the MP3 files, information may not be displayed on the screen.

Photo PHOTO

To	Do this
View photo files as a slide show	Use ▲/▼/◀/▶ to highlight () icon then press ENTER (⊙) to start slide show.
Adjust slide show speed	You can change slide show speed using ◀/▶ when () icon is highlighted.
Rotate a photo	Use ▲/▼ to rotate the photo in full screen counterclockwise or clockwise while viewing a photo in full screen.
Watch an enlarged Photo	While viewing a photo in full screen, press ZOOM repeatedly to select zoom mode. ZOOM: 100% → 200% → 300% → 400% → 100% ▲/▼/◀/▶: Move through the zoomed photo.
Listen to music during slide show	You can listen to music during slide show, if the disc contain music and photo files together. Use ▲/▼/◀/▶ to highlight () icon then press ENTER (⊙) to start slide show.

Troubleshooting

Symptom	Cause	Solution
No power	The power cord is disconnected.	Plug the power cord into the wall outlet securely.
The power is on, but the unit does not work.	No disc is inserted.	Insert a disc.
The unit does not start playback.	An unplayable disc is inserted.	Insert a playable disc. (Check the disc type and regional code.)
	The rating level is set.	Change the rating level.
The remote control does not work properly.	The remote control is not pointed at the remote sensor on the unit.	Point the remote control at the remote sensor of the unit.
	The remote control is too far from the unit.	Operate the remote control closer to the unit.
Poor picture quality and sound distortion	Fingerprints and dust are stained on the disc.	Wipe the disc from the center to out with a clean cloth. Do not use strong solvents. (alcohol, benzine, thinner, commercially available cleaners)
No picture	The TV is not set to receive the signal from the unit.	Select the appropriate video input mode on the TV.
	The video cable is not connected securely.	Connect the video cable securely.
	The TV does not accept the resolution that is set on the unit.	Press RESOLUTION repeatedly to select appropriate resolution.
No sound	The equipment connected with the audio cable is not set to receive the signal from the unit.	Select the correct input mode of the audio amplifier.
	The AUDIO options are set to the wrong position.	Set the AUDIO settings to the correct position.

Area Code List

Choose an area code from this list.


Area	Code	Area	Code	Area	Code	Area	Code
Afghanistan	AF	Fiji	FJ	Monaco	MC	Singapore	SG
Argentina	AR	Finland	FI	Mongolia	MN	Slovak Republic	SK
Australia	AU	France	FR	Morocco	MA	Slovenia	SI
Austria	AT	Germany	DE	Nepal	NP	South Africa	ZA
Belgium	BE	Great Britain	GB	Netherlands	NL	South Korea	KR
Bhutan	BT	Greece	GR	Antilles	AN	Spain	ES
Bolivia	BO	Greenland	GL	New Zealand	NZ	Sri Lanka	LK
Brazil	BR	Hong Kong	HK	Nigeria	NG	Sweden	SE
Cambodia	KH	Hungary	HU	Norway	NO	Switzerland	CH
Canada	CA	India	IN	Oman	OM	Taiwan	TW
Chile	CL	Indonesia	ID	Pakistan	PK	Thailand	TH
China	CN	Israel	IL	Panama	PA	Turkey	TR
Colombia	CO	Italy	IT	Paraguay	PY	Uganda	UG
Congo	CG	Jamaica	JM	Philippines	PH	Ukraine	UA
Costa Rica	CR	Japan	JP	Poland	PL	United States	US
Croatia	HR	Kenya	KE	Portugal	PT	Uruguay	UY
Czech Republic	CZ	Kuwait	KW	Romania	RO	Uzbekistan	UZ
Denmark	DK	Libya	LY	Russian Federation	RU	Vietnam	VN
Ecuador	EC	Luxembourg	LU	Saudi Arabia	SA	Zimbabwe	ZW
Egypt	EG	Malaysia	MY	Senegal	SN		
El Salvador	SV	Maldives	MV				
Ethiopia	ET	Mexico	MX				

Language Code List

Use this list to input your desired language for the following initial settings: [Disc Audio], [Disc Subtitle] and [Disc Menu].

Language	Code	Language	Code	Language	Code	Language	Code
Afar	6565	French	7082	Lithuanian	7684	Sindhi	8368
Afrikaans	6570	Frisian	7089	Macedonian	7775	Singhalese	8373
Albanian	8381	Galician	7176	Malagasy	7771	Slovak	8375
Amharic	6577	Georgian	7565	Malay	7783	Slovenian	8376
Arabic	6582	German	6869	Malayalam	7776	Spanish	6983
Armenian	7289	Greek	6976	Maori	7773	Sudanese	8385
Assamese	6583	Greenlandic	7576	Marathi	7782	Swahili	8387
Aymara	6588	Guarani	7178	Moldavian	7779	Swedish	8386
Azerbaijani	6590	Gujarati	7185	Mongolian	7778	Tagalog	8476
Bashkir	6665	Hausa	7265	Nauru	7865	Tajik	8471
Basque	6985	Hebrew	7387	Nepali	7869	Tamil	8465
Bengali; Bangla	6678	Hindi	7273	Norwegian	7879	Telugu	8469
Bhutani	6890	Hungarian	7285	Oriya	7982	Thai	8472
Bihari	6672	Icelandic	7383	Panjabi	8065	Tonga	8479
Breton	6682	Indonesian	7378	Pashto, Pushto	8083	Turkish	8482
Bulgarian	6671	Interlingua	7365	Persian	7065	Turkmen	8475
Burmese	7789	Irish	7165	Polish	8076	Twi	8487
Byelorussian	6669	Italian	7384	Portuguese	8084	Ukrainian	8575
Chinese	9072	Japanese	7465	Quechua	8185	Urdu	8582
Croatian	7282	Kannada	7578	Rhaeto-Romance	8277	Uzbek	8590
Czech	6783	Kashmiri	7583	Rumanian	8279	Vietnamese	8673
Danish	6865	Kazakh	7575	Russian	8285	Volapük	8679
Dutch	7876	Kirghiz	7589	Samoan	8377	Welsh	6789
English	6978	Korean	7579	Sanskrit	8365	Wolof	8779
Esperanto	6979	Kurdish	7585	Scots Gaelic	7168	Xhosa	8872
Estonian	6984	Laotian	7679	Serbian	8382	Yiddish	7473
Faroese	7079	Latin	7665	Serbo-Croatian	8372	Yoruba	8979
Fiji	7074	Latvian, Lettish	7686	Shona	8378	Zulu	9085
Finnish	7073	Lingala	7678				

Specifications

Power requirements	AC 200-240 V, 50 / 60Hz
Power consumption	11 W
Dimensions (W x H x D)	(430 x 35 x 195) mm
Net Weight (Approx.)	1.4 kg
Operating temperature	5 °C to 35 °C
Operating humidity	5 % to 90 %
Laser	Semiconductor laser
Signal system	PAL/NTSC
Bus Power Supply (USB)	DC 5 V  200 mA
ANTENNA IN	Antenna input, 75 Ω
VIDEO OUTPUT	1.0 V (p-p), 75 Ω, sync negative, RCA jack x 1 / SCART (TO TV)
COMPONENT / PROGRESSIVE SCAN OUTPUT	(Y) 1.0 V (p-p), 75 Ω, sync negative, RCA jack x 1, (Pb)/ (Pr) 0.7 V (p-p), 75 Ω, RCA jack x 2
HDMI OUTPUT (video/audio)	19 pin (Type A, HDMI™ Connector)
ANALOG AUDIO OUTPUT	2.0 Vrms (1 kHz, 0 dB), 600 Ω, RCA jack (L, R) x 1 / SCART (TO TV)
DIGITAL AUDIO OUTPUT (COAXIAL)	0.5 V (p-p), 75 Ω, RCA jack x 1

Design and specifications are subject to change without prior notice.

Trademarks and Licenses



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC in the United States and other countries.



"DVD Logo" is a trademark of DVD Format/Logo Licensing Corporation.



DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.



