



ENGLISH

OWNER'S MANUAL DVD Player

Please read this manual carefully before operating your set and retain it for future reference.

DV632



MFL67121235

Safety Information



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's

enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.



CAUTION: This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. **DO NOT STARE INTO BEAM.**

CAUTION concerning the Power Cord

Most appliances recommend they be placed upon a dedicated circuit;

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Notes on Copyrights

- This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.
- Under the U.S. Copyright laws and Copyright laws of other countries, unauthorized recording, use, display, distribution, or revision of television programs, videotapes, DVDs, CDs and other materials may subject you to civil and/or criminal liability.

Notes on Discs

- Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints do not get on the surface. Never stick paper or tape on the disc.
- After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

Notes on the Unit

- Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.
- To clean the unit, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.
- The unit is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality could be diminished. For details, please contact your nearest authorized service center.

Table of Contents

1 Getting Started

- 3 Safety Information
- 6 Introduction
- 6 – Symbols Used in this Manual
- 6 – About the "Ⓞ" Symbol Display
- 6 – Regional Code
- 6 – Playable Discs
- 7 – File compatibility
- 8 Front panel
- 8 Rear panel
- 8 Supplied Accessories
- 9 Remote control

2 Connecting

- 10 Connecting to your TV
- 10 – Connecting Video / Audio cable
- 10 Connecting to an Amplifier
- 10 – Connecting Audio cable
- 11 – Connecting COAXIAL (digital audio) cable

3 System Setting

- 12 Setup
- 12 – Adjust the settings
- 12 – [LANGUAGE] Menu
- 12 – [DISPLAY] Menu
- 12 – [AUDIO] Menu
- 13 – [LOCK] Menu
- 13 – [OTHERS] Menu

4 Operating

- 14 On-Screen display
- 14 – Displaying content information on-screen
- 14 General Playback
- 14 – Playing Disc
- 14 – Playing USB Device
- 15 General operation
- 15 Advanced Playback
- 15 – Movie
- 16 – Music
- 16 – Photo

5 Troubleshooting

- 17 Troubleshooting

6 Appendix

- 18 Area Code List
- 19 Language code List
- 20 Specifications
- 20 Trademarks and Licenses

1

2

3

4





5

6

Introduction

Symbols Used in this Manual

A section whose title has one of the following symbols are applicable only to the disc represented by the symbol.

| | |
|---|---------------------------------------|
|  | DVD-Video, DVD±R/RW |
|  | Audio CDs |
|  | Movie files contained in the USB/Disc |
|  | Music files contained in the USB/Disc |
|  | Photo files contained in the USB/Disc |


About the “⊗” Symbol Display

“⊗” may appear on your TV display during operation and indicates that the function explained in this owner’s manual is not available on that specific media.

Regional Code

This unit has a regional code printed on the rear of the unit. This unit can play only DVD disc labeled same as the rear of the unit or “ALL”.

Playable Discs

| | |
|--|---|
|  | DVD-VIDEO (8 cm / 12 cm disc) Discs such as movies that can be purchased or rented. |
|   | DVD±R (8 cm / 12 cm disc) - Video mode and finalized only - Supports the dual layer disc also - DVD±R discs that contain Movie, Music or Photo files. |
|  | DVD-RW (8 cm / 12 cm disc) - VR mode, Video mode and finalized only - DVD-RW discs that contain Movie, Music or Photo files. |
|  | DVD+RW (8 cm / 12 cm disc) - Video mode and finalized only - DVD+RW discs that contain Movie, Music or Photo files. |
|  | Audio CD (8 cm / 12 cm disc) |
|  | CD-R/RW (8 cm / 12 cm disc) CD-R/RW discs that contain audio titles, Movie, Music or Photo files. |

! Note

You have to set the disc format option to [Mastered] in order to make the discs compatible with the LG players when formatting rewritable discs. When setting the option to Live System, you cannot use it on LG player. (Mastered/Live File System: Disc format system for windows Vista)

File compatibility

Overall

Available File extensions: ".jpg", ".jpeg", ".avi", ".divx", ".mpg", ".mpeg", ".mp3", ".wma"

- The file name is limited to 20 characters.
- Depending on the size and number of the files, it may take several minutes to read the contents on the media.

Maximum Files/Folder: Less than 600 (total number of files and folders)

CD-R/RW, DVD±R/RW Format: ISO 9660

MOVIE

Available resolution size:

720 x 576 (W x H) pixels

Playable subtitle: SubRip (.srt / .txt), SAMI (.smi), SubStation Alpha (.ssa/.txt), MicroDVD (.sub/.txt), SubViewer 2.0 (.sub/.txt), TMLayer (.txt), DVD Subtitle System (.txt)

Playable Codec format: "DIVX3.xx", "DIVX4.xx", "DIVX5.xx", "DIVX6.xx" (Standard playback only), "MP43", "3IVX"

! Note

- This unit does not support the file that is recorded with GMC^{*1} or Qpel^{*2}. Those are video encoding techniques in MPEG4 standard, like DivX or XVID have.
*1 GMC – Global Motion Compensation
*2 Qpel – Quarter pixel

Playable Audio format: "Dolby Digital", "PCM", "MP3", "WMA"

Sampling frequency: within 8 - 48 kHz (MP3), within 32 - 48 kHz (WMA)

Bit rate: within 8 - 320 kbps (MP3), within 32 - 192 kbps (WMA), less than 4Mbps (DivX file)

MUSIC

Sampling frequency: within 8 - 48 kHz (MP3), within 32 - 48 kHz (WMA)

Bit rate: within 8 - 320 kbps (MP3), within 32 - 192 kbps (WMA)

PHOTO

Recommended size: less than 2 MB

- Progressive and lossless compression photo image files are not supported.

 
! Notes of USB Device

- Do not extract the USB device during operation (play, etc.).
- A USB device which requires additional program installation when you have connected it to a computer, is not supported.
- USB device: USB device that supports USB1.1 and USB2.0.
- Movie, music and photo files can be played. For details of operations on each file, refer to relevant pages.
- Regular back up is recommended to prevent data loss.
- If you use a USB extension cable, USB HUB or USB Multi-reader, the USB device may not be recognized.
- Some USB device may not work with this unit.
- Digital camera and mobile phone are not supported.
- USB Port of the unit cannot be connected to PC. The unit cannot be used as a storage device.

1


Getting Started

Front panel

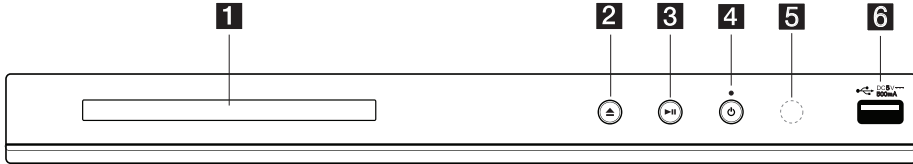


- 1** Disc Tray
- 2** ▲ (Open/Close)
- 3** ▶|| (Play/Pause)
- 4** ⏻ (Power) and Indicator
- 5** Remote Sensor
- 6** USB Port

 Rear panel

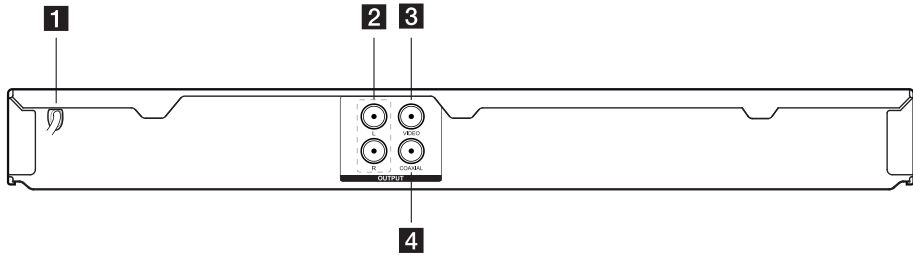


- 1** AC power cord
- 2** 2CH AUDIO OUTPUT (Left/Right)
- 3** VIDEO OUTPUT
- 4** DIGITAL AUDIO OUTPUT (COAXIAL)

 
Supplied Accessories



RCA Video/Audio cable (1)

 


Remote control (1)

 

Battery (1)

 Remote control

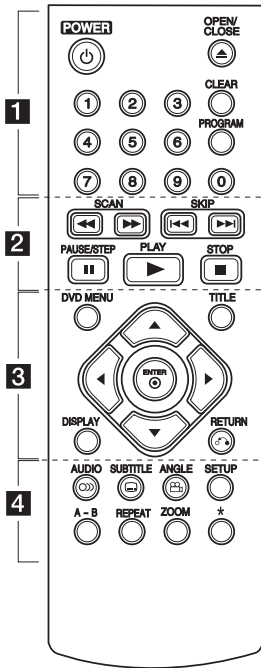

..... **1**

POWER: Switches the player ON or OFF.

OPEN/CLOSE: Opens and closes the disc tray.

0-9 numerical buttons: Selects numbered options in a menu.

CLEAR: Removes a number when setting the password.

PROGRAM: Enters the program edit mode.

..... **2**

◀◀/▶▶ (SCAN): Searches backward or forward.

⏪/⏩ (SKIP): Goes to the next or previous chapter/track/file.

⏸ (PAUSE/STEP): Pauses playback.

▶ (PLAY): Starts playback.

■ (STOP): Stops playback.

..... **3**

DVD MENU: Accesses or exits the DVD menu.

DISPLAY: Accesses On-Screen Display.

TITLE: Accesses the disc's title menu

↶ (RETURN): Returns the former menu or exits the menu, and change to the USB mode.

▲▼◀▶ (Direction buttons): Selects an option in the menu.

⊙ (ENTER): Confirms menu selection.

..... **4**

🔊 (AUDIO): Selects an audio language or audio channel.

🗨 (SUBTITLE): Selects a subtitle language.

📷 (ANGLE): Selects a DVD camera angle if it is available on the disc being played.

SETUP: Accesses or exits the setup menu.

A-B: Repeats a section.

REPEAT: Repeats a desired selection or sequence.

ZOOM: Enlarges video image in disc mode.

*****: This button is not available.

 
Battery Installation

Remove the battery cover on the rear of the Remote Control, and insert one R03 (size AAA) battery with **+** and **-** matched correctly.

Connecting to your TV

Connecting Video / Audio cable


Connect the VIDEO/AUDIO OUTPUT on the unit to VIDEO/AUDIO IN on TV with Video/Audio cable, such as VIDEO with yellow, AUDIO Left/Right with white/red.

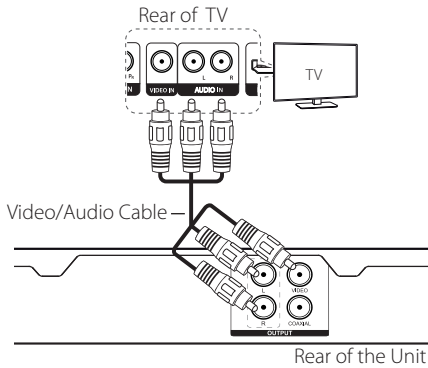

Connecting to an Amplifier


Connecting Audio cable

 Connect the AUDIO OUTPUT on the unit to 2CH AUDIO IN on amplifier with Audio cable, such as AUDIO Left/Right with white/red.

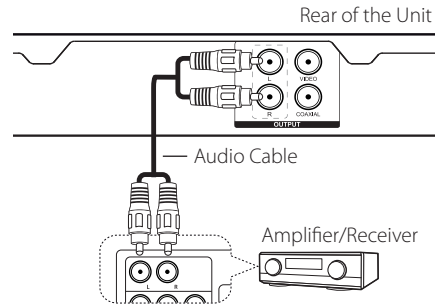

Connecting COAXIAL (digital audio) cable

 Connect the COAXIAL (digital audio out) on the unit to Digital Audio IN (COAXIAL) on amplifier with COAXIAL cable.

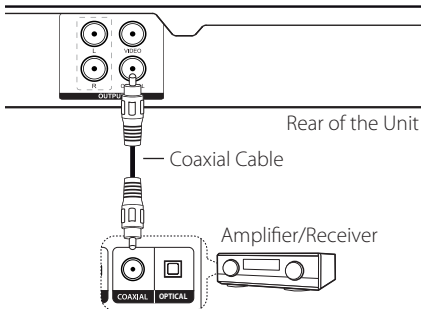

- If your TV is not capable of handling 96 kHz sampling frequency, set the [Sample Freq.] option to [48 KHz] on the setup menu (See page 12).
- If your TV is not equipped with Dolby Digital and MPEG decoder, set the [Dolby Digital] and [MPEG] options to [PCM] on the setup menu (See page 12).

Setup

When the unit is turned-on at the first time, you have to select the desired language. (optional)

Adjust the settings

You can change the settings of the player in the [SETUP] menu.

1. Press SETUP.
2. Select the first setup option using ▲▼ and press ► to move to the second level.
3. Select a second setup option using ▲▼ and press ► to move to the third level.
4. Select a desired setting using ▲▼ and press ENTER to confirm.
5. Press SETUP to escape from setup menu.

[LANGUAGE] Menu

Menu Language/Disc Audio/Disc Subtitle/Disc Menu

Select and set the language you prefer.

[DISPLAY] Menu

TV Aspect

Select and set TV aspect ratio according to your TV type and preference.

[4:3]: Standard TV type

[16:9]: Wide TV type

Display Mode

Select and set Display Mode according to your preference. Display Mode works only when the TV Aspect mode is 4:3.

[Letterbox]: Display wide screen with black stripe at top and bottom on TV.

[Panscan]: Display full screen with cut non-main scene on TV.

[AUDIO] Menu

Set the player's Audio options according to various disc output type you use.

Dolby Digital / DTS / MPEG

Select the type of digital audio signal to use the DIGITAL AUDIO OUTPUT jack.

[Bitstream]: Select to connect DIGITAL AUDIO OUTPUT jack to an amplifier with Dolby Digital, DTS or MPEG decoder.

[PCM] (for Dolby Digital / MPEG): Select to connect DIGITAL AUDIO OUTPUT jack to an amplifier without Dolby Digital or MPEG decoder.

[Off] (for DTS): Select to connect DIGITAL AUDIO OUTPUT jack to an amplifier without DTS decoder.

Sample Freq. (Frequency)

Selects the sampling frequency of the audio signal between [48KHz] and [96KHz].

DRC (Dynamic Range Control)

To adjust the volume level by itself when Audio level reaches to more than the specific level (Dolby Digital only).

Vocal

To mix the vocal with music using the multi-channel karaoke DVD.

[LOCK] Menu

Move to [Area Code] by pressing ►. Press ENTER after input the 4-digit password. Input the same 4-digit with password again to verify and press ENTER. The Rating and Password menu will be activated.

Rating

Input the 4-digit password and press ENTER. Select the level from 1 (Kids) to 8 (Adult).

Change Password

Input the former 4-digit password. Input the new 4-digit password and input it again to verify.

If you forget the password

Remove the disc. Input "210499" on Setup menu and press ENTER. The password will be cleared.

Area Code

To input the standardized area code refer to the Area Code List on page 18.

[OTHERS] Menu

B.L.E (Black Level Expansion)

Select [On] or [Off] to expand the black level or not. It just operates when TV system is set to NTSC.

REC Bitrate

To select bitrate when you record from Audio CD to USB directly. Higher bitrate gives better sound quality. For detailed recording method, see page 16.

DivX VOD

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

[Register]: Displays the registration code of your unit.







[Deregister]: Deactivate your unit and display the deactivation code.

On-Screen display

You can display and adjust various information on-screen about the loaded disc and USB Device.

Displaying content information on-screen **DVD MOVIE**

1. Press DISPLAY to see the various playback information.
2. Select an available contents by pressing ▲▼ and ENTER.
3. Change an available content by pressing ◀▶ or the numerical button and ENTER.
4. Press DISPLAY to escape from playback information.

| | |
|---|---|
|  2/6 | Current title number/total number of titles |
|  01/33 | Current chapter number/total number of chapters |
|  C 0:01:44 T 1:51:39 | Elapsed playing time Total playback time of current title/file |
|  1. ENG DOD 3/2.1 CH | Selected audio language and output channel |
|  1. KOR | Selected subtitle |
|  1/1 | Selected angle/total number of angles |

General Playback

Playing Disc

1. Press ▲, and place a disc on the disc tray.
2. Press ▲ to close the disc tray.
3. Press ▶ to play the file.
DVD disc will be automatically loaded.

Playing USB Device

1. Connect the USB device.
2. Change to the USB mode by pressing RETURN.
3. Select the desired file.
4. Press ▶ to play the file.

General operation


| To | Do this |
|--|---|
| Playback | Press ► |
| Pause | Press |
| Stop | Press ■ |
| Skip to the next or previous | Press ◀◀ or ▶▶ during playback. |
| Fast / slow playback forward | Press ◀◀ or ▶▶ during playback. |
| Resume playback | <p>Press ■ during playback to save the stopped point.</p> <ul style="list-style-type: none"> Press ■ once: Displayed ■ on the screen (Resume Stop) Press ■ twice: Displayed ■ on the screen (Complete Stop) |
| Playback disc or USB device with several kinds of files | Select the proper menu by continuously pressing TITLE as MUSIC, PHOTO and MOVIE. |
| Screen Saver | The Screen Saver operates when unit let leave for 5minutes on Stop. Press any buttons to deactivate it. |
| Last Scene Memory | This unit can memorize and play the lastly viewed scene even if disc is inserted again after removal or unit is turned on after off with same disc. (DVD/ACD only) |
| System Select | Press and hold for 5 seconds to select PAL or NTSC. |

Advanced Playback

Movie **DVD** **MOVIE**

| To | Do this |
|--|--|
| Display disc menu | Press DVD MENU (DVD Only) |
| Play repeatedly | <p>Press REPEAT during playback.</p> <p>Press REPEAT repeatedly.</p> <ul style="list-style-type: none"> DVD: CHAPTER/ TITLE /REPEAT Off MOVIE: Track/ All/Off |
| Repeat a specific portion | Press A-B to beginning and end points desired repeatedly. To return to normal playback, Press A-B again to return to normal playback. |
| Set the desired starting time of playback | <p>Press DISPLAY during playback. Select the elapsed Time. Input the desired starting time of playback using numerical buttons and then press ENTER.</p> <p>For example, set "02:10:20" to start at 2 hours, 10 minutes, and 20 seconds.</p> |
| Watch an enlarged scene | <p>Press ZOOM repeatedly during playback or pause mode. Use ▲▼◀▶ to move the enlarged picture.</p> <ul style="list-style-type: none"> ZOOM rate: 100%/ 200%/ 300%/ 400% |
| Play frame-by-frame | Press during playback and press repeatedly. |
| Select the proper subtitle code on Movie file | Press and hold SUBTITLE for 3 seconds during playback. The language code will be appeared. Select properly displayed subtitle by pressing ◀▶ and, press ENTER. |



















Music **ACD MUSIC**

| To | Do this |
|---|--|
| Play repeatedly | Press REPEAT during playback. Press REPEAT repeatedly. <ul style="list-style-type: none"> Track/ ALL/(REPEAT Off) |
| Create or delete your own program | Press PROGRAM on stop mode, and then  will be displayed on screen. Select the desired one or more files or tracks by pressing ENTER. If you want to delete undesired list, <ul style="list-style-type: none"> One file: Select the file and press CLEAR All file: Select [Clear All] and press ENTER |
| Display file information (ID3 Tag) | While playing a MP3 file containing file information, the information is displayed by pressing DISPLAY repeatedly. |
| Record the Audio CD to USB device | Insert Audio CD and USB Device, and then AUDIO Ripping will be displayed on screen. Press AUDIO, and then recording will be started. Recording speed can be adjusted as X1 or X4 by pressing AUDIO repeatedly. <ul style="list-style-type: none"> X1: Played back during recording X4: Non-played back during recording Recording of one track: Playback, pause, or resume stop mode Recording of all tracks: Stop mode If you want to stop recording, press STOP. |

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

**Be responsible
Respect copyrights**

Photo **PHOTO**

| To | Do this |
|--|---|
| Move to previous or next photo | Press DISPLAY, and move to previous or next photo by pressing  or  . |
| Rotate a photo | Press DISPLAY, and rotate the photo counterclockwise or clockwise using   while displaying a photo in full screen. |
| Watch an enlarged Photo | During slide show, press ZOOM repeatedly to select zoom mode. <ul style="list-style-type: none"> ZOOM rate: 100%/ 200%/ 300%/ 400% Move the zoomed photo using    . |
| View the slide show | Move to "  " by pressing  and press ENTER. |
| Adjust the slide show speed | Move to "  " by pressing   and adjust the slide show speed by pressing   repeatedly. |
| Listen to music during slide show | Move to "  " by pressing   and press ENTER. |

Troubleshooting

| Symptom | Cause | Solution |
|---|--|--|
| No power. | The power cord is disconnected. | Plug the power cord. |
| The unit does not start playback. | An unplayable disc is inserted. | Insert a playable disc. (Check the disc type and regional code.) |
| | The rating level is set. | Change the rating level. |
| The remote control does not work properly. | The remote control is not pointed at the remote sensor on the unit. | Point the remote control at the remote sensor of the unit. |
| | The remote control is too far from the unit. | Operate the remote control closer to the unit. |
| Poor picture quality and sound distortion | Fingerprints and dust is stained on the disc. | Wipe the disc from the center to out with a clean cloth. Do not use strong solvents (alcohol, benzine, thinner, commercially available cleaners) |
| No picture. | The TV is not set to receive the signal from the unit. | Select the appropriate video input mode on the TV. |
| | The video cable is not connected securely. | Connect the video cable securely. |
| No sound. | The equipment connected with the audio cable is not set to receive the signal from the unit. | Select the correct input mode of the audio amplifier. |
| | The AUDIO options are set to the wrong position. | Set the AUDIO settings to the correct position. |

Area Code List

Choose an area code from this list.


| Area | Code | Area | Code | Area | Code | Area | Code |
|----------------|------|---------------|------|--------------------|------|-----------------|------|
| Afghanistan | AF | Fiji | FJ | Monaco | MC | Singapore | SG |
| Argentina | AR | Finland | FI | Mongolia | MN | Slovak Republic | SK |
| Australia | AU | France | FR | Morocco | MA | Slovenia | SI |
| Austria | AT | Germany | DE | Nepal | NP | South Africa | ZA |
| Belgium | BE | Great Britain | GB | Netherlands | NL | South Korea | KR |
| Bhutan | BT | Greece | GR | Antilles | AN | Spain | ES |
| Bolivia | BO | Greenland | GL | New Zealand | NZ | Sri Lanka | LK |
| Brazil | BR | Hong Kong | HK | Nigeria | NG | Sweden | SE |
| Cambodia | KH | Hungary | HU | Norway | NO | Switzerland | CH |
| Canada | CA | India | IN | Oman | OM | Taiwan | TW |
| Chile | CL | Indonesia | ID | Pakistan | PK | Thailand | TH |
| China | CN | Israel | IL | Panama | PA | Turkey | TR |
| Colombia | CO | Italy | IT | Paraguay | PY | Uganda | UG |
| Congo | CG | Jamaica | JM | Philippines | PH | Ukraine | UA |
| Costa Rica | CR | Japan | JP | Poland | PL | United States | US |
| Croatia | HR | Kenya | KE | Portugal | PT | Uruguay | UY |
| Czech Republic | CZ | Kuwait | KW | Romania | RO | Uzbekistan | UZ |
| Denmark | DK | Libya | LY | Russian Federation | RU | Vietnam | VN |
| Ecuador | EC | Luxembourg | LU | Saudi Arabia | SA | Zimbabwe | ZW |
| Egypt | EG | Malaysia | MY | Senegal | SN | | |
| El Salvador | SV | Maldives | MV | | | | |
| Ethiopia | ET | Mexico | MX | | | | |

Language code List

Use this list to input your desired language for the following initial settings: [Disc Audio], [Disc Subtitle] and [Disc Menu].

| Language | Code | Language | Code | Language | Code | Language | Code |
|-----------------|------|------------------|------|----------------|------|------------|------|
| Afar | 6565 | French | 7082 | Lithuanian | 7684 | Sindhi | 8368 |
| Afrikaans | 6570 | Frisian | 7089 | Macedonian | 7775 | Singhalese | 8373 |
| Albanian | 8381 | Galician | 7176 | Malagasy | 7771 | Slovak | 8375 |
| Amharic | 6577 | Georgian | 7565 | Malay | 7783 | Slovenian | 8376 |
| Arabic | 6582 | German | 6869 | Malayalam | 7776 | Spanish | 6983 |
| Armenian | 7289 | Greek | 6976 | Maori | 7773 | Sudanese | 8385 |
| Assamese | 6583 | Greenlandic | 7576 | Marathi | 7782 | Swahili | 8387 |
| Aymara | 6588 | Guarani | 7178 | Moldavian | 7779 | Swedish | 8386 |
| Azerbaijani | 6590 | Gujarati | 7185 | Mongolian | 7778 | Tagalog | 8476 |
| Bashkir | 6665 | Hausa | 7265 | Nauru | 7865 | Tajik | 8471 |
| Basque | 6985 | Hebrew | 7387 | Nepali | 7869 | Tamil | 8465 |
| Bengali; Bangla | 6678 | Hindi | 7273 | Norwegian | 7879 | Telugu | 8469 |
| Bhutani | 6890 | Hungarian | 7285 | Oriya | 7982 | Thai | 8472 |
| Bihari | 6672 | Icelandic | 7383 | Panjabi | 8065 | Tonga | 8479 |
| Breton | 6682 | Indonesian | 7378 | Pashto, Pushto | 8083 | Turkish | 8482 |
| Bulgarian | 6671 | Interlingua | 7365 | Persian | 7065 | Turkmen | 8475 |
| Burmese | 7789 | Irish | 7165 | Polish | 8076 | Twi | 8487 |
| Byelorussian | 6669 | Italian | 7384 | Portuguese | 8084 | Ukrainian | 8575 |
| Chinese | 9072 | Japanese | 7465 | Quechua | 8185 | Urdu | 8582 |
| Croatian | 7282 | Kannada | 7578 | Rhaeto-Romance | 8277 | Uzbek | 8590 |
| Czech | 6783 | Kashmiri | 7583 | Rumanian | 8279 | Vietnamese | 8673 |
| Danish | 6865 | Kazakh | 7575 | Russian | 8285 | Volapük | 8679 |
| Dutch | 7876 | Kirghiz | 7589 | Samoan | 8377 | Welsh | 6789 |
| English | 6978 | Korean | 7579 | Sanskrit | 8365 | Wolof | 8779 |
| Esperanto | 6979 | Kurdish | 7585 | Scots Gaelic | 7168 | Xhosa | 8872 |
| Estonian | 6984 | Laotian | 7679 | Serbian | 8382 | Yiddish | 7473 |
| Faroese | 7079 | Latin | 7665 | Serbo-Croatian | 8372 | Yoruba | 8979 |
| Fiji | 7074 | Latvian, Lettish | 7686 | Shona | 8378 | Zulu | 9085 |
| Finnish | 7073 | Lingala | 7678 | | | | |

Specifications

| | |
|------------------------------------|---|
| Power requirements | AC 200 - 240 V, 50/60 Hz |
| Power consumption | 11 W |
| Dimensions (W x D x H) | Approx. (360 x 200 x 35) mm |
| Net Weight (Approx.) | 1.12 kg |
| Operating temperature | 0 °C to 40 °C |
| Operating humidity | 5 % to 90 % |
| Laser | Semiconductor laser |
| Signal system | PAL / NTSC |
| Bus Power Supply (USB) | DC 5 V  500 mA |
| VIDEO OUTPUT | 1.0 V (p-p), 75 Ω, sync negative, RCA jack x 1 |
| AUDIO OUTPUT | 2.0 Vrms (1 kHz, 0 dB), 600 Ω, RCA jack (L, R) x 1 |
| Digital Audio Out (COAXIAL) | 0.5 V (p-p), 75 Ω, RCA jack x 1 |

Design and specifications are subject to change without prior notice.

Trademarks and Licenses



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



"DVD Logo" is a trademark of DVD Format/Logo Licensing Corporation.



DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under license.



