



GU285 User Guide

LG ELECTRONICS INC.

GU285 User Guide

ENGLISH



CE 0168

www.lgmobile.com

P/N : MMBB0353926 (1.0)

Bluetooth QD ID B015843



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

GU285 User Guide | ENGLISH

Congratulations on your purchase of the advanced and compact GU285 phone by LG, designed to operate with the latest digital mobile communication technology.

Contents

GUIDELINES	
Guidelines for safe and efficient use	8
01 SET UP	
Getting to know your phone	16
Open view	17
Installing the USIM and battery	18
Memory card	21
Installing a memory card	21
Removing a memory card	21
Formatting a memory card	21
02 YOUR HOME SCREEN	
Your Home screen.....	22
The status bar	22
03 THE BASICS	
Calls	23
Making a call.....	23
Making a call from your contacts.....	23
Answering and rejecting a call....	23
Speed dialling.....	23
Viewing your call logs	24
Using call divert.....	25
Using call barring.....	25
Changing the call settings	26
Video call setting	26
Common settings	26
Contacts	28
Searching for a contact.....	28
Adding a new contact	28
Adding a contact to a group	28
Adding a picture to a contact.....	29
Copying your contacts to your USIM / Handset	29
Messaging	30
Messaging	30
Sending a message	30
Entering text.....	30
Text input mode using the keypad.....	31
Setting up your email	31
Sending an email using your new account	32
Message folders	32
Managing your messages	33
Using templates.....	33
Changing your text message settings.....	34
Changing your multimedia message settings	34
Changing your email settings	35
Changing your other settings.....	36

04 GET CREATIVE	
Camera	37
Taking a quick photo.....	37
Before you take your photo.....	37
After you've taken your photo.....	38
Changing the image size.....	39
Viewing your saved photos.....	39
Setting a photo as Wallpaper.....	39
Video camera	40
Shooting a quick video.....	40
Before you take your video.....	40
After you've shot your video.....	40
Watching your saved videos.....	41
Music	42
Music.....	42
Transferring music onto your phone.....	42
FM radio.....	43
Voice recorder	44
Using the Voice recorder.....	44
Recording your voice memo.....	44
Sending a voice recording.....	44
My stuff	45
Images.....	45
Pictures options menu.....	45
Sending a photo.....	46
Organising your images.....	46
Deleting an image.....	46
Creating a slide show.....	47
Sounds.....	47
Using a sound.....	47
Videos.....	47
Watching a video.....	48
Using options while video is played.....	48
Sending a video clip.....	48
Games.....	49
Applications.....	49
Others.....	49
Games & apps	50
Games & apps.....	50
Playing a game.....	50
05 GET ORGANISED	
Organiser	51
Adding an event to your calendar.....	51
Editing a calendar event.....	51
Sharing a calendar event.....	52

Contents

Adding To-do list.....	52	07 SETTINGS	
Adding a memo.....	52	Settings.....	57
Date finder.....	52	Changing your profiles.....	57
Tools.....	53	Customising your profiles.....	57
Quick menu.....	53	Changing your date & time.....	57
Setting your alarm.....	53	Changing the language.....	58
Using your calculator.....	53	Changing your security settings..	58
Using the stopwatch.....	54	Changing your display settings...	58
Converting a unit.....	54	Resetting your phone.....	59
Adding a city to your World		Viewing memory status.....	59
time.....	54	Connectivity.....	60
06 BROWSER		Changing your connectivity	
Browser.....	55	settings.....	60
Accessing the web.....	55	Changing your Bluetooth	
Adding and accessing your		settings.....	61
bookmarks.....	55	Pairing with another Bluetooth	
RSS reader.....	56	device.....	61
Saving a page.....	56	Using a Bluetooth headset.....	62
Accessing a saved page.....	56	Transferring a file to your phone .	62
Viewing your browser history.....	56	Sending and receiving your files	
Changing the web browser		using Bluetooth.....	63
settings.....	56	USB connection mode.....	64
		Always ask mode.....	64

Mass storage-Use your phone as a mass storage device.....	64
PC suite-Synchronise your phone with your PC.....	64
Phone Software update.....	67

08 ACCESSORIES

Accessories	68
Technical data	69
General	69
Ambient Temperatures	69
Trouble Shooting.....	70

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg*. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the device. Before a phone model is available for sale to the public, compliance with the European R&TTE directive must be shown. This directive includes as one essential requirement the protection of the health and the safety for the user and any other person.

The highest SAR value for this device when tested for use at the ear is 1.00 W/kg.

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available.

Ensure the above separation distance instructions are followed until the transmission is completed. The highest SAR value for this device when tested for use at the body is 1.08 W/kg.

* The SAR limit for mobile devices used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band.

For SAR information in other regions please look under product information at www.lgmobile.com.

Guidelines for safe and efficient use

Product care and maintenance



WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Minor interference may affect TVs, radios, PCs, etc.

Efficient phone operation

Electronic and medical devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Please consult your doctor to determine if operation of your phone may interfere with the operation of your medical device.
- Some hearing aids might be disturbed by mobile phones.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Guidelines for safe and efficient use

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your

surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

- Use your wireless phone to call emergency services for yourself or others in the case of fire, traffic accident or medical emergencies;
 - Australia Dial (0-0-0)
 - New Zealand Dial (1-1-1)
 - International Dial (1-1-2)
 - other local emergency number.

Remember, it is a free call on your wireless phone for emergency services.

Guidelines for safe and efficient use

- Use your wireless phone to help others in emergencies, if you see an auto accident crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product

settings, usage patterns, battery and environmental conditions.

Driver Safety Tips


Your wireless telephone gives you the powerful ability to communicate by voice - almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold. When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

- Use a hands free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
- Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
- Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
- If possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when you will not be driving.
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
- Call roadside assistance or a special nonemergency wireless assistance number when necessary. If you see a broken down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special nonemergency wireless number.

Getting to know your phone




Open view

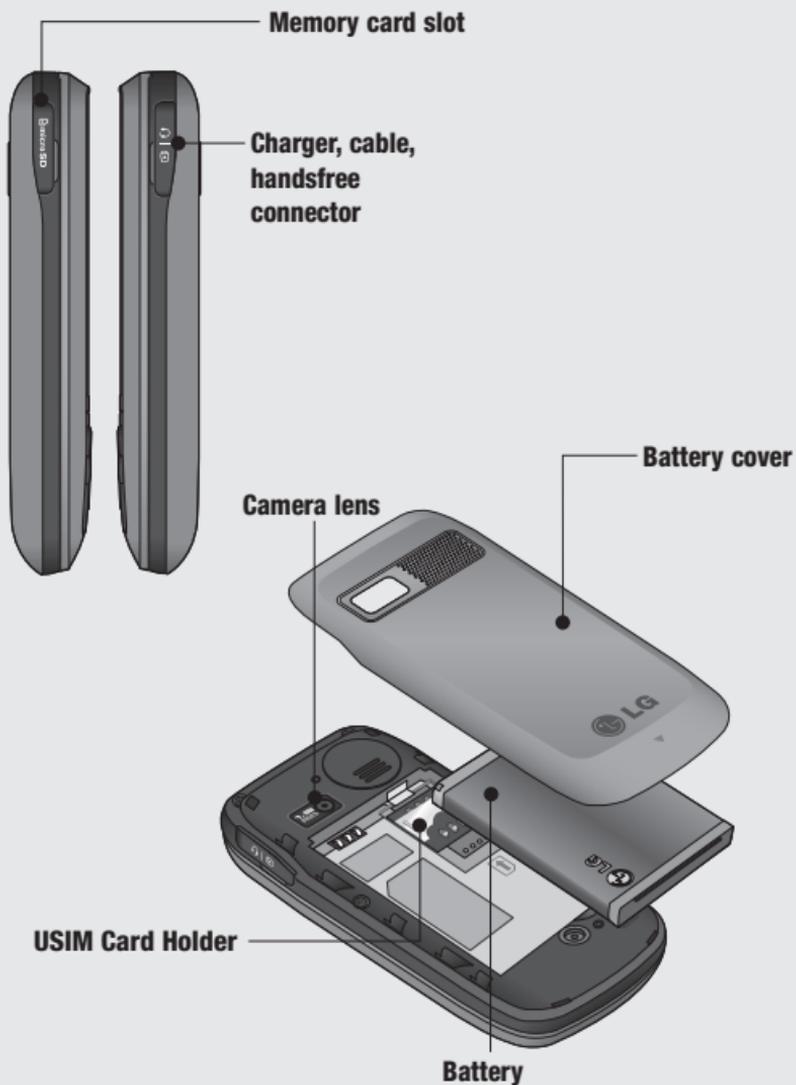

Installing the USIM and battery

1 Remove the battery cover

Press the battery cover release latch. Slide the battery cover and lift off easily.

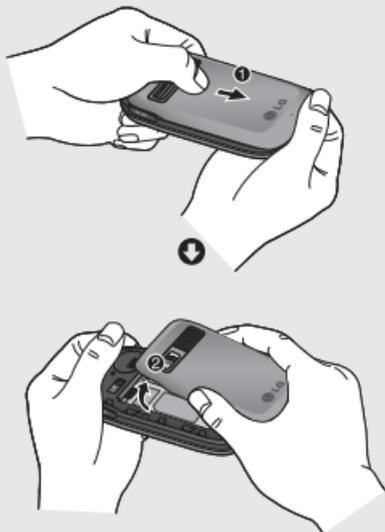

2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.



WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.


3 Install the USIM card

Slide the USIM card into the USIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the USIM card, push it out of the holder from the top.

WARNING: Do not insert the USIM card when the slide is open, as this may damage your phone and USIM card.

4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press the bottom of the battery down until it clips into place.

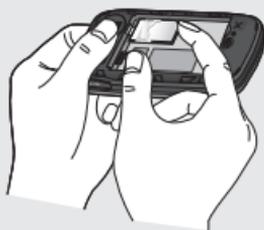

Installing the USIM and battery

5 Replace the battery cover

Insert the top of the battery cover and push down and slide until it clicks into place.



6 Charging your phone

Pull open the cover of the charger socket on the side of your GU285. Insert the charger and plug into a mains electricity socket. Your GU285 will need to be charged until a message reading battery full appears on screen.



WARNING: Do not charge the phone when it is on soft furnishings. The phone should be charged in a well ventilated area.



Memory card

Installing a memory card

You can expand the memory space available on your phone using a memory card.

The GU285 will support up to a 8GB memory card.

NOTE: A memory card is an optional accessory.

Open the memory card cover. Slide the memory card into the slot until it clicks into place. Make sure that the gold contact area is facing downwards.



Removing a memory card

Open the cover and carefully remove the memory card by gently pushing it in to the phone and quickly releasing it, as shown in the following diagram:



Formatting a memory card

Your memory card may already be formatted. If not you will need to do so before you can begin using it.

- 1 From the Home screen press  and select **Settings**.
- 2 Choose **Memory info** and select **External memory**.
- 3 Press **Format** and enter the password, which is set to 0000 as default. Your card will be formatted and ready to use.



WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

Your Home screen

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth connection is active.

The table below explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Network signal strength (number of bars will vary)
	No network signal
	GPRS available
	3G available
	EDGE available
	Flight mode is activated
	Calls are diverted
	Roaming service
	WAP service is connected

TIP! You can quickly access chosen menus using your **Favourites** list. "In the Home screen" press the programmable hot key. Select <Empty>, and then **Select** to add a menu as a favourite.

Icon	Description
	Multitasking available
	Memory card installed
	An alarm is set
	Schedule
	New message
	New voice message
	Normal profile in use
	Silent profile in use
	Outdoor profile in use
	Headset profile in use
	Remaining battery life
	Battery empty

Calls

Making a call

- 1 Make sure your phone is on.
- 2 You can use the keypad after opening the slide. To delete a digit press  or the back arrow.
- 3 Press  to begin the call.
- 4 To end the call, press  or slide the cover closed.

TIP! To enter + when making an international call, press and hold **0**.

Making a call from your contacts

- 1 Select **Contacts** in the menu.
- 2 Using the keypad, enter the first letter of the contact you want to call and scroll to the contact.
- 3 Press  to begin the call.

Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call.

While your phone is ringing you can press **Silent** to mute the ringing. This is useful if you have forgotten to change your profile to **Silent** for a meeting.

Press  or select **Reject** in order to reject an incoming call.

Speed dialling

You can assign a speed dial number to a contact you call frequently.

- 1 Press  to open the main menu. Select **Contacts**, then select Speed dials from options.
- 2 Your voicemail is preset to speed dial 1 and you cannot change this. Select any other number either by using the navigation keys and selecting **Set** or by pressing the hard key number.

Calls

- 3 Your address book will open.
Select the contact you'd like to assign to that number using the navigation keys then press **Select**.

To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will begin automatically and there is no need to press .

Viewing your call logs

Press  and select **Calls**.

All calls - View a complete list of all your dialled, received and missed calls.

Missed calls - View a list of any calls you have missed.

Dialled calls - View a list of all the numbers you have called.

Received calls - View a list of all the numbers that have called you.

Call duration - View details of how long you have spent on your calls; Last, dialled, received and All.

Call costs - View the charges applied to your last call or all calls. This service is network dependent, some operators are unable to support this.

Data volume - View the amount of all your received and sent data in Kilo bytes.

TIP! From any call log select **Options** and then **Delete** to delete selected items.

TIP! Use the navigation keys to highlight any single call entry in order to view the date and time of the call. To view the call duration select **View**.

Using call divert

- 1 Press , select **Settings**.
- 2 Select **Call**, then select **Call divert**. (From the Call divert menu you can Deactivate all call diverts by selecting Options then Deavticate all)
- 3 Select between Voice call and Video call.
- 4 Choose whether to divert all calls, when the line is busy, when there is no answer, when you are out of reach.
- 5 Choose **Activate** and input number to be diverted.
- 6 Enter your divert number or select **Search** to browse **Contacts** for your divert number.

Note: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! From the Call barring menu you can Deactivate all call restrictions by selecting Options then Deavticate all

Using call barring

- 1 Press , select **Settings**.
- 2 Select **Call**, then select **Call barring**. (From the Call barring menu you can Deactivate all call restrictions by selecting Options then Deavticate all)
- 3 Select between Voice call and Video call.
- 4 Choose any of the five options:
 - Outgoing calls**
 - International calls**
 - International calls except home country**
 - Incoming calls**
 - Incoming calls when abroad**
- 5 Select **Activate** and enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial number** from the **settings - call** menu to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

Calls

Changing the call settings

1 Press , select **Select Settings** then **Call**.

2 From here you can amend the settings for:

Call divert - Choose whether to divert your calls.

Call barring - Select which calls you would like to be barred.

Call waiting - Be alerted when you have a call waiting.

Fixed dial number - Choose a list of numbers that can be called from your phone.

Excuse message - Save the predefined notification message before you reject a call.

Common settings - Refer to below contents in details.

Video call setting

You can set the screen display when making /receiving a video call.

1 **Use private picture:** Determine whether to show the private image or not

2 **Select private image:** Select the still image to be displayed.

3 **Mirror:** Select to activate the mirror effect or not.

Common settings

Answer mode - Allows you to set the answering method. You can choose between Press send key, Slide up and Press any key.

Send my number

Set by network - Configures with the default settings determined by the service provider.

On - Your number will be sent when making an outgoing call.

Off - Your number will be withheld when making an outgoing call.

Minute minder - Determines whether to sound a tone every 1 minute when you are on the phone.

Auto redial - Allows you to set the auto redial function when a call attempt has failed.

Send DTMF - DTMF allows you to use numerical commands to navigate menus within automated messages.

Save new number - Selecting this option will save numbers that are not already in your contacts upon ending the call.

BT answer mode

Hands-free - You can answer a call using a Bluetooth headset.

Handset - Press  handset to answer a call when using a Bluetooth headset.

Hang up mode - Set whether or not a call is ended upon closing the slide.

Call reject - You can set this feature On and select whether to reject all calls, contacts, groups, unregistered or No caller Id.

Contacts

Searching for a contact

- 1 Select **Contacts** from the main menu.
- 2 Using the keypad enter the first letter of the name of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.

Adding a new contact

- 1 Select **Contacts** and press left soft key **Options**.
- 2 Select **Create new contact**.
- 3 Choose whether to store your new contact on your **Handset** or **USIM** card.
- 4 Enter the information you want in the fields provided and select **Done**.

Or to use a slightly quicker method...

- 1 Enter the number you wish to store and press **Options**.

- 2 Choose **Save number**, and choose either **New contact** or **Update contact**.
- 3 Enter the relevant information and select **Done**.

Adding a contact to a group

You can save your contacts into groups. This is useful for keeping your work colleagues and family separate, for example. There are a number of groups including **Family**, **Friends**, **Colleagues**, **School** and **VIP** already set up on your phone.

- 1 Select **Contacts** and choose **Groups**.
- 2 Scroll to the group you wish to add a contact to and select **View** then select **Assign members**.
- 3 Your contacts list will open. Scroll to any contacts you would like to add to the group and press , then select **Done**.

TIP! You can assign a ringtone to a group. Select the group you wish to assign the ringtone to, select **Options** and Edit Group - Group ringtone.

Note: You can only assign a contact to a group or add a picture to a contact that is saved in your phone (not SIM) memory.

Adding a picture to a contact

You can change the appearance of your contacts in your address book to include a picture.

- 1 Select **Contacts** and choose **Create new contact**.
- 2 Select square image to edit and insert a picture.
- 3 Choose **Change**.
- 4 Choose from **No image**, **Go to images**, or **Take a picture**. If you select **Go to images**, you can choose an image that is saved in your phone memory. If you select **Take a picture**, your camera viewfinder will open, so you can take a picture of your contact. Take the picture then press **Insert**.
- 5 Select **Done**.

Copying your contacts to your USIM / Handset

You can also choose to copy your contacts from your USIM to your handset or from your handset to your USIM.

- 1 Select **Contacts**, Choose **Options** then **Storage location** These steps will only copy individual contacts.
- 2 Press the right navigation and chose from Copy to **USIM/ Handset** or Move to **USIM/ handset**.
- 3 Press **Select** if you are sure.

Note To copy all contacts to or from the Handset go to Contacts and select Options, then Settings, then Copy all, and then select the direction in which to copy the Contacts.

Messaging

Messaging

Your GU285 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) and email, as well as the network's service messages. To use these functions press  and select **Messaging**.

Sending a message

- 1 Create a new message press , select **Messaging** and choose **Create new message**.
- 2 Choose **Message** to send an SMS or MMS.
- 3 A new message editor will open. Message editor combines SMS and MMS in one intuitive mode. The default setting of the message editor is SMS mode.
- 4 Enter your message using the keypad. See **Entering text** on the next page for more information on how to enter text.

- 5 Select **Options** and choose **Insert** to add an **Image, Video, Sound, Symbols, Template, Emoticon, Name & Number, New slide, Subject** or **More**.
- 6 Select **Send**.
- 7 Choose a contact from the list of contacts or to enter a number select **Number** and then enter the number.



WARNING: If an **Image, Sound, Video, New slide** or **Subject** is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: T9 mode, Abc mode, and 123 mode.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

To turn on T9 mode in the text entry field, choose Options, select T9 On or simply press  and hold for several seconds. With T9 on, you can switch text input mode by pressing . You will notice the text input mode indicator in the upper left corner of the display.

Complete each word with a space by pressing **0**.

To delete a character, press  key.

T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. For example, press **8, 3, 5, 3, 7, 4, 6, 6, 3** to write 'telephone'.

To input a symbol in the text entry field, press the  key and select a symbol, then select OK.

Text input mode using the keypad

When you want to enter text, for example when writing a letter, if you are entering a number, for example when making a call, the keypad number keys will default to numbers.

Setting up your email

You can stay in touch on the move using email on your GU285. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Press , select **Messaging** and choose **Settings**.
- 2 Select **E-mail** and then choose **E-mail accounts**.
- 3 Select **Add** and follow the pop up instruction and enter the information required.

Messaging

Sending an email using your new account

To send/receive an email, you should set up an email account (see above).

- 1 Press , select **Messaging** and choose **Create new message**.
- 2 Choose **E-mail** and a new email window will open.
- 3 Enter the recipient's email address in the To section and the subject of the email in the Subject area.
- 4 Enter your message using the keypad.

MailBox - This contains all your email messages. Select the account you want to use then select **Retrieve**. Your GU285 will connect to your email account and retrieve your new messages.

Message folders

Press , then select **Messaging**. The folder structure used on your GU285 should be self-explanatory.

Create new message - Create your new message.

Inbox - All the messages you receive are placed into your Inbox. From here you can reply, forward and more. See **Managing your messages**.

Mailbox - All the mails you receive are placed into your Mailbox.

Drafts - If you don't have time to finish writing a message, you can save what you have written so far in here.

Outbox - This is a temporary storage folder used while messages are being sent and the messages which have failed to send.

Sent items - Copies of all the messages you send are kept into your Sent folder.

My folders - You can move messages of Inbox or Sent messages into My folders. You can move those messages of My folders into the Inbox.

Templates - A list of prepared useful messages which you can edit, useful for a quick reply.

Emoticons - You can add, edit and delete emoticons. You can insert the emoticon which you preferred on writing a message.

Managing your messages

You can use your **Inbox** to manage your messages.

- 1 Press , select **Messaging** and choose **Inbox**.
- 2 Select **Options** and then choose to:

Reply - Send a reply to the selected message.

Forward - Send the selected message on to another person.

Call - Call the person who sent you the message.

Save number - Save the number of the message.

Delete - Delete the selected message.

Create new message - Write a new Message, Email, regardless who sent you message.

Multi selection - Mark a message or all.

Copy & Move - Choose to copy or move the selected message to the SIM card or Handset.

Filter - Displays messages by desired message types.

Message info - You can check the type, subject, where it is from, and its date and time.

If you see the message **No space for messages**, you can delete either messages or saved files to create more space.

Using templates

You can create templates for the **Text** and **Multimedia** messages you send most frequently. There are some templates already on your phone, which can be edited if you wish.

- 1 Press , select **Messaging** and choose **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. In text template menu, you can then

Messaging

select **Options** and choose **Edit** to change existing templates, or **Add new** to create new template.

- 3 To send a template, select **Messaging** and choose **Create new message**. Choose **Message**
- 4 Choose **Options** and select **Insert**, choose **Template**.
- 5 Choose template you want to send and select **Send**.

Changing your text message settings

Your GU285 message settings are pre-defined so that you can send messages immediately.

If you would like to change the settings, you can do this using the **Settings** options.

Press , select **Messaging**, then choose **Settings** and **Text message**.

You can make changes to:

Text Message centre - Enter the details for your message centre.

Delivery report - Choose to receive confirmation that your message was delivered.

Validity period - Choose how long your message is stored at the message centre.

Message types - Choose text, Voice, Fax, X.400 or Email.

Character encoding - Choose how your characters are encoded. This affects the size of your message and therefore data costs.

Send long text as - Choose whether to send your message as Multiple SMS or MMS when you enter a text longer than 2 pages in the message field.

Changing your multimedia message settings

Your GU285 message settings are pre-defined so that you can send messages immediately.

If you would like to change the settings, you can do so using the **Settings** options.

Press , select **Messaging**, then choose **Settings** and **Multimedia message**.

You can make changes to:

Retrieval mode - Choose to automatically or manually download multimedia messages depending on whether you are at home or roaming.

Delivery report - Choose to request or allow a delivery report.

Read reply - Choose to request or allow a read reply.

Priority - Choose the priority level of your multimedia message.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on screen.

Creation mode - Allows you to select the contents type supported by MMS. (**Restricted**, **Warning** and **Free**)

Delivery time - Configures the delivery time of message to the recipient. The Multimedia message

centre will deliver the message after the delivery time.

MMS centre - Allows you to configure network information such as the MMSC and the Internet profile, to send a multimedia message.

Changing your email settings

You can adapt your email settings to your own preferences.

- 1 Press , select **Messaging** and choose **Settings**.
- 2 Select **E-mail** then you can adapt the following settings:

E-mail accounts - You can set up an email account.

Allow reply e-mail - Determines whether to allow sending a read confirmation mail for a read confirmation mail request.

Request reply e-mail - Determines whether to request a read confirmation mail.

Retrieve interval - Choose how often your GU285 checks for new email messages.

Messaging

Retrieve amount - Choose how many e-mails are retrieved in selected time.

Include message in fwd & reply - Choose whether or not to include the original message.

Include attachment - Choose whether or not to include the original attachment.

Auto retrieval in roaming - Choose whether or not to automatically retrieve your messages when roaming.

New e-mail notification - Choose whether or not to be alerted to new emails.

Signature - Switch this feature on and Create an email signature.

Priority - Choose the priority level of your email messages.

Changing your other settings

Voicemail - You can edit the Voicemail.

Service message - Here you can switch off Service message, which means your messages will no longer be pushed directly to your device as they are received, only when you check for new messages. You can also change your service message security.

Info. service - Choose the Cell broadcast, channels and language of your info messages.

Camera

Taking a quick photo

- 1 Press  to open the viewfinder.
- 2 Position the phone so you can see the subject of your photo.
- 3 Press  to take a photo.

Before you take your photo

Press **Preview** in **Settings** for the following options: Some of those settings will be shown at **Video Camera** Settings, too.

Image size- See **Changing the image size** on page 39.

Preview size - Select the preview image: **Full image** or **Full screen**.

Effect - Choose from four colour tone options: **None** (normal colour), **Sepia**, **Black & White** or **Negative**.

White balance - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Indoors** or **Cloudy**.

Night mode - You can take better pictures at night by selecting **On**.

Timer - The timer allows you to set a delay after the capture button is pressed before the camera fires. Choose from **None**, **3 Sec**, **5 Sec** or **10 Sec**. Great for when you want to include yourself in the photo.

Shot Mode - Choose from **Normal**, **Burst shot** and **Frame shot**. **Burst shot** lets you to take up to **Three**, **Six**, **Nine** shots automatically in very quick succession, great for taking photos of moving objects or at sporting events.

Camera

Quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper a photo will be. The file size will increase as a result, which means you will be able to store fewer photos in your memory.

Press **Others** in Settings for the following options:

Memory - Allows you to select the default save location, choose between Handset and External.

Hide icons - Select the display of icon: Auto/ Manual.

Sound - Select shutter sound when taking a picture.

Swap Cam - select internal / External.

After you've taken your photo

Your captured photo will appear on the screen. The name of the image is shown at the top of the screen and you will see five options displayed on the left side of the screen.



Images - Choose this to look at the other photos in your album. Your current photo will be saved.



Send - Select this send the photo as a **Message, Email** and **Bluetooth**. See page 30 for **Sending a message**.



New - Use this to take another photo straightaway. Your current photo will be saved.



Use as - Select to open a sub menu to use your image as **Wallpaper, Picture ID, Start up** or **Shut down**.



Delete - Deletes the photo you have just taken. Confirm this by selecting **Yes**. The viewfinder will reappear.

Changing the image size

You can change the size of the photo to save memory space. The more pixels means the larger the file size, this in turn means they take up more of your memory. If you want to fit more pictures on your phone you can alter the pixel number to make the file size smaller.

- 1 Press **Settings** and select **Image size** from the toolbar.
- 2 Select a pixel value from the six numerical options.
- 3 Press **Select** to save your changes.

Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and also from the Home screen. From the viewfinder, simply press **images**. From the Home screen press , then select **My stuff** and **Images**.
- 2 Use the navigation keys to select the photo you want to view and select **View** to open it.

Setting a photo as Wallpaper

From your image gallery, use the navigation keys to select an image and choose **Options** and **Set as** to use the selected image as **Wallpaper, Picture ID Start-up** or **Shut down, Incoming call** or **Outgoing call**.

Note: Picture ID can only be added to contacts saved to your phone, not your SIM.

Video camera

Shooting a quick video

- 1 Press .
- 2 Use the navigation left key and select video camera.
- 3 Point the camera lens towards the subject of the video.
- 4 Press  to start recording.
- 5 **Rec** will appear in the bottom of the viewfinder and a timer will show the length of your video.
- 6 To pause the video select **Pause** and resume by selecting **Resume**.
- 7 Select **Stop** to stop recording.

Before you take your video

Videos - Select to look at the other video clips in your album

Camera - Convert from video camera mode to still camera mode.

Rec. - Start video recording

Zoom - Adjust the zoom using  or .

Brightness - The higher the level, the brighter the screen.

After you've shot your video

The name of the video is shown along the bottom of the screen and five options will be displayed at the bottom of the screen.

Videos - Select to look at the other video clips in your album. Your current video clip will be saved.

Play - Select to play the video you have just recorded.

New - Select to shoot another video straight away. Your current video will be saved.

Send - Select to send the video as a **Message, E-mail** or **Bluetooth**. See page 30 for **Sending a message**.

Delete - Delete the video you have just recorded and confirm by selecting Yes. The viewfinder will reappear.

Watching your saved videos

- 1 You can access your saved videos either from within video camera mode. From the Home screen you should press , then select **My stuff** and **Videos**.
- 2 Your gallery will appear on screen.
- 3 Use the navigation keys to select the video you want to view and press  key to watch it.

Music

Music

Your LG GU285 has a built-in MP3 player so you can play all your favourite music.

To access the MP3 player, press  and select **Music**. From here you have access to:

Last played song - You can replay the music which you recently listened.

All songs - Contains all of the songs you have on your phone.

My playlists - Contains any playlists you have created.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Shuffle tracks - Plays tracks in random order

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable. To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you should to accept it on your phone by selecting **Yes**.
- 4 The file should appear in **All songs**.

Note : As a result of the Digital Rights Management (DRM) system, some of the media items you download from the Internet or receive by MMS may have a "Purchase right" menu to access them. You can acquire the key to purchase the right from the website which owns the rights to the contents.

Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

FM radio

Your LG GU285 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

NOTE: You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).

Voice recorder

Using the Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

Recording your voice memo

- 1 Press  and select **Tools**, then choose **Voice recorder**.
- 2 Press  key to begin recording.
- 3 Choose **Stop** to end the recording.
- 4 Press **Options** and select **Play** to listen to the recording.

Note: You can listen to all of the voice recordings you have saved by selecting **Go to sounds**.

Sending a voice recording

- 1 Once you have finished recording, select **Options**.
- 2 Select **Send via** and choose from **Message**, **Email**, and **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

My stuff

You can store any multimedia files in your phone memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone memory.

All your multimedia files are saved in **My stuff**. Press  then select **My stuff** to open a list of folders.

Images

Images contains a folder of default images and default flash files pre-loaded onto your phone, images downloaded by you and images taken on your phone camera.

Pictures options menu

The options which are available to you in **Images** depend on what type of image you have selected.

In the **Images** folder, select **Options** to bring up the following options.

Delete - Delete the selected image.

Set as - Set the selected image as your **Wallpaper, Picture ID, Start-up, Shut down, Incoming call** and **Outgoing call**.

Rename - Change the file name of selected image.

Move - To move image to a different folder.

Copy - To copy image to a different folder.

Send via - Send the selected image to a friend via **Message, Email, Bluetooth**.

Print via Bluetooth - Print an image file via **Bluetooth**.

File info. - (Name, Size, Date, Time, Resolution, Type and Protect) of the selected image.

Multi- selection - Select one or more image(s) to delete.

Search - Search the image with file name.

My stuff

Sort by - Arrange your images by **Date**, **Type** or **Name**.

Slide show - Watch a slide show of your images.

Grid view/List view - Change the way you view your photos.

Memory info - You can view the memory status (Handset memory or External memory).

Delete all - Delete all images.

Sending a photo

- 1 Press  then select **My stuff**.
- 2 Select **Images**.
- 3 Select a photo and choose **Options**.
- 4 Select **Send via** and choose from **Message**, **E-mail**, **Bluetooth**.
- 5 If you choose **Message** or **Email**, your photo will be attached to the message and you can write and send your message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

Organising your images

- 1 Press  then select **My stuff**.
- 2 Select **Images**.
- 3 Choose **Options** then select **Sort by**.
- 4 Choose from **Date**, **Type** or **Name**.

Deleting an image

- 1 Press  then select **My stuff**.
- 2 Select **Images**.
- 3 Select an image and press **Options**.
- 4 Select **Delete** and confirm by pressing **Yes**.

Creating a slide show

If you want to look at all of the images on your phone, or scan through what you've got, you can create a slide show to save having to open and close each individual image.

- 1 Press  then select **My stuff**.
- 2 Select **Images**.
- 3 Choose the photo you would like to begin the slide show and select **Options**.
- 4 Choose **Slide show** and it will begin.
- 5 Press **Stop** to stop the slide show and **Back** to end the slide show and return to the **Images** folder.

During the slide show, press **Options** to choose **Full screen view** and Landscape view and settings. Select full screen view to view in fullscreen mode, Landscape view to change the orientation of the Pictures and settings to set the repeat type, Duration.

Sounds

The **Sounds** folder contains the **Default sounds**, your **Download ringtones** and sound files downloaded by you. From here you can manage, send or set sounds as ringtones.

Using a sound

- 1 Press  then select **My stuff**.
- 2 Scroll to and select **Sounds**.
- 3 Select a sound and press **Play** to listen to it.
- 4 Select **Options**, Set as and choose from **Voice ringtone**, **Video ringtone**, **Ringtone ID**, **Message tone**, **Start up** and **Shut down**.

Videos

The **Videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

My stuff

Watching a video

- 1 Press  then select **My stuff**.
- 2 Scroll to and select **Videos**.
- 3 Select a video and press **Play**.

Using options while video is played

By selecting **Options**, the video you are playing and you can choose from:

Delete - Delete the video.

Set as - You can use a video clip as ringtone.

Send via - Send via **Message, Email, Bluetooth**.

File info - View details of the video.

Landscape view - Reorientate the video.

Repeat - Repeat the video.

Sending a video clip

- 1 Press  then select **My stuff**.
- 2 Scroll to and select **Videos**.
- 3 Select the video clip you want and press **Options**.
- 4 Press **Send via** and choose from **Send via - Send via Message, E-mail, Bluetooth**.
- 5 If you choose **Message** or **E-mail**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

Note: The video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all.

Games

You can keep downloaded games in this folder

Applications

You can keep your downloaded applications in this folder

Others

From the **Others** menu, you can view the files which are not saved in the Pictures, Sounds, or Videos.

Games & Apps

Games & Apps

Your GU285 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.

Playing a game

- 1 Press  and select **Games & Apps** and then **Games**.
- 2 You can use this menu to download new games and play the demo games already on your phone.

Note: An additional cost is incurred when connecting to the game download service. Check your data charges with your network provider.

Organiser

Adding an event to your calendar

- 1 Press , and select **Organiser**, then **Calendar**.
- 2 Select the date you would like to add an event to. You can choose a date either by scrolling to it using the navigation keys or by selecting **Options** and **Go to date** in order to enter a date.
- 3 Select **Options** then **New schedule** and scroll down and enter the time you would like your event to begin. Scroll down and enter the end time of your event.
- 4 Enter a **Subject** for the event. Use the keypad to type letters and numbers.
- 5 Scroll down again and choose whether you would like to set an **Alarm** for the event. Scroll left or right to see the available options. You can set the alarm to go off at the starting time of the event or at a set period of time before the event starts to remind you the event is coming up.
- 6 Scroll down once more to select whether the event is occurring **Once** or repeated at **Daily**, **Weekly**, **Monthly** or **Annually** intervals. Also you can choose User setting. If the event is repeated, you can also scroll down to enter an **Expiration date** for when the events will stop completely.
- 7 Select **Done** and your event will be saved in the calendar. A square cursor will mark the days of any saved events.

Editing a calendar event

- 1 From the Home screen press , and select **Organiser**, then **Calendar**.
- 2 You can see a list of all your events. Scroll to the event you would like to edit and select **View**.
- 3 Press **Options** and Select **Edit** and scroll to the event detail you want to change. Make your modifications and select **Done** to store the edited event.

Organiser

Note: You can delete an event from your calendar by viewing the event and then pressing **Options** and **Delete**.

Sharing a calendar event

- 1 From the Home screen press , and select **Organiser**, then **Calendar**.
- 2 Choose the event you would like to share and select **Options**.
- 3 Choose **Send via** and select from **Text message, MMS, E-mail** or **Bluetooth**.
- 4 Press **Send** and search a contact, press **Send**

Adding To-do list

You can view, edit and add tasks to do. Tasks are displayed in time order.

Adding a memo

- 1 From the Home screen press , and select **Organiser**, then **Memo**.
- 2 Select **New memo** and type your memo.
- 3 Select **Save**.
- 4 Your memo will appear on screen the next time you open the memo application.

TIP! You can edit an existing memo. Select the one you want to edit, press **Options** and select **Edit**.

Date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed.

Tools

Quick menu

You can specify functions to save in the Quick menu. If you save frequently used functions in the Quick menu, you can quickly use them by pressing the corresponding key.

Setting your alarm

- 1 Press , and select **Alarm clock**.
- 2 Press **New alarm**.
- 3 Scroll down and enter the time you would like the alarm to sound at.
- 4 Choose the repeat type to indicate whether you would like your alarm to sound **Once, Daily, Mon - Fri, Mon - Sat, Except holiday**, or **Choose weekday**.
- 5 Scroll down and choose whether you would like the alarm type.
- 6 Scroll down to choose the interval of alarm snooze.
- 7 Scroll down and enter a name for the alarm or keep the suggested name.
- 8 Select **Done**.

Using your calculator

- 1 Press , and select **Tools**, then **Calculator**.
- 2 Press the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, ×, ÷) using the navigation keys followed by =.
- 4 For more complex calculations, select **Options** to choose a command.
- 5 Select Clear key to clear the screen and start a new calculation.

Tools

Using the stopwatch

- 1 Press , and select **Tools**, then **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Choose **Lap** if want to record a lap time. Up to 99 lap times can be saved
- 4 Select **Stop** to end the timer.
- 5 Choose **Resume** to restart the stopwatch at the time you stopped it at or select **Reset** to return to zero.

Converting a unit

- 1 Press , and select **Tools**, then **Unit Converter**.
- 2 Choose whether you would like to convert **Currency, Area, Length, Weight, Temperature, Volume** or **Velocity**.
- 3 Scroll left and right to select a unit, then scroll down and enter the unit quantity.

- 4 Scroll down to the unit conversion box and choose the unit measurement you want to convert into. The conversion will show automatically in the line below.

Note: For Currency convert, you need to set 'Rate' according to current Exchange rate first.

Adding a city to your World time

- 1 From the Home screen press , and select **Tools**, then **World clock**.
- 2 To find out the time of specific city, press **Options** and select **New city**.
- 3 Scroll down the list or enter the first letter of the city. Also you can select Map and choose a city.
- 4 Press Select.

TIP! You can select the first letter of the city required from the keypad to speed up the process

Browser

With a browser at the tip of your fingers, you can get up to date news and weather forecasts, as well as information on sports or traffic, whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.

Accessing the web

- 1 Press  and select **Boost Live**.
- 2 To access the **Homepage**, select **Home**.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 Press  and select **Boost Live**.
- 2 Select **Bookmarks**. A list of your bookmarks will appear on the screen.
- 3 To add a new bookmark, select **Options** and choose **New bookmark**. Enter a name for your bookmark followed by the URL.
- 4 Press **Done**. Your bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply scroll to the required bookmark and select **Connect**. You will be connected to your bookmarked page.

Browser

RSS reader

RSS reader provides news updates for the websites registered on your phone.

Saving a page

- 1 Access your required web page
- 2 Choose **Options** and scroll to **Save**, select **This page**.
- 3 Select **OK**.

Accessing a saved page

- 1 Press  and select **Boost Live**.
- 2 Select **Saved pages**.
- 3 Select the required page and press **Open**.

TIP! This menu will also allow you to delete saved pages.

Viewing your browser history

- 1 Press  and select **Boost Live**.
- 2 Select **History**.
- 3 A list of web page titles you have accessed recently will be displayed. To access one of these pages, scroll to the required page and select **Open**.

Changing the web browser settings

- 1 Press  and select **Boost Live**.
- 2 Select **Settings**.
- 3 You can choose the way your mobile handles, displays and uses information when browsing the internet. You can amend settings within **Profiles, Character encoding, Scrolling control, Show image, Java script Cache, Cookies, Security, and Reset settings**.
- 4 Once you have changed your settings, press **Select**.

Settings

Within this folder you can adapt your settings to make your GU285 personal to you.

Note: For information on call settings see page 26.

Changing your profiles

- 1 Choose **Settings** and choose **Profiles**.
- 2 Choose from **Normal, Silent, Outdoor** and **Flight mode**.

Tip! Use this function to switch the flight mode **On** or **Off**. You will not be able to make calls, connect to the internet or send messages when **Flight mode** is switched **On**.

Customising your profiles

You can customise each profile setting.

- 1 Press **Settings** and select **Profiles**.
- 2 Choose the profile you want, select **Options** and choose **Personalise**.

- 3 You can change all of the tones, its volumes and alert options from here.

Changing your date & time

You can set functions relating to the date and time.

- 1 Press  and open **Settings**.
- 2 Select **Date & Time** and choose from the list below:

Date & time setting - You can set the date and time, as well as change your Auto update and daylight savings settings

Time format - You can set the time format to either 24 hours or 12 hours.

Date format - (YYYY.MM.DD, DD.MM.YYYY, MM.DD.YYYY).

Date separator - set how the date is separated. (choose from / or . or -)

Note set Auto update to on and the phone will automatically update the date and time

Settings

Note Select whether to activate the daylight saving function or not. You can set the Summer time difference of selected home city for 1 hour or 2 hours.

Changing the language

Go to **Settings**, select **Phone** and choose **Language** Main language , Writing language, to change the language for any text in your phone. Any change will also alter the language input mode.

Changing your security settings

Change your security settings to keep your GU285 and the important information it holds protected.

- 1 Press  and open **Settings**.
- 2 Select **Security** and choose from the list below:

Handset lock - Choose a security code to lock your phone **When switch on, When SIM changed, Immediately, None**.

Lock application - choose to lock particular applications, like Contact or Messaging, so you can only access them with the Security code on the handset.

PIN code request - Choose a PIN code to be requested when you turn your phone on.

Change codes - Change your **PIN code, PIN2 code** or **Lock code**.

Note: Lock code (4 digits) The **Lock code** protects the unauthorized use of your phone. It is usually supplied with the phone. This code is required to delete all phone entries and to activate "Reset settings" menu. The default number is "0000".

Changing your display settings

- 1 Press  and select **Settings**.
- 2 Select **Screen** and choose from:

Homescreen - Select **Home screen** and choose a wallpaper to appear on your screen, Also you can set display item.

Handset theme - Quickly change the whole look of your screen.

Menu style - Change the menu view from **List style** to **Grid style**.

Font - Change the font size from Small, Medium, Large and Very large.

Greeting Message - After selecting On, you can write a welcome message. The message will appear on screen whenever you start-up the phone

Backlight - Choose how long the backlight remains on. Also, Use the navigation keys to adjust the Main screen brightness. Choose from 0%, 20%, 40%, 60%, 80% or 100%.

TIP! The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Other screens - Set the screen when making or receiving a call or switching on/ off the phone.

Resetting your phone

Use **Reset settings** in **Settings** to reset all the settings to the factory definitions. You need the security code to activate this function.

Viewing memory status

Your GU285 has three Memory locations available: the phone, the USIM card and an external memory card (you may need to purchase the memory card separately).

You can use the Memory info to see how much space is available for each memory location.

Press **Settings** and choose **Memory info** and you will then see the current status of the memory locations (Handset common memory, Handset reserved memory, USIM memory and External memory) in your GU285.

Connectivity

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone straightaway. If you want to change any settings, use this menu.

Select **Settings** and choose **Connectivity**. Your options are:

Bluetooth - Set up your GU285 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

USB connection - You can select the default USB connection mode.

Network - You can set **Select network** and **Network mode** settings using this menu. Also you can add a preferable network to be connected to **Preferred lists**.

Internet profiles - This menu shows the Internet profiles. You can create new profiles, delete or edit them using the Options menu. However, you cannot delete or edit default configurations.

Access points - This menu shows the access points list. You can create new profiles, delete or edit them by using the Options menu. However, you cannot delete or edit default configurations.

Packet Data Conn. - If you select the 'When available' option, your phone is automatically registered to a GPRS network when you switch the phone on. If you select "When needed", the GPRS connection is established for the duration of a WAP or application connection.

Streaming settings - Your network operator has already saved this information. You can edit it if you want to make changes.

Changing your Bluetooth settings

- 1 Select **Connectivity**, then choose **Bluetooth**.
- 2 Choose **Settings**. Make your changes to:

My device visibility - Set [My device visibility] [Visible] so that other devices can detect your phone when they are searching for a Bluetooth device. If you select Hidden, other devices will not be able to detect your phone when they are searching for a Bluetooth device. If you select Visible for 1 min other devices will not be able to detect your phone within 1 min.

My device name - You can name or rename your phone as it will appear on other devices. Your phone's name will be shown on other devices only when My device visibility is set to Visible.

Supported services - You can view the list of devices such as headsets and handsfree supported by this Bluetooth enabled phone.

My address - Check your Bluetooth address here.

Note : To improve security, we recommend that once you have configured or paired with a device, Visibility be set to Hidden. For incoming connections, regardless of whether or not the other device has been paired with your phone, you can choose to accept or reject the connection

Pairing with another Bluetooth device

By pairing your GU285 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **Turn on** and **Visible**. You can change your visibility in the **Settings** menu, by selecting **My device visibility**, then **Visible**.
- 2 From **Bluetooth**, choose **Turn on** and Select **Search new device**

Connectivity

- 3 Your GU285 will search for devices. When the search is completed **Add** and **Retry** will appear on screen.
- 4 Choose the device you want to pair with, select **Add** and enter a passcode then choose **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place it in pairing mode and pair your devices.
- 3 Your GU285 will then automatically connect to your Bluetooth headset and switch to headset profile.

Transferring a file to your phone

You can also transfer files from your computer to your phone using Bluetooth.

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.

Note: Files sent using Bluetooth will be saved to the phone memory.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy.

You can also connect to a Bluetooth headset to make and receive calls.

Before you can start sharing files using Bluetooth, you will need to pair your phone with another Bluetooth device. For information on pairing devices, see **Pairing with another Bluetooth device**.

To switch Bluetooth on:

- 1 Select **Connectivity**, then choose **Bluetooth**.
- 2 Select **Turn on**.
- 3 Select **Turn off** to switch Bluetooth off.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Select **Options** and choose **Send via**, then **Bluetooth**.

- 3 Select **Yes** to turn Bluetooth on if it is not already activated.
- 4 Your GU285 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and select **Send**.

To receive a file:

- 1 To receive files, your Bluetooth must be both **Turn on** and **Visible**.
- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.

TIP! Keep an eye on the progress bar to make sure your file is sent.

Note The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under licence. Other trademarks and trade names are those of their respective owners.

Connectivity

USB connection mode

You can select the USB connection mode on your phone for several uses.

Always ask mode

If you set the “Ask always” as default, the phone will always prompt you to select a type of USB connection mode each time you connect the phone to a PC via the data cable. If you disable the “Ask always”, the connection mode will be the one you have manually set in Menu - Settings - Connectivity - USB Connection and one of the options Mass storage, PC Suite, or Music sync.

Mass storage-Use your phone as a mass storage device

Your GU285 can be used as a mass storage device, just like a USB stick. This is a great way of moving your files from your computer to your phone. If you've inserted a memory card, when connecting as **Mass storage**, an External memory card is required for Mass storage mode.

- 1 Attach the USB cable to the device.
- 2 Select Mass storage from the popup menu in the device.
- 3 A removable disk folder will open automatically on your computer showing all the folders on your memory card.
- 4 Drag and drop your photos, videos, music or documents into the correct folders.
- 5 Safely remove your phone by clicking on the **Safely remove hardware** icon in your desktop toolbar.

Note : This function is not available for Macintosh computer.

PC suite-Synchronise your phone with your PC

You can synchronise your phone with your PC to make sure all your important details and dates match, but also to backup your files to put your mind at ease.

Installing LG PC Suite on your computer

- 1** Go to www.lgmobile.com and choose Asia & Pacific first and then Australia.
- 2** Select Manual & Software and click download, then select Run, install the LG Mobile Support Tool. Run application and connect your phone to the computer using a USB cable. Follow the instructions to install the required drivers. To download the PC suite select Download Mobile Sync in the LG Mobile Support Tool, then select download. The PC suite will be downloaded to a folder in your C drive called GU285. open this folder and open the LGInstaller.exe file.
- 3** Select the language you would like the installer to run in and click OK.
- 4** Follow the instructions on screen to complete the LG PC Suite Installer wizard.
- 5** Once installation is complete, the LG PC Suite icon will appear on your desktop.

Connecting your phone and PC

- 1** Connect the USB cable to your phone and your PC.
- 2** Select PC Suit from the popup menu in the device.
- 3** Double click on the LG PC Suite icon on your desktop.
- 4** Click on Connection Wizard, then USB.
- 5** Click on Next, then Next again, then Finish. Your phone and PC are now connected.

Backing up and restoring your phone's information

- 1** Attach the USB cable to the device and select the PC Suite on the screen.
- 2** Click on the Backup icon, and select Backup or Restore.
- 3** Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Click OK.
- 4** Your information will be backed up.

Connectivity

Viewing your phone files on your PC

- 1 Attach the USB cable to the device and select the PC Suite on the screen.
- 2 Click on the Contents icon.
- 3 All of the documents, flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen in the LG Phone folder.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

Synchronising your contacts

- 1 Attach the USB cable to the device and select the PC Suite on the phone screen.
- 2 Click on the Contacts icon.
- 3 Your PC will now import and display all contacts saved to your USIM card and handset.
- 4 Click on File and select Save. You can now select where you would like to save your contacts to.

Note To backup contacts saved to your USIM card, click on the SIM card folder on the left side of your PC screen. Select Edit at the top of the screen, then Select all. Right-click your contacts and select Copy to Phone Memory. Confirm you want to copy the contacts by selecting yes in the pop-up box. Select the type of Number you have stored for your contact(s). Now click on the Handset folder with Phone Memory on the left of your screen and all your numbers will be displayed.

Synchronising your messages

- 1** Attach the USB cable to the device and select the PC Suite on the screen.
- 2** Click on the Messages icon.
- 3** All of your PC and phone messages will be displayed in folders on your screen.
- 4** Use the tool bar at the top of your screen to edit and rearrange messages.

Phone Software update

LG Mobile Phone Software upgrade on web site

For more information and using this function, Please visit LGmobile.com site path: <http://www.lgmobile.com>
- select country - Manual & software banner

This Feature allows you to upgrade your software to the latest version over the internet without needing to visit our service center.

As the mobile phone software upgrade requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or battery during the upgrade may seriously damage your mobile phone. To the extent permitted by law, the manufacturer takes no responsibility for loss of data during the upgrade process. You are advised to back up any important information in advance for safekeeping as the software upgrade could result in the deletion of personal data.

Accessories

These accessories are available for use with your GU285.

Charger



Data cable

Connect and synchronise your GU285 and PC.



Battery



User Guide

Learn more about your GU285.



Stereo headset



Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Technical data

General

Product name : GU285

System : GSM850 / E-GSM900 / DCS1800 / PCS1900 / WCDMA

Ambient Temperatures

Max : +55°C (discharging) +45°C (charging)

Min : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GU285

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1

EN 301 489-17 V1.2.1, EN 301 489-24 V1.4.1

EN 301 511 V9.0.2

EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,

EN 300 328 V1.7.1

EN 50360:2001/EN62209-1:2006

EN 60950-1 : 2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Wallon-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, J / Director

Issued Date

16.Oct. 2009

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Signature of representative

Trouble Shooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy for you to correct yourself.

Message	Possible causes	Possible Solutions
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure the SIM card is correctly inserted.
No network connection	Signal weak Outside GSM network area	Move towards a window or into an open area. Check the service provider coverage map.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider, or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.

Message	Possible causes	Possible Solutions
Phone cannot be switched on	On/Off key not pressed long enough	Press the On/Off key down for at least two seconds.
	Battery empty	Keep charger attached for a longer time.
	Battery contacts dirty	Clean the contacts.
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check the power supply and connection to the phone. Check the battery contacts and clean them if necessary.
	No mains voltage	Plug in to a different socket or check the voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger Battery defective	Only use original LG accessories. Replace battery.
Phone loses network	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.

MANUFACTURER'S WARRANTY

Australia & New Zealand

1. WHAT THIS WARRANTY COVERS:

LG offers you a warranty that the enclosed Product and its enclosed accessories will be free from defects in material and workmanship according to the following terms and conditions:

- (1) The warranty for the Product is for ONE (1) year beginning on the date of purchase of the Product.
- (2) The warranty extends only to the original consumer purchaser of the Product ("Customer") and is not assignable or transferable to any subsequent customer. LG offers a warranty for genuine LG battery packs, extending SIX (6) months from the date of purchase.
- (3) This warranty is only valid to the original purchasing Customer for the duration of the warranty period as long as it is purchased and used in AUSTRALIA or NEW ZEALAND.
- (4) During the warranty period, any defective LG Product or part will be repaired or replaced by LG or its authorised service centre, at LG's option, with new or factory rebuilt replacement items. LG or the authorised service centre will return the Product to the Customer in working condition. No charge for either parts or labour in repair or replacement of the Product will be incurred by the Customer. If parts, boards or equipment are replaced, they shall become the property of LG.
- (5) Upon request from LG, the Customer must provide LG with proof of the date of purchase.
- (6) The Customer will bear the cost of transporting, delivering and handling the Product to and from LG or its authorised service centre.
- (7) The benefits available from this warranty are in addition to all applicable statutory rights.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- (2) Defects or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorised modifications, unauthorised connections, unauthorised repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas, unless caused directly by defects in material or workmanship.
- (4) If the Customer does not notify LG of the alleged defect or malfunction of the Product during the applicable warranty period, the Customer shall have no coverage or benefits under this warranty.
- (5) Products which have had the serial number removed or made illegible.
- (6) If the battery short circuits or the seals of the battery are broken or show evidence of tampering, or the battery was used in equipment in a manner other than that which has been specified, the Customer shall have no coverage or benefits under this warranty.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

MANUFACTURER'S WARRANTY

Australia & New Zealand

(12) Defects or damage resulting from breakage of or tampering with the LCD screen.

(13) Where applicable, Products that have been subject to an unauthorised removal or deactivation of the network operator lock function.

3. STATEMENT:

Except for those terms that cannot by law be excluded, all terms other than those expressly contained in this warranty statement are excluded. To the extent permitted by law, LG excludes all liability (whether in contract, tort or otherwise) for any consequential, special, incidental or indirect loss or damage including loss of profit, loss or impairment of privacy of conversations, work stoppage or loss or impairment of data arising out of the use or inability to use the Product.

4. HOW TO GET WARRANTY SERVICE:

To obtain information regarding warranty service, please call the following toll free telephone numbers;

AUSTRALIA:
LG Electronics Australia Pty Ltd
2 Wonderland Drive
Eastern Creek NSW 2766
PO Box 212
HORSLEY PARK NSW 2175
Tel: 1300 LG CARE
(1300 54 2273) Australia
Fax: 02-8805-4201

NEW ZEALAND:
LG Electronics Australia Pty Ltd
Unit A, 38 Highbrook Drive
East Tamaki 2013
PO Box 58195 Greenmount
Auckland 2141
Tel: 0800 LG CARE
(0800 54 2273) New Zealand
Fax: 09-914-2441



LG Electronics Australia Pty Ltd.

