



C E 0168


www.lgmobile.com

MMBB0275218(1.1) W

KM501

ENGLISH

 Bluetooth QD ID B013379

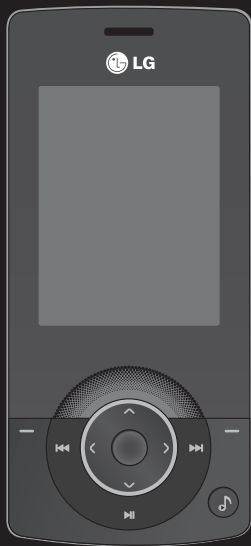

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

KM501 User Guide

Congratulations on your purchase of the advanced and compact KM501 phone by LG, designed to operate with the latest digital mobile communication technology.

SET UP	01
YOUR STANDBY SCREEN	02
THE BASICS	03
GET CREATIVE	04
GET ORGANISED	05
THE WEB	06
SETTINGS	07
ACCESSORIES	08

Contents

01 SET UP

Getting to know your phone	7
Installing the SIM and battery	9
Memory card	11
Menu map	12

02 YOUR STANDBY SCREEN

The status bar	13
----------------------	----

03 THE BASICS

Calls	14
Making a call.....	14
Making a call from your contacts	14
Answering and rejecting a call.....	14
In-call options.....	15
Adjusting the call volume	15
Speed dialling.....	16
Viewing your call logs	16
Using call divert.....	17
Using call barring.....	17
Changing the call settings	18

Contacts	19
Searching for a contact.....	19
Adding a new contact	19
Contact options	19
Adding a contact to a group	20
Renaming a group	20
Adding a picture to a contact.....	21
Copying your contacts to your SIM.....	21
Deleting all your contacts	21
Viewing information	21
Messaging.....	22
Messaging	22
Sending a message	22
Entering text.....	22
Message folders.....	23
Managing your messages	23
Using templates.....	24
Changing your text message settings....	24
Changing your multimedia message settings.....	25
Changing your other settings.....	25

04 GET CREATIVE

Camera	26
Taking a quick photo.....	26
After you've taken your photo.....	26
Using your toolbar options.....	26
Changing the image size.....	27
Viewing your saved photos.....	27
Using zoom when viewing a photo.....	28
Setting a photo as wallpaper or Picture ID.....	28
Video camera	29
Shooting a quick video.....	29
After you've shot your video.....	29
Using your toolbar options.....	29
Watching your saved videos.....	30
Adjusting the volume when viewing a video.....	30
My stuff	31
Images.....	31
Images options menu.....	31
Sending a photo.....	32
Organising your images.....	32
Deleting an image.....	32
Deleting multiple images.....	32
Creating a slide show.....	33
Sounds.....	33
Using a sound.....	33
Videos.....	33
Watching a video.....	33
Using options while video is paused.....	34
Sending a video clip.....	34
Using the video options menu.....	34
Others.....	34
Games and Apps.....	35
Playing a game.....	35
Using the games options menu.....	35
External memory.....	35
Using your phone as a Mass storage device.....	35
Transferring a file to your phone.....	36
Multimedia	37
Music.....	37
Transferring music onto your phone.....	37
Playing a song.....	37
Using options while playing music.....	38
Creating a playlist.....	38
Playing a playlist.....	38
Editing a playlist.....	39
Deleting a playlist.....	39
Using the radio.....	40
Searching for stations.....	40
Resetting channels.....	41
Listening to the radio.....	41
Voice recorder.....	41
Sending a voice recording.....	41

Contents

05 GET ORGANISED

Organiser/Tools.....	42
Adding an event to your calendar.....	42
Editing a calendar event.....	42
Sharing a calendar event.....	43
Adding a memo.....	43
Adding an event to your To do list.....	43
Setting your alarm.....	43
Using your calculator.....	44
Using Tip calculator.....	44
Using the stopwatch.....	44
Converting a unit.....	44
Adding a city to your world clock.....	45

06 THE WEB

The web.....	46
Accessing the web.....	46
Adding and accessing bookmarks.....	46
Saving a page.....	47
Accessing a saved page.....	47
Viewing your browser history.....	47
Changing the web browser settings.....	47

07 SETTINGS

Settings.....	48
Personalising your profiles.....	48
Changing your screen settings.....	48
Changing your phone settings.....	49
Changing your connectivity settings.....	49
Sending and receiving your files using Bluetooth.....	50
Pairing with another Bluetooth device.....	51
Using a Bluetooth headset.....	51
Changing your security settings.....	52

08 ACCESSORIES

Accessories.....	53
Network service.....	54
Technical data.....	54
General.....	54
Ambient Temperatures.....	54
Guidelines for safe and efficient use.....	56

Getting to know your phone

End/Power key

Ends or rejects a call.
Turns the phone on/off.
Press once to return to
the standby screen.

 
Clear key

Deletes a character with
each press. Use this
key to go back to the
previous screen.

Main screen

Call key

Dials a phone number
and answers incoming
calls.

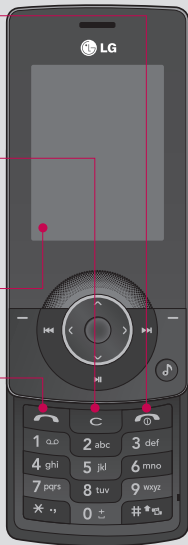

Charger, Cable, Handsfree connector

Volume



 
Capture button



Headset connector

01**02****03****04****05****06****07****08**

Getting to know your phone

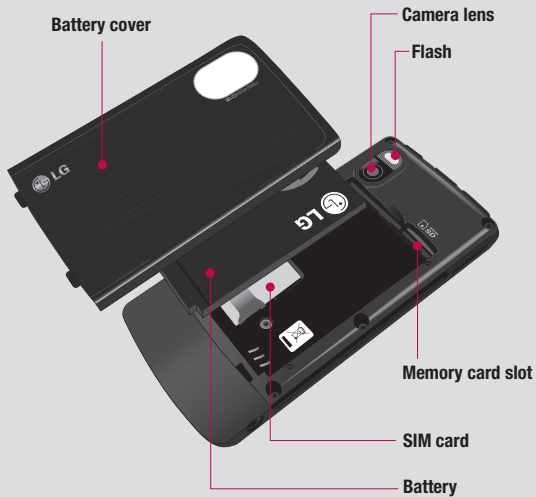

Installing the SIM and battery

 


1 Remove the battery cover

Press and hold down the battery release button at the top of the phone and pull off the battery cover.

WARNING: Do not use your fingernail when removing the battery

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

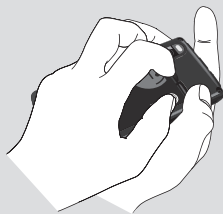

2 Remove the battery

Lever the top edge of the battery and remove it carefully from the battery compartment.



5 Replace the battery cover

Insert the bottom of the battery cover into the edge of the battery compartment and push it until it the cover clicks into place.

01

02

03

04

05

06

07

 
08

Installing the SIM and battery



3 Install the SIM card

Slide the SIM card into the SIM card holder. Make sure that the gold color contact area on the card is facing downwards. To remove the SIM card, pull it gently in the reverse direction.

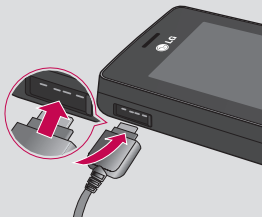

4 Install the battery

Insert the bottom of the battery first into the bottom edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press down the top of the battery until it clips into place.

6 Charging your phone

Slide back the cover of the charger socket on the side of your KM501. Insert the charger and plug into a mains electricity socket. Your KM501 will need to be charged until a message reading Fully Charged appears on screen.

Memory card

Installing a memory card

You can expand the memory space available on your phone using a memory card. The KM501 will support a memory card of up to 2 GB.




- 1 Remove the battery cover and battery as shown on pages 9-10.
- 2 Slide the memory card into the slot at the top, until it clicks into place. Make sure that the gold color contact area is facing downwards.



- 3 Replace the battery cover as shown.

Transferring your contacts

To transfer your contacts from your SIM to your phone:

- 1 From the standby screen press the  or , and choose .
- 2 Select **Copy all**.
- 3 Choose **SIM to Phone** then **Keep original** or **Delete original**.
- 4 Select **OK** to confirm.

01

02

03

04

05

06

07

08

Menu map



GAMES &

APPS

- 1 Games
- 2 Applications
- 3 Network Profiles



CALL HISTORY

- 1 All calls
- 2 Missed calls
- 3 Dialed calls
- 4 Received calls
- 5 Call duration
- 6 Call costs
- 7 Data information



ORGANISER

- 1 Calendar
- 2 Memo
- 3 To do



MULTIMEDIA

- 1 Camera
- 2 Video camera
- 3 FM radio
- 4 Voice recorder



MESSAGING

- 1 New message
- 2 Inbox
- 3 Email box
- 4 Bluetooth box
- 5 Drafts
- 6 Outbox
- 7 Sent
- 8 Listen to voicemail
- 9 Info messages
- 0 Templates
- * Settings



MY STUFF

- 1 Images
- 2 Sounds
- 3 Videos
- 4 Others
- 5 Games & Apps



PROFILES

- 1 General
- 2 Silent
- 3 Vibrate only
- 4 Outdoor
- 5 Headset



CONTACTS

- 1 Search
- 2 New contact
- 3 Speed dials
- 4 Groups
- 5 Copy all
- 6 Delete all
- 7 Settings
- 8 Information



TOOLS

- 1 Alarm clock
- 2 Calculator
- 3 Tip calculator
- 4 Stopwatch
- 5 Unit converter
- 6 World clock
- 7 SIM Services*

* This feature is operator dependent. If your operator supports SIM Tool Kit then this menu will appear.



BROWSER

- 1 Home
- 2 Yahoo
- 3 Bookmarks
- 4 Go to URL
- 5 History
- 6 Saved Pages
- 7 Settings
- 8 Information



MP3 PLAYER

- 1 Now playing*
- 2 All songs
- 3 My playlist
- 4 Artists
- 5 Albums
- 6 Genres
- 7 Shuffle all songs

* Only appears when music is playing.



SETTINGS










- 1 Date & Time
- 2 Languages
- 3 Display
- 4 Connectivity
- 5 Calling
- 6 Security
- 7 Flight mode
- 8 Power save
- 9 Reset
- 0 Memory status












Your standby screen

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth is active.

Below is a table explaining the meaning of icons you are likely to see in the status bar.

Icon	Description
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	New text+voice message
	An alarm is set

Icon	Description
	Vibrate profile in use
	General profile in use
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	GPRS available
	EDGE available
	Roaming
	Flight mode is selected
	Bluetooth

01

02

03

04

05



06

07

08





Calls

Making a call


- 1 Key in the number using the keypad.
To delete a digit press **C**.
- 2 Press the  key to initiate the call.
- 3 To end the call, press the  key.

TIP! Enter + when making an international call, press and hold **0**.

Making a call from your contacts




- 1 Press the  key to open the address book.
- 2 Using the keypad to enter the first letter of the contact you want to call. For example for Office, press **6** three times.
- 3 To scroll through the contacts and their different numbers use  and .
- 4 Press the  key to initiate the call.

Answering and rejecting a call

When your phone rings press the  key to answer the call.

While your phone is ringing, select Silent to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting.

Press the  key to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls in different ways. Press the  or  and , select  and choose **Calling**.
Select **Answer mode** and choose from **Slide open, Any key** or **Send key only**.

In-call options



Adjusting the call volume

To adjust the volume during a call, press the volume keys on the right-hand side of your phone.

Options - Choose from a list of further in-call options, including **Contacts** and **Messaging** so you can check your messages and add contacts during a call.

01

02

03

04

05

06

07

08

Calls

Speed dialling

You can assign a speed dial number to a contact you call frequently.

- 1 Press or and select .
- 2 Select **Speed dials**.
- 3 Your voicemail is set to speed dial 1. You cannot change this. Select any other number either by using the and keys, and pressing the to select **Assign**, or by pressing the hard key number.
- 4 Your address book will open. Select the contact you would like to assign to that number using the and keys, then select **OK**.

To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will initiate automatically; there's no need to press .

Viewing your call logs

Press or and select to view:

All calls - View the complete list of all your dialled, received and missed calls.

Missed calls - View the list of any calls you have missed.

Dialled calls - View the list of all the numbers you have called.

Received calls - View the list of all the numbers that have called you.

Call duration - View details of how long you have spent on your calls.




Call costs - View the charges applied to your dialled numbers and the call duration of all your received and dialled calls. This service is network dependent, some operators are unable to support this.

Data information - View the amount of all your received and sent data in kilobytes.

TIP! From any call log select Options and choose Delete to delete selected or all the recorded items.

TIP! Using and , highlight any single call entry to view the date and time of the call. To view the call duration select Options and choose **View**.

Using call divert

- 1 Press  or , select  and choose **Calling**.
- 2 Select **Call divert**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no reply or when you are out of reach.
- 4 Choose **Activate** and select whether to divert to voicemail, another number or your favourite number.
- 5 Enter your divert number or select **Contacts** to browse for your divert number.

Note: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, choose **Cancel all** from the **Call divert** menu.

Using call barring

- 1 Press  or , select  and choose **Security**.
- 2 Select **Call Barring**.
- 3 Choose any or all of the seven options:
 - All outgoing**
 - Outgoing international**
 - O/G international except home country**
 - All incoming**
 - Incoming when abroad**
 - Cancel all barrings**
 - Change password**
- 4 Select **Activate** and enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial number** from the **Security** menu to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

01

02

03

04

05




06

07

08


Calls

Changing the call settings




- 1 Press  or , select  and choose **Calling**.
- 2 From here you can amend the settings for:
 - Call divert** – Choose whether to divert your calls.
 - Answer mode** – Choose whether to answer the phone using the accept key, any key or by sliding your handset open.
 - Send my number** – Choose whether your number will be displayed when you call someone.
 - Call waiting** – Be alerted when you have a call waiting.
 - Minute minder** – Select **On** to hear a tone every minute during a call.
 - Auto redial** – Choose **On** or **Off**.
 - Closed User Group** – Choose Default, On or Off.
 - Send DTMF tones** – Choose **On** or **Off**.

Contacts


 

Searching for a contact

Press  or , select  and choose **Search**.

Or, using the slightly quicker method...




- 1 Press  from the standby screen.
- 2 Enter the first letter of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use  and .

Adding a new contact

- 1 Press  or , select  and choose **New Contact**.
- 2 Choose whether to store your new contact on your **Phone** or **SIM** card.
- 3 Enter all the information you have in the fields provided and select **Save**.


Or, using the slightly quicker method...

- 1 Enter the number you wish to store from the standby screen and select **Options** and choose **Save as new contact**.
- 2 Enter the relevant information as above and select **Save**.

Note: When you are storing a contact's email address, press  to enter a symbol and scroll with  and  until you see @.

Contact options


There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** above.
- 2 Press  to open the list of options.

From here you can:

Edit - Change any of the contact's details.

Send via - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia message**, via **Bluetooth** or by **Email**.

Delete - Delete the contact. Select OK or press  if you are sure.

New contact - Add a new contact.

Copy to SIM/Phone - Choose to move or copy to the SIM card or phone (depending on where you originally saved the contact).

01

02

03

04

05

06





07

08

Contacts

Adding a contact to a group




You can collect your contacts into groups, for example, keeping your work colleagues and family separate. There are a number of groups including **Friends**, **Colleagues** and **VIP** already set up on the phone.

- 1 Press  or , select  and choose **Groups**.
- 2 Scroll to the group you wish to add a contact to and select **Add**.
- 3 Your contacts will open. Scroll to any contacts you would like to add to the group and select **Options** and **Mark all** (or just press , then **Done**).

TIP! You can assign a ringtone or icon to a group. Select the group you wish to assign the ringtone or icon to and select **Options** and choose an item you want.

Renaming a group




You can rename any of the groups to fit your lifestyle.

- 1 Press  or , select  and choose **Groups**.
- 2 Highlight the one you want to rename.
- 3 Choose **Options**, select **Rename** and enter your new group name.
- 4 Select **Save**.

Note: You can only assign a contact to a group or add a picture to a contact that is saved on your Phone (not SIM) memory.




Adding a picture to a contact

You can change the appearance of your contacts in your address book to include a picture.




- 1 Press  or , select  and choose **Settings**.
- 2 Select **View Options** and choose **With picture**.
- 3 Then return to the address book and select the contact you want to add a photo to.
- 4 Choose Options and select **Edit**.
- 5 Scroll down to the **Picture** section. Choose Options and select **New Picture**. Your camera viewfinder will open, so you can take a picture of your contact. Alternatively you can select a picture from the **Images** file.

Copying your contacts to your SIM




You can also choose to copy your contacts from your SIM to your handset or from your handset to your SIM.

- 1 Press  or , select  and choose **Copy All**.
- 2 Select to copy the contacts from **SIM to Phone** or **Phone to SIM**.
- 3 Choose whether to keep the original records or delete them and then **OK**.

Deleting all your contacts

- 1 Press  or , select  and choose **Delete all**.
- 2 Select to delete contacts from **SIM** or **Phone**.
- 3 Select **OK** if you are sure.

Viewing information




Press  or , select  and choose **Information**.

From here you can view **Service dial numbers**, your **Own number** and your **My business card**.


TIP! If you haven't yet created a business card, the **My business card** screen will give you the option to create one. Select **New** and enter your details as you would for any contact. Choose **Save**.





Messaging

Messaging

Your KM501 combines Text messages, Multimedia messages, Bluetooth messages and Email into one intuitive and easy to use menu. Simply Press  or  and select .


Sending a message

The quick way to begin sending a Text message is to press  from the standby screen and go straight to step 3 below. Otherwise:

- 1 Press  or , select  and then **New message**.
- 2 Choose to send **Text**, **Multimedia** or **Bluetooth**.
- 3 A new message will open.
- 4 Enter your message using T9 predictive mode or Abc manual mode.
See **Entering text** to see how to switch between the different text entry modes.
- 5 Select Options and choose **Insert** to add a symbol, image, animation, sound, text template, contact or business card.
- 6 Select Options and choose **Send to** or just press .


- 7 Enter the phone number or select Options and choose **Contacts** to open your contacts list.

You can add multiple contacts.

- 8 Select Options and choose **Send** or just press .

Entering text

There are two ways to enter text: T9 predictive and Abc manual.

To turn on T9 predictive text, begin a new message, choose Options, select **T9 languages** and choose **T9 on**. With T9 on, you can switch between T9 predictive, Abc manual and numbers by pressing .


T9 predictive

T9 mode uses a built-in dictionary to recognise words you are rewriting based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word as you type. For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.


If the word you want doesn't appear, choose Options and select **New T9 word**. Enter the word using Abc manual mode and your word or name will be added to the dictionary.

Abc manual

In Abc mode you must press the key repeatedly to enter a letter. For example, to write 'hello', press 4 twice, 3 twice, 5 three times, 5 three times again, then 6 three times.

 **WARNING:** You will be charged per 160 character text message for each person that you send the message to.

Message folders

Press  or , select . You'll recognise the folder structure used on your KM501, it's fairly self-explanatory.

Inbox - All the messages you receive are placed into your inbox. From here you can reply, forward and more, see below for details.

Email box - Contains all your email messages.

Bluetooth box - The Bluetooth box folder contains your Bluetooth message folders.

Drafts - If you don't have time to finish writing a message, you can save what you have done so far here.

Outbox - This is a temporary storage folder while messages are being sent.

Sent - All the messages you send are placed into your Sent folder.




Info messages - View all the info messages and updates received from your operator.

Templates - A list of useful messages, already written for a quick reply.

You can also access your voicemail from here by selecting **Listen voicemail** and your messaging settings by selecting **Settings**.

Managing your messages

You can use your Inbox to manage your messages.

- 1 Press  or , select  and then **Inbox**.
- 2 Select Options and then choose to:

View - View a selected message.

Delete - Delete a selected message.

Reply - Send a reply to the selected message.

Forward - Send the selected message on to another person.

Return call - Call the person who sent you the message.

Save number - Save as a new or existing contact.

Information - View the details of a message, for example, the time it was sent.

Multi Delete - Delete selected messages.

Delete all read - All opened messages will be deleted.

Delete all - You can select whether to delete all of each message type.


 


Messaging

If you see the message **No space for SIM message** you should delete some messages from your inbox which are saved in your SIM Card.

If you see the message **No space for messages** you can delete messages to create space.

Using templates


You can create templates for the Text and Multimedia messages you send most frequently. There are some templates already on your phone, which you can edit if you wish.

- 1 Press  or , select  and then **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. You can then select Options and choose **Edit** to change existing templates or select Options to add **New template** or **Delete** templates.
- 3 To send a template, select the one you want to send, choose Options and select **Send via**.
- 4 Choose how you'd like to send the template; as a Text, Multimedia, Bluetooth or Email message.
- 5 Select a contact and choose Options, **Send** (or just press ).

Changing your text message settings

Your KM501 message settings are pre-defined so that you can send messages immediately.

If you'd like to change the settings, see below for more information.

Press  or , select , then choose **Settings** and **Text message**. You can make changes to:

Message types - Convert your text into Voice, Fax, Paging, X.400, Email or ERMES.

Validity period - Choose how long your message is stored at the message centre.

Delivery report - Choose to receive confirmation that your message was delivered.

Reply charging - Choose to be billed for your message recipient's reply.

Message centre number - Enter the details for your message centre.

Character encoding - Choose how your characters are encoded. This impacts the size of your message and therefore data charges.

Bearer setting - Choose whether to send your messages via GSM or GPRS.

Changing your multimedia message settings

Your KM501 message settings are pre-defined so that you can send messages immediately.

If you'd like to change the settings, see below for more information.

Press  or , select , then choose **Settings** and **Multimedia message**.

You can make changes to:

Subject - Include a subject field in your multimedia messages.

Slide duration - Choose how long your slides appear on screen.

Delivery time - Choose how long before each message is sent.

Priority - Choose the priority level of your multimedia message.

Validity period - Choose how long your message is stored at the message centre.

Delivery report - Choose to allow and/or request a delivery report.

Read report - Choose to allow and/or send a read report.

Auto download - Choose to automatically or manually download multimedia messages, depending on whether you are at home or roaming.

Network Profiles - Select an operator specific network profile for sending multimedia messages.

Permitted message Types - Select which type of senders to allow multimedia messages from.

Changing your other settings

Press  or , select , choose **Settings** then:

Email - Set your email account, choose your access point and retrieve interval, and add a signature.

Voicemail number - Your voicemail number is stored here. Contact your network operator for more information on the service they provide.

Push message - Here you can switch off Push message, which means your messages will no longer be pushed directly to your device as they are received, only when you check for new messages.

Info messages - Change the settings for the info messages and updates received from your operator.

01

02

03

04

05




06

07

08

Camera

Taking a quick photo



- 1 Press and hold down the  key on the right hand side of the handset and the camera's viewfinder will appear on screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Press  or the  key on the right side of the handset to take a photo.

After you've taken your photo

Your captured photo will appear on screen. The name of the image runs along the bottom of the screen.


Select Options to open a sub menu where you can choose to take a New Photo, set your image as **Wallpaper** or **Picture ID**, look at the other photos in your Album, or send the photo as a Multimedia message, Bluetooth or email. To exit the Camera, press and hold **C**.

Using your toolbar options

Selecting Options will display a new toolbar across the bottom of the viewfinder screen. Use  and  to navigate through the toolbar options.





 **Resolution** – See Changing the image size on page 28.


 **Quality** - Choose between **Normal**, **Fine** and **Super fine**. The finer the quality the sharper a photo will be but the file size will increase as a result. You'll be able to store fewer larger photo files in your memory.


 **Flash** – Turn the flash **On** or **Off**.


The flash is set to **Off** as default, saving battery power. Whenever you exit the camera it will return to the default Off setting.

 **Self timer** - The delay-timer allows you to set a delay after the capture button is pressed. Choose from **Off**, **3 seconds**, **5 seconds** or **10 seconds**. Great for that group photo you want to be part of.

 **Multi shot** - This enables you to take up to nine shots automatically in very quick succession. Great for taking photos of moving objects or at sporting events.

 **Colour effect** – Choose from four colour tone options: **Off** (normal/colour), **Sepia**, **Mono** (black and white) or **Negative**.


 **White balance** - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Daylight**, **Incandescent**, **Cloudy** or **Fluorescent**.

 **Shutter tone** - Select one of the three shutter sounds or switch the sound off.





 **Reset settings** – Choose **Yes** to reset your phone to its original camera settings.

Changing the image size

You can change the size of the photo to save memory space. The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on your phone, you can alter the pixel number to make the file size smaller.

- 1 Choose Options and select  from the toolbar.
- 2 Select a pixel value from the four numerical options (QV: 320X240, V: 640X480, 1M: 1280X960, 2M: 1600X1200).
- 3 Select the size you would like to use and choose **OK**.

Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the standby screen. From the viewfinder, simply select **Album**. From the standby screen you should press  or , then select  and **Images**.
- 2 Your gallery will appear on screen.
- 3 Use the arrows to select the photo you want to view and choose Options, **View** or just press  to enlarge it.

01

02

03

04

05

06

07



08

Camera

Using zoom when viewing a photo

Use the arrow keys to move the focus area and zoom in and out.






Setting a photo as wallpaper or Picture ID

You can set the image to appear at certain times. From your image gallery, use  and  to select an image and choose Options, **Set as** to use the selected image as wallpaper or Picture ID for one of your contacts.

Note: Picture ID can only be added to contacts saved to your phone, not your SIM.

Video camera

Shooting a quick video

- 1 Press the  or  and select , then Video camera.
- 2 Point the camera lens towards the subject of the video.
- 3 Press  once or press the  key on the right side of the handset to start recording.
- 4 **REC** will appear in the bottom left corner of the viewfinder and a timer will show the length of your video.
- 5 To pause the video choose **Pause** and resume by selecting **Resume**.
- 6 Select **Stop** to stop recording.

After you've shot your video


A still image representing your captured video will appear on screen. The name of the image runs along the bottom the screen.


Select Options to open a sub menu where you can choose to take a New video, play the video, or Send the video via Multimedia message, Bluetooth or Email, or look at the other videos in your Album.


Using your toolbar options

Selecting Options will display a new toolbar across the bottom of the viewfinder screen. Use the arrow keys to navigate the toolbar options.



 **Video mode** – To shoot a video you want to send in a multimedia message, select MMS.

 **Resolution** – If you want to fit more videos onto your phone you can alter the pixel number to make the file size smaller. Choose between two options for your video, 320 x 240 or 176 x 144.

 **Quality** - Choose between **Fine**, **Normal** and **Super fine**. The finer the quality the sharper a video will be, but the file size will increase as a result. You'll be able to store fewer larger video files in the phone's memory.

 **Flash** – Turn the flash **On** or **Off**.

The flash is set to **Off** as default, saving battery power.

01

02

03

04


05


06

07

08

Video camera


 




 **Colour effect** - Choose an Image effect to apply to the video you're taking. Choose from four colour tone options: **Off** (normal/colour), **Sepia**, **Mono** (black and white) or **Negative**.

 **White balance** - The white balance ensures that any white in your video is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Daylight**, **Incandescent**, **Cloudy** or **Fluorescent**.

 **Reset settings** – Choose **Yes** to reset your phone to it's original video camera settings.

TIP! The settings menu is superimposed over the viewfinder. When you change elements of the image colour or quality, you'll be able to see the image change in preview behind the settings menu.

Watching your saved videos




- 1 You can access your saved videos either from within video camera mode or from the standby screen. From the viewfinder, simply select **Album**. From the standby screen you should press  or , then select  and **Videos**.
- 2 Your gallery will appear on screen.
- 3 Use the  and  to select the video you want to view and choose **Options**, **Play** or just press  to watch it.

Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, use the keys on the right side of the handset.

My stuff

You can store any multimedia files on your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

All your multimedia files will be saved in My stuff. To access My stuff, press  or  then  to open a list of folders storing all of your multimedia files.

Images

Images contains a folder of default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Images options menu

The options which are available to you in **Images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera. Only the **View**, **Set as**, **File info**, **Slide show**, **Sort by** and **Thumbnail / List view** options are available for default images.

In the **Images** folder, select Options to bring up your list of options.

View - View the selected image.

Delete - Delete the selected image.

Send via - Send the selected image to a friend via MMS, Bluetooth or Email.

Note: The image may need to be resized before it can be sent by MMS.

Set as - Set selected image as your wallpaper or as a picture ID.

File - Edit image, rename or view the information (Name, Size, Date, Image size and Copyright) of the selected image. If you have an external memory card inserted, two additional options will show: **Move to external memory** and **Copy to external memory**.

Print via Bluetooth - Print an image file via Bluetooth.

Slide show - See Creating a slide show on page 33.

New folder - Create a new folder within the main Images folder.

Multi delete - Select more than one image to be deleted.

Delete all - Delete all the photos in your Images folder.

Sort by - Arrange your images by Date, Type or Name.

List view / Thumbnail view - Change the way you view your photos.

01

02

03

04

05


 

06

07


 

08

My stuff


 

Sending a photo

- 1 Press  or  then select .
- 2 Scroll to and select **Images**.
- 3 Select a photo and choose Options.
- 4 Select **Send via** and choose from **Multimedia message, Bluetooth** or **Email**.
- 5 If you choose **Multimedia message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose Bluetooth, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.




 

Organising your images

- 1 Press  or  then select .
- 2 Scroll to and select **Images**.
- 3 Select Options then **Sort by**.
- 4 Choose from **Date, Type** or **Name**.

Deleting an image




- 1 Press  or  then select .
- 2 Scroll to and select **Images**.
- 3 Select an image and choose Options.
- 4 Select **Delete**.

Deleting multiple images

- 1 Press  or  then select .
- 2 Scroll to and select **Images**.
- 3 Choose Options and select **Multi delete**.
- 4 A box will appear next to each image. Select the image and select Options, **Mark all** or just press  to mark it. To unmark an image, select Options, **Unmark all** or just press  so that the tick disappears from the box.
- 5 Once you have marked all of the appropriate boxes, select **Done** and confirm you want to delete all of the marked images.

Creating a slide show

If you want to look at all of the images on your phone or scan through what you've got, you can create a slide show to save you from having to open and close each individual image.

- 1 Press  or  then select .
- 2 Scroll to and select **Images**.
- 3 Select the photo you would like to begin the slideshow and choose Options.
- 4 Select **Slide show** and it will begin.
- 5 Select Options, **Pause** to pause the slide show and **Stop** to end the slide show and return to the Images folder.





Selecting Options during the slide show presents further choices:

Repeat on/off - Decide whether you want the slide show on repeat or not.

Sounds

The **Sounds** folder contains the **Default sounds** and your voice recordings. From here you can manage, send or set sounds as ringtones.





Using a sound

- 1 Press  or  then select .
- 2 Scroll to and select **Sounds**.
- 3 Select **Default sounds** or choose from the list of voice recording files.
- 4 Select a sound and choose Options, **Play** or just press  to listen to it.
- 5 Select Options, **Set as** and choose from **Ringtone** and **Ringtone ID**.

Videos

The **Videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Press  or  then select .
- 2 Scroll to and select **Videos**.
- 3 Select a video and choose Options, **Play** or just press .

01

02

03

04

05

06

07

08

My stuff

Using options while video is paused

By selecting Options, the video you are playing will be in pause mode and you can choose from:

Delete - Delete the video.

Send via - Send the video in a Multimedia message, by Bluetooth or by Email.

File - Rename the video, Move the selected video to a folder, View the Information (Name, Date, Size, Playback and Copyright).

Landscape / Full mode - Change how you view your video.

Sending a video clip

- 1 Select a video by using the arrow keys.
- 2 Select Options, **Send via** and choose from **Multimedia message, Bluetooth** or **Email**.
- 3 If you choose **Multimedia Message** or **Email**, your video clip will be attached to a message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

Note: The video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all, in which case choose one of the other sending options.

Using the video options menu

In the Videos folder, select Options to bring up the following list of options.

Play - watch the selected video.

Delete - Delete the selected video.

Send via - Send the video using a Multimedia message, Bluetooth or email.

File - Rename the video, or view the information (Name, Size, Date, Playback and Copyright).

New folder - Create a new folder within the main Videos folder.

Multi delete - Select more than one video clip to be deleted.

Delete all - Delete all the clips in your Video folder.

Sort by - Arrange your videos by Date, Type or Name.

List view / Thumbnail View - Change the way you view your videos.

Others



The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications.

You may find that when you transfer files from your computer to your phone, they will appear in the **Others** folder.

Games and Apps

Your KM501 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.

Playing a game

- 1 Press  or  then select .
- 2 Scroll to and select **Games & Apps**.
- 3 Select the game of your choice and choose Options, **Play** or just press .

Using the games options menu

In the Games folder, select Options to bring up the following list:

Play – Select this to play the game.




Information - View the Name, Version, Vendor, Data-size and Domain of the file.

External memory




If you've inserted a memory card it will be displayed as a folder within My stuff. Your external memory folder will be divided into four further folders: Images, Sounds, Videos and Others. Each folder will contain all the files of that type saved to your memory card rather than your handset.

Using your phone as a Mass storage device

Your KM501 can be used as a mass storage device, just like a USB stick. This is a great way of moving your files from your computer to your phone. In order to use the phone as mass storage device, you need to insert an external memory card. When connected to PC through USB cable only external memory card will be accessed.

- 1 Press  or , select  then **Connectivity**.
- 2 Select **USB Connection mode**.
- 3 Scroll to **Mass storage** and select **OK**.
- 4 Insert the smaller end of the USB cable into the USB cable connector on the edge of the KM501. Plug the larger end into the USB port of your computer.

My stuff

- 5 A removable disk folder will open automatically, if you have a memory card inserted, showing all the folders on your memory card.
- 6 Drag and drop your images, videos, music or others into the correct folders.
- 7 Safely remove your phone by clicking on the **Safely remove hardware** icon in your desktop toolbar.
- 8 When you want to then access a file, for example an image, press  or  then select  followed by **External memory** then **Images**. All the images you just transferred will be contained in this file.

Transferring a file to your phone

You can also transfer files from your computer to your phone using Bluetooth.




- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file will be saved within the appropriate folder depending on its type. For example, photographs will be saved in the **Image** folder and music in the **Sounds** folder. If your phone cannot identify the file type, the file will be saved in the **Others** folder.

Note: Files sent using Bluetooth will be saved to the phone memory.

Multimedia



Music

Your LG KM501 has a built-in MP3 player so you can play all your favourite music.

To access the MP3 player, press  or  and select . From here you have access to:

All songs - Contains all of the songs you have on your phone.

My playlist - Contains any playlists you have created as well as **On the go**. You can select specific music by each of these characteristics: **Artists, Albums, Genres** and **Shuffle all songs**.

TIP! You can access the MP3 player through the MP3 hot key  on the front. By using the  key, you can get directly to your playlist.





 


Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your USB cable.

To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file should appear in **MP3 Player** > **All songs**.

Playing a song

- 1 Press  or  and select .
- 2 Select **All songs** and then the song you want to play. Press .
- 3 Press  to pause the song.
- 4 Press  to skip to the next song.
- 5 Press  to skip to the previous song.
- 6 Select Options, **Minimize** to hide the music player screen so that you can continue using your phone as normal while music is playing.

01

02

03

04

05

06

07

08

Multimedia

Using options while playing music

Select Options and choose from:

Minimise

Natural sound on

Add to playlist

Listen via Bluetooth

Set as ringtone

Rating






Information

Settings - Change the **Equalizer** or **Play mode**, change the music light settings or **Set shuffle** to mix up the music.





TIP! To change the volume while listening to music, use the volume keys on the side of your phone.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All songs** folder.




- 1 Press  or  and select .
- 2 Choose **My playlist**. External memory should be inserted to use this option.
- 3 Select **New**, enter the playlist name and choose **Save**.
- 4 The **All songs** folder will show. Select all of the songs that you would like to include in your playlist by scrolling to the ones you want and pressing ; a tick will show next to the song name. If you accidentally add a song you don't want, select it and press  again to untick it.
- 5 Select Options, **Save** to store the playlist.

Playing a playlist

- 1 Press  or  and select .
- 2 Choose **My playlist**.
- 3 Select the playlist you would like to play and choose **View**, then press .

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist. You may also want to organise your playlists. When you want to do this, you can edit the playlist.

- 1 Press  or  and select .
- 2 Choose **My playlist**.
- 3 Scroll to the playlist you want to edit and select **View**, then choose Options.

Add – You can add songs from the playlist using this option.




Remove – Remove a song from the playlist. Select **Yes** to confirm.

Move up/Move down – Move the song up or down the list to change the playing order.

Remove all – Remove all of the songs from the playlist.

Information – View the playlist information.

Deleting a playlist

- 1 Press  or  and select .
- 2 Choose **My playlist**.
- 3 Scroll to the playlist you want to delete and choose Options.
- 4 Select **Delete** and select **Yes** to confirm.

Note:

DRM (Digital Rights Management)

As a result of the Digital Rights Management (DRM) system, some of the media items you download from the Internet or receive by MMS may have a "Purchase right" menu to access them. You can acquire the key to purchase the right from the website which owns the rights to the contents.

Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

When an MP3 is playing on the MP3 player, if you press MP3 short key, you can use BGM mode. In BGM mode MP3 can be played while other functions are being used. BGM can be stopped on the MP3 player screen.

Multimedia

Using the radio




Your LG KM501 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

Note: You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).




Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 12 channels in your phone.

To auto tune:

- 1 Press  or  and select .
- 2 Choose **FM radio**.
- 3 Select Option, **Auto scan** and then **Yes**.
- 4 Each time a station is found, your KM501 will ask if you want to save it. Select **Save** if you want to store the channel and **No** if you don't. Any stations you choose to save will automatically be allocated to a channel number in your phone.




To manually tune:

- 1 Press  or  and select .
- 2 Choose **FM radio**.
- 3 Select a channel number that you want to save a station to and choose **Edit channel**.
- 4 To enter your station, you can either use the arrow keys to search for the frequency, or you can enter the frequency using the keypad.
- 5 Select **OK**.




Note: You can also edit the stations you have saved in a channel number by using the same **Edit channel** feature you use to manually tune in stations.

TIP! To improve the radio reception, extend the headset cord, which functions as the radio antenna.

Resetting channels





- 1 Press  or  and select .
- 2 Choose **FM radio**.
- 3 Select Options, **Reset channels**. Choose **Yes** to confirm the reset. Each channel will return to the starting 87.5Mhz frequency.

Listening to the radio

- 1 Press  or  and select .
- 2 Choose **FM radio**.
- 3 Select the channel number of the station you would like to listen to.

Voice recorder

Use your **voice recorder** to record voice memos or other sounds.

- 1 Press  or  and select .
- 2 Choose **Voice recorder**.
- 3 Press  to begin recording.
- 4 Select **Pause** to pause the recording.
- 5 Choose **Stop** to end the recording.
- 6 Select Options, **Play** to listen to the recording.

Note: You can listen to all of the voice recordings you have saved by selecting **Album**.

Sending a voice recording

- 1 Once you have finished recording, select Options.
- 2 Select **Send via** and choose from **Multimedia message, Bluetooth** or **Email**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

TIP! If you plan to send your recording as a message, before you start recording, choose Options and select **Recording mode**. Choose **MMS**. This will ensure that the recording fits into a message.

01

02

03

04

05




06

07

08

Organiser/Tools

Adding an event to your calendar







- 1 From the standby screen press  or , and select , then **Calendar**.
- 2 Select the date you would like to add an event to. You can choose a date either by scrolling to it using arrow keys or by selecting Options and manually entering the date.

Note: Once you've already got an event saved in your calendar, you will need to select **Go to date** after selecting Options in order to enter a date to set your event to.

- 3 Select Options and choose **New schedule** and enter the time you would like your event to begin. Scroll down using the arrow keys and enter the end time of your event.
- 4 Scroll down and enter a **Subject** for the event.
- 5 Scroll down again and choose whether you would like to set an **Alarm** for the event. Scroll left or right to see the available options. You can set the alarm to go off at the starting time of the event or at a set period of time before the event starts to remind you the event is coming up.




- 6 Scroll down once more to select whether the event is a one-off or if it is to be repeated at **Daily, Weekly, Monthly** or **Yearly** intervals. If the event is repeated, you can also scroll down to enter an **Expiration date** for when the events will stop completely.
- 7 Select **Save** and your event will be saved in the calendar. A triangular cursor will mark the days that any events have been saved to.

Editing a calendar event





- 1 From the standby screen press  or , and select , then **Calendar**.
- 2 Choose Options and select **All schedules** to see a list of all your events. Scroll to the event you would like to edit and select Options, **View** or just press . Alternatively select the day of the event in the calendar and choose Options, **View** or just press .
- 3 Select Options, **Edit** or just press  and scroll to the event detail you want to change. Make your modifications and select **Save** to store the edited event.

Note: You can delete an event from your calendar by selecting to view the event and then select Options, **Delete**.

Sharing a calendar event




- 1 From the standby screen press  or , and select , then **Calendar**.
- 2 Select the event you would like to share and choose Options.
- 3 Choose **Send via** and select from **Text message, Multimedia message, Bluetooth** or **Email**.

Adding a memo




- 1 From the standby screen press  or , and select , then **Memo**.
- 2 Select **New** and type your memo.
- 3 Choose Options, **Save** or just press .
- 4 Your memo will appear on screen the next time you open the **Memo** application.

Tip! You can edit an existing memo. Select the one you want to edit, select Options and select **Edit**.

Adding an event to your To do list

- 1 From the standby screen, press  or , and select , then **To do**.
- 2 Select **New** and type Due date, Note, Priority and Status of your new to do. (Using the Options, you can select the date referring to your calendar)
- 3 Choose Options, **Save**.
- 4 Your to do list will appear on screen and you can View, Add, Delete and do several things by choosing from the Options.




Setting your alarm

- 1 From the standby screen press  or , and select , then **Alarm clock**.
- 2 Select **New**.
- 3 Scroll down and enter the time you would like the alarm to sound at.
- 4 Choose whether you would like your alarm to sound **Once, Daily, Mon - Fri, Mon - Sat** or **Sat - Sun**.
- 5 Scroll down to choose the alarm sound. Choose Options, **Sounds** to select a new sound.
- 6 Scroll down and enter a name for the alarm or keep the suggested name.
- 7 Select **Save**.

Note: You can set up to 5 alarms.

Organiser/Tools




Using your calculator

- 1 From the standby screen press  or , and select , then **Calculator**.
- 2 Press the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, ×, ÷), followed by =.
- 4 For more complex calculations, select **Function** to select a command.
- 5 Select **Clear** to clear the screen to start a new calculation.




Using Tip calculator

You can calculate the tip by using this function. The process to activate the function is same as Calculator.

Using the stopwatch

- 1 From the standby screen press  or , and select , then **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Choose **Lap** if want to record a lap time.
- 4 Select **Stop** to end the timer.
- 5 Choose **Resume** to restart the stopwatch at the time you stopped it at, or select **Reset** to begin the time again.

Converting a unit

- 1 From the standby screen press  or , and select , then **Unit converter**.
- 2 Choose whether you would like to convert **Currency, Area, Length, Weight, Temperature, Volume** or **Velocity**.
- 3 Scroll up to choose from the unit of measurement you want to enter. Scroll left and right to select a unit, then scroll down and enter the unit quantity.
- 4 Scroll down to the unit conversion box and choose the unit measurement you want to convert into. The conversion will show automatically in the line below.

Adding a city to your world clock

- 1 From the standby screen press  or , and select , then **World clock**.
- 2 Select Options and choose **Change time zone** and select a city.
- 3 Choose **New city** from the options to add more cities in your list.

01

02

03

04

05

06




07

08

The web

With browser at the tip of your fingers, you can get the up to date news and weather forecast as well as information on sports or traffic whenever you need it. In addition, browser allows you to download the latest music, ringtones, wallpapers and games.

Accessing the web

- 1 From the standby screen press  or , select  and choose **OK**.
- 2 To access the browser homepage directly, select **Home**. Alternately select **Go to URL** and type in your desired URL.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.





- 1 From the standby screen press  or , select  and choose **OK**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, select Options and choose **New bookmark**. Enter a name for your bookmark followed by the URL.
- 4 Select **Save**. Your Bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply scroll to the required bookmark and select Options, **Connect** or just press . You will be connected to your bookmarked page.

Saving a page





- 1 Access your required web page as described above.
- 2 Choose Options and scroll to **Save**, select **Save this page**.
- 3 Select **OK**.

TIP! This menu will also allow you to save pages, and delete saved pages.




Accessing a saved page

- 1 From the standby screen press  or , select  and choose **OK**.
- 2 Select **Saved pages**.
- 3 Select the required page and select Options, **Connect** or just press .

Viewing your browser history

- 1 From the standby screen press  or , select  and choose **OK**.
- 2 Select **History** and choose **OK**.
- 3 A list of web page titles you have accessed recently will be displayed. To access one of these pages, scroll to the required page and select Options, **Connect** or just press .

Changing the web browser settings

- 1 From the standby screen press  or , select . Select **Settings**.
- 2 You can choose the way your mobile handles, displays and uses information when browsing the internet. You can amend settings within **Network Profiles, Rendering mode, Cache, Cookies, Security certificates, Show image, Java script** and **Memory in use**.
- 3 Once you have changed your settings, select **OK**.

01

02

03

04

05

06

07



08

Settings

Within this folder you can adapt your settings to make your KM501 personal to you.

Note: For information on call settings see page 18.

Personalising your profiles

You can quickly change your profile from the standby screen. Simply press  and select , then the profile you would like to activate. Choose from:

General




Silent

Vibrate only



Outdoor

Headset

Using the Settings menu you can personalise each profile setting.




- 1 Press  or  and select .
- 2 Choose the profile setting you want to edit and select **Personalise**.
- 3 For the **Silent** and **Vibrate only** profiles, you can adapt the vibration. For the other profiles, you can change all of the sounds and alert options available in the list, including your Call alert type, Ring tones, Ring Volume and Message alert type and so on (please refer to your handset for details).

Changing your screen settings

- 1 Press  or  and select .
 - 2 Select **Display** and choose from:
 - Wallpaper** - Choose a wallpaper to appear on your screen display.
 - Clocks** - Choose a style of the clock to appear on your screen display.
 - Backlight timer** - Choose how long the backlight remains on for.
 - Brightness** - Adjust the screen brightness.
 - Home screen shortcut** - Change by selecting On/ Off if you want to display or not home screen shortcut icons on idle screen.
 - Theme** - Quickly change the whole look of your screen.
 - Menu style** - Change the menu view from Grid view to List view or vice versa.
 - Dial style** - Adjust the font style for when you are typing a phone number.
 - Standby text** - Choose to add a message to your standby screen.
 - Network name** - Choose to show or hide the network name.
- Note:** The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Changing your phone settings

Enjoy the freedom of adapting your KM501 so that it works in a way which suits you best.

Press  or  and select . Choose from the list below:

Date & time - Adjust your date and time settings or choose to auto update the time when you travel.

Language - Change the language of your KM501's display.

Display - Change your screen settings.

Connectivity - See Changing your connectivity settings for more information.

Call - See Call settings on page 18 for more information.

Security - See Changing your security settings on page 52 for more information.

Flight mode - Switch the flight mode **On** or **Off**. You will not be able to make calls, connect to the Internet, send messages or use Bluetooth when Flight mode is switched on.




Power save - Choose to set the power save option **Always on**, on for **Night only** or **Off**.

Reset - Reset all the settings to their factory definitions.

Memory status - See current status of the memories (Common, Reserved and SIM card) in your KM501.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Press  or  and select . Choose **Connectivity**. Your options are:

Bluetooth - Set up your KM501 for Bluetooth use. You can adapt your visibility to other devices or search through devices you're paired with.

Network - Your KM501 connects automatically to your preferred network. To change these settings use this menu. You can also attach GPRS and add new access points using this menu.

USB connection mode - Choose **Data service** and synchronise your KM501 using the LG PC Suite software to copy files from your phone. If you have a memory card inserted select **Mass storage** to use your phone in the same way as you would a USB stick. Connect to your computer and drag and drop files to the KM501 removable device folder. See page 35 for further details.

01

02

03

04

05

06

07




08

Settings

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls. Before you can start sharing files with Bluetooth, you will need to pair your device with another Bluetooth device. For information on pairing devices, see **Pairing with another Bluetooth device**.

To switch Bluetooth on:

- 1 Press  or  and select . Choose **Connectivity**, then **Bluetooth**.
- 2 Select **Bluetooth on/off** and choose **On**.
- 3 Select **Off** to switch Bluetooth off.

To send a file:




- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Select **Options** and choose **Send via**, then **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on if it is not already activated.
- 4 Your KM501 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and select **OK**.
- 6 Your file will be sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** for more information.
- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.

Tip! Keep an eye on the progress bar to make sure your file is sent.

Changing your Bluetooth settings:

- 1 Press  or  and select . Choose **Connectivity**, then **Bluetooth**.
- 2 Choose **Bluetooth settings** to make changes to:
 - My visibility** - Choose whether to **Show** or **Hide** your device to others.
 - My name** - Enter a name for your KM501.
 - My address** - Know your Bluetooth address.

Pairing with another Bluetooth device

By pairing your KM501 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Bluetooth Settings** menu, by selecting **My visibility**, then **Show**.
- 2 Select **Device list** from the Bluetooth menu and choose **New**.
- 3 Your KM501 will search for devices. When the search is completed **Pair** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, select **Pair**, enter the passcode and then choose **OK**.

- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.




Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.
- 3 Select **Yes** to **Connect now**. Your KM501 will automatically switch to Headset profile.

Settings

Changing your security settings

Change your security settings to keep your KM501 and the important information it holds protected.

Press  or  and select . Choose **Security** then select from the list below:

PIN code request - Choose a PIN code to be requested when you turn your phone on.

Auto key lock - Choose a duration for locking the key automatically.

Phone lock - Choose a security code to lock your phone, **When powered on**, **When SIM changed** or **Immediately**.

Call Barring - Select when you would like calls to be barred.

Fixed dial number – Choose a list of numbers that can be called from your phone.

Change codes - Change your **Security code**, **PIN1 code** or **PIN2 code**.

Accessories

These accessories were supplied with your KM501.

Charger



Battery



Stereo headset



Data cable Data cable and CD

Connect and synchronise your KM501 and PC.



User Guide

Learn more about your KM501.



Note

- Always use genuine LG accessories.
- Failure to do so may invalidate your warranty.
- Accessories may vary in different regions: please check with our regional service company or agent for further information.

01

02

03

04

05

06

07

08

Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800 and PCS1900 networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : KM501

System : GSM 900 / DCS 1800 / PCS 1900

Ambient Temperatures

Max : +55°C (discharging), +45°C (charging)

Min : -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Towers 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KM 500, KM 500c, KM 501

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v 1.6.1 / EN 301 489-07 v 1.3.1 / EN 301 489-17 v 1.2.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2
EN 300 328 V1.6.1

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 18, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyeon, Ji / Director

07. November, 2007



Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model KM501 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), is 2W/kg averaged over 10g of tissue.

- The highest SAR value for this model phone tested by DASy4 for use at the ear is 0.594 W/kg (10g) and when worn on the body is 0.799 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 0.631 W/kg averaged over 1g of tissue.

WARNING

- Mobile Phones must be switched off at all times in an aircraft.
- Do not hold the phone in your hand while driving.
- Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.
- For your safety, use ONLY specified ORIGINAL batteries and chargers.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

- Don't charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

CAUTION

- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls.
- Only use ORIGINAL accessories to avoid damage to your phone.
- All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.
- Batteries should be disposed of in accordance with relevant legislation.
- Do not dismantle the phone or battery.

"Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous."

Product care and maintenance

WARNING!

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use a dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)

Guidelines for safe and efficient use

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point. Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Guidelines for safe and efficient use

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- Dispose of used batteries according to the manufacturer's instructions.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

LG MOBILE PHONE WARRANTY

Middle East & Africa



www.lgservice.com
www.lgmobile.com





Terms & Conditions

Your LG mobile phone and all accessories included in this package are under LG warranty across the countries mentioned in the back of this card for a period of 12 months from purchase date (pls. refer to list of coverage at the back), and (6 months for battery). Warranty support at LG Authorized Service Centers will be provided upon presentation of this warranty card. Warranty covers only those models that are sold in that particular market.

This Warranty is not applicable if this telephone has:

1. Been mishandled, misused, willfully damaged, neglected, improperly tested, liquid damaged, repaired, altered or defaced in any way.
2. A defect arising as a result of any failure to follow instructions either in the manual or product specification.
3. A defect which has arisen from the use of non LG approved accessories or ancillary items attached or in connection with the telephone.



Warranty Card

Kindly fill in all details below at the time of purchase

REFERENCE NO.:

Customer's Name:

Product/ Model:

Serial No.:

IMEI No.:

Dealer's Name:

Date of Purchase:

Invoice/ Cash memo Details:.....

Operator/ Distributor's Stamp



Customer Registration Form

Kindly fill in all details below and fax/email to your Local Customer Care.

REFERENCE NO:
Date of Purchase:
Customer's Name:
Tel: Fax:
Email:
Address:
Product/ Model:
Serial No.:
IMEI No.:
Date of Purchase:
Distributor's Name:
Dealer's Name:



Authorized Service Centers

CIC No.0861-545454 (LGLGLG)

Tel.No. 27-11-571-6700, Fax No. 27-11-822-5751,

Regional

Middle East

UAE	800 54
KSA	+96612112345
	+96638343000
Qatar	+9744315865
Oman	+96824502866/8
Bahrain	+97317403304
Yemen	+96771503240
Iran	+982188302922
Egypt	19960
Syria	+963113347720/1
Jordan	+96265510137

Africa

Morocco	081005454
Tunisia	+21670838424
Libya	+218213405695
Algeria	+21321917494
Kenya	+25420252240/1
Nigeria	+23418935454
South Africa	0861545454

Others

Turkey	+902165450404
Pakistan	+92214388271/74

Stamp

To,

LG Electronics S.A (Pty) Ltd.

181, Barbara Road, Elandsfontein, Johannesburg,

P.O.Box 473, Isando 1600, South Africa.



LG Mobile Phone Service Centers in Middle East & Africa



Service for LG Mobile Phone is available in the following countries

(List includes Only the Main Service Centers. Other area's customers can contact the Head-quarter of their countries for further information)

Middle East Countries

11 Countries

- UAE
- Saudi Arabia
- Qatar
- Oman
- Kuwait
- Bahrain
- Yemen
- Iran
- Iraq
- Lebanon
- Egypt
- Syria
- Jordan

Africa Countries

7 Countries

- Morocco
- Tunisia
- Libya
- Algeria
- Kenya
- Nigeria
- South Africa

Other Countries

2 Countries

- Turkey
- Pakistan

Middle East Countries

- UAE
- Saudi Arabia
- Qatar
- Oman
- Kuwait
- Bahrain
- Yemen
- Iran
- Iraq
- Lebanon
- Egypt
- Syria
- Jordan

UAE

Headquarter

- ❑ Agent Name : Jumbo Electronics Co. Ltd.
- ❑ Address : Telecommunication Division, P.O. Box 3426, Dubai, UAE
- ❑ Telephone No. : +97143367999 (LG Customer Information Center: 800 54)
- ❑ Fax No. : +97143340821
- ❑ Web Site : <http://www.jumbocorp.com>
- ❑ Email : Roby.George@jumbo.ae

Service Centers

Area	Address	Telephone No.	Fax No.
Dubai (Karama)	Near Strand Cinema, P.O. Box 3426, Dubai	+97143362621	+97143360847
Abudhabi	Regional Service Center P.O. Box 3832,	+97126732201	+97126733930
Al Ain	Regional Service Center P.O. Box 15444	+97137542898	+97137557898
Sharjah	Regional Service Center P.O. Box 5331	+97165599725	+97165538365
Fujairah	Regional Service Center P.O. Box 868	+97192221406	+97192221828
Ras Al Khaimah	Regional Service Center P.O. Box 1054	+97172272571	+97172271881

UAE

Headquarter

- ❑ Agent Name : Al Sayegh Brothers Trading L.L.C
- ❑ Address : Al Sayegh Brothers Building, Muraqqabat, Deira, P.O. Box 55106, Dubai, UAE
- ❑ Telephone No. : +97142663200 (LG Customer Information Center: 800 54)
- ❑ Fax No. : +97142669964
- ❑ Web Site : www.alsa-g.com
- ❑ Email : helpdesk@alsa-g.com

Service Centers

Area	Address	Telephone No.	Fax No.
Dubai	Al Sayegh Brothers Building, Muraqqabat, Deira P.O. box 55106	+97142622770	+97142669964/ +97142680340
Abu Dhabi	Lotus Tower, Airport road, P.O. Box 7993	+97124452111	+97124462040
Sharjah	Al Sayegh Brothers Main SVC Center Industrial area #6.	+97165436221	+97165437422

UAE

Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : World Trade Centre, P. O. Box 9266, Dubai UAE
- ❑ Telephone No. : 04 3318555 (LG Customer Information Center: 800 54)
- ❑ Fax No. : 04 3318855
- ❑ Web Site : www.axiomtelecom.com
- ❑ Email : atcc@axiomtelecom.com

Service Centers in UAE

Area	Address	Telephone No.	Fax No.
Dubai	Shk Zayed Road, Al Kawakeb Building, Block C, P O Box 9266, Dubai, UAE	00971 43210600	00971 43210400
Abu Dhabi	Defense Road, Block A 4, Next to Al Sultan Restaurant. Abu Dhabi, UAE	00971 26417144	00971 26417076
Sharjah	Shop no 78, Crystal Plaza, Buhaira Corniche Road , Shj UAE	00971 65751503	00971 65751404

Saudi Arabia

Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : 9th Floor, Al Subaiee Tower, Abdul Aziz Highway, Al Khobar, KSA, P O Box 4742
- ❑ Telephone No. : 00966 38019000
- ❑ Fax No. : 00966 38019051
- ❑ Web Site : www.axiomtelecom.com
- ❑ Email : ksasupport@axiomtelecom.com

Service Centers in KSA

Area	Address	Telephone No.	Fax No.
KHOBAR	9, Al Fanar Complex, Khobar-Dammam Highway, Khobar 31952, KSA	00966 38587922	00966 38587910
RIYADH	Olaya Main Street, Nr. Al Owais Market, Riyadh, KSA	00966 12698255	00966 12698355
JEDDAH	City Plaza Centre, Price Sultan Street, Jeddah, KSA	00966 26922764	00966 26924575

Saudi Arabia

Headquarter

- ❑ Agent Name : AL Farida Telecom Co. Ltd. (SKY)
- ❑ Address : P.o. box 359, Riyadh 11411, Riyadh, Saudi Arabia.
- ❑ Telephone No. : +96612112345
- ❑ Fax No. : +96612112311
- ❑ Email : marwan.alshare@alhokair.com.sa

Service Centers

Area	Address	Telephone No.	Fax No.
Riyadh	P.o. box 359, Riyadh 11411, Riyadh, Saudi Arabia	+966121112345	+96612112311



Saudi Arabia

Headquarter

- ❑ Agent Name : Itsalat International Co.
- ❑ Address : P.O. Box 9798, Dammam, 31423, Saudi Arabia.
- ❑ Telephone No. : +96638343000
- ❑ Fax No. : +96638334664
- ❑ Web Site : <http://www.itsalat.com>
- ❑ Email : ashraf.hassan@itsalat.com, headoffice@itsalat.com

Service Centers

Area	Address	Telephone No.	Fax No.
Jeddah	Palestine st., Soukal Jawal, Jeddah	+96626677988	+96626643618
Riyadh	Mursalat, Neat STC, Riyadh	+96614559106	+96612645766
Dammam	Malik Fahd Road	+96638411111	+96638469055

QATAR

Headquarter

- ❑ Agent Name : Video Home & Electronics Center
- ❑ Address : Musherib Street, P.O.Box 4668, Doha, Qatar
- ❑ Telephone No. : +9744315865
- ❑ Fax No. : +9744437876
- ❑ Web Site : <http://www.jumboqatar.com>
- ❑ Email : alexjacob@jumboqatar.com

Service Centers

Area	Address	Telephone No.	Fax No.
Doha	Musherib street, P.O.Box 4668, Doha, Qatar	+9744315865	+9744437876




OMAN

Headquarter

- ❑ Agent Name : Oman Gulf Enterprises L.L.C
- ❑ Address : P.O. Box 175, PC 117, Muscat, OMAN
- ❑ Telephone No. : +96824502866/8
- ❑ Fax No. : +96824502019
- ❑ Web Site : <http://www.otegroup.com>
- ❑ Email : sudhirk@otegroup.com

Service Centers

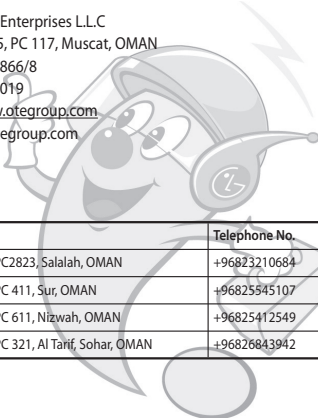

Area	Address	Telephone No.	Fax No.
Salalah	P.O. Box 211, PC2823, Salalah, OMAN	+96823210684	+96823210145
Sur	P.O. Box 480, PC 411, Sur, OMAN	+96825545107	+96825545107
Nizwah	P.O. Box 784, PC 611, Nizwah, OMAN	+96825412549	+96825412549
Sohar	P.O. Box 205, PC 321, Al Tarif, Sohar, OMAN	+96826843942	+96826843942


OMAN

Headquarter

- ❑ Agent Name : Cellucom and Partners L.L.CI
- ❑ Address : Office No 7, Makha Business Center, Ruwi High Street, Muscat, Oman
- ❑ Telephone No. : +96824835010
- ❑ Fax No. : +96824834234
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : info@cellucom.com

Service Centers

Area	Address	Telephone No.	Fax No.
Muscat, Oman	Office No 7, Makha Business Center, Ruwi High Street, Muscat, Oman	+96824835010	+96824834234

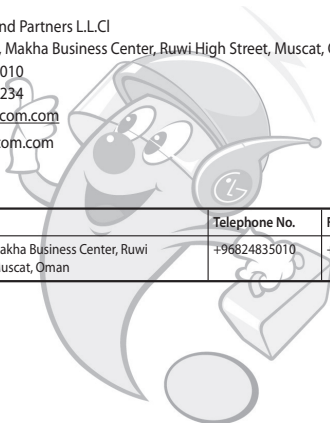 


KUWAIT

Headquarter

- ❑ Agent Name : Cellucom Kuwait WLL
- ❑ Address : Salem Al Mubarak Street, Shaha Complex, P.O. Box: 4019, Salmiya, Kuwait
- ❑ Telephone No. : +9655710801
- ❑ Fax No. : +9655710803
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : info@cellucom.com

Service Centers

Area	Address	Telephone No.	Fax No.
Salmiya, Kuwait	Salem Al Mubarak Street, Shaha Complex, P.O. Box: 4019, Salmiya, Kuwait	+9655710801	+9655710803

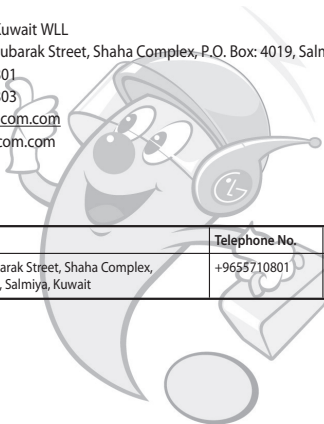 


KUWAIT

Headquarter

- ❑ Agent Name : Al Ghanim Sons Group.
- ❑ Address : First Floor,Gharabally Building, Dhajeej Area, South Farwaniya, SAFAT-13097, Kuwait.
- ❑ Telephone No. : + 965 4331709
- ❑ Fax No. : + 965 4344790
- ❑ Email : snair@alghanim-sons.com

Service Centers

Area	Address	Telephone No.	Fax No.
South Farwaniya	First Floor,Gharabally Building,Dhajeej Area,South Farwaniya , SAFAT-13097,Kuwait	+ 965 4331709	+ 965 4344790

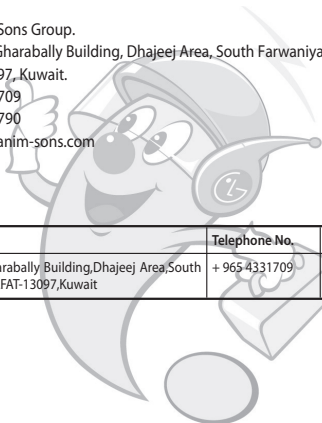 


BAHRAIN

Headquarter

- ❑ Agent Name : Cellucom WLL
- ❑ Address : Shop no 5&6, Gosi commercial Complex, Manama, Kingdom of Bahrain
- ❑ Telephone No. : +97317294026
- ❑ Fax No. : +97317294046
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : info@cellucom.com

Service Centers

Area	Address	Telephone No.	Fax No.
Manama, Bahrain	Shop no 5&6, Gosi commercial Complex, Manama, Kingdom of Bahrain	+97317294026	+97317294046

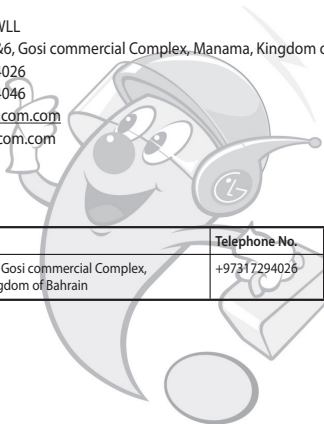 

BAHRAIN

Headquarter

- ❑ Agent Name : Fono
- ❑ Address : Gosi Complex, Exhibition Rd, Manama, Bahrain
- ❑ Telephone No. : 00973 17312001
- ❑ Fax No. : 00973 17310884
- ❑ Web Site : www.axiomtelecom.com
- ❑ Email : fcc@almoayyedintl.com.bh

Service Centers in Bahrain

Area	Address	Telephone No.	Fax No.
Bahrain	Fono, Gosi Complex, Exhibition Rd, Manama, Bahrain	00973 17312001	00973 17310884


YEMEN

Headquarter

- ❑ Agent Name : Al Mutarreb
- ❑ Address : Hada st. Al Mutarreb for Trading, P.O. Box-19272
- ❑ Telephone No. : +9671503240
- ❑ Fax No. : +9671500878
- ❑ Email : mutarreb@y.net.ye

Service Centers

Area	Address	Telephone No.	Fax No.
Yemen	Hada st. Al Muttrieb for Trading P.O. Box 19272	+9671503240	+9671500878

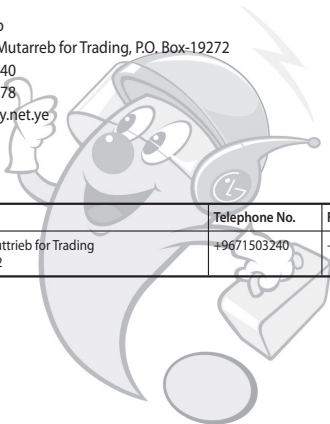 

IRAN

Headquarter

- ❑ Agent Name : Persian Telecom (Al Raheel General Trading Co., L.L.C.)
- ❑ Address : First florr, No.140, Ghaem Magham St., Tehran, IRAN
- ❑ Telephone No. : +982188302922/+982188827100
- ❑ Fax No. : +982188302921
- ❑ Web Site : <http://www.persiantelecomclub.com>
- ❑ Email : bahrami@persiantelecom.ir

Service Centers

Area	Address	Telephone No.	Fax No.
Tehran	First florr, No.140, Ghaem Magham St., Tehran, IRAN	+982188302922 +982188827100	+982188302921
Tehran	No.69&70, Ground Floor, Aladdin Trade complex, Jomhori Ave, Tehran, IRAN	+982166722675 +982166724173	+982166724173

IRAQ

Headquarter

- ❑ Agent Name : Al-Seera Communication Company
- ❑ Address : 14th Ramadan Road, Al-Mansour Street, Baghdad, Iraq
- ❑ Telephone No. : +9647901393615
- ❑ Fax No. : +96415427798
- ❑ Web Site : <http://www.alseera.com>
- ❑ Email : seeracom@hotmail.com, mohammed_d_r@hotmail.com

Service Centers

Area	Address	Telephone No.	Fax No.
Baghdad	14th Ramadan Road, Al Mansour Street	+9647901393615	+96415427798


LEBANON

Headquarter

- ❑ Agent Name : Digital technologies
- ❑ Address : Jdeidet El Metn, Beirut Lebanon
- ❑ Telephone No. : +961 01-236110
- ❑ Fax No. : +961-1-236110
- ❑ Email : digitaltechnologies@idm.net.lb

Service Centers

Area	Address	Telephone No.	Fax No.
Beirut	Jdeidet El Metn, near Gallery Khabbaz	+961 01-236110	+961-1-236110

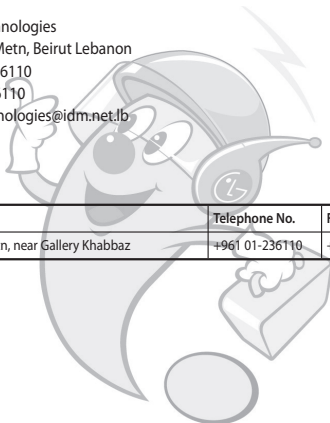 

EGYPT

Headquarter

- ❑ Agent Name : Delta Communication
- ❑ Address : 39 M Tawfik Diab – Makram Ebied, Nasar City, Egypt
- ❑ Telephone No. : +2027487100 (LG Customer Information Center: 19960)
- ❑ Fax No. : +2025201241
- ❑ Email : salahezz@delta-group.org

Service Centers

Area	Address	Telephone No.	Fax No.
Nasar City	39 M Tawfik Diab – Makram Ebied, Nasar City, Egypt	+2027487100	+2025201241

EGYPT

Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : 8, Al Oboor Buildings, Salah Salem Street, Cairo, Egypt
- ❑ Telephone No. : 002 02 4015050/4013939
- ❑ Fax No. : 002 02
- ❑ Web Site : www.axiomtelecom.com
- ❑ Email : menon@axiomtelecom.com

Service Centers

Area	Address	Telephone No.	Fax No.
AXIOM-CAIRO	3, Abdul Fida Street, Zamalik, Cairo Province, Egypt	002 02 7377881	002 02 7377882
AXIOM- ALEXANDRIA	10, Victoria Square Amanwel, Zahrat Al Kotn Building, Somooha, Alexandria, Egypt	002 02 4242529	


SYRIA

Headquarter

- ❑ Agent Name : ECC (Engineering Commerce Co.)
- ❑ Address : Abo Romaneh Shakib Arslan str.
- ❑ Telephone No. : +963113347720/1/3/4/5/6, +963113347465
- ❑ Fax No. : +963113333825
- ❑ Email : ecc@net.sy

Service Centers

Area	Address	Telephone No.	Fax No.
Damascus	Kaboon – facing the bus Pullman station	+963119345	+963114537010
Aleppo	Jameilia beside Alseddeik Mosque	+963212284002	+963212122367

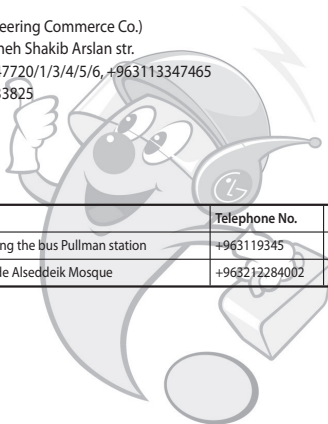 


JORDAN

Headquarter

- ❑ Agent Name : 7 Global For Communication Equipments
- ❑ Address : Jordan - Amman
- ❑ Telephone No. : 00962 6 5563008
- ❑ Fax No. : 962-6-5563009
- ❑ Web Site/Email : www.7global.mobi / Info@7global.info

Service Centers

Area	Address	Telephone No.	Fax No.
Jordan	Jordan - Amman	00962 6 5518883	00962 6 5563008

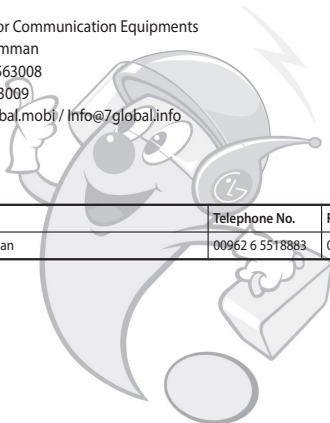 

Life's
Good



Africa Countries

- Morocco
- Tunisia
- Libya
- Algeria
- Kenya
- Nigeria
- South Africa

MOROCCO

Headquarter

- ❑ Agent Name : LGEMC (LG Electronics Morocco S.A.R.L)
- ❑ Address : Immeuble 2, Zenith Millenium, Sidi Maarouf, Lotissement Attawfiq, casa, Morocco
- ❑ Telephone No. : 081005454 (LG Customer Information Center)
- ❑ Fax No. : +21222975959
- ❑ Email : abdelhamid@lge.com

Service Centers

Area	Address	Telephone No.	Fax No.
Cetelec	5 rue Albouhtouri casa anfa Maroc	+21222270790	+21222203748
Lineatec	105 Avenue Fal ould oumaeir Number 1, Agdal, Rabat	+21237776506	+21237671040


TUNISIA

Headquarter

- ❑ Agent Name : TTE (Tunisian Telecom Electric Distribution)
- ❑ Address : Tunisian telecom Distribution, 22 Rue 8600 ZI Charguia, Tunis, Tunisia
- ❑ Telephone No. : +21670838424
- ❑ Fax No. : +21670838422
- ❑ Web Site : <http://www.tte.com.tn>
- ❑ Email : f.hamdi@tte.com.tn

Service Centers

Area	Address	Telephone No.	Fax No.
Tunis	22 Rue 8600 ZI Charguia, Tunis, Tunisia	+21670838424	+21670838422

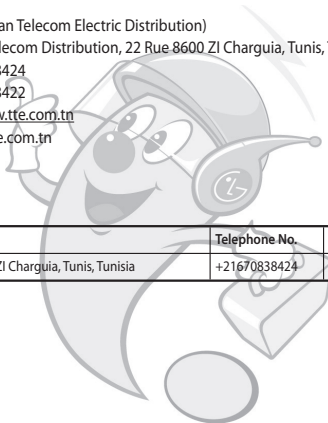 


LIBYA

Headquarter

- ❑ Agent Name : AL MASAR the Import of Electronic Devices
- ❑ Address : Cedy Elmasri, Almadar Street Tripoli Libya
- ❑ Telephone No. : 00218-21-3600167
- ❑ Fax No. : 00218-21-3600167
- ❑ Web Site/Email : www.massar.com.ly / Info@massar.com.ly

Service Centers

Area	Address	Telephone No.	Fax No.
Tripol	Cedy Elmasri, Almadar Street Tripoli Libya	00218-21-3600167	00218-21-3600167

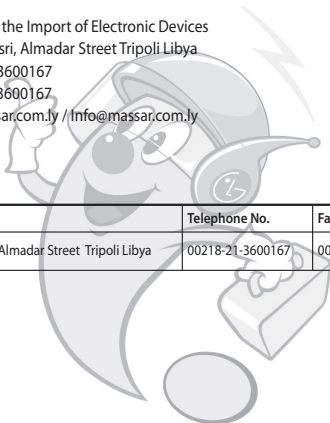 

ALGERIA

Headquarter

- ❑ Agent Name : Algerika
- ❑ Address : 409, Lotissement El-Bouroudj, Ain-Allah Delly Brahim Alger.
- ❑ Telephone No. : +21321917494
- ❑ Fax No. : +21321917505
- ❑ Email : garantie@algerie-k.com

Service Centers

Area	Address	Telephone No.	Fax No.
Algiers	409, Lotissement El-Bouroudj, Ain-Allah Delly Brahim Alger	+21321917494	+21321917505




KENYA

Headquarter

- ☐ Agent Name : Skytel Limited
- ☐ Address : Wilson Airport, PO Box 42444, Nairobi, Kenya
- ☐ Telephone No. : +25420252240/1
- ☐ Fax No. : +25420252240
- ☐ Email : alex.kabuagi@xcom.co.ke

Service Centers

Area	Address	Telephone No.	Fax No.
Nairobi	Wilson Airport, PO Box 42444, Nairobi, Kenya	+25420252240/1	+25420252240

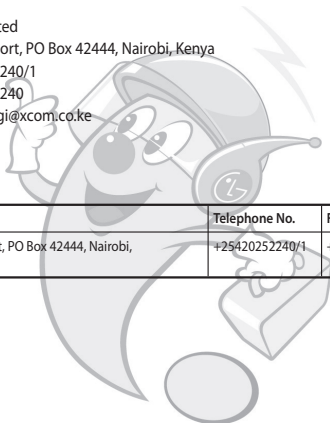 

NIGERIA

Headquarter

- ❑ Agent Name : LGEAL (LG Electronics Antwerp Logistics N.V.)
- ❑ Address : 65C, Opebi Road, Ikeja Lagos, Nigeria
- ❑ Telephone No. : +23418935454 (LG Customer Information Center)
- ❑ Fax No. : +23417936510, 4977753
- ❑ Email : cland@lge.com

Service Centers

Area	Address	Telephone No.	Fax No.
Lagos	65C, Opebi Road, Ikeja Lagos, Nigeria	+23418927777	+23417936510



SOUTH AFRICA

Headquarter

- ❑ Agent Name : Vodacare
- ❑ Address : ARC,Gound Floor, east wing, Vodacom Service Park, Vodacom Boulevard, Vodavalley,Midrand,SA.
- ❑ Telephone No. : +27115464039 (LG Customer Information Center : 0861545454)
- ❑ Fax No. : +27115464331
- ❑ Web Site : <http://www.cellucity.co.za>
- ❑ Email : craig.gower@vodacom.co.za

Service Centers

Area	Address	Telephone No.	Fax No.
Midrand	ARC,Gound Floor, east wing, Vodacom Service Park, Vodacom Boulevard, Vodavalley Midrand, SA	+27115464039	+27115464331

SOUTH AFRICA

Headquarter

- ❑ Agent Name : Combase
- ❑ Address : 44 Old Pretoria Road, Midrand, SA.
- ❑ Telephone No. : +27116558000 (LG Customer Information Center: 0861545454)
- ❑ Fax No. : +2711315 8387
- ❑ Email : deanw@combase.co.za

Service Centers

Area	Address	Telephone No.	Fax No.
Capetown	64-70 Edward Street, Belville, Capetown..	+27219102940	+27219103011
Durban	379 Umbilo Road, Durban	+27312060877	+27312057655
Port Elizabeth	Shop 1, Salgar House, 18 Newton Street, Newton Park.	+27413632989	+27413631787
Nelspruit	Shop G14, Nelcity Building, Cnr Paul Kruger & Louis Trichard Rds, Nelspruit	+27137554185	+27137554183
Bloemfontein	Shop 16, College Square, Nelson Mandela Road, Bloemfontein, 9300	+27514441688	+27514441922
Midrand	44 Old Pretoria Road, Midrand, SA	+27116558000	+27113158387

SOUTH AFRICA

Headquarter

- ❑ Agent Name : IXIA Trading 348 PTY Ltd
- ❑ Address : Block B, Lone Creek, Waterfall Park, Bekker Street, Vorna Valley, Midrand, 1685, South Africa
- ❑ Telephone No. : +27118057863 (LG Customer Information Center : 0861545454)
- ❑ Fax No. : +27866339459
- ❑ Email : david@ixia.co.za

Service Centers

Area	Address	Telephone No.	Fax No.
Midrand	Block B, Lone Creek, Waterfall Park, Bekker Street, Vorna Valley, Midrand, 1685, South Africa	+27118057863	+27866339459

Life's
Good



Other Countries

- Turkey
- Pakistan

LG

TURKEY

Headquarter

- ❑ Agent Name : Teleservice Int. Telefon
- ❑ Address : Dr. Fahrettin Kerim Gökay Cad. No:31-1 Altunizade Üsküdar TR-34662 Istanbul
- ❑ Telephone No. : +902165450404
- ❑ Fax No. : +902165445656
- ❑ Web Site : <http://www.teleservice.com>
- ❑ Email : sinan.kus@teleservice.com

Service Centers

Area	Address	Telephone No.	Fax No.
Istanbul	Dr. Fahrettin Kerim Gökay Cad. No:31-1 Altunizade Üsküdar TR-34662 Istanbul	+902165450404	+902165445656
Ankara	Mithatpaşa cad. No:31 A TR-06420 Kızılay/Ankara	+903124301222	+903124353365
Diyarbakır	İnönü Cad. 4/C Büyük Hotel Altı Da_kapı TR-21090 Diyarbakır	+904122287785	+904122288088
Izmi	Gazi Bulvarı No:90/B TR-35230 Çankaya/Izmir	+902324458600	+902324457775
Teleservice			
KVK			
SNG			
Vadox			

PAKISTAN

Headquarter

- ☐ Agent Name : New Allied Mobile Communication
☐ Address : 3/3 Ground Floor, Rabbiya Garden, M.C.H.S., Shaheed-e-Millat Road, Karachi, Pakistan.
☐ Telephone No. : +92214388271/74
☐ Fax No. : +92214388278
☐ Email : zpalg@yahoo.com

Service Centers

Area	Address	Telephone No.	Fax No.
Karachi	N-1, 4th Floor, Al -Haroon, 10 Aga Khan III Road, Karachi. 74400.	+92212729722	+92212729722
Lahore	Suite # 10, 2nd Floor Hafeez Centre Gulburg III, Lahore	+92425759157	+92425714684
Multan	352 Hithar Road Behind Hussain Agahi Road, Multan	+926145184012	+92616561456
Faisalabad	63, Gulistan Market, Street # 3, Near Taj Cinema, Railway Road, Faisalabad	+92412640655	-
Islamabad	2 / B, N.H.S.P Centre, Near Utility Store Head Office, Fazal-e-Haq Road, Blue Area	+925128282734	+92512828234



Visit us on

<http://www.lgservice.com>

<http://www.lgmobile.com>

XPERIENCE

WINNING CELLULAR SERVICE

@ MONTECASINO

Thank you for buying a LG Mobile phone



Visit our LG Mobile Care Lounge

where you and your mobile phone receive five star

Service

Quality

Value

Advice



Visit the LG Xperience Store for the latest in mobile technology, content and accessories. Qualified and experienced staff are on call for all your mobile needs. Find us at Monte Casino, opposite Nu Metro, Johannesburg Call: 011 511 0184



