



ENGLISH

РУССКИЙ

УКРАЇНСЬКА

ҚАЗАҚ

OWNER'S MANUAL FREEZER

Please read this owner's manual thoroughly before operating and keep it handy for reference at all times.

 
Electrical Connections (In the UK Only)

Important

The wires in this mains lead are coloured in accordance with the following code:

GREEN AND YELLOW: EARTH
BLUE: NEUTRAL
BROWN: LIVE

This appliance must be earthed

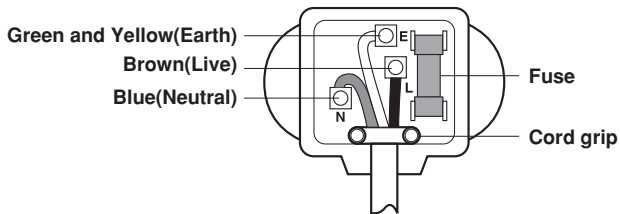

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured Green and Yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol (\perp) or coloured Green or Green and Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black.

The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Red.

If a 13 amp (BS 1363) plug is used, fit a 13 amp BS 1362 fuse.

Registration

The model and serial number are found on the rear of this unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase. Staple your receipt here.

Date of Purchase : _____

Dealer Purchased From : _____

Dealer Address : _____

Dealer Phone No. : _____

Model No. : _____

Serial No. : _____

Table of Contents

Introduction	Important Safety Instruction	4
	Identification of Parts	10
Installation	Installation	11
	Starting	11
	Climate class	11
	Two stars section	11
Operation	Temperature Control	12
	Express Freeze	13
	Eco Friendly	13
	Self Test	13
	Lock	14
	Power On/Off	14
	Door Alarm	14
	Freezer Compartment	14
	Flap Cover	15
	Ice Making	15
Defrosting	15	
Suggestion On Food storage Care and Maintenance	Storing Food	16
	General Information	17
	Cleaning	17
Trouble Shooting	Trouble Shooting	18
	Product information	20

Important Safety Instruction

BASIC SAFETY PRECAUTIONS

This guide contains many important safety messages.

Always read and obey all safety messages.

This is the safety alert symbol. It alerts you to safety messages that inform you of hazards that can kill or hurt you or others or cause damage to the product. All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, or CAUTION. These words mean:

⚠ DANGER You will be killed or seriously injured if you don't follow instructions.

⚠ WARNING You can be killed or seriously injured if you don't follow instructions.

⚠ CAUTION Indicates an imminently hazardous situation which, if not avoided, may result in minor or moderate injury, or product damage only.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.

1. When connecting the power

 
A dedicated outlet should be used.

- Using several devices at one outlet may cause fire.
- The electric leakage breaker may damage food and the dispenser may be leaked.



Do not allow the power plug to face upward or to be squeezed at the back of the fridge/freezer.

Water may be flown into or the plug may be damaged, which causes fire or electric shock.



Prevent the power cord from being squeezed or imprinted if the refrigerator is pushed in after the power plug is extracted during the installation.

It becomes the cause of fire or electric shock.

When moving your appliance away from the wall, be careful not to roll over or damage the power cord.

Do not allow the power cord bent or pressed by the heavy object to be damaged.

It may damage the power cord to cause fire or electric shock.



Do not extend or modify the length of the power plug.

It causes electric shock or fire by the electric damage of the power cord or others.



Unplug the power plug when cleaning, handling or replacing the interior lamp of the fridge/freezer.

- It may cause electric shock or injury.
- When replacing the interior lamp of the fridge/freezer, make sure that the rubber ring for preventing the electric spark within the socket is not taken off.



Important Safety Instruction

Do not pull out the cord or touch the power plug with wet hands.

It may cause electric shock or injury.



Remove water or dust from the power plug and insert it with the ends of the pins securely connected.

Dust, water or unstable connection may fire or electric shock.



Pull out the power plug not by grasping the cord but the plug of its end.

It may cause electric shock or short circuit to fire.



 
Make sure of grounding.

Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded or not.

The incorrect grounding may cause breakdown and electric shock.

Be sure to use grounded exclusive proper voltage consent for the power plug.

It becomes the cause of fire.

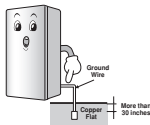

When the power cord or the power plug is damaged or the holes of the outlet are loosed, do not use them.

It may cause electric shock or short circuit to make fire.



Wait for 5 minutes or longer when reconnecting the plug.

It may cause the operation of the refrigerator to fail.



2. When using the fridge/freezer

Do not place the heavy object or the dangerous object (container with liquid) on the fridge/freezer.

It may be dropped to cause injury, fire or electric shock when opening or closing the door.



Do not cling to the door or the shelves of the door or the cool chamber.

It may make the fridge/freezer fallen down or damage the hands. Especially, do not allow the children to do the above.



Prevent children from entering the product.

It may endanger the life of a child if the child enters the refrigerator.



Opening and closing the door of the refrigerator vigorously may cause the stored food in the refrigerator basket to fall by shock and hurt the foot, so take precautions.

 
Do not install the fridge/freezer in the wet place or the place which water or rain splashes.

Deterioration of insulation of electric parts may cause electric leakage.



Important Safety Instruction

Do not use or store inflammable materials ether, benzene, alcohol, medicine, LP gas, spray or cosmetics near or in the fridge/freezer.
It may cause explosion or fire.



Do not place the lit candle within the fridge/freezer to deodorize. Do not use drier to dry the inside, nor light a candle to remove odor.
It may cause explosion or fire.



Do not store the medicine or the academic materials at the fridge/freezer.

When the material with the strict temperature control is stored, it may be deteriorated or it may make an unexpected reaction to cause any risk.



Do not use any combustible spray near the fridge/freezer.
It may become the cause of an explosion or fire.



Avoid the heating devices. Install in places away from the fire such as the place where flammable gas is leaked.

It may cause fire.



Do not place flower vase, cup, cosmetics, medicine or any container with water on the fridge/freezer.

It may cause fire, electric shock or injury by dropping down.

 


In case of thunder and lightning, or not in use for a long period of time, detach the power plug.

There is a danger of electric shock or fire.




Use the submerged fridge/freezer after checking it.
It may cause electric shock or fire.



When gas is leaked, do not touch the fridge/freezer or the outlet and ventilate the room immediately.

 - The explosion by spark may cause fire or burn.
- Because this fridge/freezer uses natural gas (isobutene, R600a) as the environment-friendly refrigerant, even a small amount (80~90g) is combustible. When the gas is leaked by the severe damage during delivering, installing or using the fridge/freezer, any spark may cause fire or burn.



Do not spray water at the outside or the inside of the fridge/freezer or do not clean it with benzene or thinner.

Deterioration of insulation of electric parts may cause electric shock or fire.



When any strange smell or smoke is detected from the fridge/freezer, disconnect the power plug immediately and contact to the service center.

 
It may cause fire.



Important Safety Instruction


Do not allow any person except a qualified engineer to disassemble, repair or alter the fridge/freezer.

It may cause injury, electric shock or fire.



Do not use the fridge/freezer for non-domestic purpose (storing medicine or testing material, using at the ship, etc.).

 It may cause an unexpected risk such as fire, electric shock, deterioration of stored material or chemical reaction.



When disposing the fridge/freezer, remove the packing materials from the door.

It may cause to lock out the child.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

 
Install the fridge/freezer on the solid and level floor.

Installing it on the unstable place may cause death by falling down the fridge/freezer when opening or closing the door.



Do not insert the hands or the metal stick into the exit of cool air, the cover, the bottom of the fridge/freezer, the heatproof grill (exhaust hole) at the backside.

It may cause electric shock or injury.

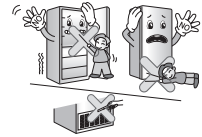

⚠ CAUTION

Violating this direction may cause injury or damage to house or contents. Always be careful, please.

Do not touch food or containers in the freezer with wet hands.

It may cause frostbite.



Do not place the food in disorder inside the refrigerator.

The food may fall during opening and closing the door of the refrigerator and hurt people.

Do not put filled bottles in the freezer.

It may freeze the contents to break the bottle to cause injury.



Do not insert hands into the bottom of the fridge/freezer.

 
The iron plate at the bottom may cause injury.



Important Safety Instruction


Carry the fridge/freezer with the handle bar at the bottom of the front and the top of the rear.

Otherwise, your hands may be slipped to cause injury. Because the product is heavy, carrying it alone may hurt people or accidents may occur.



Because opening or closing the door of the fridge/freezer may cause injury to the person around it, be careful, please.

 Opening or closing the door may cause feet or hands to be caught in the chink in door or the child to be get hurt by the corner.

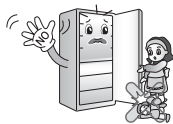

Do not put any living animal in the fridge/freezer.



Precaution

▲ WARNING

- This fridge/freezer must be properly installed and located in accordance with the Installation Instruction before it is used.
- Never unplug your fridge/freezer by pulling on the power cord. Always grip plug firmly and pull straight out from the outlet.
- After your fridge/freezer is in operation, do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.

Accessibility of Supply Plug

The supply plug of the refrigerator-freezer should be placed in easy accessible position for quick disconnection in emergency.

Supply Cord Replacement

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Danger

Risk of child entrapment.

Before you throw away your old refrigerator or freezer, take off the doors.

Leave the shelves in place so that children may not easily climb inside.

Don't store

Don't store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

Grounding (Earthing)

In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current. In order to prevent possible electric shock, this appliance must be grounded. Improper use of the grounding plug can result in an electric shock.

Important Safety Instruction

▲ WARNING

- ▲ Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- ▲ Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- ▲ Do not damage the refrigerant circuit.
- ▲ Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- ▲ The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. When disposal, please consult with service agent or a similarly qualified person.



This appliance contains a small amount of isobutane refrigerant (R600a), natural gas with high environmental compatibility, but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged. Refrigerant squirting out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.

In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used. The room must be 1 m² in size for every 8 g of R600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance. Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.

▲ CAUTION

 
- If the wall socket is loose, do not insert the power plug.
It may cause electric shock or fire.
- Never unplug your refrigerator by pulling on the power cord. Always grip plug firmly and pull it straight out from the outlet.
You may disconnect a wire and cause a short circuit.
- Do not use a wet or damp cloth when cleaning the plug. Remove any foreign matter from the power plug pins.
Otherwise, there is a risk of fire.
- After unplugging the appliance, wait for at least five minutes before plugging it again to the wall socket.
Abnormal operation of the freezer may cause material damage.
- If the appliance is not to be used for a long time, pull out the power plug.
Any deterioration in the insulation may cause fire.
- Do not let children touch or play with the control panel on the front of the appliance.
- The refrigerant used in fridge/freezer and the gases in the insulation material require special disposal procedures. Ensure that none of the pipes on the back of the appliances are damaged prior to disposal.

▲ WARNING

Please do not use a dishwasher to clean the lower drawers; the high temperature may cause damage to the baskets which make them unusable.

Identification of Parts

Model Name : GW-B404****


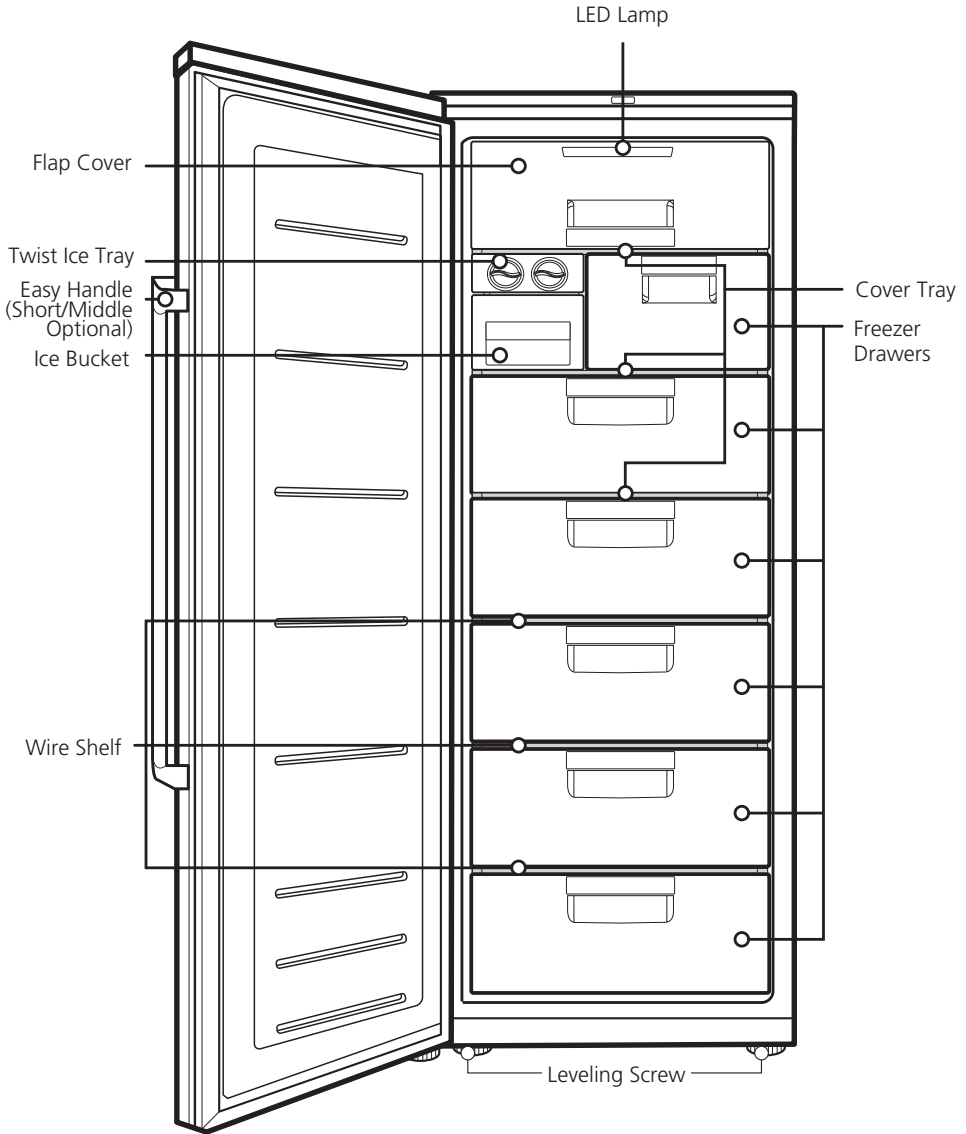


Note

- If you find some parts missing from your unit, they may be parts only used in other models.
- It may be different the door opened appearance depending on the model.

Installation

  1. Select a good location.
Place your freezer where it is easy to use.
2. Avoid placing the unit near heat sources, direct sunlight or moisture.
3. To avoid vibration, the unit must be leveled.
If required, adjust the leveling screws to compensate for the uneven floor.
The front should be slightly higher than the rear to aid in door closing.
Leveling screws can be turned easily by tipping the cabinet slightly.
Turn the leveling screws counterclockwise (↺) to raise the unit, clockwise (↻) to lower it.
4. Clean your freezer thoroughly and wipe off all dust accumulated during shipping.
5. Install accessories such as ice cube box, etc., in their proper places. They are packed together to prevent possible damage during shipment.
6. Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.
7. Product with handle shall be located at least 55 mm from the wall on the hinge side to open door by 90°
8. The warm air under bottom and rear side of the product have to release. Otherwise, This will increase the power consumption.

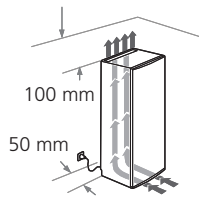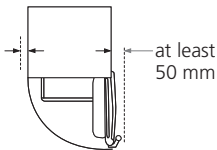

Starting

When your freezer is installed, allow it 2-3 hours to stabilize at normal operating temperature prior to filling it with fresh or frozen foods.
If power plug is disconnected, allow 5 minutes delay before restarting.
Your freezer is now ready for use.

Climate class

The appliance is designed to operate at the limited range of ambient temperature, depending on climate zones. Do not use the appliance at the temperature out of the limit. Climate class of your appliance is indicated on the label with technical description inside the fridge compartment.

Class	Symbol	Ambient temperature range °C
Extended temperate	SN	+10 ~ +32
Temperate	N	+16 ~ +32
Subtropical	ST	+16 ~ +38
Tropical	T	+16 ~ +43
Extended temperate -Tropical	SN-T	+10 ~ +43

Two stars section

- Two stars means the temperature in the section is -12°C ~ -18°C.
- Freezer foods for short-term storage.

 
Temperature Control

Your freezer has controls that let you regulate the temperature in freezer compartments.

Display Panel For Temperature Control

Adjusting the temperatures and functions

※ It may a different the printing depending on the model.

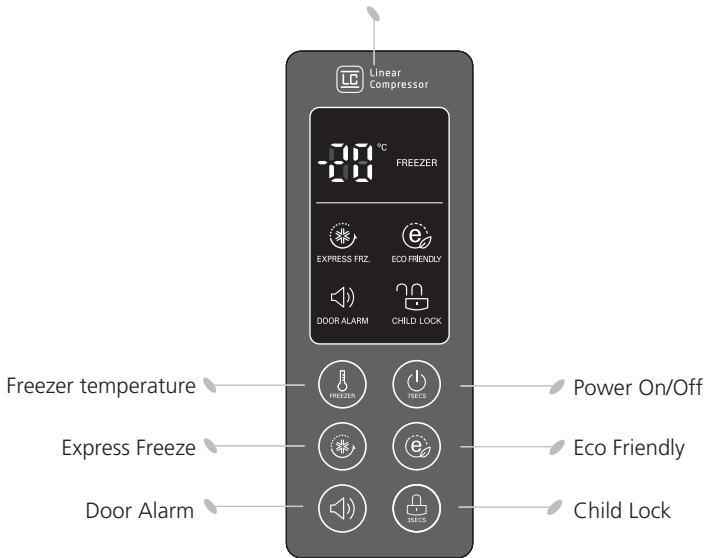

Express Freeze

< Exterior Type >



 
- Please select this function for prompt freezing.
- Press the Express Frz. button once, and then the quick freeze operation starts with the lamp on.
- The Express Frz. operation takes about 24 hours. When its operation ends, it automatically returns to the previous temperature setting. If you want to stop the quick freeze operation, press the Express Frz. button once more, the lamp goes out, and the Express Frz. operation stops and the refrigerator returns to the previous temperature setting.

How to adjust the temperature in the freezer compartment

< Exterior Type >



- The initial temperature of the freezer compartment is -20°C. You can now adjust the temperature of the compartments as you want. By pressing the button, it is possible to change the temperature.



Note

The actual inner temperature varies depending on the food status, as the indicated setting temperature is a target temperature, not actual temperature within freezer. Freezing function is weak in the initial time. Please adjust temperature as above after using freezer for minimum 2~3 days.

Eco Friendly

< Exterior Type >



- This function makes the freezer work in a power saving mode which is useful for when you are away on holiday, by reducing energy consumption. Pressing 'ECO FRIENDLY' starts operation with lamp on and pressing it again stops the operation.

Note

 
When the Eco Friendly mode is "ON", the other buttons will not operate. When you come back from Eco Friendly, press the Eco Friendly mode off so that other buttons work and the freezer returns to previous temperature setting.

Self Test

- This function automatically detects failure when failure is found in product during the use of freezer.
- If the failure occurs at product and it does not operate by pressing any button and normal indication is not done, do not turn the power off and immediately contact with the local service center.
- A lot of time is needed for service engineer to detect the failed part by turning it off.

Lock

< Exterior Type >



- Pressing this button stops operation of other buttons.
- "Locking" or "Un-Locking" is repeated whenever pressing the LOCK button. (For "Locking" press the "LOCK" button for 3 secs. For "Un-Locking" press the "LOCK" button for 3 secs.)
- When 'LOCK' is activated, pressing the other buttons would not work.

Power On/Off

- This button turns the appliance on and off.
- Turning on and off is repeated whenever the ON/OFF button is pressed. (To turn the appliance off hold the ON/OFF button for 7 seconds. To turn the appliance on press the button shortly).



Door Alarm

- When the door of the fridge is opened for a while, the alarm sounds. Please contact with the local service center if warning continue to sound even after closing the door.
- You can choice door alarm on/off pressing door alarm button shortly.



Freezer Compartment



 
1. Recommended Notch
 - This product provide standard setting as follow.
Freezer : -20°C
2. Maximum storage
 - To get better air circulation, insert all drawers.
 - If large quantities of food are to be stored, all the freezer drawers shall be taken out of the appliance except the bottom one and the food shall be stacked directly on the freezer shelves.
3. Max Freezing capacity
 - If there is already food in the compartment, button on "Express frz" several hours before placing fresh produce in the freezer compartment to get maximum capacity, As a rule, 7 hours is adequate.

▲ CAUTION


- When the freezer drawers take out of the appliance, first pick the food out of drawers. Then use the handle of drawers, pull out the drawers carefully. It may cause injury.
- The shape of each drawer may different, insert in the right position.

Flap, Cover

How to use the flap, cover

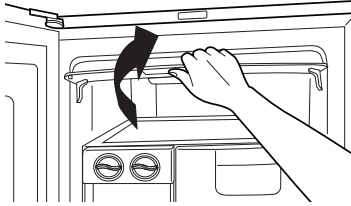


 1. Grip the handle of flap cover, then rotate and lift.
2. Push the inside.

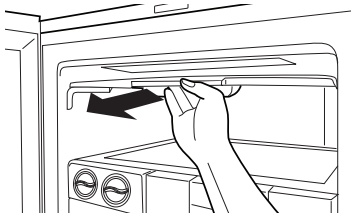

3. Grip the handle of flap cover, then pull out.


 
How to Separate the Flap, Cover

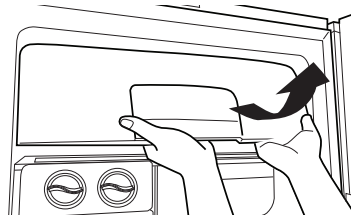

1. Hold the flap cover, and bend.
2. Pull out one side.

Ice Making

  
- Take out the twist ice maker, fill it up and put it back to it's original location.



- Ice will be dropped into the ice storage bin by rotating Ice separation handle of ice making compartment.



 - You can make ice and also use this space as a storage space for Frozen food. Removing (1) (Twist ice maker) as shown in the picture.



Note

- Rotating the ice separation handle before ice is fully frozen may cause the remaining water drop into the ice storage bin to lump the ice together.
- Take the ice out of the ice storage bin for use but do not pour water into the ice storage bin to freeze the water to ice. The ice storage bin can be Frozen and broken.
- When the ice is full, it is designed for the ice to fall to the bottom in case the ice storage bin can not pulled out. Be careful not to store the ice too full.

Defrosting

- Defrosting takes place automatically.
- The defrosting water flows down to the evaporating tray and is evaporated automatically.

Storing Food

▲ CAUTION

- Do not store food which goes bad easily at low temperature, such as banana, and melon.
- Allow hot food to cool prior to storing. Placing hot food in the freezer could spoil other food, and lead to higher electric bills.
- When storing the food, use a container with a lid. This prevents moisture from evaporating, and helps food to keep its taste and nutrients.
- Do not block air vents with food. Smooth circulation of cold air keeps freezer temperature even.
- Do not open the door frequently. Opening the door lets warm air enter the freezer, and cause the temperature to rise.
- Never keep too many foods in door rack, as this may stop the door from fully closing.
- Do not store bottles in the freezer compartment, they may break when frozen.
- Do not refreeze food that has been thawed. This causes loss of taste and nutrition.
- Do not store pharmaceutical products, scientific materials or other temperature sensitive products in the freezer.
Products that require strict temperature controls must not be stored in the freezer.
- If you want to quick freeze new food, you put it middle drawer of freezer compartment, and then press the Express Frz. button.

Suggestion for energy saving

- Please do not keep the door open for a long time, close door in the shortest time.
- Too much food are not advised to be put in. Enough space should be kept for cool air circulating freely.
- Do not set the temperature of freezer lower than needed. Do not put the food near the temperature sensor. Keep the distance of at least 5mm from the sensors.
- Allow hot food to cool prior to storing. Placing hot food in the Fridge could spoil other food, and lead to higher electric bills.
- Do not block air vents with food. Smooth circulation of cold air keeps freezer temperature even.
- Do not open the door frequently. Opening the door lets warm air enter the freezer, and cause temperature to rise.
- To keep a position of inner parts like as baskets, drawers, shelves and Fridge Supplied by manufacturer is the most efficient usage for energy saving.

General Information

Power Failure

- 1~2 hour power failure does no harm to the foods stores. Try to avoid opening and closing the door too frequently.

 
If You Move

- Take out foods from the freezer and firmly fix the loose items with tape.
- Turn the leveling screws until they stop before moving the freezer. Otherwise the screw may scratch the floor or the freezer cannot move.

Anti Condensation Pipe

- The Anti-Condensation pipe is installed around the front side of freezer as well as on the both sides of freezer to prevent dewing when be intalled by pair.
- Especially after installation or when ambient temperature is high, the freezer may feel hot, which is quite normal.

Anti-Condensation
Pipe

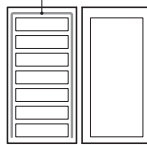


front side

To Reverse the Doors

- Your freezer is designed with reversible doors, do that they may open from either the left of right hand side to suit your kitchen design.

To install refrigerators in pairs

 - Your freezer can be installed with fridge in pairs.
- It can be installed by installation parts supplied like this.

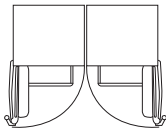

⚠ CAUTION

However When you want to reverse the doors or install your refrigerators in pairs, you must call to service agent. Revising the doors and installation condition is not covered by the warranty

Cleaning

Before Cleaning

Be sure to unplug the power.

Exterior

Clean the outside of the freezer with a soft cloth soaked with hot water or liquid detergent. If you use a detergent, be sure to wipe it with a clean wet cloth.

Interior

Same as above.

After Cleaning

Check that the power cord is not damaged, power plug has not overheated, and that the power plug is tightly inserted into the outlet.

⚠ WARNING

Be sure to dry the appliance with a cloth after washing it with water.

Do not use abrasive, petroleum, benzene, thinner, hydrochloride acid, boiling water, rough brush, etc, as they may damage parts of the fridge/freezer.

Drip Tray

Wipe moisture out around the door part and the drip tray using a clean cloth.

Before calling for service, check this list.

It may save you both time and expense.

This list includes common occurrences that are not the result of defective workmanship or materials in this appliance.

Problem	Possible Causes
fridge/ freezer does not operate	<ul style="list-style-type: none">• Power plug may be unplugged from the electric outlet. Plug it in securely.• House fuse has blown or circuit breaker has tripped. Check and/or replace fuse and reset circuit breaker.• Power cut. Check house lights.
Fridge or Freezer Compartment Temperature too warm	<ul style="list-style-type: none">• Temperature control not set on proper position. Refer to Temperature Control section.• Appliance is placed close to heat source.• Warm weather-frequent door openings.• Door left open for a long time.• Package holding door open or blocking air duct in freezer compartment.
Vibration or Rattling or Abnormal Noise	<ul style="list-style-type: none">• The floor on which the fridge/ freezer is installed may be uneven or the fridge/ freezer may be unstable. Make it even by rotating the leveling screw.• Unnecessary objects placed in the back side of the fridge/ freezer.
Frost or Ice Crystals on frozen Food	<ul style="list-style-type: none">• Door may have been left ajar or package holding door open.• Too frequent or too long door openings.• Frost within package is normal.
Moisture forms on Cabinet Surface	<ul style="list-style-type: none">• This phenomenon is likely to occur in a wet space. Wipe it with a dry towel.
Moisture collects inside	<ul style="list-style-type: none">• Too frequent or too long door openings.• In humid weather, air carries moisture into fridge when doors are opened.
Fridge has odor	<ul style="list-style-type: none">• Foods with strong odors should be tightly covered or wrapped.• Check for spoiled food.• Interior needs cleaning. Refer to CLEANING section.

Door not closing properly

- **Food package is keeping door open.**
Move packages that keep door from closing.
- **fridge/ freezer is not level.**
Adjust the leveling screws.
- **The floor on which the fridge/ freezer is installed may be uneven or the fridge/ freezer may be unstable.**
Slightly raise the front side with the leveling screw.

Interior light does not work

- **No power at outlet.**
- **When you want to replace the lamp, you must contact service agent.**

Note

For more information about refrigerator service and use, you can find at the official site of LG at «Frequently Asked Questions» (www.lg.com).



DISPOSAL OF YOUR OLD APPLIANCE

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Product information

Model			
Producer Category			
Capacity (l)	ISO Gross	Total Freezer Refrigerator	
	ISO Storage	Total Freezer Refrigerator	
Weight (kg)	Net / Packing Width x Height x Depth	Product Packing	
Free standing / Built-in		Built-in	Built-in
Defrost system		Frost Free	Frost Free
Sound Power (dB)			
Energy Class			
Energy Consumption (kWh/year)			
Temperature rise time (hr)			
Freezing Capacity (kg/24hr)			
Refrigerant			
Star Rating			
Climate Class			

※ Climate Class : SN - T (This appliance is intended to be used at an ambient temperature between 10°C and 43°C.)