



ENGLISH

ČEŠTINA

SLOVENČINA

ROMÂNĂ

POLSKI

MAGYAR

HRVATSKI

SRPSKI

БЪЛГАРСКИ

МАКЕДОНСКИ

OWNER'S MANUAL STYLISH POWERFUL PORTABLE BOOM BOX

Please read this manual carefully before operating your set and retain it for future reference.

SB156



MFL67565209

Safety Information



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

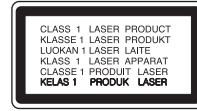

CAUTION: This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center. Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure.

CAUTION concerning the Power Cord

Most appliances recommend they be placed upon a dedicated circuit;

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

You have to set the disc format option to [Mastered] in order to make the discs compatible with the LG players when formatting rewritable discs. When setting the option to Live File System, you cannot use it on LG players.

(Mastered/ Live File System : Disc format system for Windows Vista)

Disposal of your old appliance



1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Disposal of waste batteries/accumulators



1. When this crossed-out wheeled bin symbol is attached to batteries/accumulators of Your product it means they are covered by European Directive 2006/66/EC.
2. This symbol may be combined with chemical symbols for mercury(Hg), cadmium(Cd) or lead(Pb) if the battery Contains more than 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead.
3. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
4. The correct disposal of Your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health.
5. For more detailed information about disposal of Your old batteries/accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product.



LG Electronics hereby declares that this/ these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC, 2006/95/EC, and 2009/125/EC.

European Standards Centre:

Krijgsman 1, 1186 DM Amstelveen
The Netherlands

- Please note that this is NOT a Customer Service contact point. For Customer Service Information, see Warranty Card or contact the dealer that you purchased this product.

Copyrights

It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyrighted material without permission. This product features the copy protection function developed by Macrovision. Copy protection signals are recorded on some discs. When recording and playing the pictures of these discs picture noise will appear. This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 OR 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 525p AND 625p UNIT, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.

Table of Contents

1 Getting Started

- 2 Safety Information
- 6 Unique Features
- 6 Accessories
- 6 Playable file Requirement
 - 6 – MP3/WMA music file requirement
 - 6 – Compatible USB Devices
 - 6 – USB device requirement
- 7 Remote control
- 8 Front panel
- 9 Rear panel

2 Connecting

- 10 Optional Equipment Connection
 - 10 – USB Connection
 - 10 – PORTABLE IN Connection
 - 10 – Battery Installation
 - 10 – AC Power Cord Connection

3 Operating

- 11 Basic Operations
 - 11 – CD/ USB Operations
 - 11 – Selecting a folder and a MP3/WMA file
 - 12 – Deleting a MP3/WMA file
- 12 Other Operations
 - 12 – Programmed Playback
 - 12 – Displaying file information (ID3 TAG)
 - 12 – Turn off the sound temporarily
- 13 Sleep Timer Setting
- 13 Dimmer
- 13 Radio Operations
 - 13 – Listening to the radio
 - 13 – Presetting the Radio Stations
 - 13 – Deleting all the saved stations
- 14 Improving poor FM reception
- 14 Sound adjustment
 - 14 – Setting the surround mode
- 14 Advanced Operations

- 14 – Listening to music from your external device
- 14 – Recording to USB
- 14 – Pausing recording
- 15 – To select recording bit rate and speed

4 Troubleshooting

- 16 Troubleshooting

5 Appendix

- 17 Specifications
- 18 Maintenance
 - 18 – Handling the Unit
 - 18 – Notes on Discs
- 18 Trademarks and Licenses

1

2

3

4

5

Unique Features

USB Direct Recording


Records music to your USB device.

Portable In


Listens to music from your portable device. (MP3, Notebook, etc)

Accessories


Please check and identify the supplied accessories.

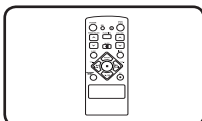

Remote Control (1)

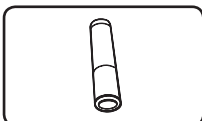

Battery (1)

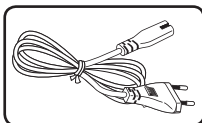

AC Power cable (1)

Playable file Requirement

MP3/WMA music file requirement

MP3/ WMA file compatibility with this unit is limited as follows :

- Sampling Frequency : 32 - 48 kHz (MP3), 32 - 48 kHz (WMA)
- Bit rate : 32 - 320 kbps (MP3), 40 - 320 kbps (WMA)
- Maximum files : Under 999
- File extensions : ".mp3"/".wma"
- CD-ROM file format : ISO9660/ JOLIED

- We recommend that you use "Easy-CD Creator", which creates an ISO 9660 file system.


Compatible USB Devices

- MP3 Player : Flash type MP3 player.
- USB Flash Drive : Devices that support USB2.0 or USB1.1.
- The USB function of this unit does not support all USB devices.


USB device requirement

- Devices which require additional program installation when you have connected it to a computer, are not supported.
- Do not extract the USB device while in operation.
- For a large capacity USB, it may take longer than a few minute to be searched.
- To prevent data loss, back up all data.
- If you use a USB extension cable or USB hub, the USB device is not recognized.
- Using NTFS file system is not supported. (Only FAT(16/ 32) file system is supported.)
- This unit is not supported when the total number of files is 1 000 or more.
- External HDD, Card readers, Locked devices, or hard type USB devices are not supported.
- USB port of the unit cannot be connected to PC. The unit cannot be used as a storage device.

Remote control

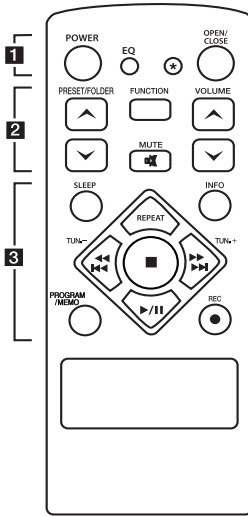

Battery Installation

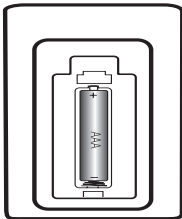

Remove the battery cover on the rear of the Remote Control, and insert one (size AAA) battery with **+** and **-** matched correctly.

..... **1**

POWER : Switches the unit ON or OFF.

EQ : Chooses sound impressions.

***** : The button is not available for any function.

OPEN/CLOSE : Opens and closes CD door.

..... **2**

PRESET/FOLDER Δ /V :

Searches for a folder of MP3/ WMA files. When a CD/ USB containing MP3/ WMA files in several folders is being played, press **PRESET/FOLDER Δ /V** selects to the folder you want to play. Choose a 'preset number' for a radio station.

FUNCTION : Selects the function and input source.

VOLUME Δ /V : Adjusts speaker volume.

MUTE : Mutes the sound.

..... **3**

SLEEP : Sets the system to turn off automatically at a specified time.

(Dimmer : The display window will be darken by half).

INFO : Checks information about your music. MP3 files often come with tags. The tag gives the Title, Artist, Album or Time information.

REPEAT : Selects a play mode.

TUN. \pm : Selects the radio station.

◀◀◀/▶▶▶ (Skip/ Search):

- Skips Fast backward or Forward.

- Searches for a section within a track.

■ : Stops playback or recording.

▶/|| (Play/Pause) : Starts or pauses playback.


PROGRAM/MEMO :

- For storing radio stations if you have saved radio stations using **PROGRAM/MEMO**, you can scroll through them and select one.

- Listens to your tracks in any order.

● REC : USB direct recording.

Front panel

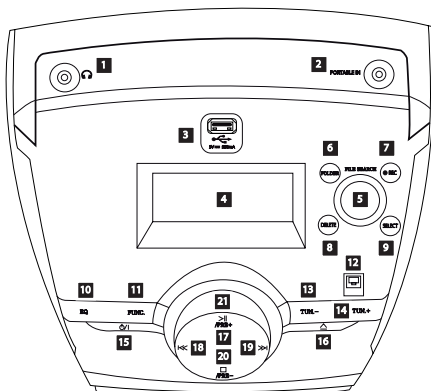

1 PHONES

Headphone jack

A warning that excessive sound pressure from earphones and headphones can cause hearing loss.

2 PORTABLE IN

For connecting a portable device and playing it through this unit's speakers.

3 USB PORT

You can play or recoding sound files by connecting the USB device.

4 DISPLAY WINDOW

Shows the current status of the unit.

5 FILE SEARCH

Moves to the another file/ track or you can select the tuning range.

6 FOLDER

Moves to folder and file selection mode.

7 ● REC

Recording.

8 DELETE

Deletes MP3/ WMA files.

9 SELECT

When You can delete files, select yes or no.

10 EQ

You can choose fixed sound impression.

11 FUNC.

Changes the function.

12 REMOTE CONTROL SENSOR

13 TUN -

Selects the radio station.

14 TUN +

Selects the radio station.

15 ⏻/I (Power)

Turn ON/ OFF.

16 △

Open or close your CD door.

17 >||/PRE +

Play/ pause.

Chooses a preset number for a radio station.

18 I<<

Skip/search.

19 >>I

Skip/search.

20 □/PRE -


STOP.

Chooses a preset number for a radio station.

21 VOLUME CONTROL

Adjusts speaker volume.

Rear panel

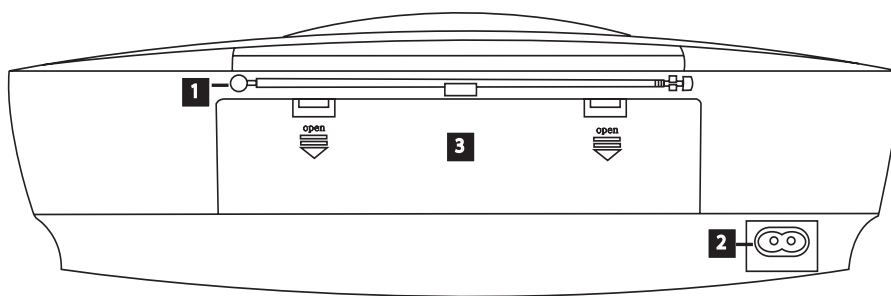


- 1** FM ANTENNA
- 2** AC in Socket
- 3** Battery Cover

Optional Equipment Connection

USB Connection

Connect the USB Memory (or MP3 player, etc.) to the USB port on the front of the unit.

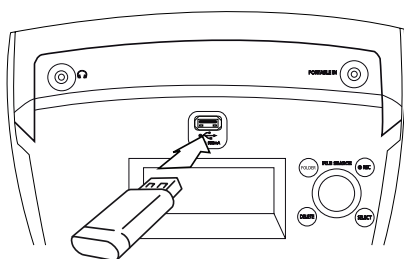


! Note

Removing the USB Device from the unit

1. Choose a different function/mode or press **■** twice in a row.
2. Remove the USB device from the unit.


PORTABLE IN Connection

Connect an output (earphone or line out) of portable device (MP3 or PMP etc) to the PORTABLE IN connector.

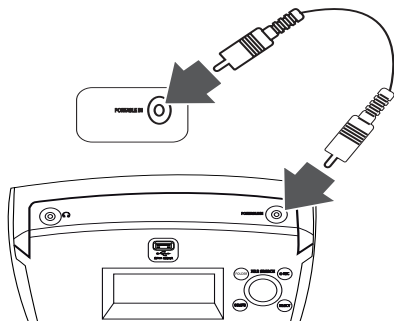

Battery Installation

1. Press and open the battery cover.
2. Put eight "D" (R20) batteries (not supplied) into the compartment making sure the \oplus and \ominus should be correctly positioned.
3. Close the battery cover.

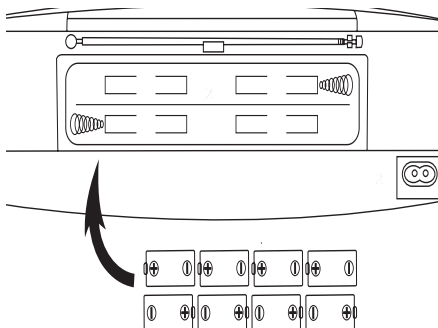

AC Power Cord Connection

1. Connect one end of the AC power cord (included) to the AC IN socket.
2. Plug the other end into the wall outlet.

! Note

- Unplug the AC power cord from the wall outlet if you do not use for an extended period of time.
- To avoid damage from possible battery leakage, remove the batteries if you do not plan to use the unit for an extended period of time.
- When the batteries are weak, replace all the batteries with new ones.
- While the AC power cord connect to the wall outlet, the batteries are not worn out.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.


Basic Operations

CD/ USB Operations

1. Insert the disc by pressing or connect the USB device to the USB port.
2. Select the **CD** or **USB** function by pressing **FUNCTION** on the remote control or **FUNC.** on the unit.
3. Select a file (or track) you want to play by pressing on the unit or on the remote control

To	Do this
Stop	Press on the remote control or /PRE - on the unit.
Playback	Press on the remote control or /PRE + on the unit.
Pause	During playback, press on the remote control or /PRE + on the unit.
Skipping to the next/previous track/ file	During playback, press on the unit or on the remote control to go to the next track/ file or to return to the beginning of the current track/ file. Press on the remote control or on the unit twice briefly to step back to the previous track/ file.
Searching for a section within a track	Press and hold on the unit or on the remote control during playback and release it at the point you want to listen to.
Playing repeatedly or randomly	Press REPEAT on the remote control repeatedly, the display change in the following order; RPT 1 -> RPT DIR(only mp3/wma) -> RPT ALL -> RANDOM -> OFF

Selecting a folder and a MP3/ WMA file

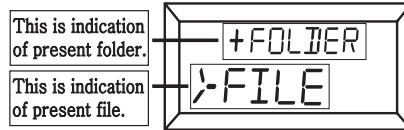

On the unit

1. Press **FOLDER** and rotate **FILE SEARCH** until a desired folder appears.
2. Press **SELECT** or /PRE +.
3. If you want to move to the upper folder, press **FOLDER**.
4. Rotate **FILE SEARCH** until a desired file appears. Press **SELECT** or /PRE + to play it.

On the remote control

1. Press **PRESET/FOLDER** /V on the remote control repeatedly until a desired folder appears.
2. Press on the remote control or **SELECT** or /PRE + on the unit to play it. The first file of folder will play.

Deleting a MP3/WMA file

You can delete file, folder or format by pressing

DELETE. (USB only)

1. Press **DELETE** repeatedly during selecting the MP3/WMA file. This function is supported only in stop status. The display changes in the following order.
 - DELETE? : deletes file
 - DEL DIR? : deletes folder
 - FORMAT? : formats USB
2. To select "YES" or "NO", press **I<</>>I** on the unit or **I<<<</>>>>I** on the remote control or rotate **FILE SEARCH**.
3. To delete file/folder or format, press **SELECT** on the unit.
4. If you want to exit the current mode, press **■** on the remote control or **□/PRE -** on the unit.

Caution

- Do not extract the USB device during operation.(play, delete, etc.)
- Regular back up is recommended to prevent data loss.
- The delete function may not be supported according to the USB status. (lock, etc.)

Other Operations

Programmed Playback

The program function enables you to store your favorite files from any disc or USB device.

A program can contain 20 tracks.

1. Insert a CD or USB and wait for it to be order.
2. Press **PROGRAM/MEMO** on the remote control in stop status.
3. Press **I<</>>I** on the unit or **I<<<</>>>>I** on the remote control or rotate **FILE SEARCH** in stop status.
4. Press **PROGRAM/MEMO** again to save and select a next track.
5. Press **▶/II** on the remote control or **>II/PRE +** or **SELECT** on the unit to play the programmed music files.
6. To clear your selection, press **■** on the remote control or **□/PRE -** on the unit twice.

Note

The programs are also cleared when the disc or USB device is removed, the unit is powered off or the function is switched to others.

Displaying file information (ID3 TAG)

While playing an MP3 file containing file information, you can display the information by pressing **INFO**.

Turn off the sound temporarily

Press **MUTE** to mute your unit.

You can mute your unit, for example, to answer the telephone, the "MUTE" is displayed in the display window.

Sleep Timer Setting

Press **SLEEP** one or more times to select delay time between 10 and 180 minutes, after the unit will turn off.

To check the remaining time, press **SLEEP**.

To cancel the sleep function, press **SLEEP** repeatedly until "SLEEP 10" appears, and then press **SLEEP** once again while "SLEEP 10" is displayed.

Note

- You can check the remaining time before the unit turns off.
- Press **SLEEP**. The remaining time appears in the display window.
- Sleep function will work after dimmer.

Dimmer

Press **SLEEP** once. The display window will be darkening by half. To cancel it, press **SLEEP** repeatedly until dim off.

Radio Operations

Listening to the radio

1. Press **FUNCTION** on the remote control or **FUNC.** on the unit until FM appears in the display window.
The last received station is tuned in.
2. Press and hold **TUN. -/+** for about 2 seconds until the frequency indication starts to change, then release. Scanning stops when the unit tunes in a station.

Or

Press **TUN. -/+** repeatedly.

3. Adjust the volume by rotating **VOLUME** on the unit or by pressing **VOLUME \wedge /V** on the remote control repeatedly.

Presetting the Radio Stations

You can preset 50 stations for FM.

Before tuning, make sure to turn down the volume.

1. Press **FUNCTION** on the remote control or **FUNC.** on the unit until FM appears in the display window.
2. Select the desired frequency by pressing **TUN. -/+**.
3. Press **PROGRAM/MEMO** a preset number will flash in the display window.
4. Press **PRESET/FOLDER \wedge /V** to select the preset number you want.
5. Press **PROGRAM/MEMO** The station is stored.
6. Repeat steps 2 to 5 to store other stations.
7. To listen a preset station, press **PRESET/FOLDER \wedge /V**.

Deleting all the saved stations

1. Press and hold **PROGRAM/MEMO** for two seconds. "CLEAR" will flash up on the unit display.
2. Press **PROGRAM/MEMO** to erase all saved radio stations.

Improving poor FM reception

Press ►/II on the remote control. This will change the tuner from stereo to mono and usually improve the reception.

Sound adjustment

Setting the surround mode

This system has a number of pre-set surround sound fields. You can select a desired sound mode by using **EQ**.

The displayed items for the Equalizer may be different depending on sound sources and effects.

On Display	Description
POP CLASSIC ROCK JAZZ	This program lends an enthusiastic atmosphere to the sound, giving you the feeling you are at an actual rock pop, jazz or classic concert.
BASS	Reinforce the treble, bass and surround sound effect.
BYPASS	You can enjoy the sound without equalizer effect.

! Note

Maybe you need reset the surround mode, after switching the input, sometimes even after the sound track changed.

Advanced Operations

Listening to music from your external device

The unit can be used to play the music from many types of external device.
(Refer to the page 10)

1. Connect the external device to the PORTABLE IN connector of the unit.
2. Turn the power on by pressing **⏻/I (Power)**.
3. Select the PORTABLE function by pressing **FUNCTION** on the remote control or **FUNC.** on the unit.
4. Turn the external device and start it playing.

Recording to USB

1. Connect the USB device to the unit.
2. Select a function by pressing **FUNCTION** on the remote control or **FUNC.** on the unit.

One track recording - You can record to USB after playing a file you want.

All tracks recording - You can record to USB after stop.

Program list recording - After showing the programmed list, you can record it to USB.

3. Start the recording by pressing **REC** on the remote control or **● REC** on the unit.
4. To stop recording, press **■** on the remote control or **□/PRE** - on the unit.

Pausing recording

During recording, press **REC** on the remote control or **● REC** on the unit to pause recording. Press it again to restart recording. (Only Radio, Portable)

To select recording bit rate and speed

- 1. Press **REC** on the remote control or **● REC** on the unit for longer than 3 seconds.
- 2. Use **|<</>>|** on the unit or **⏮⏭**/**⏭⏮** on the remote control to select the bit rate.
- 3. Press **REC** on the remote control or **● REC** on the unit again to select the recording speed.
- 4. Press **|<</>>|** on the unit or **⏮⏭**/**⏭⏮** on the remote control to select a desired recording speed; (Only AUDIO CD).

X1 SPEED

- You can listen to music while recording it.




X2 SPEED

- You can just record the music file.

- 5. Press **REC** on the remote control or **● REC** on the unit to finish the setting.
- 6. To stop recording, press **■** on the remote control or **□/PRE -** on the unit.

Note

- You can check the recording percentage rate for the USB record on the display window during the recording. (MP3/ WMA CD Only)
- During recording MP3/ WMA, there is no sound.
- When you stop recording during playback, the file that has been recorded at that time will be stored. (AUDIO CD Only)
- Do not remove the USB device or turn off the unit during USB recording. If not, an incomplete file may be made and not deleted on PC.
- If USB recording does not work, the message like "NO USB", "ERROR", "FULL" or "NO REC" is displayed on the display window.
- Multi card reader device or External HDD can not be used for USB recording.
- A file is recorded by about 512 Mbyte when you record for a long term.
- When you stop recording during playback, the file will not be stored.
- You may not store more than 999 files.
- It'll be stored as follows.

AUDIO CD	MP3/ WMA	The other source*
 CD_REC ├── TRK_001 ├── TRK_002 └── ⋮	 FILE_REC ├── ABC(File name) ├── DEF(File name) └── ⋮	 EXT_REC ├── AUDIO_001 ├── AUDIO_002 └── ⋮

* : TUNER, PORTABLE and the like.

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

**Be responsible
Respect copyrights**

Troubleshooting

Problem	Cause & Correction
No Power.	<ul style="list-style-type: none"> • The power cord is not plugged in. Plug in the power cord. • Check whether electricity failed. Check the condition by operating other electronic devices.
No sound.	<ul style="list-style-type: none"> • Check whether you select right function. Press FUNCTION and check the selected function. • The volume is set to minimum. Use the volume controller to adjust the volume.
The unit does not start playback.	<ul style="list-style-type: none"> • An unplayable disc is inserted. Insert a playable disc. • No disc is inserted. Insert a disc. • The disc is dirty. Clean the disc. (Refer to the page 18) • The disc is inserted upside down. Place the disc with the label or printed side facing upwards.
Radio stations cannot be tuned in properly.	<ul style="list-style-type: none"> • The antenna is positioned poorly. Adjust its position. • The signal strength of the radio station is too weak. Tune to the station manually. • No stations have been preset or preset stations have been cleared (when tuning by scanning preset channels). Preset some radio stations, see page 12 for details.
The remote control does not work properly.	<ul style="list-style-type: none"> • The remote control is not pointed at the remote sensor of the unit. Point the remote control at the remote sensor of the unit. • The remote control is too far from the unit. Operate the remote control within about 16 ft (5 m). • There is an obstacle in the path of the remote control and the unit. Remove the obstacle. • The battery in the remote control is exhausted. Replace the battery with new one.


Specifications

General	
Power supply	Refer to the main label.
Power consumption	Refer to the main label.
Net Weight	2.7 kg
External dimensions (W x H x D)	540 x 143 x 240 mm
Operating conditions Temperature	5 °C to 35 °C (41 °F to 95 °F)
Operating humidity	5 % to 85 %

Tuner	
FM Tuning Range	87.5 to 108.0 MHz or 87.50 to 108.00 MHz

Amplifier	
Output Power	7.5W/7.5W

CD	
Frequency Response	100 Hz to 18 kHz
Signal-to-noise ratio	Minimum 55 dB
Dynamic range	Minimum 50 dB

USB	
USB Version	USB 2.0 or USB 1.1
Bus Power Supply	DC 5 V  500 mA

- Design and specifications are subject to change without notice.

Maintenance

Handling the Unit

When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

Keeping the exterior surfaces clean

Do not use volatile liquids such as insecticide spray near the unit.

Wiping with strong pressure may damage the surface.

Do not leave rubber or plastic products in contact with the unit for a long period of time.

Cleaning the unit

To clean the player, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzene, or thinner, as these might damage the surface of the unit.

Maintaining the Unit

The unit is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality could be diminished. For details, please contact your nearest authorized service center.

Notes on Discs

Handling Discs

Never stick paper or tape on the disc.

Storing Discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

Cleaning Discs

Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.

Trademarks and Licenses



