



LG

Life's Good

ENGLISH

FRENCH

ARABIC

Owner's Manual

REFRIGERATOR FREEZER

Please read this manual carefully before operating your set and retain it for future reference

MANUEL D'UTILISATION

REFRIGERATEUR CONGÉLATEUR

Merci de lire ce manuel attentivement avant de faire fonctionner votre appareil et conservez-le pour votre référence.



MFL67709203

 
P/NO : MFL67709203

www.lg.com



CONTENTS

IMPORTANT SAFETY INFORMATION	3
INSTALLATION	10
INNER PARTS	11
OPERATIONS	12
E1 / E2	
Starting	
Before Setting The Temperature	
Door Alarm	
Self Test	
Controls For Freezer Compartment	
Controls For Refrigerator Compartment	
Super Chill	
Child Lock (Optional)	
Green Ion Door Cooling (Optional)	
Convertible Corner/Fresh Zone	
Vegetable Drawer	
Defrosting	
Deodorizer(Optional)	
Power Cut Ever Cool (Optional)	
Hygiene Fresh (Optional)	
SUGGESTIONS ON FOOD STORAGE.....	18
CLEANING	19
GENERAL INFORMATION	20
IMPORTANT WARNINGS	21
BEFORE CALLING FOR SERVICE.....	22

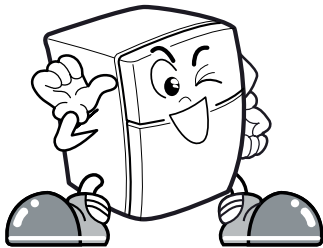


IMPORTANT SAFETY INFORMATION




⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.

BASIC SAFETY PRECAUTIONS






This guide contains many important safety messages. Always read and obey all safety messages.

 This is a safety alert symbol. It alerts you to safety messages that inform you of hazards that can hurt or seriously injured or cause damage to the product. All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, or CAUTION. These words mean:

	DANGER	You will be hurt or seriously injured if you don't follow instructions.
	WARNING	To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.
	CAUTION	Indicates an imminently hazardous situation which, if not avoided, may result in minor or moderate injury, or product damage only.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

WARNING

-  Keep the air vents clear of obstruction.
-  Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
-  Do not damage the refrigerant circuit.
-  Do not use electrical appliances inside the food storage compartment, unless they are recommended by the manufacturer.
-  The refrigerant and insulation blowing gas used in the appliance requires special disposal procedures. When disposal, please consult with services agent or a similarly qualified person.

If gas used is R600a

This appliance contains a small amount of isobutane refrigerant (R600a), natural gas with high environmental compatibility, but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged. Refrigerant squirting out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.

In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used. The room must be 1m² in size for every 9g of R600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance. Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.

DISPOSAL OF YOUR OLD APPLIANCE

Disposal of your old appliance (as per e-waste Rules)



 
1. When this crossed out wheeled bin symbol is depicted on the product and its operator's manual, it means the product is covered by the e-waste Management and Handling Rules, 2011 and are meant to be recycled, dismantled, refurbished or disposed off.
2. Dos
 - a. The product is required be handed over only to the authorized recycler for disposal.
 - b. Keep the product in isolated area, after it becomes non-functional/un-repairable so as to prevent its accidental breakage.
- Don't
 - a. The product should not be opened by the user himself/herself, but only by authorized service personnel.
 - b. The product is not meant for re-sale to any unauthorized agencies/scrap dealer/kabariwalah.
 - c. The product is not meant for mixing into household waste stream.
 - d. Do not keep any replaced spare part(s) from the product in exposed area.
3. Any disposal through unauthorized agencies/person will attract action under Environment (Protection) Act 1986.
4. Hazards of improper handling or accidental breakage :
 - a. The refrigerant (R134a) used, if overexposed, might cause dizziness and loss of concentration. Liquid contact can cause irritation and frostbite. The refrigerant (R600a), squirting out of the pipes could ignite or cause eye injury.
 - b. The blowing agent cyclopentane is highly flammable liquid and vapor, harmful to aquatic life. Contact with liquid may cause cold burns/frost bites. Repeated exposure cause skin dryness.

IMPORTANT SAFETY INFORMATION

1. When connecting the power


Dedicated outlet should be used.

- Using several devices at one outlet may cause fire.

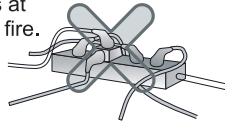

Do not allow the power plug to face upward or to be squeezed at the back of the refrigerator.

 Plug may get damaged, which causes fire or electric shock.

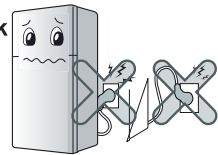


Do not allow the power cord to bend or pressed by heavy object.

It may damage the power cord and cause fire or electric shock.




Do not extend or modify the length of the power plug.

 It damages the power cord and cause electric shock or fire.

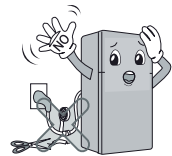


Unplug the power plug while cleaning, handling or replacing the interior LED lamp of the refrigerator.

 - It may cause electric shock or injury.

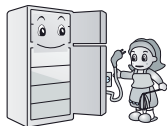

Do not pull out the cord or touch the power plug with wet hands.

 - It may cause electric shock or injury.

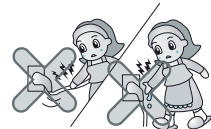


IMPORTANT SAFETY INFORMATION

1. When connecting the power


Remove water or dust from the power plug and insert it with the ends of the pins securely connected.

 Dust, water or unstable connection may cause fire or electric shock.




Make sure of grounding.

 Incorrect grounding may cause breakdown and electric shock.

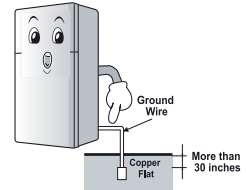

When the power cord or the power plug is damaged or the holes of the outlet are loosed, do not use them.

 It may cause electric shock or short circuit.

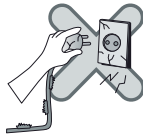

2. When using the refrigerator

Do not place heavy object or the dangerous object (container with liquid) on the refrigerator.

It may fall and cause injury, fire or electric shock when opening or closing the door.



Do not cling to the door or the shelves of the door or home bar of the freezer or the cool chamber.

It may make the refrigerator fall over or damage the hands. Especially, do not allow the children to do the above.



 
Do not install the refrigerator in wet place or place where water or rain splashes.

Deterioration of insulation of electric parts may cause electric leakage.




Do not use or store inflammable materials like ether, benzene, alcohol, medicine, LP gas, spray or cosmetics near or in the refrigerator.

It may cause explosion or fire.

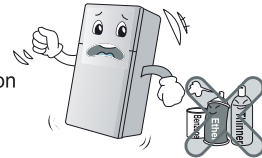


Do not use drier to dry the inside, nor light a candle to remove odor

 It may cause explosion or fire.

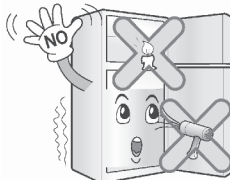

Do not store medicine or academic materials in the refrigerator.

 When the material with strict temperature control is stored, it may be deteriorated or it may make an unexpected reaction to cause any risk.

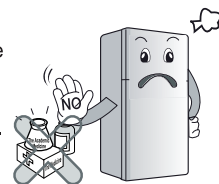


IMPORTANT SAFETY INFORMATION

2. When using the refrigerator


Do not use the combustible spray near the refrigerator.

 It may cause fire.

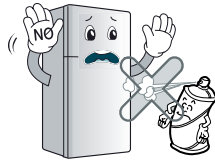

Avoid heating devices.

 It may cause fire.

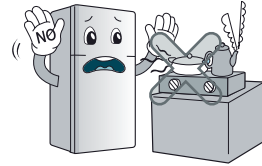


Do not place flower vase, cup, cosmetics, medicine or any container with water on the refrigerator.

It may cause fire, electric shock or injury by dropping down.



Use the submerged refrigerator only after checking it.

 It may cause electric shock or fire.

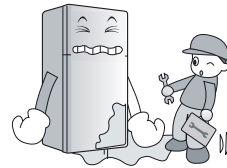


When gas is leaked, do not touch the refrigerator or the outlet and ventilate the room immediately.

During the handling / delivering, installation if used gas is (1) Tetrafluoroethane (R134a) - in spite of being Environment friendly & Non flammable, it may cause irritation to skin, eyes with small amount of vapor, hence proper ventilation across the Refrigerator area is must.


(2) Natural Gas (isobutene, R600a) - is an environment-friendly refrigerant, even a small amount (80~90g) is combustible. When the gas is leaked

 due to severe damage during delivering, installing or using the refrigerator, any spark may cause fire or burn.

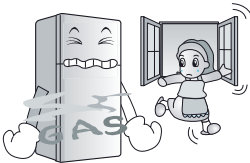


Do not spray water at the outside or the inside of the refrigerator or do not clean it with benzene or thinner.

 Deterioration of insulation of electric parts may cause electric shock or fire.

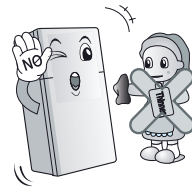

When any strange smell or smoke is detected from the refrigerator, disconnect the power plug immediately and contact to the service center.

 It may cause fire.

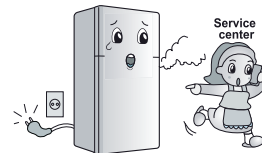


IMPORTANT SAFETY INFORMATION

2. When using the refrigerator


Do not allow any person except the qualified engineer to disassemble, repair or alter the refrigerator.

 It may cause injury, electric shock or fire.

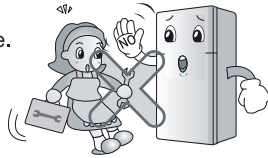

Do not use the refrigerator for non-domestic purpose (storing medicine or testing material, using at the ship, etc.).

 It may cause an unexpected risk such as fire, electric shock, deterioration of stored material or chemical reaction.

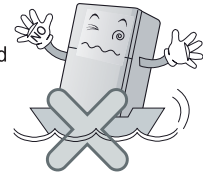


When disposing the refrigerator, remove the packing materials from the door.

It may cause to lock out the child.




Install the refrigerator on a solid and level floor.

 Installing it on an unstable place may cause injury by falling down the refrigerator when opening or closing the door.

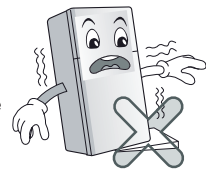


Do not insert hand or metal stick into the exit of cool air, cover, bottom of the refrigerator, heat proof grill (exhaust hole) at backside.

 It may cause electric shock or injury.

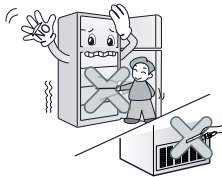


What to do with your old refrigerator,

 Your refrigerator contains liquid (refrigerant, lubricant) made of recyclable materials. All these materials must be sent to a recycling waste disposal site as they can be reused after a specific recycling process.




In case of thunder and lightning, or if not in use for a long period of time, detach the power plug.

 
There is a danger of electric shock or fire.

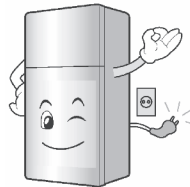

 
Place all the components in the right places before connecting the power.

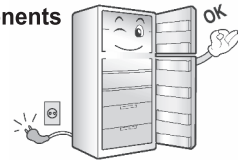

Do not remove the back cover.

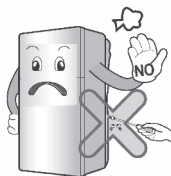 

 Never leave lit candles on the fridge, high risk of causing fire or product damage.

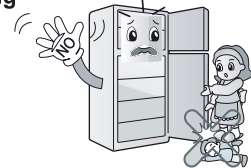


IMPORTANT SAFETY INFORMATION

⚠ CAUTION

Violating these directions may cause injury or damage to health, house or furniture. Always be careful, please.


Do not touch food or containers at the freezer with wet hands.

 It may cause frostbite.

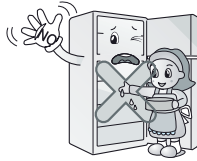

Wait for 5 minutes or longer when reconnecting the plug.

 It may cause the operation of the freezer to fail.

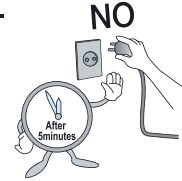

Do not put bottle in the freezer.

It may freeze the contents to break the bottle to cause injury.



 
Pull out the power plug not by grasping the cord. But by the plug of its end.

It may cause electric shock or short circuit to fire.



Carry the refrigerator with the handle bar provided at the bottom-front and top-rear of the refrigerator.

Otherwise, your hands may be slipped to cause injury.

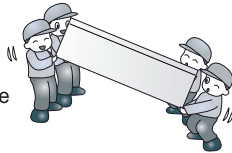


Do not insert hand into the bottom of the refrigerator.

The iron plate of the bottom may cause injury.



Opening or closing the door of the refrigerator may cause injury to the person around it, please be careful.

 Opening or closing the door may cause feet or hands to be caught in the chink in door or child hand get hurt by the corner.

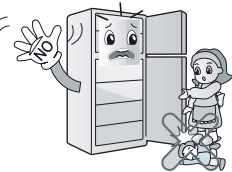


IMPORTANT SAFETY INFORMATION

Do not put any living animal in the refrigerator.



 Do not lean on the doors, Hinges may deregulate themselves, causing air leak and performance deterioration

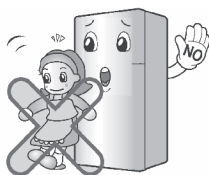

Movable parts like shelf, basket, etc should be handled with care.

May get damaged or break if dropped.

WARNING



Please do not use a dishwasher to clean the lower drawers; the high temperature may cause damage to the baskets which make them unusable.

THIS REFRIGERATOR IS MANUFACTURED WITH GREAT CARE, AND UTILIZES THE LATEST IN TECHNOLOGY.

WE ARE CONFIDENT THAT YOU WILL BE FULLY SATISFIED WITH IT'S PERFORMANCE AND RELIABILITY.

BEFORE YOU START YOUR REFRIGERATOR, PLEASE READ THIS BOOKLET CAREFULLY. IT PROVIDES EXACT INSTRUCTIONS FOR INSTALLATION, OPERATION AND MAINTENANCE, AND ALSO SUPPLIES SOME USEFUL HINTS.

INSTALLATION

 
1. Select a good location.
Place your refrigerator where it is easy to use.
2. Avoid placing the unit near heat sources, direct sunlight or moisture.
3. To ensure proper air circulation around the fridge -freezer, please maintain sufficient space on both the sides as well as top and maintain at least 2 inches (5 cm) from the rear wall.
4. To avoid vibrations, the unit must be level.
If required, adjust the leveling screws to compensate for unevenness of the floor. The front should be slightly higher than the rear for better performance and to aid in door closing.
Leveling screws can be turned easily by tipping the cabinet slightly.
Turn the leveling screws clockwise() to raise the unit, counterclockwise() to lower it.
5. Don't install this appliance below 5 °C. It may cause the debasement of the refrigerator.

NEXT

1. Clean your refrigerator thoroughly and wipe off all dust accumulated during shipping.
2. Install accessories such as ice cube box, etc., in their proper places.They are packed together to prevent possible damage during shipment.
3. Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.
4. Prior to storing food, leave your refrigerator on for 8 to 12 hours (Evercool). Check the flow of cold air in the freezer compartment to ensure proper cooling. Your refrigerator is now ready for use.

INNER PARTS

E1 / E2

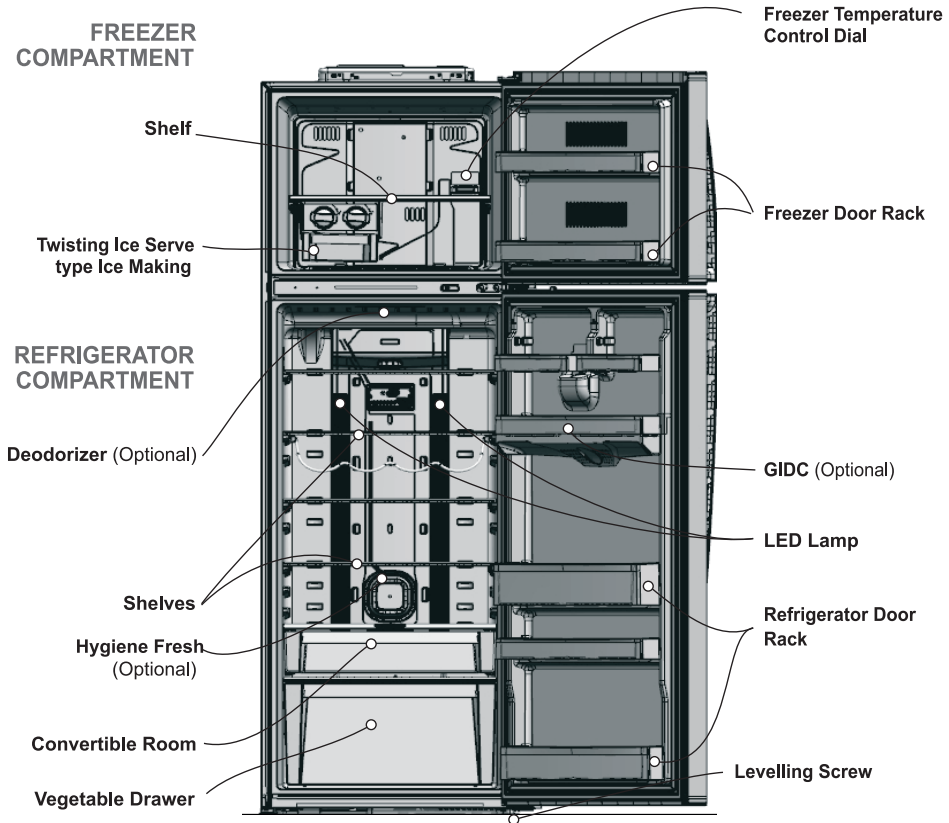

NOTE

- This guide covers several different models. The refrigerator you have purchased may have some or all of the features shown above.
- To keep a position of inner parts like as baskets, drawers and shelves supplied by manufacturer is the most efficient usage for energy saving.

SUGGESTION FOR ENERGY SAVING

- Please do not keep the door open for a long time, close door in the shortest time.
- Too much food are not advised to be put in enough space should be kept for cool air circulating freely.
- Do not set the temperature of refrigerator lower than needed. Do not put the food near the temperature sensor.
- Allow hot food to cool prior to storing. Placing hot food in the fridge-freezer could spoil other food, and lead to higher electric bills.
- Do not block air vents with food. Smooth circulation of cold air keeps fridge-freezer temperature even.
- Do not open the door frequently. Opening the door lets warm air enter the fridge-freezer, and cause temperature to rise.

* Please store this manual in a place where it can be easily accessed whenever required.

OPERATIONS

STARTING

When your refrigerator is first installed, allow it 8 or 12'Hrs (Evercool mode) to stabilize at normal operating temperatures prior to filling it with fresh or frozen foods. If operation is interrupted, wait 5 minutes before restarting.

BEFORE SETTING THE TEMPERATURE

- *• The temperature of the refrigerator is kept constant regardless of changes in room temperature. It is recommended that, once set, the temperature settings (the controls for the refrigerator and freezer compartments) not be changed unless necessary.
- *• This refrigerator has one temperature control button for the refrigerator compartment and one temperature control dial for the freezer compartment.
- *• The default setting of the temperature control button for the refrigerator compartment is '3°C'.
- *• The default setting of the temperature control dial for the freezer compartment is '4'/'3' (For Power Cut EverCool model only).
- *• This refrigerator has a temperature sensor in the refrigerator compartment. It will start and stop the compressor automatically as needed.

DOOR ALARM

 
 
When the door of the refrigerator or the freezer is open for 1 minute, an alarm will sound three times. If the door remains open, the alarm will repeat every 30 seconds.

SELF TEST


- Your refrigerator contains a built in diagnostic capability. If it develops a malfunction in certain areas, it will display an error code to assist the repair technician. While an error code is displayed, other control and display functions will not operate.
- If an error code is displayed, contact a service center. Do not disconnect the power cord from the outlet.

CONTROLS FOR FREEZER COMPARTMENT

- The higher number the control setting is, the lower the temperature of the freezer compartment becomes.
- Since the temperature of the refrigerator and freezer compartments is controlled with a fixed amount of cooled air, the refrigerator compartment will be warmer if the freezer compartment becomes colder.
- When the freezer compartment is not cold enough in winter, adjust the control for the freezer to High(4~7).

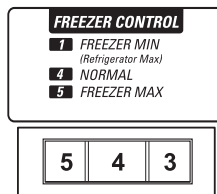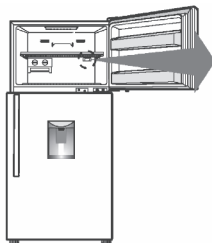

E1 / E2

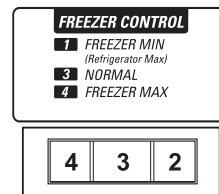 

For Power Cut EverCool models only

 
- Setting the Freezer Knob at will satisfy 4 STAR. Setting the Freezer Knob at NORMAL will have sufficient freezing effect, so it is recommended to set the Knob at NORMAL.

* Applicable as per model variant

OPERATIONS

CONTROLS FOR FREEZER COMPARTMENT

FOR INTERNAL CONTROLLER MODEL

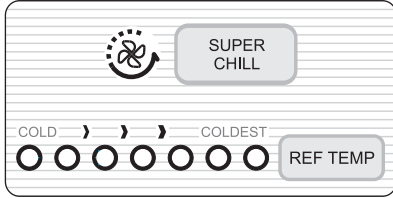

The default setting of the temperature control button for the refrigerator compartment is **NORMAL**.

To control the refrigerator temperature, press the **REF. TEMP CONTROL** button.

Whenever pressing the button, LED emitting the light. The temperature is set in 7 steps, from **MIN** to **MAX** cooling. (**MIN** = warmest, **MAX** = coldest temperature)

FOR EXTERNAL CONTROLLER MODEL

Display graphic can be different, depend on the type of your refrigerator.



- Press 'REFRIGERATOR' button to control refrigerator temperature.
- Whenever pressing the button, the LED emits light.
- Press 'HYGIENE FRESH' button to operate hygiene fresh motor (optional).
- The number showing up on the LED luminesce indicate the temperature of refrigerator compartment.
- You can select the desired setting point seven steps, from '0°C' to '6°C'.

• Display

- Press (b) button, refrigerator temperature will be down each 1°C.
- Press (a) button, 1) Hygiene fresh motor will be on. 2) power mode on. 3) off.

ENERGY SAVING MODE (OPTIONAL)

- To activate energy saver mode, press the (c) button twice till the display 'E'
- This feature will be de-activated when the same button is pressed again or once the 'R' door opened.
- Please note you cannot change temperature setting, when the refrigerator is in energy saving mode.

OPERATIONS / FEATURES

 
SUPER CHILL

- The SUPER CHILL feature operates when the refrigerator first turn on. The compressor and circulating fan operate at maximum cooling capacity to quickly lower the refrigerator temperature. It shuts off automatically.
- If warm food is placed into the refrigerator, SUPER CHILL can be started with the button on the control panel. SUPER CHILL will shut off when the temperature reaches the proper level or it can be shut off manually by pressing the SUPER CHILL button.

External Controller Model



Internal Controller Model



CHILD LOCK (OPTIONAL)

 
• CHILD LOCK

Press and hold the child lock button for 3 seconds to lock the child lock. When it is locked, the Lock LED will be on and the other button will not operate. To unlock, press and hold the CHILD LOCK button for 3 seconds again.




GREEN ION DOOR COOLING (OPTIONAL)

- The Tourmaline Pouch in the duct cover purifies the air and helps stored foods remain fresh longer.
- If water or foreign substances enter the cool air vent while cleaning, efficiency will be lowered.

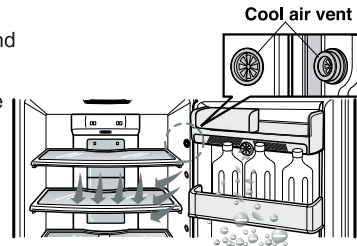

CONVERTIBLE CORNER

 - When the door is opened, the warmer air can't influence in the fresh zone. So you can store food more fresh in it.
- Inserted convertible room must be placed at its position. If door is opened, it can't fill the role of it.

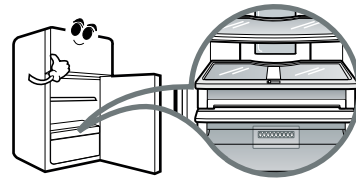

Position of the knob to be adjusted as per type of food to be stored.



Less cooling in box for Veg / Fruits . . .

 
High cooling in box for Fish / Meat / Dairy.

OPERATIONS / FEATURES

VEGETABLE DRAWER

Cell Fresh Crisper

It keeps your vegetables fresh by holding moisture & prevents them from getting rotten.

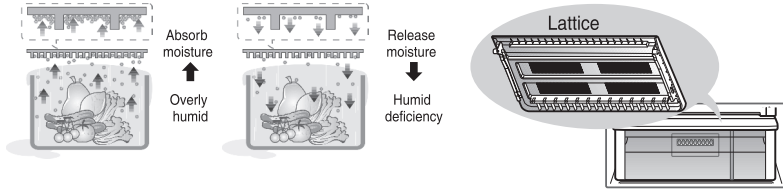


DEFROSTING

- Defrosting takes place automatically.
- The defrosted water flows down to the evaporating tray which is located in the lower back side of the refrigerator and is evaporated automatically.

DEODORIZER (OPTIONAL)

 - Unpleasant odor of food in fresh food compartment is deodorized with no harm to the user and the food.

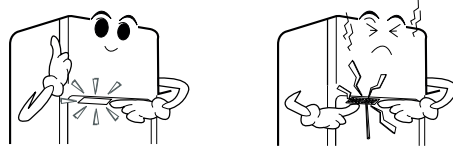


How to use

- As Deodorizer is located in cooling air inlet for circulating air in fresh food compartment, there is no need for any handling.
- Do not prick the cooling air inlet with a sharp tip because Deodorizer may get damaged.
- When storing food with strong odor, wrap it or store it in a container with a lid because odor may be passed on to other foods.

Re-Using of Deodorizer

 - Used some length and the odor is strong, Deodorizer can be revived and re-used.
- Separate Deodorizer in ceiling of refrigerator compartment, using hair drier to remove moisture or malodor and oxidize under sunlight to decomposing malodor by ultraviolet.

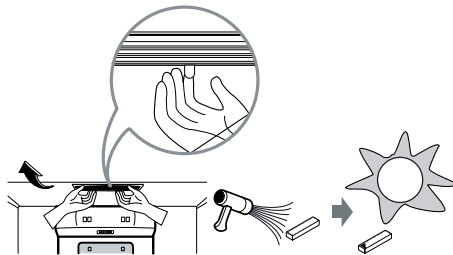

OPERATIONS

POWER CUT EVER COOL (OPTIONAL)

Power Cut Ever Cool is a unique cooling retention function by removing heat from the freezer and the refrigerator compartment during the power off condition.



This function is a patented technology of LG Electronics.



CAUTION

During "Power Cut Ever Cool" functioning, dew formation may happen on the inner walls of the refrigerator. This is a normal phenomena and will not harm the product functioning in anyway. When the Power will resume, the dew on the inner walls will be automatically removed. In case, excess dew is formed. Please remove the same with the help of a soft cloth.

During Power ON/OFF, Valve gets activated and will make a onetime sound.

- Do not open the valve cover.
- Do not disassemble the PCM tank (mounted on the top side) in freezer compartment.

Important point for Better performance of Evercool Function.

- 1) Evercool's performance may be detorated if the PCM is not freezed properly.
- 2) In order to maintain Evercool performance don't keep freezer knob at warm setting (1-2).
- 3) Do not open the door frequently during power cut off to maintain long time retention (cooling effect).

HYGIENE FRESH (OPTIONAL)



CAUTION


Before installing or using the product, make sure to read the owner's manual carefully to use the product accurately as intended. This HYGIENE FRESH filter has the antibacterial function of removing the virus or bacteria inside the refrigerator and the deodorizer function to remove the scent. The function has tested and has been certificated by authorized institutions **Intertek**.

* Life of the filter is about 1 to 2 years. (The life of the filter may vary by the environment of the consumer.)

How to remove existing filter

When the RESET lamp is turned on, replace the filter.

 
 
- When the "RESET" lamp is turned on, replace the filter to maintain the performance of the HYGIENE FRESH filter.

- To replace the filter, press the  button to switch to OFF mode.

- Hold the filter cover and rotate counterclockwise to separate the cover. Pull out the HYGIENE FRESH / filter inserted inside the filter cover.




During use notify time to RESET When switched over to OFF mode

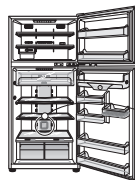

OPERATIONS

How to install the new filter

 
- Insert the new HYGIENE FRESH filter in the separated filter cover so that the hooks around the filter are visible. (If the filter is inserted in reverse direction, it will not be assembled.)
- Insert the filter cover to its original position and then turn clockwise by 30 degrees to lock the filter cover.

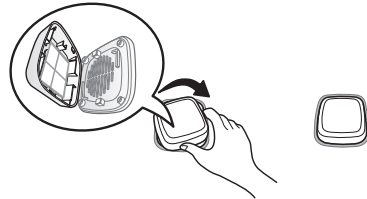

You can purchase the HYGIENE FRESH filter at the nearest distributor or the service center.

Set replacement timing (Initialization)


After the user replaces the filter, the user can set the time for the next replacement.

 
- Close the refrigerator door and press the  button on the display panel on the front side of the door for more than 5 seconds to check that the RESET lamp on the display panel is turned off.



Switch over to use mode

Switch over to use mode.

- To use the HYGIENE FRESH filter, press the  button on the display panel on the front side of the door and switch over to the AUTO or POWER mode. (Whenever you press the button, the HYGIENE FRESH filter will be switched to OFF → AUTO → POWER → OFF.)

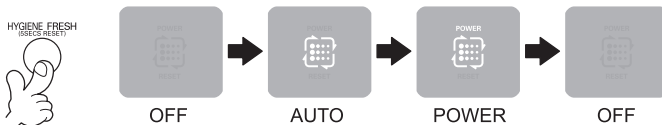

CAUTION

When the user switches to AUTO or POWER mode, the LED around the filter is also turned on. Open the door to check whether the LED around the filter is also turned on. Do not put in your finger or alien particles inside the fan. It can be caused of an injury or malfunction.

CAUTION

- Do not wash the HYGIENE FRESH filter by using water because It can be caused of malfunction.
- If the user continuously use the filter after the time to RESET, It can be caused of malfunction.
- This filter may not be effective for all types of bacteria and virus.
- This is effective to remove the bacteria which is not on the food in the refrigerator.

You can purchase the HYGIENE FRESH filter at the nearest distributor or the service center.

 
SUGGESTIONS ON FOOD STORAGE

STORING FOOD

- Store fresh food in the refrigerator compartment. How food is frozen and thawed is an important factor in maintaining its freshness and flavor.
- Do not store food which goes bad easily at low temperatures, such as bananas, pineapples, and melons.
- Allow hot food to cool prior to storing. Placing hot food in the refrigerator could spoil other food, and lead to higher electric bills!
- When storing the food, cover it with vinyl wrap or store in a container with a lid. This prevents moisture from evaporating, and helps food to keep its taste and nutrients.
- Do not block air vents with food. Smooth circulation of chilled air keeps refrigerator temperatures even.
- Do not open the door frequently. Opening the door lets warm air enter the refrigerator, and cause temperatures to rise.

FREEZER COMPARTMENT

- Do not store bottles in the freezer compartment - they may break when frozen.
- Do not refreeze food that has been thawed. This causes loss of taste and nutrition.
- When storing frozen food like ice cream for a long period, place it on the freezer shelf, not in the door rack.
- Loading for Freezing - It is recommended to load newly introduced foods on the following position for freezing:

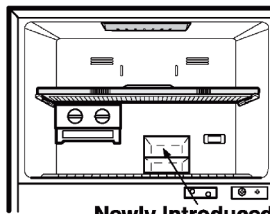


Newly Introduced Food

- Freezer Door Basket, marked (X X) is -12°C compartment, that is suitable for short term storage of frozen food (optional).

REFRIGERATOR COMPARTMENT

 - Avoid placing moist food on deep interior refrigerator shelves, it could freeze by direct contact with chilled air. To avoid this it is better to store food in the covered container.
- It is desirable to store moist food (especially vegetable and fruit) in the vegetable storage compartment. If it is necessary to store on a shelf of the refrigerator, put it close to the door away from the back wall of the refrigerator to avoid being frozen by direct contact with chilled air.
- Always clean food prior to refrigeration. Vegetables and fruits should be washed and wiped, and packed food should be wiped clean, to prevent adjacent food from spoiling.
- When storing eggs in their storage rack, ensure that they are fresh, and always store them in a upright position, which keeps them fresh for longer time.

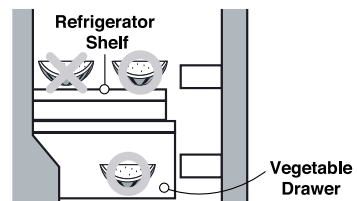

CLEANING

It is important that your refrigerator is kept clean to prevent undesirable odors. Spilled food should be wiped immediately, since it may acidify and stain plastic surfaces if allowed to settle.

Never use metallic scouring pads, brushes, coarse abrasive cleaners or strong alkaline solutions on any surface.

Before you clean, remember that damp objects will stick or adhere to extremely cold surfaces. Do not touch frozen surfaces with wet or damp hands.

EXTERIOR - Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

INTERIOR -Regular cleaning of the interior and interior parts is recommended. Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

INTERIOR PARTS - Wash compartment shelves, door racks, storage trays and magnetic door seals etc. Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

WARNING

Always remove power cord from the wall outlet prior to cleaning. Wipe excess moisture with a sponge or cloth to prevent water or liquid from getting into any electrical part and causing electric shock. Do not use flammable or toxic cleaning liquids.

- Caution for Cleaning - Not to use : Surface active agent, Car wax, Anti-corrosive, All sorts of oil, Gasoline, Acids, Wax.
- Mild detergents, dish washable solutions and soapy water can be used
- Careless usage can lead to colour change.

Caution

1. Use lukewarm water when cleaning.
2. Water Tank: Do not use anything other than water. If any other liquid is used, please rinse the tank three to four times with water.

GENERAL INFORMATION

VACATION TIME

During average length vacations, you will probably find it best to leave the refrigerator in operation. Place freezable items in freezer for longer life. When you plan to be away for an extended period, remove all food, disconnect the power cord, clean the interior thoroughly, and leave each door OPEN to prevent odor formation.

POWER FAILURE

Most power failures are corrected in an hour or two and will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off. During power failures of longer duration, place a block of dry ice on top of your frozen packages.

IF YOU MOVE

Remove or securely fasten down all loose items inside the refrigerator.
To avoid damaging the leveling screw(s), turn them all the way into the base.

 
ANTI-CONDENSATION PIPE

The outside wall of the refrigerator cabinet may sometimes get warm, especially just after installation.

Don't be alarmed.

This is due to the anti-condensation pipe, which pumps hot refrigerant to prevent "sweating" on the outer cabinet wall.

Anti-Condensation Pipe

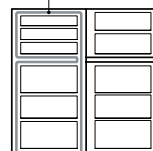

Caution

Electrical Shock Hazard

Before replacing a burned-out light bulb, either unplug the refrigerator or turn off power at the circuit breaker or fuse box.

NOTE : Moving the control to OFF position does not remove power from the light circuit.

IMPORTANT WARNINGS

DO NOT USE AN EXTENSION CORD ABOUT GROUNDING (EARTHING)

If possible, connect the refrigerator to its own individual electrical outlet to prevent it and other appliances or household lights from causing an overload that could cause a power outage.

In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current.

In order to prevent possible electric shock, this appliance must be grounded.

ACCESSIBILITY OF SUPPLY PLUG

The refrigerator-freezer should be in such a position that the supply plug is accessible for quick disconnection when accident happens.

 
Improper use of the grounding plug can result in an electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

SUPPLY CORD REPLACEMENT

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

DO NOT MODIFY OR EXTEND THE POWER CORD LENGTH.

It will cause electric shock or fire.

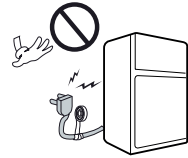

VERY DANGEROUS ATTRACTION

An empty refrigerator can be a dangerous attraction to children. Remove either gaskets, latches, lids or the entire door from your unused appliance, or take some other action to make it harmless.

**This appliance must be grounded (earthed).
DON'T WAIT! DO IT NOW!**

**Do not store inflammable materials, explosives
or chemicals in the refrigerator.**

Disposal of the old appliance

This appliance contains fluid (refrigerant, lubricant) and is made of parts and materials which are reusable and/or recyclable.

All the important materials should be sent to the collection center of waste material and can be reused after rework (recycling). For take back, please contact with the local agency.

"This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance."

BEFORE CALLING FOR SERVICE

SERVICE CALLS CAN OFTEN BE AVOIDED!

IF YOU FEEL YOUR REFRIGERATOR IS NOT OPERATING PROPERLY, CHECK THESE POSSIBLE CAUSES FIRST :

PROBLEM	POSSIBLE CAUSES
REFRIGERATOR DOES NOT OPERATE	<ul style="list-style-type: none">• Has a house fuse blown or circuit breaker tripped?• Has the power cord plug been removed or loosened from the electrical wall outlet?
REFRIGERATOR OR FREEZER COMPARTMENT TEMPERATURE TOO WARM	<ul style="list-style-type: none">• Temperature control not set on proper position.• Appliance is placed close to wall or heat source.• Warm weather-frequent door openings.• Door left open for a long time.• Large amount of foods are kept in the refrigerator.
ABNORMAL NOISE(S)	<ul style="list-style-type: none">• Refrigerator is installed in a weak or uneven place, or leveling screw needs adjusting.• Unnecessary objects placed in the back side of the refrigerator.
REFRIGERATOR HAS ODOR	<ul style="list-style-type: none">• Foods with strong odors should be tightly covered or wrapped.• Interior needs cleaning.
DEW FORMS ON THE CABINET SURFACE	<ul style="list-style-type: none">• Not unusual during periods of high humidity.• Door may have been left ajar.