



USER GUIDE

# LG 236C

MFL67883001 (1.0)



[www.lg.com](http://www.lg.com)

*Copyright ©2013 LG Electronics, Inc. All rights reserved.  
LG and the LG logo are registered trademarks of LG Group and  
its related entities. All other trademarks are the property of their  
respective owners.*

## LG 236C User Guide - English

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



# Table of Contents

---

## Phone Overview 6

---

## Menus Overview 8

Menu Access ..... 8

---

## Getting Started with Your Phone 12

The Battery ..... 12

Charging the Battery ..... 13

Battery Charge Level ..... 13

Turning the Phone On and Off ..... 13

Signal Strength ..... 14

Screen Icons ..... 14

Making Calls ..... 14

Correcting Dialing ..... 14

Redialing Calls ..... 14

Receiving Calls ..... 15

Mute Function ..... 16

Quick Volume Adjustments ..... 16

Call Waiting ..... 16

Caller ID ..... 16

Speed Dialing ..... 16

Text Input ..... 18

The Basics of Storing Contacts

Entries ..... 19

Phone Numbers With Pauses ..... 19

Searching Your Phone's Memory .. 20

Making a Call From Your Phone's

Memory ..... 21

---

## Using Phone Menus 23

---

### Prepaid 23

1. Add Airtime ..... 23

2. My Phone Number ..... 23

3. Serial Number ..... 23

4. Code Entry Mode ..... 23

---

### Contacts 24

1. New Contact ..... 24

2. Contact List ..... 24

3. Groups ..... 25

4. My vCard ..... 25

5. Speed Dials ..... 25

---

### Messages 26

1. New Message ..... 26

2. New Picture Message ..... 28

# Table of Contents

3. Inbox.....	29
4. Outbox .....	30
5. Drafts .....	31
6. Voicemail.....	32
7. Templates .....	32
8. Settings.....	33
1. All Messages.....	33
2. CMAS Settings .....	33
9. Delete All .....	33

---

## Recent Calls 34

1. Missed Calls .....	34
2. Received Calls .....	34
3. Dialed Calls .....	34
4. All Calls.....	35
5. Call Timer .....	35

---

## Games 36

1. Buy Games .....	36
--------------------	----

---

## Browser 36

---

## Multimedia 38

1. Take Photo .....	38
2. Record Voice .....	39
3. Images .....	39
4. Sounds.....	39

---

## Voice Command 41

1. Start Command .....	41
1.1 Call <Name> or <Number>.....	41
1.2 Voicemail .....	41
1.3 Missed Calls .....	41
1.4 Messages .....	42
1.5 Time & Date .....	42
1.6 Help.....	42
2. Command Mode.....	42
3. Announce Alert.....	43
4. Train Word.....	43
5. Best Match .....	43

---

## My Schedule 44

1. Alarm Clock.....	44
2. Calendar .....	44
3. Notepad .....	45

# Table of Contents

---

## **Bluetooth 45**

- 1. Paired Devices .....46
- 2. Power .....46
- 3. My Visibility .....47
- 4. My Bluetooth Info.....47

---

## **Tools 47**

- 1. Calculator .....47
- 2. Ez Tip Calculator.....48
- 3. Stopwatch.....48
- 4. Unit Converter.....48

---

## **Settings 49**

- 1. Sound.....49
  - 1.1 Ringtones ..... 49
  - 1.2 Volume .....49
  - 1.3 Message Alerts.....49
  - 1.4 Alert Type .....50
  - 1.5 Service Alerts.....50
  - 1.6 Power On/Off Tone .....50
  - 1.7 Flip Tone.....51
  - 1.8 TTS (Text-to Speech) ..... 51
  - 1.9 Emergency Tone.....51

## **2. Display .....51**

- 2.1 Wallpaper..... 51
- 2.2 Backlight ..... 51
- 2.3 Menu Style..... 52
- 2.4 Languages (Idiomas)..... 52
- 2.5 Clocks & Calendar ..... 52
- 2.6 Font Settings..... 52
- 2.7 Word Prediction..... 53
- 2.8 Name Match for Dialing ..... 53

## **3. Security.....53**

- 3.1 Lock Phone..... 53
- 3.2 Camera Restriction ..... 54
- 3.3 Change Lock Code..... 54
- 3.4 Reset Default..... 54

## **4. Call Settings.....54**

- 4.1 Answer Options ..... 55
- 4.2 One-Touch Dial ..... 55
- 4.3 Senior Mode..... 55
- 4.4 Airplane Mode ..... 55
- 4.5 TTY Mode..... 55

## **5. System .....56**

- 5.1 Network..... 56
- 5.2 Location..... 56

## **6. Memory .....56**

## **7. Phone Info..... 57**

## Table of Contents

---

<b>Accessories</b>	<b>58</b>
--------------------	-----------

---

<b>Index</b>	<b>59</b>
--------------	-----------

---

# Phone Overview



 
1. **Earpiece** Lets you hear the caller.

2. **LCD Screen** Displays messages and status icons. When the phone is turned on, Power Save mode automatically dims the screen and then darkens it if no keys are pressed.
3. **Left Soft Key** Use to access the Main menu from the Home screen or the function immediately above it.
4. **Camera Key** Lets you activate the camera and take pictures.
5. **Alarm Clock Key** Use to access the Alarm Clock menu.
6. **Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
7. **Shift/Vibrate Key** Use to set the vibration mode from standby mode. To set it, press and hold for about 2 seconds. When entering text, you can switch between upper case and lower case letters.
8. **Directional Key** Use to navigate through menus and options. When on the Home screen, use for quick access to Messages, Contact List, Games and Sound.
9. **Right Soft Key** Use to access the Browser menu from the Home screen or the function immediately above it.
10. **OK Key** Use to access the Prepaid menu from the Home screen or to select items when navigating menus.
11. **Speakerphone Key** Use to turn the Speaker on and off.



# Phone Overview

12. **Voice Command Key** Use to start the Voice Command feature when in standby mode.
13. **Text to Speech Key** Lets you turn the Text to Speech mode on and off.
14. **Space/Lock Key** Use to lock the phone from standby mode. To lock the phone, press and hold for about 2 seconds. When entering text, this enters a space.

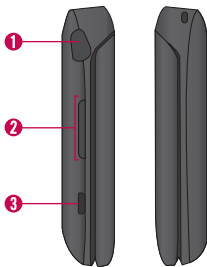

1. **Headset Jack** Allows the use of a headset to hear caller's voice.
2. **Volume Keys** Use to adjust the ringer volume in standby mode and the earpiece volume during a call.
3. **Charger/Accessory Port** Connects the phone to the battery charger or other available accessories.

## Charging with the PC USB Port


You can use your computer to charge your phone. Connect one end of a USB cable to the Charger/Accessory Port on your phone and the other end to a high-power USB port on your PC (commonly located on the front panel of the computer).





4. **Camera Lens** Lets you take pictures.

# Menus Overview

## Menu Access

While in standby mode, press the Left Soft Key  **Menu** to access your phone's menus. There are two methods of accessing menus and submenus:

- Use the Directional Keys  to highlight a menu/option and press  to select it.
- Press the number key on the keypad to activate the corresponding menu/option.

---

### Prepaid

---

1. Add Airtime
2. My Phone Number
3. Serial Number
4. Code Entry Mode

---

### Contacts

---

1. New Contact
2. Contact List
3. Groups
4. My vCard
5. Speed Dials

---

### Messages

---

1. New Message
2. New Picture Message
3. Inbox
4. Outbox
5. Drafts
6. Voicemail
7. Templates
8. Settings
  1. All Messages
    1. Entry Mode
    2. Signature

---

### 2. CMAS Settings

---

1. Presidential Alert
  2. Extreme Alert
  3. Severe Alert
  4. AMBER(Child Abduction Emergency)
  5. Alert Vibrate
  6. Alert Sound
  7. Alert Reminder
- 
- ### 9. Delete All
- 
1. Delete Inbox
  2. Delete Outbox
  3. Delete Drafts
-

## Menus Overview

4. Delete All Messages

### Recent Calls

1. Missed Calls
2. Received Calls
3. Dialed Calls
4. All Calls
5. Call Timer
6. Data Counter

### Games

1. Buy Games
  - Block Breaker3 Unlimited
  - Texas Hold'Em Poker 2

### Browser

### Multimedia

1. Take Photo
2. Record Voice
3. Images

1. My Images
2. Default
3. Buy Graphics

4. Sounds
  - 1. My Sounds
  - 2. Default
  - 3. Buy Ringtones

### Voice Command

1. Start Command
  - 1. Call <Name> or <Number>
  - 2. Voicemail
  - 3. Missed Calls
  - 4. Messages
  - 5. Time & Date
  - 6. Help
2. Command Mode
  - 1. Normal

2. Speed

3. Announce Alert

1. Disable

2. Announce

3. Announce + Ring

4. Train Word

1. Voice Command

2. Answer

3. Digit Dial

5. Best Match

1. 1Match

2. 4 Matches

### My Schedule

1. Alarm Clock
2. Calendar
3. Notepad

### Bluetooth

1. Paired Devices
2. Power

# Menus Overview

## 3. My Visibility

---

## 4. My Bluetooth Info

---

## Tools

---

### 1. Calculator

---

### 2. Ez Tip Calculator

---

### 3. Stopwatch

---

### 4. Unit Converter

---

#### 1. Area

---

#### 2. Length

---

#### 3. Mass

---

#### 4. Temperature

---

#### 5. Volume

---

#### 6. Velocity

---

## Settings

---

### 1. Sound

---

#### 1. Ringtones

---

##### 1. All Calls

---

##### 2. Caller ID

---

##### 3. No Caller ID

---

## 4. Buy Ringtones

---

### 2. Volume

---

#### 1. Master Volume

---

#### 2. Keypad

---

#### 3. Earpiece

---

#### 4. Speaker

---

### 3. Message Alerts

---

#### 1. Message

---

#### 2. Picture Message

---

#### 3. Voicemail

---

#### 4. Message Reminder

---

### 4. Alert Type

---

### 5. Service Alerts

---

#### 1. Call Connect

---

#### 2. Back to Top

---

#### 3. Low Battery

---

#### 4. Roam Alert

---

### 6. Power On/Off Tone

---

### 7. Flip Tone

---

### 8. TTS

---

## 9. Emergency Tone

---

### 2. Display

---

#### 1. Wallpaper

---

##### 1. My Images

---

##### 2. Default

---

##### 3. Buy Graphics

---

### 2. Backlight

---

#### 1. Display

---

#### 2. Keypad

---

#### 3. Brightness

---

### 3. Menu Style

---

#### 4. Languages (Idioms )

---

### 5. Clocks & Calendar

---

#### 1. Main Screen

---

#### 2. Front Screen

---

### 6. Font Settings

---

#### 1. Font Type

---

#### 2. Dial Font Style

---

#### 3. Dial Font Size

---

### 7. Word Prediction

---

### 8. Name Match for

---

---

Dialing

---

3. Security

---

1. Lock Phone

---

2. Camera Restriction

---

3. Change Lock Code

---

4. Reset Default

---

4. Call Settings

---

1. Answer Options

---

2. One Touch Dial

---

3. Senior Mode

---

4. Airplane Mode

---

5. TTY Mode

---

5. System

---

1. Network

---

1. System Select

---

2. Serving System

---

2. Location

---

6. Memory

---

1. Reserved Memory

---

2. Multimedia

---

7. Phone Info

---

1. My Number

---

---

2. ESN/MEID

---

3. Icon Glossary

---

4. Version

---

# Getting Started with Your Phone

## The Battery

 
### Note

It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. The battery charge level is shown at the top right corner of the LCD screen.

## Installing the Battery

1. Insert your fingertip in the fingertip cutout at the bottom of the phone and gently lift off the back cover to remove it.



2. Align the battery contacts with the terminals in the battery compartment and push the battery down until it clicks into place.




3. Place the back cover over the battery compartment, then press downward until it clicks into place.



## Removing the Battery

 1. Turn the phone off and insert your fingertip in the fingertip cutout at the bottom of the phone and gently lift off the back cover to remove it.



2. Use the fingertip cutout at the bottom of the battery

# Getting Started with Your Phone

compartment to lift the battery out.



## Charging the Battery

**Warning!** Use only the charger provided with the phone. Using any charger other than the one included with the phone may damage your phone or battery.



### Notice

Please make sure that the 'B' side faces up before inserting a charger or USB cable into the Charger/Accessory Port of your phone.


Plug one end of the charger into the phone's Charger/Accessory Port and the other end into an electrical outlet. The charge time varies depending upon the battery level.

## Battery Charge Level

The battery charge level is shown at the top right corner of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in up to three ways: sounding an audible tone, blinking the battery icon, and displaying a warning message. If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.

## Turning the Phone On and Off

### Turning the Phone On


1. Install a charged battery or connect the phone to an external power source if the battery level is low.
2. Press  for about 3 seconds until the LCD screen turns on.

# Getting Started with Your Phone

## Turning the Phone Off

Press and hold  until the screen turns off.




 
## Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon ; the more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.



### Note

The call quality may also be affected by your location and weather/ambient conditions.



## Screen Icons

To see the icon glossary, press the Left Soft Key  **Menu** from the standby mode, then press  **Settings** >  **Phone info** >  **Icon Glossary**.


## Making Calls

1. Enter the phone number (include the area code if needed).
2. Press  to dial the number.
3. Press  to end the call.

## Correcting Dialing

If you make a mistake while dialing a number, press  once to erase the last digit entered, or hold down  for at least 2 seconds to erase all the digits entered.

## Redialing Calls

Press  twice to redial the last number you dialed. The last 150 numbers (50 missed, 50 received and 50 dialed) are stored in the call history list and you can also select any of these to redial.



# Getting Started with Your Phone

## Tip

To select your method for answering calls, you can change your Answer Options.



 Menu >  Settings >  Call Settings >  Answer Options.

Choose from the following options:  
Flip Open/ SEND Key Only/ Any Key/ Auto with Handsfree

## Receiving Calls

1. When the phone rings and/or vibrates, press  to answer.



## Note

If you press  or  (the Volume Keys), while the phone is ringing, the ringing or vibration is muted for that call.

2. Press  to end the call.

# Quick Access to Convenient Features

## Mute Function

The Mute function is used during a phone call. To quickly activate Mute, press the Left Soft Key  **Mute**. To cancel, press the Left Soft Key  **Unmute**.

## Quick Volume Adjustments

Quickly adjust the ringer and earpiece volumes by pressing the Volume Up Key to increase the volume and the Volume Down Key to decrease it.

### Note



Keypad Volume is adjusted through the Sound Volume menu:

 Menu >  Settings >   
Sound >  Volume >  Keypad.

## Call Waiting

Your cellular service may offer call waiting. While a call is in progress one beep indicates an incoming call. When call waiting is enabled, you may put the active call on hold while you answer the

other incoming call. Check with your cellular service provider for information about this function.

1. Press  to receive a waiting call.
2. Press  again to switch between calls.

## Caller ID

Caller ID displays the phone number or name of the incoming call. If the caller's identity is stored in Contacts, the name will appear along with the phone number. Check with your service provider to ensure they offer this feature.

## Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly. A number key can be assigned to a specific phone number. By pressing and holding down a number key, your phone will recall the phone number associated from the Contact List

## Quick Access to Convenient Features

and dial that phone number for you. Speed Dial Number 1 is set to your Voicemail by default and cannot be changed.

### Dialing Single Digit Speed Dials (from 2 to 9)

Press and hold the Speed Dial number.


OR

Enter the Speed Dial number and press .

### Dialing Double Digit Speed Dials (from 10 to 99)

Press the first digit and then press and hold the key of the second digit.

OR

Enter the first and second digits and press .

# Entering and Editing Information

## Text Input

You can input and edit your Calendar, Contacts, and more.

## Key Functions



### Left Soft Key:

Press to scroll through the following text input modes:

**T9Word:** T9WORD/T9Word/  
T9word

**Abc:** ABC/Abc/abc

123

Symbols



**Shift Key:** Press to change capitalization.

**T9Word:** T9Word >  
T9WORD > T9word

**Abc:** Abc > ABC > abc



**Next:** In T9 mode, press to display other matching words.



**Space:** Press to complete a word if in T9 mode; otherwise, press to insert a

space.




**Clear:** Press to delete a single space or character. Hold to delete the whole message.



**Punctuation:** Press to insert punctuation in a word and complete a sentence.



# Contacts in Your Phone's Memory

## The Basics of Storing Contacts Entries


1. From standby mode, enter the phone number you want to save (up to 48 digits).
2. Press  **Save**.
3. Select either **Add New Contact** or **Update Existing**.

### Note

Use **Update Existing** to add another phone number to a contact already stored in your phone.

4. Use  to highlight a Label and press .


**Mobile 1/ Home 1/ Office 1/  
Mobile 2/ Home 2/ Office 2/  
Fax**

5. Enter a name for the phone number (up to 32 characters) and press  **Save**. A confirmation message is displayed briefly.

## Phone Numbers With Pauses

When you call automated systems, such as voicemail or credit billing numbers, you often have to enter a series of numbers to navigate through the system. Instead of entering these numbers by hand, you can store the numbers in your Contacts separated by special pause characters (W, P). There are two different types of pauses you can use when storing a number:

### Wait (W)

The phone stops dialing until you press the Left Soft Key  **Release** to advance to the next number.

 




### Pause (P)

The phone waits 2 seconds before sending the next string of digits.





## Storing a Number with Pauses

1. Press  **Menu**.
2. Press  **Contacts**.

## Contacts in Your Phone's Memory

3. Press **1**  **New Contact**.
4. Enter a name (up to 32 characters).
5. Enter the phone number in any of the number labels.
6. While entering the number, press the Right Soft Key  **Options**.
7. Press **DEF**  **Wait** or **4 GHI**  **Pause**.
8. Enter the additional number(s) and press **OK**  **Save**.

### Adding a Pause to an Existing Number

1. While in standby mode, press the Down Directional Key  to display your Contacts alphabetically.
2. Use  to highlight the Contact entry to edit, then press **OK**  **View**.
3. Press the Left Soft Key  **Edit**.
4. Use  to highlight the number.

5. Press the Right Soft Key  **Options**.


6. Press **DEF**  **Wait** or **4 GHI**  **Pause**.

7. Enter the additional number(s) and press **OK**  **Save**.

### Searching Your Phone's Memory

The phone is able to perform a dynamic search of the contents in your phone's memory. A dynamic search compares entered letters or numbers against the entries in your Contacts. A matching list is displayed in descending order. You can then select a number from the list to call or edit.

### Searching by Letter



1. While in standby mode, press the Down Directional Key  to display your Contacts alphabetically.
2. Press (or press repeatedly) the key on the keypad that corresponds with the letter for

# Contacts in Your Phone's Memory



the contact's name.

- The matching contacts will be automatically highlighted.

## Scrolling Through Your Contacts

- Press the Down Directional Key  to display your Contacts alphabetically.
- Use  to scroll through the list.

## Contact List Options

- While in standby mode, press the Down Directional Key  and highlight a Contact entry.
- Press the Right Soft Key  **Options**.
- Select from the following options:

- 1 DEF** **Send Message:** Send a text/picture message to the selected contact.
- 2 ABC** **Delete:** Delete the selected entry in your Contacts.

- 3 DEF** **Edit:** Edit the selected contact information.


- 4 GHI** **Delete Multiple:** Allows you to delete multiple entries at one time or all at once.

- 5 JKL** **Send via Bluetooth:** Send a contact (vCard) via Bluetooth. In case Bluetooth power is not on, a notice pops up to turn Bluetooth on.

- 6 MNO** **Set Speed Dial:** Set a speed dial.






## Making a Call From Your Phone's Memory



Once you have stored phone numbers in your Contacts, you can place calls to those numbers quickly and easily.

- By pressing  after searching for a phone number in Contacts or Recent Calls and highlighting it.
- By using Speed Dialing.







## Contacts in Your Phone's Memory

### From Contacts

1. While in standby mode, press the Down Directional Key  to display your Contacts.
2. Use  to highlight the Contact entry, then press  **View**.
3. Use  to highlight the phone number.
4. Press  to place the call.

then press . For a double-digit Speed Dial, press the first digit and hold the second digit or press the first and second digits, then press .

### From Recent Calls

1. Press  **Menu**.
2. Press  **Recent Calls**.
3. Use  to highlight the type of recent call, then press .  
**Missed Calls/ Received Calls/  
Dialed Calls/ All Calls**
4. Use  to highlight the phone number.
5. Press  to place the call.

### Speed Dialing

For a single-digit Speed Dial, press and hold the digit or press the digit,



# Using Phone Menus

## Prepaid

For prepaid services, this menu provides shortcut access to the following items among others:

### 1. Add Airtime

Allows you to add airtime.

1. Press Menu, , .
2. Enter airtime PIN and press .
3. Read the displayed message, then select **Yes** or **No**.

### 2. My Phone Number

My Phone Number displays the device's phone number.

1. Press Menu, , .

### 3. Serial Number

Serial Number simply displays the information of your phone's MEID.

1. Press Menu, , .

## 4. Code Entry Mode

Code Entry Mode will allow the phone to accept TracFone-related codes in order to add units, modify specific data and troubleshoot the phone. In using the Code Entry Mode, you can't receive incoming calls or use events alert.

1. Press Menu, , .

# Contacts

## Contacts

The Contacts menu allows you to store names, phone numbers and other information in your phone's memory.

### Note

When you access your Contacts, the number in parentheses represents the number of entries you have stored (up to 1000).

### 1. New Contact

Allows you to add a new contact to your Contact List.

1. Press **Menu**, **2 ABC**, **1 Down Arrow**.
2. Enter the name, then press to highlight the field in which you wish to store the contact information.
3. Enter the phone number or e-mail address.
4. Continue adding the desired contact information to the entry.
5. When you are finished entering

the desired contact information, press **Save** to save the entry into your Contact List.

### 2. Contact List

Allows you to view your Contact List.

1. Press **Menu**, **2 ABC**, **2 ABC**.
2. Choose from the following options:
  - Press to scroll through your Contacts alphabetically.
  - Press the Right Soft Key **Options** to select one of the following:
    - Send Message/ Delete/ Edit/ Delete Multiple/ Send via Bluetooth/ Set Speed Dial**
    - Press **View** to view the contact's information.
    - Press the Left Soft Key **New** to create a new contact.

### 3. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a whole group.

1. Press **Menu**, **2 ABC**, **3 DEF**.
2. Choose from the following options:
  - Use to highlight a group, then press **View** to view the contacts in the selected group.
  - Press the Left Soft Key **New** to add a new group.
  - Use to highlight a group, then press the Right Soft Key **Options** to choose from the following options:  
**Delete/ Send Message/  
Rename Group/ Group  
Ringtone/ Delete All**

### 4. My vCard

Allows you to edit and view your personal Contact information, including your name and phone numbers.

1. Press **Menu**, **2 ABC**, **4 GHI**.
2. Use to highlight the feature you wish to edit and press the Left Soft Key **Edit**.
3. Edit the information as desired and press **Save**.

### 5. Speed Dials

Allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.

1. Press **Menu**, **2 ABC**, **5 JKL**.
2. Use to highlight the desired Speed Dial location (or enter the Speed Dial digit using the keypad), and press **Assign**.

## Contacts/ Messages

3. Use  to highlight the Contact and press .

A confirmation message is displayed.

## Messages



The phone can store a total of up to 735 (400 text messages, 100 CMAS messages, 100 multimedia messages, and 100 multimedia message notifications in the Inbox; 15 text messages and 20 multimedia messages in the Drafts folder) messages and drafts. The information stored in the messages is determined by phone mode and service capability. Other limits, such as available characters per message, may exist. Please check with your service provider for system features and capabilities.

### 1. New Message

Allows you to send text messages and e-mail. Each message will be formatted and sent according to the destination address.







### The Basics of Sending a Text Message

1. Press  Menu, , .

2. Enter the recipient's address.
3. Press  to access the text field.
4. Type your message.
5. Press  **Send**.

A confirmation message is displayed.

## Select Recipient(s) Using Options

1. Press  **Menu**, , .
2. Press the Right Soft Key  **Options** while in the **To** field.
3. Use  to highlight an option and press .

**Contacts** To select a recipient from your Contact List.

**Call History** To select a recipient from your Recent Calls.

**Recent Messages** Choose **Inbox** or **Outbox** to select a recipient from your Recent Messages.






**Groups** Select a recipient from your Groups.

**Cancel** Cancels your message.

4. Complete your message and send it.

## Customize Your Text Message Using Options

You have various options to customize the text while you are composing a message.

1. Press  **Menu**, , .
2. Enter the recipient's address.
3. Press  to access the text field.
4. Press the Right Soft Key  **Options**.
5. Select from the following options:

**Insert Templates/ Signature/ Name & Number**

**Save as Drafts/ Templates**

**Priority Level** High/ Normal





**Cancel** Cancels your message.

# Messages






6. Complete your message and send it.

## Message Icon Reference



### Inbox

	Picture Message
	New/Unread Text Message
	Opened/Read Text Message
	High Priority Message

### Sent















	Picture Message
	Failed Text Message
	Multiple Failed Text Message
	Sent Text Message
	Multiple Sent Text Messages





### Drafts

	Draft Text Message
	Draft Picture Message

## 2. New Picture Message



Allows you send messages with text, images, and audio.

1. Press  **Menu**, , .
2. Enter the recipient's address or press the Right Soft Key  **Options** to search recent contacts.
3. Use  to highlight the **Subject** field and enter your subject.
4. Use  to highlight the **Text** field.
5. Type your message, then use  to highlight other fields.
6. With the **Image** field highlighted, press the Left Soft Key  **Add** and press  to select:  
**Image / Take Photo**
7. If you choose **Image**, use  to highlight a picture then press the Left Soft Key  **Set**. If you choose **Take Photo**, take the picture by pressing  **Capture** and then  **Set**.
8. With the **Audio** field highlighted, press the Left Soft Key  **Add**.

9. Use  to highlight a sound, then press the Right Soft Key  **Set**.
10. When editing a field, the following options are available by pressing the Right Soft Key  **Options**:
  - \* Editing the To: field  
**Contacts/ Call History/ Recent Messages/ Groups/ Cancel**
  - \* Editing the Subject/Text fields  
**Preview/ Add/ Go to/ Save As/ Priority Level/ Delivery Notice/ Remove/ Cancel**
  - \* Editing the Image/Audio fields  
**Preview/ Add Slide/ Go to/ Save As Draft/ Priority Level/ Delivery Notice/ Remove/ Cancel**
11. Press  **Send** to send the message.

## 3. Inbox






The phone can alert you in several ways when you receive a new message, including:

- Displaying a notification message on the screen.
- Displaying the message icon  /  on the status bar (It blinks when the message is urgent).
- Ringing and/or Vibrating (depending on the Master Volume settings).



Received messages are displayed from newest to oldest.

### Viewing Your Inbox

Up to 700 (400 text messages, 100 CMAS, 100 multimedia messages and 100 multimedia message notifications) messages can be stored in the Inbox.



1. Press  **Menu**,  **DEF**,  **DEF**.
2. Use  to highlight a message.
3. Press the Left Soft Key .

# Messages

**Reply/D-load** to reply or download the attachment,  **View** to view the message, or the Right Soft Key  **Options** for the following options:

For text messages: **Delete/ Forward/ Save Contact/ Lock/ Delete Multiple**

For picture messages: **Delete/ Forward/ Save Contact/ Lock/ Delete Multiple**

4. While viewing a message, press the Left Soft Key  **Reply** to reply or the Right Soft Key  **Options** to access the following options.

**Delete** Deletes the selected message.

**Forward** Forwards a received message to other destination address(es).

**Save Contact** Stores the callback number, e-mail address, and numbers in the received message into your Contacts.


**Save to Templates** Stores the message as a template for future messages.

**Go to URL** Accesses the website by starting Browser (Only for messages containing a URL).

**Lock** Locks the selected message.

**Message Info** Shows the message type priority and status.

## Note



Press the **Text to Speech Key**  while viewing a message to listen to the message out loud.


## 4. Outbox

Up to 100 sent messages (50 text messages and 50 multimedia messages) can be stored in the Sent folder. View the contents of sent messages and verify whether the transmission was successful.



1. Press  **Menu**,  **DEF**,  **GHI**.
2. Use  to highlight a sent



message. Press the Left Soft Key  **Resend** to resend the message to the recipient, 

**View** to view the message, or the Right Soft Key  **Options** to access additional options:

**Delete/ Forward/ Save Contact/ Lock/ Delete Multiple**

3. While viewing the selected sent message, press the Left Soft Key  **Resend** to resend the message to the recipient, or the Right Soft Key  **Options** to access the following options:

**Delete** Deletes the selected message.

**Forward** Forwards a received message to other destination address(es).

**Save Contact** Stores the callback number, e-mail address, and numbers in the received message into your Contacts.

**Save to Templates** Stores the message as a template for future messages.

**Lock** Locks the selected message.

**Message Info** Shows the message type priority and status.







## Note

For picture messages:

**Play Again/ Delete/ Forward/ Save Contact/ Save Media/ Lock/ Extract Address/ Message Info**

## 5. Drafts

Displays saved draft messages.

1. Press  **Menu**, , .
2. Use  to highlight a Draft message.
  - Press  **Edit** to edit the message.
  - Press the Right Soft Key  **Options** to access the following options:

# Messages

**Delete** Deletes the selected message from the Drafts.

**Save Contact** Allows you to save the number to a new contact or an existing contact.





**Lock** Locks a message so that it cannot be erased.



**Delete Multiple** Allows you to delete multiple messages at one time.

## 6. Voicemail

Allows you to hear new voice messages recorded in your voice mailbox. Your phone will alert you when you receive a new voice message.










### Checking Your Voice Mailbox

1. Press  **Menu**, , .
2. Choose from the following options:
  - Press the Left Soft Key  **Clear** to clear the voicemail counter.

- Press  to listen to the message(s).
- Press the Right Soft Key  **Exit** to return to the Messages menu.

## 7. Templates

Allows you to display, edit, and add text phrases. These templates allow you to reduce manual text input into messages.

1. Press  **Menu**, , .
2. Press the Left Soft Key  **New** to create a new template.
3. Enter the desired text and press  **Save** to save the template.
4. Use  to highlight a template and press the Right Soft Key  **Options**.
5. Use  to highlight **Edit** or **Delete** and press .

## 8. Settings

### 1. All Messages

1. Press Menu, DEF, T9W, 1 .
2. Use to highlight **Entry Mode** or **Signature** and press .

#### Messaging Settings Sub- Menu Descriptions

##### 1. Entry Mode

Allows you to select the default text input method between **T9Word**, **Abc** and **123**.

##### 2. Signature (On/ Off/ Edit)

Allows you to create/edit a signature to automatically send with your messages.

### 2. CMAS Settings

1. Press Menu, DEF, T9W, 2 .
2. Use to highlight the alert categories below and press .

**Presidential Alert/ Extreme Alert/ Severe Alert/**

**AMBER(Child Abduction Emergency)/ Alert Vibrate/ Alert Sound/ Alert Reminder**

3. Select the desired option.

### 9. Delete All

Allows you to erase the messages stored in your Inbox, Outbox, or Drafts folders. You can also erase all messages at the same time.

1. Press Menu, DEF, 9 .
2. Use to highlight **Delete Inbox**, **Delete Outbox**, **Delete Drafts**, or **Delete All Messages** and press .
3. Use to highlight **Yes** or **No** and press .








## Recent Calls

### Recent Calls

The Recent Calls menu is a list of the last phone numbers or Contacts entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.








#### 1. Missed Calls

Allows you to view the list of missed calls; up to 50 entries.

1. Press  **Menu**, , .
2. Use  to highlight an entry and press the Right Soft Key  **Options** for the following options:  
**Save (Details)/ Delete/ Delete All/ Call Timer**
3. Press  to return to standby mode or highlight an entry and press  to dial that number.






#### 2. Received Calls



Allows you to view the list of incoming calls; up to 50 entries.

1. Press  **Menu**, , .
2. Use  to highlight an entry and press the Right Soft Key  **Options** for the following options:  
**Save (Details)/ Delete/ Delete All/ Call Timer**
3. Press  to return to standby mode or highlight an entry and press  to dial that number.

#### 3. Dialed Calls






Allows you to view the list of outgoing calls; up to 50 entries.

1. Press  **Menu**, , .
2. Use  to highlight an entry and press the Right Soft Key  **Options** for the following options:  
**Save (Details)/ Delete/ Delete All/ Call Timer**



3. Press  to return to standby mode or highlight an entry and press  to dial that number.

### 4. All Calls

Allows you to view the list of missed, received and dialed calls; up to 150 entries.




1. Press  **Menu**,  .
2. Use  to highlight an entry and press the Right Soft Key  **Options** for the following options:


**Save (Details)/ Delete/ Delete All/ Call Timer**

3. Press  to return to standby mode or highlight an entry and press  to dial that number.


### 5. Call Timer

Allows you to view the duration of selected calls.

1. Press  **Menu**,  .
2. Use  to scroll through the

call type categories and press  to exit.




**Last Call/ Home Calls/ Roam Calls/ All Calls**

3. If available, press the Left Soft Key  **Reset** to reset the highlighted call timer.

### Games

Allows you to use the preloaded games or buy new games.

#### 1. Buy Games

1. Press  **Menu**, , .
2. Search for a game and follow the on-screen steps to download it.



OR

Select from the following pre-loaded games:


**Block Breaker 3 Unlimited/  
Texas Hold'Em Poker 2**

### Browser

The Browser feature allows you to initiate a Web session and view Internet content. Accessibility and selections within this feature are dependent upon your service provider. For specific information on the Internet, contact your service provider.

1. Press  **Menu**, .
2. After a few seconds, you will see the home page.

#### Ending an Web Session

End an Web session by pressing .

#### Navigating Through the Browser

On-screen items may be presented in one of the following ways:

- **Numbered options**

You can use your numeric keypad.



- **Links embedded in content**

You can act on the options or the links by using the Soft Keys at the bottom of the display screen.


- **Text or numbers**

You can select the items by moving the cursor and pressing the appropriate Soft Keys.


## Scrolling

Use   to scroll through the content if the current page does not fit on one screen. The currently selected item is indicated by a cursor on the screen.


## Fast Scrolling

Press  to quickly move the cursor up and down on the current screen.




## Soft Keys

The Left Soft Key  is used primarily for first options or selecting an item, but its function may change depending on the



content displayed.

The Right Soft Key  is used primarily for secondary options or a menu of secondary options.

## Entering Text, Numbers, or Symbols

When prompted to enter text, the current text entry method appears above the Right Soft Key  as **abc, ABC, Sym, 123, etc.**, press the Right Soft Key . To change to upper case, press .

## Clearing Out Text/Numbers Entered

When entering text or numbers, press  to clear the last number, letter, or symbol. Press and hold  to clear the input field completely.

## Initiating a Phone Call From Web







You can make a phone call from Web if the site you are using supports the feature. The Browser connection is terminated when you initiate the call.

# Multimedia

## Multimedia

View, take, and share your digital pictures right from your wireless phone.

### 1. Take Photo

1. Press  Menu, , .
2. Press  to display the toolbar and set camera settings, including **Brightness**, **Resolution**, **Capture**, **Zoom** or **Multishot**. Press the Left Soft Key  **Gallery** to view **My Images**, or press the Right Soft Key  **Options** to change the following settings:  
**Options tab**

**Color Effects** Color/ Sepia/  
Mono/ Negative

**White Balance** Auto/  
Sunny/ Cloudy/ Tungsten/  
Fluorescent

**Night Mode** On/ Off

**Self Timer** Off/ 3 Seconds/

5 Seconds/ 10 Seconds

**View Mode** Fit to Screen/  
Landscape

**Settings tab**

**Shutter Sound** None/

Sound 1/ Sound 2/ Sound 3/  
Sound 4

**Auto Save** On/ Off

**Send Reminder** On/ Off

**Reset** Yes/ No


3. Take a picture by highlighting **Capture** and pressing .
4. Select **Send** or **View**. Send will open a new Picture Message and View will allow you to view the following additional options:
  - **Save**: Allows you to save the image.
  - **Gallery**: Opens My Images.
  - **Send**: Allows you to send the picture in a picture message or via Bluetooth.
  - **Set As**: Allows you to set the



image as your Wallpaper or a Contact's Picture ID.

- **Delete:** Deletes the image.

## 2. Record Voice

Record Voice allows you to record short verbal/voice messages.

1. Press **Menu**, **7 PQRS**, **2 ABC**.
2. Press **OK** **Record** to record a new voice memo.
3. Talk into the microphone, then press **OK** **Stop**. The default memo title is the date and time of recording.
4. Once recording has stopped, press the Right Soft Key **Options** to access the following:

**Set As/ Rename/ Delete**

Or press the Left Soft Key

**Save** to save the recording or **OK** **Send** to send it in a multimedia message or via Bluetooth.

## 3. Images

Allows you to browse through the images saved on your handset.




1. Press **Menu**, **7 PQRS**, **3 DEF**.
2. Select **My Images** or **Default**. Or select **Buy Graphics** and follow the on-screen instructions to buy images.
3. Use the Directional Keys to view and scroll through the pictures.
4. Press the Right Soft Key **Options** for the following options:  
**Set As/ Slide Show/ Edit/ Image Effects/ Take Photo/ Delete/ Rename/ Lock/ Unlock/ List View/ Sort By**



## 4. Sounds





Allows you to access your recorded sounds or record new ones.

1. Press **Menu**, **7 PQRS**, **4 GHI**.




## Multimedia



2. Press the Left Soft Key  **Voice** to record an audio clip.
3. Press the Left Soft Key  **Sound** to access **My Sounds** or press  **Record** to begin recording.

While recording, press the Left Soft Key  **Pause** to pause or Stop to  **Stop** recording.

4. When you are finished recording, press the Left Soft Key  **Save** to save the audio clip or the Right Soft Key  **Options** to access additional options. Use  to highlight **Set As**, **Rename**, or **Delete** and press .

OR

2. Use  to highlight **My Sounds** or **Default** and press . Or select **Buy Ringtones** and follow the on-screen instructions to buy ringtones.
3. Use  to highlight the audio clip.

- Press  **Play** to play the selected audio clip.
- Press the Right Soft Key  **Options** to access the following options:

For My Sounds: **Set As/ Record Voice/ Delete/ Rename/ Lock/Unlock/ File Info/ Sort By**

For Default: **Set As (Ringtone, Contact ID, Alert Sounds)**

## Voice Command


Allows you to make phone calls quickly and easily by voice. Your phone recalls the number from your Contacts and then dials it. This menu also includes features that are useful for those who are driving or blind. It delivers time information by voice and allows you to check missed calls, messages and voicemails.

### 1. Start Command

Allows you to initiate a Web session.


To enter the Voice Command menu, press  **Menu**, , .

OR

Press the **Voice Command Key** .


### 1.1 Call <Name> or <Number>

Allows you to call a Contact or dial a number.

1. Press the **Voice Command Key** .
2. Say **Call**, followed by the name as it is saved in your Contact List or say the number.


### 1.2 Voicemail

Allows you to call and listen to your voicemail.

1. Press the **Voice Command Key**  and say “**Voicemail**”.
2. The phone will announce any new Voicemail(s).
3. You will be prompted to call voicemail. Say **Yes** or **No**.

### 1.3 Missed Calls

You can hear details about missed calls.


1. Press the **Voice Command Key**  and say “**Missed Calls**”.

# Voice Command

2. The phone will announce any missed calls.
3. You will be prompted to call back the missed calls. Say **Yes** or **No**.


## 1.4 Messages

This voice command feature will read out information from messages received.

1. Press the **Voice Command Key**  and say “**Messages**”.
2. The phone will announce any messages you have received.
3. You will be prompted to call the numbers that sent you the messages. Say **Yes** or **No**.


## 1.5 Time & Date

This voice command feature will read out the current time & date.

1. Press the **Voice Command Key** .
2. Say **Time & Date** to listen to the time and date.


## 1.6 Help

Allows you to view more information about the features in Voice Control.

1. Press the **Voice Command Key** .
2. Say **Help** to view help information.

## 2. Command Mode

Allows you to choose between Normal or Speed settings. The Speed setting allows you to access the Voice Command functions more quickly with a non-verbal prompt.

1. Press  **Menu**,  **S**, .
2. Select an option.

**Normal/ Speed**

## 3. Announce Alert

Allows you to customize the Announce Alert function. Alert Announce allows you to hear more information about an incoming call in addition to, or instead of, the ringtone.

1. Press Menu, **8**, **3**.
2. Select an option.  
**Disable/ Announce/  
Announce + Ring**

## 4. Train Word

Allows you to train the voice recognition for improved results.

1. Press Menu, **8**, **4**.
2. Select an option.  
**Voice Command/ Answer/  
Digit Dial**
3. Follow the prompts.

## 5. Best Match

Allows you to choose whether the phone displays 1 or up to the 4 closest matches when using the “Call <Name> or <Number>” function.

1. Press Menu, **8**, **5**.
2. Select an option.  
**1 Match/ 4 Matches**

## My Schedule

### 1. Alarm Clock

Allows you to set up to five alarms. At the alarm time, any set alarm will sound the tone of your choice, and an alarm message will be displayed on the LCD screen.

1. Press **Menu**, **9 mtrc**, **1 11**.
2. Use to highlight the alarm you wish to set, then press to select it.
3. Press the Left Soft Key **Set** to set the alarm time.
4. Use to highlight **Repeat** (recurrence setting).
5. Press to select one of the following.


**Once/ Daily/ Mon - Fri/  
Weekends**

6. Use to highlight **Ringtone**, press the Left Soft Key **Set** and select a ringtone.
7. Press **Save**.

### 2. Calendar

Allows you to store and access your agenda(s). Simply enter your appointments in the Calendar, and your phone will alert you with a reminder.

1. Press **Menu**, **9 mtrc**, **2 ABC**.
2. Use to highlight the scheduled day.
  - Moves cursor to the previous day.
  - Moves cursor to the next day.
  - Moves to the previous week.
  - Moves to the next week.
3. Press the Left Soft Key **New**.
4. Use to highlight the field you wish to edit, then press the Left Soft Key **Set** to edit your schedule information.

- Once you have entered all the necessary information, press  **Save**.


### 3. Notepad

Allows you to add, read, edit, and erase notes to yourself.

- Press  **Menu**,  **New**,  **OK**.
- Press the Left Soft Key  **New** to write a new note.
- Type the note, then press  **OK** **Save**.

A confirmation message displays briefly, then displays your list of notes.

#### Note

Press the **Text to Speech Key**  while viewing a note to listen to it out loud.

## Bluetooth

The phone is compatible with devices that support the Bluetooth® headset, Basic Printing, File Transfer, hands-free, serial port, object push and phonebook access profiles. You may create and store several pairings and connect to one device at a time. The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).

#### Note

Read the user guide of each Bluetooth® accessory that you are trying to pair with your phone because the instructions may be different.

#### Note

The Bluetooth® features of this handset may not be compatible with all devices which are Bluetooth® enabled; your service provider or handset manufacturer cannot be responsible for compatibility with devices not sold by the service provider or handset manufacturer.

# Bluetooth

## 1. Paired Devices

Pairing is the process that allows the handset to locate, establish and register 1-to-1 connection with the target device.

### For pairing new Bluetooth® device

1. Press Menu, 1 .
2. Follow the Bluetooth® accessory instructions to set the device to pairing mode.
3. Press the Left Soft Key Search to search for devices to pair. If Bluetooth® power is set to off, you will be prompted to turn the power on. Highlight Yes and press .
4. Highlight **New Search** and press . The device will appear in the Device Found menu once it has been located. Highlight the device and press Pair.
5. The handset may prompt you for the passkey. Consult

the Bluetooth® accessory instructions for the appropriate passkey (typically “0000” - 4 zeroes). Enter the passkey and press . Or you might be prompted to confirm matching passkeys.

6. Once pairing is successful, select a connection preference (**Always Ask** or **Always Connect**).
7. Once connected, you will see the device listed in the Paired Devices menu.

## 2. Power

Allows you to set the Bluetooth power to On or Off.

1. Press Menu, 2 **ABC**.
2. Use to highlight **On** or **Off**, then press .






### Note

By default, your device's Bluetooth® functionality is turned off.



### 3. My Visibility

Allows you to set the visibility of your Bluetooth® function.






1. Press  **Menu**, , .
2. Use  to highlight **On** or **Off**, then press .

#### Note

If you turn on My Visibility, your device is able to be searched by other in-range Bluetooth® devices.

### 4. My Bluetooth Info

Allows you to view information about the Bluetooth functionality and change the device's name.








1. Press  **Menu**, , .
2. Press the Left Soft Key  **Rename**.
3. Enter the new name and press  **Save**.

## Tools


Your phone is equipped with helpful tools, which include a Calculator, EZ Tip Calculator, Stopwatch, and Unit Converter.

### 1. Calculator

Allows you to perform simple mathematical calculations.





1. Press  **Menu**, , .
2. Enter the necessary data.
  - Use the keypad to enter numbers.
  - Use  to enter decimals.
  - Use  to enter parenthesis.
  - Press the Left Soft Key  **Reset** to erase the entry.
  - Press the Right Soft Key  **Operator** for additional calculating options.
  - Use the Directional Keys to enter functions.

## Tools

- Press  to complete equation.

### 2. Ez Tip Calculator

Allows you to quickly and easily estimate the tip and total amount of a bill by inputting the bill amount before tip, the tip percentage, and dividing it by the number of people paying.


1. Press  **Menu**,  **0**,  **2**.
2. Enter the variable fields (**Bill**, **Tip**(%), **Split**).
3. The **Tip** (\$) and **Total** fields will automatically be calculated.
4. Press the Left Soft Key  **Reset** to make another calculation.

### 3. Stopwatch

Allows you to record the elapsed time of an event.




1. Press  **Menu**,  **0**,  **3**.
2. Press  **Start** to start, and

press  **Stop** to stop.

- You can use the Lap function by pressing the Left Soft Key  **Lap** to record up to 99 laps and lap times.

### 4. Unit Converter

Allows you to convert units of Area, Length, Temperature, Mass, Volume and Velocity.

1. Press  **Menu**,  **0**,  **4**.
2. Select the unit of measurement you want to convert:  
**Area/ Length/ Mass/  
Temperature/ Volume/  
Velocity**
3. Select the type of known unit and enter the desired amount. The conversion will automatically be calculated.

## Settings

### 1. Sound

Options to customize your phone's sounds.

#### 1.1 Ringtones

Allows you to assign ringtones for incoming calls.

1. Press Menu, #, 1, 1.
2. Select **All Calls/ Caller ID/ No Caller ID/ Buy Ringtones**.
3. Highlight **My Sounds/ Default/ Buy Ringtones** and press to open the desired folder.
4. Use to highlight the ringtone.
5. Press **Play** to play the ringtone and the Left Soft Key **Set** to set the ringtone to your phone.

### 1.2 Volume

Allows you to set various volume settings.

1. Press Menu, #, 1, 2.
2. Select **Master Volume/ Keypad/ Earpiece/ Speaker**.
3. Use to adjust the volume of the function, then press to save the setting.

### 1.3 Message Alerts

Allows you to select the alert tone for a new message.

1. Press Menu, #, 1, 3.
2. Select **Message/ Picture Message/Voicemail/ Message Reminder**.
3. Highlight **My Sounds/ Default/ Buy Ringtones** and press to open the desired folder.
4. Use to highlight a ringtone or setting, then press the Left Soft Key **Set** or press .

# Settings

## 1.4 Alert Type

Allows you to select the alert types.

1. Press **Menu**, **#**, **1**, **4**.
2. Use to highlight the alert you wish to edit.

**Call Alert/ Message Alert/  
Schedule Alert/ Alarm Alert**

3. Use to scroll through the alert types.

**Ring Only/ Vibrate Only/ Ring  
& Vibrate**

4. Press to save.

## 1.5 Service Alerts

Allows you to set any of the 4 Alert options to On or Off.

1. Press **Menu**, **#**, **1**, **5**.
2. Select an alert option.

### 1.5.1 Call Connect

Alerts you when the call is connected.

### 1.5.2 Back to Top

Alerts you when you scroll through the end of a menu list.

### 1.5.3 Low Battery

Alerts you when the battery charge level is low.

### 1.5.4 Roam Alert

Alerts you when the Roam service activates.

3. Use to highlight **On** or **Off**, then press . (Options for Low Battery are: **Announce/ Tone**)

## 1.6 Power On/Off Tone

Allows you to set the phone to sound a tone when the phone is powered on and off.

1. Press **Menu**, **#**, **1**, **6**.
2. Use to highlight **On** or **Off**, then press .

## 1.7 Flip Tone

Allows you to set a Flip tone that will play when you flip open your phone.

1. Press **Menu**, **#**, **1**, **7 PAGES**.
2. Use to highlight **On** or **Off**, then press .

## 1.8 TTS (Text-to-Speech)

When you set this on, text messages and Notepad notes be read out.

1. Press **Menu**, **#**, **1**, **8 TTS**.

### Note

When the phone is in Vibration mode, the TTS setting is off.

2. Use to highlight **On** or **Off**, then press .

## 1.9 Emergency Tone

Allows you to set the phone to sound a tone when it is in Emergency mode.

1. Press **Menu**, **#**, **1**, **9 EMER**.

2. Use to highlight **Ring**, **Vibrate**, or **Off**, then press .

## 2. Display

Options to customize your phone's display screen.

### 2.1 Wallpaper

Allows you to choose the kind of background to be displayed on the phone.

1. Press **Menu**, **#**, **2 ABC**, **1**.
2. Use to highlight **My Images**, **Default**, or **Buy Graphics**, then press .
3. Use to highlight an image and press the Left Soft Key **Set**.



### 2.2 Backlight

Allows you to set the duration for illuminating the backlight.

1. Press **Menu**, **#**, **2 ABC**, **2 ABC**.
2. Use to highlight **Display**, **Keypad**, or **Brightness**, then






# Settings

press .

3. Use  to highlight a setting, then press .







## 2.3 Menu Style

Allows you to view the main Menu items as icons or on a list.

1. Press  Menu, , , .
2. Highlight Icon or List and press .





## 2.4 Languages (Idiomas)

Allows you to use the bilingual feature according to your preference. Choose between English and Español.

1. Press  Menu, , , .
2. Use  to highlight English or Español, then press .



## 2.5 Clocks & Calendar

Allows you to select the type of clocks displayed on the main LCD.


1. Press  Menu, , , .
2. Highlight Main Screen or Front

Screen, then press .

### 2.5.1 Main Screen






Use  to highlight Normal Clock, Analog Clock, Digital 12 Clock, Digital 24 Clock, Calendar, or Off, then press .

### 2.5.2 Front Screen



Use  to highlight Digital Clock or Minimize, then press .

## 2.6 Font Settings

Allows you to select the type of font displayed on LCD.

1. Press  Menu, , , .
2. Highlight a sub-menu and press .

Font Type / Dial Font Style / Dial Font Size

3. Use  to highlight an option, then press .

Options for Font Type

LG Gothic / LG Greentea / LG Mint / LG Round / LG Secret

Options for Dial Font Style

Digital/ Blackboard/  
Sketchbook/ Sky/ Basic

Options for Dial Font Size

Normal/ Large

## 2.7 Word Prediction

Allows you to activate word prediction, a function that uses your past text entries to predict what your next word will be.

1. Press Menu, #, 2, 7.
2. Use to highlight On/ Off, then press .

## 2.8 Name Match for Dialing

Allows you to turn Name Match for Dialing On or Off.

1. Press Menu, #, 2, 8.
2. Use to highlight On or Off, then press .

## 3. Security

The Security menu allows you to secure the phone electronically.

### 3.1 Lock Phone

Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can still receive phone calls and make emergency calls. You can modify the lock code by setting a new lock code within the Security menu.

1. Press Menu, #, 3.
2. Enter the four-digit lock code.

The default lock code is commonly the last 4 digits of your phone number.

3. Press 1 Lock Phone.
4. Use to select an option, then press .

**Unlock** The phone will remain unlocked.

# Settings

**Lock** The phone is locked until it is unlocked again. When locked, you can receive incoming calls and make only emergency calls.

**On Power Up** The phone is locked when it is turned on.

## 3.2 Camera Restriction

Allows you to block Camera use.

1. Press **Menu**, **#**, **DEF**.
2. Enter the four-digit lock code.
3. Press **Camera Restriction**.
4. Use to highlight **Unlock** or **Lock** and press .

## 3.3 Change Lock Code

Allows you to enter a new four-digit lock code.

1. Press **Menu**, **#**, **DEF**.
2. Enter the four-digit lock code.
3. Press **Change Lock Code**.
4. Use to highlight **Phone Only** or **Camera** and press .
5. Enter your current four-digit lock

code.

6. Enter a new four-digit lock code.
7. For confirmation, it will ask you to enter the new lock code again.

## 3.4 Reset Default

Allows you to reset your phone to the factory default settings.

1. Press **Menu**, **#**, **DEF**.
2. Enter the four-digit lock code.
3. Press **Reset Default**.
4. Read the message and if you agree, press .
5. Use to highlight **Revert** or **Cancel** and press .

## 4. Call Settings

The Call Settings menu allows you to designate how the phone handles both incoming and outgoing calls.



## 4.1 Answer Options

Allows you to determine how to answer an incoming call.

1. Press Menu, #, 4 GHz, 1.
2. Use to highlight a setting, then press .

Flip Open / SEND Key  
Only / Any Key / Auto with  
Handsfree

## 4.2 One-Touch Dial

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Off, Speed Dial numbers designated in your Contacts will not function.

1. Press Menu, #, 4 GHz, 2 ABC.
2. Use to highlight On or Off, then press .

## 4.3 Senior Mode

Senior mode is a function that amplifies a sound for seniors to hear the voice well by emphasizing a low voice. It is used for

enhancing the speech quality while you are on the phone.

1. Press #, #, 4 GHz, 3 DEF.
2. Use to highlight On/ Off, then press .

## 4.4 Airplane Mode

Allows you to use features on your phone that do not require wireless communications.

1. Press Menu, #, 4 GHz, 4 GHz.
2. Read the displayed message and press to continue.
3. Use to highlight On or Off, then press .

## 4.5 TTY Mode

Allows you to attach a TTY (Teletype writer) device, enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on

# Settings

the TTY device.

1. Press **Menu**, **#**, **4 GH**, **5 JKL**.
2. Read the displayed message and press **OK** to continue.
3. Use to highlight a setting, then press **OK**.

TTY Full/ TTY + Talk/ TTY +  
Hear/ TTY Off

## 5. System

The System menu allows you to designate specific system network settings.

### 5.1 Network

#### 5.1.1 System Select

Allows you to set up the phone producer's management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

1. Press **Menu**, **#**, **5 JKL**, **1**, **1**.

2. Use to highlight **Home Only** or **Automatic**, then press **OK**.

#### 5.1.2 Serving System

Identifies the channel number of a system that is served as an SID Number. This information should only be used for technical support.

1. Press **Menu**, **#**, **5 JKL**, **1**, **2 ABC**.

### 5.2 Location



Menu for GPS (Global Positioning System: Satellite assisted location information system) mode.

1. Press **Menu**, **#**, **5 JKL**, **2 ABC**.
2. Use to highlight **Location On** or **E911 Only**, then press **OK**.

## 6. Memory






Allows you to check the memory status of your phone.

1. Press **Menu**, **#**, **6 MNO**.

2. Use  to highlight **Reserved Memory** or **Multimedia** and press .

## 7. Phone Info

The Phone Info menu provides you with specific information pertaining to your phone model.

1. Press  **Menu**,  **#**,  **7 PQRS**.
2. Use  to highlight **My Number, ESN/ MEID, Icon Glossary, or Version** and press .

## Accessories

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability. Optional items are sold separately.

---

### Battery Charger

The battery charger allows you to charge your phone battery.



### Battery

Standard battery is available.



---

## A

---

Add Airtime 23  
Airplane Mode 55  
Alarm Clock 44  
Alert Type 50  
All Calls 35  
All Messages 33  
Announce Alert 43  
Answer Options 55

---

## B

---

Backlight 51  
Battery Charge Level  
13  
Best Match 43  
Bluetooth 45  
Browser 36  
Buy Games 36

---

## C

---

Calculator 47  
Calendar 44  
Caller ID 16

Call <Name> or  
<Number> 41  
Call Settings 54  
Call Timer 35  
Call Waiting 16  
Camera Restriction 54  
Change Lock Code 54  
Charging the Battery  
13  
Clocks & Calendar 52  
CMAS Settings 33  
Code Entry Mode 23  
Command Mode 42  
Contact List 24  
Contacts 24  
Correcting Dialing 14

---

## D

---

Delete All 33  
Dialed Calls 34  
Display 51  
Drafts 31

---

## E

---

Emergency Tone 51  
Ez Tip Calculator 48

---

## F

---

Flip Tone 51  
Font Settings 52

---

## G

---

Games 36  
Getting Started with  
Your Phone 12  
Groups 25

---

## H

---

Help 42

---

## I

---

Images 39  
Inbox 29

# Index

---

## L

Languages (Idioms) 52  
Location 56  
Lock Phone 53

---

## M

Making a Call From Your Phone's Memory 21  
Making Calls 14  
Memory 56  
Menu Access 8  
Menus Overview 8  
Menu Style 52  
Message Alerts 49  
Messages 26, 42  
Missed Calls 34, 41  
Multimedia 38  
Mute Function 16  
My Bluetooth Info 47  
My Phone Number 23  
My Schedule 44

My vCard 25  
My Visibility 47

---

## N

Name Match for Dialing 53  
Network 56  
New Contact 24  
New Message 26  
New Picture Message 28  
Notepad 45

---

## O

One-Touch Dial 55  
Outbox 30

---

## P

Paired Devices 46  
Phone Info 57  
Phone Numbers With Pauses 19  
Phone Overview 6

Power 46  
Power On/Off Tone 50  
Prepaid 23

---

## Q

Quick Volume Adjustments 16

---

## R

Received Calls 34  
Receiving Calls 15  
Recent Calls 34  
Record Voice 39  
Redialing Calls 14  
Reset Default 54  
Ringtones 49

---

## S

Screen Icons 14  
Searching Your Phone's Memory 20  
Security 53  
Senior Mode 55

Serial Number 23  
Service Alerts 50  
Settings 33, 49  
Signal Strength 14  
Sound 49  
Sounds 39  
Speed Dialing 16  
Speed Dials 25  
Start Command 41  
Stopwatch 48  
System 56

---

## T

---

Take Photo 38  
Templates 32  
Text Input 18  
The Basics of Storing  
Contacts Entries 19  
The Battery 12  
Time & Date 42  
Tools 47  
Train Word 43  
TTS 51  
TTY Mode 55

Turning the Phone On  
and Off 13

---

## U

---

Unit Converter 48  
Using Phone Menus  
23

---

## V

---

Voice Command 41  
Voicemail 32, 41  
Volume 49

---

## W

---

Wallpaper 51  
Word Prediction 53



Printed in China