



ENGLISH

DEUTSCH

FRANÇAIS

NEDERLANDS

SLOVENŠČINA

ITALIANO

ESPAÑOL

EMAHNIKA

PORTUGUÊS

OWNER'S MANUAL

Hi-Fi Bluetooth Speaker System

Please read this manual carefully before operating your set and retain it for future reference.

CM2330



MFL67866461

Safety Information



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing)

instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

CAUTION concerning the Power Cord

Most appliances recommend they be placed upon a dedicated circuit;

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Disposal of your old appliance



1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Disposal of waste batteries/accumulators



1. When this crossed-out wheeled bin symbol is attached to batteries/accumulators of Your product it means they are covered by European Directive 2006/66/EC.
2. This symbol may be combined with chemical symbols for mercury(Hg), cadmium(Cd) or lead(Pb) if the battery Contains more that 0.0005% of mercury,0.002% of cadmium or 0.004% of lead.
3. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
4. The correct disposal of Your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health.
5. For more detailed information about disposal of Your old batteries/accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product.

CE 0984

LG Electronics hereby declares that this/these product(s) is/are in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC, 2004/108/EC, 2006/95/EC, 2009/125/EC and 2011/65/EU.

Please contact to the following address for obtaining a copy of the DoC (Declaration of Conformity).

Contact office for compliance of this product:

LG Electronics Inc.
EU Representative, Krijgsman 1,
1186 DM Amstelveen, The Netherlands

- Please note that this is NOT a Customer Service contact point. For Customer Service Information, see Warranty Card or contact the dealer that you purchased this product.

In door use only.

RF Radiation Exposure Statement

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

LG Bluetooth Remote

You can control this player with your iPhone or Android phone via Bluetooth. This player and your phone must be connected to Bluetooth. Visit "Apple App Store" or "Google Android Market (Google Play Store)". And use this QR code to search for "LG Bluetooth Remote" app. For detailed information, refer to the page 25.



(Apple iOS)



(Android OS)

Table of Contents

1 Getting Started

- 2 Safety Information
- 4 LG Bluetooth Remote
- 6 Unique Features
- 6 Accessories
- 7 Playable file Requirement
- 8 Remote Control
- 10 Front Panel
- 10 Rear Panel
- 11 Connecting the AC adapter

2 Operating

- 12 Basic Operations
 - 12 – iPod/iPhone/iPad Operation
 - 13 – Android device Operation
 - 15 – USB Operation
 - 16 – Listening to music from your portable device
 - 16 – Listening to music with your headphones
- 17 Other Operation
 - 17 – Programmed Playback
 - 17 – Selecting a folder and an MP3/WMA/FLAC file
 - 17 – Resume playback
 - 18 – Deleting an MP3/WMA/FLAC file
 - 18 – Displaying file information
 - 18 – Turn off the sound temporarily
 - 18 – Sleep Timer Setting
 - 18 – Dimmer
 - 18 – Auto Power Down
 - 18 – Setting BASS (BASS BLAST) sound effect
- 19 Sound adjustment
 - 19 – Setting the sound mode
- 19 Radio Operation
 - 19 – Antenna Connection
- 20 – Listening to the radio
- 20 – Improving poor FM reception
- 20 – Presetting the Radio Stations
- 20 – Deleting all the saved stations

- 21 – Seeing information about a Radio station
- 21 Setting the Clock
- 22 – Using your player as an alarm clock
- 22 Advanced Operation
 - 22 – Recording on USB
- 23 – To select recording bit rate and speed
- 23 Using a Bluetooth wireless technology
 - 24 – Listening to music of a Bluetooth device
- 25 Using LG Bluetooth Remote app

3 Troubleshooting

- 27 Troubleshooting

4 Appendix

- 28 Trademarks and Licenses
- 29 Specifications
- 30 Maintenance
 - 30 – Handling the Unit

1

2

3

4

1

Getting Started

Unique Features

USB Direct Recording

Records the FM or the music of portable device to your USB device.

Portable In

Listens to music from your portable device. (MP3, Notebook, etc)

Timer

Sets alarm which go off at desired time.

Time Sync

 
Sets your unit's clock automatically by using your Bluetooth device. (LG Bluetooth Remote app)

Bluetooth®


Listens to music stored on your Bluetooth device.

Accessories


Please check and identify the supplied accessories.

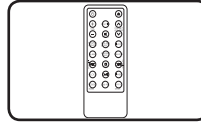


Remote Control (1)

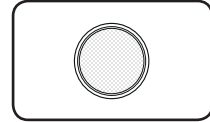 


Battery (1)

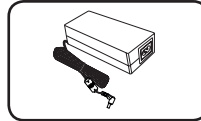 

AC adapter(1)

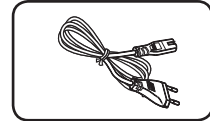 

Power cord(1)

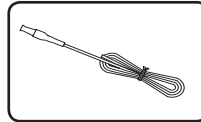 

FM Antenna (1)

Playable file Requirement

MP3/ WMA/FLAC music file requirement

MP3/ WMA/FLAC file compatibility with this unit is limited as follows :

- Sampling frequency :
 - MP3 : within 8 to 48 kHz
 - WMA : within 8 to 48 kHz
 - FLAC : within 8 to 96 kHz
- Bit rate : within 8 to 320 kbps (MP3), 40 to 192 kbps (WMA)
- Maximum files : Under 999
- File extensions : “.mp3”/ “.wma”/ “.flac”
- Support channel(FLAC) : Up to 2 channel
- Support output bit/sample (FLAC) : 16bit
- bps(FLAC) : Up to 2.5Mbps

Compatible USB Devices

- MP3 Player : Flash type MP3 player.
- USB Flash Drive :
 - Devices that support USB2.0 or USB1.1.
- The USB function of this unit does not support all USB devices.

 
USB device requirement

- Devices which require additional program installation when you have connected it to a computer, are not supported.
- Do not extract the USB device while in operation.
- For a large capacity USB, it may take longer than a few minutes to be searched.
- To prevent data loss, back up all data.
- If you use a USB extension cable or USB hub, the USB device is not recognized.
- Using NTFS file system is not supported. (Only FAT(16/ 32) file system is supported.)
- This unit is not supported when the total number of files is 1 000 or more.
- External HDD, Card readers, Locked devices, or hard type USB devices, mobile phone are not supported.
- USB port of the unit cannot be connected to PC. The unit cannot be used as a storage device.
- Some USB may not work with this unit.
- In power on state, you can charge your iPod/ iPhone/iPad/Android device via USB port. (This is available when you selects USB function.)

1

Getting Started

Remote Control

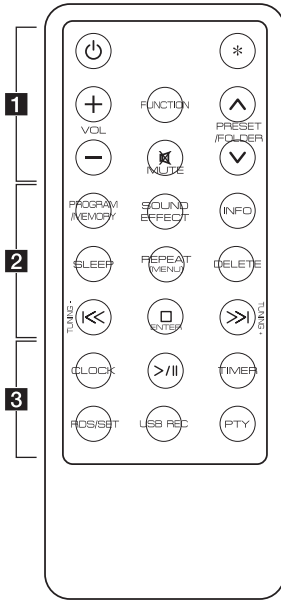

..... **1**

- Power** (Power) : Switches the unit ON or OFF.
- ***: The button is not available for any function.
- VOL +/-** : Adjusts speaker volume.
- FUNCTION** : Selects the function and input source.
- PRESET/FOLDER ^/V** :
 - Searches for a folder of MP3/WMA/FLAC files. When an USB containing MP3/WMA/FLAC files in several folders is being played, press **PRESET/FOLDER ^/V** to select the folder you want to play.
 - Chooses a preset number for a radio station.
- MUTE** : Mutes the sound.

..... **2**

- PROGRAM/MEMORY** :
 - Stores radio stations.
 - Creates a playlist you want to listen to.
- SOUND EFFECT** : Chooses sound impressions.
- INFO** : Sees information about your music.
- SLEEP** : Sets the system to turn off automatically at a specified time.

- REPEAT(MENU)** :
 - Listens to your files repeatedly or randomly.
 - Move to the previous menu when you select USB function to play iPod/iPhone/iPad.
- DELETE** : Deletes MP3/WMA/FLAC files.

- ||<</>>|** (Skip/Search) :
 - Skips Fast backward or Forward.
 - Searches for a section within a file.

- TUNING +/-** : Selects the radio stations.

- ENTER** :
 - Stops playback or recording.
 - Cancels DELETE function.
 - Confirms the clock and the alarm setting.

..... **3**


- CLOCK** : Sets a clock and checks a time.
- >||** (Play/Pause) :
 - Starts or pauses playback.
 - Selects Stereo/Mono.
- TIMER** : Uses your player as an alarm clock.

- RDS/SET** :
 - RDS(Radio Data System)
 - Confirms the clock and the alarm setting. (Refer to the 21 page)


- USB REC** : Starts recording
- PTY** : Searches radio stations by radio type.

Battery Installation

 1. Turn the battery cover counterclockwise by using a coin. Then take the battery cover.

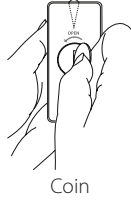

 2. Insert and fix the battery with the minus(-) facing in the same direction as the minus(-).

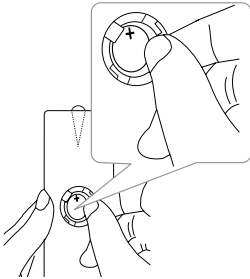

3. Put the battery cover on the remote control and turn it clockwise to close.



Caution

If you have long nails, do not open the battery compartment by using your finger. Or else, your nail would be broken.

 
Warning

DO NOT INGEST BATTERY. CHEMICAL BURN HAZARD

Caution


- The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not recharge, disassemble, incinerate, or heat above 100 °C (212 °F). Replace the battery part no. CR2025 only. Use of another battery may present a risk of fire or explosion. Dispose of used battery. Keep battery away from children. Do not disassemble or dispose of in fire.
- [The remote control supplied with] This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Front Panel

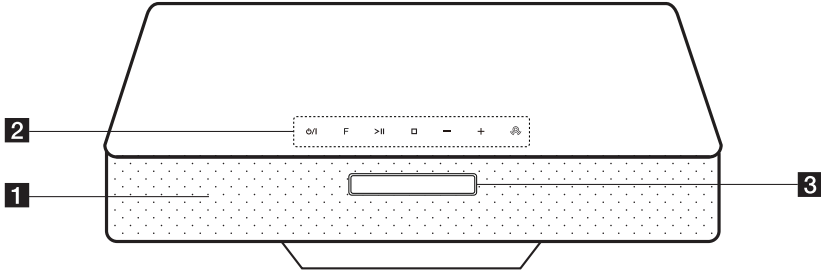

- 1** Speaker
- 2** (Power ON/OFF)
Switches the unit ON or OFF.
F(Function)
Selects the function and input source.
>||(Play/Pause)
- Starts and pauses playback.
- Selects Stereo/Mono.
 (Stop)
Stops playback.
- /+** (Volume)
Adjusts volume level.
 Reinforce BASS (BASS BLAST) sound effect.
- 3** Display Window

 Rear Panel

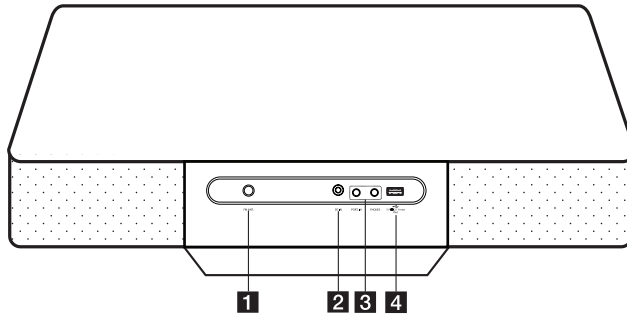

- 1** **FM ANT.**
Connects the FM wired antenna.
- 2** **DC IN**(AC adapter input)
- 3** **PORT.IN**
Listens to music from your portable device.
- PHONES**
Listens to music with your headphone.
(3.5 mm)
- 4** **USB Port**
Plays and records the audio files by connecting the USB device.

 
Caution

Precautions in using the touch buttons

- Use the touch buttons with clean and dry hands.
 - In a humid environment, wipe out any moisture on the touch buttons before using.
- Do not press the touch buttons hard to make it work.
 - If you apply too much strength, it can damage the sensor of the touch buttons.
- Touch the button that you want to work in order to operate the function correctly.
- Be careful not to have any conductive material such as metallic object on the touch buttons. It can cause malfunctions.


Caution

There are speakers at the bottom of your unit. Be careful of this, when you handle it.

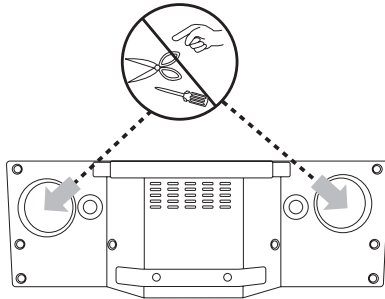

Connecting the AC adapter

 1. Connect the supplied AC power cord to the AC adapter.
2. Connect the AC adapter cable to DC IN adapter input.
3. Plug the AC power cord into an AC outlet.

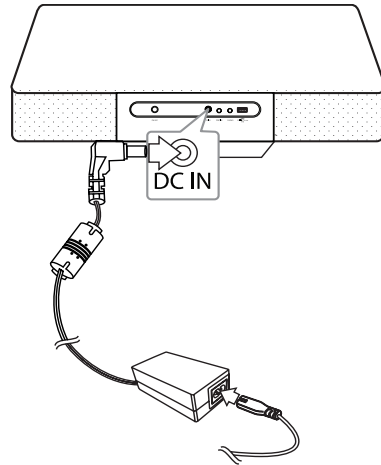**Caution**

 
Only use the AC adapter supplied with this device. Do not use a power supply from another device or manufacturer. Using any other power cable or power supply may cause damage to the device and void your warranty.

Basic Operations

iPod/iPhone/iPad Operation

You can enjoy the sound with your iPod/iPhone/iPad. For details about iPod/iPhone/iPad, refer to the iPod/iPhone/iPad User Guide.

1. Connect iPod/iPhone/iPad to the USB port by using the iPod/iPhone/iPad's cable.

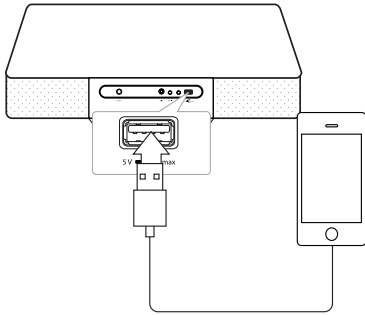

If you turn this unit on, your iPod/iPhone/iPad will be automatically turned on and start recharging.

2. Press **FUNCTION** on the remote control or **F** on the unit to select USB function. You can operate your iPod/iPhone/iPad through an iPod/iPhone/iPad's display by using the remote control and controlling your iPod/iPhone/iPad.

To	Do this	
	ON UNIT	ON REMOTE
Pauses or restart	>	>
Skip	-	<< / >>
Search	-	Press and hold << / >>
Move to the previous menu	-	REPEAT (MENU)
Move to the desired item	-	PRESET/ FOLDER ^/V
Chooses a item	□	□ ENTER

Compatible iPhone/iPad/iPod

- The unit supports the models as follows ;
iPhone 5, iPhone 4S, iPhone 4, iPhone 3GS,
iPad (3rd and 4th generation), iPad 2, iPad, iPad mini,
iPod touch (3rd through 5th generation)
iPod nano (4th through 7th generation)
- iPad, iPhone, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. Lightning is a trademark of Apple Inc.
- Depending on your iPod/iPhone/iPad's software version, you may not control your iPod/iPhone/iPad from the unit.
- Depending on your iPod/iPhone/iPad device, you may not control your iPod/iPhone/iPad from the unit.

! Note

- If iPod/iPhone/iPad operation has an error, check these problems as follows;
 - Your iPod/iPhone/iPad is not connected firmly.
 - This unit recognizes your iPod/iPhone/iPad as an unknown device.
 - Your iPod/iPhone/iPad is exceptionally low in power.
 - ➔ The battery needs to be charged.
 - ➔ If you charge the battery while iPod/iPhone/iPad is extremely low in power, it may take longer to be charged.
- Depending on your iPod/iPhone/iPad's software version, it may not be possible to control your iPod/iPhone/iPad from this unit. We recommend installing the latest software version.
- If you use an application, make a call, or send and receive SMS text message, etc. on iPod touch or iPhone, disconnect it from this unit and then use it.
- If you have a problem with your iPod/iPhone/iPad, please visit www.apple.com/support.
- You may need additional operation for iPod touch or iPhone, for example "unlock" before you use.

Android device Operation

You can enjoy the sound from your LG Android device through USB port. For details about Android device, refer to the Android device User Guide.

 
To stream audio from your Android device through this unit, you need :

- With Android operation system : Ver 4.1(or later)
- With a micro USB cable

! Note

- This unit may not compatible with the device that does not support the *AOA (Android Open Accessory) 2.0 version. It is possible that certain devices may not support or be compliant with the AOA2.0 USB audio standard, resulting in the device freezing or rebooting after being connected and detached from the speaker system. If you experience this problem, please contact your device manufacturer. Your device may need to be updated with the latest Jellybean software and or the correct AOA2.0 USB audio standard.
 - *About AOA (Android Open Accessory) 2.0 version ;
 - Audio output from Android device to the Accessory and HID (Human Interface Device)
- You are recommended to remove the case for your Android device (Ver4.1 or later) before you connect your Android device to USB port using a cable.

1. Connect Android device to the USB port by using the Android device's cable.

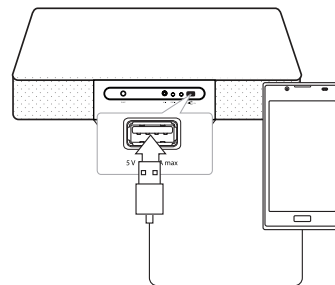

2. Press **FUNCTION** on the remote control or **F** on the unit to select USB function.
3. If your unit is connected firmly, 'ANDROID' will appear in the display window. You can operate your Android device through an Android device's display by using the remote control and controlling your Android device.

To	Do this
Play	Premere > or >/ .
Pause	During playback, press > or >/ .
Skip	During playback, press I<< / >>I to go to the next file or to return to the beginning of the current file. During playback, press I<< twice briefly to step back to the previous file.

When you selects USB function, you can see messages as follows;

Message	Cause
USB	Your device is not supported by AOA 2.0 (Only charging)
Number of files	This unit recognizes your USB.
IPOD	This unit recognizes your iOS device as an known device.
ANDROID	This unit recognizes your Android device supported by AOA 2.0 as known device.
NO USB	Any device is not connected to USB port. This unit recognizes your Android device as an unknown device.

Note

 
Depending on the type of device, Message will appear in other way.

Note

- If the USB connection has an error, check these problems as follows;
 - Your Android device is not connected firmly.
 - This unit recognizes your Android device as an unknown device.
 - Your Android device is not booted.
 - Check the setting of USB connection type on your Android device.
- The charging time may vary depending on your Android device.
- Some Android devices may not be charged.
- You may not control your Android device from this unit due to malfunction of Android device.
- Depending on your Android device's software version, it may not be possible to control your Android device from this unit. We recommend installing the latest software version.
- If you use an application, make a call, or send and receive SMS text message, etc. on Android device, disconnect it from this unit and then use it.
- Although your device's O/S is ver 4.1 or even the latest version, you can only charge it. Because your device is not supported by AOA 2.0.
- Disconnect your device from USB port in case of malfunction, although the device's O/S is ver 4.1(or later).
- While the unit recognizes your android device, you may see "USB CONNECT" in your device.
- In case of no sound from this unit, adjust the volume of your Android device.
- If your Android device does not support AOA (Android Open Accessory) 2.0 version, this unit can only charge your Android device even though Android device has OS 4.1 (or later).

USB Operation

Connect the USB port of USB Memory (or MP3 player, etc.) to the USB port on the unit.

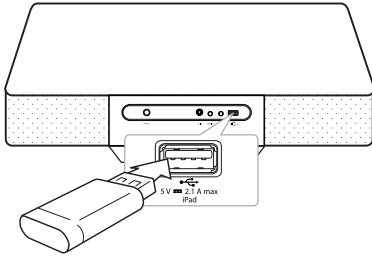

! Note


Removing the USB Device from the unit

1. Choose a different function/mode or press **ENTER** on the remote control or **ENTER** on the unit twice in a row.
2. Remove the USB device from the unit.

To	Do this
Stop	Press ENTER on the remote control or ENTER on the unit.
Playback	Press ▶ on the remote control.
Pause	During playback, press ▶ on the remote control.
Skipping to the next/previous file	During playback, press ▶▶ on the remote control to go to the next file.
	Playing less than 2 seconds, press ◀◀ on the remote control to go to the previous file. Playing after 3 seconds, press ◀◀ on the remote control to go to the beginning of the file.
Searching for a section within a file	During playback, press and hold ◀◀/▶▶ on the remote control and release it at the point you want to listen to.
Searching for a section within a folder	Press PRESET/FOLDER ▲/▼ on the remote control.
Playing repeatedly or randomly	Press REPEAT(MENU) on the remote control repeatedly, the display window will be changed in the following order, RPT1 -> RPT DIR (only MP3/WMA/FLAC) -> RPT ALL -> RANDOM -> OFF

Listening to music from your portable device

 
The unit can be used to play the music from many types of portable device. (Portable cable is not supplied as an accessory with this unit.)

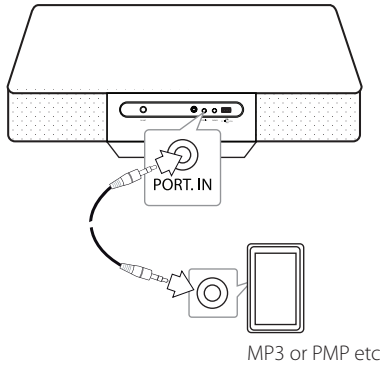

1. Connect the portable device to the **PORT. IN** connector of the unit.
2. Turn the power on by pressing **⏻/⏹**.
3. Select the **PORTABLE** function by pressing **FUNCTION** on the remote control.
4. Turn the portable device on and start playing it.

Listening to music with your headphones

 Connect a pair of stereo headphones (∅ 3.5 mm phone plug) to PHONES jack on the unit for private listening. (Headphones are not supplied as an accessory with this unit.)

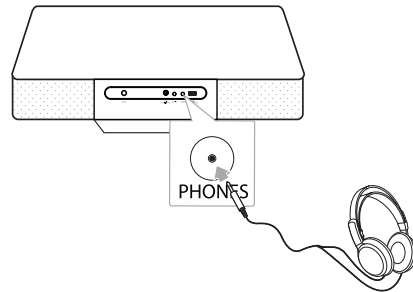

! Note

You can't hear any sound from speakers, while the headphones plug is inserted in the PHONES jack.

Other Operation

Programmed Playback

The program function enables you to store your favourite files from any USB device.

A program can contain 20 files.

1. Connect USB and wait for it to be loaded.
2. Press **PROGRAM/MEMORY** on the remote control in stop state.
3. Press **I<</>>I** on the remote control to select a next file.
4. Press **PROGRAM/MEMORY** again to save and select a next file.
5. Press **>II** to play the programmed music files.
6. To clear your selection, press **□ENTER** twice.

! Note

The programs are also cleared when the USB device is removed, the unit is powered off or the function is switched to others.

Selecting a folder and an MP3/WMA/FLAC file

 
1. **PRESET/FOLDER ^/V** on the remote control repeatedly until a desired folder appears.
2. **>II** to play it. The first file of folder will play.

Resume playback

During playback, if you change to another function, then return to the USB function, and then press, you can listen to music from last point you played.

! Note

- USB Folders/Files are recognized as below

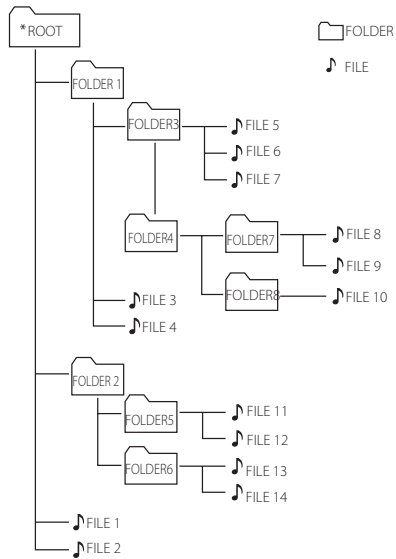

- If there is no file in a folder, the folder will not appear
- Folders will be presented as the following order;
ROOT → FOLDER1 → FOLDER3 → FOLDER7 → FOLDER8 → FOLDER5 → FOLDER6
- File will be played from 🎵 file No.1 to 🎵 file No.14 one by one.
- Files and folders will be presented in order recorded and may be presented differently according to the record circumstances.
- *ROOT : the first screen you can see when a computer recognize the USB is "ROOT".

Deleting an MP3/WMA/FLAC file

You can delete file, folder or format by pressing **DELETE** on the remote control. This function is supported only in stop state.

1. -Select the file you want to delete by using **|◀ / ▶|**. And press **DELETE**.
-Select the folder you want to delete by pressing **PRESET/FOLDER ▲/▼**. Then press **DELETE**.
-Press and hold **DELETE** to format the USB device.

Or

Press **DELETE** repeatedly while searching a file.

The display window will be changed in the following order.

- DEL FILE : Deletes file
- DEL DIR? : Deletes folder
- FORMAT? : Formats USB

2. To delete file/folder or format, press **>||**.
3. If you want to exit the current mode, press **□ ENTER**.

Caution

- Do not extract the USB device during operation. (play, delete, etc.)
- Regular back up is recommended to prevent data loss.
- The delete function may not be supported according to the USB state. (lock, etc.)

Displaying file information

While playing an MP3/FLAC file containing file information, you can display the information by pressing **INFO** on the remote control.

Turn off the sound temporarily

Press **MUTE** on the remote control to mute your sound.

You can mute the sound in order, for example, to answer the telephone. And "MUTE" will appear in the display window. To cancel mute function, press **MUTE** again or adjust volume level by pressing **VOL+/-**.

Sleep Timer Setting

Press **SLEEP** on the remote control repeatedly to select delay time between 10 and 180 minutes. After delay time, the unit will turn off. (You can see the following order, 180 -> 150 -> 120 -> 90 -> 80 -> 70 -> 60 -> 50 -> 40 -> 30 -> 20 -> 10)

To cancel the sleep function, press **SLEEP** repeatedly until the display window get bright.

Note

- Press **SLEEP**. The remaining time appears in the display window.
- Sleep function will work after dimmer function.

Dimmer

Press **SLEEP** once. The display window will be darkened by half. To cancel it, press **SLEEP** repeatedly until the display window get bright.

Auto Power Down

This unit will power itself down to save electronic consumption in case main unit is not connected to external device and is not used for 25 minutes. Also this unit will power down if no input is connected using the analogue input after six hours.

Setting BASS (BASS BLAST) sound effect

You can listen to music by setting BASS (BASS BLAST) sound effect. Press  repeatedly. Then you can reinforce BASS (BASS BLAST) sound effect.

BASS (BASS BLAST) <-> BYPASS

Sound adjustment

Setting the sound mode

This system has a number of pre-set sound fields. You can select a desired sound mode by using **SOUND EFFECT** on the remote control.

The displayed items for the Equalizer may be different depending on sound sources and effects.

On Display	Description
NATURAL	You can enjoy comfortable and natural sound.
AUTO EQ	Sets the sound equalizer on the mode that is the most similar to the genre which is included in the MP3 ID3 tag of song files.
POP CLASSIC JAZZ ROCK	This program lends an enthusiastic atmosphere to the sound, giving you the feeling you are at an actual rock, pop, jazz or classic concert.
MP3 -- OPT	This function is optimized for compressible MP3 file. It improves the treble sound.
BASS (BASS BLAST)	Reinforces the treble, bass and surround sound effect.
LOUDNESS	Improves the bass and treble sound.
BYPASS	You can enjoy the sound without equalizer effect.

 
! Note

Maybe you need to reset the sound mode, after switching the input, sometimes even after the sound file is changed.

Radio Operation

Antenna Connection

Connect the FM Wire antenna to **FM ANT.** connector.

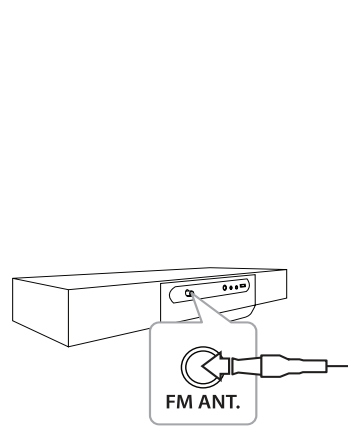

! Note

Be sure to fully extend the FM wire antenna.

Listening to the radio

1. Press **FUNCTION** on the remote control until FM appears in the display window. The last received station is tuned in.
2. Auto tuning : Press and hold **TUNING-/+** for about 2 seconds until the frequency indication starts changing, then release. Scanning stops when the unit tunes in a station.
Manual tuning : Press **TUNING-/+** repeatedly.
3. Adjust the volume by pressing **VOL+/-**.

Improving poor FM reception

Press **>II** on the remote control. This will change the tuner from stereo to mono. Then the reception will be better than before.

Presetting the Radio Stations

You can preset 50 stations for FM. Before tuning, make sure to turn down the volume.

1. Press **FUNCTION** until FM appears in the display window.
2. Select the desired frequency by pressing **TUNING-/+**.
3. Press **PROGRAM/MEMORY**. A preset number will blink in the display window.
4. Press **PRESET/FOLDER ^/V** to select the preset number you want.
5. Press **PROGRAM/MEMORY**. The station is stored.
6. Repeat steps 2 to 5 to store other stations.
7. To listen a preset station, press **PRESET/FOLDER ^/V**.

Deleting all the saved stations

1. Press and hold **PROGRAM/MEMORY** for two seconds. "ERASEALL" will blink on the display window.
2. Press **PROGRAM/MEMORY** to erase all saved radio stations.

Seeing information about a Radio station

The FM tuner is supplied with the RDS (Radio Data System) facility. This shows information about the radio station being listened to. Press **RDS/SET** repeatedly to cycle through the various data types. :

PS	(Programme Service Name) The name of the channel will appear in the display
PTY	(Programme Type Recognition) The programme type (e.g. Jazz or News) will appear in the display.
RT	(Radio Text) A text message contains special information from the broadcast station. This text may scroll across the display.
CT	(Time controlled by the channel) This shows the time and date as broadcast by the station.

You can search the radio stations by programme type by pressing **RDS/SET**. The display will show the last PTY in use. Press **PTY** one or more times to select your preferred programme type. Press and hold **TUNING-/+**. The tuner will search automatically. When a station is found, the search will stop.

Setting the Clock

You have three ways to set the clock.

Setting the clock by pressing the buttons

1. Turn the unit on.
2. Press and hold **CLOCK**.
3. Choose time mode by pressing **|<</>>|**.
- 12:00 (for an AM and PM display) or 0:00 (for a 24 hour display)
4. Press **□ENTER** or **RDS/SET** to confirm your selection.
5. Select the hours by pressing **|<</>>|**.
6. Press **□ENTER** or **RDS/SET**.
7. Select the minutes by pressing **|<</>>|**.
8. Press **□ENTER** or **RDS/SET**.
9. If you want to reset the clock, press and hold **CLOCK**. Then repeat steps 3-8.

Setting the clock by connecting the BT.App

Set time you desired on Bluetooth device and connect the Bluetooth device to your unit via BT app. Then the clock setting in the display window will be synchronized with the Bluetooth device automatically.

Setting the clock by synchronizing your iPod/ iPhone/iPad

Select USB function and connect iPod/iPhone/iPad to the USB port using the iPod/iPhone/iPad's cable. Then the clock setting in the display window will be synchronized with your iPod/iPhone/iPad.

After the unit synchronized with your iPod/iPhone/iPad for clock setting, there will be a time difference between the iPod/iPhone/iPad and the unit. In power off state, the clock won't be synchronized with your iPod/iPhone/iPad.

! Note

Check the current time on iPod/iPhone/iPad is correct or not. If not, reset it correctly depending on present time. Wrong time on the iPod/iPhone/iPad may result in the time difference between your iPod/iPhone/iPad and the unit.

Using your player as an alarm clock

1. Turn the unit on.
2. Press and hold **TIMER** to set the alarm function.
3. Alarm sound sources will blink. While each of sound sources blink, select the one you want by pressing **ENTER** or **RDS/SET**.
4. "ON TIME" will blink. This is your desired time to turns unit on. Press **LEFT/RIGHT** to change the hours and minutes and press **ENTER** or **RDS/SET** to save.
5. The "OFF TIME" will blink. This is your desired time to turn unit off. Press **LEFT/RIGHT** to change the hours and minutes and press **ENTER** or **RDS/SET** to save.
6. The volume setting will blink. Press **LEFT/RIGHT** to change the volume and press **ENTER** or **RDS/SET** to save.
7. Press **TIMER** to check the alarm information.
8. If you want to reset the clock, press and hold **TIMER**. Then repeat step 3-6.

! Note

- If you unplug the cord from an outlet, the clock setting you set won't be stored.
- If you synchronize the unit with your BT device for clock by using BT app, you can set 12 - Hour Time (ex - PM 11 : 00) or 24 - Hour Time (ex - 23 : 00). (Android O/S only)
- If you set the clock, you can check the time by pressing **CLOCK** although the player is turned off.
- If you set the clock and alarm, you can check setting information by pressing **TIMER** although the unit is turned off. Then this function will work in everyday.
- Alarm function only works when the unit is turned off.
- When the alarm rings, you can deactivate the alarm by pressing **TIMER**.
- If the alarm rings with USB cable connected to USB port, the function switches to tuner function. (Depending on the type of device, this may not be available.)

Advanced Operation

Recording on USB

1. Connect the USB device to the unit.
2. Select the FM or the PORTABLE function by pressing **FUNCTION** the remote control or **F** on the unit.
3. Start the recording by pressing **USB REC** on the remote control.
4. To stop recording, press **ENTER**.

Pausing recording


During recording, press **USB REC** to pause recording. Press it again to restart recording.

To select recording bit rate and speed

1. Press **USB REC** for longer than 3 seconds.
2. Use **|<</>>|** to select the bit rate.
3. Press **USB REC** again to select the recording speed.
4. Press **USB REC** to finish the setting.

! Note

 - Do not remove the USB device or turn off the unit during USB recording. If not, an incomplete file may be made and not deleted on PC.
- If USB recording does not work, the message like "NO USB", "ERROR(USB ERR)", "FULL(USB FULL)", "NO SUPPO" or "NO REC" is displayed on the display window.
- Multi card reader device, External HDD, mobile phone can not be used for USB recording.
- A file is recorded by about 512 Mbyte when you record for a long term.
- You may not store more than 999 files.
- It'll be stored as follows.

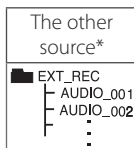

* : FM, PORTABLE and the like.

BT is not supported.

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

Be responsible
Respect copyrights

Using a Bluetooth wireless technology

About Bluetooth

Bluetooth® is wireless communication technology for short range connection.

The available range is within 10 meters.

(The sound may be interrupted when the connection is interfered by the other electronic wave or you connect the bluetooth in the other rooms.)

Connecting individual devices under **Bluetooth**® wireless technology does not incur any charges. A mobile phone with **Bluetooth**® wireless technology can be operated via the Cascade if the connection was made via **Bluetooth**® wireless technology.
Available Devices : Mobile phone, MP3, Laptop, PDA.

Bluetooth Profiles

In order to use Bluetooth wireless technology, devices must be able to interpret certain profiles. This unit is compatible with following profile.

A2DP (Advanced Audio Distribution Profile)

Listening to music of a Bluetooth device

Before you start the pairing procedure, make sure the Bluetooth feature is turned on in your Bluetooth device. Refer to your Bluetooth device's user guide. Once a pairing operation is performed, it does not need to be performed again.

1. Select the Bluetooth function by using the **FUNCTION** on the remote control or **F** on the unit. "BT READY" appears in the display window.
2. Operate the Bluetooth device and perform the pairing operation. When searching for this unit with the Bluetooth device, a list of the devices found may appear in the Bluetooth device display depending on the type of Bluetooth device. Your unit displays as "LG MICRO (XX:XX)".

! Note

XX:XX means the last four digits of BT address. For example, if your unit has a BT address such as 9C:02:98:4A:F7:08, you will see "LG MICRO (F7:08)" on your Bluetooth device.

3. Enter the PIN code.
PIN code : 0000

! Note

Depending on the Bluetooth device type, some devices do not require a PIN code.

4. When this unit is successfully paired with your Bluetooth device, "BT CONN" and "BT PAIR" appears in the display window.

! Note

- Depending on the Bluetooth device type, some devices have a different pairing way.
- Try pairing procedure if your device name is not in the device list.

5. Listening to music.
To play a music stored on your Bluetooth device, refer to your Bluetooth device's user guide. According to your Bluetooth device's volume level, the volume level of Bluetooth will be adjusted.

! Note

- Sound from the main set can be distorted if you raise the volume of Bluetooth device up to two-thirds or more.
- When you use the Bluetooth function, adjust the volume of a Bluetooth device to a proper level to listen to.

! Note

- After your device is connected to the unit via Bluetooth, the function switches to BT automatically.
- After searching for this unit on your Bluetooth device, pair the Bluetooth device with this unit. Then play the file you want.
- The sound may be interrupted when the connection interfered by the other electronic wave.
- You cannot control the Bluetooth device with this unit.
- Pairing is limited one Bluetooth device per one unit and multi-pairing is not supported.
- Although the distance between your Bluetooth and the set is less than 10m, if there are obstacles between both, your Bluetooth device cannot be connected.
- Depending on the type of the device, you may not be able to use the Bluetooth function.
- You can enjoy wireless system using phone, MP3, Notebook, etc..
- When not connected the Bluetooth, "BT READY" appears in the display window.
- The Electrical malfunction due to devices using same frequency such as Medical equipment, Microwaves or wireless LAN devices, the connection will be disconnected.
- When someone stands and interrupts communication between Bluetooth device and the player, the connection will be disconnected.
- If the gotten away of the distance between Bluetooth and the unit, the sound quality is lower and lower. The connection will be disconnected when the space between the Bluetooth and the unit gets out of the operating range of Bluetooth.
- The device with Bluetooth wireless technology is disconnected, if you turn off the main unit or put the device away from the main unit more than 10m.
- If the Bluetooth device is disconnected, you should connect the Bluetooth device to your unit.

Using LG Bluetooth Remote app

About LG Bluetooth Remote app

LG Bluetooth Remote app bring a suite of new features to your unit. To enjoy more features, you are recommended to download and install free "LG Bluetooth Remote".

Install " LG Bluetooth Remote app" through " Apple App Store" or "Google Android Market"

1. Tap the Apple App Store icon or Google Android Market(Google Play Store) icon.
2. In the search bar, type in the "LG Bluetooth Remote" and search it.
3. In the search result list, find and tap "LG Bluetooth Remote" to start downloading Bluetooth app.
4. Tap an icon for installation.
5. Tap an icon for downloading.

! Note

- Make sure that your powered Bluetooth device is connected to the Internet.
- Make sure that your powered Bluetooth device is equipped with " Apple App Store" or "Google Android Market(Google Play Store)"
- If you want to get more information, refer to explanation of BT app in "Apple App Store" or "Google Android Market(Google Play Store)"

Install " LG Bluetooth Remote app " by using QR code

1. Install " LG Bluetooth Remote app" by using QR code. Use the scanning software to scan the QR code.
2. Tap an icon for installation.
3. Tap an icon for downloading.



(Apple iOS)



(Android OS)

! Note

- Make sure that your powered Bluetooth device is connected to the Internet.
- Make sure that your powered Bluetooth device has a scanning software application. If you don't have one, download one from "Apple App Store" or "Google Android Market(Google Play Store)".

Activate Bluetooth with LG Bluetooth Remote app

LG Bluetooth Remote app helps to connect your powered Bluetooth device to the unit.

! Note

In case of iOS device ;
After performing the pairing operation, activate Bluetooth with LG Bluetooth Remote App.

1. Tap LG Bluetooth Remote app icon on the home screen to open LG Bluetooth Remote app application, and go to the main menu.
2. Tap [Setting] and select the unit you want.
3. If you want to get more information to operate, tap [Setting] and [Help].

Note

- BT app will be available in the software version as follow;
Android O/S : Ver 2.3.3(or late)
iOS O/S : Ver 4.3(or late)
- While using Bluetooth, you may not activate BT app. Disconnect Bluetooth device you have connected before to use BT app properly.
- If you use Bluetooth app for operation, there would be some differences between Bluetooth app and the supplied remote control. Use the supplied remote control as necessary.
- If you operate BT app with Bluetooth device connected, the Bluetooth connection you have connected before may be disconnected. (Depending on the smartphone's O/S, this process has a difference.)
- Depending on the Bluetooth device, BT.app may not work.
- In Bluetooth function, if you use BT app, the supplied remote control may not work.
- When using BT app for remote control, the operation may differ from the supplied remote control.
- According to the smartphone's operating system, you have some differences for BT app's operation.
- When your Bluetooth device have been already connected with other unit, disconnect the Bluetooth connection first. Then you can control your player through BT app.
- The connection you've made may be disconnected if you select other application or change the setting of the connected device via BT app. In such case, please check the connection status.
- To prevent a malfunction, you are recommended to connect only one device to this unit.
- Don't connect your smart device by using a cable to USB port. Or else the Bluetooth connection will be disconnected.
- After connection of BT app, music may be output from your device. In this case, try connecting procedure again.

Troubleshooting

Problem	Correction
No Power.	<ul style="list-style-type: none"> • Plug in the power cord. • Check the condition by operating other electronic devices.
No sound.	Press F and check the selected function.
Radio stations cannot be tuned in properly.	<ul style="list-style-type: none"> • Connect the antenna securely. • Tune to the station manually. • Preset some radio stations, see page 20.
The remote control does not work properly.	<ul style="list-style-type: none"> • Operate the remote control within about 23 ft (7 m). • Remove the obstacle in the path of the remote control and the unit. • Replace the battery with new one.
iPod/iPhone/iPad does not work.	Connect your iPod/iPhone/iPad using USB cable firmly .
Android device does not work.	<ul style="list-style-type: none"> • Check whether your device's O/S is ver 4.1(or later) or AOA 2.0(or later). • Connect your Android device using USB cable firmly.
Clock does not displayed.	<ul style="list-style-type: none"> • Connect your Bluetooth device to your unit through BT app. • Connect your iPod/iPhone/iPad using USB cable firmly for time sync.
Bluetooth pairing does not work well.	<ul style="list-style-type: none"> • Switch Bluetooth off and on again on your Bluetooth device, then try pairing again. • Be sure your Bluetooth device is on. • Remove the obstacle in the path of the Bluetooth device and the unit. • Depending on the type of the Bluetooth device or surrounding environment, your device may not be paired with the unit. • When your Bluetooth device have been already connected with other unit, disconnect the Bluetooth connection first. Then you can control your unit through BT app. • Depending on the Bluetooth device, BT app may work restrictively not work. • The connection you've made may be disconnected if you select other application or change the setting of the connected device via BT app. In such case, please check the connection status.

Trademarks and Licenses





Bluetooth® wireless technology is a system which allows radio contact between electronic devices within a max. range of 10 meters.

Connecting individual devices under *Bluetooth*® wireless technology does not incur any charges. A mobile phone with *Bluetooth*® wireless technology can be operated via the Cascade if the connection was made via *Bluetooth*® wireless technology.

The *Bluetooth*® word mark and logos are owned by the *Bluetooth*® SIG, Inc. and any use of such marks by LG Electronics is under license.

Other trademarks and trade names are those of their respective owners.

Specifications

General	
AC adapter requirements	DC IN 18 V  2.67 A, 100 - 240 V ~ 50 - 60 Hz
Power consumption	Refer to the main label.
Dimensions (W x H x D)	520 x 87 x 180 mm
Net Weight (Approx.)	3.4 kg
Operating temperature	5 °C to 35 °C (41 °F to 95 °F)
Operating humidity	5 % to 90 %
Bus Power Supply	DC 5 V  2100 mA

Inputs	
PORT. IN	0.5 Vrms (3.5 mm stereo jack)

Tuner	
FM Tuning Range	87.5 MHz to 108.0 MHz or 87.50 MHz to 108.00 MHz

Amplifier	
Stereo mode	5 W + 5 W(Front), 30 W(Dual Woofer)
T.H.D	10 %

Sub Woofer	
Type	Built-in
Impedance	8 Ω
Rated Input Power	10 W
Max. Input Power	20 W

Front Speaker	
Type	Built-in
Impedance	6 Ω
Rated Input Power	5 W
Max. Input Power	10 W

- Design and specifications are subject to change without notice.

Maintenance

Handling the Unit

When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

Keeping the exterior surfaces clean

Do not use volatile liquids such as insecticide spray near the unit.

Wiping with strong pressure may damage the surface.

Do not leave rubber or plastic products in contact with the unit for a long period of time.

Cleaning the unit

To clean the player, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.

