

LG G2

User Guide



Table of Contents

Get Started	1
Your Phone at a Glance.....	1
Set Up Your Phone.....	1
Activation and Service	2
Create Your Account and Pick Your Plan	2
Activate Your Phone.....	2
Manage Your Account	2
Re-Boost	3
Additional Information	4
Set Up Your Voicemail.....	4
Phone Basics.....	5
Your Phone Overview	5
Plug & Pop.....	7
Status Bar.....	8
Turn Your Phone On and Off	10
Screen On/Off.....	11
Lock and Unlock Your Phone	12
Unlock Your Screen Using the Knock Code Feature.....	13
Guest Mode	13
Setting Up Guest Mode	14
Using Guest Mode	14
Hardware Key Control Mode.....	14
Battery and Charger.....	15
Extend Your Battery Life	16
Phone Function Buttons.....	17
Menu Button	17
Work with Menus	18
Notifications Panel.....	20
Home Button.....	21
Back Button	21

Touchscreen Navigation	21
Your Home Screen	22
Home Screen.....	22
Extended Home Screen.....	23
Use the Applications Key	23
Applications: How to View, Open and Switch.....	23
Customize Your Home Screen.....	25
Add and Remove Widgets on the Home Screen.....	27
Change the Phone's Wallpaper	27
Customize Applications Icons on the Home Screen.....	28
Access Recently-Used Applications.....	29
Slide Aside	29
Home Screen Clean View.....	30
Quick Access.....	30
Change the Screen Orientation.....	31
Enter Text With the On-screen Keyboard.....	31
Tips for Editing Text.....	34
Search Your Phone and the Web.....	35
Phone and Web Search Using Text Entry.....	35
Phone and Web Search Using Voice Command.....	36
Using Clip Tray	36
Text Link	36
Phone Calls	38
HD™ Voice.....	38
Make Phone Calls.....	38
Call Using the Phone Dialer	38
Dialing Options	39
Missed Call Notification	40
Call Emergency Numbers	40
In-Call Options.....	41
Dial and Save Phone Numbers With Pauses.....	41
Dial From the Contacts List.....	42
Use Direct Dialing	42

Plus (+) Code Dialing.....	42
Receive Phone Calls.....	43
Visual Voicemail	44
Set Up Visual Voicemail.....	44
Review Visual Voicemail.....	44
Listen to Multiple Voicemail Messages	45
Visual Voicemail Options	45
Configure Visual Voicemail Settings	46
Change Your Main Greeting via the Voicemail Menu.....	46
Edit the Display Name via the Voicemail Menu.....	47
Vicemail(Traditional)	47
Set Up Voicemail	47
Voicemail Notification	48
Retrieve Your Voicemail Messages	48
Phone Call Options.....	49
Caller ID	49
Call Waiting	49
3-way Calling	49
Call Forwarding	50
In-call Options.....	50
Set Up Speed Dialing.....	52
Call Logs.....	53
Save a Phone Number.....	55
Find a Phone Number.....	55
Text-to-Speech	55
Contacts.....	57
Get Started With Contacts	57
Add a Contact.....	58
Add a Contact to Your Favorites	59
Edit a Contacts Entry	59
Communicate with Your Contacts.....	62
Import, Export, and Share Contacts.....	64
Import Contacts From Your Internal Storage.....	64

Export Contacts to Your Internal Storage.....	64
Share a Contact.....	64
Joining and Separating Contacts	65
Accounts and Messaging	66
Gmail	66
Create a Google Account.....	66
Sign into Your Google Account.....	66
Access Gmail.....	67
Send a Gmail Message	69
Read and Reply to Gmail Messages.....	70
Change Gmail Settings.....	72
Email	74
Add an Email Account (POP3 or IMAP)	74
Corporate Email (Outlook)	75
Open Email.....	76
Create and Send Email.....	76
Reply to or Delete an Email Message.....	77
Configure and Sync Corporate Email Settings	77
Text and Multimedia Messaging.....	80
Compose Text Messages	80
Read and Reply to Text Messages	80
Send a Multimedia Message (MMS)	81
Save and Resume a Draft Message	82
Managing Message Conversations.....	82
Delete Messages.....	84
Text and Multimedia Message Options	84
Facebook.....	87
Google Hangouts.....	87
Apps and Entertainment.....	89
Google Play Store.....	89
Find and Install an App	89
Create a Google Wallet Account.....	90
Request a Refund for a Paid App	90

Open an Installed App	91
Uninstall an App	91
Get Help with Google Play	91
Music	91
Google Play Music.....	91
Music Player	92
Back Up Your Downloaded Music Files	93
Navigation.....	93
Google Maps	93
Web and Data.....	95
Connect Wi-Fi.....	95
Turn Wi-Fi On and Connect to a Network	95
Add a Wi-Fi Network.....	96
Wi-Fi Direct.....	97
Data Services General Information (3G and Enhanced 4G LTE Networks).....	97
Enhanced 4G LTE	97
Your User Name	98
Launch a Web Connection.....	98
Data Connection Status and Indicators.....	98
Virtual Private Networks (VPN)	99
Prepare Your Phone for VPN Connection.....	99
Set Up Secure Credential Storage.....	99
Add a VPN Connection	100
Connect to or Disconnect From a VPN	100
Browser	101
Learn to Navigate the Browser	101
Go to a Specific Website.....	102
Browser Menu	102
Adjust Browser Settings.....	103
Create Website Settings	104
Create Bookmarks	104
Camera and Video	106
Take Pictures.....	106

Camera Settings	106
Multi-point Auto Focus	108
Super Zooming	108
Shot & Clear	108
View Your Pictures	109
Gallery Options	109
Assign Pictures	110
Record Videos	111
Video Settings	111
Dual Recording	112
Tracking Zoom	113
Audio Zoom	114
Tracking Focus	114
Video Gallery Options	115
Live Zoom	116
Dual Play	116
Video Editor	117
Using the Video Editor	118
Tools and Calendar	119
QSlide	119
QuickRemote	119
QuickTranslator	121
Voice Mate	122
QuickMemo	123
Notebook	124
Calendar	126
Change Calendar View	126
View Event Details	129
Create an Event	129
Edit or Delete an Event	130
Set an Event Reminder	130
Respond to an Event Reminder	131
Display and Synchronize Calendars	131

Change Calendar Settings.....	131
Folders.....	132
Alarm/Clock	133
Tasks.....	135
Calculator	137
Bluetooth	138
Turn Bluetooth On and Off.....	138
Bluetooth Settings Menu.....	138
Pairing Bluetooth Devices.....	139
Send Items via Bluetooth.....	140
Disconnect Bluetooth Connection During an Active Call	141
SmartShare	141
Enjoy Content Via a Variety of Devices.....	141
Enjoy Content from Nearby Devices	142
Using Content from the Cloud.....	143
Transfer User Contents From an Android Phone to Your LG G2.....	144
Transfer Via PC or Laptop	144
Transfer Via Bluetooth Connection	145
Transfer Via Cloud Storage	145
Settings.....	147
Wireless Networks	147
Airplane Mode	147
Wi-Fi Settings	148
Bluetooth Settings.....	148
Mobile Data	148
Call Settings	148
Voicemail Settings	148
Smart Dialing.....	148
North American Dialing.....	148
International Dialing.....	149
Incoming Call Pop-up	149
Call Reject.....	149
Decline with Message.....	149

Privacy Keeper	149
Auto Answer	150
TTY Mode.....	150
Hearing Aids.....	150
Proximity Sensor	150
Voice Enhancement.....	151
Save Unknown Numbers	151
Power Button Ends Call.....	151
Share & Connect	152
NFC Settings	152
Android Beam.....	152
SmartShare Beam	152
Miracast.....	153
Wireless Storage	153
More Settings.....	153
Wi-Fi Hotspot.....	153
Bluetooth Tethering	154
Mobile Networks Settings	154
Default SMS App	155
VPN Settings	155
Device Settings.....	155
Sound Settings	155
Ringtones & Vibrations Settings.....	157
Display Settings.....	160
Home Screen.....	163
Lock Screen.....	164
Gestures.....	167
One-handed Operation	169
Storage.....	170
Battery	170
Apps	171
Slide Aside	171
Personal Settings.....	171


Accounts & Sync	172
Cloud	172
Guest Mode	172
Location	173
Security	173
Language & Input Settings.....	174
Backup & Reset.....	175
System Settings.....	176
Date & Time.....	176
Accessibility	176
PC Connection	178
Accessory	179
Activate This Device	179
System Updates	179
Printing	180
About Phone.....	180
Copyright Information.....	181
Index.....	182

Get Started

The following topics give you all the information you need to set up your phone and Boost service for the first time.

Your Phone at a Glance


The following illustration outlines your phone's primary external features and buttons.

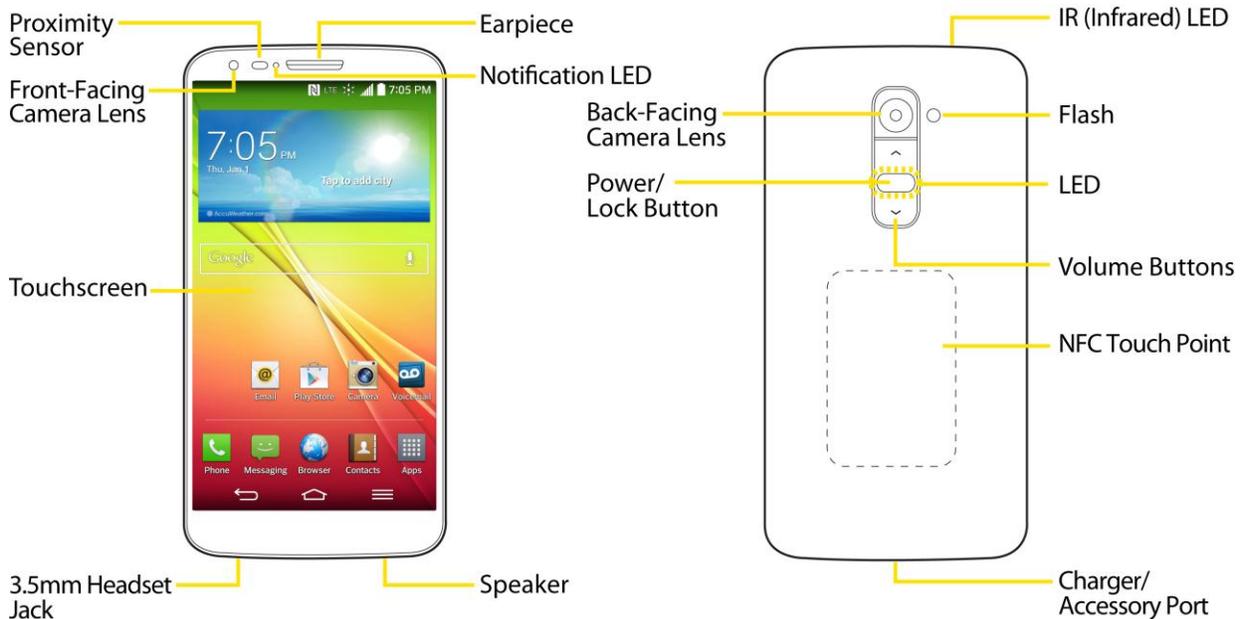

Set Up Your Phone

You must first charge the phone.

1. Charge your phone.
 - Connect the charging adapter and USB cable as shown; the LG logo on the charging adapter should face toward you.

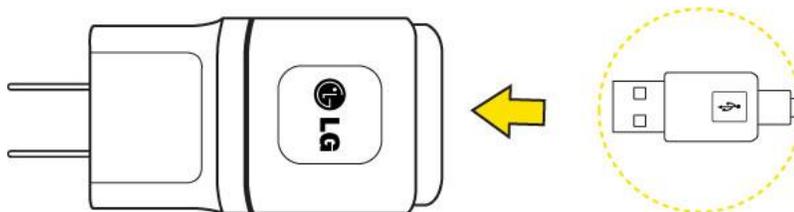

- Plug one end of the USB cable into the phone's Charger/Accessory Port and the other end into an electrical outlet. The charge time varies depending upon the battery level.

Note: Your phone's battery should have enough charge for the phone to turn on and find a signal, set up voicemail, and make a call. You should fully charge the battery as soon as possible.

2. Press and hold the **Power/Lock Button**  to turn the phone on.
 - If your phone is activated, it will turn on, search for Boost service, and begin the setup application.
 - If your phone is not yet activated, see [Activate Your Phone](#) for more information.

Activation and Service

Before using your phone, you must set up your service with Boost Mobile. You will need your phone's serial number (MEID), printed on a sticker inside the battery compartment.

Create Your Account and Pick Your Plan

Set up your Boost Mobile account.

1. From your computer, visit boostmobile.com/activate.
2. Enter your phone's MEID and click **start activation process**.
 - Your phone's MEID (serial number) is printed on the sticker located on the back of your phone in the battery compartment. This number can also be found on the bottom panel of the phone's package.
3. Follow the remaining instructions to choose your plan and select a payment method.
4. Follow the activation instructions below and you'll be able to start using your phone.

Note: You can also activate by phone by calling **1-888-BOOST-4U** (1-888-266-7848) from any other phone.

Activate Your Phone

After setting up your account on boostmobile.com, simply turn your device on. Your device is designed to activate automatically. If you are swapping from another Boost Mobile device to a new one, be sure to turn off the old device before swapping the serial number (MEID). Once the MEID swap is complete, turn on the new device and the programming information will be pushed to your device automatically.

You can also start the activation process manually.

- Tap  >  >  **Settings > Activate this device.**

Manage Your Account

Access information about your account. You can:

- Check your minutes.
- Re-Boost® (add money to your account).
- Change plans.
- And more.

From Your Phone

Access account information and other self-service tools from Boost Zone.

- Tap  >  > **Boost Zone** .

You can also dial directly for access to certain information:

- Dial     **(#BAL)** to check account balance.
- Dial     **(#ADD)** to make a payment.
- Dial     to launch Boost Zone or call Boost Customer Care (depending on your Settings) to get answers to other questions.

From Your Computer

- Log in with your wireless phone number and account PIN at boostmobile.com.

From Any Other Phone

- Boost Customer Care: **1-888-BOOST-4U** (1-888-266-7848).

Re-Boost

Boost Mobile makes it easy to add money to your account. You decide exactly how and where you want to pay. Keep your account active by using your phone and adding money to your account.

Pay with Cash

Find an Authorized Re-Boost Retailer near you. Pick up a Re-Boost Card or recharge for as low as \$10 at the register, where available.

Pay Anytime with a Credit/Debit Card

Dial **#ADD** (   ) to add money from your phone or visit **My Account** at boostmobile.com to do it online. Securely register your credit/debit card with Boost for more convenient one-time payments or to set up easy Auto Re-Boost payments.

Set Up Worry-Free Payments with Auto Re-BoostSM

It's the easiest way to make sure your account stays on and active. Use a credit card, debit card or bank account—whatever's best for you.

Visit boostmobile.com/reboost to get the details on all your Re-Boost options.

Additional Information

For more information about your Boost Mobile account, as well as other Boost Mobile services, visit us at boostmobile.com.

Set Up Your Voicemail

Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off. You should set up your Boost voicemail and personal greeting as soon as your phone is activated. Always use a password to protect against unauthorized access.

1. Tap  > .
2. Touch and hold .
3. Follow the system prompts to:
 - Create your password.
 - Record your name announcement.
 - Record your greeting.

Note: Boost strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

Phone Basics

Your phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. The topics in this section will introduce the basic functions and features of your phone.

Tip: Phone Software Upgrades – Updates to your phone’s software may become available from time to time. Boost will automatically upload critical updates to your phone. You can also use the menu to check for and download updates. Tap  >  > **System settings > System updates.**

Your Phone Overview

The illustrations and descriptions below outline your phone’s basic layout.



Front View

1. **Proximity Sensor** senses proximity towards other objects (such as your head) so that touch commands are not accidentally activated during a call.

Note: Please be careful not to cover the sensors with a protective film, pouch, or a protective case not authorized by LG.


2. **Front-Facing Camera Lens** allows you to take pictures and video of yourself. Also lets you participate in video chats.

3. **Touchscreen** displays all the information needed to operate your phone, such as the applications, call status, the Contacts list, the date and time, and the signal and battery strength.
4. **Back Button** returns to the previous screen. It also closes pop-up display items such as menus and dialog boxes.
5. **Home Button** returns to the Home screen. If you're already viewing one of extension canvases, it opens the central Home screen. Touch and hold to display recently used applications.
6. **3.5mm Headset Jack** allows you to plug in a headset for convenient, hands-free conversations.

CAUTION! Inserting an accessory into the incorrect jack may damage the phone.

7. **Speaker** lets you hear the different ringers and sounds. The speaker also lets you hear the caller's voice in speakerphone mode.
8. **Menu Button** allows you to access your phone's main functions menu from the Home screen: Add apps & widgets, Theme, Home screen settings, Lock screen settings, and System settings. While using an application, tap to open a list of available options.
9. **Apps Button** opens the Applications screen to view installed applications.
10. **Notification LED** flashes front notification LED when you receive notifications, such as an incoming call, if you enable this feature.
11. **Earpiece** lets you hear the caller and automated prompts.

Rear View

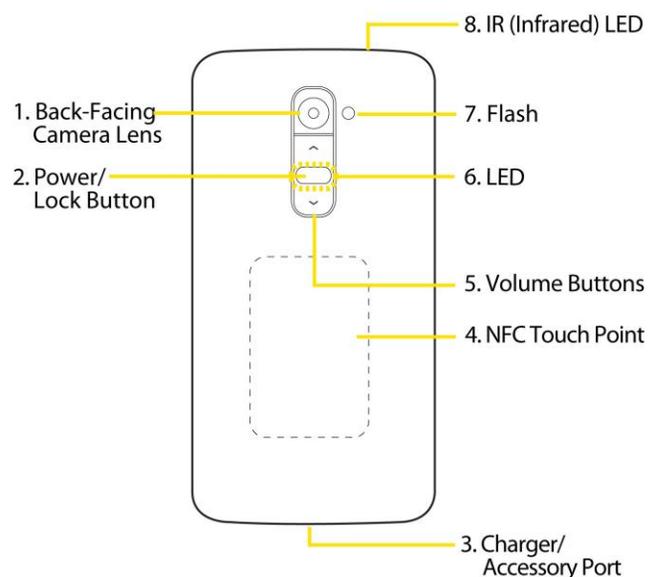

1. **Back-Facing Camera Lens** lets you take pictures and record videos.
2. **Power/Lock Button** locks the screen. Press and hold to open the phone options menu for the following options: **Power off**, **Power off and restart**, and **Turn on/off Airplane mode**. You can also quickly switch to Silent mode , Vibration mode  or Sound mode .
3. **Charger/ Accessory Port** allows you to connect the phone charger or an optional USB cable.

CAUTION! Inserting an accessory into the incorrect jack may damage the phone.

4. **NFC Touch Point** tap the back of your phone to an NFC tag or another NFC compatible device in this location.
5. **Volume Buttons** allow you to adjust the ringer and media volumes, or to adjust the in-call volume during a call.
6. **LED** flashes rear notification LED when you receive notifications, such as an incoming call, if you enable this feature.
7. **Flash** helps you take pictures and video in dim lighting.
8. **IR (Infrared) LED** uses infrared to communicate with devices using the QuickRemote app.

Plug & Pop

Plug & Pop allows you to quickly choose apps to use when plugging in an earphone or On-the-Go device, such as a mouse or keyboard.

1. Plug in an earphone or OTG (On-the-Go) devices (e.g., mouse, keyboard, etc.).
2. The applications panel will display and you can select an app to run.

Note: You can edit the applications to display on the panel and set not to show the applications panel. To access this menu, tap  >  > **System settings > Accessory > USB storage or Earphone**. Select the applications you want to make available or tap the switch next to **Edit Plug & Pop apps** to activate or deactivate the feature.



Status Bar

The Status Bar appears at the top of the screen. It displays icons indicating that you've received notifications (on the left) and icons indicating the phone's status (on the right), along with the current time.

If you have more notifications than can fit in the Status Bar, the  icon prompts you to open the Status Bar to view them all. (See [Notifications Panel](#).)

The following list identifies the symbols you'll see on your phone's display screen:

Status Icons

Icon	Description
	Signal Strength – Shows your current signal strength (the more bars there are, the stronger the signal is).
	No Service – Your phone cannot find a usable signal.
	Enhanced 4G LTE Connected – Indicates that 4G data service is available.
	Enhanced 4G LTE In Use – Indicates that 4G data service is in use.
	3G/1x Connected – Indicates that 3G/1x data service is available.
	3G/1x In Use – Indicates that 3G/1x data service is in use.
	Wi-Fi Connected – Indicates that Wi-Fi is in use.
	Bluetooth On – Indicates that Bluetooth is on.
	GPS On – Indicates that GPS is on.
	Airplane Mode – Indicates that the phone is in Airplane Mode.
	Speakerphone On – Indicates that Speakerphone is on.

Icon	Description
	Vibrate Mode – Indicates that the ringer volume is set to vibrate and any sounds are silenced.
	Ringer Silenced – Indicates that all sounds are turned off.
	Very Low Battery – Indicates that battery is very low.
	Low Battery – Indicates that battery is low.
	Battery Drained (40%) – Indicates that battery is partially drained.
	Battery Full – Shows your current battery charge level. (Icon shown is fully charged.)
	Battery Charging – Indicates that battery is charging.
	Alarm Clock – Indicates that an alarm is set.
	NFC Activated – Indicates that NFC is activated.

Notification Icons

Icon	Description
	New Gmail Message – Indicates a new Gmail message.
	New Email – Indicates a new Email message.
	New Text or Multimedia Message – Indicates you have received a new text or multimedia message.
	Problem With Text Or Multimedia Message Delivery – Indicates a text or multimedia message is undeliverable.
	New Voicemail – Indicates you have received a new voicemail message.
	Upcoming Event – Alerts you to an upcoming event.
	Data Is Syncing – Application sync is active and synchronization is in progress for Gmail, Calendar, and Contacts.
	Problem With Sign-In Or Sync – There has been an issue with your connection to the Google server, or you were not properly signed into your account. In order to use Google application or sync features, you must set up and sign into an active Google Account.
	Full Internal Storage – Indicates that internal storage is full.
	USB Connected – The phone has detected an active USB connection.

Icon	Description
	More Notifications Not Displayed – Indicates that there are more notifications which are not displayed in the Status Bar.
	Call In Progress – Indicates that a call is in progress.
	Call In Progress Using Bluetooth Headset – Indicates that a call is in progress using the Bluetooth headset.
	Call Being Forwarded – Indicates that a call is being forwarded.
	Call On Hold – Indicates that a call is on hold.
	Missed Call – Indicates that you have missed calls.
	Uploading Data – Indicates that your phone is uploading data.
	Downloading Data – Indicates that your phone is downloading data.
	Download Finished – Indicates that a download is complete.
	Connected To VPN – Indicates that the phone is connected to a Virtual Private Network.
	Disconnected From VPN – Indicates that the phone is disconnected from the Virtual Private Network.
	Song Is Playing – Indicates that a song is playing.
	Carrier Data – Data use threshold approaching or exceeded.
	TTY – Indicates that your phone is operating in TTY mode.
	Hotspot Active - Indicates that Portable Wi-Fi hotspot is active.

Turn Your Phone On and Off

Turn your phone on and off and wake-up the screen by using the Power/Lock Button .

Turn Your Phone On

- Press and hold the **Power/Lock Button** .

Once your phone is on, it may display “Searching for Service.” When your phone finds a signal, it enters standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Boost service by pressing any key (when your phone is turned on).

Tip: The Power Save feature conserves your battery power when you are in an area where there is no signal.

Turn Your Phone Off

1. Press and hold the **Power/Lock Button**  for two seconds until you see the Phone options on the display screen.
2. Tap **Power off** and then tap **OK** to power off the phone.

Your screen remains blank while your phone is off (unless the battery is charging).

Wake Up the Screen

If you don't use the phone for a while, the screen and backlight will shut off to conserve battery power.

1. Press the **Power/Lock Button** . Your lock screen will appear. See [Lock Screen](#).
2. Swipe the screen to any direction to unlock it. The last screen you were working on opens. (This is the default lock screen.)

Note: When turning the screen on, make sure you do not cover the proximity sensor. Doing so will not allow you to turn the screen on.

Screen On/Off

The KnockON feature allows you to double-tap the screen to easily turn it on or off. You can enable and disable this feature in the Gestures settings.


To Turn the Screen On

1. Double-tap the center of the Lock screen to turn the screen on.
2. Unlock the screen or access any of the available shortcuts or widgets.

To Turn the Screen Off

1. Double-tap an empty area of the Home screen or the Status Bar.
2. The screen will turn off.

Note: Tap on the center area of the screen. If you tap on the bottom or the top area, the recognition rate may decrease. You can use KnockON in the small window when using the QuickWindow Case. To activate or deactivate the feature, tap  >  > **System settings** > **Gestures** > **Screen on/off**.

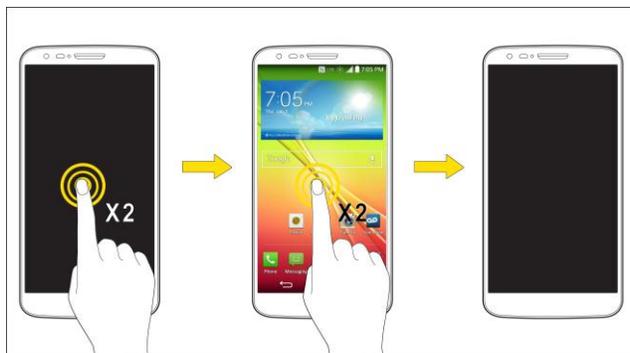

Lock and Unlock Your Phone

You can prevent accidental screen touches from activating phone functions by locking your phone.

Lock Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 9-1-1.

- Press the **Power/Lock Button** .

Unlock Your Phone

1. Press the **Power/Lock Button**  to wake up the phone.
2. Swipe the screen to any direction to unlock it.




Note: The default Lock screen simply locks the screen to prevent unintentional actions. For more security to guard against unauthorized use, you can set an unlock requirement (such as a pattern, PIN, or password) that will need to be entered to unlock it.

Unlock Your Screen Using the Knock Code Feature

The Knock Code feature allows you to create your own unlock code using a combination of knocks (or taps) on the screen.

To activate the Knock Code feature:

1. Tap  >  >  **Settings**.
2. From the DEVICE section, tap **Lock screen**.
3. Tap **Select screen lock** and tap **Knock Code**.
4. Use the 2x2 grid to create a sequence of knocks (or taps) to set your knock code.

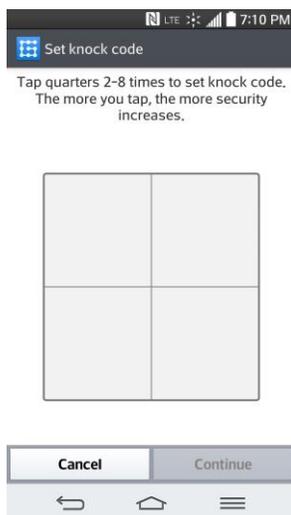

Note: You have to create a Backup PIN as a safety measure in case you forget your unlock sequence.

To unlock the phone using Knock Code:

- While the screen is off, tap the same sequence you established anywhere on the screen. The Home screen will be accessed directly.

Guest Mode

Use Guest mode when you let someone else use your phone. They will only be able to use the applications that you've selected. Once you set it up, you can easily put your phone in Guest mode by drawing the guest pattern on the Lock screen that you set, which is different from your normal unlock pattern.

Note: Guests can also use applications that your selected applications link to.

Setting Up Guest Mode

Follow the steps below to set up Guest mode and begin using it.

1. Tap  >  > **System settings** > **Guest mode**.
2. Tap **Set pattern**, then set the pattern you want to use to put your device in Guest mode.
3. Tap **Set apps** to view which apps can be accessed in Guest mode. Tap the **Add** icon  in the upper right corner of the screen to change the Guest apps list.
 - Checkmark the apps that can be accessed.
 - Remove checkmarks from the apps that you don't want to be accessed.
 - Tap **OK** when all of the checkboxes are set as you want.
4. Tap the switch to **ON** next to Guest mode.
 - If your Lock screen is not set to Pattern, tap **OK**, then tap **Pattern** and enter your normal lock screen pattern as necessary.

Note: If your unlock sequence is set to either Knock Code, Pattern, PIN or password, you will need to enter it to be able set the unlock pattern.

Using Guest Mode

After you've set up and enabled Guest mode, lock the screen so that you can enter your Guest mode pattern. The Guest mode Home screen is displayed with only the apps you've selected for guest access. To exit Guest mode, enter your normal unlock pattern on the Lock screen.

Note: The **Guest mode** switch is automatically turned off if your lock sequence is changed from Pattern. Otherwise, manually disable it if you no longer want to allow guest access.

Hardware Key Control Mode

If your phone display is damaged or broken, you can answer an incoming call, end a call, or turn off an alarm using the hardware keys.

1. Press and hold the **Power/Lock Button**  and then tap **Power off** > **OK** to turn your phone off.
2. Press and hold the **Power/Lock Button**  and the **Volume Keys**   at the same time for more than 6 seconds to enter the Hardware key control mode.
3. Press the **Volume Keys**   to scroll to the desired option, then press the **Power/Lock Button**  to confirm.

- **Answer a call:** Press either of the **Volume Keys**.
- **End a call:** Press the **Power/Lock Button** during a call.
- **Stop an alarm:** When an alarm rings, press and hold the **Volume Up Key** or **Volume Down Key** to stop the alarm.

Note: If you use your phone with a broken display glass, your phone can break even more or you can be injured. Make sure to visit the LG authorized service center to get your phone repaired.

Battery and Charger

Boost-approved or LG-approved batteries and accessories can be found at Boost Stores or through LG, or call 1-866-866-7509 to order. They're also available at boostmobile.com.

Non-Removable Battery

Your phone has an internal, rechargeable battery that should be replaced only by LG or an authorized LG repair center. You should never try to open or take apart this phone yourself. Opening the phone can cause damage that will void your warranty.

Battery Capacity

Your phone is equipped with a Li-pol(embedded) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 17.7 hours of continuous digital talk time.

When the battery reaches 5% of its capacity, the battery icon blinks. When there are approximately two minutes of talk time left, the phone can sound an audible alert and then turn off.


Note: Long backlight settings, searching for service, using vibrate mode, browser use, and other variable may reduce the battery's talk and standby times.

Tip: Watch your phone's battery level indicator and charge the battery before it runs out of power.

Charge the Battery

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you will lose any information you were just working on.

1. Connect the charging adapter and USB cable as shown; the LG logo on the charging adapter should face toward you.

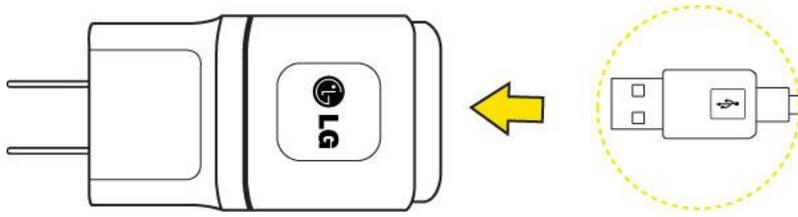

2. Plug one end of the USB cable into the phone's Charger/Accessory Port and the other end into an electrical outlet. The charge time varies depending upon the battery level.

Battery Temperature Protection

Though extremely rare, if the battery becomes overheated, the phone will automatically turn off.

Charge with USB

You can use your computer to charge your phone. To be able to charge with the USB cable, you need to install the necessary USB drivers on your computer first. Connect one end of the USB cable to the Charger/Accessory Port on your phone and connect the other end to a USB port on your computer. It is best to use the rear USB port when connecting to a desktop computer. The USB hub should be powered by an external power source.

Note: Low-power USB ports are not supported, such as the USB port on your keyboard or bus-powered USB hub.

Note: The LG USB Driver is downloadable from the following site: <http://www.lg.com/us/> > Select **SUPPORT**. In the Search box next to SEARCH PRODUCT SUPPORT, enter the model name or name and click **SEARCH**. Click the model. On the PRODUCT SUPPORT page, click on **Software Update & Drivers**.

Tip: Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

Extend Your Battery Life

You can extend your battery's life between charges by turning off features that run in the background. You can also monitor how applications and system resources consume battery power.

- Reduce the amount of time your backlight is on.
- Turn Bluetooth off when not in use.
- Turn Wi-Fi off when not in use.
- Deactivate the GPS when not needed. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery.

- Do not wait until your battery is completely depleted before charging your phone. Repeating this process of a complete discharge and recharge can over time reduce the storage capacity of any battery.
- Turn off Automatic application sync.
- Check the Running Services and close any unnecessary applications.

Note: If you accidentally press the Power/Lock Button while the device is in your pocket, the screen will turn off automatically in order to save battery power.

Battery Charge Level

- Tap  >  > **System settings** > **About phone** > **Battery**.

The battery status (charging or discharging) and level (as a percentage of fully charged) are displayed.

Monitor and Control Battery Use

The Battery use screen shows which applications consume the most battery power. You can also use it to turn off applications that you've downloaded, if they are consuming too much power.

- Tap  >  > **System settings** > **About phone** > **Battery** > **Battery use**.

Tap any of the listed items for more options.

Phone Function Buttons

Your phone comes equipped with three main function buttons that can be used on any screen to access added functions.

Menu Button

The Menu Button activates an available menu function for the current screen or application.

When on the Home screen, tap  to view the following options:

- **Add apps & widgets** allow you to add apps and widgets to the Home screen.
- **Theme** allows you to change the theme.
- **Home screen settings** provides direct access to the phone's Home screen settings menu. (See [Home Screen](#).)
- **Lock screen settings** provides direct access to the phone's lock screen settings menu. (See [Lock Screen](#).)
- **System settings** provides quick access to the phone's Settings menu. (See [Settings](#).)

Work with Menus


There are two Android menu types, Options menus and Context menus.

Options Menu

Options menus contain tools that apply to the activities of the current screen or application, not to any specific item on the screen. To open the available options menu, tap .


Note: Not all applications have Options menus; if you tap  on a screen that has no Options menu, nothing will happen.

Some applications have more Options menu items than can fit in the options menu; tap **More** to open the additional items.

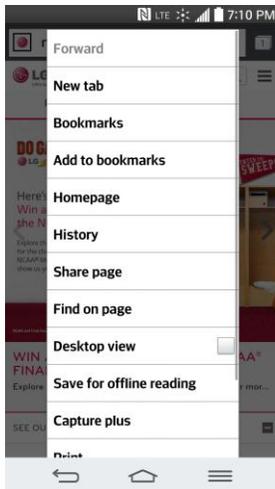

Context Menus

Context menus contain options that apply to a specific item on the screen. To open a Context menu, touch and hold an item on the screen. Not all items have Context menus. If you touch and hold an item that has no Context menu, nothing will happen.

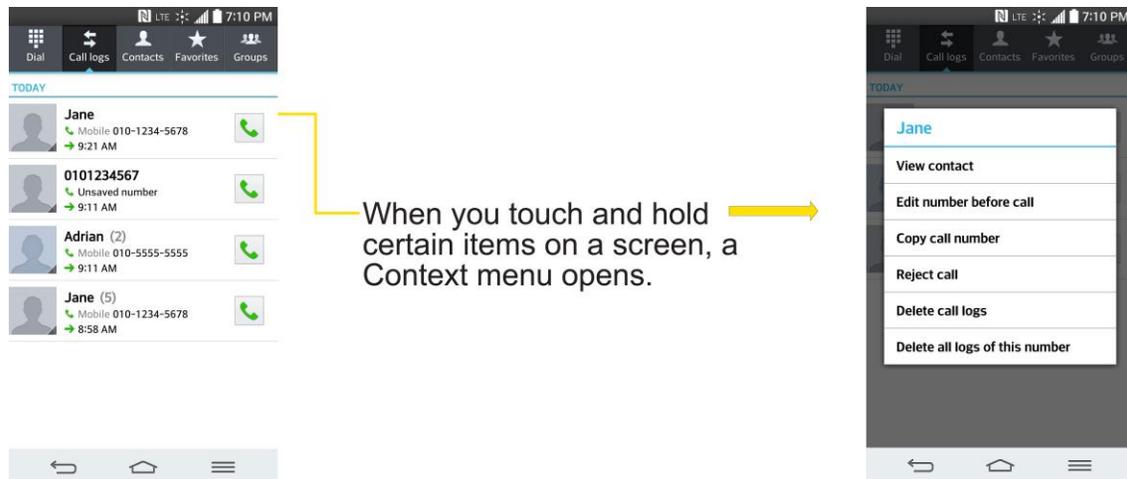

Select Menu Items

To select a menu or option, simply tap it. If there are more menus/options than can fit in a screen, slide the screen up to display more menus/options.

For example, to set the phone to play tones when dialing numbers on the dial pad:

1. Tap  > .
2. Tap **System settings**.
3. Tap **Sound**.
4. Slide the screen up to display more menus.
5. Tap **Touch feedback & system**.
6. Tap **Dial pad touch tones** to checkmark it.

For the purposes of this guide, the above steps condense into:

- Tap  >  > **System settings** > **Sound** > **Touch feedback & system** > **Dial pad touch tones**.

Back Up Within a Menu

- Tap  to back up within a menu.
- or –
- Tap  to return to the Home screen.

Notifications Panel

Notification icons report the arrival of new messages, calendar events, alarms, as well as ongoing events, such as when you are on a call.

When you receive a notification, text appears briefly and the notification icon will be displayed in the Status Bar. For descriptions of the various notification icons, see [Status Bar](#).

You can open the Notifications Panel to view a list of all recent notifications. Depending on your settings, you may hear a notification sound and the phone may vibrate.

Note: [Adjusting sound volume and other general notifications settings is described in Sound Settings.](#)

Applications whose activities produce notifications, such as Gmail and Google Hangouts™, have their own settings, which you can use to configure whether, and how, they send notifications. See the sections on those applications for details.

Open Notifications

- Touch and drag the Status Bar to the bottom of the screen.

The Notifications Panel displays the Quick Settings and a list of your current notifications, organized into ongoing and event-based notifications.

Respond to Notifications

1. Open the Notifications Panel. Your current notifications are listed in the panel, each with a brief description.
2. Tap a notification to view it. The Notifications Panel will close and the application that corresponds to your response will open.

For example, new voicemail notifications dial your voicemail box, and network disconnect notifications open the list of configured networks so you can reconnect.

Clear Notifications

1. Open the Notifications Panel.
2. Tap **Clear** at the top right of the panel.

All event-based notifications will be cleared; ongoing notifications will remain in the list.

Close Notifications

- Touch and drag the tab at the bottom of the Notifications Panel to the top of the screen.

– or –

Tap . (The panel will also close when you tap a notification.)

Home Button

The Home Button takes you back to your default Home screen canvas (of the 7 total available canvases). Tap  to access your main Home screen.

Back Button

The Back Button returns you to the previously active screen. If the on-screen keyboard is currently open, the Back Button  closes the keyboard.


Touchscreen Navigation

Your device is a touch-sensitive phone which allows you to select an on-screen option with a single touch and to easily scroll through long lists. Simply slide up and down through the display with your fingertip.

Your touchscreen provides an excellent way to interact with and use your Android phone. With the touch of your finger, you can access available applications, make menu selections, and access data saved to your phone. The following terms are used for describing the different available actions using the touchscreen:

- **Tap:** A single finger tap selects items, links, shortcuts and letters on the on-screen keyboard.
- **Touch and hold:** Touch and hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a contact's available options, touch and hold the contact in the Contacts list until the context menu opens.
- **Drag:** Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them, as described in [Add and Remove Widgets on the Home Screen](#), or drag the Notifications Panel open, as described in [Notifications Panel](#).
- **Swipe or slide:** To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you can slide the screen up or down to scroll through a list, or browse through the different Home screens by swiping from left to right (and vice versa).
- **Double-tap:** Double-tap to zoom on a web page or a map. For example, quickly double-tap a section of a web page to adjust that section to fit the width of the screen. You can also double-tap to zoom in and out when taking a picture (using the Camera), and when using Maps.
- **Pinch-to-Zoom:** Use your index finger and thumb in a pinch or spread motion to zoom in or out when using the Browser, Maps, or browsing pictures.

- **Rotate the screen:** From many applications and menus, the orientation of the screen adjusts to the phone's physical orientation. (See [Change the Screen Orientation.](#))

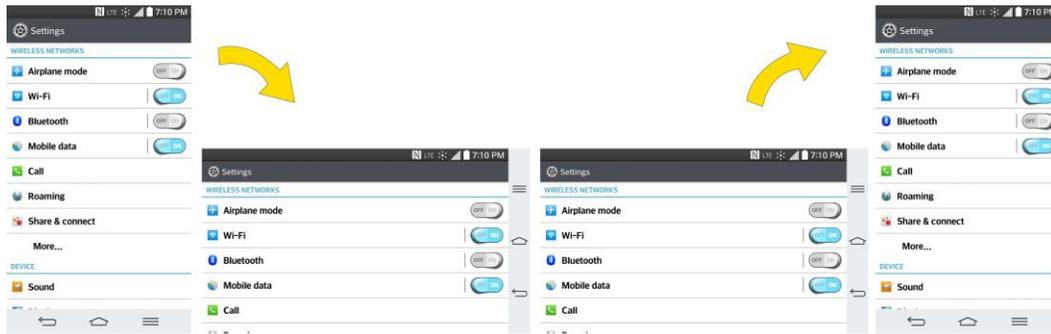

Rotate the device counter-clockwise for landscape orientation.

Rotate the device clockwise for portrait orientation.

Your Home Screen

The Home screen is the starting point for many applications and functions, and it allows you to add items like application shortcuts, or Google widgets to give you instant access to information and applications. This is the default canvas and accessible from any menu by tapping .

Home Screen

On the Home screen, you can view Quick Keys at the bottom of the screen. The Quick Keys and application icons provide easy, one-tap access to the functions you use the most.



Status Bar

Shows device status information including the time, signal strength, battery status, and notification icons.

Application Icons

Tap an icon (application, folder, etc.) to open and use it.

Applications Key

Tap to open the Applications screen to view installed applications.

Phone Key

Tap to open the dial pad. Also provides additional tabs to access Call logs, Contacts, Favorites, and Groups.

Menu Button

Home Button

Back Button

To return to the Home screen:

- Tap  at any time, from any application

Extended Home Screen

The operating system provides multiple Home screen canvases to provide more space for adding icons, widgets, and more.

- Slide your finger left or right across the Home screen. The default canvas is in the center with three extension canvases on either side of it. (For more information on sliding, see [Touchscreen Navigation](#).)



Location Indicator

The white bar at the bottom of the screen indicates which Home screen canvas you are viewing.

Use the Applications Key

All of your phone's applications are located within the Applications screen. This key accesses shortcuts to your currently available applications.


Note: The Applications screen houses all default and downloaded applications (installed from Play Store).

1. Tap  >  to open the Applications screen.
 - To close the Applications screen, tap .
2. Scroll left or right through the list and tap an icon to launch the associated application.

Applications: How to View, Open and Switch

All of the applications on your phone, including any applications that you downloaded and installed from Play Store or other sources, are grouped together on one Applications screen that you access from your Home screen. If you have more applications than you can currently see on the Applications screen, slide the screen left or right to view more.

The Applications screen contains all of the phone's applications (though not downloaded widgets and other downloaded material that isn't an application), including the Alarm/Clock, Browser, Calculator, Camera, Play Store, YouTube, Voice Search, and much more.

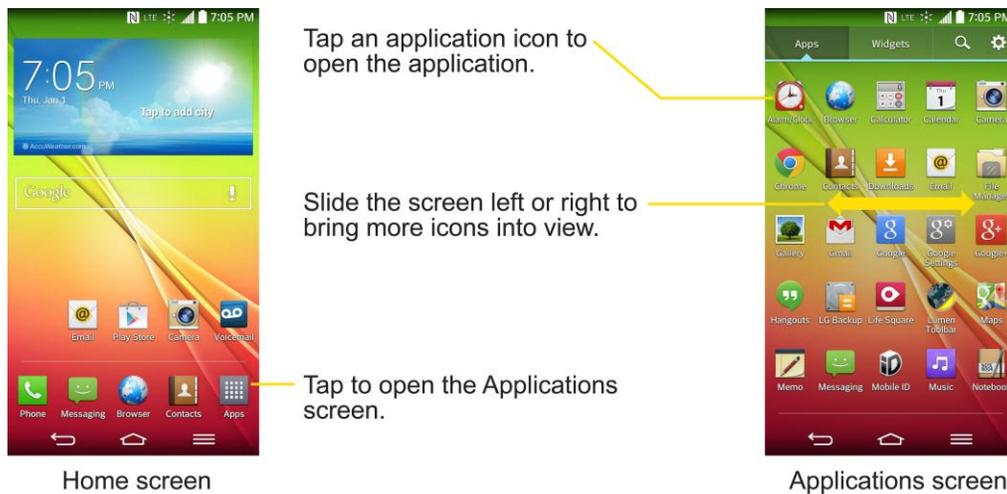

Open the Applications Screen

- Tap .

Close the Applications Screen

- Tap .

Note: The Applications screen closes automatically when you tap an icon to open its application. Dragging an icon onto your Home screen also closes the Applications screen automatically.

Open and Switch Applications

Multi-tasking is easy with Android™. Opened applications can keep running in the background when you open another application. There's no need to quit an application before opening another. You can easily switch among several opened applications. Android manages each application, pausing and starting them as needed to ensure that unused applications don't waste your phone's resources.

To open an application:

- Simply tap its icon on the screen.

Tip: You can customize your Home screen with shortcuts to the applications you use most often. Applications are located on the Applications screen, but you can add an application shortcut to your Home screen for faster access. No matter where the icon is, on the Applications screen or your Home screen, just tap it to open and use it. See [Add Application Icons to the Home screen](#) for more information.

To open multiple applications:

1. Tap an application icon to open it.
2. Place three fingers on the screen and slide to the left.

Note: See [Slide Aside](#) for information on turning this feature on and off.

3. Tap  and tap the icon for the other application you want to open.

– or –

Simply tap the icon if the application you want is already on your Home screen.

To switch between multiple applications:

1. After opening multiple applications using the Slide Aside feature, place three fingers on the screen and slide to the right.

– or –

Touch and hold . A list of previews of applications that you've used recently is displayed.

2. Tap the application icon you want to open.

– or –

Tap  to return to the current application.

Note: Swipe any application preview to remove it from the recently used apps screen.

Add Application Icons to the Home Screen

Customize your Home screen with shortcuts to the applications you use most often.

1. Tap  > .
2. Touch and hold the application icon you want to add to your Home screen.
3. Lift your finger to place the app on your Home screen, or drag the icon to where you want it on the screen, then lift your finger.

Customize Your Home Screen

You can customize your Home screen when you do the following.

- Create Shortcuts

- Add Widgets
- Create Contact shortcuts
- Change the Background (Wallpaper)
- Customize Application Icons

Create Shortcuts

Shortcuts are different from the Home screen Widgets. Shortcuts can access a specific contact, activate a feature, action, or launch an application.

To add a shortcut from the Applications screen:

1. Tap  to access the Home screen.
2. Select a location (canvas) for your new shortcut by scrolling across your available canvases until you reach the desired one. (See [Extended Home Screen](#).)
3. Tap  to reveal all your current applications. By default, the applications are listed in a grid view.
4. Scroll through the list and locate your desired application.
5. Touch and hold the on-screen icon. This creates an immediate shortcut of the selected icon and closes the Applications screen. The new shortcut then appears to hover over the Home screen.

Note: The same shortcut can be added to any of the available canvases (Home or Extended). The application you add to the canvas will still appear within the Applications screen.

6. While holding the on-screen icon, position it on the current canvas. Once complete, release the screen to lock the shortcut into its new position.

To add a shortcut via the Home screen:

1. Tap  to access the Home screen.
2. Touch and hold on an empty area of the screen.
3. Tap either **Apps** or **Widgets**.
4. Touch and hold a selection from the list and drag it to your Home screen.

To delete a shortcut:

1. Tap  to access the Home screen.

2. Touch and hold the desired shortcut. This unlocks it from its location on the current screen.
3. Drag the icon over **Remove**  and release it.

Add and Remove Widgets on the Home Screen

Widgets are self-contained applications that can be accessed through your Applications screen or on the Home or Extended screens. Unlike a shortcut, this Widget appears as an on-screen application.

To add a Widget:

1. Tap  to access the Home screen.
2. Touch and hold on an empty area of the screen.
3. Tap the **Widgets** tab.
4. Touch and hold an available Widget and drag it to your current screen.

To remove a Widget:

1. Go to the Home screen canvas on which the widget is located.
2. Touch and hold the widget. This unlocks it from its location on the current screen.
3. Drag the widget over **Remove**  and release it.
 - This action does not delete the Widget. It just removes it from the current canvas.

To place a Widget onto a different screen:

1. Touch and hold the widget you want to move.
2. Drag the widget to the edge of the screen (the left side if moving to a screen located on the left, right side if moving to a screen located on the right).
3. After about one second, the current screen will change. Repeat until you get to the desired screen.

Change the Phone's Wallpaper

You can select and assign your phone's background wallpaper.

1. From the Home screen, tap  > **Home screen settings** > **Wallpaper**.

– or –

Touch and hold an empty spot on the Home screen, then tap the **Wallpapers** tab.

2. Tap **Gallery**, **ID wallpapers**, **Live Wallpapers**, **Multi-photo**, **Photos**, or **Wallpaper gallery**.
 - **Gallery** to use a picture saved on your phone as a wallpaper. You can crop the picture before setting it as a wallpaper.
 - **ID wallpapers** to open the available wallpapers that were included in your Boost ID pack.
 - **Live Wallpapers** to open a list of animated wallpapers installed on your phone. Live wallpapers can be animated or even interactive. More Live wallpapers are available in the Play Store.
 - **Multi-photo** to combine and use pictures saved on your phone as a wallpaper. You can crop the picture before setting it as a wallpaper.
 - **Photos** to use a picture saved on your phone as a wallpaper. You can crop the picture before setting it as a wallpaper.
 - **Wallpaper gallery** to open a screen of wallpaper images saved on your phone. Slide the thumbnail images left and right to view the available images.
3. Depending on the type of wallpaper, tap **Crop**, **Set wallpaper** or **Apply**.

Customize Applications Icons on the Home Screen

You can create your own custom application icon(s) using the images in your Gallery. Your customized application icon(s) are only applied to icons on your Home screen. The Applications screen is not affected.


1. Touch and hold an application icon until it's unlocked from its current position. Then drop it on the screen. The editing icon  will appear in the upper right corner of the application.



2. Tap the application icon again and select a preloaded icon sign from the **Theme icon** tab.

– or –

Tap the **Photo icon** tab to create a new icon using images from the Gallery.

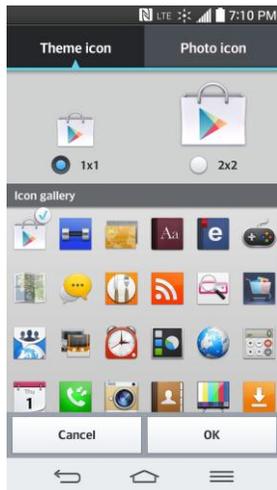

Tip: Tap **1x1** or **2x2** to change the icon size.

Access Recently-Used Applications

Your phone keeps a running list of your most recently used applications.

1. Touch and hold  to open the recently-used applications window.
2. Tap an icon to open the related application.

Slide Aside

Slide Aside allows you to quickly switch between three open applications (or tasks) using a three finger gesture.

1. Place three fingers on the screen which you are currently working on and slide the screen to the left. The current screen is saved and you can perform another task.
2. To reopen the saved screen and continue to use the saved apps, place three fingers on the screen and slide it to the right.
3. Tap the app preview for the app you wish to use.

Note: You can save up to 3 (three) apps at a time.

Tip: Please be careful not to place another finger or palm on the screen. Drag the saved apps up or down to delete them.

Note: Some apps (or screen) do not support the Slide Aside feature.

Tip: To activate or deactivate the Slide Aside feature, tap  >  > **System settings** > **Slide Aside**.



Home Screen Clean View

You can see the wallpaper without items on the Home screen by pinching out. Pinch in or tap  to see applications and widgets again.



Quick Access

To view the quick access items, touch anywhere in the front key area and drag up. The following options are available: Voice Mate, Google Search, and QuickMemo.



Change the Screen Orientation

This phone is capable of changing the orientation of screen content when the orientation of the phone itself has changed. The phone's built-in accelerometer senses movement and changes its angle/orientation. Note that some of the screens, applications and widgets do not support orientation changes.

The automatic screen orientation feature can be manually enabled to change the orientation for all enabled screens when rotation is detected.

Note: An example of a screen that automatically re-oriens by moving the phone is the Messaging screen. This only requires you turn the phone to a horizontal position.

1. Tap  >  > **System settings** > **Display**.
2. Tap **Auto-rotate screen** to enable (a blue checkmark displays) or disable the screen auto-rotation.

Enter Text With the On-screen Keyboard

The on-screen keyboard displays automatically when you tap a text entry field. To manually display the keyboard, simply tap a text field where you want to enter text.

By default, there are 3 types of touchscreen keyboards: **QWERTY keyboard**, **Phone keyboard**, and **Handwriting**.

To change the keyboard between **QWERTY keyboard** and **Phone keyboard**.

1. Touch and hold  and tap .
- If you see the  key, touch and hold it and select .

Note: The default key is . Once you select another option, that option key is displayed on the keyboard.

2. Tap **Input language and type**, then tap  next to the desired input language.
3. Tap the desired keyboard type and tap  repeatedly to go back to the entry screen.

QWERTY Keyboard

Letters and Numbers Entry Keyboard

Shift Key


Tap once to capitalize the next letter you type. Tap again to turn on CAPS lock. And tap again to turn off CAPS lock.

Symbols Key

Tap to change input to the symbol entry.

Keyboard Style/ Input Language Key

Tap to set the keyboard style and the language.

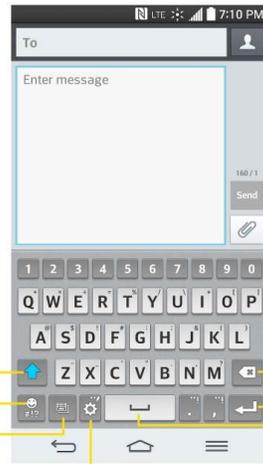

Delete Key

Tap to delete characters to the left of the cursor.

Enter Key

Tap to move to a new line of text.

Space Key

Tap to enter space.

Voice input/Handwriting/ Clip Tray/Settings Key

Tap and hold to select entering text by handwriting or voice or clip tray and access the LG Keyboard settings.

Symbols and Numbers Entry Keyboard

Alt Key


Tap to access additional symbols until you see the one you want.

Letters Key

Tap to return to letters mode.

Emojis Bar

Tap to enter emojis.

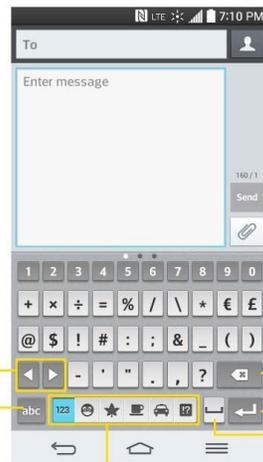

Delete Key

Tap to delete characters to the left of the cursor.

Enter Key

Tap to move to a new line of text.

Space Key

Tap to enter space.

1. Tap a text field where you want to enter text.
2. Enter the desired text.
 - To enter numbers or symbols, tap .

- To enter letters again, tap .


Note: If you do not want the screen to change orientations automatically, uncheck the Auto-rotate screen. Tap  >  > **System settings > Display** and deselect **Auto-rotate screen**.

3. When you have finished typing, tap  to close the keyboard.


Phone Keyboard

To enter text, tap the key labeled with the desired letter until it appears on the screen. For example, tap  once for "a", twice for "b", or three times for "c".

Letters and Numbers Entry Keyboard

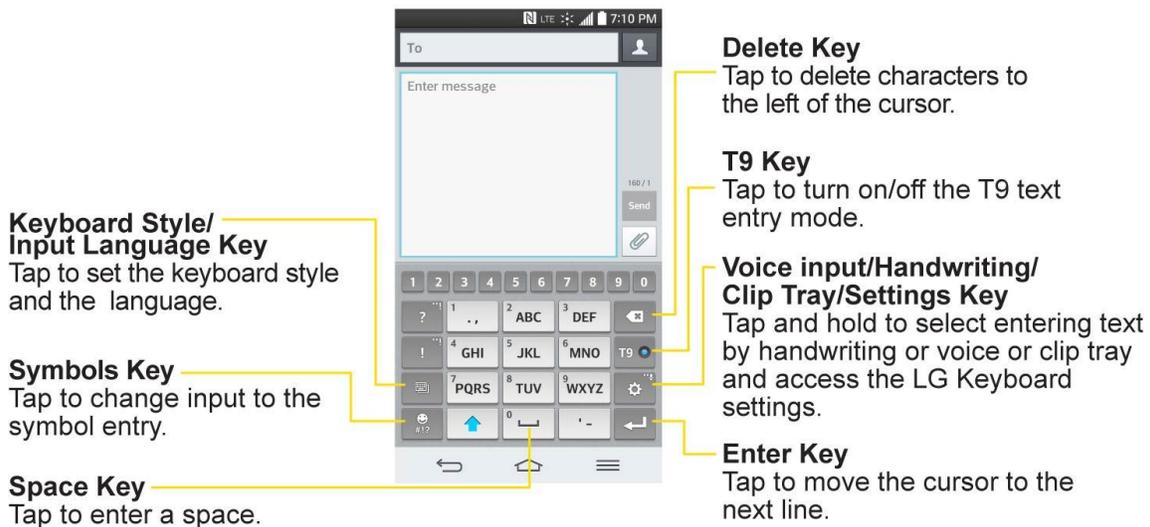


Symbols and Numbers Entry Keyboard

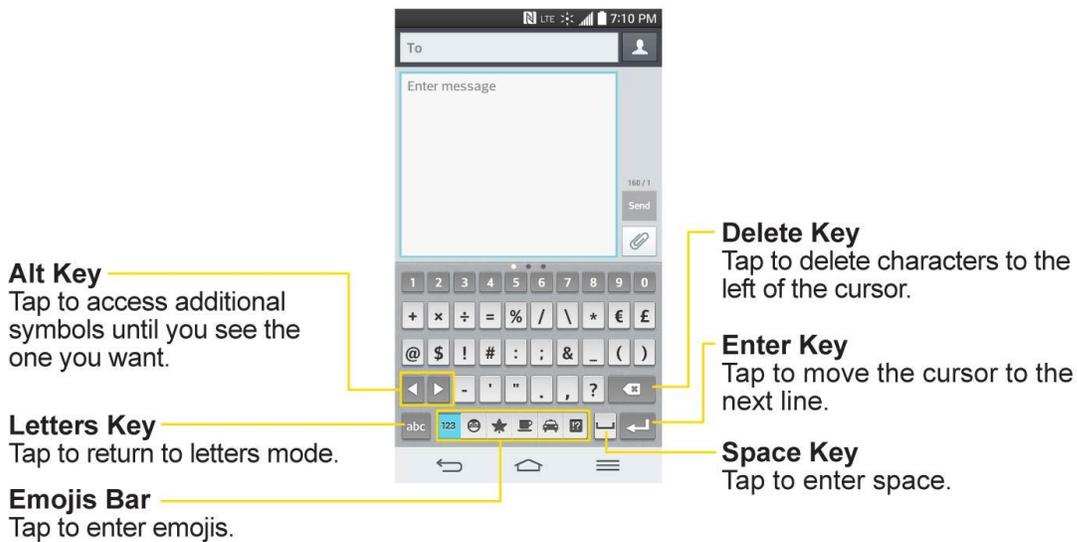

Handwriting

Write the text with your fingertip. The touchscreen converts your movements into characters. To access handwriting mode, touch and hold  (or whichever key is displayed), then tap .

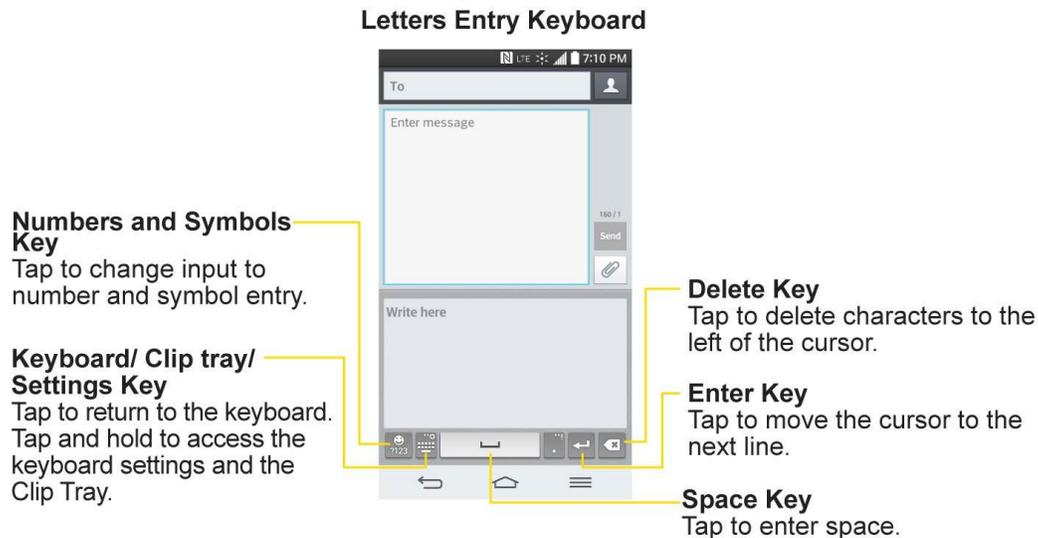

Tips for Editing Text

Your phone gives you many options to make entering text easier, including copying, cutting, and pasting text, using voice-to-text input, customizing the user dictionary, using predictive text, and more.

To cut/copy and paste:

1. Touch and hold a word to highlight it.
2. Drag the blue highlight markers to highlight the text you want.

– or –

To select all the text, tap **Select all** in the context menu.

- To cancel the selection, simply tap unselected text or empty area.
3. Tap **Cut** or **Copy** in the context menu.
 4. Place the cursor on the location where you want to paste the text.
 5. Touch and hold the text field and tap **Paste**. The text that you pasted also remains in the phone's memory (temporarily), so you can paste that same text in another location.


Search Your Phone and the Web

You can search for information on your phone and on the web using the Search application. Some applications, such as Gmail, Contacts, and Browser have the ability to search contents within those specific applications. You can conduct the search by typing in the search terms or saying what you're looking for. Typing can be useful because the search application can provide suggestions so you don't necessarily have to type out your full request.


Phone and Web Search Using Text Entry

You can search on your phone and on the web by entering text.

1. From the Home screen, tap the Search Widget **Google**. (For information on how to add widget, see [Add and Remove Widgets on the Home Screen.](#))

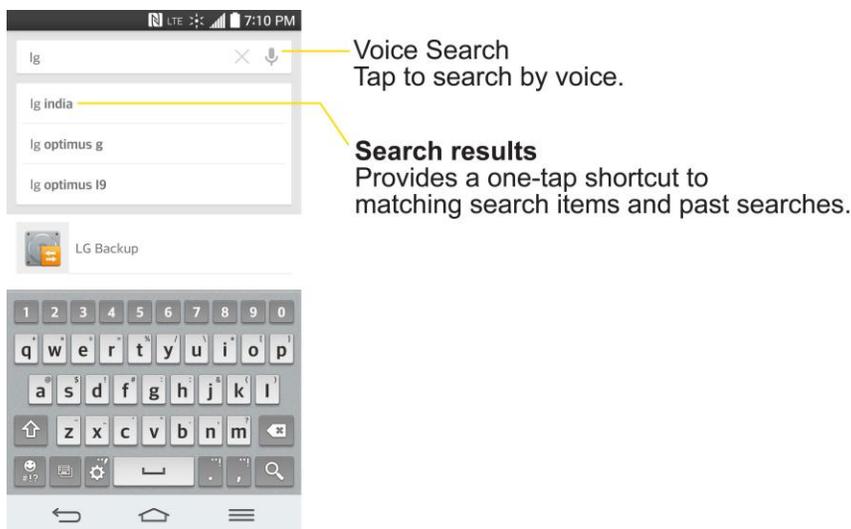

2. Enter the text you're searching for in the search field.

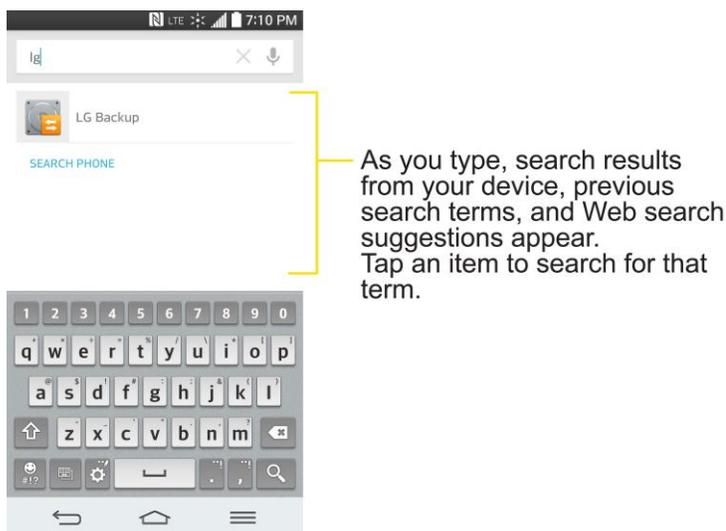

- You can use the Search preferences to configure some aspects of Google web search (for example, whether it makes suggestions below the search field as you type), and what phone features you want to include in searches.

To access these settings, tap  > **Settings**.

3. Tap  to search for the entered text.

– or –

If what you want to search for appears in the suggestions list, tap that item to conduct the search.

4. If the phone asks you to select which browser to use, tap your preference. Then, tap **Always** to keep this preference setting.

Phone and Web Search Using Voice Command

You can search on your phone and on the web by voice command.

- From the Home screen, tap the  on the Google Search Widget.

For more information on Google Search, tap  > **Help & feedback** from the Google search screen.

Using Clip Tray

Easily access the contents you store in the Clip Tray whenever and wherever you want. You can copy images or texts and keep them in the Clip Tray. You can then paste them whenever and wherever you want.

- Tap and hold text or an image while editing and then tap **Copy to Clip Tray**.
- Tap and hold a text input field and select **Clip Tray**. You can also access the Clip Tray by tapping and holding , then tapping .

Tip: You can save up to 20 items in the Clip Tray. To delete an item, touch and hold an item in the Clip Tray and then tap .

Note: This function may not be supported in the downloaded apps.

Text Link


Text Link recommends apps related to text in messages or to other text you've selected. It connects directly to the Calendar, Contacts, Phone, Messaging, Email, Browser, Maps, YouTube, Calculator, and more.

Note: If your phone is set to English or Korean, Text Link performs more functions than in other language settings.

Note: Overly long sentences are subject to limitations and arithmetic operators (such as +, -, * and /) start the Calculator.

Tip: If Text Link is not linked to an app, the Browser can be used for searching.

To use Text Link:

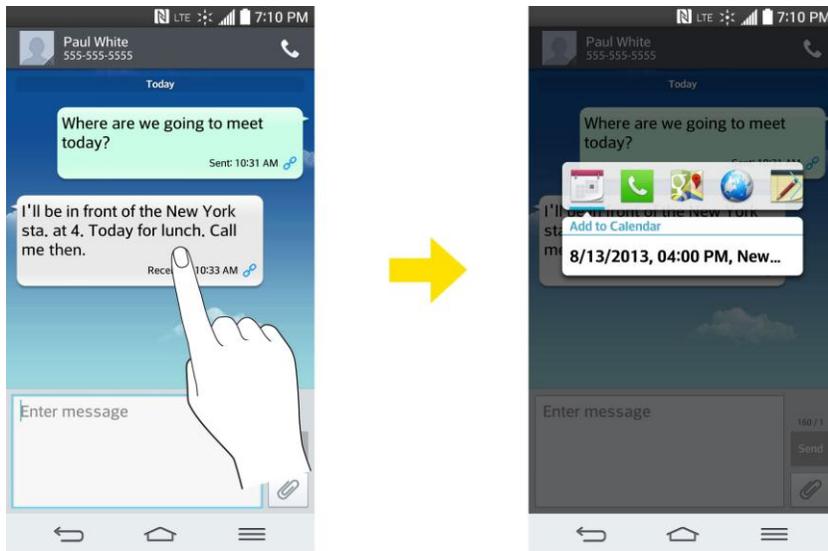

- Tap a message bubble with the  icon.
- Highlight text on a webpage or emails and select **Text Link**.
- Tap **Share** and select **Text Link**.

Phone Calls

With the Boost National Network and your phone, you can enjoy clear calling across the country.

HD™ Voice

Your phone is also HD Voice enabled, which means you can enjoy unparalleled voice quality in areas with HD Voice service. Experience the crystal clear difference of HD Voice from Boost on calls between Boost customers each using an HD Voice enabled phone while in areas with available HD Voice service.



Note: HD Voice service is available in select markets. Visit boostmobile.com for more information.

Make Phone Calls

There are several convenient ways to place calls from your phone.

Call Using the Phone Dialer

The most "traditional" way to place a call is by using the phone's dialer screen.

1. Tap  > .
2. Enter a phone number using the on-screen dialpad and tap 
 - If you enter a wrong number, tap  to erase digits one by one.
 - To erase the entire number, touch and hold .



- You can open other applications during a call. The  will appear in the Status Bar while the call is underway.
- Press the **Volume Up/Down Buttons** to adjust the call volume.
- Use the on-screen buttons to add another call, put a call on hold, to use the speakerphone, and for other options, as described in [In-Call Options](#).

3. Tap  to end the call.

Tip: To redial your last outgoing call, follow step 1 to access the Dialer, tap the **Call logs** tab, locate the call entry and tap .

You can also make calls from your [Contacts List](#), from the Call logs, and using [Voice Mate](#).

Dialing Options

After entering numbers with the dialpad, you can use the following dialing options.

Tap  to view the following options when you entered any numbers:

- **Add to Contacts:** Tap to add the entered number as a new contact or to an existing contact entry. (See [Save a Phone Number](#).)
- **Speed dial:** Tap to access the speed dials list. (See [Set Up Speed Dialing](#).)
- **Add 2-sec pause:** Enter digits and select this option to introduce a two-second pause before the following sequence of digits is dialed by the phone. (See [Dial and Save Phone Numbers With Pauses](#).)
- **Add wait:** Enter digits and select this option to have the phone dial the preceding set of digits first, and then dial the following sequence of digits when you tap **Yes** on the pop-up screen. (See [Dial and Save Phone Numbers With Pauses](#).)

- **One-handed operation:** Allows you to dial a phone number using one hand. Tap  to switch to the right-hand dialpad and  to switch back to the left-hand dialpad.
- **Edit tabs:** Allows you to select which tabs to display and rearrange the order.
- **Call settings:** Tap to access the Call settings screen. (See [Call Settings](#).)

Missed Call Notification

A missed call icon displays when you do not answer a call. When you do not answer an incoming call,  is displayed in the Status Bar.

1. Touch and drag the Status Bar to the bottom of the screen to open the Notification Panel.
2. Tap the missed call notification. The **Call logs** screen will be displayed. To dial the phone number, tap .

Call Emergency Numbers

You can place calls to 9-1-1 even if the phone's screen is locked or your account is restricted.

Note: When you place an emergency call, your phone automatically enters Emergency mode.

To call the 9-1-1 emergency number when the phone's screen is locked with a screen lock:

1. Touch and hold  for 2 seconds.
2. Tap  next to the 9-1-1 entry to place the call.

To call the 9-1-1 emergency number normally or when your account is restricted:

1. Unlock the screen. For more information, see [Wake Up the Screen](#).
2. Tap  > .
3. Tap    .

Enhanced 9-1-1 (E911) Information

This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available. When you place an emergency 9-1-1 call, the GPS feature of your phone seeks information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

Important: Always report your location to the 9-1-1 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your phone.

In-Call Options

Once you initiate a call, you will see these on-screen options.

- **Add call** to initiate a 3-way call.
- **End** to end the call.
- **Dialpad** to display the dialpad.
- **Bluetooth** (Only available when a Bluetooth headset is connected to your phone) to conduct the call via the Bluetooth headset for hands-free conversation. For details about pairing the phone with a Bluetooth headset, see [Pairing Bluetooth Devices](#).

Note: When using the Bluetooth headset during a call, the Ongoing Call notification icon is blue in the Status Bar.

- **Mute** to mute the microphone during a call. The Mute button lights up to indicate the microphone is muted. To unmute the microphone, tap **Mute** again.
- **Speaker** to turn the speakerphone on or off. The Speaker button lights up to indicate that the speakerphone is on.

WARNING: Because of higher volume levels, do not place the phone near your ear while using the speakerphone.

Dial and Save Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:

- **2-Second Pause** automatically sends the next set of numbers after two seconds.
- **Hard Pause (Wait)** sends the next set of numbers when you tap **Yes** on the pop-up.

Note: You can have multiple pauses in a phone number and combine two-second and hard pauses.

To dial or save phone numbers with pauses:

1. Enter the phone number.
2. Tap  > **Add 2-sec pause** or **Add wait**.
3. Enter the additional numbers.
4. Tap  to dial the number.

– or –

Tap  > **Add to Contacts** to save the number in your Contacts.

Note: When dialing a number with a hard pause (Wait), tap **Yes** on the pop-up to send the next set of numbers.

Dial From the Contacts List

You can dial directly from your Contacts list.

1. Tap  >  >  **Contacts**.

– or –

Tap  >  >  **Contacts**.

2. Find a contact to call and tap it to view the contact's information, then tap  next to the desired number.

Use Direct Dialing

With Direct Dialing, you are able to directly save a contact to your Home screen.

1. Touch and hold an empty area on a Home screen.
2. Tap the **Widgets** tab.
3. Scroll right and tap **Direct dial**.
4. Tap a contact from your Contacts List. The contact will appear on your Home screen.

To use Direct Dial:

- Simply tap the contact on the Home screen.

Plus (+) Code Dialing

When placing international calls, Plus Code Dialing automatically enters the international access code for your location (for example, 011 for international calls made from the U.S.).

1. In the Dial screen, touch and hold  until you see a “+” on the display screen.
2. Dial the country code and phone number and then tap . The phone automatically prepends the access code for international dialing, followed by the country code and phone number.

Receive Phone Calls

When you receive a phone call, the Incoming Call screen opens with the caller ID and any other available information (such as the caller's name, if saved in the Contact's list). The most recent incoming calls are recorded in the Call logs. (See [Call Logs](#).)

Answer an Incoming Call

- If the screen is locked, swipe  in any direction.
- If the screen is unlocked, tap  to answer the call.
- If **Answer an incoming call** is activated in the Gesture setting, bring the phone to your ear (See [Answer an Incoming Call](#)).

If you were already on a call, the first call is placed on hold while you answer the new call. To silence the ringer of an incoming call, press the down Volume Key.

Your phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The backlight illuminates.
- The screen displays an incoming call message.

Reject an Incoming Call

- If the screen is locked, swipe  in any direction.
- If the screen is unlocked, tap  to decline the call.

The caller is sent directly to your voicemail box to leave a message.

End a Call

- Tap .

– or –

If you opened other applications while on a call:

1. Touch and drag the Status Bar to the bottom of the screen.
2. Tap **End call**.

Visual Voicemail

Visual Voicemail gives you a quick and easy way to access your voicemail. Now you can find the exact message you are looking for without having to listen to every voicemail message first. This new feature periodically goes out to your voicemail, and gathers the caller information from all of the current voicemails. It then populates a list with the caller name and number, along with the length of time and priority level of the voicemail message.

Set Up Visual Voicemail

Setting up Visual Voicemail follows many of the same procedures as setting up traditional Boost voicemail. You should set up your Boost voicemail and personal greeting as soon as your phone is activated. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

Note: To set up your traditional voicemail box, see [Set Up Voicemail](#).

1. Tap  >  >  **Voicemail**.
2. Tap **Personalize now** and follow the system prompts to:
 - Create a password (part of standard voicemail).
 - Record your name announcement.
 - Record your greeting.
3. When prompted to enter information, enter your numeric responses.

Important: Voicemail Password – Boost strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

4. Once you have completed the setup process, return to the voicemail page (see step 1).
5. Tap the **Welcome to Voicemail** message on the screen to play a brief explanation of the voicemail services.

Review Visual Voicemail

Visual Voicemail lets you easily access and select which messages you want to review.

1. Tap  >  >  **Voicemail**.
2. Tap a message to review it. The following is a description of the features available while reviewing a voicemail message.
 -  **Timeline** provides a visual timeline for the current message. Touch and drag this bar to scrub through the message to different points.

- Tap  to pause the playback, tap  to resume.
-  **Speaker Off/On** to turn the speakerphone on or off during playback. If the speakerphone feature was enabled within the Voicemail Settings menu, the speakerphone will always be automatically enabled during voicemail playback.
-  **Trash** to move the current voice message to the trash folder.
-  **Call** to call the person who left the voicemail message.
-  **Share** to share the selected message using your favorite services like Email, Messaging, and others.
-  **Reply** to reply to the message. You can then reply to the sender or forward it to anyone with either an email or phone number. This allows you to send this voicemail message to several recipients at the same time. You can tag the reply message for both Urgency and Privacy.
- Tap **Send** to deliver the new message.

Listen to Multiple Voicemail Messages

When you are done listening to a voicemail message you can easily access other voicemail messages without returning to the main voicemail screen.

1. Tap  >  >  **Voicemail**.
2. Swipe your finger left or right to display the next or previous message. It will begin playing automatically.

You can navigate through voicemail messages as frequently as you'd like. You can even move to the next or previous message before you're finished listening to the current one.

Visual Voicemail Options

Use the Menu button to access and configure your Visual Voicemail options.

1. Tap  >  >  **Voicemail**.
2. From this initial screen, you can:
 - Tap  to compose a new voicemail message.
 - Tap **Inbox** to view the voicemail messages in other folder: **Inbox**, **Trash**, **Archive**.
 - Tap  to access **Search**, **Settings**, **Help**, and **Send feedback**.

Configure Visual Voicemail Settings

The Visual Voicemail settings menu lets you access settings for notifications, pictures, greetings, and more.

1. Tap  >  >  **Voicemail**.
2. Tap  > **Settings** and select from the following:
 - **Manage subscription** to subscribe and unsubscribe from the visual voicemail premium monthly subscription service. This may take a minute.
 - **Auto forward to email** to send a copy of new messages to an email address of your choice.
 - **Personalize voicemail** to change your voicemail greeting for incoming calls and update password.
 - **Notifications** to determine how you are notified of new voicemails. Set the notification sound and vibrate option.
 - **Delete messages** to set Visual Voicemail to permanently delete messages from the Trash folder after a specific number of days.
 - **Display name** to enter a name to identify yourself to people when replying or forwarding messages.
 - **Speakerphone** to automatically turn the speaker on or off.
 - **Transcriptions displayed** to transcribe Voicemails from voice to text.
 - **Themes** to choose the type of theme used for the application.
 - **View quick tips tutorial** to view a visual tutorial about Visual Voicemail.
 - **Help** to see the Boost visual voicemail help.
 - **Send feedback** to send some feedback to the Voicemail Feedback team.
 - **Updates** to search for an upgrade to your Visual message software.
 - **About Voicemail** to view build information about the current visual voicemail application.

Change Your Main Greeting via the Voicemail Menu

Your main greeting can be changed directly via the Visual Voicemail system. This direct access saves you from having to navigate within the voicemail menu.

1. Tap  >  >  **Voicemail**.

2. Tap  > **Settings** > **Personalize voicemail**.
3. Tap **OK** to connect to the Boost voicemail system. Follow the prompts to change your current greeting.

Edit the Display Name via the Voicemail Menu

From your Visual Voicemail menu, you can quickly change the name attached to your voice messages.

1. Tap  >  >  **Voicemail**.
2. Tap  > **Settings** > **Display name**.
3. Tap the text field and enter a new identifying name (used to identify you to recipients of your voice messages).
4. Tap **OK** to save your information.

Use Visual Voicemail to Delete Your Messages

1. Tap  >  >  **Voicemail**.
 2. Touch and hold a voicemail entry from the list, select the messages to delete and tap .
- or –
- Open a message and tap .

Voicemail(Traditional)

In addition to [Visual Voicemail](#), your phone and Boost service always offer traditional voicemail service accessed through the phone application.

Set Up Voicemail

You should set up your Boost Voicemail and personal greeting as soon as your phone is activated. Always use a password to protect against unauthorized access. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

1. Tap  > .
2. Touch and hold  to dial your voicemail number.
3. Follow the system prompts to:
 - Create your password.

- Record your name announcement.
- Record your greeting.

Important: Voicemail Password – Boost strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

Voicemail Notification

There are several ways your phone alerts you to a new voicemail message.

- By sounding the assigned ringer type.
- By displaying within the Notifications area of the Status Bar when new unheard voicemail messages are received.

Note: Your phone accepts messages even when it is turned off. However, your phone notifies you of new messages only when it is turned on and you are in a Boost service area.

Retrieve Your Voicemail Messages

You can review your messages directly from your wireless phone (using either traditional voicemail or Visual Voicemail) or from any other touch-tone phone.

Use Traditional Voicemail to Access Your Messages

1. Tap  > .
2. Touch and hold . If prompted, enter your voicemail password.
3. Follow the voice prompts to listen to and manage your voicemail messages.

Use Visual Voicemail to Access Your Messages

1. Tap  >  >  **Voicemail**.
2. Tap an entry to listen to the message.

Note: You are charged for airtime minutes when you are accessing your voicemail from your wireless phone.

Use Another Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, tap the pound key on the phone ().
3. Enter your password.

Phone Call Options

Your phone application provides many useful features and options to help you make the most of your calling experience.

Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.

1. Tap  >  (Tap the **Dial** tab if necessary).
2. Tap   .
3. Enter a phone number and tap .

To permanently block your number, call Boost Customer care.

Call Waiting

When you're on a call, Call Waiting alerts you of incoming calls by sounding a beep instead of a ring. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available).

To respond to an incoming call while you're on a call:

- Before accepting the incoming call, tap and drag one of the following on-screen options:
 - **Answer** to answer the new call. The first caller is placed on hold.
 - **Decline** to send the call to your voicemail box.

To switch back to the first caller:

- From the In-Call options screen, tap **Swap calls** .

Tip: For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing    before placing your call. Call Waiting is automatically reactivated once you end the call.

3-way Calling

With 3-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Tap  >  (Tap the **Dial** tab if necessary).
2. Make your call to the first recipient.

3. Once you have established the connection, tap **Add call** .
4. Enter the second caller's phone number and tap  or select a number from your Contacts. (Your first call is automatically put on hold.)
5. When you're connected to the second party, tap **Merge calls**  to combine both calls into a single 3-way call. If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when you have activated Call Forwarding.

Activate Call Forwarding

1. Tap  >  (Tap the **Dial** tab if necessary).
2. Tap   .
3. Enter the area code and phone number to which you want your calls forwarded.
4. Tap . You will hear a tone to confirm the activation of Call Forwarding and the call will end.


Deactivate Call Forwarding

1. Tap  >  (Tap the **Dial** tab if necessary).
2. Tap     . You will hear a tone to confirm the deactivation and the call will end.

Note: You are charged a higher rate for calls you have forwarded.

In-call Options

While you're on a call, you will see a number of onscreen options. Tap an option to select it.

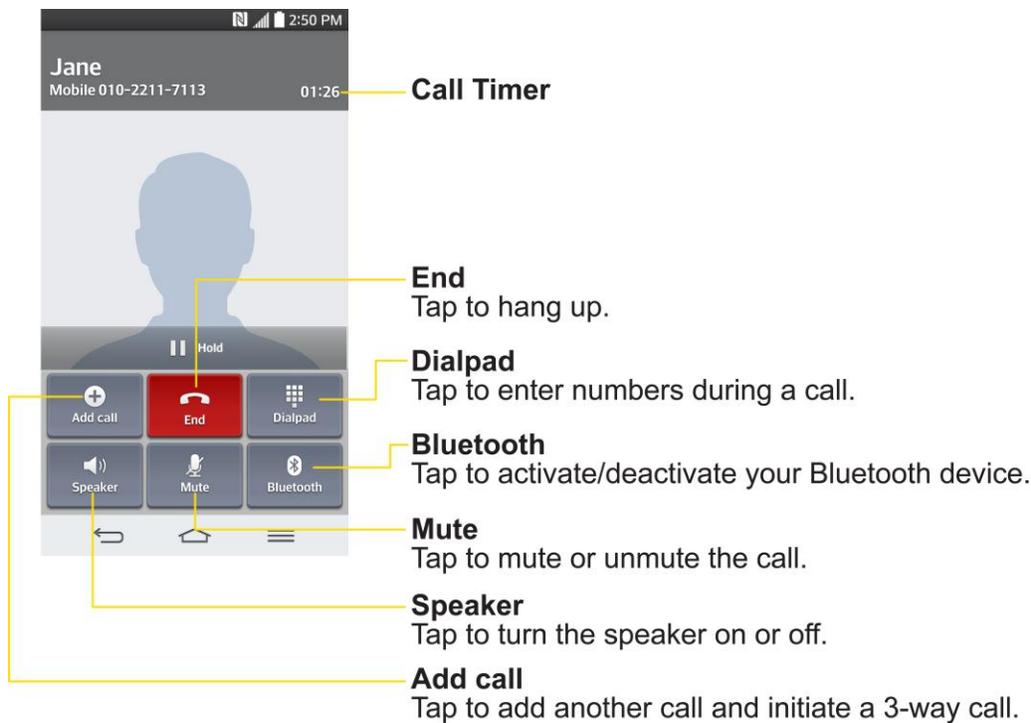

- **Add call** to initiate a 3-way call.
- **End** to end the current call.
- **Dialpad** to display the dialpad to enter additional numbers, for example, an extension or access code.
 - For example: When you call your bank's 800 number, use your dialpad to enter your account number and PIN.
- **Speaker** to route the phone's audio through the speaker (On) or through the earpiece (Off).
 - Activate the speaker to route the phone's audio through the speaker. (You can adjust the speaker volume using the volume buttons.)
 - Deactivate the speaker to use the phone's earpiece.

Warning: Because of higher volume levels, do not place the phone near your ear during speakerphone use.

- **Mute** to mute the microphone during an active call. Tap again to unmute the microphone.
- **Bluetooth** (Only available when a Bluetooth headset is connected to your phone) to route the phone's audio through a connected Bluetooth headset (On) or through the

speaker (Off). For details about pairing the phone with a Bluetooth headset, see [Pairing Bluetooth Devices](#).

- When the call is routed to a Bluetooth headset, the current call area shows the Bluetooth call icon ()

Note: The Headset button is activated to show the current call is routed to the connected Bluetooth headset.

- To route the current call back to the phone, tap **Bluetooth** to temporarily use the phone. Tap it again to route the call back to the connected Bluetooth headset.
- When Bluetooth or the Bluetooth headset is turned off, the call is routed through either the earpiece or speaker and shows ()

Tap  during a call to display a list of additional in-call features. Tap an option to select it.

- **Contacts:** Display your contacts list.
- **Memo:** Create a new memo while remaining on the call.
- **Messaging:** Opens the Messaging screen.
- **Voice enhancement:** Enhances voice clarity in noisy environments so you can hear more clearly.

Set Up Speed Dialing

Your phone can store up to 99 phone numbers in speed dial locations.

To assign a speed dial number to a contact:

1. Tap  > .
2. Touch and hold the contact whose phone number you want to store speed dial locations.
3. Tap **Edit contact**.
4. Tap .
5. Tap a desired speed dial location number from 2 to 99.
6. Tap **Save**.

Note: If you assign a number to an already in-use speed dial location, you will be prompted to confirm that you want to replace the previous speed dial assignment.

Call Logs

The Call Logs tab of the phone application lists all recent incoming, outgoing, and missed calls. It offers a convenient way to redial a number, return a call, or add a number to your Contacts.

Open the Call Logs

- Tap  >  > 

Calls are listed in the Call logs tab, the most recent calls are located at the top of the list. Scroll down to see older entries.


Note: Call logs record only calls that occur while the phone is turned on. If a call is received while your phone is turned off, it will not be included in the call logs. If you return a call from the voicemail menu, it will not be included in your phone's Call logs.

Call Logs Options

Tap an entry to view the date and time of the call and call duration. The following options are available:

-  to make a call.
-  to send a text message.
-  to view the contact entry.

If several calls were made to one number or received by one number, the calls are displayed as one entry. When you tap this entry, the individual call logs are opened.

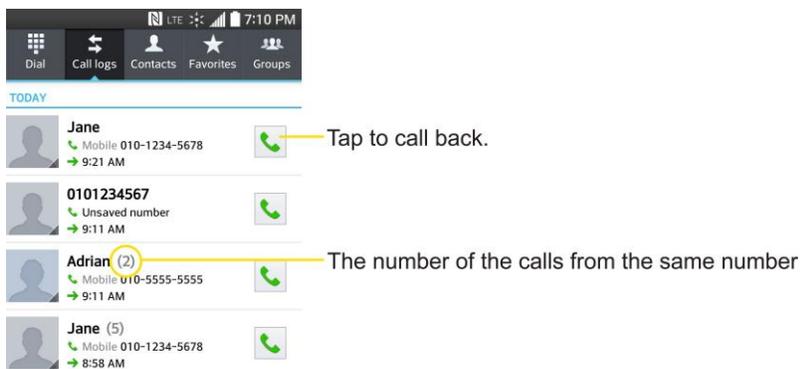

You can also touch and hold the entry to open a menu with more options, to communicate with that contact in other ways.

- **Add to Contacts** (for entries not saved in Contacts) to save the number to Contacts.
- **View contact** (for entries saved in Contacts) to view contact information.
- **Edit number before call** to edit a number before you redial.
- **Copy call number** to copy the call number.
- **Reject call** to add to the call reject list.
- **Delete call logs** to delete all the call logs.
- **Delete all logs of this number** to delete all the logs of this number only.

Make a Call from the Call Logs

- From the Call logs tap  at the right of the entry.

Save a Number from the Call Logs

1. Touch and hold an entry and tap **Add to Contacts**.
2. Tap **New contact**.

– or –

Tap **Update contact**. Search for an existing contact name and tap an existing contact to add the new number to that existing contact.

3. Enter as much information as you want. (For more information about creating and editing contacts, see [Get Started with Contacts](#).)

Note: You cannot save phone numbers already in your Contacts or from calls identified as **No ID** or **Restricted**.

Prepend a Number from the Call Logs

If you need to make a call from the Call logs and you are outside your local area code, you can add the appropriate prefix by prepending the number.

1. Touch and hold an entry and tap **Edit number before call**.
2. Tap the area immediately to the left of the phone number and enter the prefix.
3. Tap  to call the number.

– or –

Tap  > **Add to Contacts** > **New contact** to save the amended number in your Contacts.

Clear the Call Logs

1. From the Call logs, tap  > **Delete all**.
2. If you are certain you want to clear the Call logs, tap **Yes**.

– or –

Tap **No**.

Save a Phone Number

You can store phone numbers and contact entries in your phone. You can also synchronize them with your Google™ Account, Microsoft Exchange account, or other accounts that support syncing contacts. (For more information, see [Get Started with Contacts](#).)

1. Tap  > .
2. Enter a phone number and tap  > **Add to Contacts** > **New Contact**, or **Update contact**.

Search for an existing contact name and tap an existing contact to add the new number to that existing contact.

For more information about creating and editing contacts, see [Get Started with Contacts](#).

Find a Phone Number

Your contacts are displayed alphabetically in a list. It is easy to search for a contact by name.

1. Tap  > .
2. Scroll and search for the contact or start entering the name of the contact you're searching for in the Search field. As you type, contacts with matching names will appear above the keyboard. You can also scroll using the letters along the right side of the screen.
3. Tap a matching contact in the list to open its entry. To dial a number, tap .

Text-to-Speech

The text-to-speech feature allows the phone to provide a verbal readout of on-screen data such as messages and incoming caller information (based on Caller ID).

Text-to-Speech Settings

1. Tap  >  > **System settings** > **Language & input** > **Text-to-speech output**.
2. Configure any of the following Text-to-Speech settings:
 - **PREFERRED ENGINE:** Choose which text-to-speech engine you prefer to use. Tap  to set various engine settings.
 - **Speech rate:** Allows you to adjust the rate at which the displayed text is spoken by the phone. Choose from: **Very slow**, **Slow**, **Normal**, **Fast**, and **Very fast**.
 - **Listen to an example:** Plays a short example of what the text-to-speech feature will sound like on your phone when activated.
 - **Default language status:** Displays the default language used for this feature.

Contacts

The Contacts application lets you store and manage contacts from a variety of sources, including contacts you enter and save directly in your phone as well as contacts synchronized with your Google Account, your PC, compatible email programs (including Exchange Server), and your Facebook friends.

Get Started With Contacts

Use the Contacts application to add, view, and communicate with your family, friends and acquaintances.

Access Contacts

- Tap  >  > .

All of your contacts are displayed alphabetically in a list. If you have a new phone and haven't added any contacts yet, the Contacts application will display hints on how to start adding contacts to your phone.

- To add contacts shortcut to the Home screen, touch and hold an empty spot on one of the Home screen canvases, and tap the **Widgets** tab. Swipe the widgets left or right until you find **Contact** or **Favorite contacts** widget and select it.

The Contacts List

Learn how to view and navigate through your phone's Contacts list.

- Tap  >  > . You will see the Contacts list.

Scroll through the list to view all your contacts. To see a specific entry, scroll to it and touch it.

Tip: If you have a lot of contacts stored, you'll see a slider on the right when you're flicking up or down the list. To go directly to a letter, touch and hold the slider and drag it to a letter.

Contacts List Options

From the Contacts list, tap  to display the following options.

- **Delete:** Allows you to delete contacts.
- **Share:** Allows you to share contacts.
- **Send message:** Allows you to send a message to a contact.
- **Send email:** Allows you to send an email to a contact.


- **Speed dial:** Allows you to add a speed dial to your contacts.
- **Join contacts:** Allows you to join duplicate contacts.
- **Import/Export:** Allows you to import or export contacts to your internal storage.
- **Edit tabs:** Allows you to edit the tabs, including rearranging them.
- **Settings:** Allows you to set various contact settings.

Add a Contact

You can add contacts on your phone and synchronize them with the contacts in your Google Account, Microsoft Exchange account, or other accounts that support syncing contacts.

The Contacts application tries to join new addresses with existing contacts, to create a single entry. You can also manage that process manually.

1. Tap  >  > .
2. Tap  to add a contact.
3. Tap a destination type (**Phone, Google**), if applicable.
4. Tap  to select a picture to display next to the name in your list of contacts and in the Caller ID.
5. Tap the **Name** field and enter a name for the new entry.
6. Tap the **Phone** field and enter a phone number.
7. Tap the label button (to the right of the phone number field) to select one of the following categories: **MOBILE, WORK, HOME, MAIN, WORK FAX, HOME FAX, PAGER, OTHER, CUSTOM.**
8. Tap the **Email** field and enter an email address and select the label from **HOME, WORK, OTHER, CUSTOM.**
9. Tap the **Address** field and enter an address and select the label from **HOME, WORK, OTHER, CUSTOM.**
10. Tap the **Group name** field and select one of the default groups or tap  to create a new group.
11. Tap the ringtone field and select the desired ringtone.
12. Enter information as much as you want and when you're finished, tap **Save**.

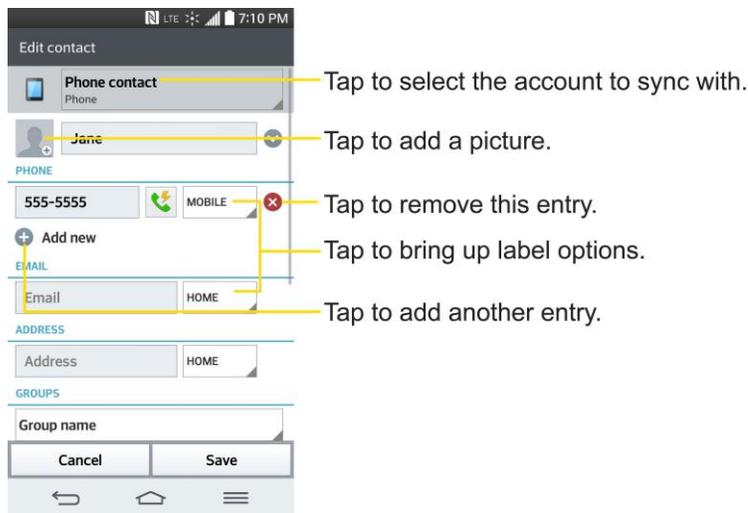

Add a Contact to Your Favorites

Favorites contains a short list of the contacts you communicate with most often.

1. Tap > > .
2. Tap a contact to view its details.
3. Tap the star to the right of the contact's name. (A gold star appears.)

To remove a contact from your favorites list:

1. Tap > > > **Favorites** tab.
2. Tap a contact to view its details.
3. Tap the gold star to the right of the contact's name. The star will turn gray, meaning it has been removed from your Favorites.

Edit a Contacts Entry

You can change or add details saved in your contact entries, such as setting specific ringtones to specific contacts or setting calls from specific contacts to divert to your voicemail. Some contact entries contain information from multiple sources: information that you added manually, information joined from multiple accounts to consolidate duplicates, etc.

If you find duplicate entries in Contacts, you can join them into a single entry. If you find that unrelated contacts were joined in error, you can separate them.

Changes made to information from one source do not automatically change the information on the other sources. For example, if you have information about a contact from a Google Account and an Exchange account and both are configured to sync contacts, changes to the contact

from the Google Account are synced to that account on the web, but the information from the Exchange account will remain unchanged.

For more information about working with multiple accounts.

Edit a Contact

1. Tap  >  > .
2. Touch and hold the contact whose details you want to edit.
3. Tap **Edit contact**.
4. Edit the desired contact information.
5. Tap **Save**.

Change a Contact's Default Phone Number

The default phone number is used when you initiate a call or send a text message using the context menu (by touching and holding a contact).

1. Tap  >  > .
2. Tap the name of a contact to view its details.
3. Touch and hold the phone number you want to set as the contact's default phone number.
4. Tap **Set as default number**. (A checkmark will appear next to the default phone number.)

Select a Ringtone for a Contact

1. Tap  >  > .
2. Tap the name of a contact to view its details.
3. Tap .
4. Tap the **RINGTONE** field and tap a ringtone to select it. Then tap **OK**.
5. Tap **Save**.

Delete Contacts

1. Tap  >  > .
2. Tap the name of a contact.

3. Tap  > **Delete**.
 - If the contact contains information from a read-only account, you will not be able to delete it; you will only be able to change the sync settings for that account or delete the account itself.
 - If the contact contains information joined from a read-only account, a dialog box will inform you that you must separate the contact entry into individual contacts to delete the contact.
4. Tap **Yes** to confirm that you want to delete the contact.

Add a Number to a Contact

1. Tap  >  > .
2. Touch and hold the contact's entry.
3. Tap **Edit contact** in the menu that opens.
4. Tap .
5. Tap the label button to the right of the phone number field and select the relevant label.
 - To create your own label, tap **CUSTOM**.
6. Enter a phone number and tap **Save**.

Edit a Contact's Number

1. Tap  >  > .
2. Touch and hold a contact's entry.
3. Tap **Edit contact**.
4. Tap a phone number to edit.
5. Re-enter or edit the number and tap **Save**.

Assign Direct Dialing Numbers

Besides speed dialing, you are also able to directly save a contact to your Home screen.

1. Tap  >  > .
2. Touch and hold a contact's entry.
3. Tap **Add to Home screen** > **Direct dial**. The contact will be shown on the Home screen.

Note: If there is no available space on a particular Home screen canvas, you must delete or remove an item before you can add another item. In this case, you have the option of switching to another Home screen canvas.

To use direct dial:

Simply tap the contact on the Home screen.

Assign a Picture to an Entry

Assign a picture to display each time a certain contact calls you.

1. Tap  >  > .
2. Touch and hold the contact's entry.
3. Tap **Edit contact**.
4. Tap .
5. Tap **Take photo** to take a new picture. The camera will launch.

– or –

Tap **Select from Gallery** to select a picture from the Gallery.

6. After cropping the picture as you want, (see [Gallery Options](#)) tap **Save**.

Find Contacts by Name

1. Tap  >  > .
2. Tap the **Search contacts** field.
3. Start entering the name of the contact you're searching for. As you type, contacts with matching names will appear below the search box.
4. Tap a matching contact in the list to open its entry.


Communicate with Your Contacts

From the Contacts or Favorites tab, you can quickly call or send a text (SMS) or multimedia message (MMS) message to a contact's default phone number. You can also open a menu to access different methods of communicating with that contact.

The Contacts application shares your contacts with many other applications, such as Gmail™ (see [Gmail](#)) and messaging (see [Text and Multimedia Messaging](#)).

To connect by using Quick Contact for Android™:

1. Tap a contact's picture to open Quick Contact for Android.

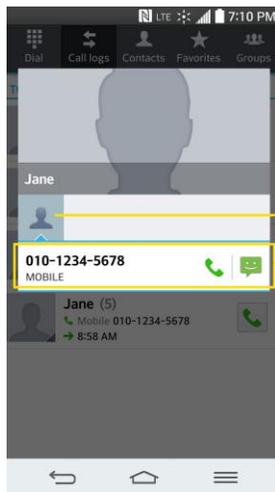

Tap contact's picture.

Tap the icon that corresponds to the method you want to communicate with the contact.

2. Tap the icon corresponding to the type of communication you want to start.

Depending on the contact information saved, the available actions will be displayed above the name.

To communicate with a contact:

1. Tap  >  > .
2. Tap the contact's entry.
3. In the contact's details screen, tap the method you wish to communicate with the contact.
 - Tap  next to the number you want to call to directly.
 - Tap  next to the number you want to message.

Note: Anytime you see the green Call Key  next to a number, such as in your Favorites or Call logs, just tap it to call that number.

To call a contact's default number:

1. Tap  >  > .
2. Tap  next to the contact entry.
3. If multiple numbers are stored, a pop-up window to select the number will open.

(For more information about placing phone calls, see [Make Phone Calls](#).)

For more information about sending text and multimedia messages, see [Text and Multimedia Messaging](#).

Import, Export, and Share Contacts

If you have contacts stored in vCard format on the phone's internal storage, you can import them into your Contacts application on your phone. You can also export contacts in vCard format onto the phone internal storage. Export your contacts to back them up to a computer or another phone.

Import Contacts From Your Internal Storage

You can import contacts from your internal storage directly to your phone.

Note: See [Transfer Via PC or Laptop](#) for details about copying files to your phone from your computer.

1. Copy the vCard files to your phone from your computer.
2. Tap  >  > .
3. Tap  > **Import/Export** > **Import from internal storage**.
4. If you have more than one account on your phone, tap the account into which you want to import the contacts.
5. Tap the files you wish to import and tap **Import** and **Yes** to confirm.

Export Contacts to Your Internal Storage

You can export all of the contacts on your phone, as vCard files. You can then copy this file to a computer or another phone that is compatible with this format, such as an address book application. (See [Transfer Via PC or Laptop](#).)

1. Tap  >  > .
2. Tap  > **Import/Export**.
3. Tap **Export to internal storage**.
4. Tap the contacts you want to export, then tap **Export** and **Yes** to confirm.
5. Enter a file name and tap **OK**.

Share a Contact

You can share a contact with someone by sending it to the person as a vCard file.

1. Tap  >  > .

2. Open the contact you want to share.
3. Tap  > **Share**.
4. Choose the method for sending.

Joining and Separating Contacts

When you have two or more entries for the same contact, you can join them into a single entry. You can also separate contacts that were joined.

1. Tap  >  > .
2. Tap  > **Join contacts**.
3. Select a tab at the top of the screen.
 - Tap **Join suggestion** to select entries to merge.
 - Tap **Joined contacts** to select entries to separate.
4. Checkmark the entry (or entries) you want, then tap **Join** or **Separate**.

Accounts and Messaging

With Boost service and your phone's messaging capabilities, you have the opportunity to share information through many different channels and accounts.

Gmail

This email client is Google's web-based email service.

From a computer, launch your preferred web browser and navigate to www.gmail.com. Depending on your synchronization settings, Gmail (along with calendar events, phone numbers and other contact information) on your phone is automatically synchronized between your phone and your Gmail account on the web.

Create a Google Account

You must create and/or sign into a Google Account to use Gmail™, Google Hangouts™, Google Calendar™, and other Google Apps. Signing into a Google Account is also necessary to download applications from the Google Play Store app to sync your data (if applicable) with the Google servers, and to take advantage of any other available Google services on your phone.

If you don't have a Google Account, you will be prompted to create one. If you have an enterprise account through your company or other organization, your IT department may have special instructions on how to sign into that account.

1. From a computer, or from your phone's Browser, navigate to www.google.com.
2. On the main page, select **Sign-in > Create an account**.
3. Follow the on-screen prompts to create your free account.
4. Log into your provided email address, locate the email from Google, and respond to the new email to both confirm and activate your new account.

Sign into Your Google Account

If you have a Google Account but have not yet signed in with your phone, follow these instructions to sign in to your Google Account.

1. Launch an application that requires a Google Account (such as Play Store or Gmail).
2. Tap **Existing**.

Note: If you do not already have a Google Account, tap **New** and follow the on-screen prompts to create your new account.

3. Tap the **Email** and **Password** fields and enter your information.

4. Tap  > **OK**.
5. Read the disclaimer about Backup and restore and checkmark the box to keep the phone backed up with the Google Account. Then, tap .

Your phone then communicates with the Google servers to confirm your information.

Important: Some applications, such as Calendar, work only with the primary Google Account (the first Google Account set up with your phone). If you plan to use more than one Google Account with your phone, be sure to sign into the one you want to use with such applications first. When you sign in, your contacts, Gmail messages, Calendar events, and other information from these applications and services on the web can be synchronized with your phone. You will be prompted to sign in or to create a Google Account the first time you start an application that requires one, such as Gmail or Play Store.


Access Gmail

Access your personal Gmail account directly on your phone.

When you open the Gmail application, the most recent conversations are displayed in your Inbox.

- Tap  >  >  **Gmail**.

All of your conversations are displayed in your Inbox unless you delete, archive, or filter them. Conversations with new messages are displayed with bold subject lines. To read a message in a conversation, tap the conversation. (See [Read Your Messages](#).)

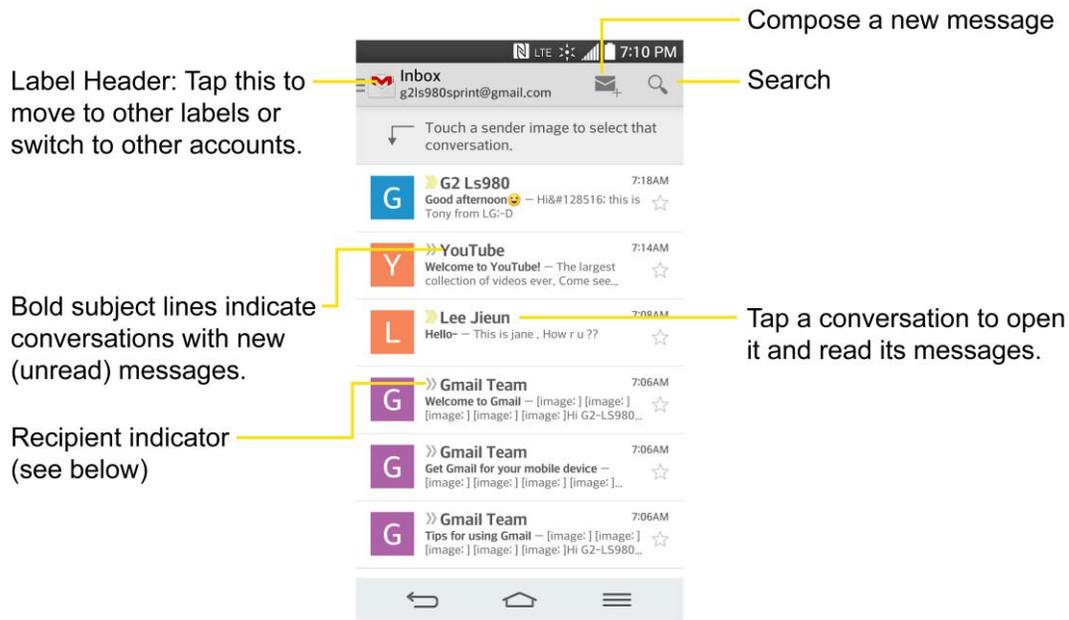

- » Indicates that this message was sent directly to you.
- »» Indicates that you were CC'd on this message.

View Your Gmail Inbox when Gmail is Running

- If you are viewing a message or another label, tap  until you return to your Inbox.

Switch Between Accounts


Gmail displays conversations and messages from one Google Account at a time. If you have more than one account, you can open the Accounts screen to view how many unread messages you have in each account and switch accounts.

- From your Inbox, tap the account name at the top left corner of the screen, then tap the account that contains the messages you want to read.

Read Your Messages

- Tap a conversation that contains the message you want to read.

When you open a conversation, the first unread or starred message is displayed.

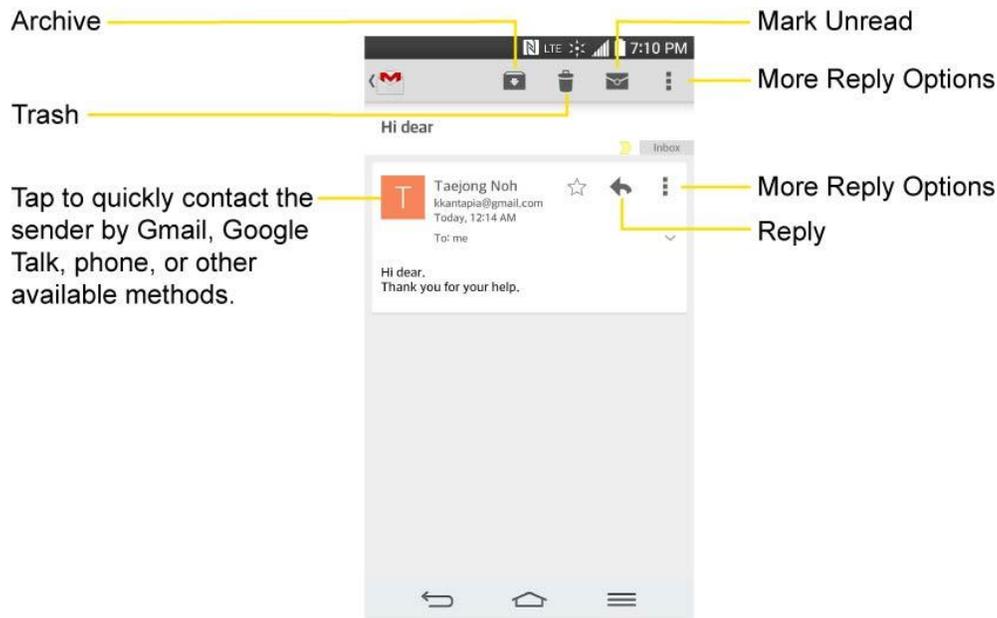

If you want to contact the sender, tap the Contact's picture ID to open Quick Contact. (See [Communicate with Your Contacts](#).) When reading messages in a conversation, you can use the buttons at the bottom of the screen to archive the entire or delete it. After you delete a conversation, you can tap **UNDO** in a dark gray box that appears on the bottom of the screen. You can scroll to the bottom of a message to access buttons for replying to or forwarding the message, as described in [Read and Reply to Gmail Messages](#).

To reread a message:

When you open a conversation, messages that you've already read are minimized into a tab that indicates the number of hidden messages.

1. Tap > > **Gmail**.
2. Tap the conversation you want to view.
3. Tap the contact name to open that message.

When reading a message or when its tab is selected, you can tap to return a read message to the unread state. For example, to remind yourself to read it again later.

Send a Gmail Message

You can compose and send a message to people or groups with Gmail addresses or other email addresses.

1. Tap > > **Gmail**.
2. Tap .

Note: This will start the message from your default Gmail account. To send it from another account, tap the account name at the top left corner of the Inbox, then tap the account you want to use.

3. Enter a recipient's address. As you enter text, matching addresses are displayed from your Contact list. You can tap a suggested address or continue entering text to enter a new one.
4. Tap  > **Add Cc/Bcc** to copy (normal or blind status) recipients, if necessary.
5. Enter a subject for the message in the Subject field.
6. Continue into the next field to compose your email message.
7. Tap  > **Attach file** to add an attachment to the email.
8. Tap  to send the email.

– or –

If you're not ready to send the message, tap  > **Save draft** instead. You can read your drafts by opening messages with the Drafts label.

– or –

Tap  > **Discard** to erase the message (including any saved drafts).

Note: If you aren't connected to a network - for example, if you're working in Airplane mode - the messages that you send are stored on your phone, with the Outbox label until you connect to a network again.

Read and Reply to Gmail Messages

You can continue an email conversation by replying to a message or by forwarding it.

1. On a message, tap  to reply to the message.



- Tap  to select from **Reply all** or **Forward**.
- Replying to or forwarding messages without changing the subject adds your reply to the current conversation. Changing the subject starts a new conversation.

- The message will open in a new screen where you can add or remove addresses, edit the subject, and add or remove text or attachments.
- You can add one or more people to an ongoing conversation by replying to all and then adding the new person's address(es) to the message.
- All of the messages in the conversation are included in the new message; any messages that follow the message you forward are omitted.

2. Tap  to send the email.


Note: You can change the message action after you've started the message. Simply tap the  in the message header to the right of the current message action, then tap the one you want. For example, if you chose **Reply** but decide you want to **Reply all**.

Work with Conversations in Batches

With Gmail, you can archive, label, delete, or perform other actions on a batch of conversations at once.

1. From the Inbox or another label, tap the letter or Contact photo to the left of each message for all the messages you want to include in the batch.

- When you highlight a conversation, the  (**Archive**),  (**Trash**),  (**Read/Unread**), or  (**More**) buttons appear at the top of the screen.

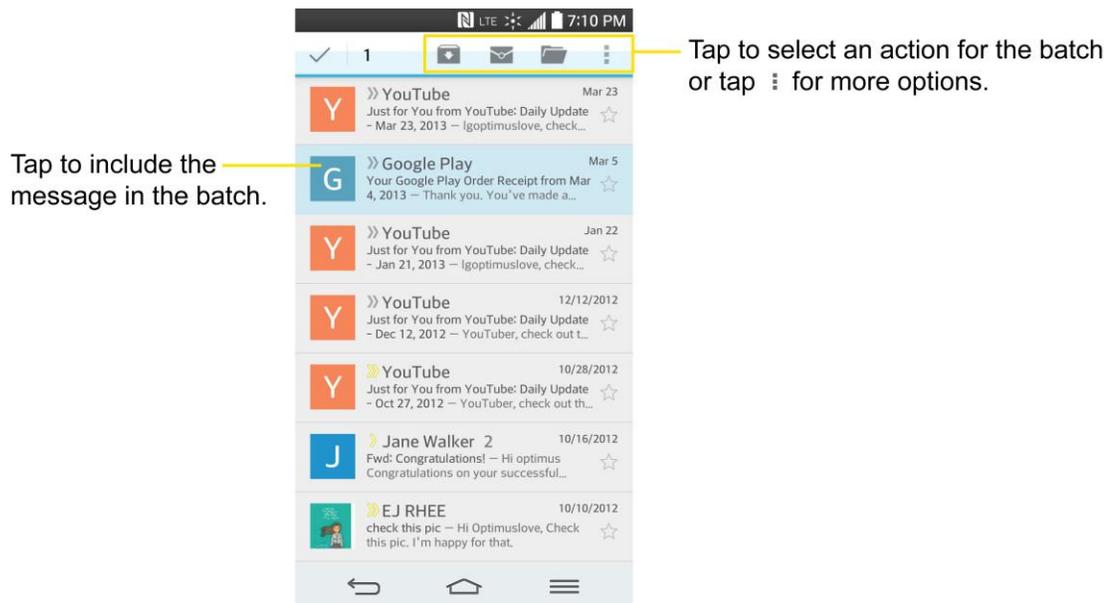

2. Tap  (**Archive**),  (**Trash**),  (**Read/Unread**), or  (**More**).

- The chosen action affects the selected batch of messages. If you accidentally delete a batch of conversations, you can tap **UNDO** in the grey bar (that appears briefly after the action) at the bottom of the Inbox screen to return the messages to the Inbox or appropriate label. You can also use **UNDO** after archiving, and reporting spam. If you never work with batches of messages, you can hide the check boxes to leave more room for the subjects of conversations. (See [Change Gmail Settings](#).)

Change Gmail Settings

You can change a number of settings for Gmail. Each Google Account has its own settings, so your changes affect only the current account. (See [Switch between Accounts](#)).

Notification volumes and some synchronization settings can also be changed in the Settings application.

1. Tap  >  >  **Gmail**.
2. Tap the account icon in the upper left corner and then tap **SETTINGS**.
3. Tap **General settings** to change the following settings for all accounts:
 - **Archive & delete actions:** Choose if you want to display only the archive option, only the delete option, or both options.
 - **Swipe to archive:** Select to archive a conversation when you swipe it.
 - **Sender image:** Allows the senders image to be displayed beside the name in the conversation list.
 - **Reply all:** Mark the checkbox to make Reply all the default message action.
 - **Auto-fit messages:** Mark the checkbox to shrink the messages to fit the screen and allow zooming.
 - **Auto-advance:** Sets which conversation list is viewed after archive or deletion.
 - **Message actions:** Sets when to show message actions.
 - **Confirm before deleting:** Checkmark the checkbox to ask to confirm before deleting a message.
 - **Confirm before archiving:** Checkmark the checkbox to ask to confirm before archiving a message.
 - **Confirm before sending:** Checkmark the checkbox to ask to confirm before sending a message.

Individual Account Settings

You can set each of your accounts with specific, individual settings.

1. Tap  >  >  **Gmail**.
2. Tap the account icon in the upper left corner and then tap **SETTINGS**.
3. Tap the account whose settings you want to modify.
 - **Inbox type:** Select the default inbox.
 - **Inbox categories:** Select the categories you want to display in your Inbox
 - **Notifications:** Checkmark to receive a Status Bar notification when mail arrives.
 - **Inbox sound & vibrate:** Opens a dialog box to set the Sync download amount for this account and how you want to be notified.
 - **Signature:** Opens a dialog box to enter the signature you want to send at the end of your email.
 - **Vacation responder:** Allows you to set up a message to send while you are on vacation.
 - **Sync Gmail:** Opens the Accounts & Sync screen to modify your sync settings for this account, or remove this account.
 - **Days of mail to sync:** Opens a dialog box to set the number of days of mail to sync. Modifying this setting affects the sync download in the Ringtone & vibrate setting.
 - **Manage labels:** Opens a dialog box to set which mail labels are synced.
 - **Download attachments:** Checkmark to automatically download attachments to recent messages using a Wi-Fi connection.

Respond with Quoted Text

When you respond to a Gmail message you can choose to type within the previous text. For example, if the previous text includes multiple questions, you can insert your responses immediately after each question instead of responding as a separate message.

1. Open a Gmail message and initiate your response action (e.g., **Reply**, **Forward**, etc.).
2. Make sure the **QUOTE TEXT** checkbox below the Compose field is checkmarked, then tap **RESPOND INLINE**.
3. Tap where you want to insert your text, then enter your text as necessary.
4. Tap  in the upper right corner of the screen to send the email.

Email

Use the Email application to send and receive emails from your webmail or other accounts, using POP3 or IMAP, or access your Exchange ActiveSync account for your corporate email needs.

Although there is a separate Gmail application, the Email application can manage both Internet based email services (Gmail™ and Yahoo!™) and Corporate Work Email (Outlook®). The phone can also be manually configured to connect to other email systems.

Note: If you have multiple email accounts, you must configure each account with its own settings.

If you want to send and receive email messages through an ISP (Internet Service Provider) account (such as Outlook), you will first need to set up an IMAP or POP account.

- Internet Message Access Protocol (IMAP) – This mail retrieval protocol is frequently used in large networks and commercial and institutional settings. IMAP4 is the current standard.
- Post Office Protocol (POP) - This protocol is supported by most ISPs and is currently more common among consumer applications. POP3 is the current standard.

Note: For more information, review your email carrier's support documents or contact your IT administrator.

Email Icons/Shortcuts



- Email shortcut



- Gmail shortcut

Status Bar - Notifications



- New Email message received



- New Gmail message received

Add an Email Account (POP3 or IMAP)

The Email application only reveals all currently added email accounts. To view additional email accounts within the main Email screen, they must first be added.

1. Tap  >  >  **Email**.
2. Do one of the following:

- If this is your first time to add an email account, tap **Yahoo** or **Other** on the Select email provider screen.
 - If you have already added an email account in Email, tap  > **Settings** >  **Add account**. If the Select email provider screen is displayed, tap **Yahoo** or **Other**.
3. Enter the **Email address** and **Password** for your email account and then tap **Next**.
- Tap **Manual setup** to configure your connection settings manually (POP3 , IMAP, or Exchange). Follow the on-screen prompts and enter the information specific to your carrier.

Important: If the account type you want to set up is not in the phone database, you will be asked to enter more details. You should get all pertinent information for the email account, such as incoming and outgoing server settings, before you proceed.

4. Enter the account name and your name and tap **Done**.

Corporate Email (Outlook)

The Email application also provides access to your Outlook Exchange server via your phone. If your company uses Microsoft Exchange Server 2003, 2007 and 2010 as the corporate email system, you can use this email application to wirelessly synchronize your email, Contacts and directly with your company's Exchange server.

Important: This Outlook application does not utilize Microsoft® ActiveSync to synchronize the phone to your remote Exchange Server. This synchronization is done wirelessly over the air (OTA) and not via a direct connection.

Set Up a Corporate Email

1. Tap  >  >  **Email**.
2. Tap **Microsoft Exchange** (from the add new email account screen).
3. Enter your **Email address** and **Password** information, then tap **Next**. Consult your Network Administrator for further details.
 - **Email address:** Your Outlook work email address.
 - **Password:** Typically your network access password (case-sensitive).
4. Enter a **Server address, Domain** and tap **Next**.
 - **Server address:** Your exchange server remote email address. Typically starts with mail.XXX.com. Obtain this information from your company network administrator.
 - **Domain:** Enter your network domain\login username.

- If your network requires SSL encryption, tap the **Use secure connection (SSL)** box to place a checkmark and activate this additional level of security.
- If your exchange server requires this feature, leaving this field unchecked can prevent connection.

Note: Signal interruptions or incorrect username or password information can cause completion issues.

5. Read the on-screen activation disclaimer and, if prompted, tap **Activate**.

Note: Depending on the type of account, you might be required to enable security to sync the account.

6. Configure your **Update schedule**, **Days to sync email** (days to synchronize between your phone and server), and activate any other email settings, then tap **Next**.
7. Identify your new account with a unique name and provide the outgoing name, then tap **Done**.

Important: You can synchronize over the air (not directly) with an Exchange Server running Microsoft Exchange Server 2003 Service Pack 2 (SP2) or Microsoft Exchange Server 2010.

Note: You can have multiple Work Email (Microsoft Exchange) accounts active on your phone.

Open Email

Reading and replying to email on your phone is as simple as on your computer.

1. Tap  >  >  **Email**.
2. Tap a message to read, manage, or reply to.
 - From your Inbox screen, tap  to select the following options: **Refresh**, **Folders**, **Sort by**, **Downloads** and **Settings**.
 - While in a message, the options described in the image below are available.



Create and Send Email

Create and send email using any account you have set up on your phone. Increase your productivity by attaching files such as pictures, videos, or documents to email messages.

1. From the Inbox, tap .
2. Enter the recipient's email address in the **To** field.
 - You can add as many message recipients as you want.

Note: To send an additional carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, enter the recipients in the **Cc** or **Bcc** field.

3. Tap the **Subject** field and enter the email subject.
4. Tap the body field and compose your email.
 - To add an attachment (such as picture, video, contact, event, audio, etc.), tap .
 - You can access the internal storage and navigate to the file you wish to attach.
 - Tap the file you wish to attach.
5. Tap  to send the email.

Note: If you close the messaging window before sending it, it is stored in Drafts.

Reply to or Delete an Email Message

Replying to or deleting an email is also simple.

1. From the Inbox, tap an email message to view it.
2. With the email message displayed, tap  and choose **Reply**, **Reply all**.
 - If you select **Forward**, you must specify the message's recipients.
3. Enter a new message and tap .

Delete an Email Message

- Touch and hold an email (from your inbox list) and tap **Delete** from the pop-up context menu.

– or –

With the email message displayed, tap .

Configure and Sync Corporate Email Settings

You can sync and configure various settings for your corporate email and create a corporate email signature.

Sync Your Accounts

1. Tap  >  > **System settings** > **Accounts & sync**.
2. Tap **Microsoft Exchange**, then select the Corporate account to reveal the account's synchronization settings screen.
3. Place a checkmark next to each option if you want the phone to automatically synchronize. If you want to manually synchronize, tap  > **Sync now**.

Configure Corporate Email

1. Tap  >  > **System settings** > **Accounts & sync**.
2. Tap **Microsoft Exchange**, then select **Email Settings** and tap the desired account to reveal the account's synchronization settings screen.
3. The following settings are available.
 - **Account name:** Displays the name used by the phone to track the account.
 - **Your name:** Displays your name. Tap this to change it.
 - **Use signature:** To add a signature or other information to outgoing email.
 - **Signature:** Displays a signature. Tap this to change it.
 - **Update schedule:** Choose the update schedule.
 - **Folders to sync:** Select the folders you want to synchronize.
 - **Days to sync email:** Choose how many days of email you want to sync.
 - **Message format:** Select the format you want to view email messages in.
 - **Message size limit:** Allows you to set the size limit for messages.
 - **Download over Wi-Fi:** Attachments will be queued until Wi-Fi is connected.
 - **File size to download over Wi-Fi:** Choose the Download file size.
 - **Account & sync:** Goes back to Accounts & sync screen.
 - **Calendar events to sync:** Choose the Calendar events to sync.
 - **Auto resend times:** Set the number of tries to resend a failed email message.
 - **Always CC/Bcc me:** Allows you to copy yourself to emails sent out.
 - **Out of office settings:** Allows you to set your out of office settings and message.

- **Security settings:** Set digital signatures and encryption to secure email.
- **Corporate directory:** Searches online directory for the recipient input.
- **Server policy:** View the server policy currently applied.
- **Notifications:** Allows you to decide whether to notify you of new email.
 - **Notification sound:** Allows you to select the notification sound for new emails.
 - **Vibrate:** Allows you to configure vibrate options for new emails.
 - **Vibrate Type:** Allows you to select the vibration type for new emails.
 - **Repeat alert:** Set the repeat alert time.
- **Exchange server settings:** Allows you to change the server settings for your account.
- **Remove account:** Allows you to remove the account.

4. Tap  to return to the previous screen.

For more detailed Corporate email information, see [Corporate Email \(Outlook\)](#). For more information on Corporate Calendar synchronizing.

Configure General Email Settings

1. Tap  >  > **System settings** > **Accounts & sync**.
2. Tap **Email** to display the account's synchronization settings screen.
3. Tap **Email Settings** and select **General settings** to set the following settings.
 - **Set default account:** Allows you to set the default account.
 - **Email preview:** Allows you to set how much lines of email to display as a preview in the mailbox.
 - **Conversation view:** Allows you to view email messages sent or received with the same subject in one thread.
 - **Split view:** Allows you to email list with email contents in landscape orientation.
 - **Load linked images:** Select when you want to load linked images.
 - **Ask before deleting:** Checkmark to set the phone to ask before deleting email.
 - **Auto-advance:** Select which screen to display after deleting an email.
 - **Resize image:** Set the default size for image attached while composing.

- **Trusted certificates:** Trusted certificate information is available.

4. Tap  to return to the previous screen.

Text and Multimedia Messaging

With text messaging (SMS), you can send and receive instant text messages between your wireless phone and another messaging-ready phones. When you receive a new message, you will be notified by your phone. Messaging is available via the Messaging application in your Applications screen. The  icon appears in Status Bar when a new text message is received.

Note: See your service plan for applicable charges for text messaging.

Compose Text Messages

Quickly compose and send text messages on your phone.

1. Tap  >  >  **Messaging** > .
2. Tap the **To** field and enter the recipient's phone number or email information using the on-screen keyboard.
 - **Contacts:** As you enter either a phone number or email address, if the information matches a current contact's entry information, you will see a match. When you see a match, tap the associated name to complete the addressing.
 - **Mobile:** You can enter a wireless phone number directly.
 - **Email:** You can also enter the recipient's email address.
3. Tap a matching entry from the on-screen dropdown list. This list is populated by matches found from your managed accounts.
4. Tap the text field and enter your message.
 - To enter a smiley from the menu options, tap  > **Insert smiley**. Make a selection from the list to insert it into your current message.
 - To enter emojis, tap  and select a category at the bottom of the keyboard.
5. Review your message and tap **Send**.

Read and Reply to Text Messages

When you receive a text message, your phone will notify you.

- Open the Notification Panel and tap the text message notification.

– or –

- Tap  >  >  **Messaging** and tap the new message.

Reply to a Text Message

1. While viewing a message, tap the text field.
2. Compose your reply or use the preset messages or icons.
 - To enter a message, use your on-screen keyboard. (See [Enter Text With the On-screen Keyboard](#).)
 - To enter a smiley from the menu options, tap  > **Insert smiley**. Make a selection from the list to insert it into the message.
 - To enter emojis, tap  and select a category at the bottom of the keyboard.
3. You may select additional messaging options by tapping .
4. Review your reply and tap **Send**.

Send a Multimedia Message (MMS)

When you need to add a little more to a text message, you can send a multimedia message (MMS) with pictures, voice recordings, audio, video files, contacts (vCard), location or memos.

Note: See your service plan for applicable charges for multimedia messaging.

Compose Multimedia Messages

1. Tap  >  >  **Messaging** > .
2. Tap the **To** field and enter the recipient's phone number or email information. As you enter the phone number or email address, matching contacts appear on-screen. Tap an available matching recipient or continue entering the phone number or email address.
3. Tap the text field and enter your message.
4. Tap .
5. Select a multimedia attachment type:
 - **Image:** Opens the Gallery application. Use the on-screen navigation to select the picture you wish to send with the outgoing message.
 - **Take photo:** Opens the Camera application. Take a picture, and then tap **OK** to use this image in your message. (See [Take Pictures](#).)
 - **Video:** Opens the Gallery application. Use the on-screen navigation to select a video and attach it to your outgoing message.

- **Record video:** Opens the Camcorder application. Record a video, then tap **OK** to use this video in your message. (See [Record Videos.](#))
- **Audio:** Opens a menu that allows you to browse for audio files using different applications.
- **Record voice:** Opens the message recorder.
 - After recording your message, tap  to attach it to your message.
- **Location:** Opens a map screen. Select a location, then tap **Attach** to use this.
- **Contact:** Opens your Contacts list and allows you to select of a Contact to send.
- **Schedule:** Opens the Calendar and allows you to attach an event.
- **Memo:** Opens the Memo application and allows you to select of a memo to send.
- **Slide:** Allows you to create a slideshow with your media files.
 - Insert a multimedia file, then tap  > **Slide**. You can also enter text to each slide.
- **Draw:** Allows you to draw and attach an image like QuickMemo.

Note: To remove or replace a picture or an audio attachment, on the Compose screen, tap  next to the attachment.

6. When you are finished creating your new MMS message, tap **Send MMS**.

Save and Resume a Draft Message

While composing a text or multimedia message, tap  to automatically save your message as a draft.

To resume composing the message:

1. On the All messages screen, tap the desired draft message. A draft icon  will be displayed.
2. When you finish editing the message, tap **Send** or **Send MMS**.

Managing Message Conversations

Text and multimedia messages that are sent to and received from a contact (or a number) are grouped into conversations or message threads in the All messages screen. Threaded text or multimedia messages let you see exchanged messages (similar to a chat program) with a contact on the screen.

To read a text message:

- Do one of the following:
 - On the All messages screen, tap the message thread to open and read it.
 - If you have a new message notification, touch and slide the Status Bar down to open the Notifications Panel. Tap the new message to open and read it.

To view a multimedia message (MMS):

1. Tap  >  >  **Messaging**.
2. On the All messages screen, tap a message thread to open it.
3. While viewing a message, tap the play icon (on the video or audio file) to playback the file or tap the image to view the picture.

Tip: The file attachment on the multimedia message can be saved to your phone's internal storage. To save the attachment, touch and hold the file and tap **Save attachment** from the Message options context menu.

Note: When Auto-retrieve in multimedia message settings is disabled, only the message header is downloaded. To download the entire message, tap the **Download** button in the message. For details, see [Text and Multimedia Message Options](#).

To reply to a text or multimedia message:

1. Tap  >  >  **Messaging**.
2. On the All messages screen, tap a message thread to open it.
3. While viewing a message, tap the text field and type your reply message.
4. Once completed, tap **Send** or **Send MMS**.

To return to the All messages screen from a text message thread, tap .

Note: To view the details of a particular message, in the message thread, touch and hold the message to open the options menu, and then tap **View message details**.

Note: If a message contains a link to a web page, tap the message and then tap the link to open it in the web browser.

Note: If a message contains a phone number, tap the message and then tap the phone number to dial the number or add it to your contacts.

To protect a message from deletion:

You can lock a message so that it will not be deleted even if you delete the other messages in the conversation.

1. Tap  >  >  **Messaging**.
2. On the All messages screen, tap a message thread to open it.
3. Touch and hold the message that you want to lock.
4. Tap **Lock message** on the options menu. A lock icon is displayed at the right hand side of the message.

Delete Messages

You can delete a single message or several messages at a time.

To delete a message thread:

1. Tap  >  >  **Messaging**.
2. On the All messages screen, tap the message thread that you want to delete.
3. Tap  > **Delete**.
4. Tap **Select all** or choose the desired messages and tap **Delete**.
5. When prompted to confirm, tap **Yes**. Any locked messages in the thread will not be deleted unless you select the **Delete locked messages** check box.

To delete several message threads:

1. Tap  >  >  **Messaging**.
2. On the All messages screen, tap  > **Delete**.
3. Tap the **Select all** checkbox at the top left corner, then tap **Delete**.
4. When prompted to confirm, tap **Yes**. Any locked messages in the thread will not be deleted unless you select the **Delete locked messages** check box.

To view contact details and communicate with a contact:

When you have received a message from someone in your stored contacts, you can tap the contact's photo or icon in the message thread to open a menu of options. Depending on the stored contact information, you can view the contact details, phone or send an email message to the contact, and more.

Text and Multimedia Message Options

The messages settings menu lets you control options for your text and multimedia messages including message limits, size settings, and notifications.

1. Tap  >  >  **Messaging**.
2. On the All messages screen, tap  > **Settings**.
3. Adjust the following settings according to your needs:
 - **Set default SMS app:** Allows you to set Messaging as your default messaging app to send messages and use other features of the Messaging app.
 - **Storage**
 - **Delete old messages:** Enable this option to delete older text messages when the limit for maximum number of text messages is exceeded.
 - **Text message limit:** Sets the maximum number of text messages that can be stored on the phone (per conversation).
 - **Multimedia message limit:** Sets the maximum number of multimedia messages that can be stored on the phone (per conversation).
 - **Signature:** Tap this to automatically add signature (blue checkmark displays).
 - **Callback number:** Check this to automatically add callback number (blue checkmark displays).
 - **Text message**
 - **Priority:** Select **Normal** or **High**.
 - **Message reassembly:** Enable this option (blue checkmark displays) so that multi-segment messages can be reassembled and shown as a single message. Each segment will still count toward your usage.
 - **Multimedia message**
 - **Group Messaging:** Send a single message as multimedia message when there are multiple recipients.
 - **Auto-retrieve:** Enable this option to automatically retrieve the entire content of your multimedia message. When checked, the multimedia message header, message body, and any attachments will automatically download to your phone.
 - If you disable this option, only the multimedia message header will be retrieved and displayed.
 - **Priority:** Select **Low**, **Normal**, or **High**.
 - **Conversation theme:** Allows you to select the desired conversation theme for the conversation wallpaper and message bubbles.

- **Notification**
 - **Notifications:** Enable this option if you wish to receive a notification in the Status Bar when a new text or multimedia message arrives.
 - **New message pop-up:** Enable this option if you wish to see a new message as a pop-up.
 - **Preview:** Enable this option if you wish to preview the contents of messages when new messages arrive.
 - **Notification sound:** Allows you to select a ringer to sound when a new message is received. Tap this option, and then select a ringtone that is specific to new text and multimedia messages. A sample will briefly be played upon selection.
 - **Vibrate:** Enable this option if you want the phone to vibrate when a new text or multimedia message is received.
 - **Vibrate type:** Choose what type of vibration you wish to apply to new messages.
 - **Repeat alert:** Enable this option if you wish the phone to remind you at every 12 seconds or every 2 minutes or every 5 minutes about the messages you haven't read.
- **Quick message:** Tap this to add or edit quick messages. Quick message is the specified text message to send out when you want to ignore an incoming call and respond to the caller with instead.
- **Send message with Enter key:** Enable this option if you want to send messages by tapping the Enter key on the keyboard.
- **Text Link display:** Enable this option if you want the phone to show Text Link icons to indicate apps released to message contents.
- **Emergency alerts**
 - **Presidential alerts:** This allows presidential alert to be always presented. It is grayed-out because presidential alerts are of high importance and should not be disabled.
 - **Extreme alerts:** Enable this option to receive extreme alerts.
 - **Severe alerts:** Enable this option to receive severe alerts.
 - **AMBER alerts:** Enable this option to receive AMBER alerts on child abduction.
 - **Test alerts:** Enable this option to receive test alerts.

Social Networking Accounts

Stay in touch on the go with all your social networking accounts. Post updates on Facebook and Twitter, review your LinkedIn contacts, see what everyone's talking about from YouTube, and more.

Facebook

Post updates, read what your friends are up to, upload pictures and check-ins, and more with on-the-go Facebook access.

Install the Facebook App on Your Phone

Before you use Facebook on your phone, you must download and install the app from the Google Play Store app.

1. Tap  >  >  **Play Store**.
2. Touch the Search icon and search for "facebook".
3. Touch **Facebook** from the results list.
4. Touch **INSTALL**, and then touch **ACCEPT**.
5. When the download is complete, touch **OPEN**. To open the app from the Home screen, touch  > **Facebook**.

Sign in to Your Facebook Account from Account Settings

1. Tap  >  > **System settings** > **Accounts & sync** > **Add account**.
2. Touch **Facebook**.
3. Enter your Facebook username and password and touch **Log In**.
4. Choose to sync or not to sync your contacts, then touch **Done**.

Google Hangouts

The Google Hangouts application lets you have real-time text conversations with your friends.

Open the Hangouts Application

- Tap  >  >  **Hangouts**.

Chat with Friends

1. Tap  >  >  **Hangouts**.

2. Tap  to view your contacts list. It includes all of the Google Accounts you've added.
 - Tap the name of the person in your contacts list. If your friend is not yet on Hangouts, you can invite your friend via SMS.

– or –

Tap the text field to enter a name, email or number.

3. Enter your message.

4. Tap .

Apps and Entertainment

All your phone's features are accessible through the Apps list.

Google Play Store

Google Play™ is the place to go to find new Android apps, books, movies, and music for your phone. Choose from a wide variety of free and paid content ranging from productivity apps and games to bestselling books and blockbuster movies and music. When you find what you want, you can easily download and install it on your phone.

To access the Google Play store app, you must first connect to the Internet using your phone's Wi-Fi, or data connection and sign in to your Google Account. See [Web and Data](#) and [Sign In to Your Google Account](#) for details.

Important: Third-party applications may access your personal information or require Boost to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

Find and Install an App

When you install apps from Google Play app and use them on your phone, they may require access to your personal information (such as your location, contact data, and more) or access to certain functions or settings of your phone. Download and install only apps that you trust.

1. Tap  >  >  **Play Store**.
2. When you open the Google Play store app for the first time, the Terms of Service window will appear. Touch **OK** to continue.
3. Browse through the categories (**APPS, GAMES, MOVIES, BOOKS, and Newsstand**), find an app you're interested in, and touch the name.
 - **Browse through featured apps:** Scroll through the list of featured apps when you open Google Play.
 - **Search for an app:** Touch  on the Play Store home screen, enter the name or type of app you're looking for, and then touch  on the keyboard.
4. Touch an app to read a description about the app and user reviews.
5. Touch **INSTALL** (for free applications) or the **Price** button (for paid applications).

Note: You need a Google Wallet account to purchase items on Google Play. See [Create a Google Wallet Account](#) to set up a Google Wallet account if you do not have one.

6. The subsequent screen notifies you whether the app will require access to your personal information or access to certain functions or settings of your phone. If you agree to the conditions, touch **ACCEPT** to begin downloading and installing the app.
 - If you selected a paid application, after touching **ACCEPT**, you're redirected to the Google Wallet screen to pay for the application before it's downloaded to your phone.

Warning: Read the notification carefully! Be especially cautious with applications that have access to many functions or a significant amount of your data. Once you touch **ACCEPT** on this screen, you are responsible for the results of using this item on your phone.

Create a Google Wallet Account

You must have a Google Wallet account associated with your Google Account to purchase items from the Google Play Store app.

Do one of the following:

- On your computer, go to google.com/wallet to create a Google Wallet account.

– or –

The first time you use your phone to buy an item from Google Play, you're prompted to enter your billing information to set up a Google Wallet account.

Warning: When you've used Google Wallet once to purchase an application from the Google Play Store app, the phone remembers your password, so you don't need to enter it the next time. For this reason, you should secure your phone to prevent others from using it without your permission. (For more information, see [Select Screen Lock](#).)

Request a Refund for a Paid App

If you are not satisfied with an app, you can ask for a refund within 15 minutes of the purchase. Your credit card is not charged and the app is uninstalled from your phone.

If you change your mind, you can install the app again, but you can't request a refund a second time.

1. Tap  >  >  **Play Store**.
2. Touch  > **My apps**.
3. Touch the app to uninstall for a refund. The details screen for the app opens.
4. Touch **Refund**, and then touch **Yes** to confirm. Your app is uninstalled and the charge is cancelled.

Open an Installed App

There are options for opening an installed app.

- Tap  > , locate the app, and then touch its icon.

– or –

1. Tap  >  >  **Play Store**.
2. Touch  > **My apps** > **INSTALLED** tab.
3. Touch the app and then touch **OPEN** to open it.

Uninstall an App

You can uninstall any app that you have downloaded and installed from Google Play.

1. Tap  >  >  **Play Store**.
2. Touch  > **My apps**.
3. On the Installed screen, touch the app you want to uninstall, and then touch **UNINSTALL**.
4. When prompted, touch **OK** to remove the app from your phone.

Get Help with Google Play

The Google Play store app offers an online help option if you have questions or want to know more about the app.

- Touch  > **HELP**. The Web browser will take you to the Google Play Help Web page.

Music

You can play audio files that are stored in your phone's internal storage. Copy audio files from your computer onto your phone before you open the Music application. The Music Player application supports audio files in numerous formats.

Google Play Music

Google Play Music lets you browse, shop, and play back songs purchased from the Google Play Store app, as well as songs you have loaded from your own music library. The music you choose is automatically stored in your Google Music library and instantly ready to play or download.

- Tap  >  >  **Play Music**.

Note: Learn more about Google Play Music at music.google.com.

Music Player

You can play music and set as ringtone.

1. Tap  >  >  **Music**.
2. You can select music tracks from the following tabs:
 - **Songs:** To browse through your downloaded music library.
 - **Albums:** To display your music library sorted by album.
 - **Artists:** To display your music library sorted by artist.
 - **Genres:** To display your music library sorted by genre.
 - **Playlists:** To select a customized playlist you've created.
 - **Folders:** To browse for music files using folders.
 - **Nearby devices:** To browse music files on other DLNA-certified media servers.
 - **Cloud:** To browse music files saved on the cloud.

Note: Tap  > **Edit tabs** to edit the tabs' order.

3. Once you've displayed a list of songs, you can browse through your available titles.
 - To listen to a song or playlist, tap it to begin playing.

Play a Song

1. Tap  >  >  **Music** > **Songs** tab.
2. Select the song you want to play.

Create a Playlist

1. Tap  >  >  **Music** > **Playlists** tab.
2. Tap  > **New playlist**.
3. Enter a name and tap **OK**.
4. Select the songs you want to add to the playlist and tap **Add**.

Assign a Song as a Ringtone

1. Tap  >  >  **Music** > **Songs** tab.
2. Touch and hold a song you'd like to use as your new ringtone. A context menu is displayed.
3. Tap **Set as ringtone** and select **Phone ringtone** to set it as the default ringtone or **Contact ringtone** to set it as a ringtone for a specific contact.
4. Confirm the song has been successfully assigned by navigating to your phone's ringtone menu.
 - Tap  >  > **System settings** > **Sound** > **Phone ringtone**.
 - Open the Contact entry and check the **Ringtone** field.

Back Up Your Downloaded Music Files

Boost recommends that you back up your downloaded music files to your computer. Although the downloaded files can only be played on your phone and on your account, backing them up to your computer lets you access the files in case your phone memory is damaged. (See [Transfer Via PC or Laptop](#).)

1. Connect your phone to your PC using a USB cable.
2. Select **Media sync (MTP)** and use your computer to navigate to phone's Music folder.
3. Select and copy the music files to a folder on your computer's hard drive.

Navigation

Your phone offers a number of location-based navigation programs to help you figure out where you are and get you where you're going.

Google Maps

Use the Google Maps app to determine your location, find directions, browse local businesses and attractions, rate and review places, and more.

Enable Location Services on Your Phone

Before using any location-based services, you must enable your phone's GPS location feature.

1. Tap  >  > **System settings** > **Location**.
2. Touch the  switch to turn Location services ON.
 - **Mode:** Select **High accuracy**, **Battery saving**, or **Device sensors only**.

- **RECENT LOCATION REQUEST:** Displays apps that have recently requested your location information.
- **LOCATION SERVICES**
 - **Google Location Reporting:** Allows you to configure your Google location settings.

Use Google Maps

- Tap  >  >  **Maps.**

Web and Data

Your phone's data capabilities let you wirelessly access the Internet or your corporate network through a variety of connections, including Wi-Fi, Boost 4G, Data Services (Boost 3G Network), and Virtual Private Networks (VPN).

The following topics address your phone's data connections and the built-in web browser. Additional data-related features can be found in [Accounts and Messaging](#), [Apps and Entertainment](#), and [Tools and Calendar](#).

Connect Wi-Fi

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

To use Wi-Fi on your phone, you must connect to a wireless access point, or hotspot. Some access points are open and you can simply connect to them without entering any information. Others are hidden or implement other security features, so you must configure your phone to connect to them.

Turn off Wi-Fi when you're not using it to extend the life of your battery.

When you connect to a Wi-Fi network, the phone obtains a network address and other information it needs from the network, using the DHCP protocol. To configure the phone with a static IP address and other advanced settings, tap  > **Advanced Wi-Fi** from the Wi-Fi settings menu.

Turn Wi-Fi On and Connect to a Network

Use the Wireless & networks setting menu to enable your phone's Wi-Fi radio and connect to an available Wi-Fi network.

1. Tap  >  > **System settings** > **Wi-Fi**.
2. Tap the **Wi-Fi** switch  to turn Wi-Fi on and scan for available Wi-Fi networks.
 - A list of available Wi-Fi networks will be displayed. Secured networks are indicated by a lock icon.
 - If the phone finds a network that you have connected to previously, it automatically connects to it.
3. Tap a network to connect to it.
 - If the network is secured, you will be prompted to enter a password. (Ask your network administrator for details.)

- When you're connected to a network, you can tap the network name in the Wi-Fi settings screen for details about the speed, security, address, and related settings.

To receive notifications when open networks are in range:

By default, when Wi-Fi is on, you receive notifications in the Status Bar when your phone detects an open Wi-Fi network.

1. Tap  >  > **System settings** > **Wi-Fi**.
2. Tap the **Wi-Fi** switch  to turn Wi-Fi, if it's not already on.
3. From the Wi-Fi settings screen, tap  > **Advanced Wi-Fi** > **Network notification** if you want to start or stop receiving notifications.

Add a Wi-Fi Network

You can add a Wi-Fi network manually if it does not broadcast its name (SSID) or if you want to add a Wi-Fi network when you are out of its range.

To add a secured network, you need to contact the network's administrator to obtain the password or other required security credentials.

1. Turn on Wi-Fi, if it's not already on.
2. From the Wi-Fi settings screen, tap  > **Add network**.
3. Enter the **Network SSID** (name) of the network. If the network is secured, tap the **Security** drop-down menu and tap the type of security used for the network.
4. Enter the required passwords and security credentials.
5. Tap **Connect**.

The phone will connect to the wireless network. Any credentials that you entered are saved, so you are connected automatically the next time you come within range of this network.

To forget a Wi-Fi network:

You can also make the phone forget about the details of a Wi-Fi network that you have added. For example, if you don't want the phone to connect to it automatically or if it is a network that you no longer use.

1. Tap  >  > **System settings** > **Wi-Fi**.
2. Tap the **Wi-Fi** switch  to turn Wi-Fi, if it's not already on.
3. In the Wi-Fi settings screen, touch and hold the name of the network.

4. Tap **Forget network**.

Wi-Fi Direct

Wi-Fi Direct supports a direct connection between Wi-Fi enabled phones without an access point. Due to the high battery usage of Wi-Fi direct, it is recommended that you plug your phone into a power outlet while using the Wi-Fi Direct feature.

To turn on Wi-Fi Direct:

1. Tap  >  > **System settings** > **Wi-Fi** >  > **Wi-Fi Direct**.
2. Tap **Search** to search for available phones.
3. Tap the available phones.

Data Services General Information (3G and Enhanced 4G LTE Networks)

With your Boost service, you are ready to start enjoying the advantages of data services. The following topics will help you learn the basics of using your data services, including managing your user name, launching a data connection, and navigating the web with your phone.

Important: Certain data services requests may require additional time to process. While your phone is loading the requested service, the touchscreen or on-screen keyboard may appear unresponsive when in fact they are functioning properly. Allow the phone some time to process your data usage request.

Enhanced 4G LTE

Enhanced 4G LTE provides your phone with wireless Internet access over greater distances than Wi-Fi and delivers data transfer rates of up to 30 Mbps. To connect your phone to 4G network, you need access to a 4G base station.

For more information about the availability of Enhanced 4G LTE in your location, visit boostmobile.com/coverage.

Note: The availability and range of the Enhanced 4G LTE network depends on a number of factors including your distance to the 4G base station, and infrastructure and other objects through which the signal passes.

Turn 4G On and Connect to the 4G Network

1. Touch  >  > **System settings** > **More...** > **Mobile networks** > **Network mode**.
2. Select **LTE/CDMA**. The phone will scan for the 4G network and will automatically connect to it.

When your phone is connected to the Enhanced 4G LTE network, the LTE icon (LTE ) appears in the Status Bar and tells you the approximate signal strength (number of bands displayed).

Note: The Enhanced 4G LTE network is self-discoverable, which means no additional steps are required for your phone to connect to it.

Check 4G Network Status

1. Touch  >  > **System settings** > **More...** > **Mobile networks**.
2. Touch **4G settings**. The network provider name, signal strength, and IP address are displayed.

Your User Name

When you buy your phone and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number.

When you use data services, your user name is submitted to identify you to the network. Your user name is automatically programmed into your phone. You don't have to enter it.

Update Your User Name

If you choose to change your user name and select a new one online, you must then update the user name on your phone.

- Tap  >  > **System settings** > **System updates** > **Update profile**.
 - Your profile will be automatically updated by the network.

Launch a Web Connection

Launching a web connection is as simple as opening the browser on your phone.

- Tap  >  >  **Browser**.

Note: You can connect to the Internet via Mobile network or Wi-Fi (access by tapping  > **System settings** > **Wi-Fi**).

Once the Browser loads, you are directed to the home page.

Tip: To change the default home page, tap  > **Settings** > **General** > **Set homepage**.

Note: The Browser automatically launches when a web link is touched from within an email or text message.

Data Connection Status and Indicators

Your phone notifies you of the current status of your data connection through status icons in the Status Bar. The following symbols can be displayed:



Your phone is connected to the high-speed Enhanced 4G LTE Network. When the signal bands are animated, your phone is scanning and connecting. During data transfer, the animated icon is not used (for example, when you are opening a web page). When the signal bands are gray, your phone is connected to the network, signal is weak.

When both the bands and the 4G icon are gray, there is no coverage and you are disconnected from the 4G network.

3G

Your phone is connected to the high-speed Boost Mobile Broadband Network(3G/1x). When the arrows are animated, your phone is transferring data. When the arrows are gray, your phone is connected to the network but is not currently transferring data. In either state, you can receive incoming calls.

If you do not see an indicator, your phone does not have a current data connection. To launch a connection, see [Launch a Web Connection](#).

Virtual Private Networks (VPN)

From your phone, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network.

Prepare Your Phone for VPN Connection

Depending on the type of VPN you are using at work, you may be required to enter your login credentials or install security certificates before you can connect to your company's local network. You can get this information from your network administrator. Before you can initiate a VPN connection, your phone must first establish a Wi-Fi or data connection. For information about setting up and using these connections on your phone, see [Launch a Web Connection](#) and [Turn Wi-Fi On and Connect to a Network](#).

Set Up Secure Credential Storage

If your network administrator instructs you to download and install security certificates, follow the instructions below.

1. Tap  >  > **System settings** > **Security**.
2. Tap **Install from storage** for desired certificates.

You can then download and install the certificates needed to access your local network. Your network administrator can tell you how to do this.

Add a VPN Connection

Use the Wireless & networks settings menu to add a VPN connection to your phone.

1. Tap  >  > **System settings** > **More...** > **VPN**.
2. Tap **Basic VPN** or **LG VPN**.
3. Tap **Add Basic VPN network** or **Add LG VPN network**.

Note: A screen lock is required to configure VPN.

4. Configure the settings according to the security details you have obtained from your network administrator.
5. When finished, tap **Save**.

The VPN is then added to the VPNs section of the VPN settings screen.

Connect to or Disconnect From a VPN

Once you have set up a VPN connection, use the Wireless & networks settings menu to connect to or disconnect from the VPN.

Connect to a VPN

1. Tap  >  > **System settings** > **More...** > **VPN**.
2. Tap **Basic VPN** or **LG VPN**.
 - **Basic VPN:** Sets your phone to use the built-in Android VPN client supporting basic features.
 - **LG VPN:** Sets your phone to use an advanced LG VPN client supporting full IP Security features and interoperability. You can add an LG VPN network or select from your list of VPN connections.
3. In the VPNs section, tap the VPN that you want to connect to.
4. When prompted, enter your login credentials, and then tap **Connect**. When you are connected, the VPN connected icon  appears in the notification area of the Status Bar.
5. Open the web browser to access resources such as intranet sites on your corporate network.

Disconnect From a VPN

1. Touch and drag down the Status Bar to open the Notifications Panel.

2. Tap the VPN connection to return to the VPN settings screen, and then tap the VPN connection to disconnect from it.

When your phone has disconnected from the VPN, the VPN disconnected icon  is displayed in the notification area of the Status Bar.

Browser

Your phone's web browser gives you full access to both mobile and traditional websites on the go, using data service or Wi-Fi data connections.

Learn to Navigate the Browser

Navigating through menus and websites during a data session is easy once you've learned a few basics. Here are some tips for getting around:

Scrolling

As with other menus on your phone, you'll have to scroll up and down to see everything on some websites.

To scroll a web page:

- Slide your finger on the screen in the direction you wish to scroll.

Selecting

Once you've learned how to scroll, you can start navigating the web.

To select items or links:

- Simply tap a link or an item.

Links, which are displayed as underlined text, direct you to web pages, select special functions, or even place calls.

Go Back

To go back one page:

- Tap  on your phone. Repeat this process to keep going back through your recently visited pages.

Find and Copy Text on a Web Page

To find text on a web page:

1. From any open web page, tap  > **Find on page**.
2. Enter the text you're looking for.

- As you type, the first word with matching characters is highlighted on the screen and subsequent matches are boxed.
3. Tap   to jump to and highlight the previous or next matching word.

To copy text from web page:

1. Open a web page and scroll to the beginning of the text you want to copy.
2. Touch and hold the first word of the text you want to copy.
3. Drag either selection tab to expand or reduce the range of selected text.
 - To cancel the selection, simply tap unselected text or empty area.
4. Tap **Copy** on the pop-up menu. The text you selected is copied to the clipboard. You can now use the techniques described in [Enter Text With the On-screen Keyboard](#) to paste the copied text into a text field.

Go to a Specific Website

Follow the instructions to go to a particular website by entering a URL (website address).

1. Tap the URL field (top of the Browser window) and enter a new web address.
 - As you enter the address, possible matches are displayed. Tap an entry to launch the desired website.
2. Tap the suggested website.

– or –

Tap **Go** on the keyboard.

Browser Menu

The Browser menu offers additional options to expand your use of the web on your phone.

Open the Browser Menu

The Browser menu may be opened anytime you have an active data session, from any page you are viewing.

- From any open web page, tap .

Options available within the Browser menu include:

- **Forward:** Allows you to go one page backed.
- **New tab:** Allows you to add new browser tab.

- **Bookmarks:** Allows you to set up and use custom bookmarks.
- **Add to bookmarks:** Allows you to save the current page to your bookmarks.
- **Homepage:** Allows you to go to the homepage.
- **History:** Allows you to show the history what you visited.
- **Share page:** Allows you to send a URL via Bluetooth, Email, Gmail, and Messaging.
- **Find on page:** Allows you to search the current Web page for a word.
- **Desktop view:** Allows you to view the current page in desktop view.
- **Save for offline reading:** Allows you to save the current page for reading offline.
- **Capture plus:** Allows you to captured current web page from top to bottom without cutting.
- **Print:** Allows you to print the web page.
- **Settings:** Allows you to configure and manage your Browser settings.
- **Exit:** Allows you to completely exit the Browser.

Adjust Browser Settings

You can change the page settings for your browser, including default zoom level, pop-up blocking, display options, setting your home page, and more.

1. From any open web page, tap  to open the Browser menu.
2. Tap **Settings**.
3. Select a sub-category and make the desired changes.
 - **General:** Settings for the homepage and form auto fill.
 - **Privacy & Security:** Settings for managing personal data from web browsing and usage.
 - **Accessibility:** Adjust the text size and rendering options.
 - **Advanced:** Adjust JavaScript and other web content settings.
 - **Bandwidth management:** Settings for search result preloading and load images.

Set the Browser Home Page

Customize your web experience by setting your browser's home page.

1. From any open web page, tap  to open the Browser menu.
2. Tap **Settings > General > Set homepage**.
3. Select one of the available options and enter the necessary information.

Reset the Browser to Default

1. From any open web page, tap  to open the Browser menu.
2. Tap **Settings > Advanced > Reset to default**.
3. Tap **OK** to complete the process.

Create Website Settings

You can create settings for individual websites.

1. From any open web page, tap  to open the Browser menu.
2. Tap **Settings > Advanced > Website settings**. These advanced settings that can be configured for individual sites (ex: Clear location access).
3. Tap **OK** to complete the process.

Create Bookmarks

Make browsing easier by setting up and using custom bookmarks.

You can bookmark web pages so that you can quickly return to them.

1. From any open web page, tap  to open the Browser menu.
2. Tap **Bookmarks**. Three tabs are revealed:
 - **Bookmarks**: Displays a list of your current bookmarks.
 - **History**: Displays a record of your browsing history. These records are organized into folders such as: **Today**, **Older**, **Yesterday**, **5 days ago**, and **1 month ago**, and **Most visited**.
 - **Saved pages**: Displays the pages you've saved for offline reading.
3. In the Bookmarks tab, tap  > **Add bookmark**.
4. Enter a descriptive name and URL for the new bookmark.
5. Tap **OK** to store the new entry to your Bookmarks list.

Create Bookmarks from Other Tabs

1. From any open web page, tap  to open the Browser menu and then tap **Bookmarks**.
2. Tap the **History** tab.
3. Tap the star icon adjacent to a web page entry. Enter the desired information and tap **OK**.

– or –

Touch and hold an entry from the list to display a context menu. Then, tap **Add to bookmarks** to add the selected entry to your current list of bookmarks.

Create a New Home Page

1. From any open web page, tap  to open the Browser menu and then tap **Bookmarks**.
2. Tap either the **Bookmarks** or **History** tab.
3. Touch and hold an entry from the list to display a context menu.
4. Tap **Set as homepage** to assign the selected entry as your new homepage.

Add Bookmarks to Your Home Screen

1. From any open web page, tap  to open the Browser menu and then tap **Bookmarks**.
2. Touch and hold an existing entry from the list to display a context menu.
3. Tap **Add shortcut to home** to add the selected entry to your Home screen.


Camera and Video

You can use the camera or camcorder to take and share pictures and videos. Your phone comes with a 13 megapixel camera with an autofocus feature that lets you capture sharp pictures and videos.

Note: Be sure to clean the protective lens cover with a microfiber cloth before taking pictures. A lens cover with smudges from fingers can cause blurry pictures with a "halo" effect.

Take Pictures

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button.

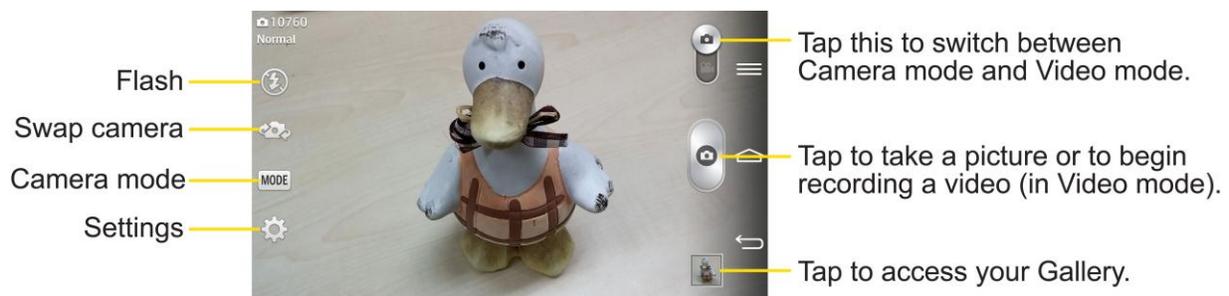

To take a picture:

1. Tap > > **Camera** to activate camera mode. (Additional camera options are available through the camera settings page. See [Camera Settings](#) for more information.)
2. Frame your subject on the screen.
3. Tap the subject on the screen to focus on it. A green square around the subject indicates that the camera has focused.
4. Tap until the shutter sounds. Your phone automatically saves the picture to the internal storage.

Camera Settings

From the camera mode, tap each icon to adjust the following camera settings.


- **Flash** Taps to turn the flash **On**, **Off** or set it to **Auto**.
- **Swap camera** to swap between the rear camera lens and the front camera lens.

-  **Camera mode** to select the shot mode from: **Normal**, **Shot & Clear**, **Dynamic tone (HDR)**, **Panorama**, **VR panorama**, **Burst shot**, **Beauty shot**, **Dual camera**, **Time catch shot**, **Intelligent auto**, **Sports**, and **Night**.
 - **Normal**: Captures a normal photo shot.
 - **Shot & Clear**: Removes any moving objects from the photo.
 - **Dynamic tone (HDR)**: Combines photos taken at multiple exposures into one optimal photo to get a better photo in tricky lighting situations.
 - **Panorama**: Creates a wide photo of a panoramic view. Hold the phone horizontally, press the shutter to start and slowly sweep the camera across the scene.
 - **VR panorama**: Creates a wide photo of a vertical panoramic view as well as a horizontal one. Hold the phone horizontally, press the shutter to start and fit the focus area to blue guide line to take photo. Move the camera to catch another focus area and take photos. The photos will come together into one image.
 - **Burst shot**: Takes up to 20 shots quickly by pressing and holding the shutter.
 - **Beauty shot**: Makes facial skin look brighter and smoother.
 - **Dual camera**: Captures a photo using both of camera lens. Touch and hold the small screen to resize or move it.
 - **Time catch shot**: Captures the missing moment before pressing the shutter.
 - **Intelligent auto**: Automatically identifies the scene's characteristics and adjusts aperture, shutter speed, options to take a photo.
 - **Sports**: Captures fast-moving images.
 - **Night**: Captures photos in dark areas.
-  **Settings** to adjust the following camera settings.
 - **Cheese shutter**: Allows you to take pictures with voice commands. When on, you just say "Cheese", "Smile", "Whiskey", "Kimchi", or "LG" to take a picture.
 - **Brightness**: Adjusts the brightness setting compatible with the environment.
 - **Focus**: Set a focus mode. Choose from **Auto**, **Manual** or **Face tracking**.
 - **Image size**: Set the size of your picture. Choose from **13M 4160x3120 (4:3)**, **W10M 4160x2340 (16:9)**, **8M 3264x2448 (4:3)**, or **1M 1280x960 (4:3)**.
 - **ISO**: Control the camera's sensitivity to light. Choose from **Auto** (default), **100**, **200**, **400**, or **800**.

- **White balance:** Select how the camera adjusts colors in different kinds of light in order to achieve the most natural-looking colors for your pictures. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, or **Cloudy**.
- **Color effect:** Apply different color effects to your pictures. Choose from **None**, **Mono**, **Sepia**, or **Negative**.
- **Timer:** Set your camera's timer. This is ideal if you want to be a part of the picture.
- **Auto review:** Set whether to view the picture that was just taken. Choose from **Off** (default), **On**, **2 sec**, or **5 sec**.
- **Geotagging:** Use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.
- **Shutter sound:** Adjust the sound the shutter makes when taking a picture.
- **Volume key:** Set how to use the volume key. Choose from **Capture** or **Zoom**.
- **Help:** Allows you to learn how a function works. This icon will provide you with a quick guide.
- **Reset:** Restore all camera default settings.

Multi-point Auto Focus

When you take a picture, the Multi-point Auto Focus (AF) function operates automatically and will allow you to see a clear image.

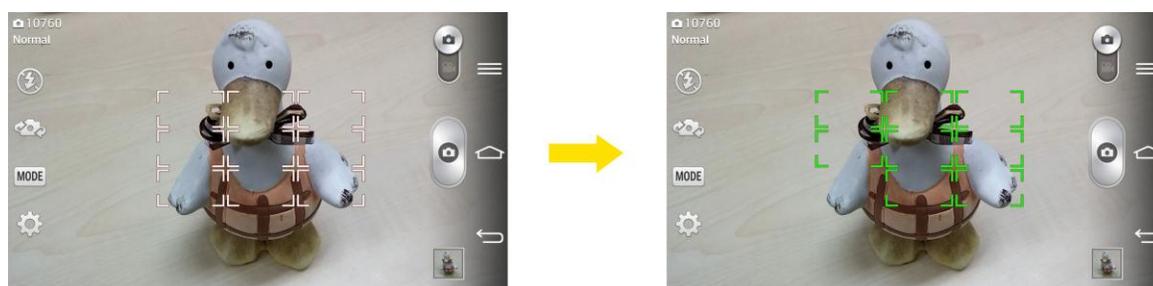

Super Zooming

You can use a zoom up to 8 times while taking pictures.

Tip: This function operates automatically while zooming in and out.

Note: Use a steady hand. This feature does not work with some functions. Objects can be overlapped when taking a picture of fast-moving subjects.

Shot & Clear

The Shot & Clear feature allows you to remove interfering objects from pictures.

1. Tap  >  >  **Camera**.
2. Tap  > **Shot & Clear**.
3. Tap  to take the picture.
4. Tap the outlined objects you want to removed.
5. Tap  to save the picture.

Tip: Keep the camera still while taking the picture.

Note: This feature may not be supported if the moving object's color and the background color are similar.

Note: This feature may not be supported if the moving object's size is too small or too big, or the object's movement is small.

Note: When there are too many moving objects, only a part of the movement can be detected.

View Your Pictures

The Gallery is where you can access the Gallery of stored camera images. You can view them in a slideshow, share them with your friends, and delete and edit them.

1. Tap  >  >  **Gallery**.
2. Select a location and tap an image to view your picture.

Gallery Options

The Gallery application presents the pictures and videos in your internal storage, including those you've taken with the Camera application and those you downloaded from the web or other locations.

If you have one of your phone's Google™ Accounts, you'll also see your Picasa web albums in Gallery.

1. Tap  >  >  **Gallery** to view the images stored in the internal storage.
 - Drag left or right to view more albums.
2. Tap an album to open it and view its contents. (The pictures and videos in the album are displayed in chronological order.)
3. Tap a picture in an album to view it.



- Tap a picture group again to reveal the following icons:
 -  **Camera:** Opens the Camera.
 -  **Share:** You can share the picture via various methods such as Messaging or Bluetooth.
 -  **Delete:** Deletes the picture.
- Tap a picture in an album then tap  for the following options: **Set image as, Move, Copy, Copy to Clip Tray, Rename, Rotate left, Rotate right, Crop, Edit, Slideshow, Add location, Print, and Details.**
- Tap  to return to the previous screen.

Assign Pictures

After taking a picture, assign it as a picture ID for a Contacts entry or as the Home screen background image (wallpaper).

1. Tap  >  >  **Gallery.**
2. Tap an album and tap an image to view it.
3. With the picture displayed, tap  > **Set image as.**
4. Select an option.
 - **Contact photo** to assign the picture to a Contact entry as a picture ID. Tap an entry from Contacts, crop the image and tap **OK** to assign the picture.
 - **Home screen wallpaper** to assign the picture as a background image, crop the image and tap **OK** to assign the picture.
 - **Lock screen wallpaper** to assign the picture as a background image for your lock screen.
 - **Wallpaper** to assign the picture as a background image, crop the image and tap **SET WALLPAPER** to assign the picture.

Record Videos

In addition to taking pictures, you can record, view, and send videos with your phone's built-in video camera.

1. Tap  >  >  **Camera**.
2. Tap  to switch to Camcorder mode.
3. Select **MMS video** to record a short video for email or messaging or **Long video**.
4. Point the lens to frame the scene where you want to start.
5. Tap  to start recording the video. The length of the recording is displayed on the top of the screen.

Note: Tap  to take pictures while recording video.

6. Tap  to pause recording video. You can resume recording again tapping .

– or –

Tap  to stop recording. Your video will be automatically saved to the Gallery.

Video Settings

From video mode, tap each icon to adjust the following camcorder settings.


-  **Flash** Taps to turn the flash **On**, **Off** or set it to **Auto**.
-  **Swap camera** to swap between the rear camera lens and the front camera lens.
-  **Recording mode** to select the recording mode to **Normal**, **Live effect**, **Dual recording**, and **Tracking zoom**.
 - **Normal:** Records a normal video.
 - **Live effect:** Provides various visual effects when recording a video.
 - **Dual recording:** Records a video using both of the front and rear cameras at the same time. Touch and hold the small screen to resize or move it.
 - **Tracking zoom:** Defines focus to enlarge before taking a video. Touch and hold the small screen to resize or move it.
-  **Settings** to adjust the following video settings.

- **Audio zoom:** Allows you to zoom in a certain area to increase sound sensitivity and decrease noise. Available only in landscape view.
- **Video size:** Set the size of your video. Choose from **FHD₆₀ 1920x1080 (60fps)**, **FHD 1920x1080 (30fps)**, **HD (1280x720)**, **QVGA (320x240 (MMS))**, **QCIF (176x144 (MMS))**.
- **Brightness:** Adjust the brightness setting compatible with the environment.
- **White balance:** Select how the camcorder adjusts colors in different kinds of light in order to achieve the most natural-looking colors for your videos. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, or **Cloudy**.
- **Color effect:** Apply different color effects to your videos. Choose from **None**, **Mono**, **Sepia**, or **Negative**.
- **Auto review:** Enable auto review of your video.
- **Geotagging:** Use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.
- **Volume key:** Set how to use the volume key. Choose from **Record** or **Zoom**.
- **Help:** Allows you to learn how a function works. This icon will provide you with a quick guide.
- **Reset:** Restore all video camera default settings.


Dual Recording

The Dual Recording feature allows you to record videos with the front and rear cameras at the same time.

1. Tap  >  >  **Camera**.
2. Change to video mode and tap  > **Dual recording**.

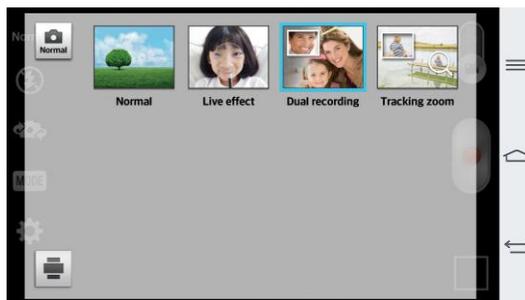

3. Touch  to start dual recording.

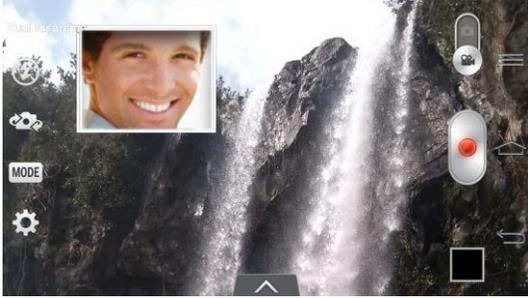

Tip: Drag the small screen to move it to your desired location. Touch and hold the small screen to resize it. Tap on the small screen to switch screens. Tap  to change small window's frame.

4. Touch  to stop dual recording.

Tracking Zoom

Defines focus to enlarge before taking a video. Tap and hold the small screen to resize or move it.

1. Tap  >  >  **Camera**.
2. Change to video mode and tap **MODE** > **Tracking zoom**.



3. Set the magnifying glass to the desired area of the video you want to enlarge.
4. Touch  to start recording.



5. Touch  to stop recording.

Tip: Drag the small screen to move it to your desired location. Touch and hold the small screen to resize it. This function may not work properly depending on the object.

Audio Zoom

Increase sound sensitivity in zooming area and decrease noise when recording.

1. Tap  >  >  **Camera**.
2. Change to video mode, tap  > **Audio zoom** > **On**.
3. Tap  to start recording.
4. Zoom in a certain area to increase sound sensitivity and decrease noise.




Note: Available only in landscape view.

5. Tap  to stop recording.

Tracking Focus

The Tracking Focus feature allows you to record videos tracking and focusing the object that you select automatically.

1. Tap  >  >  **Camera**.
2. Change to video mode and tap  to start recording.
3. Tap on the subject in the preview screen to track it.
4. Tap  to refine the focus.

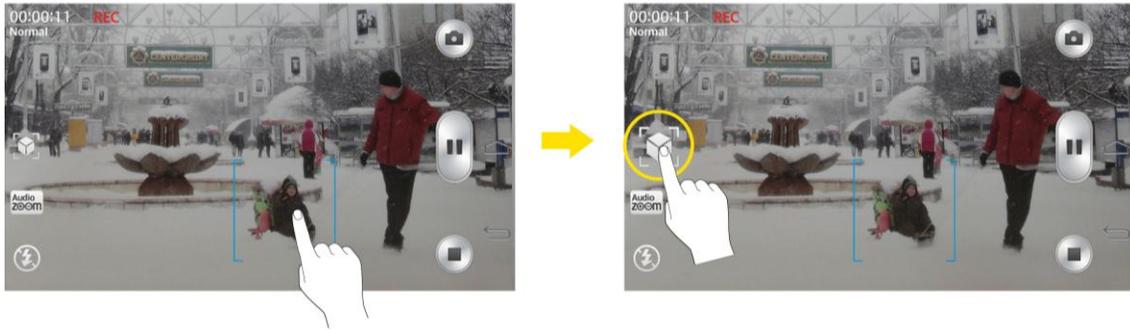

Video Gallery Options

The Gallery is where you can access the Gallery of stored video images. You can view them, share them with your friends, and delete and edit them.

1. Tap > > **Gallery** to view the videos stored in internal storage.
 - Scroll left or right to view more albums.
2. Tap an album to open it and view its contents. (The pictures and videos in the album are displayed in chronological order.)
3. Tap a video to view it. You can access the following options:
 - **Audio Zoom**: Increases the volume at selected area during video playback.
 - **Track Zoom**: Selects an object on the screen and play video expanding it.
 - **QSlide**: Enables an overlay on your phone's display for easy multitasking.
 - **SmartShare**: Shares media files with DLNA certified devices.
 - **Lock/Unlock**: Locks the touch keys to prevent unintentional touches.
 - **Screen ratio**: Allows you to adjust the screen ratio. (Best fit, Full screen or Original size)
 - **Screen shot**: Captures a screen shot while playing a video.
 - Tap to access **Subtitle**, **Play speed**(x0.5~x1.5), **Share**, **Trim**, **Delete**, **Settings**, **Details**, and **Help** options.

Play a Video

1. Tap > > **Gallery** to view videos stored in the internal storage.

- Scroll left or right to view more albums.
2. Tap an album to open it and view its contents. (The pictures and videos in the album are displayed in chronological order.)
 3. Tap a video in an album to play.
 - Tap the video to view the playback controls.

Tip: While a video is playing, slide the left side of the screen up or down to adjust the screen brightness. While a video is playing, slide the right side of the screen up or down to adjust the sound.


Tip: While playing a video, tap the timeline point to preview that portion of the video via a small screen. Tap the small screen to jump to that part of the video.

Tip: While playing a video, slide your finger from left to right (or vice versa) to fast-forward and rewind.

Live Zoom

Live Zoom allows you to zoom in or zoom out on a portion of a video that is being played to make the desired section appear larger or smaller.

When viewing a video, use your index finger and thumb in a pinching or spreading motion to zoom in or out.

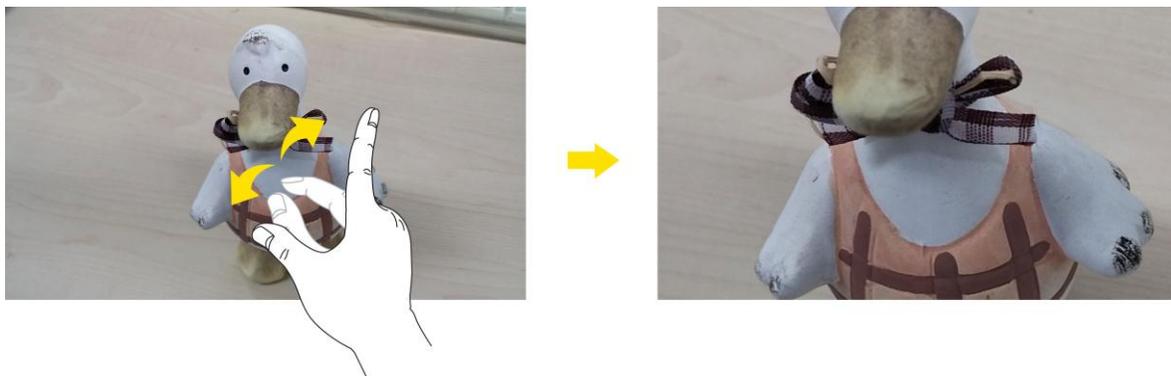

Note: Do not press too hard; the touch screen is sensitive enough to pick up a light, but firm touch.

Dual Play

Dual Play (connected wired or wirelessly to two displays) can be run on a different screen.

Note: Connect two devices using a wired (Slimport-HDMI) cable or wirelessly (Miracast). The connectable device can be a TV or a monitor supported by an HDMI cable or Miracast.

Note: The Gallery, Videos and Polaris Viewer 5 apps are supported on Dual Play.

Tip: Tap  once when two displays are a different status (i.e. the monitor is playing a video and your phone's video app is displaying empty screen), then Dual Play will start.

Note: Not all videos are supported by Dual Play. Dual Play operates at 1280X720 or higher display resolution.

Video Editor


The Video Editor application allows you to create and edit video files using the videos (and photos) stored on the phone.

Note: The Video Editor application supports only photos or videos which were recorded using this device.

Opening the Video Editor Application

- From the Home screen, tap  >  **Video Editor**.


Project List Screen

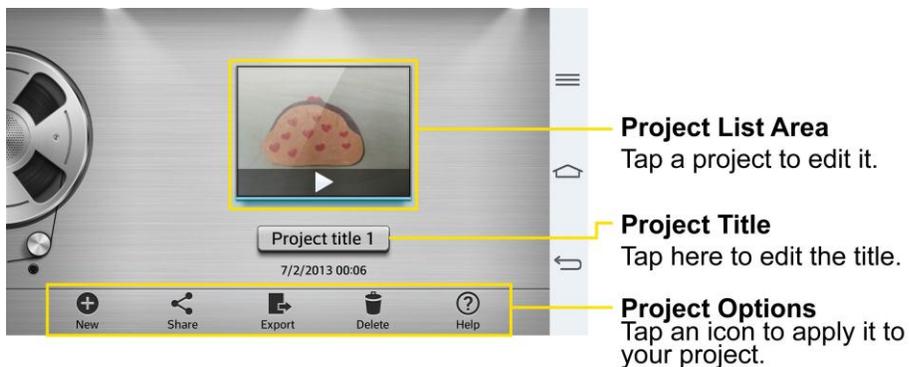

Project Options

- New** : Tap to create a new project.
- Share** : Tap to share the video project with other applications, such as YouTube.
- Export** : Tap to export the finished project to play in other applications.
- Delete** : Tap to delete the video project.
- Help** : Tap to view the help information on using this feature.

Project Edit Screen

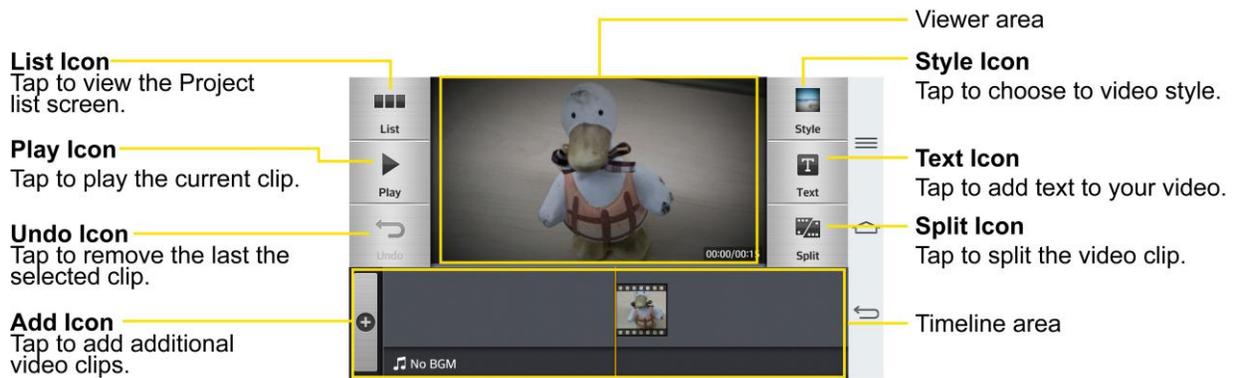

- **List** : Tap to exit the Project edit screen and access the project list screen. The current project is saved automatically.
- **Play** : Tap to play the video.
- **Undo** : Tap to remove the last action.
- **Redo** : Tap to redo the previously removed action.
- **Style** : Tap to select the video style to quickly and easily make a high-quality video.
- **Text** : Tap to add text to a video or image clip.
- **Split** : Tap to split the selected video clip into two sections.
- **Add** : Tap to add additional video, images, or audio clips.

Using the Video Editor

The Video Editor application allows you to zoom in/out and move and trim the videos.

Zoom in or out of the Timeline

Use the pinch-to-zoom gesture to change the timeline view. Pinch out to zoom in or pinch in to zoom out within the timeline.

Move or Delete a Clip

Touch and hold a clip, then drag it to a new location (or to the trash can icon  to delete it).

Trim a Clip

Tap a clip to display the trim bars. Drag the trim bars to shorten or lengthen the clip.


Tools and Calendar

Learn how to use many of your phone's productivity-enhancing features.

QSlide

The QSlide function enables an overlay on your phone's display for easy multi-tasking.

1. While using an app that supports QSlide, tap  to access QSlide.

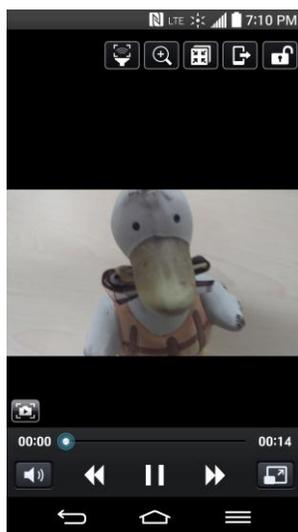

– or –

Open the Notifications Panel and touch an app from the **QSlide apps** section.

2. Use the slider  to adjust the transparency of the overlay.
3. You can make a call, or choose other phone options.
4. Tap  to exit the QSlide function.

Note: The QSlide function can support up to two windows at the same time.

QuickRemote

QuickRemote turns your phone into a Universal Remote for your home TV, cable box, audio system, DVD/Blu-ray players, air conditioner and projector.


1. From the Home screen, tap  >  **QuickRemote** > .

– or –

Touch and slide the Status Bar downwards and touch  > **ADD REMOTE**.



2. Select the type of device and its manufacturer, then follow the on-screen instructions to configure the device(s).

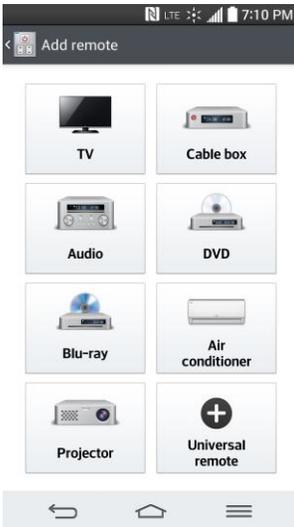

Tip: To quickly use the QuickRemote feature, touch and slide the Status Bar downward and tap  on the Quick Settings bar to activate it.



Tip: Touch the **Menu Key**  to select **Magic Remote setting**, **Edit remote name**, **Learn remote**, **Move remote**, **Delete remote**, **Edit room**, **Settings**, and **Help**.

Note: QuickRemote features an ordinary remote control and infrared (IR) signals to operate the same way. Therefore, be careful not to cover the infrared sensor when you use the QuickRemote feature. This function may not be supported depending on the model, the manufacturer or service company.

Universal Remote


You can create your own personalized universal remote and choose where to place all of the buttons.

1. From the Home screen tap  >  **QuickRemote**.

2. Tap  > **Universal remote**.
3. Enter the Remote name and touch **OK**.
4. Place the buttons you want on the remote at the desired location and tap **Next**.
5. Tap the button to be learned.
6. Point original remote 4 inches away from the IR receiver at the top of the phone.
7. Press and hold the button on the original remote for 2 seconds.




< Wrong >

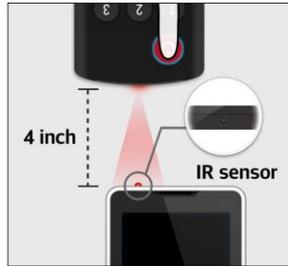

< Correct >

QuickTranslator

The QuickTranslator function allows you to get language translations, anytime and anywhere. Simply aim your device's camera at the foreign sentence you want to understand and it will provide you with a translation. You can also request verbal translations. Buy additional dictionaries for offline translation from the Google Play Store.

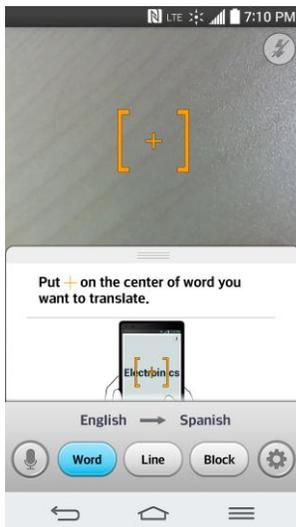

1. From the Home screen tap  >  **QuickTranslator**.
2. Tap , **Word**, **Line** or **Block**.

3. Hold the phone toward the subject you want to translate for a few seconds.

Note: Only one dictionary is provided free of charge. Additional dictionaries must be purchased. Please select the dictionary you would like to install as your complimentary dictionary.

Note: There may be a difference in the rate of recognition depending on the size, font, color, brightness and angle of the letters that need to be translated.

Voice Mate

Voice Mate allows you hands-free interaction with your devices. You can ask Voice Mate to perform phone functions using your voice, such as calling a contact, setting alarms or searching the web. Just use the Speak button on the bottom of the display to say what you want to ask.

Note: You can use the Voice Mate after agreeing both of End User License Agreement and Privacy policy.

Tip: You can view examples of various commands by swiping the Voice Mate main screen to the left.

Tip: You can also launch the Voice Mate app by accessing the [Quick Access](#) items.

Use Voice Mate

1. Tap  >  >  **Voice Mate**.
2. When Speak button  is enabled, say what you want to ask.

Tip: Use Voice Mate in a quiet environment so it can accurately recognize your commands

Voice Mate Setting

1. Tap  >  >  **Voice Mate**.
2. Tap  > **Settings**.
 - **Skip confirmation:** Tap a checkmark to make a call without confirmation when the exact name or number searched for is found.
 - **Voice feedback:** Tap a checkmark to activate voice feedback even when you are not connected to a headset or ear phones.
 - **User name:** If a user name is set, Voice Mate will recognize and greet you with your user name.
 - **Save events to:** Allows you to save events to the phone or your Google account.

- **Voice activation:** Tap a checkmark to activate the Speak button by saying voice launch command.
- **Button vibration:** Tap a checkmark to vibrate when the Speak button is tapped.
- **Voice launch command:** Set the voice launch command from LG Mobile or Hello Genie.
- **Voice launch when charging:** Tap a checkmark to open Voice Mate while charging with screen on.
- **Voice launch on Lock screen:** Tap a checkmark to open Voice Mate on Lock screen.
- **Skip Lock screen:** Tap a checkmark to skip Face Unlock, Pattern, PIN or Password when opening Voice Mate via voice launch command on Lock screen.
- **Facebook:** Set the Facebook account for Voice Mate.
- **Twitter:** Set the Twitter account for Voice Mate.


QuickMemo

The QuickMemo feature allows you to create memos and capture screen shots. You can use QuickMemo to easily and efficiently create memos during a call, with a saved picture or on the current phone screen.

1. Access QuickMemo from the [Quick Access](#) items.

– or –

While viewing the screen you want to capture and create a memo on, slide the Status Bar down and tap .

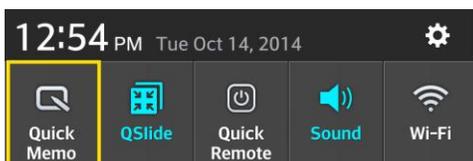

2. Create a memo using the following options:

- : Tap to enable an overlay on your phone's display for easy multi-tasking while keeping the memo in the background.

Note: Tap  to exit the overlay mode and go back to the QuickMemo.

- : Tap to select what type of background to use.

- : Tap to undo the most recent action.
- : Tap to redo the most recently deleted action.
- : Tap to select the pen type and color or to crop the image.
- : Tap to use the eraser to erase the memo that you created.
- : Tap to share the memo with others via any of the available applications.
- : Tap to save the memo you've created.

Note: Please use a fingertip while using the QuickMemo feature. Do not use your fingernail.

3. Tap  to save the current memo.
4. Tap **Notebook** or **Gallery** to select where to save the QuickMemo.

Discard QuickMemos:

- Tap  until you exit QuickMemo.

View the Saved QuickMemo

Your QuickMemos can be saved in the Notebook or Gallery applications.

To view QuickMemos saved in one of your notebooks:

- Tap  >  >  **Notebook** and select the **QuickMemo** note.

To view QuickMemos saved in your Gallery:


- Tap  >  >  **Gallery** and select the **QuickMemo** album.

Notebook

With the Notebook application, you can make your own notes using handwriting tools or attaching preferred multimedia files. You can manage and personalize a wide variety of information.

To make and decorate a notebook:

1. Tap  >  >  **Notebook**.
2. Tap **New note** to create a note.
3. Make or create a note using the available tools.

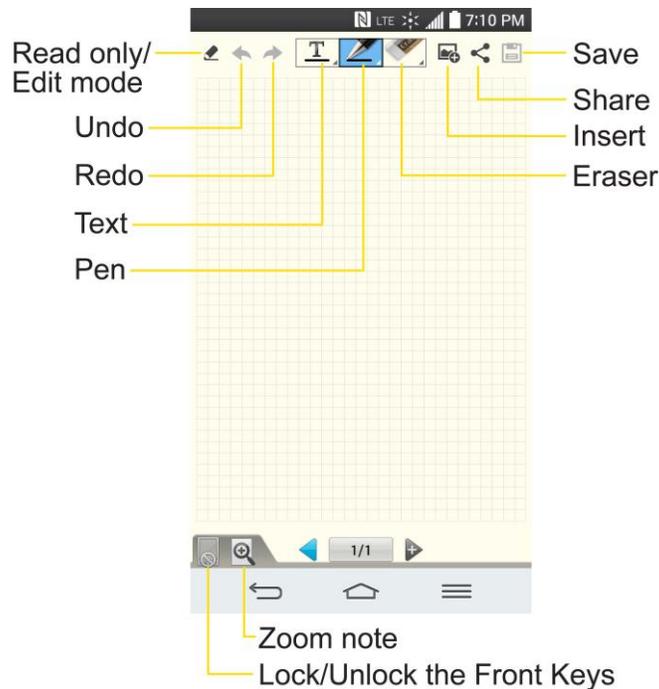


- **Read only/Edit mode:** Tap to view the note in read-only mode and prevent any unintentional drawings. To go back to the Edit mode, tap .
 - **Undo/Redo:** Undo and redo the previous actions.
 - **Text:** Tap to select the font type, size and color. Then, tap any place where you want to enter text on the white paper.
 - **Pen:** Tap to select the pen type, thickness, opacity and color. Then draw a picture.
 - **Eraser:** Tap to select the eraser. Tap **Clear all > Yes** to clear up.
 - **Insert:** Tap to attach multimedia files from Sticker, Image, Take photo, Video, Record video, Audio, Record voice, Location, Date and time, or Schedule.
 - **Lock/Unlock the Front Keys:** Tap to lock or unlock the front keys (, ,).
 - **Zoom note:** Tap to open the zoom box for a detailed note. To close the zoom box, tap again.
4. Tap to save the note.
 5. Tap to send the note via **Gmail**, **Email**, or other apps. Then, complete as necessary.

Calendar

With the Calendar application you can view the events you have scheduled in the coming days, weeks, or months.

Open the Calendar

- Tap  >  >  **Calendar**. If you have created or subscribed to more than one calendar through Google Calendar™ on the web, events from each calendar are displayed in a different color. (For information about which calendars are displayed on your phone, see [Display and Synchronize Calendars.](#))

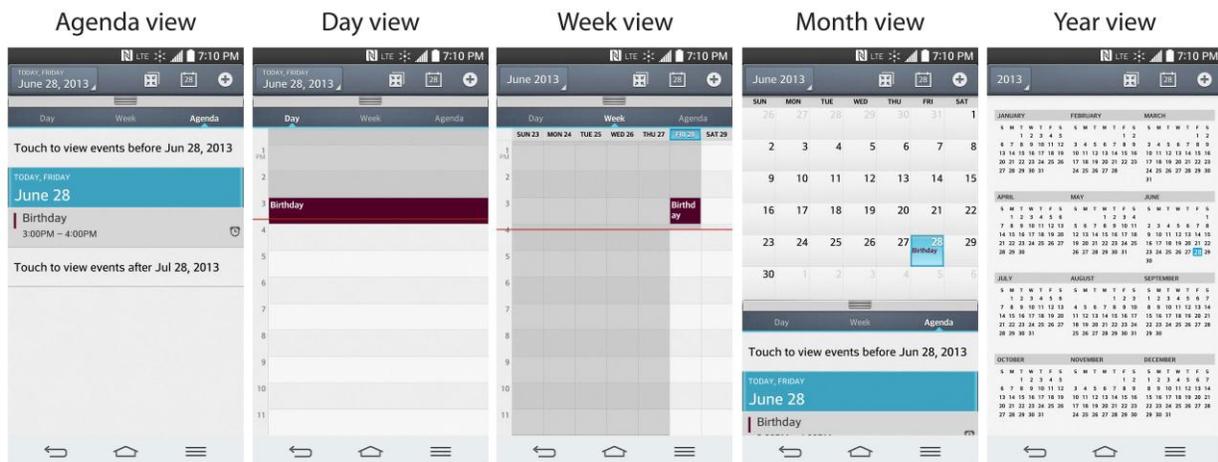

In Agenda, Day, Week view, or Month view, tap an event to view its details.


Tap a month in Year view to display Month view for that month.

Note: To go to any day in any Calendar view, tap  > **Go to date**.

Change Calendar View

You can change the calendar view.

- Tap  > **Day, Week, Month, Year, Agenda, Life Square**. Each view displays the events in your calendar for the period of time that you specify.
 - **Day View**

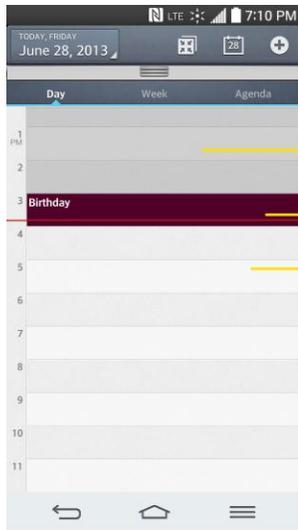


Drag left or right to view earlier or later days.

Tap an event to view its details.

Touch and hold a time slot or an event to create a new event at that time.

▪ **Week View**

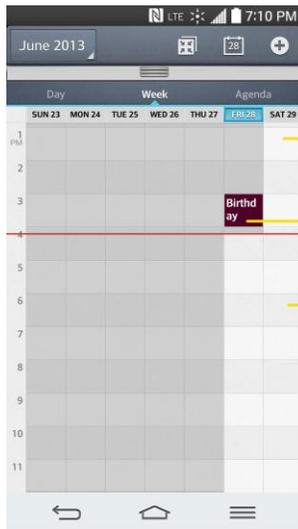


Touch and hold a time slot or an event to create a new event at that time.

Tap an event to view its details.

Drag the screen left or right to view previous or future weeks.

- **Month View**

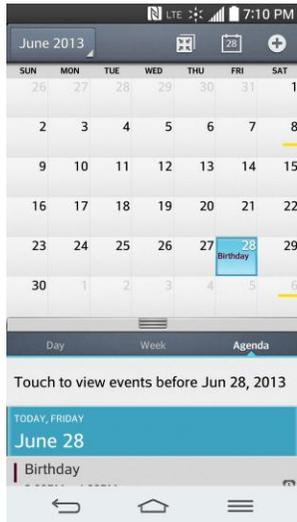

Tap a day to view the events of that day.

Drag the screen up or down to view previous or future months.


- **Year View**



Tap a month to move to the month.

Drag the screen left or right to view previous and future years.

- **Agenda View**

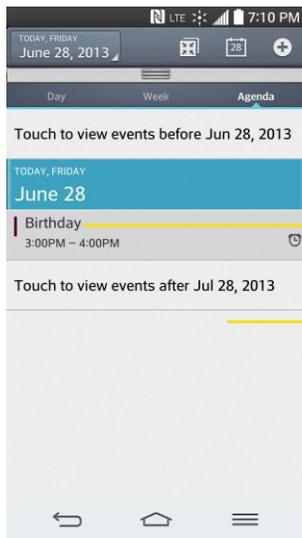


Tap an event to view its details.

Drag the screen up or down to view earlier or later events.

View Event Details

You can view more information about an event in a number of ways, depending on the current view.

- In **Agenda**, **Day**, **Week view**, or **Month view**, tap an event to view its details.

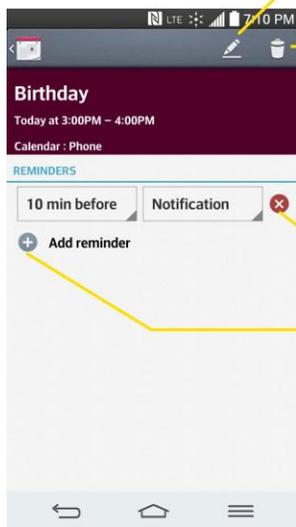

Tap to edit this event.

Tap to delete this reminder.

Tap to set reminders.

Tap to add another reminder.

Create an Event

You can use the Calendar tool on your phone to create events that appear on your phone and in your Google Calendar on the web.

1. Tap  >  >  **Calendar** and then .

- You can also touch and hold a spot in **Day**, **Week**, or **Month** view to open the new event screen with that day and time already entered.
2. Add details about the event.
 - Enter a name, and other optional details about the event, just as you would on Google Calendar (on the web). If you have more than one calendar, you can choose the calendar to which to add the event. Tap  to add more reminders. (See [Set an Event Reminder](#).)
 3. Scroll to the bottom of the screen and tap **Save**.
 - The event will be added to your Calendar. You can also access and configure the event from Google Calendar on the web.

Edit or Delete an Event

You can edit or delete an event that you created on the phone or on the web. You can also edit or delete events created by others, if they have given you permission.

Edit an Event

1. Tap  >  >  **Calendar** and then tap the event to open it. (See [View Event Details](#).)
2. Tap . (For information on how to create or change event information, see [Create an Event](#).)
3. Make your changes to the event.
4. Tap **Save**.

Delete an Event

- Tap an event to view the event details. Then, tap . Tap **Yes** to confirm.

Set an Event Reminder

You can set one or more reminders for an event, whether or not you created the event or have permission to edit its other details.

1. Open **Calendar** and tap the event to open it. (See [View Event Details](#).)
2. Tap  **Add reminder** to add a reminder.
3. Tap the reminder time to display a pop-up menu and choose your desired setting.

- At the designated time, you will receive a notification to remind you about the event. (See [Respond to an Event Reminder.](#)) You can also use Google Calendar (on the web) to configure additional reminders.

Delete an Event Reminder

1. Tap  >  >  **Calendar** and then event to open it.
2. Tap  to remove a reminder.

Respond to an Event Reminder

If you set a reminder for an event, the reminder notification appears in the Status Bar when the reminder time arrives. (See [Notifications Panel.](#))

1. If you receive notifications in the Status Bar, drag the Notifications Panel down to your notifications. Tap the event notification to open the list of Calendar notifications.
2. Tap an event in the Calendar Notifications list to view more information about that event.
3. Tap **Snooze** in the Calendar Notifications list to receive the reminder again 5 minutes later.

– or –

Tap **Dismiss** in the Calendar Notifications list to delete all reminders in the list.

4. Tap  when viewing the Calendar Notifications list to keep the reminders. The reminders will remain in the Status Bar.

Display and Synchronize Calendars

Initially, all calendars that you create or subscribe to through Google Calendar on the web are also displayed in the Calendar application on your phone. You can select which calendars to show or hide on the phone, and which to keep synchronized.

Only the calendars that you've created or subscribed to on the web are shown in the **Calendars** list.

To select calendars to display:

1. Tap  > **Calendars to display.**
2. Checkmark the desired accounts to display those calendars.

Change Calendar Settings

You can change the settings for how the Calendar application displays events and how it notifies you of upcoming events.

- Tap  >  >  **Calendar** and then tap  > **Settings** > **Calendar settings**.
 - **Week starts on:** Opens a dialog box to configure from when the week starts on.
 - **Hide declined events:** When checkmarked, declined events so that they are not displayed in your calendar views. Tap to remove the checkmark and display all events in your calendar views.
 - **Show events by:** Select event display type **Event brief** or **Timeline**.
 - **Show week number:** Displays the week number out of the year.
 - **Lock default time zone:** Lock event times and dates to default time zone.
 - **Clear search history:** Allows you to remove all the searches you have performed.
 - **About calendar:** Display calendar application version.
- Tap  >  >  **Calendar** and then tap  > **Settings** > **Event notification settings**.
 - **Default reminder time:** Allows you to select the default time set for event reminders.
 - **Notifications:** Checkmark to allow notifications of new events. When Notifications is set, you can select the notification type, notification sound, vibrate or vibrate type, and whether to pop-up the notification or not.
 - **Quick responses:** Edit default responses when emailing guests.

Folders

Folders allow you to organize other Home screen shortcuts and icons, or folders that contain all your contacts, contacts with phone numbers, or starred contacts. Your folder's contents are kept up to date automatically. Organizing in folders can create space to add more shortcuts, widgets, or applications on the Home screen.

Add a Folder

1. Drag and drop an app icon over another app icon.
2. A folder will be created with both app icons in it.

Rename a Folder

1. Tap the folder icon to open it.
2. Tap .
3. Enter the new folder name and tap **OK**.

Note: You can also change the folder color.

Organize Items in a Folder

- Just drag a shortcut, an icon, or a folder and drop in a folder.


Alarm/Clock

You can use the Alarm/Clock application to monitor several types of information at once, in addition to the current date and time.

Open the Alarm

The Alarm/Clock application also allows you to set alarms.

1. Tap  >  >  **Alarm/Clock**.

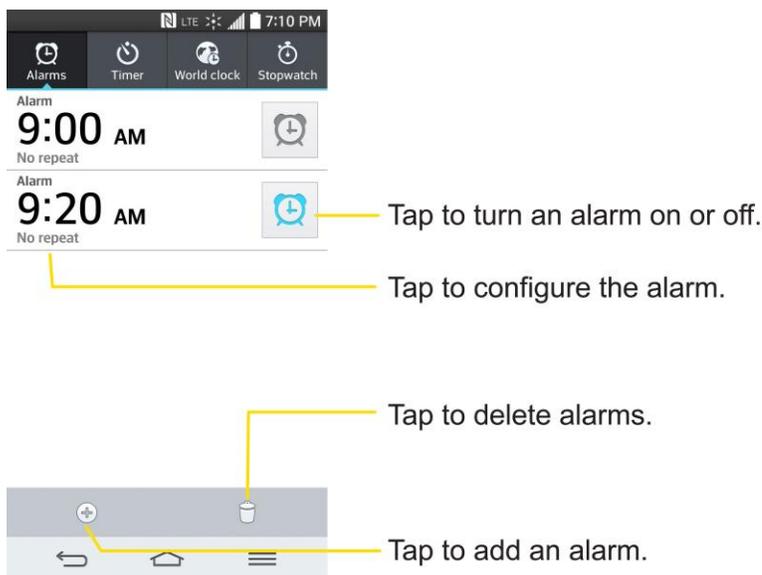

2. Tap an existing alarm to change its time and other attributes or tap **Add alarm**  to add a new one.
3. Set the time of the alarm. You can change the time by scrolling up/down the hour and minute and AM/PM field or tap the hour and minutes fields to enter the time with the keyboard.
4. Tap **Repeat** to set the days when you want the alarm to sound. (If you don't set a repeat, the alarm will only sound on the assigned day.)
5. Tap **Snooze duration** to open a dialog box to set the amount of time to wait before sounding the alarm again if it is not dismissed. You can set the alarm to ring repeatedly from 5 minutes up to 1 hour.

6. Tap **Vibration** to have the phone vibrate, in addition to playing the ringtone.
7. Tap **Alarm sound** to select a ringtone for the alarm. The ringtone plays briefly when you select it.
8. Slide the button on the **Alarm volume** slider to the right to increase the alarm volume and to the left to decrease it.
9. Tap **Auto app starter** to set the application you want to automatically open when you stop the alarm.
10. Tap **Puzzle lock** to checkmark the setting, which requires you to wake up enough to solve a simple puzzle to dismiss the alarm.
11. Tap **Memo** to enter a name for the alarm.
12. When you're finished, tap **Save**.

Change Alarm/Clock Settings

1. Tap  >  >  **Alarm/Clock**.
2. Tap  > **Settings**.
3. You can set the following options:
 - **Alarm in silent mode:** Tap to place a checkmark and allow your phone to play alarms even when it is in Silent mode.
 - **Volume button behavior:** Allows you to set the desired behavior of the volume buttons when pressed during an alarm.
 - **Puzzle lock:** Allows you to choose the puzzle type to use during the puzzle lock.
 - **Vibrate type:** Allows you to set the vibrate type.

Set a Timer

1. Tap  >  >  **Alarm/Clock** >  **Timer** tab.
2. Tap the **Hour/Minute/Second** sections to set the timer.
3. Tap  to set the following options:
 - **Vibration:** Set the phone vibrate along with the alert sound. (A blue checkmark appears.)
 - **Alert sound:** Select the alert sound.

- **Alert volume:** Set the alert volume.
4. Tap  .
 - Tap  to reset the timer and start over.
 - Tap  to resume the timer after it's stopped.
 - Tap  to stop the timer.

Set World Clock

1. Tap  >  >  **Alarm/Clock** >  **World clock** tab.
2. Tap  to add a city.
3. Enter the city name in the search field and tap **Done** on the keyboard.
 - As you enter letters, the cities which starts from the letters are displayed.

– or –

Scroll through the cities list and tap the city.
4. You can add cities as many as you want. Repeat steps 2 and 3.

Play Stopwatch

1. Tap  >  >  **Alarm/Clock** >  **Stopwatch** tab.
2. Tap  to start stopwatch time.
3. Tap  to stop the stopwatch.
 - While measuring time, tap  to view lap times.

Tasks

You can add your tasks in the Tasks application and synchronize with MS Exchange account.

Synchronize MS Exchange


1. Tap  >  > **System settings** > **Accounts & sync**.
2. Tap **Add account**.
3. Tap **Microsoft Exchange** to enter your email address and password information.

For further information about adding a Microsoft Exchange account, see [Set Up a Corporate Email](#).

4. Make sure that you place a checkmark on **Sync Tasks**.

Add a Task

1. Tap  >  >  **Tasks**.
2. Tap  to add a new task.

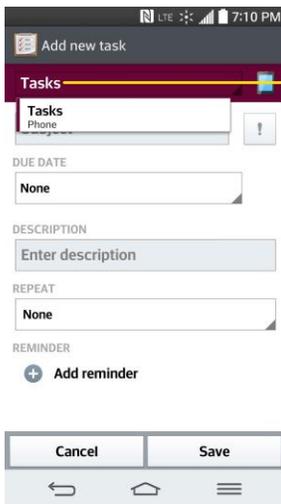

Select where to save this account, only on the phone or sync with MS Exchange account.

3. Tap **Tasks** and select an account to save the current task.
4. Enter the corresponding information on each field and tap **Save**.

Tasks Options

1. Tap  >  >  **Tasks**.
2. The following options are available.
 - : Tap to view All tasks or tasks from individual accounts.
 - : Tap to search for tasks.
 - : Tap to create a new task.

– or –

Tap  to access the following options.

- **Sync now**: Tap to sync your Microsoft Exchange account tasks.

- **Sort by:** Allows you to sort tasks by Due date, Priority and Creation order.
- **Delete:** Allows you to delete tasks.
- **View completed tasks:** Allows you to view tasks completed.
- **Lists to display:** Allows you to select the display option.
- **Settings:** Allows you to set the following settings.
 - **Notifications:** Allows you to enable or disable reminder notifications.
 - **Notification sound:** Allows you to set the reminder notification sound.
 - **Vibrate:** Allows you to set the vibrate setting for reminder notifications.
 - **Pop-up notification:** Checkmark to display a pop-up reminder notification.
 - **Add account:** Allows you to add an account.

– or –

The following options are available when you touch and hold a task in the tasks list.

- **Edit:** Allows you to edit the task.
- **Move:** Allows you to move the task to another list.
- **Delete:** Allows you to delete the task.
- **Share:** Allows you to share the task with others.

Calculator

You can use the Calculator application to solve math problems.

1. Tap  >  >  **Calculator**.
2. Enter numbers and arithmetic operators on the screen.
 - Tap  to use the QSlide for easy multitasking.
 - Touch and hold the Calculator's display to open a menu where you can copy what you've entered and access other tools.
 - Tap  to delete the last number or operator you entered. Touch and hold  to delete numbers repeatedly.
 - Tap  to clear the screen.

- Tap  to open an Options menu to view your calculation(s) history or change panels between Scientific and Basic or Settings.

Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth phones, such as headsets and hands-free car kits, Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually up to approximately 30 feet.

Turn Bluetooth On and Off

By default, your phone's Bluetooth feature is set to Off. Turning Bluetooth on makes your phone "discoverable" by other in-range Bluetooth phones.

Note: Activating Bluetooth can drain your battery faster and reduce your available usage times. To conserve your phone's battery, turn off Bluetooth when not in use. Always turn off your Bluetooth when you are in locations that prohibit its use.

Turn Bluetooth On

1. Tap  >  > **System settings** > **Bluetooth**.
2. Tap  to activate the feature. When active,  appears within the Status Bar.

Turn Bluetooth Off

1. Tap  >  > **System settings** > **Bluetooth**.
2. Tap  to deactivate Bluetooth.

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:

 – Bluetooth is active

 – Bluetooth is connected

Bluetooth Settings Menu

The Bluetooth settings menu allows you to set up many of the characteristics of your phone's Bluetooth service.

Includes the following:

- Entering or changing the name your phone uses for Bluetooth communication

- Setting your phone's visibility (or “discoverability”) for other Bluetooth phones

To access the Bluetooth Settings menu:

1. Tap  >  > **System settings** > **Bluetooth**.
2. Tap  to activate the feature. When active,  appears within the Status Bar.
3. Set the following Bluetooth options:
 - Tap the check box next to your device name to place a checkmark and make your phone visible to other phones for pairing and communication. Tap again to uncheck and make your phone invisible.

Note: By default, the visibility option is set to 2 minutes. This value appears as a countdown within this field. You can change the visibility timeout. From the Bluetooth settings screen, tap  > **Visibility timeout**, then tap your preference.

4. Tap **Search for devices** at the bottom of the screen to search for in-range Bluetooth-compatible devices. Make sure the target device is set to be discoverable.

Pairing Bluetooth Devices

The Bluetooth pairing process allows you to establish trusted connections between your phone and another Bluetooth device. When you pair devices, they share a passkey, allowing for fast, secure connections while bypassing the discovery and authentication process.

Pair Your Phone

1. Verify your Bluetooth is active. (See [Turn Bluetooth On and Off.](#))
2. From the Bluetooth settings page, tap the check box next to your device name to make your phone visible. Your phone must be visible to successfully pair with an external device. If you want to search a new device, you also need to make that device visible. (See the instruction manual from the manufacturer.)
3. Tap **Search for devices**. (Your phone will display a list of discovered in-range Bluetooth devices.)
4. Tap a device from the list to initiate pairing.
5. Depending on the device, you might have to tap **Pair** to accept the passkey (if they match), confirm matching passkeys, or enter the passkey or PIN Code.
6. Tap **Done** > **OK** if you entered a passkey or PIN code.
7. The external device will then have to accept the connection and enter your phone's PIN code.

Note: Due to different specifications and features of other Bluetooth-compatible phones, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible phones.

Note: Pairing between two Bluetooth phones is a one-time process. Once a pairing has been created, the phones will continue to recognize their partnership and exchange information without having to re-enter a passcode again.

Disconnect a Paired Phone

Disconnecting a paired device breaks the connection between the device and your phone, but retains the pairing. At a later point when you wish to reconnect the device, there is no need to setup the connection information again.

1. Verify your Bluetooth is active. (See [Turn Bluetooth On and Off.](#))
2. From the Bluetooth settings page, tap  next to the previously paired device (under the PAIRED DEVICE section).
3. Tap **Unpair**.

Note: Disconnections are manually done but often occur automatically if the paired device goes out of range of your phone or if it is powered off.

Send Items via Bluetooth

Depending on your paired phone's settings and capabilities, you may be able to send pictures, videos, Contacts information, or other items using a Bluetooth connection.

Note: Prior to using this feature, Bluetooth must first be enabled, and the recipient's phone must be visible. If no phones are detected, tap **Search for devices** to begin a new search.

Send Contact Information

1. Tap  >  >  **Contacts**.
2. Tap an entry to open its details page.
3. Tap  > **Share** > **Bluetooth**.
4. Tap a paired phone.
 - The external Bluetooth phone must be visible and communicating for the pairing to be successful.

Send Pictures and/or Videos

1. Tap  >  >  **Gallery**.

2. Tap an album to open it and view its contents. (The pictures and videos in the album are displayed in chronological order.)
3. Tap , then checkmark pictures and/or videos to share.
4. Tap **Share > Bluetooth**.
5. Tap a paired phone.
 - The external Bluetooth phone must be visible and communicating for the pairing to be successful.

Disconnect Bluetooth Connection During an Active Call

You can manually disconnect or unpair from a Bluetooth phone through the Bluetooth settings menu.

- During an active call, where the audio is being routed through a connected Bluetooth phone (headset or hands-free connection), tap **Bluetooth** to route the phone's audio through the connected Bluetooth headset (On) or through the speaker (Off).
 - When the call is routed to a Bluetooth headset, the current call area is surrounded by a blue box, the **Bluetooth** button indicates it's on, and the **Bluetooth** call icon  is displayed in the Status Bar.
 - When Bluetooth is turned off, the call is routed through either the earpiece or speaker, the call area is surrounded by a green box, the **Bluetooth** button indicates it's off, and the **Call** icon  is displayed in the Status Bar.

Note: Communication can be toggled between the Bluetooth headset and the phone earpiece or speaker by tapping the Bluetooth button On or Off.


SmartShare

You can use the SmartShare feature easily in the Gallery, Music, Videos app, etc.

Enjoy Content Via a Variety of Devices


You can share your phone's content with a variety of devices.

- Tap  to share the content in the Gallery, Music, Videos, POLARIS Viewer 5.

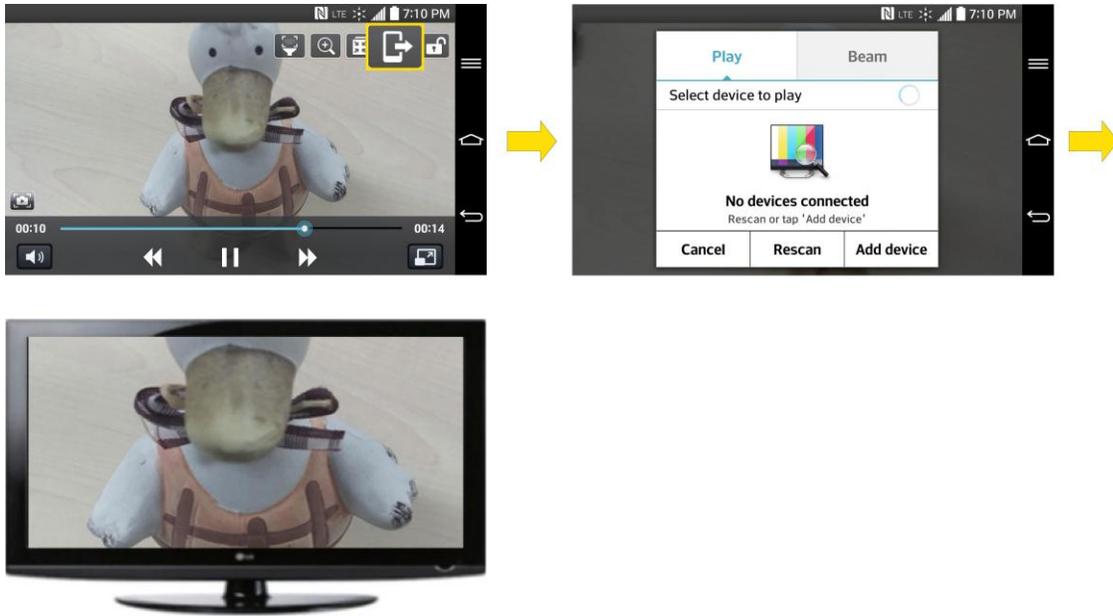


Playing / Sending

- **Play:** You can play the content via a TV, a Bluetooth speaker, etc.
- **Beam:** You can send the content to the device of Bluetooth and SmartShare Beam supported.
 - **SmartShare Beam:** Transferring the content feature fast via Wi-Fi Direct.

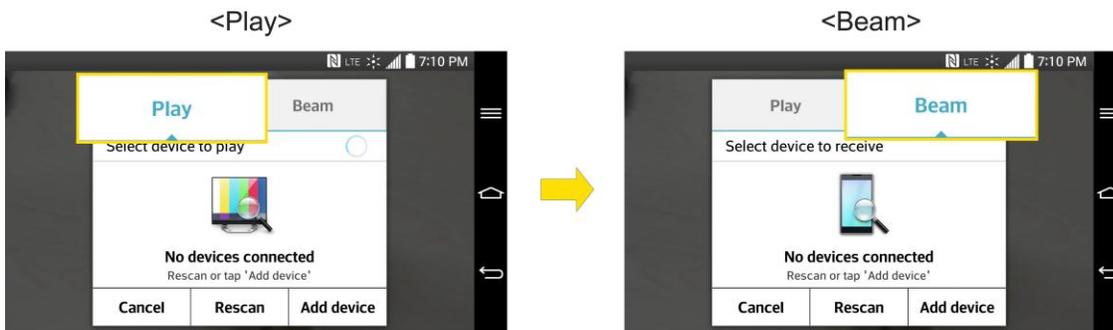

Enjoy Content from Nearby Devices

You can enjoy the content from nearby devices (i.e., PC, NAS, Mobile) in the Gallery, Music, Videos app, etc.

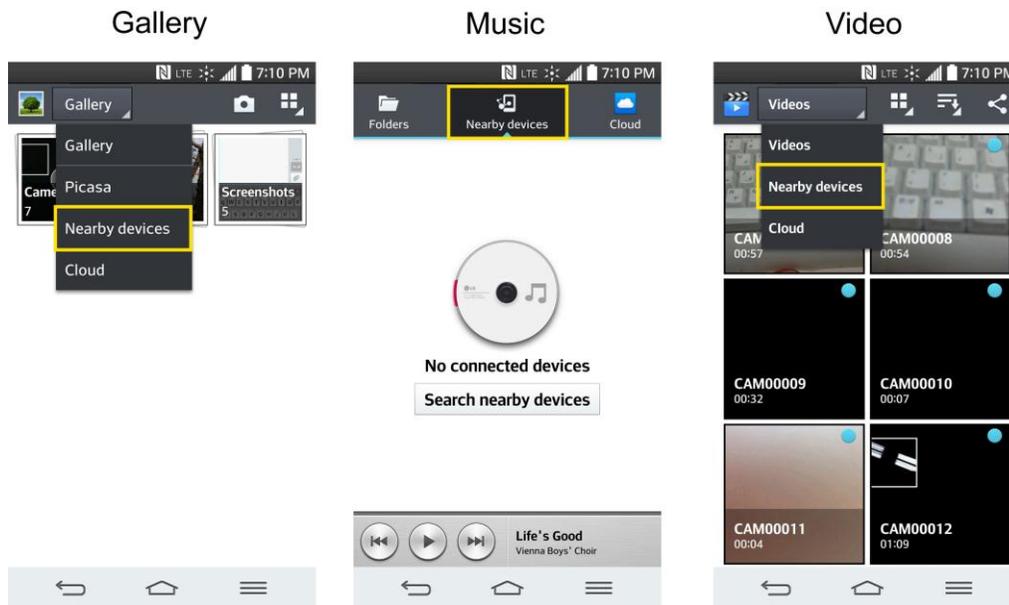

Connecting Devices

Connect your device and other devices supported by DLNA in the same Wi-Fi network.

Searching Other Devices

1. Tap **Nearby devices**, then you can see the DLNA-supported devices.
2. Connect to the device to view the content.

Using Content from the Cloud

You can use content from the cloud (i.e., Dropbox) in the Gallery, Music, Videos app, etc.

Using the Cloud

Note: The supported features may vary depending on the cloud. Retrieving data may take some time depending on the cloud.

1. Select Cloud in the Gallery, Music, Videos app, etc.
2. Select the cloud what you want to use and log in.
3. You can use the content of the cloud after logging in.
4. Set the cloud settings to select the app to use the cloud.

Transfer User Contents From an Android Phone to Your LG G2

If you want to transfer your user contents (i.e., pictures) from an Android phone to your LG G2, you can perform one of the following steps.

Transfer Via PC or Laptop

You can transfer user contents via a desktop or laptop using a USB cable.




1. Connect the Android phone to a computer using a USB cable. Then open the Android phone's Notifications Panel.
2. Tap **USB connected**, then (depending on the phone) tap **Media sync (MTP)**, or **Mass storage**.
3. On the computer, open **My computer** (or **Windows Explorer**), click the removable drive associated with your phone, then transfer all of the files you want to the computer.
4. On the computer, safely stop/remove the USB Phone. For example, for Windows® XP, use the Safely Remove Hardware option.
5. On the Android phone, open the Notifications Panel, tap **USB connected > Charge phone** (or **Turn off USB storage**) then disconnect the previous Android Phone from the computer.
6. Connect the LG G2 to the computer using the supplied USB cable.
7. In the USB connection type menu on the LG G2, tap **Media sync (MTP)**.
8. On the computer, organize the files in the folder, transfer the files into the LG G2 folder, then safely stop/remove the USB Phone.

9. On the LG G2, open the Notifications Panel, tap **USB connected** > **Charge phone**, then disconnect it from the computer.

Transfer Via Bluetooth Connection

You can transfer user contents between Bluetooth-enabled phones via Bluetooth connection.

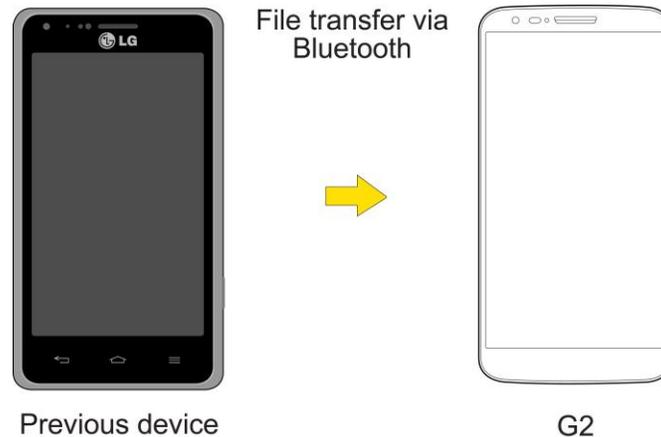

For example, to transfer pictures and videos:

1. Tap > > **Gallery**.
2. Tap , then Choose the file you want to send (or check **Select all** to send all files).
3. Tap **Share** and tap **Bluetooth**. The Bluetooth menu appears.
4. Tap **Search for devices** at the bottom of the screen to find the phone you want to send the file to.
5. Tap the phone and pair the devices to start the transfer.


– or –

If the phone that may receive your file was already paired, it would be on the list of PAIRED DEVICES. Tap the phone to start the transfer.

Note: Any applications supporting **Share**, such as **Music** and **POLARIS Viewer 5**, can send files via Bluetooth.

Transfer Via Cloud Storage

You can transfer user contents via the cloud service as Dropbox, Box Cloud, etc. after installing the apps from the Accounts & sync menu, Update Center, or Play Store.

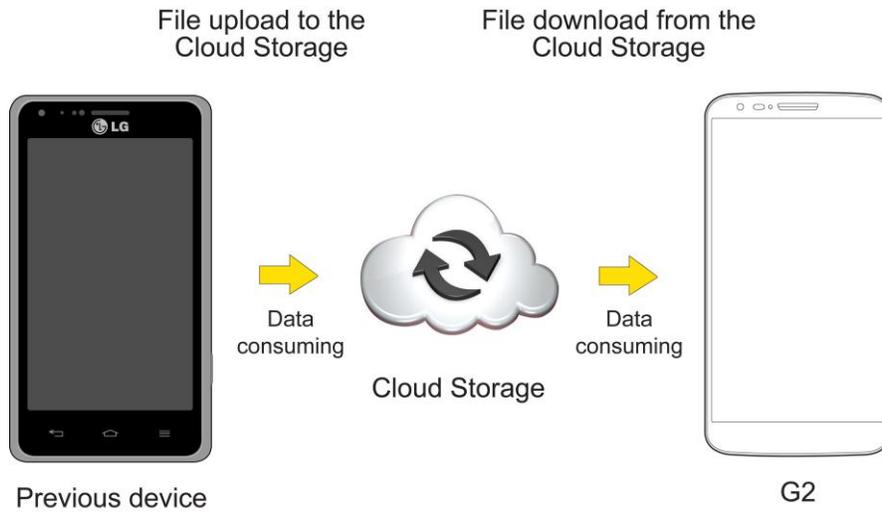

Note: It is recommended that you access your content through the cloud using a Wi-Fi connection to avoid data consumption.

Settings

The following topics provide an overview of items you can change using your phone's System settings menus.

Wireless Networks

Wireless Networks settings let you control your phone's Wi-Fi settings, Bluetooth, Tethering, VPN, and Mobile networks.

Airplane Mode

Airplane Mode (flight mode) allows you to use many of your phone's features, such as games, and music, when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When you set your phone to Airplane Mode, it cannot send or receive any calls or access online data.

Activate Airplane Mode

1. Press and hold the **Power/Lock Button**  to display the phone options menu.
2. Tap **Turn on Airplane mode**.

– or –

1. Tap  >  > **System settings**.
2. Tap the **Airplane mode** switch  to turn the function on. While in Airplane Mode, your phone's Status Bar will display .

Deactivate Airplane Mode

1. Press and hold the **Power/Lock Button**  to reveal the phone options menu.
2. Tap **Turn off Airplane mode**.

– or –

1. Tap  >  > **System settings**.
2. Tap **Airplane mode** switch  to turn the function off.

Wi-Fi Settings

Your phone lets you take advantage of Wi-Fi hotspots for high-speed data access using available computer networks. For details on your phone's Wi-Fi features and settings, see [Connect Wi-Fi](#).

Bluetooth Settings

Your phone's Bluetooth capabilities let you use wireless headsets, send and receive pictures and files, and more. For details on your phone's Bluetooth settings, see [Bluetooth Settings Menu](#).

Mobile Data

You can check the current data usage, set to enable/disable mobile data, or set the mobile data limit.

Turn Mobile Data On or Off

1. Tap  >  > **System settings** > **Mobile data**.

2. Tap the **Mobile data** switch  to turn it on.

– or –

Tap the **Mobile data** switch  to turn it off.

Call Settings

Your phone's Call settings menu lets you configure International call options and TTY mode.

Voicemail Settings

You can configure your voicemail settings. For details on Voicemail settings, see [Configure Visual Voicemail Settings](#).

Smart Dialing

Activate to make a call to the U.S. from abroad without entering the national code. Touch and hold 0 or tap the contact.

1. Tap  >  > **System settings** > **Call**.

2. Tap the **Smart dialing** checkbox to enable/disable the feature.

North American Dialing

Replace + code as needed for outgoing calls. The Smart dialing option must be disabled.

1. Tap  >  > **System settings** > **Call**.

2. Tap the **North American dialing** checkbox to enable/disable the feature.

International Dialing

Set international dialing code for outgoing calls. The Smart dialing and North America dialing options must be disabled.

1. Tap  >  > **System settings** > **Call** > **International dialing**.
2. Enter the international dialing code and tap **OK**.

Incoming Call Pop-up

Activate to display the incoming call pop-up when using an application.

1. Tap  >  > **System settings** > **Call**.
2. Tap the **Incoming call pop-up** checkbox to enable/disable the feature.

Call Reject

You can set call rejection and manage the reject list.

1. Tap  >  > **System settings** > **Call** > **Call reject**.
2. Tap **Call reject mode** and set an option.
3. Tap **Reject calls from** to set up the rejection list.

Decline with Message

You can send out a simple text message when you want to ignore an incoming call and respond to the caller with a text instead. You can add or edit quick messages.

1. Tap  >  > **System settings** > **Call** > **Decline with message**.
2. Tap a quick message to edit it.

– or –

Tap  to add a new quick message.

3. Enter a message and tap **Save**.

Privacy Keeper

You can set whether the phone to display the caller's information or not when you receive a call.

1. Tap  >  > **System settings** > **Call** > **Privacy keeper**.
2. Tap **Hide all info**, **Show number only**, or **Turn off**.

Auto Answer

Tap to set auto answer with handsfree.

1. Tap  >  > **System settings** > **Call** > **Auto answer**.
2. Tap **Disable**, **1 second**, **3 seconds**, or **5 seconds**.

TTY Mode

A TTY (also known as a TDD or Text Telephone) is a telecommunications phone that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone. Your phone is compatible with select TTY phones. Please check with the manufacturer of your TTY phone to ensure that it is compatible with digital cell phones. Your phone and TTY phone will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY phone, contact your TTY phone manufacturer to purchase the connector cable.

Turn TTY Mode On or Off

1. Tap  >  > **System settings** > **Call** > **TTY mode**.
2. Tap **TTY Off** to turn TTY mode off or tap **TTY Full**, **TTY HCO** or **TTY VCO**.

To access the state Telecommunications Relay Service (TRS) for assistance with TTY calls:

- Dial     to reach an operator.

Note: In TTY Mode, your phone will display the TTY access icon. When enabled, TTY mode may impair the audio quality of non-TTY phones connected to the headset jack.

WARNING: 9-1-1 Emergency Calling Boost recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 9-1-1 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.

Hearing Aids

Tap to place the checkmark to turn on hearing aid compatibility.

1. Tap  >  > **System settings** > **Call**.
2. Tap the **Hearing aids** checkbox to enable/disable the feature.

Proximity Sensor

You can access the proximity sensor through the Call Settings menu.

When receiving and making calls, this sensor automatically turns the backlight off and locks the touch keypad by sensing when the phone is near your ear. This extends battery life and prevents the touch keypad from activating unintentionally during calls.

To enable the Proximity Sensor:

1. Tap  >  > **System settings** > **Call**.
2. Tap the **Proximity Sensor** checkbox to enable it. (A blue checkmark will appear.)

Voice Enhancement

You can set the phone to enhance voice clarity in noisy environments so you can hear more clearly.

To set noise reduction:

1. Tap  >  > **System settings** > **Call**.
2. Tap the **Voice enhancement** checkbox to turn it on. (A blue checkmark will appear.)

Save Unknown Numbers

You can set the phone to save the phone numbers not saved in Contacts yet.

To save unknown numbers:

1. Tap  >  > **System settings** > **Call**.
2. Tap the **Save unknown numbers** checkbox to turn it on. (A blue checkmark will appear.)

Power Button Ends Call

You can set the phone to end calls with the **Power/Lock Button** , in addition to  on the call screen.

To enable this feature:

1. Tap  >  > **System settings** > **Call**.
2. Tap **Power button ends call** to enable it. (A blue checkmark will appear.)

Repeat Alert for Missed Calls

You can set the phone to remind you when you have missed calls.

To set an alert for missed calls:

1. Tap  >  > **System settings** > **Call** > **Repeat alert for missed calls**.
2. Choose from **Never**, **Every 12 seconds**, **Every 2 minutes**, and **Every 5 minutes**.

Share & Connect

Your phone lets you use the wireless technology that enables data transmission between devices using NFC, Wi-Fi, etc.

NFC Settings

NFC (Near Field Communication) is a wireless technology that enables data transmission between two objects when they are brought within a few inches of each other. When you enable NFC on your phone, it can exchange data with other NFC-enabled devices or read information from smart tags embedded in posters, stickers, and other products. From the NFC settings menu, you can manage direct sharing and pairing.

Turn On NFC

1. Tap  >  > **System settings** > **Share & connect**.
2. Tap the **NFC** switch  to activate.

Android Beam

When this feature is turned on, you can beam app content to another NFC-capable device by holding the devices close together.

For example, you can beam Browser pages, YouTube videos, contacts, and more. Just bring the devices together (typically back to back) and then touch your screen. The app determines what gets beamed.

Turn On Android Beam

1. Tap  >  > **System settings** > **Share & connect**.
2. Tap the **Android Beam** switch  to activate the feature. (NFC turns on automatically).

SmartShare Beam

Turn on to receive multimedia contents via SmartShare Beam from LG phones or tablets.

Turn On SmartShare Beam

1. Tap  >  > **System settings** > **Share & connect**.
2. Tap the **SmartShare Beam** and tap the **SmartShare Beam** switch  to activate the feature.
3. Turn on the SmartShare Beam feature on other LG phones or tablets supporting SmartShare Beam to send/receive photos, musics, videos and documents.

Miracast

You can mirror phone screen and sound onto LG Miracast dongle or TV wirelessly.

1. Tap  >  > **System settings** > **Share & connect** > **Miracast**.
2. Tap the **Miracast** switch  to turn on this feature.
3. Turn on the Miracast feature on your TV or connect to a LG Miracast dongle.

Tips: To start the Miracast feature quickly, tap the Miracast icon  in the Notifications Panel. While mirroring, Wi-Fi or Mobile Hotspot cannot be used simultaneously.

Wireless Storage

To manage files on your phone in the computer or copy files to the phone from the computer without a USB connection. Both devices must be connected to the same network.

Turn On Wireless Storage

1. Tap  >  > **System settings** > **Share & connect**.
2. Tap the **Wireless storage** and tap the **Wireless storage** switch  to activate the feature.
3. Connect to a network, then select the devices to allow connection.
4. Enter the URL shown on your phone in the address bar of the browser on your computer to access your phone's photos and other files wirelessly from your computer.

More Settings

You can change more settings in the Wireless Networks category.

Wi-Fi Hotspot

You can share your phone's data connection with up to eight phones at once, by turning your phone into a portable Wi-Fi hotspot. This service is available for a daily rate. Visit boostmobile.com for more details.

To share your phone's data connection as a portable Wi-Fi hotspot:

1. Tap  >  > **System settings** > **More...** > **Wi-Fi hotspot**.
2. Tap the **Wi-Fi hotspot** switch  to activate it. After a moment, the phone starts broadcasting its Wi-Fi network name (SSID), so you can connect it with up to eight (8) computers or other phones.

3. To change the network name (SSID) or secure its Wi-Fi network, tap **Set up Wi-Fi hotspot**.
4. In the dialog box, configure the options.
 - Tap the **Network SSID** field and enter a new network SSID (name) that other computers see when scanning for Wi-Fi networks.
 - To secure the Wi-Fi network, tap the **Security** menu and select **WPA2 PSK** (Wi-Fi Protected Access 2 with a Preshared Key). When a password field is added to the dialog box, enter a password. You will need to enter this password when you connect the phone's hotspot with a computer or other phone.
 - Tap the **SSID Visibility** field to decide if you want your hotspot to be displayed to other devices.
 - To limit the number of phones to share your phone's data connection, tap **Max users** and select the number of the phones to limit.
5. Tap **Save**.

Bluetooth Tethering

This feature allows you to connect other devices to your phone via Bluetooth and share its internet connection.

Turn on Bluetooth tethering

1. Tap  >  > **System settings** > **More....**
2. Tap the **Bluetooth tethering** switch  to activate.

Help

The Help menu displays helpful information for Wi-Fi hotspot and Bluetooth tethering.

Mobile Networks Settings

You can choose whether to turn on or off the LTE radio band. You can also set whether to enable or disable data access on your phone.

Enable/Disable Data Access

1. Tap  >  > **System settings** > **More...** > **Mobile networks**.
2. Tap the **Data enabled** checkbox to enable/disable the feature.

4G Settings

The 4G settings menu allows you to view your 4G network provider and IP address.

1. Tap  >  > **System settings** > **More...** > **Mobile networks**.
2. Tap the **4G settings** to check **Network provider** and **IP address**.

Network Mode

The Network mode settings menu allows you to choose your preferred network mode.

1. Tap  >  > **System settings** > **More...** > **Mobile networks** > **Network mode**.
2. Choose from the following options:
 - Tap **Global** to turn on the Global radio band.
 - Tap **LTE/CDMA** to turn on the LTE/CDMA radio band.
 - Tap **CDMA** to turn on the CDMA radio band.

Connections Optimizer

Your phone can be set to automatically connect you to Wi-Fi networks on your device's remembered list and, if applicable, to the Boost 4G Network.

1. Tap  >  > **System settings** > **More...**
2. Tap **Mobile networks** > **Connections Optimizer**.
3. Read the message and tap **I agree**.

Default SMS App

The Default SMS App settings menu allows you to choose an app as your default text and multimedia messaging app.

VPN Settings

From your phone, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network. For details on your phone's VPN settings, see [Virtual Private Networks \(VPN\)](#).

Device Settings

Device settings let you configure your phone's sound, display, gestures, power saver, apps, and quad core control settings.

Sound Settings

In the Sound settings menu, you can configure call and notification ringtones, audio volumes, as well as some related settings.

Sound Profile

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound** > **Sound profile**.
3. Tap one of the three options.

To switch to silent mode:

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound** > **Sound profile**.
3. Tap **Silent**.

– or –

Press the **Volume Down Button** until you see  on the screen.

Volumes

Adjust your phone's volume settings to suit your needs and your environment.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound** > **Volumes**.
3. Adjust each volume level.
 - **Ringtone:** Changes the volume of your call ringtones (if applicable).
 - **Notifications:** Allows you to set this volume level. This is the volume of the ringtone when you receive a notification.
 - **Touch feedback & system:** Changes the volume for feedback taps and system notifications.
 - **Music, video, games & other media:** Changes the volume of your music, videos and other media.
4. Tap **OK**.

Tip: You can adjust the ringer volume on the Home screen or Applications screen, or almost any screen by using the Volume Buttons on the back of your phone. In other applications such as Music, YouTube, spoken directions, and other audio, the Volume Buttons control the volume of the application.

Vibrate Strength

Set vibrate strength for incoming calls, notifications and touch feedback.

Quiet Mode

You can set the days and times to automatically turn off all sounds except alarms and media.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound > Quiet mode**.
3. Set the time and days and vibrate option.
4. Tap the **Turn Quiet mode on now** switch  to activate it.

Ringtones & Vibrations Settings

You can select and assign ringtones and notifications for your incoming calls.

Phone Ringtone

The phone ringtones alert you of incoming calls.

To select a ringtone for voice calls:

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound > Phone ringtone**.
3. Tap a ringtone to select it and to hear it. If you want to set the ringtone, tap **OK**. If not, select another ringtone or tap **Cancel**.

To use a song as a ringtone:

You can use a song as your phone ringtone, in place of one of the ringtones that come with the phone.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound > Phone ringtone**.
3. Tap  and tap a song.

For details about using the Music Player application, see [Music](#).

Smart Ringtone

To set the phone to automatically increase the volume of the ringtone in noisy environments.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound**.
3. Tap the **Smart ringtone** checkbox to turn on the feature. (A blue checkmark will appear.)

Vibrate Type

To set a vibrate type for incoming calls, messages receipt, Email receipt, alarm, and calendar event.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound > Vibrate type**.

Note: Vibrate Type can only be selected when **Vibrate only** is selected as the sound profile or **Ringtone with vibration** option is checked in the Sound screen.

3. Set each vibrate type to the desired option.
4. Tap **OK**.

Gentle Vibration

Gentle vibration allows you to gradually increase vibration up to the currently configured setting.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound > Gentle vibration**.

Ringtone with Vibration

To set the phone to vibrate accompanying the ringtone.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound**.
3. Tap the **Ringtone with vibration** checkbox to turn on the feature. (A blue checkmark will appear.)

Voice Notifications

To read out the incoming call and the message event automatically.

1. Tap  >  > **System settings > Sound**.
2. From the DEVICE section, tap **Sound > Voice notifications**.
3. Tap  to turn the feature on and set the desired options.

Notification Sound

When you receive a notification such as the arrival of new messages, calendar events, or alarms, the phone sounds a ringtone.

1. Tap  >  > **System settings** > **Sound**.
2. From the DEVICE section, tap **Sound** > **Notification sound**.
3. Tap a sound to select it and to hear it. If you want to set the sound, tap **OK**. If not, select another sound or tap **Cancel**.

Touch Feedback & System

The Touch Feedback & System menu lets you select whether you hear tones when touching numbers on the dialpad, selecting on-screen options, and more.

To hear tones when you use the dialpad to dial a number:

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound** > **Touch feedback & system**.
3. Tap the **Dial pad touch tones** checkbox. (A blue checkmark will appear.)

To hear sound when you tap buttons, icons, and other on-screen items:

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound** > **Touch feedback & system**.
3. Tap the **Touch sounds** checkbox. (A blue checkmark will appear.)

To hear sound when the screen is locked or unlocked:

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound** > **Touch feedback & system**.
3. Tap the **Screen lock sound** checkbox. (A blue checkmark will appear.)

To set your phone to vibrate when touching buttons and keys:

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound** > **Touch feedback & system**.
3. Tap the **Vibrate on touch** checkbox. (A blue checkmark will appear.)

Display Settings

Adjusting your phone's display settings not only helps you see what you want, it can also help increase battery life.

Brightness

Adjust your screen's contrast (brightness) to suit your surroundings.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display > Brightness**.
3. Use the slider to set a brightness level.

Note: For the best battery performance, use the dimmer levels. You can also set **Automatic brightness** to adjust brightness depending on the surrounding lighting.

4. Tap **OK**.

Screen Timeout

Select how long the display screen remains backlit after you touch the screen or press a key before the screen darkens.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display > Screen timeout**.
3. Tap **15 sec, 30 sec, 1 min, 2 min, 5 min, 10 min, 15 min,** or **Keep screen turned on**.

Note: Long backlight settings reduce the battery's talk and standby times. For the best battery performance, use the shortest convenient timeout.

Screen-off Effect

Select the screen-off effect when locking and turning off the screen.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display > Screen-off effect**.
3. Tap the desired option.
4. Tap **OK**.

Note: To preview the screen-off effect, tap **Preview**.

Auto-Rotate Screen

Choose whether the phone automatically switches the orientation of the screen as you turn it sideways or even upside down.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display**.
3. Tap the **Auto-rotate screen** checkbox to automatically rotate the screen (a blue checkmark will appear).

– or –

To disable the auto-rotate feature, tap the **Auto-rotate screen** checkbox again so that the checkmark is removed.

Note: Some applications on your phone do not support the Auto-rotate feature.

Daydream

Screensaver will be on when the phone is sleeping while docked and/or charging.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display > Daydream**.
3. Tap the feature you want to use and configure it.
4. To activate daydream feature, tap the **Daydream** switch .

Font Type

Choose the desired font type.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display > Font type**.
3. Tap a desired font type.

Font Size

Choose the desired font size.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display > Font size**.
3. Tap a desired font size.

Smart Screen

Keep the screen on when device detects your eyes looking at the screen.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display** > **Smart screen** (A blue checkmark will appear).

Smart Video

Pause the video while playing automatically when phone detects you are not looking at the screen.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display** > **Smart video** (A blue checkmark will appear).

Front Touch Buttons

Configure the Front key light options.

To select front touch buttons' combination:

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display** > **Front touch buttons**
3. Select front touch buttons' combination from the list.

To select front touch buttons' color:

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display** > **Front touch buttons** > **Color**.
3. Tap the one color theme from the list.

To turn on transparent background:

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display** > **Front touch buttons**.
3. Tap the **Transparent background** checkbox. (A blue checkmark will appear.)

Notification LED

Configures the notification flash options.

1. Tap  >  > **System settings**.

2. From the DEVICE section, tap **Display > Notification LED**.
3. To activate LED light for notification, tap the **Notification LED** switch .
4. Tap each item to receive notification with LED light flash.

Home Screen

Configure your phone's home screen settings.

Theme

Choose the desired theme.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Home screen > Theme**.
3. Select the desired theme and tap **Apply**.

Wallpaper

Choose the desired wallpaper.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Home screen > Wallpaper**.
3. Choose a location and select the desired wallpaper.
4. Tap **SET WALLPAPER** or **Apply** to set it as the wallpaper.

Screen Swipe Effect

Choose the desired type of effect to display when you swipe from one Home screen canvas to the next.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Home screen > Screen swipe effect**.
3. Tap the desired effect and **OK**.

Allow Home Screen Looping

Enable Allow Home screen looping to display the first screen after the last screen when scrolling.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Home screen**.

3. Tap the **Allow Home screen looping** checkbox. (A blue checkmark will appear.)

Portrait View Only

Portrait View Only allows the wallpaper to scroll with the screen instead of having it as a static image.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Home screen**.
3. Tap the **Portrait view only** checkbox. (A blue checkmark will appear.)

Home Backup & Restore

You can backup and restore app/widget configurations and the theme.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Home screen**.
3. Tap **Home backup & restore** > **Backup** or **Restore**.

Help

With the Help menu, you can view helpful tips for the Home screen.

Lock Screen

Lock screen menu lets you configure screen lock options and when to be locked.

Select Screen Lock

You can increase your phone's security by face unlock, creating a screen unlock pattern, creating a PIN, or choosing a password. When these features are enabled, you must show your face, draw the correct unlock pattern, enter the PIN, or enter the password on the screen to unlock and regain access to the phone.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Lock screen** > **Select screen lock**.
3. Select the desired screen lock option from the following options.
 - **None**: No lock screen.
 - **Swipe**: Swipe any part of the screen to unlock the screen.

- **Knock Code:** The Knock Code feature allows you to create your own unlock code using a combination of knocks on the screen. You can access the Home screen directly when the screen is off by tapping the same sequence on the screen.
- **Face Unlock:** Unlocks the screen through facial recognition. Follow the prompts. You are asked to set a Pattern and/or PIN as a backup.
- **Pattern:** Opens a set of screens that guide you through drawing a screen unlock pattern. It's recommended that you enter backup PIN as well in case that you might lost the pattern. Then, you can set vibrate on touch or whether to make the pattern visible.
- **PIN:** Enter a numeric PIN to unlock screen.
- **Password:** Enter a password to unlock screen.

From then on, any time you wish to turn the phone on or unlock the screen, you must draw your unlock pattern or enter the PIN or password to unlock the screen.

- If you have set up Unlock PIN or Unlock Password, enter the Unlock PIN or Unlock Password. After entering it, tap **OK**. The last screen you were working on opens.

Note: You have five opportunities to enter your unlock Pattern, PIN or Password. If you've entered wrong information five times in a row, you must wait 30 seconds before you can attempt again.

Note: When using Knock Code, failing to enter the correct sequence 5 times will display an outlined grid box to allow you precise entry. If you fail 1 more time, the backup PIN or Google account sign-in is required.

- If you've set up a Google Account on the phone, tap the **Forgot pattern?** button. You will be able to unlock the phone with your Google Account username and password or entering you Backup PIN.
- If you haven't created a Google Account on the phone, you must perform a factory reset.

CAUTION! If you perform a factory reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a factory reset.

- When you can't recall your unlock **Pattern, PIN or Password:**
 1. Turn the phone off.
 2. Press and hold the following keys at the same time: **Volume Up Button**  + **Power/Lock Button**  on the back of the phone.
 3. Release the **Power/Lock Button**  only when the LG logo is displayed, then immediately press and hold the **Power/ Lock Button**  again.

4. Release all keys when the Factory hard reset screen is displayed.
5. Press the **Volume Buttons**   to highlight **Yes**, then press the **Power/Lock Button**  to continue.
6. Press the **Volume Buttons**   to highlight **Yes** once more, then press the **Power/Lock Button**  to confirm.
7. Your phone will perform a factory reset.

Note: If you can't recall your unlock PIN or Password, call Boost Customer Service at **1-888-211-4727**.

Screen Swipe Effect

Choose the desired screen effect when you swipe the screen to unlock the phone.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Lock screen** > **Screen swipe effect**.
3. Tap **Ripple**, **Dewdrop**, **White hole**, **Particle**, or **Crystal**.

Weather Animation

Show weather animation for current location or primary city set in Weather based on auto data updates.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Lock screen**.
3. Tap the **Weather animation** checkbox to show weather animation. (A blue checkmark will appear.)

Wallpaper

Select the wallpaper for your lock screen.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Lock screen** > **Wallpaper**.
3. Select **Gallery** or **Wallpaper gallery**.
4. Select the desired wallpaper and tap **OK** or **Set wallpaper**.

Shortcuts

Customize clocks and shortcuts on the lock screen.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Lock screen > Shortcuts**.
3. Tap each shortcut key to select the desired shortcut key.
4. After personalizing, tap **Save**.

Owner Info

Select whether to display owner information on the lock screen and customize owner information.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Lock screen**.
3. Tap the **Owner info** checkbox to show owner information on the lock screen. (A blue checkmark will appear.)
4. Tap  to enter the owner information.

Lock Timer

Choose the amount of time before the screen automatically locks after the screen has timed-out.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Lock screen > Lock timer**.
3. Tap the desired time.

Power Button Instantly Locks

Allows you to instantly lock the screen when you press the Power/Lock Button .


1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Lock screen**.
3. Tap the **Power button instantly locks** checkbox to turn on the feature. (A blue checkmark will appear.)

Gestures

You can configure various gesture options.

Screen On/Off

You can set the phone to turn the screen on by quickly double-tapping the phone.

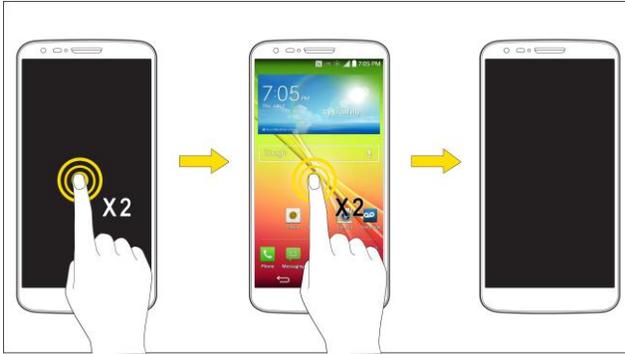

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Gestures**.
3. Tap the **Screen on/off** checkbox to set this feature on. (A blue checkmark will appear.)

Answer an Incoming Call

During an incoming call, bring the phone to your ear to answer the call.

If the proximity sensor is covered by substance as phone case and etc., it may cause incorrect action.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Gestures**.
3. Tap the **Answer an incoming call** checkbox to set this feature on. (A blue checkmark will appear.)

Fade Out Ringtone

You can set the phone to fade out the ringtone by picking up it from the flat surface during the incoming call.

If proximity sensor is covered by anything, such as a phone case, it may cause incorrect action.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Gestures**.
3. Tap the **Fade out ringtone** checkbox to set this feature on. (A blue checkmark will appear.)

Silence Incoming Calls

You can set the phone to silence incoming calls by just flipping the phone.

1. Tap  >  > **System settings**.

2. From the DEVICE section, tap **Gestures**.
3. Tap the **Silence incoming calls** checkbox to set this feature on. (A blue checkmark will appear.)

Snooze or Turn off Alarm

You can set the phone to snooze or stop the alarm by just flipping the phone.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Gestures**.
3. Tap the **Snooze or turn off alarm** checkbox to set this feature on. (A blue checkmark will appear.)

Pause Video

You can set the phone to pause the video by just flipping the phone.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Gestures**.
3. Tap the **Pause video** checkbox to set this feature on. (A blue checkmark will appear.)

Help

Use the Help menu to view helpful information for available gestures.

Motion Sensor Calibration

Motion sensor calibration improves the accuracy of the tilt and speed of the sensor.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Gestures**.
3. Tap **Motion sensor calibration**.
4. Place the phone on a flat surface and tap **Calibrate sensor**.

One-handed Operation

You can configure various options for one-handed operations.

Dial Keypad

To adjust the position of the dial keypad to the left or right:

1. Tap  >  > **System settings**.

2. From the DEVICE section, tap **One-handed operation**.
3. Tap the **Dial keypad** checkbox to set this feature on. (A blue checkmark will appear.)

LG Keyboard

To adjust the position of the LG keypad to the left or right:

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **One-handed operation**.
3. Tap the **LG keyboard** checkbox to set this feature on. (A blue checkmark will appear.)

Lock Screen

To adjust the position of the PIN entry to the left or right:

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **One-handed operation**.
3. Tap the **Lock screen** checkbox to set this feature on. (A blue checkmark will appear.)

Help

Use the Help menu to view helpful information for one-handed operation features.

Storage

The Storage menu lets you monitor the used and available space on the system memory.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Storage**.

Battery

The Battery menu lets you show any battery information and configure options.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Battery**.
3. Tap **Battery percentage on status bar** to display the battery percentage indicator on the Status Bar.
4. Tap **Battery saver** to set the Battery saver feature on or off and select which functions are changed when the feature is activated.
5. Tap **Help** to view tips about the Battery saver feature.

Apps

The Apps settings menu lets you view details about the applications installed on your phone, manage their data, force them to stop, and set whether you want to permit installation of applications that you obtain from websites and email.

To view details about the applications:

1. Tap  >  > **System settings** > **Apps**.
2. Tap the **DOWNLOADED**, **RUNNING**, or **ALL** tab to view your apps.
3. Tap the desired app to view its information.

To force applications to stop:

1. Tap  >  > **System settings** > **Apps**.
2. Tap the **RUNNING** tab.
3. Find the application to force stop and tap the application.
4. Tap **Stop**.
5. Read the disclaimer and tap **OK**.

To uninstall a downloaded application:

1. Tap  >  > **System settings** > **Apps**.
2. Tap the **DOWNLOADED** tab.
3. Find the application you want to uninstall and tap it.
4. Tap **Uninstall**.
5. Read the disclaimer and tap **OK**.

Slide Aside

Slide Aside allows you to quickly switch between three open applications (or tasks) using a three finger gesture. See [Slide Aside](#) for more information.

Personal Settings

The Personal settings menu lets you configure accounts & sync, cloud, guest mode, location, security, language & input, and backup & reset settings.

Accounts & Sync

Use the Accounts & sync settings menu to add, remove, and manage your Google™ and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules and whether all applications can synchronize user data automatically. Gmail™, Calendar, and other applications may also have their own settings to control how they synchronize data; see the sections on those applications for details. Tap **Add account** to add new account.

1. Tap  >  > **System settings**.
2. From the PERSONAL section, tap **Accounts & sync**.

Note: Tap **Auto-sync data** to automatically sync your account data.

Cloud

The Cloud menu allows you to manage cloud accounts for LG apps.

You can add your cloud account to the list and then you can browse, play and download your content on LG apps.

To add a cloud account:

1. Tap  >  > **System settings**.
2. From the PERSONAL section, tap **Cloud**.
3. To add an account, tap **Dropbox** or **Box** and select a cloud to add.
4. After signing in, tap the cloud menu in Gallery, Music, Videos, File Manager and Polaris Viewer 5 to use cloud content.

To set which apps to use the cloud with:

1. Tap  >  > **System settings** > **Cloud**.
2. Select a cloud and tap the apps you want to use with it.

To remove an account:

1. Tap  >  > **System settings** > **Cloud**.
2. Select a cloud and tap  > **Remove account** > **OK**.

Guest Mode

Use Guest mode when showing your phone to others. Only pre-selected apps will appear on a separate Home screen. You can enter Guest mode by drawing the mode pattern on the Lock screen. See [Guest Mode](#) for more information.

Help

Use the Help menu to display helpful information for the Guest Mode feature.

Location

When Location service is turned on, your phone determines your approximate location using GPS, Wi-Fi and mobile networks.

- Tap  >  > **System settings** > **Location**.
 - **Mode** – Set the location mode from **High accuracy**, **Battery saving** and **Device sensors only**.

Security

Use the Security settings to configure how to help secure your phone and its data.

- Tap  >  > **System settings** > **Security**.

Encrypt Phone

The Encrypt Phone menu opens a screen that encrypts data on the phone for security. You will be required to enter a PIN or password to decrypt your phone each time you power it on.

Password Typing Visible

Checkmark Password Typing Visible to briefly show each character of passwords as you enter them so that you can see what you enter.

Phone Administrators

Add or remove device administrators using the Phone Administrators menu.

Unknown Sources

Use the Unknown Sources option to allow installation of non-Play Store applications.

Verify Apps

Use the Verify Apps option to disallow or warn before installation of apps that may cause harm.

Trusted Credentials

Checkmark Trusted Credentials to allow applications to access your phone's encrypted store of secure certificates and related passwords and other credentials. You use credential storage to establish some kinds of VPN and Wi-Fi connections. If you have not set a password for the secure credential storage, this setting is dimmed.

Install from Storage

Touch Install from Storage install a secure certificate from storage.

Clear Credentials

The Clear Credentials option deletes all secure certificates and related credentials and erases the secure storage's own password, after prompting you to confirm that you want to do this.

Language & Input Settings

Your phone's Language & input settings let you select a language for the device's screens and menus, as well as manage a personal user dictionary. The Keyboard settings let you select a preferred input method, control keyboard settings, and more.

Language

You can choose to display your device's on-screen menus in multiple languages.

1. Tap  >  > **System settings** > **Language & input** > **Language**.
2. Select a language from the list.

Spelling Correction

The Spelling correction feature allows spelling correction when using the on-screen keyboard.

Personal Dictionary

The Personal Dictionary feature allows you to view, edit, and add words to your personal dictionary.

Keyboard & Input Methods

Here, you will see the default keyboard type. Checkmark the keyboard you want to use from **Android Keyboard (AOSP)**, **LG Keyboard**, **Google voice typing**, or **Swype**. Tap  to configure each keyboard's settings.

Voice Search

Tap **Voice search** to configure Voice Search settings.

Text-to-Speech Output

Tap **Text-to-speech output** to set the preferred engine or general settings for text-to-speech output.

Pointer Speed

Use the Pointer speed menu to adjust the pointer speed.

Backup & Reset

The Backup & reset feature on your device allows you to back-up your data, automatically restore data, and erase all the data on your phone.

Back Up My Data

You can back up app data, Wi-Fi passwords, and other settings to Google servers.

1. Tap  >  > **System settings** > **Backup & reset**.
2. Check if the **Backup account** is correct.
3. Tap the **Back up my data** checkbox. (A blue checkmark will appear.)
4. To set to automatically restore the backups, tap the **Automatic restore** checkbox. (A blue checkmark will appear.)

Backup Account

Use the Backup account option to choose an account to use to back up data.

1. Tap  >  > **System settings** > **Backup & reset**.
2. Set the Backup account.

Automatic Restore

When reinstalling an app, enabling the Automatic restore option restores backed up settings and data.

1. Tap  >  > **System settings** > **Backup & reset**.
2. Tap the **Automatic restore** checkbox. (A blue checkmark will appear.)

LG Backup Service

LG Backup service backs up all information on the device and restores it in the event of data loss or replacement.

1. Tap  >  > **System settings** > **Backup & reset** > **LG Backup service**.
2. Read the LG apps rights agreement and tap the check box (if necessary).
3. Tap **Accept**, if not previously accepted.

Note: Tap  > **Help** to learn more about LG Backup Service.

Factory Data Reset

Resetting the phone restores all the factory defaults, including personal data from internal phone storage, information about your Google Account, any other accounts, your system and application settings, and any downloaded applications. Resetting the phone does not erase any system software updates you've downloaded or any files you have saved, such as music, pictures, or applications. After resetting the phone, the next time you turn on the phone, you're prompted to reenter the same kind of information as when you first started the phone. See [Activate Your Phone](#).

1. Tap  >  > **System settings** > **Backup & reset**.
2. If you are certain that you would like to restore all factory settings, tap **Factory data reset**.
3. Tap **Reset phone**.
4. Enter your unlock sequence if you have configured one, then tap **Erase everything** and **OK** to confirm.

System Settings

This group of settings lets you configure date & time, accessibility and PC connection. And you can activate the phone, update the phone, print, or view the phone information.

Date & Time

Set your preferences for how the date and time is displayed. You can also select a time zone.

- Tap  >  > **System settings** > **Date & time**.

Accessibility

Use the Accessibility settings to configure any accessibility plug-ins you have installed on your phone.

Note: Requires additional plug-ins to become selectable.

Vision

Use the Vision menu to configure the following visual options.

1. Tap  >  > **System settings** > **Accessibility**.
2. Set the following options as you want.
 - **TalkBack:** Tap the **TalkBack** switch  to turn it on.
 - **Large text:** Checkmark to increase the size of the text.

- **Invert colors:** Set the color contrast for better screen viewing. Tap the Invert color switch at the top right corner of the screen to turn it on. Then, tap the screen and drag across the screen in any direction until you see the color contrast you want to use.
- **Color adjustment:** Adjust screen and content colors.
- **Touch zoom:** Zoom in or out by triple tapping the screen.
- **Screen shades:** Set to 0% brightness of device for saving power and low vision.
- **Text-to-speech output:** Text-to-speech output provides audible readout of text, for example, the contents of text messages, and the Caller ID for incoming calls.

Hearing

Use the Hearing menu to configure the following hearing options.

1. Tap  >  > **System settings > Accessibility.**
2. Set the following options as you want.
 - **Audio type:** Checkmark to change the sound to Mono.
 - **Sound balance:** To manually adjust the sound direction.
 - **Captions:** Customize caption settings for those with hearing impairments.

Physical and Motor

Use the Physical and motor menu to configure the following physical and motor options.

1. Tap  >  > **System settings > Accessibility.**
2. Set the following options as you want.
 - **Touch feedback time:** Allows you to set the touch and hold delay (short, medium, or long).
 - **Universal touch:** Provide a touch board with easy use for general buttons or gestures to access in short. Tap the Universal touch icon  to be able to tap its **Power** button, **Home** key, **Volume down** button, **Volume up** button, and **Pinch** button. Draw a "C" on the board to automatically display the Dial tab. Draw an "M" on the board to automatically display the Messaging application. Draw a "W" on the board to automatically launch the browser application.

System

Use the System menu to configure the following system options.

1. Tap  >  > **System settings** > **Accessibility**.
2. Set the following options as you want.
 - **Auto-rotate screen:** Checkmark to allow the device to rotate the screen depending on the device orientation (portrait or landscape).
 - **Read passwords:** Checkmark so that the device reads out passwords as you enter them.
 - **Power key ends call:** Checkmark so that you can end voice calls by pressing the **Power/Lock Button** . When this option is enabled, pressing the Power/Lock Button during a call does not lock the screen.
 - **Accessibility settings shortcut:** Sets quick, easy access to selected features when you triple-tap the **Home Key** . Choose **Off**, **Show all**, **TalkBack**, **Invert colors**, **Universal touch**, or **Accessibility settings**.

Services

Use the Services menu to configure the service options.

- Tap  >  > **System settings** > **Accessibility**.

Note: If you want use this option, a service must be installed.

PC Connection

Your phone's PC connection menu lets you configure the default USB connection method, and ask upon connecting setting.

Select USB Connection Method

The Select USB connection method option opens a dialog box to choose the default connection mode when connecting your phone to a PC via USB. Choose from **Charge phone**, **Media sync (MTP)**, or **Send images (PTP)**.

Note: For Windows[®] XP, the MTP driver is not installed by default. If Windows Media Player(WMP) over version 10.x is installed on the PC, the MTP driver may be installed. For Windows[®] 7 except for N edition, the driver is installed.

Ask Upon Connecting

Checkmark Ask upon connecting to have the phone ask you to choose which USB connection mode it should connect with to a PC.

Help

Use the Help menu to display helpful information about the available USB connection methods.

Accessory

Keep in mind that turning on these accessory settings may result in irregular device behavior.

- Tap  >  > **System settings** > **Accessory**.

QuickWindow Case

Checkmark QuickWindow case to use functions available on the small view window.

USB Storage

Activate USB storage to display the app panel automatically when USB storage is connected to the phone via OTG (On-the-Go) USB cable. Tap the checkbox next to the apps you want to make available and tap  to activate the feature.

Earphone

Activate Earphone to display the app panel automatically when an earphone is connected to the phone. Tap the checkbox next to the apps you want to make available and tap  to activate the feature.

Activate This Device

Follow the onscreen instructions to activate your phone.

1. Tap  >  > **System settings** > **Activate this device**.
2. Follow the on-screen instructions.

System Updates

From time to time, updates may become available for your phone. You can download and apply updates through the Settings menu.

Update PRL

Update PRL allows you to download and update the PRL (Preferred Roaming List) automatically.

1. Tap  >  > **System settings** > **System updates** > **Update PRL**.
2. Follow the on-screen instructions.

Update Profile

Update profile allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your phone.

1. Tap  >  > **System settings** > **System updates** > **Update profile**.
2. Follow the on-screen instructions.

Update Firmware

Update firmware allows you to download and update the Firmware for your device.

1. Tap  >  > **System settings** > **System updates** > **Update Firmware**.
2. Follow the on-screen instructions.

Update LG Software

Update LG Software allows you to download and update the LG software.

1. Tap  >  > **System settings** > **System updates** > **Update LG software**.
2. Follow the on-screen instructions.

UICC Unlock

UICC allows you to unlock the client initiated UICC.

1. Tap  >  > **System settings** > **System updates** > **UICC Unlock**.
2. Follow the on-screen instructions.

Printing

The Printing feature allows you to print content from certain screens (such as web pages displayed in Chrome) to a printer connected to the same Wi-Fi network as your Android device.

About Phone

About phone displays information about the network, phone identity, battery, hardware, software, legal, and regulations and safety.

1. Tap  >  > **System settings** > **About phone**.
2. Tap the desired menu.

Copyright Information

© 2014 Boost Worldwide, Inc. Boost, the Logo, Re-Boost and Boost Mobile are trademarks of Boost Worldwide, Inc. Other marks are property of their respective owners.

All materials in this guide including, without limitation, the design, the text, and any marks are the property of LG Electronics, Inc. Copyright © 2014 LG Electronics, Inc. ALL RIGHTS RESERVED. LG and the LG logo are registered trademarks of LG Electronics, Inc. LG Realm is a trademark of LG Electronics, Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners. Unless otherwise specified herein, all accessories referenced herein are sold separately. All features, functionality, and other product specifications are subject to change. Screen shots are simulated and subject to change.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that has passed rigorous testing to verify that it plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video on- Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to HD 720p, including premium content.
DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.



Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Note: Open Source Software. To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com>. All referred licence terms, disclaimers and notices are available for download with the source code.

Index

- 3-way Calling, 49
- About Phone, 180
- Access Gmail, 67
- Access Recently-Used Applications, 29
- Accessibility, 176
- Accessory, 179
- Accounts & Sync, 172
- Activate This Device, 179
- Activate Your Phone, 2
- Activation and Service, 2
- Add a Contact, 58
- Add a Contact to Your Favorites, 59
- Add a VPN Connection, 100
- Add a Wi-Fi Network, 96
- Add an Email Account (POP3 or IMAP), 74
- Add and Remove Widgets on the Home Screen, 27
- Additional Information, 4
- Adjust Browser Settings, 103
- Airplane Mode, 147
- Alarm/Clock, 133
- Android Beam, 152
- Applications: How to View, Open and Switch, 23
- Apps, 171
- Assign Pictures, 110
- Audio Zoom, 114
- Auto Answer, 150
- Back Button, 21
- Back Up Your Downloaded Music Files, 93
- Backup & Reset, 175
- Battery, 170
- Battery and Charger, 15
- Bluetooth, 138
- Bluetooth Settings, 148
- Bluetooth Settings Menu, 138
- Bluetooth Tethering, 154
- Browser, 101
- Browser Menu, 102
- Calculator, 137
- Calendar, 126
- Call Emergency Numbers, 40
- Call Forwarding, 50
- Call Logs, 53
- Call Reject, 149
- Call Settings, 148
- Call Using the Phone Dialer, 38
- Call Waiting, 49
- Caller ID, 49
- Camera Settings, 106
- Change Calendar Settings, 131
- Change Calendar View, 126
- Change Gmail Settings, 72
- Change the Phone's Wallpaper, 27
- Change the Screen Orientation, 31
- Change Your Main Greeting via the Voicemail Menu, 46
- Cloud, 172
- Communicate with Your Contacts, 62
- Compose Text Messages, 80
- Configure and Sync Corporate Email Settings, 77
- Configure Visual Voicemail Settings, 46
- Connect to or Disconnect From a VPN, 100
- Connect Wi-Fi, 95
- Corporate Email (Outlook), 75
- Create a Google Account, 66
- Create a Google Wallet Account, 90
- Create an Event, 129
- Create and Send Email, 76
- Create Bookmarks, 104
- Create Website Settings, 104
- Create Your Account and Pick Your Plan, 2
- Customize Applications Icons on the Home Screen, 28
- Customize Your Home Screen, 25
- Data Connection Status and Indicators, 98
- Data Services General Information (3G and Enhanced 4G LTE Networks), 97
- Date & time, 176

Decline with Message, 149
 Default SMS App, 155
 Delete Messages, 84
 Device Settings, 155
 Dial and Save Phone Numbers With Pauses, 41
 Dial From the Contacts List, 42
 Dialing Options, 39
 Disconnect Bluetooth Connection During an Active Call, 141
 Display and Synchronize Calendars, 131
 Display Settings, 160
 Dual Play, 116
 Dual Recording, 112
 Edit a Contacts Entry, 59
 Edit or Delete an Event, 130
 Edit the Display Name via the Voicemail Menu, 47
 Email, 74
 End a Call, 43
 Enhanced 4G LTE, 97
 Enjoy Content from Nearby Devices, 142
 Enjoy Content Via a Variety of Devices, 141
 Enter Text With the On-screen Keyboard, 31
 Export Contacts to Your Internal Storage, 64
 Extend Your Battery Life, 16
 Extended Home Screen, 23
 Find a Phone Number, 55
 Find and Install an App, 89
 Folders, 132
 Gallery Options, 109
 Gestures, 167
 Get Help with Google Play, 91
 Get Started With Contacts, 57
 Gmail, 66
 Go to a Specific Website, 102
 Google Maps, 93
 Google Play Music, 91
 Google Play Store, 89
 Guest Mode, 13, 172
 Hardware Key Control Mode, 14
 HD™ Voice, 38
 Hearing Aids, 150
 Home Button, 21
 Home Screen, 22, 163
 Home Screen Clean View, 30
 Import Contacts From Your Internal Storage, 64
 Import, Export, and Share Contacts, 64
 In-call Options, 50
 In-Call Options, 41
 Incoming Call Pop-up, 149
 International Dialing, 149
 Joining and Separating Contacts, 65
 Language & Input Settings, 174
 Launch a Web Connection, 98
 Learn to Navigate the Browser, 101
 Listen to Multiple Voicemail Messages, 45
 Live Zoom, 116
 Location, 173
 Lock and Unlock Your Phone, 12
 Lock Screen, 164
 Make Phone Calls, 38
 Manage Your Account, 2
 Managing Message Conversations, 82
 Menu Button, 17
 Miracast, 153
 Missed Call Notification, 40
 Mobile data, 148
 Mobile Networks Settings, 154
 More Settings, 153
 Multi-point Auto Focus, 108
 Music, 91
 Music Player, 92
 Navigation, 93
 NFC Settings, 152
 North American Dialing, 148
 Notebook, 124
 Notifications Panel, 20
 One-handed Operation, 169
 Open an Installed App, 91
 Open Email, 76
 Pairing Bluetooth Devices, 139
 PC Connection, 178
 Personal Settings, 171

Phone and Web Search Using Text Entry, 35

Phone and Web Search Using Voice Command, 36

Phone Call Options, 49

Phone Calls, 38

Phone Function Buttons, 17

Plug & Pop, 7

Plus (+) Code Dialing, 42

Power Button Ends Call, 151

Prepare Your Phone for VPN Connection, 99

Printing, 180

Privacy Keeper, 149

Proximity Sensor, 150

QSlide, 119

Quick Access, 30

QuickMemo, 123

QuickRemote, 119

QuickTranslator, 121

Read and Reply to Gmail Messages, 70

Read and Reply to Text Messages, 80

Re-Boost, 3

Receive Phone Calls, 43

Record Videos, 111

Reply to or Delete an Email Message, 77

Request a Refund for a Paid App, 90

Respond to an Event Reminder, 131

Retrieve Your Voicemail Messages, 48

Review Visual Voicemail, 44

Ringtones & Vibrations Settings, 157

Save a Phone Number, 55

Save and Resume a Draft Message, 82

Save Unknown Numbers, 151

Screen On/Off, 11

Search Your Phone and the Web, 35

Security, 173

Send a Gmail Message, 69

Send a Multimedia Message (MMS), 81

Send Items via Bluetooth, 140

Set an Event Reminder, 130

Set Up Secure Credential Storage, 99

Set Up Speed Dialing, 52

Set Up Visual Voicemail, 44

Set Up Voicemail, 47

Set Up Your Phone, 1

Set Up Your Voicemail, 4

Setting up Guest mode, 14

Settings, 147, 181

Share & Connect, 152

Share a Contact, 64

Shot & Clear, 108

Sign into Your Google Account, 66

Slide Aside, 29, 171

Smart Dialing, 148

SmartShare, 141

SmartShare Beam, 152

Sound Settings, 155

Status Bar, 8

Storage, 170

Super Zooming, 108

System Settings, 176

System Updates, 179

Take Pictures, 106

Tasks, 135

Text and Multimedia Message Options, 84

Text and Multimedia Messaging, 80

Text Link, 36

Text-to-Speech, 55

Tips for Editing Text, 34

Touchscreen Navigation, 21

Tracking Focus, 114

Tracking Zoom, 113

Transfer User Contents From an Android Phone to LG G2, 144

Transfer Via Bluetooth Connection, 145

Transfer Via Cloud Storage, 145

Transfer Via PC or Laptop, 144

TTY Mode, 150

Turn Bluetooth On and Off, 138

Turn Wi-Fi On and Connect to a Network, 95

Turn Your Phone On and Off, 10

Uninstall an App, 91

Unlock Your Screen Using the Knock Code Feature, 13

Use Direct Dialing, 42

Use the Applications Key, 23

Using Clip Tray, 36
Using Content from the Cloud, 143
Using the Video Editor, 118
Video Editor, 117
Video Gallery Options, 115
Video Settings, 111
View Event Details, 129
View Your Pictures, 109
Virtual Private Networks (VPN), 99
Visual Voicemail, 44
Visual Voicemail Options, 45
Voice Enhancement, 151
Voice Mate, 122
Voicemail Notification, 48
Voicemail Settings, 148
Voicemail(Traditional), 47
VPN Settings, 155
Wi-Fi Direct, 97
Wi-Fi Hotspot, 153
Wi-Fi Settings, 148
Wireless Networks, 147
Wireless Storage, 153
Work with Menus, 18
Your Home Screen, 22
Your Phone at a Glance, 1
Your Phone Overview, 5
Your User Name, 98