 


## Connections to Your TV

### Antenna/HDMI Connection


- A.** Connect one end of the RF cable to ANTENNA OUT (TO TV) jack on the unit and other end to ANTENNA IN jack on your TV. Passes the signal from the ANTENNA IN jack to your TV/monitor.
- Connect the Terrestrial TV antenna to the ANTENNA IN jack on the unit. If you want to use an indoor antenna, use one with a signal amplifier rated at 5V, 100mA and set [Antenna 5V] to [ON] in the setup menu.
- B.** Connect the HDMI jack on the unit to the HDMI jack on a HDMI compatible TV or monitor.

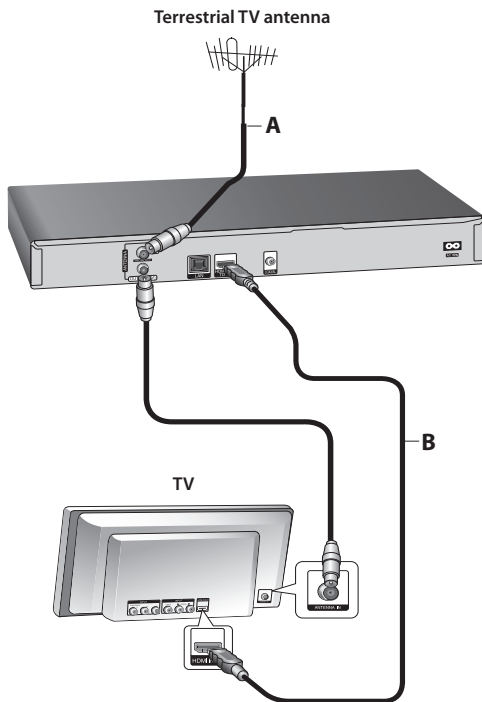

### Auto Tuning

All available digital TV or radio programmes are searched for and stored automatically based on the selected country.


1. Press HOME.
2. Select [Setup] --> [DTV] --> [Auto Tuning] and press ENTER (⊙).
3. Select [Start], and press ENTER (⊙) to begin the channel search.

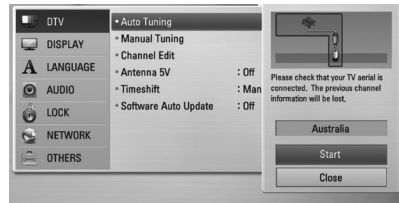

### Manual Tuning

Scans digital TV or radio programmes and adds the detected programmes to the programme list.

 1. Display [Setup] menu.
2. Select [DTV] --> [Manual Tuning] and press ENTER (⊙) to display the [Manual Tuning] menu.

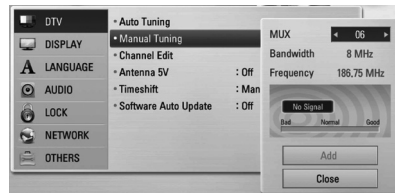

3. Use ▲/▼/◀/▶ to select the desired multiplexer (MUX), and the unit starts scanning automatically.
4. Use ▼ to select the [Add] and press ENTER (⊙) to add the programme the unit scans automatically.



# Recording

You can record Digital TV programmes and store them on the HDD.

## Channel Recording + Watching Blu-ray Disc

1. While watching TV, use PR (-/+ ) to select a programme you want to record.
2. Press ● REC to start recording.



### 3. While recording, you can enjoy Blu-ray Disc.

**Insert a Blu-ray Disc, playback starts automatically.**

## Channel Recording + Watching recorded titles

1. While watching TV, use PR (-/+ ) to select a programme you want to record.
2. Press ● REC to start recording.
3. **While recording, you can play a recorded title.**  
**Press REC.LIST to display the Recordings menu.**



4. Use ▲/▼/◀/▶ to select a recording title.
5. Press ► (PLAY) or ENTER (⊙) to play the recording title.

### ! Note

- ● mark is displayed in recording now. If you want to play the title in recording, press ► (PLAY) or ENTER (⊙), but you may have some restriction to operate trick play features.
- N mark is displayed in recorded files that never once played since it was recorded.

## Recording from Program Guide menu

You can also set the timer based on the information provided by the Program guide menu.

1. While watching TV, press GUIDE.

 


2. Use ◀/▶ to select date field, and select the date of recording schedule using ▲/▼.
3. Use ◀/▶ to select programme field, and set the programme using ▲/▼.
4. Use ◀/▶ to select the programme list, and select a programme you want to record using ▲/▼.
5. Press the red coloured (R) button.  
For the successfully scheduled programme, a red bullet mark appears.  
A red bullet mark may not appear for unavailable programme to record.
6. Press BACK (↩) to return to the TV viewing.
7. Press TIMER REC, and check whether the schedule is registered properly or not.




## Tip for Using Program Guide menu


1. You can use PR (-/+) to change page on Program guide menu.

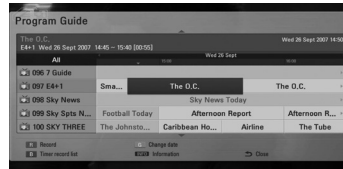

 2. You can change date by using green coloured (G) button on Program guide menu.

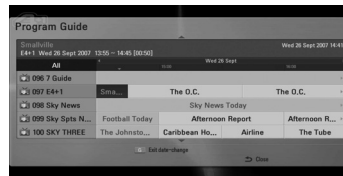

 3. Series recording cannot be used when the Broadcaster do not include series information with the program data.
4. To see Timer Recording list, press BACK (↩) to return to the TV viewing and then, press TIMER REC to check whether the schedule is registered properly or not.

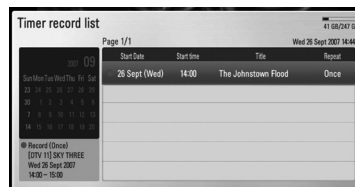

# You can play from selected time

1. Press INFO/MENU (□) during playback. The time search box shows the elapsed playing time.



2. Select the [Time] option and then input the required start time in hours, minutes, and seconds from left to right.  
For example, to find a scene at 2 hours, 10 minutes, and 20 seconds, enter "21020".  
Press ◀/▶ to skip the playback forward or backward for 60 seconds.
3. Press ENTER (⊙) to start playback from selected time.