



LG Robot Vacuum cleaner Firmware Update



1 Save 'Update.zip' file to root directory of the memory stick without making additional directory.

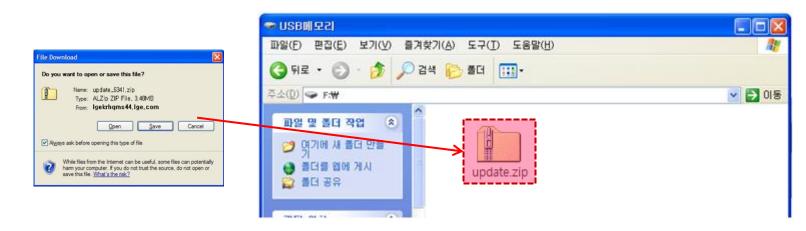

2 Extract the 'update.zip' file to root directory. Then, you can see new three files.

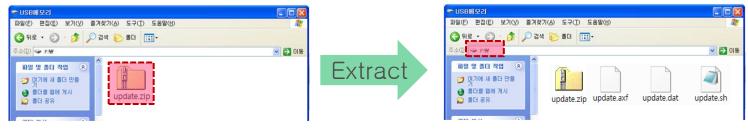

Check the directory to be extracted.



3

When it is finished, remove the memory stick from PC. By using the icon on the bottom of wall paper, you can remove it safely.

뛓 Safe	ly Remove Hardware	<u>? ×</u>
1	Select the device you want to unplug or eject, and then click Stop. Windows notifies you that it is safe to do so unplug the device from y computer.	
Hardwa	are devices:	
€ ∪	ISB Mass Storage Device	


4 Turn off the power of Robot vacuum cleaner. (OFF)





5 After turn off the power, insert the memory stick to the USB port while power is off.



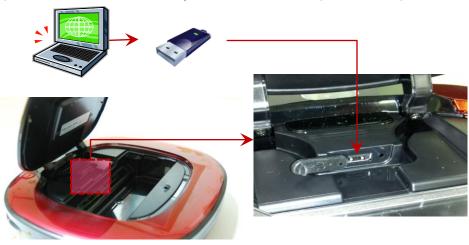

⁶ Push the "START/STOP' button to turn on the power, and update will start automatically with a voice guidance, 'Software will be updated'.

When it is finished, update completion is notified with a voice guidance and the power will be turn off. (Check that the light of the lower camera is turned off when the power is turned off)



※ caution – Don't turn off the power of the robot before a voice guidance that is 'software update is completed'

7 After the power is turned off, remove the memory stick. And use the robot vacuum machine after turning on the power.