

SVC Bulletin (Software)

Date	Feb. 14, 2013	Writer	Kim Hyejin
ECO No.	EKND200183	Software Type	BE FE Micom / Servo / ()
Update to Server?	Yes / No	System Model	BP430K (BP530 base)
Upgrade File name	LG_BD_8100M60.ROM / H14IM2M.ROM		
Subject	BP530 Series Software update		
Applicable Model (Series)	BP430K (BP530 base)		

No.	Part No.	Version	ECN Type
1	SAA36350102	BD1.489.30112.C	A B C D
	SAA36350102	BD1.489.30117.C	
2		H14IM2M0700	A B C D
		H14IM2M0900	

Reason of change (Symptom)

1. BE : Modify 2d karaoke subtitle flickering and MIC mixing in STR mode.
2. FE : FE LD dead issue

How to Upgrade firmware

- Follow the 'Software upgrade Instruction' below.

※ Please describe software upgrade instruction to the next page by all means

ECN Type	Description																	
A	<table style="display: inline-table; vertical-align: middle;"> <tr> <td style="text-align: center;">Parts</td> <td style="text-align: center;">Set</td> </tr> <tr> <td style="text-align: center;"> <table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">OLD</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table> </td> <td style="text-align: center;"> <table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table> </td> </tr> </table>	Parts	Set	<table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">OLD</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table>	OLD	→	OLD	NEW	→	NEW	<table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table>	OLD	→	NEW	NEW	→	NEW	Original or new parts may be used in early or late production sets. Use original parts until exhausted, then stock new parts.
Parts	Set																	
<table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">OLD</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table>	OLD	→	OLD	NEW	→	NEW	<table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table>	OLD	→	NEW	NEW	→	NEW					
OLD	→	OLD																
NEW	→	NEW																
OLD	→	NEW																
NEW	→	NEW																
B	<table style="display: inline-table; vertical-align: middle;"> <tr> <td style="text-align: center;">Parts</td> <td style="text-align: center;">Set</td> </tr> <tr> <td style="text-align: center;"> <table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">OLD</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table> </td> <td style="text-align: center;"> <table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table> </td> </tr> </table>	Parts	Set	<table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">OLD</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table>	OLD	→	OLD	NEW	→	NEW	<table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table>	OLD	→	NEW	NEW	→	NEW	Original parts may be used in early production sets only. New parts may be used in early or late production sets. Use original parts where possible, then stock new parts
Parts	Set																	
<table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">OLD</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table>	OLD	→	OLD	NEW	→	NEW	<table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table>	OLD	→	NEW	NEW	→	NEW					
OLD	→	OLD																
NEW	→	NEW																
OLD	→	NEW																
NEW	→	NEW																
C	<table style="display: inline-table; vertical-align: middle;"> <tr> <td style="text-align: center;">Parts</td> <td style="text-align: center;">Set</td> </tr> <tr> <td style="text-align: center;"> <table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">OLD</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table> </td> <td style="text-align: center;"> <table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table> </td> </tr> </table>	Parts	Set	<table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">OLD</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table>	OLD	→	OLD	NEW	→	NEW	<table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table>	OLD	→	NEW	NEW	→	NEW	New parts only may be used in early or late production sets. Stock new parts.
Parts	Set																	
<table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">OLD</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table>	OLD	→	OLD	NEW	→	NEW	<table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table>	OLD	→	NEW	NEW	→	NEW					
OLD	→	OLD																
NEW	→	NEW																
OLD	→	NEW																
NEW	→	NEW																
D	<table style="display: inline-table; vertical-align: middle;"> <tr> <td style="text-align: center;">Parts</td> <td style="text-align: center;">Set</td> </tr> <tr> <td style="text-align: center;"> <table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">OLD</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table> </td> <td style="text-align: center;"> <table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table> </td> </tr> </table>	Parts	Set	<table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">OLD</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table>	OLD	→	OLD	NEW	→	NEW	<table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table>	OLD	→	NEW	NEW	→	NEW	Original parts only may be used in early production sets. New parts may be used in late production sets only. Stock original and new parts.
Parts	Set																	
<table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">OLD</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table>	OLD	→	OLD	NEW	→	NEW	<table style="border: none;"> <tr><td style="text-align: center;">OLD</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> <tr><td style="text-align: center;">NEW</td><td style="text-align: center;">→</td><td style="text-align: center;">NEW</td></tr> </table>	OLD	→	NEW	NEW	→	NEW					
OLD	→	OLD																
NEW	→	NEW																
OLD	→	NEW																
NEW	→	NEW																

Software Upgrade Instruction

USB/DISC Update

LG_BD_8100M60.ROM is an update file for Main Software.

Step 1: Creating Separate Firmware Update Device

You can create a firmware update files on your own media by saving them in the USB memory device or CD/DVD.

[Option A] Creating a Firmware Update USB Device

To create a firmware update in a USB memory device, copy the update file(s) to the USB device.

Preparation:

The USB memory device should have at least 80MB of free space to save the firmware update files.

1. Insert a USB memory device into the PC.
2. Copy the latest version of firmware update files to the USB drive.
(You do not need to create directory, the files will be saved in the root directory.)

[Option B] Creating a Firmware Update CD/DVD

To create a firmware update in a CD/DVD, write the update file(s) to the CD+R/RW or DVD±R/RW disc using CD burning software.

Preparation:

To create a firmware update CD/DVD, prepare the following items according to your storage media:

CD	- CD-RW drive and CD burning software. (Both must be installed in your PC to create a firmware update CD.) - Blank recordable CD-R or CD-RW disc.
DVD	- DVD-RW drive and DVD burning software. (Both must be installed in your PC to create a firmware update DVD.) - Blank recordable DVD-R, DVD-RW, DVD+R, or DVD+RW disc.

1. Insert a blank recordable CD/DVD-R, CD/DVD-RW, DVD+R, or DVD+RW disc into the CD/DVD-RW drive.
2. Run the CD/DVD burning software, and select the [CD Data] or the [Burn DVD Data] option on the program.
3. Write the firmware update file(s) in the root directly of CD/DVD. For details, follow the operating instructions provided by the CD/DVD burning software provider.

Software Upgrade Instruction

Step 2: Updating Firmware



- 1) Turn on the player and wait until the Home Menu appears.
- 2) Insert USB memory or CD/DVD disc that contains the update file(s) of the latest firmware version into the player.

- USB memory device: Insert the USB memory device to a USB port on the front panel of the player.
- CD/DVD: Press OPEN/CLOSE button to open the disc tray. Load the disc and press OPEN/CLOSE button to close the disc tray.



- 3) The UPDATE window appears displaying the versions of current firmware in white, and the versions saved in the USB memory device or CD/DVD in blue.



- 4) Press ENTER on the remote control or press Play on the player to start the update. A status bar shows the progress of the firmware update.

- Updating Main Software will take about 3 minutes.
- Updating Driver will take about 1 minute.
- Updating both Main Software and Driver will take about 4 minutes

Please be patient during the software update!



- 5) When the update is completed, the message, "Update is complete." will appear, and the power will turn off automatically after 5 seconds. h Main Software and Driver will take about 4 minutes.

- 6) Eject the firmware update device and turn the player back on.