



User Guide

This is a 「User Guide」 installed on TV.

The contents of this guide are subject to change without prior notice for quality improvement.

☐ To view program information

Wheel(OK) ⇒ Info.

Displays information on current program and/or current time, etc.

✎ Image shown may differ from your TV.



❑ To set favorite channels

HOME ⇒ Settings → SETUP → Channel Edit

- 1 Move to the desired channel on Wheel(OK) button. Channel is selected.
- 2 Press Set as Favorite.
- 3 Select the desired favorite channel group.
- 4 Select Enter. Favorite is set.

❑ To use Favorite

HOME ⇒ Ch. List


Channel list will appear. Select the desired preset favorite channel from Favorite List A to D.

HOME ⇒ Program Guide

[In Digital Mode Only]

Obtains information about programs and airtime. Obtains program information and viewing/recording schedules.

[Image shown may differ from your TV.]

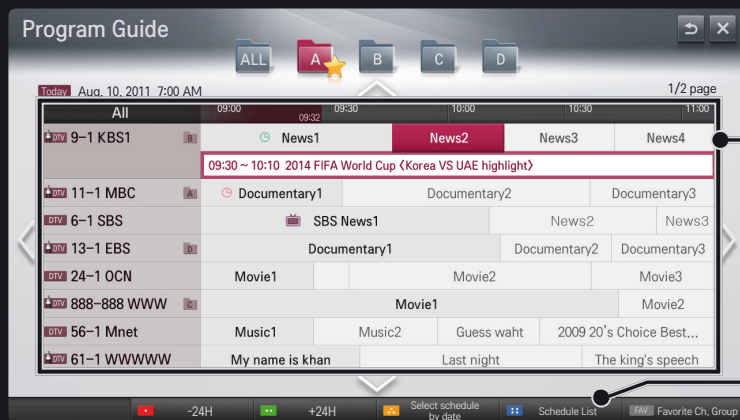 

Press **Wheel(OK)** button after moving to the desired program to view or view/record programs.

After viewing the schedule, makes revisions or deletions.

Schedule reservation by selecting date/time/channel.
Makes repeat schedule reservation.

☐ To set Auto Tuning

HOME ⇒ Settings → SETUP → Auto Tuning

Automatically tunes the channels.

- ✎ Channels are not registered properly unless the antenna/cable is connected correctly.
- ✎ Auto Tuning only sets channels that are currently broadcasting.
- ✎ If Lock System is turned on, a pop-up window will appear asking for password.

❑ To set channels manually

HOME ⇒ **Settings** → **SETUP** → **Manual Tuning**

Adjusts channels manually and saves the results.

For digital broadcasting, signal strength, etc. can be checked.

☐ To edit channels

HOME ⇒ **Settings** → **SETUP** → **Channel Edit**


Edits the saved channels.

Set as favorite, block/unblock and skip etc. the selected channel.

HOME ⇒ Settings → PICTURE → Aspect Ratio

Selects the screen aspect ratio.

16:9	Resizes the image ratio to fit 16:9 screen.
Just Scan	<p>Displays high-quality image without loss.</p> <ul style="list-style-type: none">✎ In DTV/HDMI/Component (over 720p) mode, Just Scan is available.✎ In DTV(over 576p) mode, Just Scan is available in Australia only.
Original	When your TV receives a wide screen signal it will automatically change to the picture format broadcasted.

Full Wide	<p>When TV receives the wide screen signal, it will let you adjust the picture horizontally or vertically, in a linear proportion, to fill the entire screen fully.</p> <p>4:3 and 14:9 video is supported in full screen without any video distortion through DTV input.</p> <p> In DTV mode, Full Wide is available.</p>
4:3	<p>Resizes the image ratio to fit 4:3 screen.</p>
14:9	<p>You can view a picture format of 14:9 or a general TV program in the 14:9 mode. The 14:9 screen is viewed in the same way as in 4:3, but is moved up or down.</p>
Zoom	<p>Resizes the image to fit the screen width. The top and bottom parts of the image may be cut off.</p>
Cinema Zoom	<p>Formats an image to the cinemascope ratio (2.35:1) and zooms in on the ratio.</p>

- ✎ While viewing an external device, these cases may result in image burn:
 - a video with stationary caption (such as network name)
 - 4:3 aspect ratio mode for an extended period

Take caution when using these functions.

- ✎ Available picture size may differ depending on the input signal.
- ✎ The screen aspect ratios on HDMI/RGB-PC input are available in 4:3 and 16:9 only.

❑ To adjust pictures in PC input mode

HOME ⇒ Settings → PICTURE → Screen

Adjusts picture in RGB-PC mode.

Resolution	Sets the desired resolution. ✎ Resolution may only be selected when the PC resolution is set to 1024x768, 1280x768 or 1360x768.
Auto Config.	Optimizes picture.
Position/Size/ Phase	If screen size or location is distorted, user can directly adjust the screen size and position.
Reset	Resets all the changes on picture settings on PC input mode.

❑ To set PC resolution

- 1 Right-click on the desktop of PC and select 「Properties」.
 - 2 Click on 「Settings」 and refer to supported formats to set the resolution.
 - 3 Select 「Advanced → Monitor → Monitor Settings」 on the setting window.
Refer to supported formats to select the optimal vertical frequency.
- ✎ On PC mode, 1920x1080 resolution delivers the optimum picture quality.
 - ✎ Resolution settings differ depending on the type of PC.


□ Formats Supported

PC Input Mode	Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)
HDMI-PC / RGB-PC	640x350	31.468	70.09
	720x400	31.469	70.08
	640x480	31.469	59.94
	800x600	37.879	60.31
	1024x768	48.363	60.00
	1152x864	54.348	60.053
	1360x768	47.712	60.015
	1920x1080	67.5	60.00
HDMI-PC	1280x1024	63.981	60.020

HOME ⇒ Quick Menu → AV Mode

Views the TV with the best picture / audio optimized for different AV modes.

Off	Views with the value set at the picture / sound menu.
Cinema / <u>THX</u> Cinema	Optimizes picture and audio settings for movies.
Game	Optimizes picture and audio settings for games.

 THX [Depending on model]

THX (Thomlinson Holman's Experiment) is an audio and video certification standard established by George Lucas and Thomlinson. A THX certified display guarantees screen quality that exceeds the display standard specification in both hardware and software.

❑ To adjust pictures with Picture Wizard

HOME ⇒ Settings → PICTURE → Picture Wizard II

Use the remote control and follow the instructions of the Picture Wizard to calibrate and adjust for the optimum picture quality without expensive pattern devices or help from a specialist.

Follow the instructions to obtain the optimum picture quality.

❑ To select Picture Mode

HOME ⇒ Settings → PICTURE → Picture Mode

Selects the picture mode optimized for the viewing environment or the program.




Intelligent Sensor	Detects the ambient illumination and automatically adjusts TV's brightness level to reduce power consumption. Automatically adjusts the brightness, sharpness, color or tint for optimum picture quality.
Vivid	Heightens contrast, brightness, and sharpness to display vivid images.
Standard	Displays images in standard levels of contrast, brightness, and sharpness.

Cinema/ **THX** Cinema
Game

Displays images that have been optimized for movies or games. [**THX** Cinema : Depending on model]

 Expert

Menu for adjusting picture quality that allows experts and amateurs to enjoy the best TV viewing. This menu is ISF-certified and provided for picture tuning experts. (ISF logo can only be used on ISF-certified TV units.)
ISFccc: Imaging Science Foundation Certified Calibration Control

-  Depending on the input signal, available range of picture modes may differ.
-   Expert mode is for picture tuning professionals to control and fine-tune using a specific image. For normal images, the effects may not be drastic.

❑ To fine-tune picture mode

HOME ⇒ Settings → PICTURE → Picture Mode → Backlight/Contrast/
Brightness/Sharpness/Color/Tint/Color Temp.

Selects the desired Picture Mode first.

Backlight	Adjusts the display brightness by varying the brightness of the LCD panel.
Contrast	Adjusts the difference between bright and dark regions of the screen.
Brightness	Adjusts the overall screen brightness.
Sharpness	Adjusts the sharpness of the borders between bright and dark.
Color	Adjusts the color that appears on the screen darker or lighter.

Tint	Adjusts the red/green color balance.
Color Temp.	Adjusts the overall tone of colors to hot or cool.

- ✎ Depending on the input signal or other picture settings, the range of detailed items for adjustment may differ.

❑ To set advanced control

HOME ⇒ Settings → PICTURE → Picture Mode → Advanced control/
Expert Control


For each picture mode, screen can be calibrated; or for a special screen, picture settings can be adjusted.

Selects the desired Picture Mode first.

Dynamic Contrast	Adjusts the contrast to the optimal level according to the image's brightness.
Dynamic Color	Adjusts colors to make the image appear in more natural colors.
Clear White	Enhances whites on screen to make the image brighter and sharper.

Preferred Color	Skin Color : Skin color spectrum can be separately set to implement the skin color defined by the user.
	Grass Color : Natural color spectrum (meadows, hills, etc.) can be separately set.
	Sky Color : Sky color is set separately.
Super Resolution	Provides a crystal-clear picture by improving the details in an area that has a blurry or unclear picture.
Gamma	Sets the gradation curve according to the output of picture signal in relation to the input signal.
Color Gamut	Selects the range of colors that can be expressed.
Edge Enhancer	Shows clearer and distinctive yet natural edges of the video.
xvYCC	[Depending on model] Expresses richer colors.

Color Filter	Filters a specific color spectrum in RGB colors to fine-tune color saturation and hue accurately.
Expert Pattern	Patterns used for expert adjustment.
White Balance	Adjusts the overall tone of the screen as desired. In Expert mode, detailed fine-tuning can be set via Method / Pattern and the like.
Color Management System	This is a function used by experts when they adjust colors with test pattern of six colors (Red/Green/Blue/Cyan/Magenta/Yellow) without affecting other color areas. For normal images, adjustments may not result in noticeable color change.

 Depending on input signal, or other picture settings, the range of detailed items for adjustment may differ.

❑ To set additional picture options

HOME ⇒ Settings → PICTURE → Picture Mode → Picture Option

Adjusts detailed setting for images

Noise Reduction	Reduces screen noise in the video.
MPEG Noise Reduction	Reduces noise caused by compressing digital video.
Black Level	Adjusts the brightness or darkness of the screen to fit the black level of the picture input using the screen's degree of darkness (black level).
Real Cinema	Optimizes the screen for movie viewing.
Eye Care/ Motion Eye Care	Adjusts screen brightness to prevent eye glare. [Motion Eye Care : Depending on model]

❑ To reset Picture Mode


HOME ⇒ **Settings** → **PICTURE** → **Picture Mode** → **Picture Reset**

Resets the values customized by the user.

Each picture mode is reset. Select the desired picture mode.

HOME ⇒ Settings → PICTURE → Picture Mode → Picture Option → TruMotion


Corrects images to display smoother motion sequences.

Smooth	De-Judder/De-Blur value is set at 3.
Clear	De-Judder/De-Blur value is set at 7.
Clear Plus	The screen appears clearer when Clear is selected.  Clear Plus cannot be selected in 3D mode.
User	De-Judder/De-Blur can be set manually. <ul style="list-style-type: none">• De-Judder : This function adjusts juddering of the screen.• De-Blur : This function adjusts and eliminates blurring of the screen.

HOME ⇒ Settings → PICTURE → Picture Mode → Picture Option → LED Local Dimming

Brightens bright areas and darkens dark areas of the image for maximum contrast and minimum blur while reducing power consumption.

Off	Turns off LED Local Dimming.
Low	Expresses in natural black tones. Use this setting for viewing movies.
Medium	Deepens black tones than Low. Use this setting for regular TV viewing.
High	Deepens black tones and delivers clearer image than Medium. Perfect for viewing in brightly lit areas.

 Setting LED Local Dimming to Medium / High reduces power consumption.

☐ To use Sound Mode

HOME ⇒ Settings → SOUND → Sound Mode

Optimizes TV audio to the selected sound mode.

Standard	Suitable for all types of video
Music/Cinema/Sport/ Game	Sets audio optimized for a specific genre.
Vivid	Delivers distinct voices with rich bass and clear, high-pitched sounds.
User Setting	Adjusts the volume to the desired level using the User EQ.

☐ To fine-tune the volume

HOME ⇒ Settings → SOUND → User EQ

Sets Sound Mode at User Setting first.

100 Hz / 300 Hz / 1 kHz /
3 kHz / 10 kHz

Sets EQ by manually adjusting sound bands.

Reset

Resets previously changed equalizer value.

❑ To set Volume Mode

HOME ⇒ Settings → SOUND → Volume Mode

Sets various modes for volume control.

Auto Volume	Sets <i>Auto Volume</i> to <i>On</i> . Different volume outputs from channel to channel. They are then automatically adjusted for convenient TV watching when, clicking through different channels.
Volume Control	Using a single volume curve may result in an inaudible or loud sound depending on the environment. This function adjusts comfortable volume levels depending on day/night.

❑ To use Sound Optimizer function

HOME ⇒ Settings → SOUND → Sound Optimizer

Allows optimized sound for individual TV installation.

Normal	General sound mode
Wall Mount Type	Optimizes sound for a wall-mounted TV.
Stand Type	Optimizes sound for a stand-mounted TV.

❑ To use Virtual Surround feature

HOME ⇒ **Settings** → **SOUND** → **Virtual Surround**

LG's proprietary audio processing technology allows 5.1ch-like surround sound from two speakers.

✎ When Clear Voice II is set to On, Virtual Surround cannot be selected.

❑ To use Clear Voice II feature

HOME ⇒ **Settings** → **SOUND** → **Clear Voice II**

Boosts voice clarity.

❑ To set AV Sync

HOME ⇒ Settings → SOUND → AV Sync.

Synchronizes unmatched video and audio.

Select AV Sync. to On to synchronize audio output (TV speaker or SPDIF) with the video.

TV Speaker	Adjusts the sync of the sound from the TV's internal speakers. The "-" button makes the sound output faster and the "+" button slower than the default value.
SPDIF	(Sony Philips Digital InterFace) Adjusts the sync of the sound from speakers connected to digital audio out terminal. The "-" button makes the sound output faster and the "+" button slower than the default value.

Bypass

Outputs broadcasting signals or the audio of an external device without audio delay. Audio may be output before video as it takes time to process video input into the TV.

❑ To use ARC mode

HOME ⇒ **Settings** → **SOUND** → **Sound Setting** → **ARC Mode**

External audio devices that support Audio Return Channel (ARC) can be connected with High-Speed HDMI® cable without an extra optical audio cable to output SPDIF. It interfaces with SIMPLINK.




For an external device that supports ARC (Audio Return Channel), connect it to the **HDMI(ARC)** port.

Off

Even when the connected ARC-supported external audio device is turned on, audio output is not processed through the external audio device's speakers.

On

When an ARC-supported external audio device is turned on, audio output is automatically processed through the external audio device's speakers. SIMPLINK must be turned on.
For SIMPLINK, refer to 「General → To use input device」.

-  Connect to ARC-only terminal when connecting to external devices.
-  Use high-speed HDMI® cable when connecting to external devices.
-  Use of a third-party device with an ARC function may cause malfunctions.

❑ To adjust audio balance

HOME ⇒ Settings → SOUND → Sound Setting → Balance

Adjusts left/right audio balance.


❑ To use TV's speakers

HOME ⇒ **Settings** → **SOUND** → **Sound Setting** → **TV Speaker**

When listening to the speakers on the external audio devices connected to TV, such as home theater, TV speaker may be turned off. When there are SIMPLINK connected home theater devices, selecting TV Speaker to OFF will automatically turn on home theater.

Off

There is no sound from the TV speakers.
Delivers TV sound through external audio device speakers connected to the TV.

 Adjusts the volume with the knob attached to the external device.

On

Produces TV sound through the TV's internal speaker.

❑ To use Digital Sound Out

HOME ⇒ Settings → SOUND → Sound Setting → Digital Sound Out

Sets up Digital Sound Output.

Item	Sound Input	Digital Sound output
Auto	MPEG	PCM
	Dolby Digital	Dolby Digital
	Dolby Digital Plus	Dolby Digital
	HE-AAC	Dolby Digital
PCM	All	PCM

□ DTV Sound Setting

HOME ⇒ Settings → SOUND → DTV Sound Setting

[Depending on model]

When different audio types exist in an input signal, this function allows you to select the audio type you want.

If set to **AUTO** the search order is HE-AAC → Dolby Digital+ → Dolby Digital → MPEG and output is produced in the first Audio Format found.

- ✎ In Italy only, the order is HE-AAC → Dolby Digital+ → MPEG → Dolby Digital.
- ✎ In New Zealand only, the order is Dolby Digital+ → Dolby Digital → HE-AAC → MPEG.
- ✎ If the selected Audio Format is not supported, another Audio Format may be used for output.

☐ To select external input

HOME ⇒ Input List

Selects external input.



Selects speaker.

Selects input.


Sets SIMPLINK.

Edits the name of external device connected to external terminal.

❑ To use SIMPLINK

SIMPLINK allows users to control and manage multiple multimedia devices using the convenient TV remote control and SIMPLINK menu.

- 1 Connect the TV's **HDMI IN** terminal with SIMPLINK device's HDMI output terminal using HDMI cable. For home theater units with SIMPLINK function, connect HDMI terminals as above and use an optical cable to connect Optical Digital Audio Out from the TV to Optical Digital Audio In of the SIMPLINK device.
- 2 Select **HOME** ⇒ **SIMPLINK**. SIMPLINK menu window appears.
- 3 Select **Set SIMPLINK** on SIMPLINK menu window. SIMPLINK setup window appears.
- 4 Set **SIMPLINK** to **On** in SIMPLINK setup window.
- 5 Close SIMPLINK setup window.
- 6 Select the device to control from **HOME** ⇒ **SIMPLINK**.

- ✎ This function works only on devices with the SIMPLINK logo (). Make sure that the external device has a SIMPLINK logo.
- ✎ To use SIMPLINK function, use a high-speed HDMI® cable (with CEC, or Consumer Electronics Control feature added) and No. 13 pin connected for information exchange between devices.
- ✎ Turn on or select the media of a device with home theater features to see the speaker switch to **HT Speaker**.
- ✎ Connect with an Optical cable (sold separately) to use **HT Speaker**.
- ✎ Switching to external input causes devices operating with SIMPLINK to stop.
- ✎ Use of a third-party device with HDMI-CEC features may cause malfunctions.

□ Explanation on SIMPLINK features

Direct Play	Play the multimedia device on the TV instantly without extra steps.
Select multimedia device.	Select the desired device through the SIMPLINK menu and instantly control it from the TV screen.
Disc playback	Manage the multimedia device with the TV remote control.
Power off all devices	Turning the TV off with Auto Power function On in SIMPLINK setting will turn the power off on all SIMPLINK-connected devices.

Sync Power on

If the Auto Power function is set to On in the SIMPLINK settings, turning on a SIMPLINK device will turn the TV on.

Speaker

Selects speaker on the home theater unit or TV.

HOME ⇒ Settings → PICTURE → Energy Saving

Reduces power consumption by adjusting screen brightness.

Auto	<p>TV sensor detects the ambient lighting and automatically adjusts the screen brightness.</p> <ul style="list-style-type: none">• Min. Luminance : Select the minimum brightness for the screen under low ambient light.• Sensing Strength : Select the TV's range of brightness in the viewing environment.
Off	<p>Turns off the Energy Saving mode.</p>
Minimum/ Medium/ Maximum	<p>Applies the pre-set Energy Saving mode.</p>
Screen Off	<p>Screen is turned off and only sound is played. Press any button on the remote control to turn the screen back on.</p>

❏ To use Sleep Timer

HOME ⇒ **Settings** → **TIME** → **Sleep Timer**

Turns off the TV after a prescribed number of minutes.

To cancel the Sleep Timer, select Off.

☐ To set current time

HOME ⇒ Settings → TIME → Clock

Checks or changes the time while watching TV.

Auto	Synchronizes the TV clock to the digital time information sent by the TV station.
Manual	Sets the time and date manually if the auto setup does not correspond to the current time.

❑ To set the TV to turn on and off automatically

HOME ⇒ Settings → TIME → On Time/Off Time

Sets On/Off time.

Select Off on Repeat to discontinue On Time/Off Time.

- ✎ To use On Time/Off Time, set the current time correctly.
- ✎ Even when the On Time function is on, the TV will turn off automatically in 120 minutes when no button is pressed within that time.

☐ To set password

HOME ⇒ Settings → LOCK → Set Password

Sets or changes TV password.


✎ The initial password is set as 「0000」.

☐ To lock system

HOME ⇒ **Settings** → **LOCK** → **Lock System**



Permits only specific programs by blocking channels or external input.

Select the Lock System to On.

Block Channel	Blocks specific channels that are harmful to children.  To access the locked channel, enter user password.
Input Block	Blocks the selected input.

HOME ⇒ Settings → OPTION → Language

Selects Menu Language and Audio Language displayed on the screen.

Menu Language	Selects a language for the display text.
Audio Language	[In Digital Mode Only] When watching a digital broadcast containing several audio languages, you can select the language you want.
Subtitle Language	[In Digital mode Only] Use the Subtitle function when two or more subtitle languages are broadcast.  If subtitle data in a selected language is not broadcast, the default language subtitle will be displayed.
Voice Search Language	Select the language to make voice search.  Only the voice search adopted model can support this setting.

☐ To set Hard of Hearing

HOME ⇒ Settings → OPTION → Hard of Hearing

This function is used for the hearing impaired.

If it is set to on, the subtitle is displayed by default.


❑ To register the Magic Remote Control

To use the Magic Remote Control, register it with your TV first.

Register Magic Remote Control as follows:

- 1 Turn on the TV and wait for about 10 seconds and then press **Wheel(OK)** button while pointing the remote control at the TV.
 - 2 The remote control is automatically registered and a registration completion message appears on the TV screen.
- ✎ If you failed to register the Magic Remote Control, turn off the TV and try again.

❑ To re-register the Magic Remote Control

- 1 Press the **HOME** and **返回** buttons at the same time for about 5 seconds.
 - 2 Point the remote control at the TV and press **Wheel(OK)** button for about 5 seconds.
-  Press the **BACK** button while pointing the remote control at the TV for five seconds to reset and re-register it.

❑ To set the pointer of the Magic Remote Control

HOME ⇒ Settings → OPTION → Pointer

Sets the speed and shape of the pointer that appears on the TV screen.

Speed	Sets the moving speed of the pointer.
Shape	Chooses from different shapes of the pointer.
Size	Chooses the size of the pointer.
Alignment	Set it to On . If there is any misalignment between the pointer and the actual direction the remote control indicates, move the Magic Remote Control left and right to realign. The pointer will automatically realign to the center, making it easier to control.

- ✎ If the pointer has not been used for a certain period of time, it will disappear. When the pointer disappears from the screen, shake the Magic Remote Control to the right and left. Then, it appears again.
- ✎ If you press the navigation button while moving the pointer on the screen, the pointer disappears, and the Magic remote control works as a regular remote control.
- ✎ Use within an effective distance of 33 ft. (10 meters). Using the Remote Control from greater distances or when obstructions block the sight line may cause malfunctions.

- ✎ Electronic devices nearby may cause communication interference. Devices such as microwave oven and wireless LAN use the same frequency range (2.4 GHz) as the Magic Remote Control, which may interfere with the remote control.
- ✎ The Magic Remote Control may be broken if dropped or damaged in any other way.
- ✎ Do not drop or subject the Magic Remote Control to heavy impacts.

❑ To use the pattern gesture function


Press the **Wheel(OK)** button with the normal video screen on and draw a pattern toward the screen.



Previous channel: Moves back to the previous channel.



Recent list: Shows channels recently watched.

 It may not work when certain windows are open.

❑ To set Power Indicator

HOME ⇒ **Settings** → **OPTION** → **Standby Light**

Turns on/off the standby light in the front panel of the TV.

❑ To change TV mode

HOME ⇒ **Settings** → **OPTION** → **Mode Setting**

Selects Home Use or Store Demo.

For use in the home, select Home Use.

Store Demo is for store display.

❏ To return to initial settings

HOME ⇒ **Settings** → **OPTION** → **Factory Reset**

Returns to initial default mode by deleting all optional setup.

Once initialization is completed, the TV will turn off and on by itself.

- ✎ If **Lock System** is turned on, a pop-up will be prompted to ask for password.
- ✎ Do not turn off the power during initialization.

❑ To use Home Screen

Press **HOME** button on the remote control.

Thanks to the Smart TV's design with functions in one screen, users have convenient access to a wealth of Content and applications via the easy-to-use menu arranged by themes (Live TV, Card, My Apps).



☐ To use and edit MY CARD

HOME ⇒ MY CARD

To enable you to easily check and access a wide variety of content and functions, the main functions are grouped into categories and displayed on cards.

By selecting the card name, you can go to that category page.

Select **Edit** at the top of the home screen to switch the position of the cards or create your own card. (You cannot edit the **Live** and **Premium** cards.)

☐ To use My Apps

HOME ⇒ My Apps

Select **My Apps** at the bottom of the home screen or press the **MY APPS** button on the remote control.

Select **My Apps** to check apps pre-installed apps and apps you have downloaded.



Select the desired app to run.

❑ To edit items in My Apps

HOME ⇒ My Apps → Edit

On the My Apps page, select Edit at the top of the screen to move or delete apps. Please note that system apps can be moved, but cannot be deleted.

✎ Changes orders/Deletes items by dragging the app icons on models equipped with Magic Remote Control.



❑ To manage LG Smart TV Setting

HOME ⇒ Settings → OPTION → Smart TV Setting

Sets many Smart TV-related settings and manages IDs.

Smart TV Country	Changes Country Setting on the Smart TV. Receives Premium service and LG Smart World of the desired country.
Premium Version	Displays Premium service version.
ID List	Checks and delete IDs signed in to TV.
Reset	Deletes all registered ID information from TV.
Legal Notice	Shows Legal Notice for Smart TV.

A wireless or wired network connection is necessary to use Smart features.

Once the network connection is established, Premium Content, LG Smart World, DLNA, and more are available.

❑ Network connection by one-click

It's easy to connect to a wired/wireless network.

Select HOME ⇒ Settings → NETWORK → Network Connection to be automatically connected to an available network. Refer to prompts on the TV.

❑ To connect network through Set Expert

HOME ⇒ Settings → NETWORK → Network Connection

Used in special circumstances such as in offices (in case where static IP is used).

- 1 Select a network connection either through **Wired** or **Wireless**.
- 2 When connecting via Wi-Fi, use the one of the following network connection methods.

AP List	Connects the network by selecting a network from the AP List.
Enter the SSID	Connects by typing in the name of wireless AP.
WPS-PBC	Connects easily by pressing the button of the wireless AP supporting PBC.

WPS-PIN

Connects easily by typing in the PIN on the web site of the desired wireless AP.

Ad-hoc

Connects to the network via a wireless-enabled PC or mobile phone.

❑ To use Wi-Fi Screen function

HOME ⇒ **Settings** → **NETWORK** → **Wi-Fi Screen Share**

Allows use of wireless connection functions such as Wi-Fi Direct and WiDi.
Shares screen of devices connected via **Wi-Fi Screen Share** in Smart Share.

- 1 Set **Wi-Fi Screen Share** to **On**. (If you do not use it, please change it to **Off**.)
- 2 Enable the Wi-Fi Direct settings on the device that you want to connect to.
- 3 A list of devices that can be connected to the TV is displayed.
- 4 Select a device to connect.
- 5 Select **Yes**, when the connection request message appears.
- 6 If the device that you want to connect to accepts the request, **Wi-Fi Screen Share** is connected.

❑ Warning when setting network

- ✎ Use standard LAN cable (connect to Cat5 or higher with RJ45 connector, 10 Base-T, or 100 Base TX LAN port).
- ✎ Resetting modem may cause network connection problems. Turn the power OFF, disconnect and reconnect it, and then turn the power on to solve the problem.
- ✎ LG Electronics is not responsible for any network connection problems or any faults, malfunctions, or errors caused by network connection.
- ✎ Network connection may not work properly depending on Internet service provider.

 
- ✎ DSL service must use the DSL modem; and cable service must use the cable modem. Since only a limited number of network connections may be available, TV network setting may not be used depending on the contract with Internet service provider. (If the contract does not allow more than one device per line, only the already-connected PC may be used.)
- ✎ Wireless network can experience interference from other devices with 2.4 GHz frequency (wireless phone, Bluetooth device, or microwave oven). Interference may also be caused by devices with 5 GHz frequency, the same as any other Wi-Fi devices.
- ✎ The surrounding wireless environment can make wireless network service run slowly.
- ✎ Failure to turn off all local home networks may cause excessive traffic on some devices.

- ✎ The access point device must support wireless connection and wireless connection feature must be enabled on the device to have AP connection. Contact the service provider for availability of wireless connection on the access point.
- ✎ Check SSID and security settings of the AP for AP connection. Refer to the appropriate documentation for SSID and security settings of the AP.
- ✎ Invalid settings of network devices (wired/wireless line sharer, hub) can cause TV to operate slowly or not operate properly. Install the devices correctly according to the appropriate manual and set network.
- ✎ Connection may not work depending on the connected device (e.g., laptop) when using Ad-hoc.
- ✎ Connection method may differ depending on the AP manufacturer.

☐ To use Smart Share™

HOME ⇒ Smart Share

Provides photo/music/video files on TV by connecting a USB or home network (DLNA, Media Link).

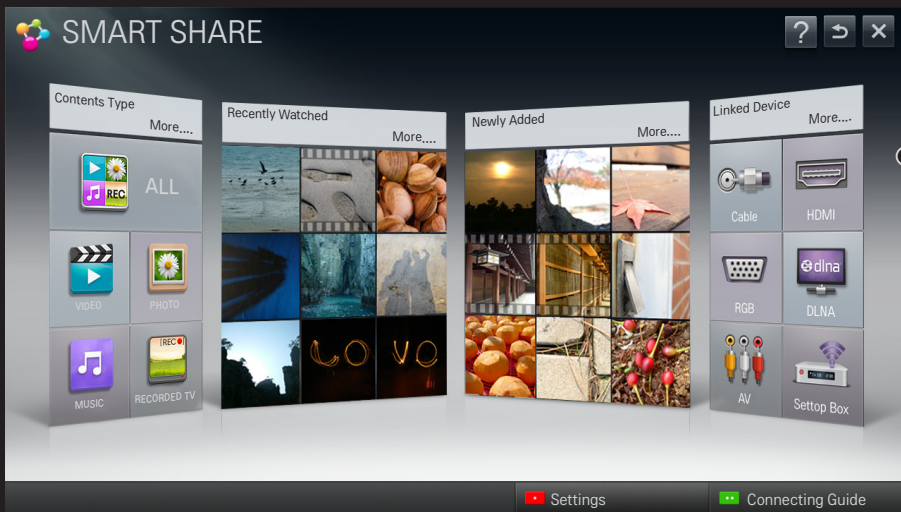


○ Displays photo/music/video files on all devices connected to TV.

❑ To control movie play

Controls play and sets options while viewing movies.

Selects the desired point and plays.

 Stops playback and returns to the list.

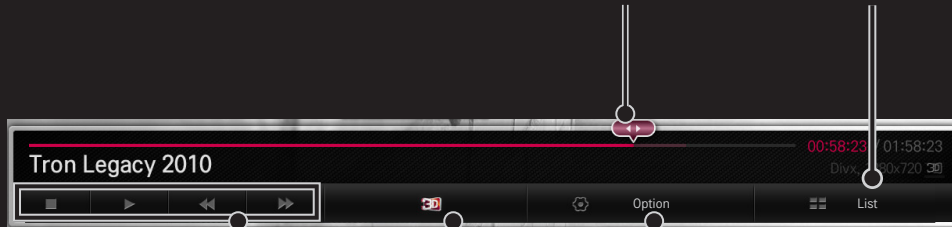

Plays

 
Sets options.

Changes to 3D mode.

☐ To control photo view

Controls playback and sets options while viewing pictures in full screen.

- ✎ For 3D pictures, the **Slide Show Effect** does not work even when the **Slideshow** function is enabled.

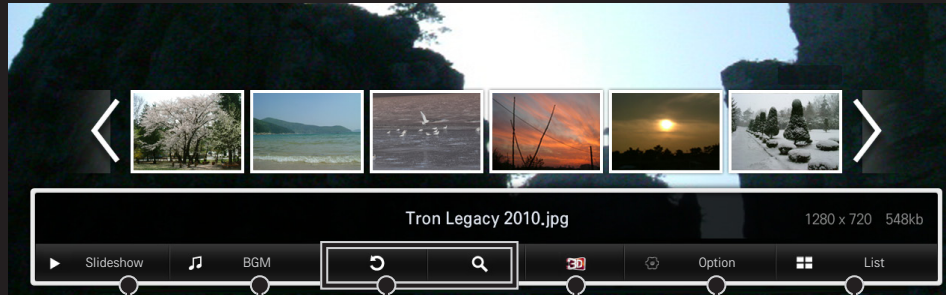

Displays photos as a
slideshow.

Plays background music.

Rotates or enlarges the picture.

Stops playback and returns
to the list.

Sets options.

Changes to 3D mode.

❑ To control music play

Controls play and sets options while playing music.



Selects the desired point and plays.

Returns to the list.

Plays

Sets options.

□ To set Smart Share™ related functions

HOME ⇒ Smart Share → Settings

Changes settings related to Smart Share content play.

□ Advanced Setting

TV Name	Changes the name that appears when searching for the TV from other devices.
Network Status	Checks the network connection.
Wi-Fi Screen Share	Allows use of wireless connection functions such as Wi-Fi direct and WiDi.
Share My TV	Allows/Disallows connecting to TV from other devices. Turns on/off DMR (Digital Media Renderer) connection.

Auto Play on
Receipt

Accepts/Rejects Content transferred from other devices.


DivX VOD

Registers or releases DivX.

Checks DivX Registration Code for playing DivX-protected videos. Register at <http://vod.divx.com>.

Uses Registration Code to rent or purchase movies at www.divx.com/vod.

 When using the DivX Registration Code of another device, the rented/purchased DivX file cannot be played. Use only the DivX Registration Code granted to this device.

 Converted files not conforming to DivX Codec Standard may produce abnormal images and sound.

□ History

To delete contents history, press button below. Use the contents at Contents Type and Linked device menu.

□ Privacy

Check the device that you do not want to open at Newly Added and Recently Watched menu.

❑ Smart Share™ supporting file

Maximum data transfer rate :

20 Mbps (Mega bit per second)

External supported subtitle formats :

*.smi, *.srt, *.sub (MicroDVD, SubViewer 1.0/2.0),

*.ass, *.ssa, *.txt (TMPlayer), *.psb (PowerDivX)

Internal supported subtitle formats :

XSUB (Supports internal subtitles generated from DivX6)

□ Video Supported Codec

Maximum: 1920 x 1080 @30p

Extension	Codec	
.asf	Video	VC-1 Advanced Profile, VC-1 Simple and Main Profile
.wmv	Audio	WMA Standard, WMA 9 Professional
.divx	Video	DivX3.11, DivX4, DivX5, DivX6, XViD, H.264/AVC, Motion Jpeg
.avi	Audio	MPEG-1 Layer I, II, MPEG-1 Layer III (MP3), Dolby Digital, Dolby Digital Plus, LPCM, ADPCM, DTS
.mp4	Video	H.264/AVC, MPEG-4 Part 2
.m4v	Audio	AAC
.mov		

Extension	Codec	
.mkv	Video	H.264/AVC
	Audio	HE-AAC, Dolby Digital
.ts	Video	H.264/AVC, MPEG-2, VC-1
.trp	Audio	MPEG-1 Layer I, II, MPEG-1 Layer III (MP3)
.tp		Dolby Digital, Dolby Digital Plus, AAC
.vob	Video	MPEG-1, MPEG-2
	Audio	Dolby Digital, MPEG-1 Layer I, II, DVD-LPCM
.mpg	Video	MPEG-1
.mpeg	Audio	MPEG-1 Layer I, II

□ Available music file

File type	Item	Info
mp3	Bit rate	32 Kbps – 320 Kbps
	Sample freq.	16 kHz – 48 kHz
	Support	MPEG1, MPEG2, Layer2, Layer3

□ Available photo file

File type	Item	Profile
2D(jpeg, jpg, jpe) 3D(jps)	Available file type	SOF0: baseline SOF1: Extend Sequential SOF2: Progressive
	Photo size	Minimum: 64 x 64 Maximum: Normal Type: 15360 (W) x 8640 (H) Progressive Type: 1920 (W) x 1440 (H)
3D (mpo)	Available file type	mpo
	Photo size	4:3 size: 3648 x 2736, 2592 x 1944, 2048 x 1536 3:2 size: 3648 x 2432

❑ Caution for playing video

- ✎ Some subtitles created by users may not work properly.
- ✎ The video and subtitle files should be placed in the same folder. In this case, you must assign the same names for the video and subtitle files for proper display.
- ✎ We do not support any stream that contains GMC (Global Motion Compensation) or Qpel (Quarterpel Motion Estimation).
- ✎ Only H.264/AVC profile level 4.1 and lower is supported.
- ✎ The file size limit is dependent on the encoding environment.

- ✎ Video files created by some encoders may not be played back.
- ✎ Video files in formats other than the ones specified here may not be played back.
- ✎ Playback of video files stored on the USB device that do not support High Speed, may not work properly.
- ✎ The TV supports DTS audio codec when the USB video file playback.

DLNA stands for Digital Living Network Alliance, which allows users to access video/music/photo files stored in a PC or server and enjoy them on TV via home networking.

❑ To connect DLNA-authenticated Smartphone

TV and the smartphone should be on the same network.

- 1 Enable Wi-Fi on the smartphone.
- 2 Install/run the app to share content on the smartphone.
- 3 Run “Share my mobile phone Content”.
- 4 Select the kind of Content (video/audio/photo) to play.
- 5 Select the video, music, or photo file to play on TV.
- 6 Select Add to Play List.
- 7 Select TV model name on the device to replay content. (TV model name is on the label of the device.)
- 8 Play ▶ Enjoy the selected file on TV.

❑ To connect DLNA DMR (Digital Media Renderer)

With Windows 7 PC operating system or DLNA-certified device (e.g. mobile phone), music/videos/photos may be played on the TV without installing a separate program

- 1 Configure the TV and PC on the same network. Configure Windows 7-installed PC on the network.
- 2 To replay a music/video/photo file, right-click on the file and use the “Remote Playback” Windows 7 feature.

For playback on devices like a mobile phone, refer to the model’s user guide.

- 3 Select **Yes** on the TV's pop-up window. Content will be played in only one device even though more than one TV or device is connected. Play speed can vary depending on network speed.

❑ To connect DLNA DMP (Digital Media Player)

With a PC having Nero MediaHome 4 Essentials, music/video/photo files may be replayed on the TV by linking them via home networking.


- 1 Configure TV and PC on the same network. TV and each device should be connected through a single access point to enable DLNA and Media Link service.
- 2 Install Nero MediaHome 4 on PC from the web site (<http://www.lg.com>). Before installation, close all running programs including firewall and Anti-Virus programs.


3 Indicate files/folders to share through Nero MediaHome 4 Essentials installed on PC.

1. Run "Nero MediaHome 4 Essentials" installed on PC.

2. Select folder items to share.

3. Configure the shared folder and click "Start Server." Server starts.

 If the shared folder does not appear on TV, click the Local Folder tab and search again.

 For more information and software-related information, refer to the web site <http://www.nero.com>.

□ PC requirements for installing Nero MediaHome 4 Essentials program:

- Windows® XP (Service pack 2 or later), Windows Vista®, Windows® XP Media Center Edition 2005 (Service pack 2 or later), Windows Server® 2003 (Service pack 1 or later)
- Windows® 7 Home Premium, Professional, Enterprise or Ultimate (32- and 64-bit)
- Windows Vista® 64-bit version (application runs in 32-bit mode)
- Windows® 7 64-bit version (application runs in 32-bit mode)
- Hard drive space: more than 200 MB

- CPU: 1.2 GHz Intel® Pentium® III or AMD Sempron™ 2200+ processor
- Memory: more than 256 MB RAM
- Graphic card: more than 32 MB, resolution of at least 800 x 600 pixels and at least 16-bit color settings supported
- Windows® Internet Explorer® 6.0 or later
- DirectX® 9.0c revision 30 (August 2006) or later
- Network environment: 100 MB Ethernet, Wireless LAN WLAN (IEEE 802.11g) or later

□ If a DLNA malfunction occurs

- ✎ If a DLNA feature does not work properly, check network settings.
- ✎ A 5-GHz access point is needed to view 1080p pictures via DLNA. A 2.4-GHz access point may cause broken images or other problems.
- ✎ DLNA may not work properly in the wireless network. It is recommended to connect to the wired network.
- ✎ Multi audio and internal subtitles are not supported in DLNA mode.
- ✎ If more than one TV is connected to a single server in DLNA mode, the content may not play depending on server performance.
- ✎ Subtitles may not be supported depending on DLNA device.
- ✎ DLNA feature may not work properly in all network environments.

- ✎ DLNA feature cannot be used with some access points that do not support multicasting. For more information, refer to access point manual or consult with the manufacturer.
- ✎ Supported file types may differ depending on DLNA server environment, even for the file types supported by TV.
- ✎ Too many sub-folders and files included in one folder may cause malfunction.
- ✎ Information about the file from DLNA server may not be displayed correctly.
- ✎ Nero MediaHome 4 Essentials is recommended when watching video subtitles on DLNA server.
- ✎ To add a subtitle file later, turn off the shared folder and reset.
- ✎ DRM file located in MediaHome server are not played.

❑ To connect Media Link

Install Plex program on PC or laptop connected to the same network as Smart TV to access a variety of multimedia including photos, videos, and music stored on PC/laptop.

- 1 Install Plex Media Server program on PC/laptop. Visit web site at (<http://www.plex.com>) and download the Plex program compatible with PC/laptop.
- 2 After installing the program, right-click the Plex icon in the bottom tray of the PC to sets file section in Media Manager.
- 3 Select **Media Link** on the TV's Home.
- 4 Media Link section of the connected PC/laptop appears. Select section.

☐ To use Media Link

HOME ⇒ Media Link



The folders appear as set up in the PLEX Media Manager.

❑ System requirements for installing PLEX

- Minimum requirements
PC with at least 1.6 GHz Intel Core Duo Processor and Windows XP SP3, minimum 512 MB of RAM
- Recommendations for HD Content transcoding (720p and 1080p)
PC with at least 2.4 GHz Intel Core Duo Processor and Windows XP SP3, minimum 2 GB of RAM
Supports Windows XP, Vista and Windows 7
- Network requirements
ADSL/Cable/Wi-Fi Internet connection for media metadata output and update
Wired network: Ethernet network with 100 Base-T or 1000 Base-T
Wireless network: Recommends uncongested 802.11n & supports media play on wireless mobile devices

❏ Caution for using Media Link

- ✎ PLEX media server version installed on Mac or PC supports the version of 0.9.1.14 or later.
- ✎ For the following languages, GUI language is displayed in English and the data being delivered are not displayed:
: Thai, Arabic, Persian, Hebrew, Kurdish
When replaying video plug-in of a media not supported by the TV, there may be a delay in initial buffering due to extra processing time.
The computer's conversion speed may differ depending on its performance and network speed.
- ✎ The file types supported when playing files stored on the PC (Movie, TV Show, Music) are the same as those for DLNA.

- ✎ When replaying music clips, there is no support for playing with clip moving. (Same as DLNA.)
- ✎ When playing high-definition videos through a Wi-Fi connection, there may be delays or improper playback.
- ✎ The TV may not recognize the computer if the AP settings are not correct. (e.g., When setting the “multicast forward” feature on the AP device, the TV cannot recognize the PC on a Wi-Fi connection.)
- ✎ For some plug-ins, play function may be limited depending on media types.
- ✎ Plug-ins are subject to change or becoming inoperable without prior notice according to the policy of the service provider.

❑ To connect USB

Connect a USB storage device (external HDD, USB memory) to the USB port of TV to enjoy the content files stored in the USB device on your TV.

To remove a USB storage device, choose the **Quick Menu → USB Device** to remove and check for message that the USB has been removed before taking it out physically. If detached early, an error may occur on the TV or USB storage device.

- ✎ After selecting to remove USB device, it is impossible to read the USB storage device. Remove USB storage device and reconnect it.

❑ Caution when using USB storage device

- ✎ If USB storage device has a built-in auto recognition program or uses its own driver, it may not work.
- ✎ Some USB storage devices may not work or work improperly.
- ✎ Use only USB storage devices formatted with FAT32 or NTFS File System provided by Windows.
- ✎ For external USB HDD, it is recommended to use device of less than 5V rated voltage and 500 mA rated current.
- ✎ It is recommended to use a USB hub or hard disk drive with power supplied. (If the power supplied is not enough, the USB storage device may not be detected properly.)

- ✎ It is recommended to use USB Memory Stick with 32 GB or less and USB HDD with 2 TB or less.
- ✎ For USB HDD with energy-saving features, turn off and turn on again if it does not work properly. For more information, refer to the user manual of USB HDD.
- ✎ Data in USB storage device can be damaged so be sure to back up important files in a separate storage device. Data maintenance is the user's responsibility and the manufacturer is not responsible for any data loss.

❑ To use Premium

HOME ⇒ Premium

This service delivers a wealth of content such as news, weather, stock data, replay TV programming, and video at any time while connected to the network. For Premium content, specialized country-specific services are offered that take into account regional cultural sensitivities, in addition to globally provided content.



The screenshot shows the LG Smart TV Premium interface. At the top, there is a 'PREMIUM' header and a navigation bar with icons for home, help, search, and close. Below this is a banner for 'LG Smart TV' and 'www.lgappstv.com'. The main content area features a grid of ten content categories: WEB, Movie, Map, SNS, Play, NEWS, Comic, Entertainment, Information, and TV. A right arrow is visible next to the grid. At the bottom, there is an 'Add to My Apps' button.

Broadcasting image

Premium Content
Select desired
Content.

Search

Sign in

Add to My Apps

❑ To use paid Content

Some Premium Content are provided as for-fee services. To purchase for-fee services, use either LG Electronics' proprietary billing system or that of each content provider. With LG's billing system, sign up for membership and register payment information on www.lgappstv.com before paying.

- 1 Click **Sign In** button in upper right corner of Home screen to sign in.
- 2 Move to the desired Premium service.
- 3 After checking the content's pricing and service information, click the Purchase button. (Some Content may be subject to a time limit or restricted number of views.)

- 4 Once the purchasing process is completed, view the paid content by clicking the **Buy** button.
- 5 Select your ID on upper menu of Home screen and check history of purchases from **My Page** → **Payment inquiry**. It is also available on **My Page** → **Purchase History** of web site (www.lgappstv.com).

❑ To reset Premium

HOME ⇒ **Settings** → **SUPPORT** → **Initialization of Premium**

Premium list, Premium information, country setting, and user sign-in information will be reset. When an error occurs during Premium update, reset will fix the problem.

- ✎ Content on offer by service providers are subject to change to enhance their service quality or deletion without any prior notice. Refer to the web site of each content provider for questions, troubleshooting, or latest information about Content. LG Electronics does not take any legal responsibility for content services and related information including discontinuation of service by the service provider.
- ✎ The quality of Premium service may be affected by Internet connections. For any questions related to Internet speed or any other service problems, contact the Internet service provider.
- ✎ For best service quality, subscribe to an Internet service of 4.0 Mbps (1.5 Mbps or faster). Contact the ISP (Internet service provider) for any problems related to Internet speed.
- ✎ Content providers may make available content that is unsuitable for minors. Parental discretion advised.

☐ To use LG Smart World

HOME ⇒ LG Smart World

LG Smart World is a TV application service available through Smart TV Service. You can download and enjoy many different apps (for fee or free) including education, entertainment, life and news.



Sign in.

When you sign in, ID is displayed.

When you select the ID, you can select My Page and Sign Out.

Select the app to install.

❑ To sign up with LG Smart World

HOME ⇒ Sign In




Sign up is required to download and run apps.

- 1 Select Sign Up and agree to Legal Notice.
 - 2 Enter ID and password.
 - 3 In Confirm Password box, enter password again.
 - 4 Select OK to complete sign-up process.
- ✎ If you only have the TV account, only free apps are available. To use paid apps, please add your payment method to our site (www.lgappstv.com).
 - ✎ You can sign in up to five TVs with a single ID.

❑ To install app on TV

HOME ⇒ LG Smart World

- 1 Sign in first.
- 2 Select the desired app from list. Find the desired app quickly using search function.
- 3 Select “Install” on the detailed info page to install app on TV. You need to pay for paid apps.

-  You can purchase apps from PC or TV but you must use TV to install and run them.
-  If you have insufficient storage space on TV, you can download apps to USB storage device connected through the TV's terminal for USB apps. The app stored on USB is available to run/delete/move from **My Apps** screen.
-  The USB storage device containing apps cannot be used for saving other data. (For USB Apps Only)

❑ To manage my information

HOME ⇒ LG Smart World

- 1 Sign in.
- 2 Select the currently signed-in ID at the top of the screen.
- 3 Select My Page.
- 4 Manages by examining Member Information, My Purchased Apps List and TV Installed Apps List.

My Information	Shows basic information about the ID currently signed in. To change your member information, please visit www.lgappstv.com on your PC.
Payment Inquiry	Views Payment History with the ID you have signed in.
Purchased Apps	Views My Purchased Apps List with the ID you have signed in. You can delete/re-install the purchased apps.

HOME ⇒ Internet

Types URL manually on TV or visits web sites added to Favorite.

Types in the web address. Add the current page to favorites.

Selects when opening several web browsers. Moves to a previously visited website.

The screenshot shows a web browser window with the address bar containing 'http://www.lg.com/'. The browser's address bar has a search icon, a star icon for bookmarks, and a refresh icon. The browser's search bar contains 'bing'. The browser's tabs show 'LG' and 'bing'. The browser's address bar also shows 'LG SmartWorld | LG HomeNet | Aircon E2B'. The main content area displays the LG website's 'Select Your Region' page, which includes a world map and a list of regions and languages. The 'Asia & Pacific' region is selected, and the list of regions and languages is shown below the map.

Region	Language
Australia	English
China	中文
Hong Kong	English 中文
India	English
Indonesia	English
Japan	日本語
Korea	한국어
Malaysia	English
New Zealand	English
Philippine	English
Singapore	English
Taiwan	中文
Thailand	ไทย
Vietnam	Việt Nam

Remember My Choice

- ✎ **Internet** supports up to Flash 10 but does not support platform-dependent technology like ActiveX.
- ✎ **Internet** only works with pre-installed plug-ins.
- ✎ **Internet** only replays the following media file formats:
JPEG / PNG / GIF / WMV (ASF) / WMA / MP3 / MP4
- ✎ **Internet** is forcibly closed when memory is insufficient.
- ✎ For the **Internet**, fonts installed on the TV are used and may not be displayed normally depending on the content played.
- ✎ **Internet** does not support file and font download.
- ✎ **Internet** is made for TV so it may function differently from PC browsers.
- ✎ **Internet** is a TV browser and may not work properly when playing some content files.

HOME ⇒ Social Center

LG Smart TV provides **Social Center** app that delivers SNS service such as Facebook or Twitter while watching TV.

With **Social Center** app, users can communicate with friends and see all messages and photos posted by SNS friends.

- 1 Sign in to LG TV account or if not a member, sign up first.
- 2 Sign in to the desired service (Facebook or Twitter) or if not a member, create an account first.
- 3 Check SNS services and post messages while watching TV.
New messages posted on Facebook or Twitter from **Social Center** app also appear on account's web page and mobile web.

SOCIAL CENTER



211-1 MBC HD 11:00-12:10 PM

CINEMA Smart TV www.lgappstv.com LG App TV

Refresh

The image shows a social media interface on a TV screen. At the top left, it says 'SOCIAL CENTER'. Below that is a large image of a butterfly on a yellow flower. Underneath the image, it displays '211-1 MBC HD 11:00-12:10 PM'. At the bottom of the screen, there are logos for 'CINEMA Smart TV', 'www.lgappstv.com', and 'LG App TV'. On the right side, there is a social media feed with three posts. Each post has a profile picture, a name, and a short message. The first post is from 'Sammy Photo Maniac' with the message 'Now, spring comes and flowers blooms, it's spring!'. The second post is from 'Merisa Photo Maniac' with the message 'Wow! This really is good. Thank you^^'. The third post is from 'Jina Photo Maniac' with the message 'Mine looked really bad-'. Above the feed, there are icons for Facebook and Twitter, and a 'Share' button. At the bottom right, there is a 'Refresh' button.

Toggles Facebook/Twitter.

- ✎ If there is no **Social Center** app on the **My Apps**, install one from LG Smart World.
- ✎ Log on to SNS services using smart phone's LG Magic Remote app to conveniently compose text messages. The apps are available on Google Play Store or Apple App Store.

Sign up is required to use LG Smart World.

Membership to use free apps: Sign up at TV or PC.

Membership to purchase paid apps: Sign up only at PC.

Problem	Solution
When entering menu, the "Initializing" message always appears.	<ul style="list-style-type: none">• The "Initializing" message shows you how long it takes to reboot the microprocessor and hardware, set up network communications, and communications with SDP (device authentication and basic information download). It takes about 20 seconds and this is a normal process.
There is no content shown on the Premium card.	<ul style="list-style-type: none">• Content may not be shown when changing country setting on Smart TV. Change to desired country in HOME ⇒ Settings → OPTION → Smart TV Setting → Smart TV Country.

Problem	Solution
While using internet features, there is space that does not appear in some web sites.	<ul style="list-style-type: none">• The internet of the TV supports up to Flash 10 and may not replay any file format other than the following : JPEG, PNG, GIF, WMV (ASF), WMA, MP3, MP4
Internet closes automatically when visiting website.	<ul style="list-style-type: none">• If memory is insufficient because of large volume of image information in the web page, internet may be forced to close.
I already signed up on TV. Do I need to sign up again at web site (www.lgappstv.com)?	<ul style="list-style-type: none">• Use ID and password registered with TV to sign in to the website (www.lgappstv.com). Type in personal information after signing in with the same ID and password registered with the TV. After completing the email authentication process, the website (www.lgappstv.com) membership registration is completed.

Problem	Solution
Can each family member use a different ID with a single TV?	<ul style="list-style-type: none">• It is possible to register and use more than one ID on one TV.• To check the ID registered with TV from HOME ⇒ Settings → OPTION → Smart TV Setting → ID List.• You can check the list of apps purchased by each ID. However, you can see all apps installed by each ID in My Apps.
What should I do if I forget my ID?	<ul style="list-style-type: none">• After signing up on a PC, use “Forgot ID?” feature on web site (www.lgappstv.com) when needed.• After signing up on TV, check it from HOME ⇒ Settings → OPTION → Smart TV Setting → ID List.

Problem	Solution
<p>I purchased an app from website (www.lgappstv.com). How can I use it on TV?</p>	<ul style="list-style-type: none">• To check purchased apps on TV, sign in and view on the Purchased Apps menu. Select the ID at the top of Home and check the app in My Page → Purchased Apps.
<p>Can I see history of my purchased apps?</p>	<ul style="list-style-type: none">• Select the ID at the top of Home and check the app in My Page → Purchased Apps.• Sign in to website (www.lgappstv.com) and then select My Page → Purchase History.
<p>I deleted a paid app, then do I have to purchase again to download it?</p>	<ul style="list-style-type: none">• Once app has been purchased, it may be re-downloaded within one year, even if accidentally erased. You can re-download apps only if they were purchased apps available for service. Select the ID at the top of Home and re-download apps in My Page → Purchased Apps.

Problem	Solution
Can I use apps provided from LG Smart TV's LG Smart World on both TV and PC?	<ul style="list-style-type: none">• Please check if the TV model supports LG Smart World.• The apps provided from LG Smart TV's LG Smart World can only be run on LG Smart TV.• Apps may be purchased from the website (www.lgappstv.com) but cannot be used on a PC or Mac. Use care when purchasing.
How can I check the ID currently signed in to TV?	<ul style="list-style-type: none">• Select the ID at the top of Home and check the currently signed-in ID in My Page → My Information.
I installed an app on TV. Where can I check the installed app?	<ul style="list-style-type: none">• Select HOME ⇒ My Apps. All paid and free apps installed on TV are displayed.

Problem	Solution
There is a difference between the app size shown in the screen and the actual app size installed on TV.	<ul style="list-style-type: none">• The app size shown in the screen includes the additional space needed for installing apps so it may be different from actually installed app size.
I forgot password on TV. What should I do?	<ul style="list-style-type: none">• If you only have the TV account, you cannot recover your password when it is lost. Create a new ID and log in with the ID.• But, if signed up on both TV and PC, use the “Forgot Password?” feature at website (www.lgappstv.com).

Problem	Solution
Do I need to store payment information in web site to purchase paid apps?	<ul style="list-style-type: none">• To purchase paid apps from TV, enter payment method information at the website (www.lgappstv.com) but to not store payment information, use quick payment service. But, quick payment service is only available on the website, and apps may not be purchased from TV unless payment information is stored on the web site.
Can I cancel an app that I have purchased?	<ul style="list-style-type: none">• As a member you cannot demand refund just because you changed your mind after purchase.• If there is a defect in the product or a problem of using the product, which does not caused by your fault, you can ask for a refund. However, the valid reason for refund must be provided.

Problem	Solution
I am resistered as a member, but I cannot purchase paid apps.	<ul style="list-style-type: none"><li data-bbox="594 138 1585 292">• Log in with the ID you created on your PC and add your payment information. Then, log out from TV and log in again so you can buy paid apps.

❑ To view 3D images

3D imaging is a technology that utilizes the slight difference in left/right eyes to make the images on TV appear just like real-life 3-dimensional space.

- 1 Play a 3D-image title or turn to a 3D channel.
- 2 Put on 3D glasses.
- 3 Press **3D** button to change to 3D imaging.
- 4 While viewing 3D images, press **3D** button on the remote control to end 3D image viewing.

 Depending on the input signal, available 3D type may differ.

❑ To adjust details of 3D images


HOME ⇒ Settings → PICTURE → 3D Settings

Adjusts various aspects of 3D imaging.

3D Mode

Provides the appropriate 3D depth.

- **3D Depth** : Adjust 3D depth between object and background.
- **3D Viewpoint** : 3D image can be made closer or farther from user.

3D Sound Zooming	Provides the 3D-optimized sound.
3D Pattern Recognition	Converts to 3D screen automatically by analyzing the pattern of the original screen.
Normal Image View	You can view the 2D images removed the 3D effect.
3D Color Correction	Corrects the color of 3D images.  Depending on model, the 3D Color Correction may not be available.
3D Image Correction	Switches left/right images of 3D video.

❑ Caution when viewing 3D images

- ✎ When viewing 3D images, it is recommended that the viewer maintain a distance of at least twice the screen's diagonal length.
- ✎ 3D images may not be viewed correctly with shutter-type glasses that require recharging.
- ✎ If a future 3D broadcasting format that is not supported by this TV becomes the standard, an additional device such as a set-top box may be required.

❑ Warning when using 3D glasses

- ✎ Do not use the 3D glasses as a replacement for your own corrective glasses, sunglasses, or protective goggles. Improper use of 3D glasses may cause eye injuries.
- ✎ Do not store 3D glasses in extreme conditions. Exposure to excessively high or low temperatures may deform the lenses. Do not use deformed glasses.
- ✎ Do not apply pressure to or subject 3D glasses to any impact. Subjecting 3D glasses to rough handling may cause a defect.
- ✎ The lenses on 3D glasses (with polarizing film) are vulnerable to scratches. Use only a clean and soft cloth for cleaning. Dirty cloth may scratch the polarizing film.
- ✎ Scratching the lens surface of the 3D glasses with sharp objects or cleaning with chemicals may distort 3D images.

❑ To connect Time Machine dedicated USB storage device

- 1 Connect a USB HDD (40 GB or larger) to the **Time Machine Ready** jack on the TV. The Time Machine function works only with the **Time Machine Ready** jack.
 - 2 USB HDD must be initialized to be used for Time Machine.
When connecting a USB HDD that has not been initialized, select **MY APPS** ⇒ **Time Machine**. **USB Device Initialization** screen appears.
 - 3 Complete the USB HDD initialization, and set **Time Machine Mode** to **On**.
- ✎ To remove USB storage device, be sure to select **Quick Menu** → **USB Device** and confirm the message that USB storage device has been removed before removing.

❑ To change Time Machine mode or initialize USB storage device

Wheel(OK) ⇒ Setting

Changes Time Machine settings while using Time Machine.

Time Machine Mode	<p>On: Automatically enables Timeshift Mode when the TV is turned on.</p> <p>Off: Disables Timeshift Mode.</p>
USB storage device initialization	<p>The connected HDD becomes available for the use of Time Machine. All data stored on USB device will be deleted.</p>

- ✎ Use of HDD (Hard Disk Drive) is recommended. For SSD (Solid State Drive), the number of writes/clears is limited.
- ✎ A USB HDD size of between 40 GB and 2 TB is recommended.
- ✎ After **USB storage device initialization** the USB HDD will not be recognized on a PC.
- ✎ The data stored on USB device may be damaged. Data maintenance is the user's responsibility and the manufacturer is not responsible for any data loss.
- ✎ If there is problem with a data sector of the USB storage device, it may not work properly.

Time Machine enables storage of live TV programs on USB storage device while watching digital broadcast so missed segments of the program being watched and previously aired programs may be viewed later.

 
- ✎ The Timeshift mode can be set up to 90 minutes. (For Italy, it can be set for up to 60 minutes.)
- ✎ An error in the data sector of the USB storage device may result in malfunction.

Press **Wheel(OK)** during Time Machine.

Selects the desired point and plays

Moves to currently
broadcasting playtime

Changes Timeshift Mode
Initialize USB Device

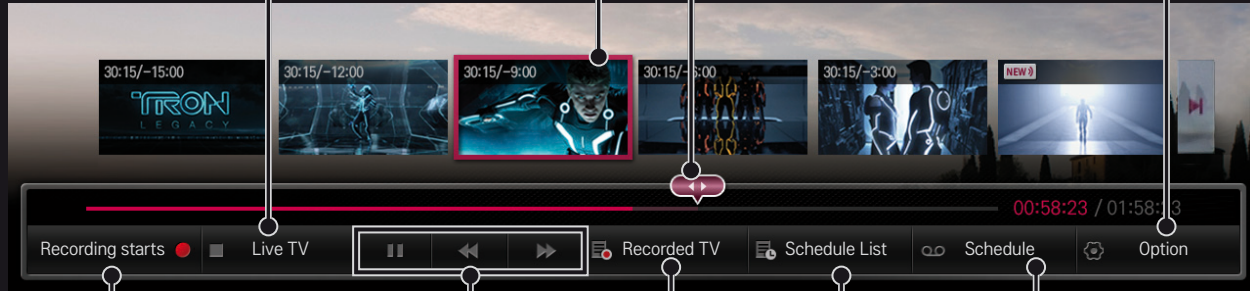


Starts recording from
current point

DVR play control

Shows recorded programs

Checks defined
schedule list

Sets schedule

 Image shown may differ from your TV.

❑ To immediately start recording

Wheel(OK) ⇒ Recording Starts

Records a program when you must leave the room in the middle of viewing.

- ✎ Only records the digital broadcast you are currently watching.
- ✎ If you force your TV to power off whilst recording, the programme may not be saved. Ideally, you should stop the recording and check that the programme has recorded before turning it off.
- ✎ Programs are protected under relevant copyright laws and may require prior permission from the copyright holder for copying and replaying. Programs recorded with this device may only be used for personal viewing. It is prohibited to sell, transfer, or lend copyrighted recordings to a third party.

- To stop recording

Wheel(OK) ⇒ Recording Stop

Stops recording immediately

- To modify recording end time

Wheel(OK) ⇒ Stop Option → Recording end time modify

✎ Maximum recording time is 5 hours.

❑ To schedule recording

Wheel(OK) ⇒ Schedule

Select schedule by program	Selects a program from the Program Guide screen to schedule a viewing or recording.
Select schedule by date	Selects date, time, and channel to schedule a viewing or recording.

- ✎ The minimum length of Timer Recording is 2 minutes.
- ✎ If one sector of the disk is damaged, one or all of the items in the Schedule List may be affected.
- ✎ A maximum of 30 items may be entered in the Schedule List.

❑ To assure and/or modify schedules

Wheel(OK) ⇒ Schedule List

Assures, modifies, or deletes the scheduled viewing or recording.

☐ To see Recorded TV


HOME ⇒ SmartShare → Recorded TV

Selects the recording stored in USB HDD to view/delete it.

Play on previous playtime	For a recording once-played in the past, plays it from the previous playtime.
Play from the start	Plays the selected recording from the start.
Delete	Deletes the selected recording.

 The maximum number of Recorded TV is 300.

Download the LG Magic Remote app from Google Play Store or Apple App Store to watch TV with your smartphone.

- Now you can enjoy your favorite TV shows on your smartphone. (Some models only)
 - Add your favorite channels on your smartphone.
 - You can use the functions such as PREMIUM, MY APPS directly on your smartphone.
 - Select an item using the TV Search function from your smartphone to watch it on TV.
 - The text input function is supported, so you can enter text easily. (Text cannot be entered on some screens.)
 - Select the app's touch pad to control in the same way the pointer of the Magic Remote Control works.
-  The supported functions may vary depending on the TV or the version of the LG Magic Remote app.

❑ To use a USB wired/wireless mouse

Connect your mouse to the USB port. Use the mouse to move the pointer on the TV screen and select the menu you want. The right and the special buttons on the mouse do not work.

Mouse	Magic Remote Control
Left Button	OK Button on Magic Remote Control
Wheel Button	Wheel Button on Magic Remote Control

✎ The usability of a wireless USB mouse and keyboard may be affected by Radio Frequency environment and the distance.

❑ To use a USB wired/wireless keyboard

Connect your keyboard to the USB port. You can enter text with the keyboard when using the search function and the Internet.

✎ Text cannot be entered on some screens.

✎ Applicable Keyboards

It is recommended to use a product which is tested for compatibility with LG TV.

LOGITECH K200, LOGITECH K400, MICROSOFT Comfort Curve 2000, MICROSOFT MS800, and LG Electronics ST-800

❑ To use a game pad

Connect your game pad to the USB port on the TV if the game supports the use of game pad.

✎ Applicable Game Pads

It is recommended to use an authorized game pad which is tested for compatibility with LG TV.

Logitech F310, Logitech F510, and Logitech F710

HOME ⇒ Settings → SUPPORT → Software Update

Uses Software Update to check and obtain the latest version.

It is also possible to check manually for available updates.

Software Update	<p>Set it to On.</p> <p>When an update file is detected, the file is automatically downloaded.</p> <p>When the file download is complete, the software update window appears.</p>
Check Update Version	<p>Checks the version installed and when an update is available, the download process can be performed manually.</p>

- ✎ The latest version can be obtained via digital broadcast signals or internet connections.
- ✎ Changing the channel while downloading the software via digital broadcast signal interrupts the download process. Returning to the initial channel allows downloading to resume.
- ✎ If software is not updated, certain functions may not work properly.

If the following symptoms occur, please carry out the checks and adjustments described below. There may be no malfunction.

HOME ⇒ **Settings** → **SUPPORT** → **Signal Test**

Shows the MUX and Service information etc. If you select Antenna & Satellite or Cable & Satellite, a signal test only for Antenna or Cable is displayed.

❑ General

Problem	Solution
Cannot view certain channels.	<ul style="list-style-type: none">• Adjust the location or orientation of the antenna.• Save the desired channels on Auto Tuning or Channel Edit.
After turning on the TV, there is a delay before full images appear.	<ul style="list-style-type: none">• It is not a problem because this process was intended to clean up the image noises that may occur when turning on the TV.

☐ Pictures

HOME ⇒ **Settings** → **SUPPORT** → **Picture Test**

Check if the image signal output is normal by beginning with Picture Test.

If there is no problem with the test image, check external device connections or broadcast signals.

Problem	Solution
Images from previous channel or other channels linger or the screen shows annoying lines.	<ul style="list-style-type: none">• Try adjusting the antenna to the direction of the TV station or refer to the manual for proper way to connect the antenna.

Problem	Solution
Vibrating horizontal/vertical lines and fishnet patterns appear momentarily.	<ul style="list-style-type: none">• Such a problem may happen when there is strong electronic interference. Turn off other electronic devices such as mobile phones, power tools and other small electrical appliances.
The screen display freezes or does not work properly in digital broadcast.	<ul style="list-style-type: none">• It may happen when the signals are weak or the reception unstable. Adjust the antenna's orientation or cable connections.• If the signal strength or quality is low on Manual Tuning, call the TV station or administration office for checkup.
Digital broadcast is not on even though the cable is connected.	<ul style="list-style-type: none">• Check with cable operator regarding the subscription and/or signal. (Depending on the subscription, digital broadcasting may not be supported.)

Problem	Solution
Image is not on or not clear when connected to HDMI.	<ul style="list-style-type: none">• Check the HDMI® cable specifications. Use only HDMI® cable. Other cables may cause images to fade in and out or not be displayed properly.• Verify that all cable connections are securely connected. When connections are not secure, images may not be properly displayed.
Does not work when USB storage device is connected.	<ul style="list-style-type: none">• Verify that the USB device and cable is version 2.0 or higher.

□ Sound

HOME ⇒ **Settings** → **SUPPORT** → **Sound Test**

Try Sound Test first to verify that sound signal output is normal.

When the test sound is normal, check external device connections or broadcast signals.

Problem	Solution
Screen display is on but no sound.	<ul style="list-style-type: none">• Check other TV channels.• Make sure the TV Speaker is set to On.
For analog broadcast, stereo is not clear or sound comes from one speaker only.	<ul style="list-style-type: none">• In a poor reception area (areas with weak or unstable signal) or if multi audio is not stable, select Mono on Audio.• Adjust the Balance with the Navigation button.

Problem	Solution
TV sound is not in sync with the lips or the sound breaks up occasionally.	<ul style="list-style-type: none">• If it happens on a certain TV channel, it may be caused by problems with an individual station's broadcast signal. Check with the TV station or local cable operator.
Whenever changing the channel, the volume is different.	<ul style="list-style-type: none">• Depending on the channel, there can be differences in volume.• Please set Auto Volume to On.

Problem	Solution
On certain channels, sound does not come out or only the background music plays. (If it is a program created for overseas)	<ul style="list-style-type: none">• On Language, set Language → Audio Language as the desired language. Even if the language on Audio is changed, once the power is turned off or the channel is changed, the default settings will be reset.
There is no sound when connected to HDMI/USB.	<ul style="list-style-type: none">• Verify that the HDMI® cable is high speed.• Check if the USB device and cable is version 2.0 or higher.• Use only regular music (*.mp3) files.

❑ PC connection problem

Problem	Solution
The screen display is not on after connecting to the computer.	<ul style="list-style-type: none">• Verify that the computer and the TV are securely connected.• Turn the TV off and back on using the remote control.• Restart the PC with the TV on.• Check if the resolution is correctly set for PC input.• To use the TV as a secondary monitor, check if the connected desktop or laptop supports dual monitor displays.• Reconnect the RGB/HDMI cable.
There is no sound after connecting the computer with the HDMI cable.	<ul style="list-style-type: none">• Check with the video card manufacturer to ensure it supports HDMI voice output. (Video cards manufactured in DVI format require connection of a separate sound cable.)


Problem	Solution
When connected to the computer, the display is partially cut off or shifts to one side.	<ul style="list-style-type: none">• Set up the resolution supporting PC input. (If it does not work, please reboot the computer.)• Select Screen and adjust Position/Size/Phase.


❑ Trouble with replaying movies in My Media.

Problem	Solution
Files on the Movie List are not displayed.	<ul style="list-style-type: none">• Check if the file on the USB storage device can be read on a computer.• Check that the file extension is supported.
"This file is invalid." The above error message appears or the image display is not normal even though the sound is okay.	<ul style="list-style-type: none">• Verify that the file replays normally on the video player in the computer. (Check for damaged files.)• Check if the resolution is supported by the computer.• Verify that the video/audio codec is supported.• Verify that the frame rate is one that is supported.

Problem	Solution
<p data-bbox="95 149 474 192">"Unsupported Audio."</p> <p data-bbox="95 207 577 420">The above error message appears or the sound is not normal even though the image display is okay.</p>	<ul data-bbox="611 122 1643 441" style="list-style-type: none"><li data-bbox="611 122 1643 221">• Verify that the file replays normally on the video player in the computer. (Check for damaged files.)<li data-bbox="611 236 1472 335">• Check that the audio codec is supported by the computer.<li data-bbox="611 350 1267 393">• Verify that the bit rate is supported.<li data-bbox="611 408 1345 451">• Verify that the sample rate is supported.

Problem	Solution
Subtitle is not displayed.	<ul style="list-style-type: none">• Verify that the file replays normally on the video player in the computer. (Check for damaged files.)• Check if the video file shares the same name with the subtitle file.• Verify that the video and subtitle files are placed in the same folder.• Verify that the subtitle file format is supported.• Verify that the subtitle language is supported. (Open the subtitle files in Notepad to check for the language.)

 Image shown may differ from your TV.

 For information on requesting service, refer to the TV's menu.

HOME ⇒ Settings → SUPPORT → Product/Service Info.

If the following symptoms occur, please carry out the checks and adjustments described below. There may be no malfunction.

HOME ⇒ **Settings** → **SUPPORT** → **Signal Test**

Shows the MUX and Service information etc. If you select Antenna & Satellite or Cable & Satellite, a signal test only for Antenna or Cable is displayed.

□ General

Problem	Solution
Cannot view certain channels.	<ul style="list-style-type: none">• Adjust the location or orientation of the antenna.• Save the desired channels on Auto Tuning or Channel Edit.
After turning on the TV, there is a delay before full images appear.	<ul style="list-style-type: none">• It is not a problem because this process was intended to clean up the image noises that may occur when turning on the TV.

☐ Pictures

HOME ⇒ **Settings** → **SUPPORT** → **Picture Test**

Check if the image signal output is normal by beginning with Picture Test.

If there is no problem with the test image, check external device connections or broadcast signals.

Problem	Solution
Images from previous channel or other channels linger or the screen shows annoying lines.	<ul style="list-style-type: none">• Try adjusting the antenna to the direction of the TV station or refer to the manual for proper way to connect the antenna.

Problem	Solution
Vibrating horizontal/vertical lines and fishnet patterns appear momentarily.	<ul style="list-style-type: none">• Such a problem may happen when there is strong electronic interference. Turn off other electronic devices such as mobile phones, power tools and other small electrical appliances.
The screen display freezes or does not work properly in digital broadcast.	<ul style="list-style-type: none">• It may happen when the signals are weak or the reception unstable. Adjust the antenna's orientation or cable connections.• If the signal strength or quality is low on Manual Tuning, call the TV station or administration office for checkup.
Digital broadcast is not on even though the cable is connected.	<ul style="list-style-type: none">• Check with cable operator regarding the subscription and/or signal. (Depending on the subscription, digital broadcasting may not be supported.)

Problem	Solution
Image is not on or not clear when connected to HDMI.	<ul style="list-style-type: none">• Check the HDMI® cable specifications. Use only HDMI® cable. Other cables may cause images to fade in and out or not be displayed properly.• Verify that all cable connections are securely connected. When connections are not secure, images may not be properly displayed.
Does not work when USB storage device is connected.	<ul style="list-style-type: none">• Verify that the USB device and cable is version 2.0 or higher.

□ Sound

HOME ⇒ **Settings** → **SUPPORT** → **Sound Test**

Try Sound Test first to verify that sound signal output is normal.

When the test sound is normal, check external device connections or broadcast signals.

Problem	Solution
Screen display is on but no sound.	<ul style="list-style-type: none">• Check other TV channels.• Make sure the TV Speaker is set to On.
For analog broadcast, stereo is not clear or sound comes from one speaker only.	<ul style="list-style-type: none">• In a poor reception area (areas with weak or unstable signal) or if multi audio is not stable, select Mono on Audio.• Adjust the Balance with the Navigation button.

Problem	Solution
TV sound is not in sync with the lips or the sound breaks up occasionally.	<ul style="list-style-type: none">• If it happens on a certain TV channel, it may be caused by problems with an individual station's broadcast signal. Check with the TV station or local cable operator.
Whenever changing the channel, the volume is different.	<ul style="list-style-type: none">• Depending on the channel, there can be differences in volume.• Please set Auto Volume to On.

Problem	Solution
On certain channels, sound does not come out or only the background music plays. (If it is a program created for overseas)	<ul style="list-style-type: none">• On Language, set Language → Audio Language as the desired language. Even if the language on Audio is changed, once the power is turned off or the channel is changed, the default settings will be reset.
There is no sound when connected to HDMI/USB.	<ul style="list-style-type: none">• Verify that the HDMI® cable is high speed.• Check if the USB device and cable is version 2.0 or higher.• Use only regular music (*.mp3) files.

❑ PC connection problem

Problem	Solution
The screen display is not on after connecting to the computer.	<ul style="list-style-type: none">• Verify that the computer and the TV are securely connected.• Turn the TV off and back on using the remote control.• Restart the PC with the TV on.• Check if the resolution is correctly set for PC input.• To use the TV as a secondary monitor, check if the connected desktop or laptop supports dual monitor displays.• Reconnect the HDMI cable.
There is no sound after connecting the computer with the HDMI cable.	<ul style="list-style-type: none">• Check with the video card manufacturer to ensure it supports HDMI voice output. (Video cards manufactured in DVI format require connection of a separate sound cable.)

Problem

When connected to the computer, the display is partially cut off or shifts to one side.

Solution


- Set up the resolution supporting PC input. (If it does not work, please reboot the computer.)


❑ Trouble with replaying movies in My Media.

Problem	Solution
Files on the Movie List are not displayed.	<ul style="list-style-type: none">• Check if the file on the USB storage device can be read on a computer.• Check that the file extension is supported.
"This file is invalid." The above error message appears or the image display is not normal even though the sound is okay.	<ul style="list-style-type: none">• Verify that the file replays normally on the video player in the computer. (Check for damaged files.)• Check if the resolution is supported by the computer.• Verify that the video/audio codec is supported.• Verify that the frame rate is one that is supported.

Problem	Solution
<p data-bbox="95 149 474 192">"Unsupported Audio."</p> <p data-bbox="95 207 577 418">The above error message appears or the sound is not normal even though the image display is okay.</p>	<ul data-bbox="611 124 1643 443" style="list-style-type: none"><li data-bbox="611 124 1643 219">• Verify that the file replays normally on the video player in the computer. (Check for damaged files.)<li data-bbox="611 236 1472 331">• Check that the audio codec is supported by the computer.<li data-bbox="611 348 1267 391">• Verify that the bit rate is supported.<li data-bbox="611 408 1345 451">• Verify that the sample rate is supported.

Problem	Solution
Subtitle is not displayed.	<ul style="list-style-type: none">• Verify that the file replays normally on the video player in the computer. (Check for damaged files.)• Check if the video file shares the same name with the subtitle file.• Verify that the video and subtitle files are placed in the same folder.• Verify that the subtitle file format is supported.• Verify that the subtitle language is supported. (Open the subtitle files in Notepad to check for the language.)

 Image shown may differ from your TV.

 For information on requesting service, refer to the TV's menu.

HOME ⇒ Settings → SUPPORT → Product/Service Info.

□ 根據NCC低功率電波輻射性電機管理辦法 規定

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。