


# 9.1 channel Cinema Sound

3D Blu-ray™ / DVD Home Theater System BH9540TW

### SIMPLE MANUAL


An extended Owner's Manual that contains information on the advanced features is located on the CD-ROM provided in an electronic version. To read these files, you will need to use a Personal Computer (PC) equipped with a CD-ROM drive. Some of the content in this manual may differ from your unit.

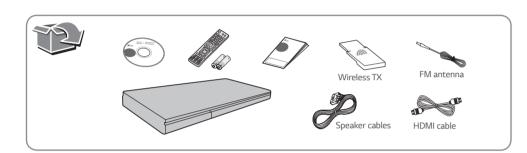

www.lg.com



### TV Connection (HDMI OUT)

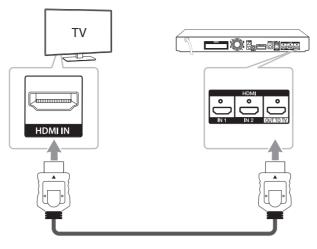








## **Speaker Connection**

Speaker design and connection method may be different according to models

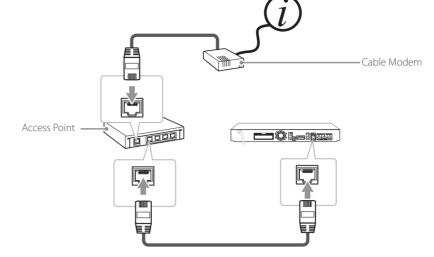





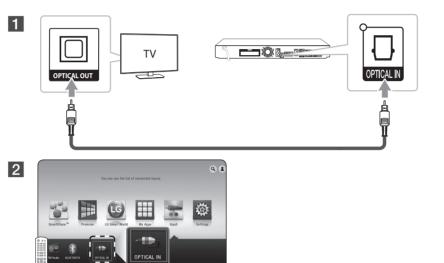

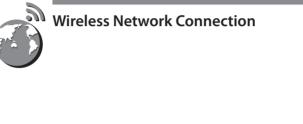

**Wired Network Connection** 

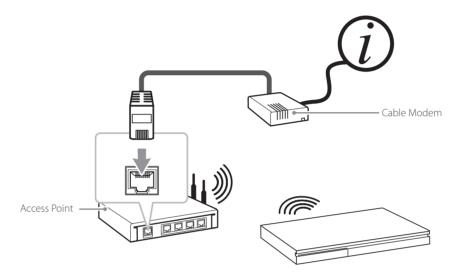

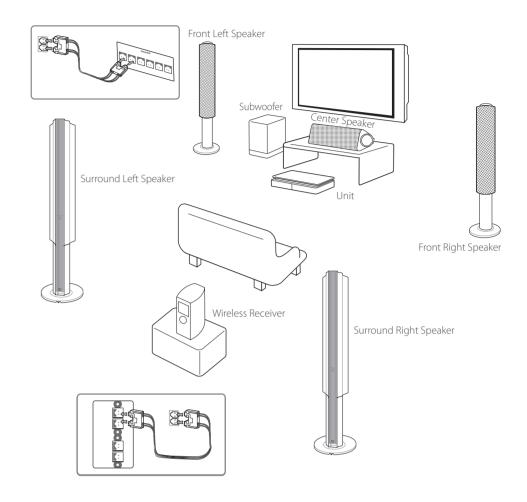



## **Initial Setup**



Follow the directions for the initial setup displayed on the screen.

Start the speaker test.

Stop the speaker test and select [Next].

 
Setup [TV Sound Connecting] and select [Next].


















## Using HOME menu

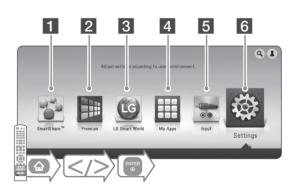


















# Disc, Data Playback

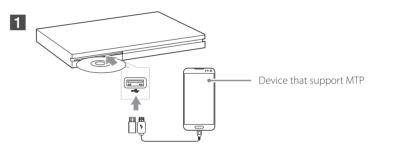

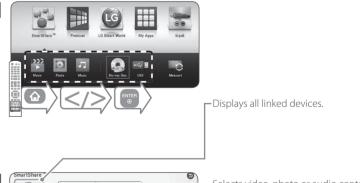

 

For the most Audio CD, BD-ROM and DVD-ROM discs, playback starts automatically.

BH9540TW-FX.BSGPLLK\_SIMPLE.indd 1 14. 1. 22. 🔲 4:17



### **Network Playback**

### SmartShare PC software Installation

1 Install SmartShare PC software.



Run the program, and set the share folder you

## SmartShare Network Playback



Check the network connection and settings.





# Enjoying Miracast



Turn on the device and run its [Miracast] function.




Cryston News <sup>□</sup> // //</>

Depending on your wireless network condition, mirroring may be unstable.

### **Enjoying Web browsing**


1 Check the network connection and settings.

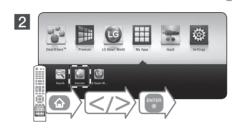


We recommend a minimum connection speed of 4 Mbps and playable file formats on web browsing are ".jpeg", ".png", ".gif", ".wmv", ".asf", ".wma", ".mp3", ".mp4".

# 909

### **Enjoying Private Sound**

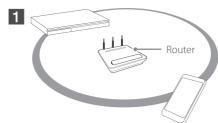

Make sure that mobile device is connected to the same Wi-Fi network as this player.

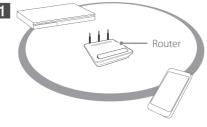



Not all modes support sound privacy and pairing multiple devices is not available.



### Software Update











### **Additional Information**

## **Customer Support**

You can update the Player using the latest software to enhance the products operation and/or add new features. To obtain the latest software for this player (if updates have been made), proceed the software updates as written or visit <a href="http://www.lg.com">http://www.lg.com</a> or contact LG Electronics customer

### Open source software notice

To obtain the corresponding source code under GPL, LGPL and other open source licenses, please visit <a href="http://opensource.lge.com">http://opensource.lge.com</a>. All referred license terms, warranty disclaimers and copyright notices are available to download with the source code.



## Specification

Power requirements	Refer to main label on the rear panel.
Power consumption	Refer to main label on the rear panel.
Dimensions	Approx.
$(W \times H \times D)$	444 mm x 65 mm X 292.5 mm
Net Weight (Approx.)	3.3 kg
Bus Power Supply	DC 5 V === 500 mA (Front) /
(USB)	DC 5 V === 300 mA (Rear)

Design and specifications are subject to change without



# Safety Information





























 


**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This lightning flash with arrowhead symbol within



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the iterature accompanying the product.

NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. **WARNING:** Do not install this equipment in a confined space such as a book case or similar unit.

**CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to. Use of controls, adjustments or the



performance of procedures other than those specified herein may result in hazardous radiation exposure.

**CAUTION** concerning the Power Cord To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

**CAUTION:** The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

