



LG


Life's Good

3D Blu-ray™ / DVD Home Theater System

BH7240BW /
BH7540TW

ENGLISH | SIMPLE MANUAL










An extended Owner's Manual that contains information on the advanced features is located on the CD-ROM provided in an electronic version. To read these files, you will need to use a Personal Computer (PC) equipped with a CD-ROM drive. Some of the content in this manual may differ from your unit.

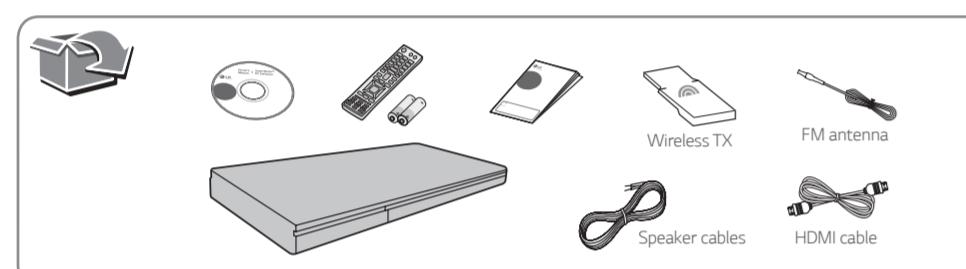


www.lg.com



Life's Good

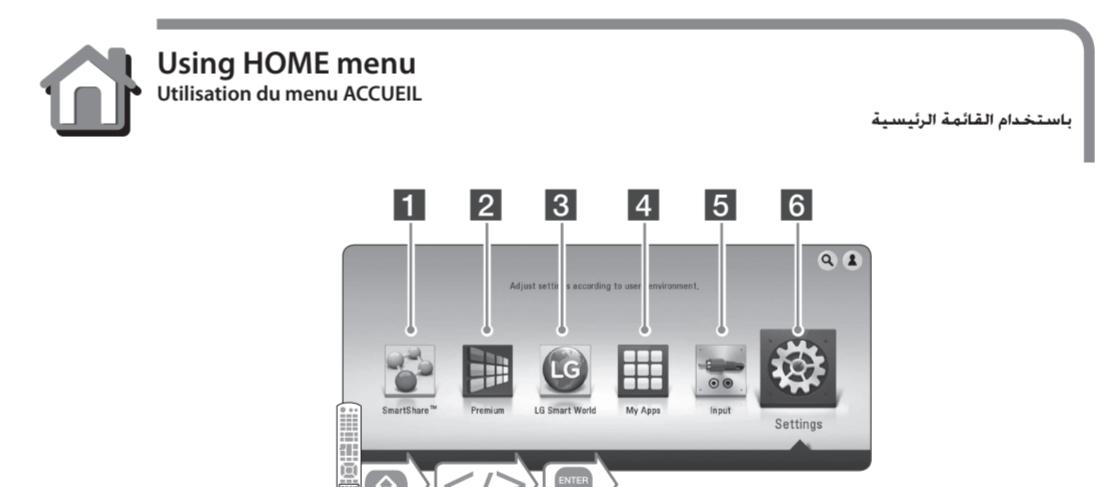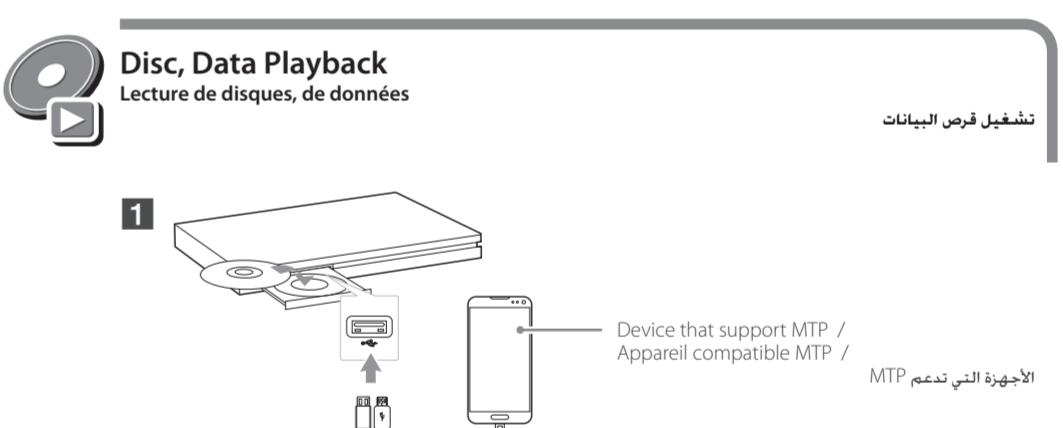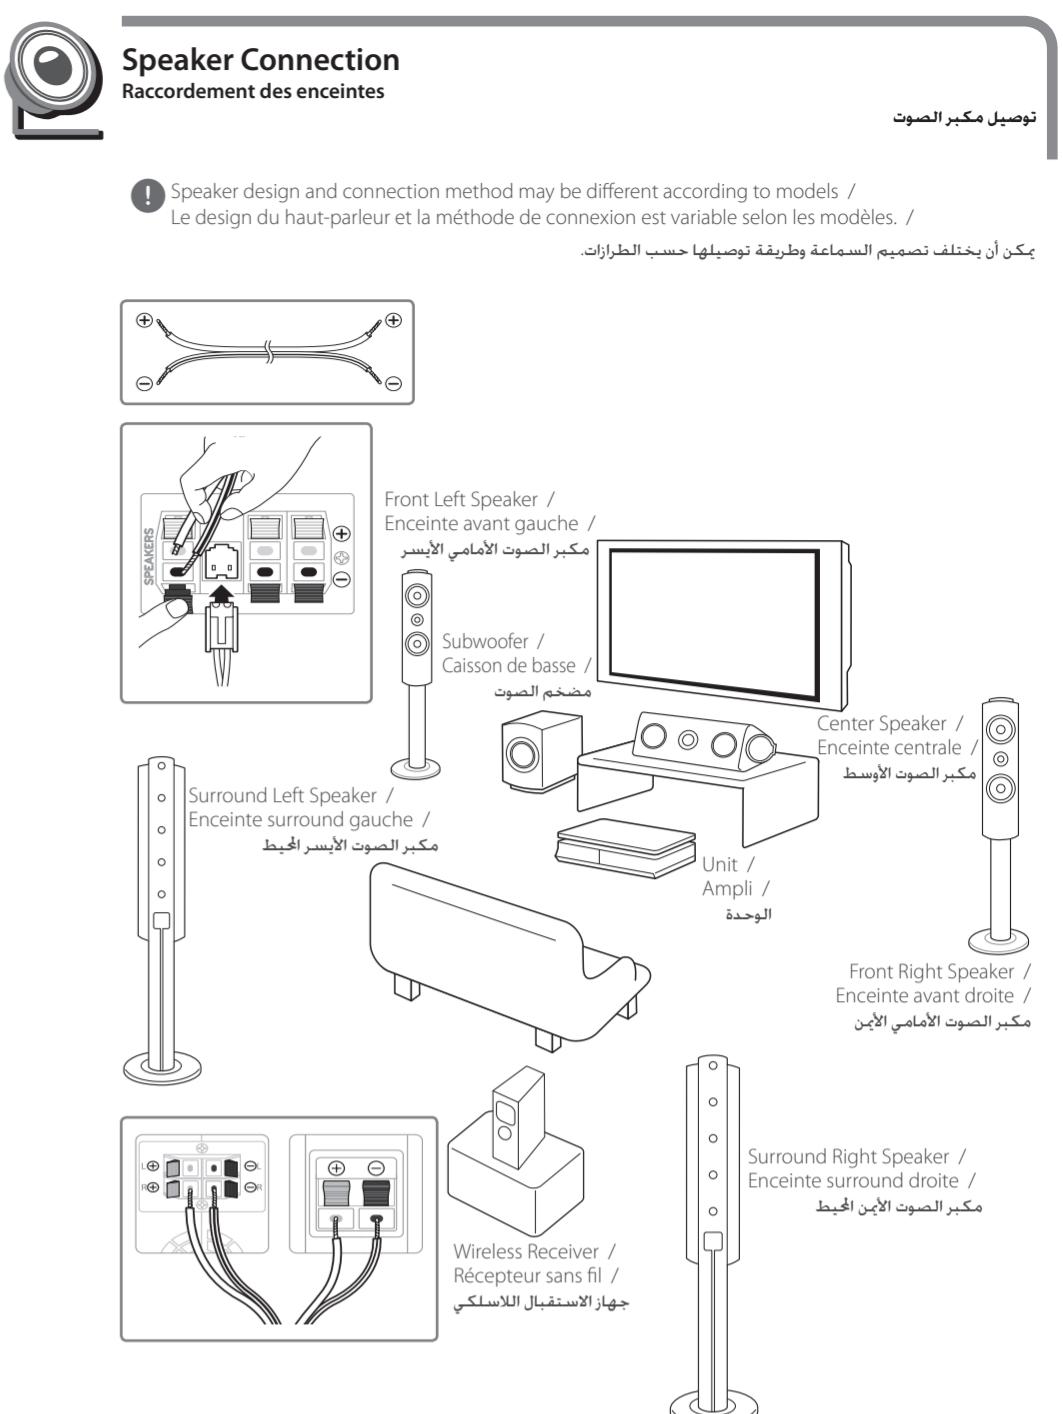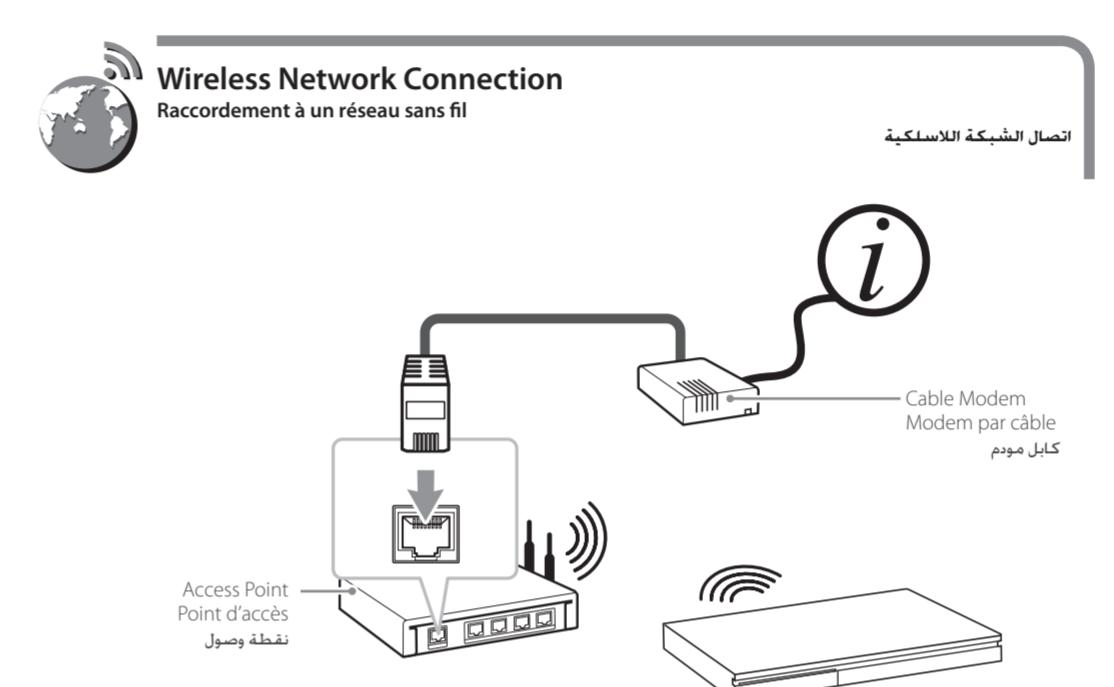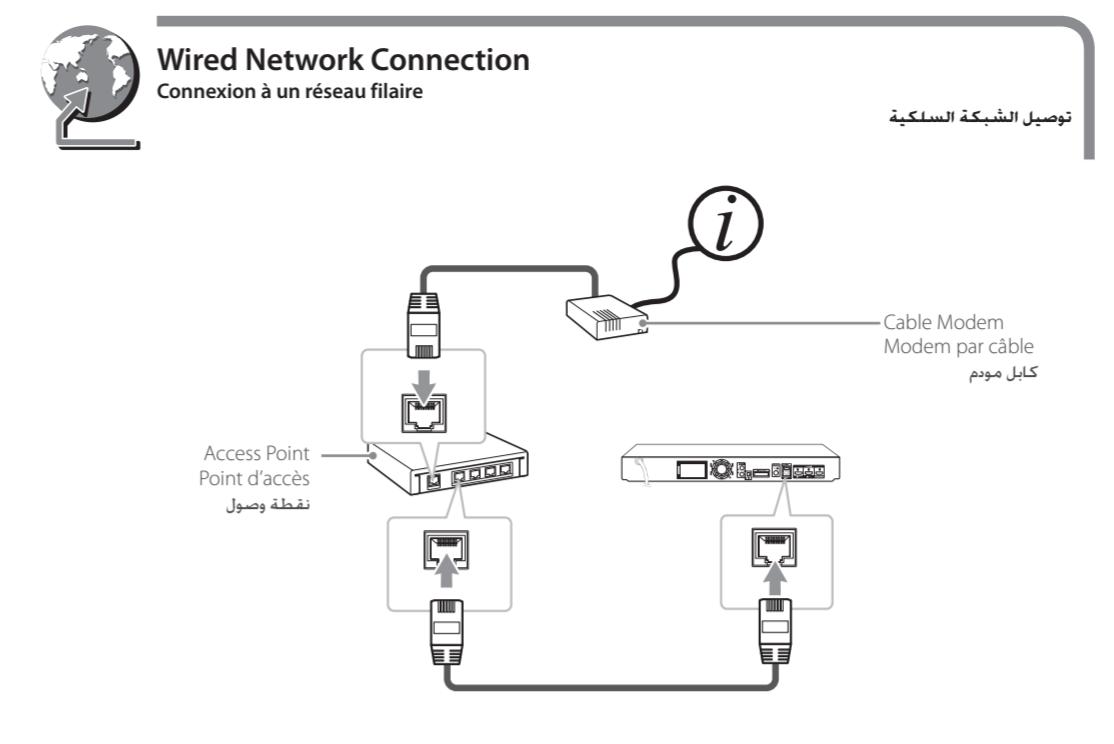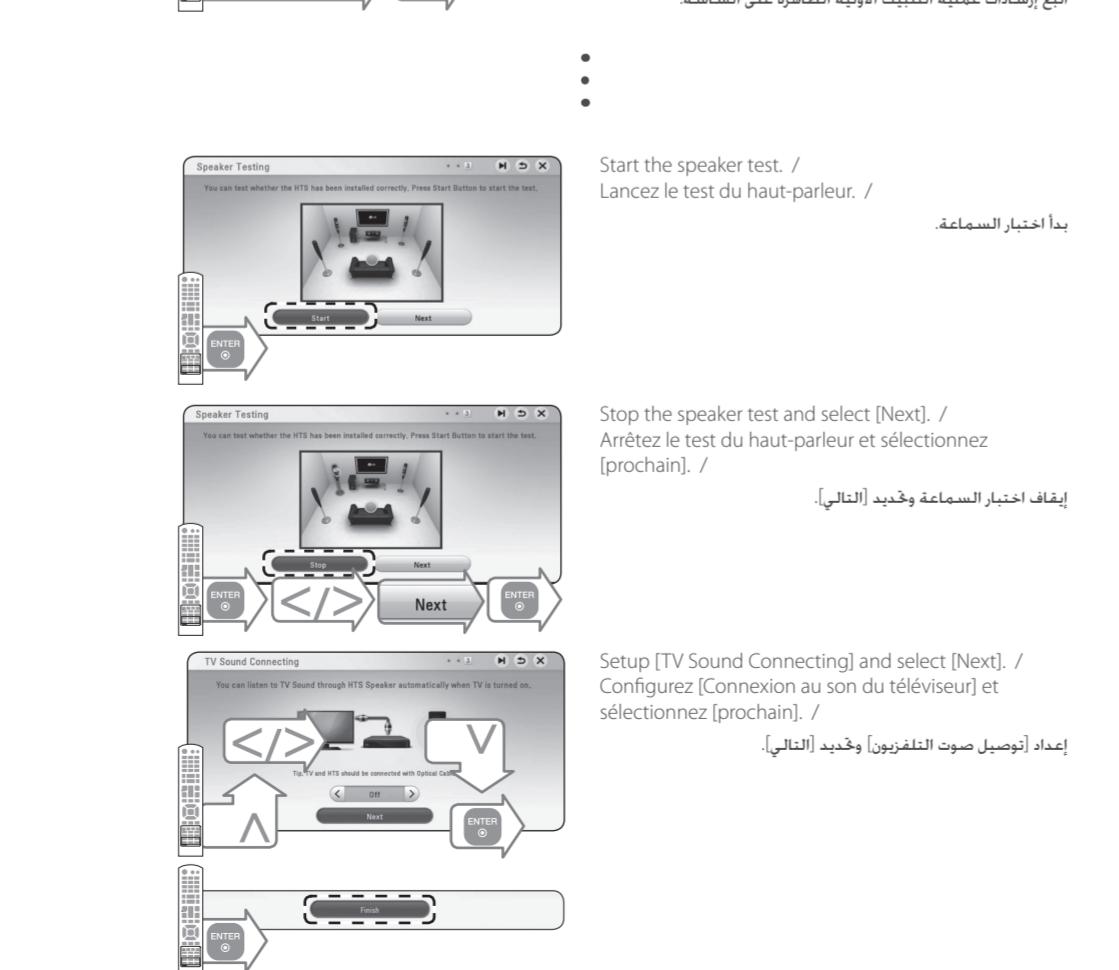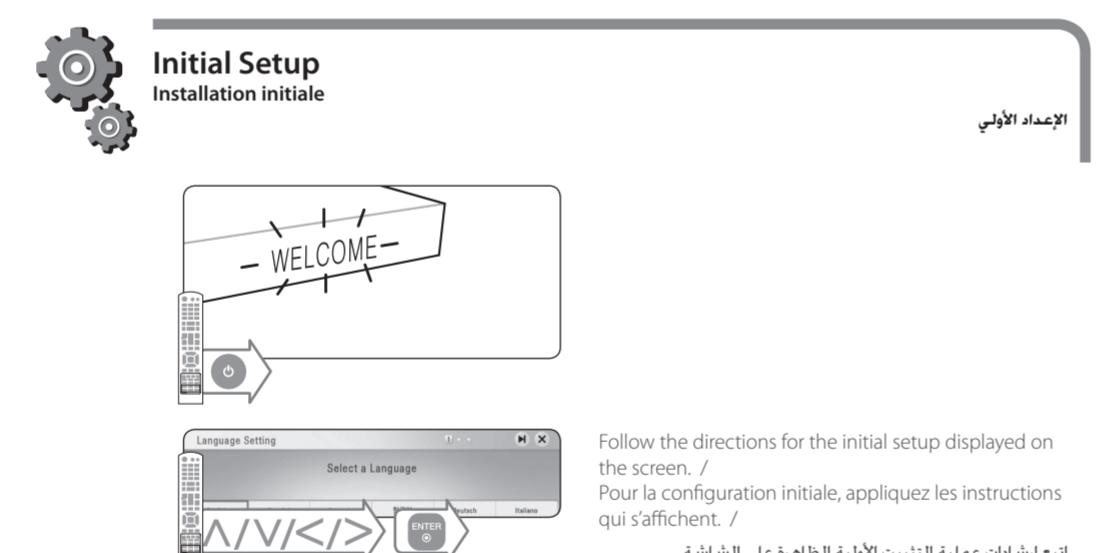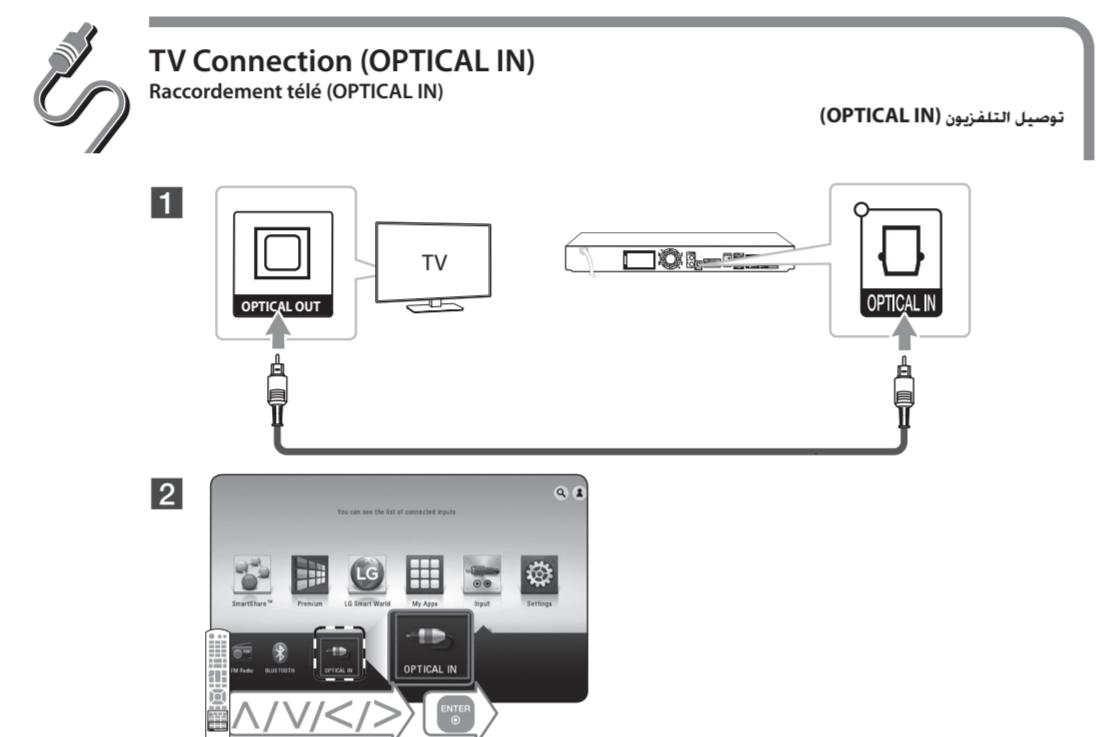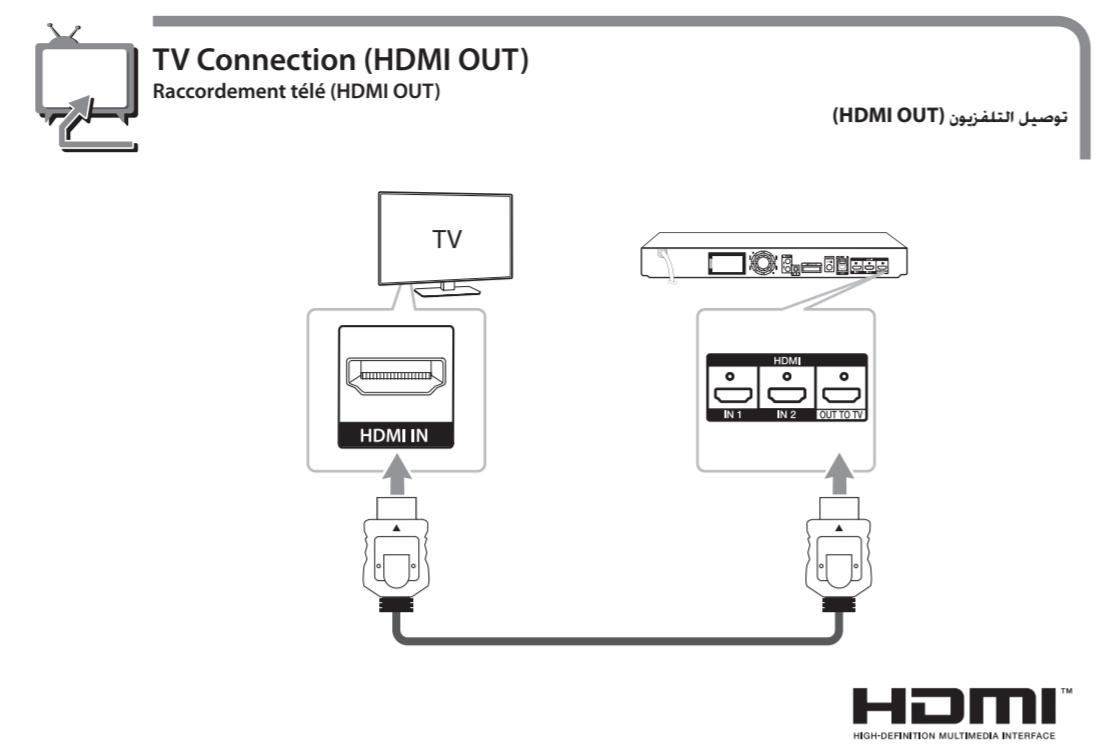

- 1 Displays SmartShare menu. / Affiche le menu de partage intelligent. / ينم عرض قائمة المشاركة الذكية.
- 2 Displays the Premium Home screen. / Permet d'afficher l'écran d'accueil Premium. / ينم عرض شاشة الصفحة الرئيسية للمحتويات المتقدمة.
- 3 Displays LG Apps titles provided to the unit. / Affiche les Apps disponibles pour l'appareil. / ينم عرض عنوان تطبيقات LG المتوفرة للوحدة.
- 4 Displays the [My Apps] screen. / Affiche l'écran [Mes Applications]. / ينم عرض شاشة [تطبيقاتي].
- 5 Changes input mode. / permet de modifier la source d'entrée. / يقوم بتنغير وضع الإدخال.
- 6 Adjusts the system settings. / Donne accès à la configuration du système. / يقوم بضبط إعدادات النظام.

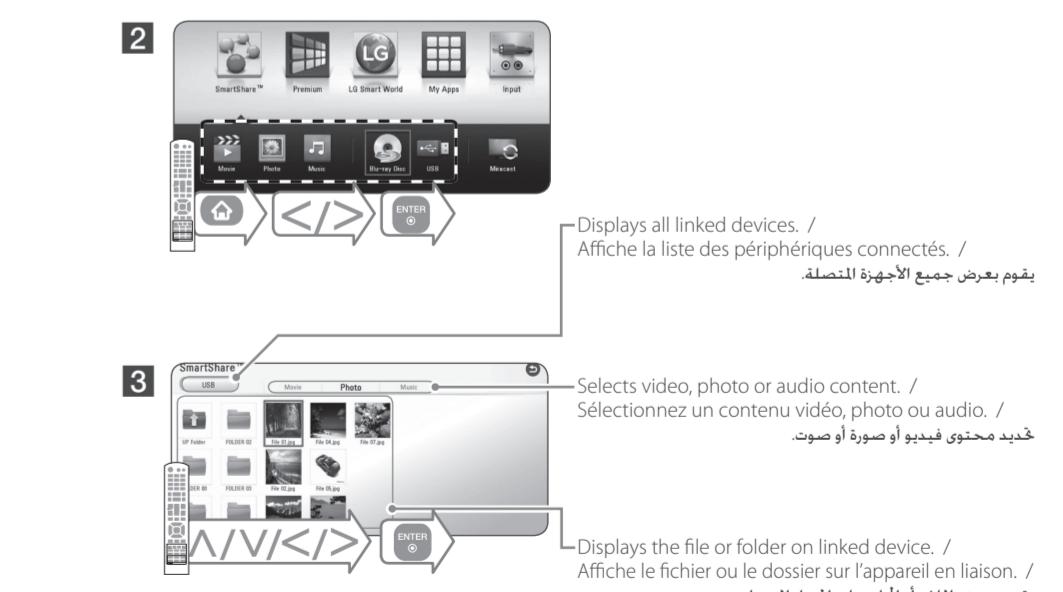

- 1 For the most Audio CD, BD-ROM and DVD-ROM discs, playback starts automatically. / Pour la plupart des CD audio, BD-ROM et DVD-ROM, la lecture démarre automatiquement. / يبدأ تشغيل معظم إسطوانات الصوت المدمجة وأقراص DVD-ROM و BD-ROM فوراً.
- 2 Displays the file or folder on linked device. / Affiche le fichier ou le dossier sur l'appareil en liaison. / ينم عرض الملف أو المجلد على الجهاز المتصلاً.
- 3 Selects video, photo or audio content. / Sélectionnez un contenu vidéo, photo ou audio. / خذ محتوى فيديو أو صورة أو صوت.



Network Playback

Lecteur réseau



SmartShare PC software Installation

Installation de SmartShare PC /

- Install SmartShare PC software. / Installez SmartShare PC. /

SmartShare PC Software

تثبيت برنامج

- Smart Share PC Software

قم بتنزيل

SmartShare Network Playback

Lecture réseau par SmartShare /

Enjoying Miracast

Utilisation de Miracast

- Turn on the device and run its [Miracast] function. / Allumez l'appareil et exécutez sa fonction [Miracast]. / جهاز معتمد من [Miracast]

Run the program, and set the share folder you want. / Exécutez le programme et définissez le dossier partagé de votre choix. /

شغيل البرنامج وضبط مشاركة المجلد الذي تريده

Enjoying Web browsing

Utilisation de la navigation Web

- Check the network connection and settings. / Vérifiez la connexion et les paramètres réseau. /

تحقق من إعدادات واتصال الشبكة

- Check the network connection and settings. / Vérifiez la connexion et les paramètres réseau. /

تحقق من إعدادات واتصال الشبكة

- We recommend a minimum connection speed of 4 Mbps and playable file formats on web browsing are "jpeg", "png", "gif", "wmv", "asf", "wma", "mp3", "mp4". / Nous recommandons un débit de connexion de 4 Mbit/s au minimum et les formats de fichiers lisibles en navigation Web sont : "jpeg", "png", "gif", "wmv", "asf", "wma", "mp3", "mp4". / ننصح أن يكون المد الأدنى لسرعة الاتصال بالإنترنت 4 ميجابايت ثانية وأن تكون صيغ الملفات القابلة للتنزيل على متصفحات الويب هي "jpeg", "png", "gif", "wmv", "asf", "wma", "mp3", "mp4". /

Specification

Spécifications

المواصفة

ENGLISH

Power requirements

Refer to main label on the rear panel.

Power consumption

Refer to main label on the rear panel.

Dimensions (W x H x D)

Approx. 440 mm x 65 mm x 298 mm

Net Weight (Approx.)

3.2 kg

Bus Power Supply (USB)

DC 5 V - 500 mA (Front) /

DC 5 V - 300 mA (Rear)

Design and specifications are subject to change without notice.

FRANÇAIS

Alimentation

Reportez-vous à l'étiquette principale au dos de l'appareil.

Consommation électrique

Reportez-vous à l'étiquette principale au dos de l'appareil.

Dimensions (L x H x P)

Aproximativement 440 mm x 65 mm x 298 mm

Poids net (approx.)

3,2 kg

Bus Power Supply (USB)

DC 5 V - 500 mA (Avant) /

DC 5 V - 300 mA (Arrière)

La conception et les spécifications sont sujettes à modification sans préavis.

arabic

مطالبات الطاقة

يرجى الرجوع إلى الملصق الرئيسي.

استهلاك الطاقة

يرجى الرجوع إلى الملصق الرئيسي.

الابعاد الخارجية

(العرض X العرض X العمق)

الوزن الصافي (تقديرية)

وحدة التغذية بالطاقة (USB)

القابلة (الطاقة)

التوصيات والمواصفات عرضة للتغيير دون إشعار مسبق

Safety Information

Consignes de sécurité

معلومات السلامة

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION concerning the Power Cord

To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Retrait sans danger de la batterie ou des piles de l'appareil:

pour retirer la batterie ou les piles usagées, procédez dans l'ordre inverse de leur insertion. Pour empêcher toute contamination de l'environnement et tout danger pour la santé des êtres humains et des animaux, la batterie ou les piles usagées doivent être mises au rebut dans le conteneur approprié à un point de collecte prévu pour leur recyclage. Ne jetez pas la batterie ou les piles usagées avec les autres déchets. Recyclez toujours les batteries et piles rechargeables usagées. La batterie ne doit pas être exposée à une chaleur excessive, telle que la lumière directe du soleil, les flammes, etc.

ATTENTION

RISQUE D'ÉLECTROCUSSION NE PAS OUVRIR

ATTENTION: AFIN DE RÉDUIRE LE RISQUE D'ÉLECTROCUSSION, NE RETIREZ PAS LE BOÎTIER (NI L'ARRIÈRE). AUCUNE PIÈCE DE CET APPAREIL N'EST SUSCEPTIBLE D'Être RÉPARÉE PAR L'UTILISATEUR. CONFIEZ L'ENTRETIEN DE L'APPAREIL À DES PERSONNES QUALIFIÉES.

This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of a dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION concerning the Power Cord

To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Retrait sans danger de la batterie ou des piles de l'appareil:

pour retirer la batterie ou les piles usagées, procédez dans l'ordre inverse de leur insertion. Pour empêcher toute contamination de l'environnement et tout danger pour la santé des êtres humains et des animaux, la batterie ou les piles usagées doivent être mises au rebut dans le conteneur approprié à un point de collecte prévu pour leur recyclage. Ne jetez pas la batterie ou les piles usagées avec les autres déchets. Recyclez toujours les batteries et piles rechargeables usagées. La batterie ne doit pas être exposée à une chaleur excessive, telle que la lumière directe du soleil, les flammes, etc.

ATTENTION

RISQUE D'ÉLECTROCUSSION NE PAS OUVRIR

ATTENTION: AFIN DE RÉDUIRE LE RISQUE D'ÉLECTROCUSSION, NE RETIREZ PAS LE BOÎTIER (NI L'ARRIÈRE). AUCUNE PIÈCE DE CET APPAREIL N'EST SUSCEPTIBLE D'Être RÉPARÉE PAR L'UTILISATEUR. CONFIEZ L'ENTRETIEN DE L'APPAREIL À DES PERSONNES QUALIFIÉES.

This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of a dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION concerning the Power Cord

To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Retrait sans danger de la batterie ou des piles de l'appareil:

pour retirer la batterie ou les piles usagées, procédez dans l'ordre inverse de leur insertion. Pour empêcher toute contamination de l'environnement et tout danger pour la santé des êtres humains et des animaux, la batterie ou les piles usagées doivent être mises au rebut dans le conteneur approprié à un point de collecte prévu pour leur recyclage. Ne jetez pas la batterie ou les piles usagées avec les autres déchets. Recyclez toujours les batteries et piles rechargeables usagées. La batterie ne doit pas être exposée à une chaleur excessive, telle que la lumière directe du soleil, les flammes, etc.

Enjoying Private Sound

Transformez votre Smartphone en casque sans fil

استمع بخصوص خاص ميز

Make sure that mobile device is connected to the same Wi-Fi network as this player. / Assurez-vous que votre appareil mobile est connecté au même réseau Wi-Fi que ce lecteur. / تأكد من اتصال هاتفيك النقال مع نفس شبكة المتصفح التي متصل بها هذا المشغل.

- Turn on the mobile device LG AV Remote App is Installed and run LG AV Remote App. / Activez l'appareil mobile sur lequel est installée l'application LG AV Remote et exécutez cette application. /

ناك من تثبيت تطبيق على الهاتف النقال تم قم بتثبيت تطبيق LG AV Remote App على الهاتف النقال تم قم بتثبيت تطبيق LG AV Remote App

LG AV Remote App