



# SIMPLE MANUAL

# Wi-Fi SOUND BAR

SC9S



MFL70286295  
2211\_Rev01

www.lg.com

Copyright © 2023-2025 LG Electronics Inc. All Rights Reserved.

## ENGLISH

### Specification

### Power consumption

- Refer to the main label.

## AC adapter

- Model: MS-Z2610R230-065E0-P
- Manufacturer: MOSO POWER SUPPLY TECHNOLOGY CO., LTD.
- Input: 100 - 240 V ~ 50/60 Hz
- Output: 23 V  2.61 A

Dimensions (W x H x D): Approx. 975.0 mm x 63.0 mm x 125.0 mm

Bus Power Supply (USB): 5 V  $\overline{\text{---}}$  500 mA

Amplifier (Total RMS Output power): 400 W RMS

 
## Open Source Software Notice Information

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents, please visit <https://opensource.lge.com>.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to [opensource@lqe.com](mailto:opensource@lqe.com).

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.





## ENGLISH Installing and Using the Product

Please read this manual carefully before operating your set and retain it for future reference.  
To view the instructions of advanced features, visit <http://www.lg.com> or scan QR code and then download Owner's Manual. Some of the content in this manual may differ from your product.



- A Sound bar  
B Remote Control Receiver  
C Status LED (1 2 3)  
D Rear Speakers / Wireless Receiver (Sold separately, SPQ8-S)  
E Wireless Subwoofer - Install it close to the sound bar.  
F External Device - (Blu-ray player, game console, etc.)

○ : On / ● : Off / ◐ : Blink



|                       |                |       |                    |           |                       |         |        |
|-----------------------|----------------|-------|--------------------|-----------|-----------------------|---------|--------|
|                       |                |       |                    |           |                       |         |        |
| Red blinking          | White blinking | White | Blue blinking      | Blue      | White                 | White   | Purple |
| Power on<br>Power off | Wi-Fi ready    | Wi-Fi | Bluetooth<br>ready | Bluetooth | OPTICAL /<br>HDMI ARC | HDMI IN | USB    |

- Connect the sound bar to your TV via an optical cable or an HDMI cable.
- If you are using an external device (ex. Set-top box, Blu-ray player, game console, etc.), connect it to the sound bar or to the TV via an HDMI cable.  
! If necessary, purchase HDMI cables, an optical cable, or a USB extension cable to connect the sound bar.
- If you purchased the rear speakers and wireless receiver separately, connect the rear speakers to the wireless receiver via a speaker cable. When connecting the rear speakers to the wireless receiver, connect the black striped cable to the negative terminal of each speaker and the remaining cable to the positive terminal of each speaker.
- Connect to power in the following order: wireless subwoofer → wireless receiver → sound bar. Then, turn on the sound bar. When the connection is automatically established with the sound bar, the LEDs on the wireless subwoofer and the wireless receiver will light up green.
- Using the product with your TV
  - Press the **Function** (⏏) button repeatedly until LED1 and LED2 light up white. If you are using an external device that is connected to HDMI™ IN on the sound bar, press the **Function** (⏏) button repeatedly until LED1 and LED3 light up white.
  - On your TV's settings, set the output speaker to [HDMI ARC], [Optical], or [External Speaker].
  - You can enjoy the sound by connecting LG WOWCAST (Sold separately, WTP3) to the sound bar wirelessly.
- Connecting the product to your smartphone via Wi-Fi
  - Connect your smartphone to Wi-Fi.
  - Install the **LG Sound Bar app** on Google Play or the App Store.
  - Run the **LG Sound Bar app** and follow the instructions.
  - The product will connect to your smartphone and you can control the product with **LG Sound Bar app**.
- Connecting the product to your smartphone via Bluetooth
  - Tap the **Settings** (⚙) button on your smartphone and select **Bluetooth**. Turn on the **Bluetooth** function. (Off > On)
  - Press the **Bluetooth pair** (🔗) button. After a moment, LED2 blinks blue.
  - Find and tap "LG\_Speaker\_SC9S\_XXXX" or the name you registered on the Google Home app.
  - When the product is connected to your smartphone via **Bluetooth**, all LEDs light up blue.

! If you see a red LED on the wireless subwoofer or on the front of the wireless receiver, it means that the sound bar is not connected to the speakers. If this is the case, connect them in the following order.

- Press the **Power** (⏏) button on the sound bar to turn it off.
  - Press the **Pairing (PAIRING)** button on the back of the disconnected wireless subwoofer or wireless receiver. Check if each LED blinks green.  
- If you still see a red LED on the wireless subwoofer, press and hold the button on the back of the subwoofer again.
  - Press the **Power** (⏏) button on the sound bar to turn it on.
  - When the connection is established, you will see a green LED light on the wireless subwoofer or on the front of the wireless receiver light up green.
- ✱ Keep the sound bar, the subwoofer and wireless receiver away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.
- Some speakers may not make sound depend on the input source. Select BASS BLAST (BASS BLAST+) sound mode to listen through all speakers.

- Design and specifications are subject to change without notice.
- Google Play is a trademark of Google LLC.

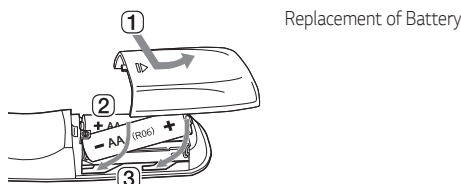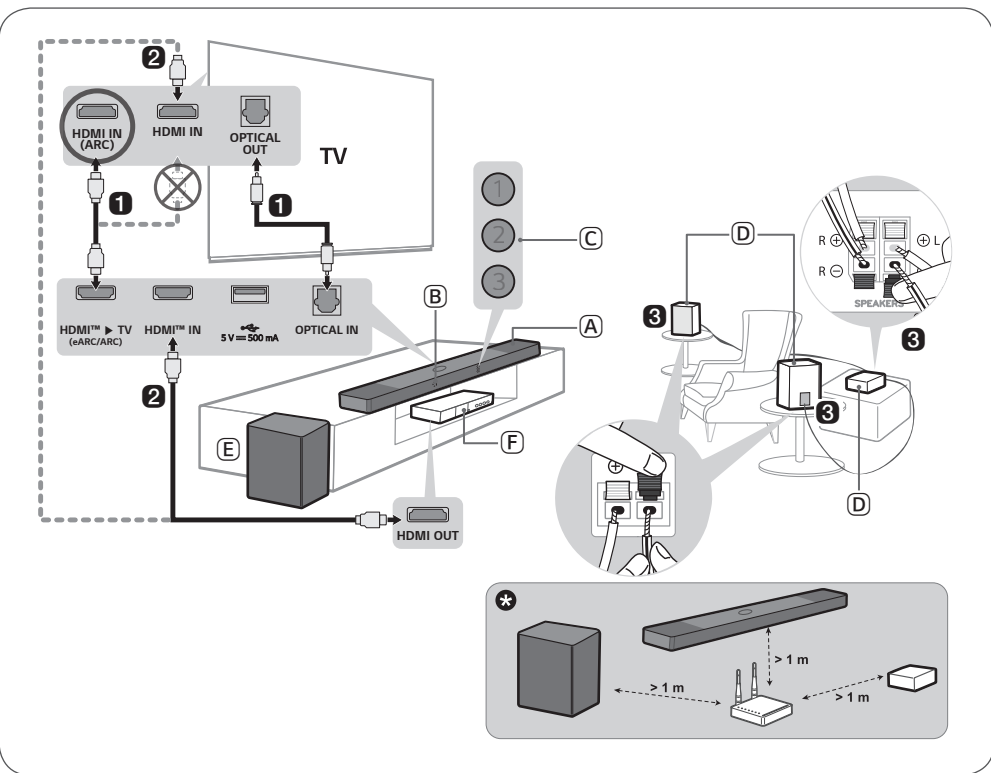

Replacement of Battery

**HDMI™**  
HIGH-DEFINITION MULTIMEDIA INTERFACE