



簡易手冊

無線 Soundbar

Wireless Soundbar

S70TY



COV30939547
2605_Rev01

www.lg.com
版權所有 © 2026 LG Electronics Inc. 保留一切權利。

中文

規格

電源要求

- 請參閱主標籤。

耗電量

- 請參閱主標籤。

尺寸 (闊 x 高 x 深) : 大約 950.0 mm x 63.0 mm x 115.0 mm

匯流排電源供應 (USB): 5 V 500 mA

擴音器 (總 RMS 輸出功率) : 400 W RMS

注意：開放來源程式碼軟件

欲獲得 GPL、LGPL、MPL 及其他有義務公開包含本產品內容原始程式授權的源代碼，及存取所有提及授權條款及版權聲明，請瀏覽 <https://opensource.lge.com>。

LG Electronics 亦可於您寄送電子郵件至 opensource@lge.com 提出請求時，在收取涵蓋該等發佈成本的費用後提供開放原始程式碼。

該產品最後一次出貨的三年內，任何收到此資訊的人可享此優惠。

安全注意事項

本機的插頭握柄是專為本產品所設計,且與附贈的電源線結合為一體,若您因為任何理由而需截短此電源線時

請勿再使用該插頭

應使用全新的插頭以確保連續使用之安全性。請依據1994年之插頭及插座規範的規定,將插頭確實地與電源線結合。

ENGLISH

Specification

Power requirements

- Refer to the main label.

Power consumption

- Refer to the main label.

Dimensions (W x H x D): Approx. 950.0 mm x 63.0 mm x 115.0 mm

Bus Power Supply (USB): 5 V 500 mA

Amplifier (Total RMS Output power): 400 W RMS

Open Source Software Notice Information

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices, please visit <https://opensource.lge.com>.

LG Electronics will also provide open source code to you for a charge covering the cost of performing such distribution upon email request to opensource@lge.com.

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

 
 
 
IMPORTANT SAFETY NOTICE

The cord grip for the plug fitted to this product is built into the existing power cord as supplied. If, for any reason you need to shorten the cord,

DO NOT RE-USE THE PLUG

A new plug must be used to ensure your continued safety by securing the plug to the power cord in accordance with Plug & Socket Regulations 1994.



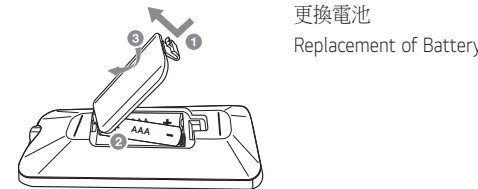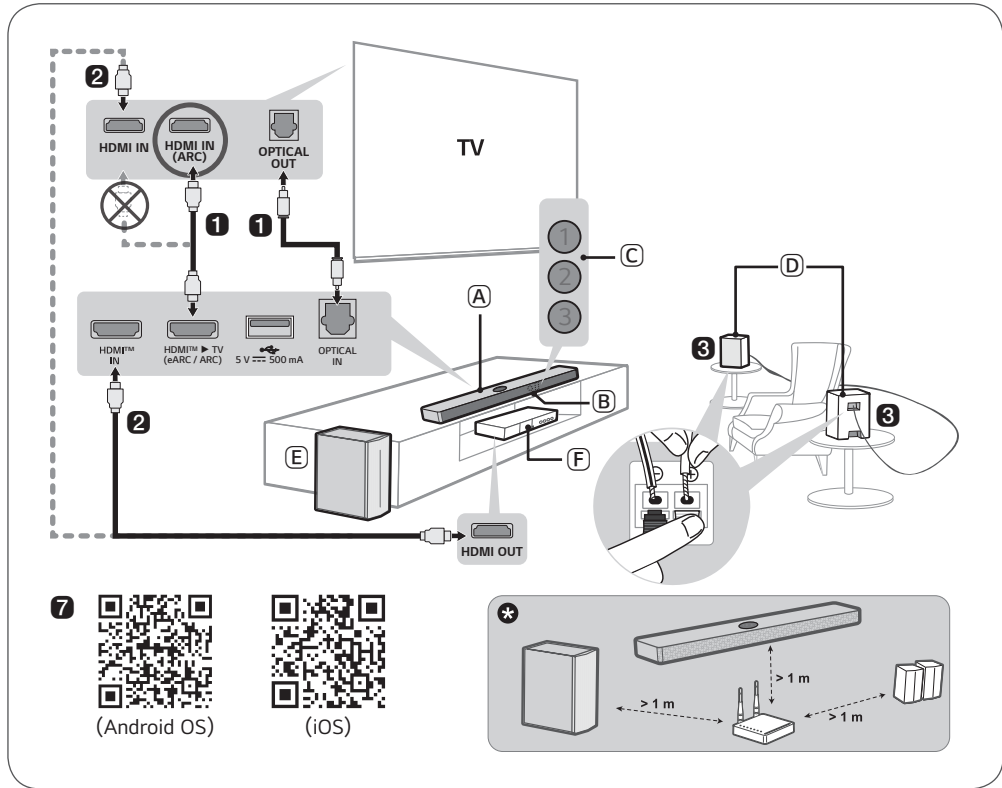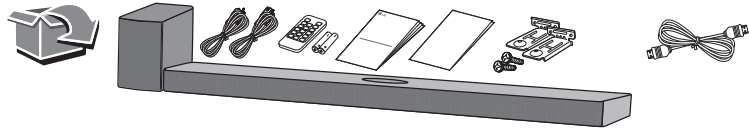

中文 產品安裝及使用

操作設備前請仔細閱讀本手冊，並保留以備日後參考。
要檢視有關進階功能的指示，請造訪 <http://www.lg.com> 或掃描二維碼下載使用說明書。部份使用說明書的內容有可能與您的產品不同。



- A Soundbar
B 遙控接收器
C LED 指示燈狀態 (①②③)
D 後置揚聲器 (單獨發售，SPT8-S)
E 無線重低音揚聲器 — 貼近 Soundbar 安裝。
F 外置設備 — (藍光播放機、遊戲機等等)

○：亮起 / ●：熄滅 / ◐：閃爍					
紅色閃爍	白色	白色閃爍	白色	金黃色	紫色
開啟 開機	OPTICAL / HDMI ARC	藍牙 就緒	藍牙	HDMI IN	USB

- 請用光纖線或 HDMI 線將 Soundbar 連接至您的電視機。
- 如果您使用的是外部裝置（如機頂盒、藍光播放器、遊戲機等），透過 HDMI 連接線將其連接到 Soundbar 或電視。
① 如有必要，請購買 HDMI 線纜、光纖或 USB 延長線來連接 Soundbar。
- 如果您單獨購買了後置揚聲器，請使用揚聲器電纜連接後置揚聲器。連接後置揚聲器時，請將黑色條紋電纜連接到每個揚聲器的負極端子，將剩餘的電纜連接到每個揚聲器的正極端子。
- 依照以下順序連接電源：無線重低音揚聲器 → 後置揚聲器 → Soundbar。然後開啟 Soundbar。與 Soundbar 自動建立連接後，無線重低音揚聲器和後置揚聲器上的 LED 將點亮綠色。
- 與您的電視機配合使用產品
① 重複按下功能 按钮，直至 LED1 指示燈亮起白色。如果您使用外部裝置連接到 Soundbar 上的 HDMI™ IN，請重複按下功能 按钮，直到 LED1 指示燈亮起金黃色。
② 在電視的設定上，將輸出揚聲器設定為 [HDMI ARC]、[光纖] 或 [外部揚聲器]。
- 透過 藍牙 將設備連接至您的智能電話
① 輕觸您的智能電話內的設定 按钮，選擇藍牙。開啟藍牙功能。（ 關 > 開）
② 按下藍牙 配對 按钮。片刻之後，LED1 和 LED2 指示燈閃爍白色。
③ 於您的智能電話上找到並輕觸產品名稱。產品會顯示為「LG S70TY(XX)」。
④ 當產品透過 Bluetooth 連接到智能手機時，LED1 指示燈和 LED2 指示燈亮起白色。
- 連接到 LG ThinQ 應用程式
① 從您智能電話的 Google Play 或 App Store 應用程式中，找到並安裝 LG ThinQ 應用程式。
② 您可透過選擇 [設定] 內的 [幫助] 以獲得更多資訊。

- 如果無線重低音揚聲器或後置揚聲器上的 LED 指示燈亮紅色，表示 Soundbar 未連接到揚聲器。若出現該情況，請依照以下順序進行連接。
① 按下 Soundbar 的電源 按钮以關閉它。
② 按無線重低音揚聲器或後置揚聲器背面的 PAIRING 按鈕。查看 LED 指示燈是否閃爍綠色。
- 如果無線重低音揚聲器上仍出現紅色 LED 指示燈，請再次長按重低音揚聲器背面的按鈕。
③ 按下 Soundbar 的電源 按钮以開啟它。
④ 建立連線後，您會看見無線重低音揚聲器或後置揚聲器上的 LED 指示燈亮起綠色。
- 請將 Soundbar、重低音揚聲器及後置揚聲器放置於距離其他設備（如無線路由器、微波爐等等）超過 1 米的位置，避免無線電干擾。
 - 某些揚聲器可能因輸入來源而沒有發聲。選擇 BASS BLAST (BASS BLAST+) 聲音模式以聆聽所有揚聲器的聲音。

- 實際特徵、功能及其他產品規格或會不同，且可能有變動，恕不另行通知。
- Google Play 是 Google LLC 的商標。

ENGLISH Installing and Using the Product

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> or scan QR code and then download Owner's Manual. Some of the content in this manual may differ from your product.



- A Soundbar
B Remote Control Receiver
C Status LED (①②③)
D Rear Speakers (Sold separately, SPT8-S)
E Wireless Subwoofer - Install it close to the soundbar.
F External Device - (Blu-ray player, game console, etc.)

○：On / ●：Off / ◐：Blink					
Red blinking	White	White blinking	White	Golden yellow	Purple
Power on Power off	OPTICAL / HDMI ARC	Bluetooth ready	Bluetooth	HDMI IN	USB

- Connect the soundbar to your TV via an optical cable or an HDMI cable.
- If you are using an external device (ex. Set-top box, Blu-ray player, game console, etc.), connect it to the soundbar or to the TV via an HDMI cable.
① If necessary, purchase HDMI cables, an optical cable, or a USB extension cable to connect the soundbar.
- If you purchased the rear speakers separately, connect the rear speakers via a speaker cable. When connecting the rear speakers, connect the black striped cable to the negative terminal of each speaker and the remaining cable to the positive terminal of each speaker.
- Connect to power in the following order: wireless subwoofer → rear speakers → soundbar. Then, turn on the soundbar. When the connection is automatically established with the soundbar, the LEDs on the wireless subwoofer and the rear speaker will light up green.
- Using the product with your TV
① Press the Function button repeatedly until LED1 lights up white. If you are using an external device that is connected to HDMI™ IN on the soundbar, press the Function button repeatedly until LED1 lights up golden yellow.
② On your TV's settings, set the output speaker to [HDMI ARC], [Optical], or [External Speaker].
- Connecting the product to your smartphone via Bluetooth
① Tap the Settings button on your smartphone and select Bluetooth. Turn on the Bluetooth function. (Off > On)
② Press the Bluetooth pair button. After a moment, LED1 and LED2 blink white.
③ Find and tap the product on your smartphone. The product appears as "LG S70TY(XX)".
④ When the product is connected to your smartphone via Bluetooth, LED1 and LED2 light up white.
- Connecting to the LG ThinQ app
① Find and install the LG ThinQ app on Google Play or App Store from your smartphone.
② You can get more information regarding its use by selecting [Help] in [Setting].

- If you see a red LED on the wireless subwoofer or rear speaker, it means that the soundbar is not connected to the speakers. If this is the case, connect them in the following order.
① Press the Power button on the soundbar to turn it off.
② Press the PAIRING button on the back of the wireless subwoofer or rear speaker. Check if each LED blinks green.
- If you still see a red LED on the wireless subwoofer, press and hold the button on the back of the subwoofer again.
③ Press the Power button on the soundbar to turn it on.
④ When the connection is established, you will see a green LED light on the wireless subwoofer or rear speaker light up.
- Keep the soundbar, the subwoofer and rear speakers away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.
 - Some speakers may not make sound depend on the input source. Select BASS BLAST (BASS BLAST+) sound mode to listen through all speakers.

- Actual features, functionality, and other product specifications may differ and are subject to change without notice.
- Google Play is a trademark of Google LLC.