



## SIMPLE MANUAL

# Mini Hi-Fi Audio

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL

ON7



MFL71690610

2004\_Rev02

 
ENGLISH	DEUTSCH	FRANÇAIS	NEDERLANDS	ITALIANO	ESPAÑOL	ΕΛΛΗΝΙΚΑ	PORTUGUÊS	MAGYAR
ČESKY	SLOVENČINA	POLSKI	ROMÂNĂ	LATVIEŠU	HRVATSKI	SRPSKI	БЪЛГАРСКИ	МАКЕДОНСКИ
SLOVENŠČINA	SHqip	BOSANSKI	SVENSKA	DANSK	NORSK	SUOMI		

[www.lg.com](http://www.lg.com)

Copyright © 2020 LG Electronics Inc. All Rights Reserved.



## Top panel

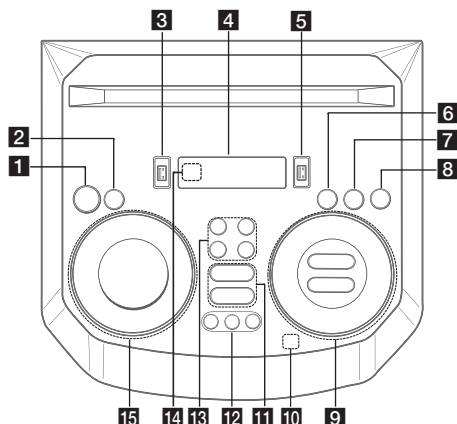

- 1** (Standby)  
Turns the power on or off.
- 2** **USB REC / DEMO**  
- Records to USB.  
- Stops recording.  
- In power off status, if you press **USB REC / DEMO**, show demo mode.
- 3** **USB 1 Port**  
You can play sound files by connecting the USB device.
- 4** Display window
- 5** **USB 2 Port**  
You can play sound files by connecting the USB device.
- 6** **F (Function)**  
Selects the function and input source.
- 7** **LIGHTING**  
Selects the lighting mode.
- 8** **TWIN**  
Connects two units for TWIN mode in WIRELESS PARTY LINK.
- 9** (Skip/Search)  
- Skips backward or forward.  
- Searches for a section within a track/file.  
- Selects the radio stations.  
- Scans DAB+ stations by pressing and holding.  
  
**⏮** (Play/Pause)  
- Starts or pauses playback.  
- Selects stereo/mono.  
- **Bluetooth** connection lock (BT LOCK): Select the **Bluetooth** function by pressing **F** repeatedly. And long press **⏮** to limit **Bluetooth** connection to only BT and LG TV.

### (Stop) / RDS

- Stops playback or cancels DELETE function.
- Radio Data System

### **VOL** (Volume) **-/+**

Adjusts speaker volume.

### **MIC** (Microphone) / **GUITAR** **-/+**

Adjusts Microphone volume or Guitar volume.

### **10** (Auto Music Play)

Plays the audio currently playing by tagging the mobile (with "LG XB00M" App) to this unit. (Android Only)

### **11** **VOICE CANCELLER**

You can reduce the vocal tones during music playback from various input sources.

### (Open/Close)

Opens and closes the disc tray.

### **12** **CLUB, DRUM, USER** (DJ PAD)

Selects CLUB, DRUM or USER sound effect to mix.

(If you want to use USER, you have to register a source with "LG XB00M" app. (Android Only))

### **1, 2, 3** (DJ PAD)

Press a desired sound pad.

### **13** **MIC** (Microphone) **ECHO**

Selects ECHO mode.

### **VOCAL EFFECTS**

Selects various vocal effects mode.

### **KEY CHANGER** (**b/#**)

Changes the key to suit your vocal range.

### **14** Remote sensor

### **15** **SPECIAL EQ / BASS BLAST** (or **BASS BLAST+**)

- Chooses special equalizer.
- Press and hold to select **BASS** (or **BASS+**) effect directly.

### **SEARCH**

Moves to folder or file in selection mode.

### **OK**

Selects a folder when searching a file.

 
### **USER EQ**

Selects the equalizer created by your own.


### **Multi jog**

- Searches a folder or a file.
- Turns clockwise or counterclockwise to control the **USER EQ** level.
- Chooses special equalizer.

## Front panel / Rear panel

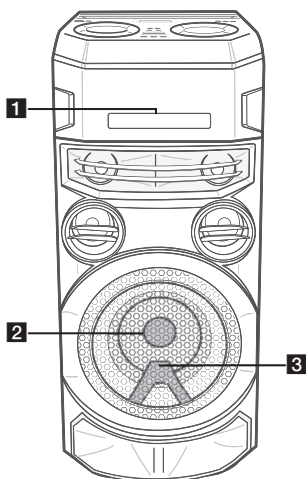

 - 1** Disc tray
- 2** Lighting
- 3** Remote sensor

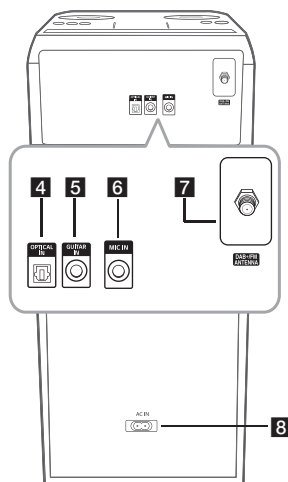

- 4** **OPTICAL IN:** Connect an optical device.
- 5** **GUITAR IN:** Connect a guitar.
- 6** **MIC (Microphone) IN:** Connect a microphone.
- 7** **DAB+/FM ANTENNA**
- 8** **AC IN** socket



Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.

### Controller App



Android



iOS

Download the **LG XBOOM** App to your device.


### LG Sound Sync



For more information, download the online owner's manual. <http://www.lg.com>

## Additional Information

### Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
	Networked standby : 0.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 330.0 mm x 785.0 mm x 344.0 mm
Bus Power Supply (USB)	5 V  500 mA

Design and specifications are subject to change without notice.

### Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

 
### Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

### How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

### Replacement of battery

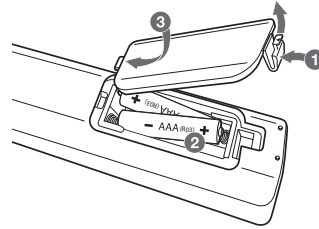

### Declaration of Conformity



Hereby, LG Electronics declares that the radio equipment type MINI HI-FI AUDIO is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.lg.com/global/support/cedoc/cedoc#>

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

Frequency range	Output power (Max.)
2402 to 2480 MHz	10 dBm