

Additional Information

Specifications

 
Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 451.5 mm x 317.0 mm x 305.5 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	220 W RMS

Design and specifications are subject to change without notice.

Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

Replacement of battery

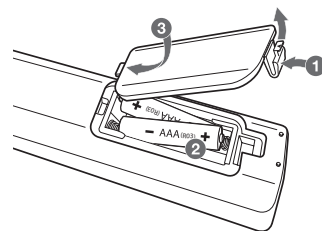

SIMPLE MANUAL

Mini Hi-Fi Audio

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL

OL45




MFL71059911
1902_Rev01

www.lg.com

Copyright © 2019 LG Electronics Inc. All Rights Reserved.



 
Front panel

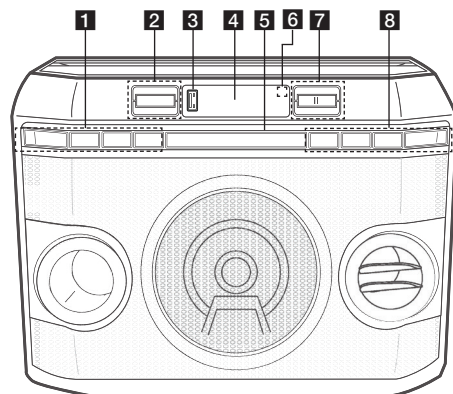

- 1** (Standby)
Turns the power on or off.
F (Function)
- Selects the function and input source.
- Press and hold to adjust delay time when using PARTY LINK with AUX.
VOL (Volume) **-/+**
Adjusts speaker volume.
- 2** **MIC** (Microphone) **ECHO / DEMO**
- Selects ECHO mode.
- In power off status, if you press **MIC ECHO / DEMO**, show demo mode.
VOCAL EFFECTS
Selects various vocal effects mode.
LIGHTING
Selects the lighting mode.
- 3** USB Port
You can play sound files by connecting the USB device.
- 4** Display window
- 5** Disc tray

- 6** (Remote sensor)
- 7** (Play/Pause)
Starts or pauses playback.
 (Skip/Search)
- Skips backward or forward.
- Searches for a section within a track/file.
- Selects the radio stations.
 (Stop)
Stops playback or cancels DELETE function.
- 8** (Open/Close)
Opens and closes the disc tray.
MIC VOL (Microphone volume) **-/+**
Adjust microphone volume.
TWIN
Connects two speakers for TWIN mode in WIRELESS PARTY LINK.

 Rear panel

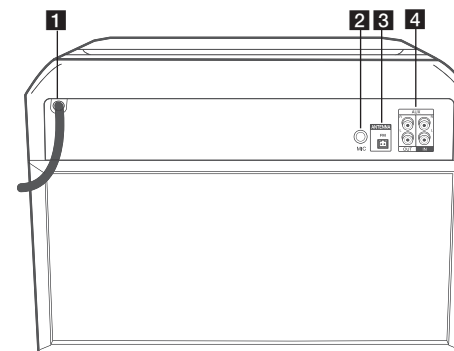

- 1** Power cord
- 2** **MIC** (Microphone) jack
- 3** **ANTENNA** (FM)
- 4** **AUX IN** (L/R): Connect an auxiliary device.
AUX OUT (L/R): Connect to an input of external device.

Controller App



Download the **LG XBOOM** App to your device.
(Android only)

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>