



OWNER'S MANUAL

AIR CONDITIONER



Read this owner's manual thoroughly before operating the appliance and keep it handy for reference at all times.

ENGLISH

TABLE OF CONTENTS

This manual may contain images or content that may be different from the model you purchased.
This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS

- READ ALL INSTRUCTIONS BEFORE USE 4**
 - Safety Messages.....4
 - Notes for Flammable Refrigerant5
- WARNING INSTRUCTIONS 5**
 - Technical Safety.....5
 - Installation6
 - Operation8
 - Wireless Remote Control.....9
 - Maintenance9
 - Refrigerant9
- CAUTION INSTRUCTIONS 11**
 - Installation11
 - Operation12
 - Maintenance12

OPERATION

- Before Use 14**
 - Notes for Operation.....14
 - Suggestions for Energy Saving.....14
- Product Overview..... 15**
 - Round Cassette.....15
 - Display16
 - Auto Restart Function.....16

MAINTENANCE

- Cleaning..... 17**
 - Cleaning Interval17
 - Cleaning the Air Filter18
 - Cleaning the PM1.0 Sensor21
- Tips for Maintenance 21**
 - Before Long Periods of Disuse21
 - After Long Periods of Disuse22

TROUBLESHOOTING

- Before Calling for Service 23**
 - Operation23
 - Performance26
- Calling for Service 26**
 - Situations in which Calling for Service is Necessary26

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance.

The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

Safety Messages



This symbol is displayed to indicate matters and operations that can cause risk.
Read the part with this symbol carefully and follow the instructions in order to avoid risk.



WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.



CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

Notes for Flammable Refrigerant

The following symbols are displayed on units.



This symbol indicates that this appliance uses a flammable refrigerant. If the refrigerant is leaked and exposed to an external ignition source, there is a risk of fire.



This symbol indicates that the Owner's Manual should be read carefully.



This symbol indicates that service personnel should be handling this equipment with reference to the Installation Manual.



This symbol indicates that information is available in the Owner's Manual or Installation Manual.

WARNING INSTRUCTIONS

WARNING

- To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

Technical Safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person

responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- Installation or repairs made by unauthorized persons can pose hazards to you and others.
- The information contained in the manual is intended for use by a qualified service technician who is familiar with the safety procedures and equipped with the proper tools and test instruments.
- Failure to read and follow all instructions in this manual can result in equipment malfunction, property damage, personal injury and/or death.
- The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. Consult a service agent or a similarly qualified person before disposing of them.
- When the power cord is to be replaced, the replacement work shall be performed by authorized personnel using only genuine replacement parts.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agents or a similarly qualified person in order to avoid a hazard.
- The appliance shall be installed in accordance with national wiring regulations.
- This appliance must be properly grounded.
- Do not cut or remove the grounding prong from the power plug.
- Attaching the earth wire to the power outlet cover screw does not ground the appliance unless the cover screw is metal, uninsulated, and the power outlet is grounded through house wiring.
- If you have any doubt whether the air conditioner is properly grounded, have the power outlet and circuit checked by a qualified electrician.

Installation

- Contact an authorized service centre when installing or relocating the air conditioner.

- Contact the dealer, seller, qualified electrician or authorized service centre for cleaning or maintenance the air conditioner.
- Do not install, remove, or re-install the unit by yourself (customer). Installation or repairs done by unauthorized persons can pose hazards to you and others.
- For electrical work, contact the dealer, seller, a qualified electrician or an authorized service centre.
- Do not attempt to do electrical work or grounding work unless you are licensed to do so. Consult with the dealer for electrical work and grounding work.
- Do not install the product on a defective installation stand.
- Be sure the installation area does not deteriorate with age.
- Be sure to only use accessories made by LG which are specifically designed for use with the equipment and have them installed by a professional.
- Never install the outdoor unit on a moving base or a place from where it can fall down.
- Do not install the unit in potentially explosive atmospheres.
- Do not install the air conditioner in a place where flammable liquids or gases such as gasoline, propane or paint thinner are stored.
- Install the panel and the cover of the control box safely.
- Install a dedicated electric outlet and earth leakage breaker before using the appliance.
- Use a standard circuit breaker and fuse that conform to the rating of the air conditioner.
- Do not use a multiple socket, extension power cable or adapter with this appliance.
- The indoor/outdoor wiring connections must be secured tightly, and the cable should be routed properly so that there is no force pulling the cable from the connection terminals. Improper or loose connections can generate heat or cause a fire.
- Do not connect the ground wire to a gas pipe, a lightning rod, or a telephone ground wire.

- Use non-flammable gas (nitrogen) to check for leaks and to purge air; using compressed air or flammable gas may cause fire or explosion.

Operation

- Do not modify or extend the power cable. Scratches or peeling insulation on the power cables may result in fire or electric shock, and the cables should be replaced.
- Make sure that the power cable is neither dirty, loose, nor broken.
- Do not place any objects on the power cable.
- Take care to ensure that the power cable could not be pulled out or damaged during operation.
- Never touch, operate, or repair the air conditioner with wet hands.
- Do not insert hands or other objects through the air inlet or outlet while the air conditioner is operating.
- Make sure that nobody, especially children, climbs on or hits the outdoor unit.
- Be sure to use only those parts listed in the service parts list. Never attempt to modify the equipment.
- Do not touch the refrigerant pipe, water pipe or any internal parts while the unit is operating or immediately after operation.
- Do not leave flammable substances such as gasoline, benzene, or thinner near the air conditioner.
- Do not use the air conditioner for an extended period of time in a small place without proper ventilation.
- Be sure to ventilate sufficiently when the air conditioner and a heating appliance such as a heater are used simultaneously.
 - There is the possibility of oxygen deficiency.
- Do not block the inlet or outlet airflow.
- Cut off the power supply if there is any noise, smell, or smoke coming from the air conditioner.
- Contact an authorized service centre if the air conditioner is submerged by flood waters.

- In the event of a gas leak (such as Freon, propane gas, or LP gas), ventilate sufficiently before using the air conditioner again.
- Stop operation and close the window during a storm or hurricane. If possible, remove the product from the window before the hurricane arrives.

Wireless Remote Control

- Never mix different types of batteries, or old and new batteries in the remote control.
- Do not recharge or disassemble the batteries.
- Dispose of the batteries in a place where there is no danger of fire.
- Stop using the remote control if there is a fluid leak in the battery. If your clothes or skin is exposed to the leaking battery fluid, wash off with clean water.
- If the leaking battery fluid has been swallowed, rinse the inside of the mouth thoroughly and consult a doctor.
- Never let the indoor unit or the remote control get wet.

Maintenance

- Before cleaning or performing maintenance, disconnect the power supply and wait until the fan stops.
 - The fan rotates at a very high speed during operation.
 - There is a possibility of injury if the unit's power is accidentally triggered on while you are cleaning the inner parts of the unit.
- Appliance shall be disconnected from its power source during service and replacing parts.

Refrigerant

General

- Follow the standards of the corresponding region or country for handling the refrigerant and the air conditioner and for disassembling the air conditioner.

- Use only the refrigerant specified on the air conditioner label.
- Do not input air or gas into the system except the specified refrigerant.
- Do not touch the leaking refrigerant during installation or repair.
- If the refrigerant gas leaks during the installation, ventilate the area immediately.
- Be sure to check for refrigerant leaks after installing or repairing the product.
- In the case of refrigerant leakage, consult the dealer. When the air conditioner is to be installed in a small room, it is necessary to take proper measures so that the amount of any leaked refrigerant does not exceed the limiting concentration even when it leaks. If the refrigerant leaks exceeding the level of limiting concentration, an oxygen deficiency accident may happen.

R32 Only



- The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.
- Ducts connected to an appliance shall not contain an ignition source.
- Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorises their competence to handle refrigerants safely in accordance with an industry recognised assessment specification.
- Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.
- Keep any required ventilation openings clear of obstruction.

- The appliance shall be stored in a room without continuously operating open flames (for example an operating gas appliance) and ignition sources (for example an operating electric heater).
- The appliance shall be stored so as to prevent mechanical damage from occurring.

CAUTION INSTRUCTIONS

CAUTION

- To reduce the risk of minor injury to persons, malfunction, or damage to the product or property when using this product, follow basic precautions, including the following:

Installation

- Use a forklift or 2 or more people to transport the air conditioner.
- Do not install the air conditioner in an area where it is directly exposed to sea wind (salt spray).
- Install the drain hose properly for the smooth drainage of water condensation.
- Install the air conditioner in a place where the noise from the outdoor unit or the exhaust fumes will not inconvenience the neighbours.
- Safely dispose of packing materials such as screws, nails, plastic bags or batteries using proper packaging after installation or repair.
- Exercise caution when unpacking or installing the air conditioner.
- Be especially careful of the case edges and the fins on the condenser and evaporator.
- To avoid vibration or water leakage, keep the product level even when installing it.
- When installing the unit, use the installation kit provided with the product.
- The edges of heat exchanger fins are sharp enough to cut. To avoid injury, wear gloves or cover the fins while working around them.

Operation

- Do not drink the water drained from the air conditioner.
- Do not place objects in direct proximity to the outdoor unit and do not let leaves and other debris accumulate around the unit. Leaves are a hotbed for small animals which can enter the unit. Once inside the unit, such animals can cause malfunctions, smoke or fire if they come into contact with electrical parts.
- Do not let the air conditioner run for a long time when humidity is very high or when a door or a window has been left open.
- Do not expose people, animals, or plants to the cold or hot wind from the air conditioner for extended periods of time.
- Do not use the product for special purposes, such as preserving foods, works of art, etc. The air conditioner is designed for consumer purposes, and is not a precision refrigeration system. There is risk of damage or loss of property.
- Do not turn on the breaker or power when the front panel, cabinet, top cover, or control box cover are removed or opened.
- Do not open the front grille of the product during operation. Do not touch the electrostatic filter, if the unit is so equipped.
- Take care to prevent water from entering the product.
- Make sure that there are no obstacles close to the outdoor unit. The presence of obstacles close to the outdoor unit may reduce the performance of the outdoor unit or increase its operating sound.
- Do not turn off the power immediately after stopping operation. Always wait for at least five minutes before turning off the power.

Maintenance

- Use a sturdy stool or ladder when cleaning, maintaining, or repairing the air conditioner at a height.
- Do not plug or unplug the power supply plug to turn the unit on or off.
- Never use strong cleaning agents or solvents or spray water when cleaning the air conditioner. Use a soft cloth.

- Never touch the metal parts of the air conditioner when removing the air filter.
- Tear apart and throw away plastic packaging bags so that children will not play with them.
- When the product will not be used for a long time, disconnect the power supply plug or turn off the breaker.
- Do not tilt the unit when removing or uninstalling it. The condensed water inside can spill.
- Check the foundation for damage on a regular basis, especially if the product has been in use for a long time.
- Always insert the filter securely. Clean the filter every two weeks or more often if necessary. A dirty filter reduces the efficiency of the air conditioner and could cause product malfunction or damage.

OPERATION

Before Use

Notes for Operation


- Adjust the direction of the airflow vertically to circulate indoor air.
- Speed up the fan to cool or warm indoor air quickly, within a short period of time.
- Turn off the appliance and periodically open windows for ventilation. The indoor air quality may deteriorate if the appliance is used for long periods.
- Clean the air filter once every 2 weeks. Dust and impurities collected in the air filter may block the airflow or reduce the appliance performance.

Suggestions for Energy Saving

- Do not over-cool the space. This may be harmful to your health and may consume more electricity.
- Block sunlight with blinds or curtains while you are operating the appliance.
- Keep doors or windows closed tightly while you are operating the appliance.

Product Overview

Round Cassette

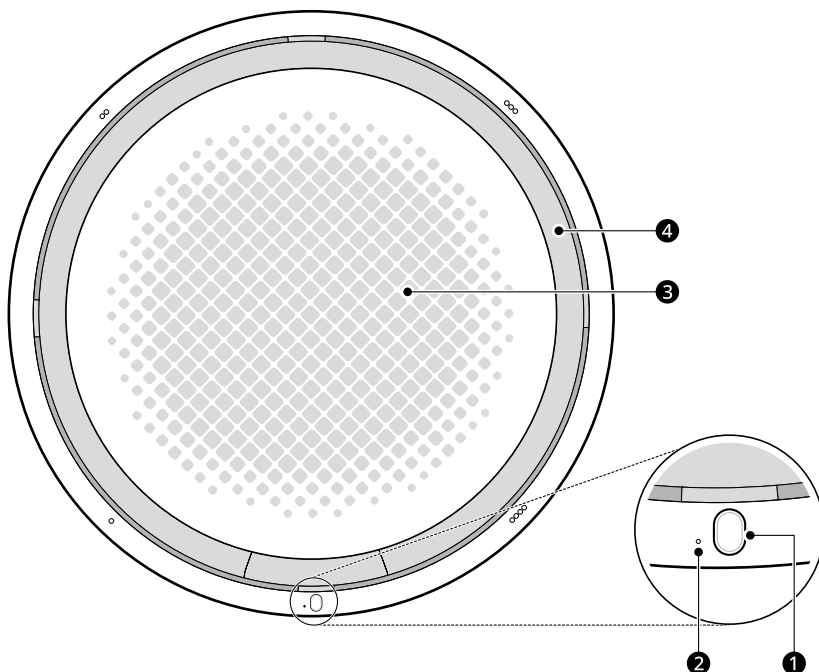

❶ Operating Status Lamp and Remote Control Receiver

Displays the operating status and contains the receiver for the wireless remote.

❷ Forced Operation Button

Operates the product when the remote control can't be used.


❸ Air Intake/Air Filter

- Air Intake: Takes in air from the room.
- Air Filter: Reduces dust in the air.

❹ Air Outlet

Circulates air back into the room at the desired temperature.

Display

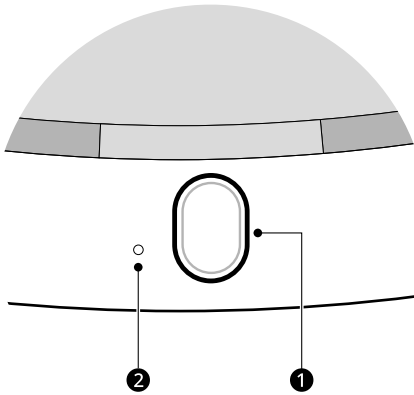

1 Operating Status Lamp

| Color | Description |
|-----------------|--|
| Green | 1) Cooling or Heating mode 2) Hot start or defrost mode before starting heating mode |
| Yellowish Green | 1) Time to clean the filter in cooling or heating mode*1 2) when reservations sets are set. |
| Orange | Time to clean filter when the product is not operating. |

*1 The Clean Filter indicator lamp does not light up starting from the corresponding product manufacturing number (After Oct. 2021).

2 Forced Operation Button


Operates the appliance when the remote control can't be used.

- Press the 2 button for about 2 seconds.

Auto Restart Function

When the appliance is turned on again after a power failure, it restores the previous operation settings and run in the same.


- This function is useful in the case of power failure.
- This function is enabled by the factory default settings.
- If you want to set or disable the auto restart function, press and hold the Forced Operation Button 2 for 15 seconds.

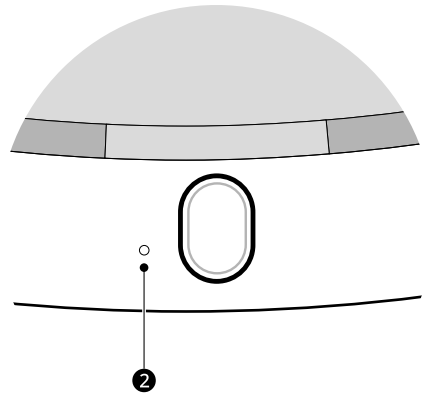

MAINTENANCE

Cleaning

Cleaning Interval

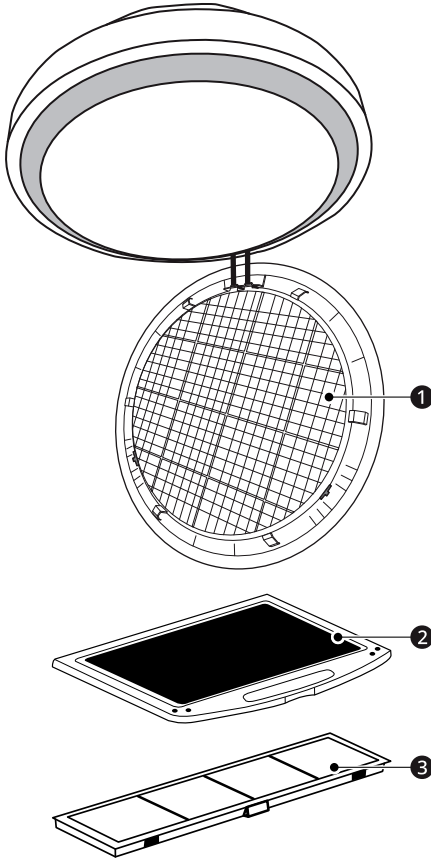

*1 This filter is provided only when the air purifying front panel is installed.

NOTE

- Never use water that is hotter than 40 °C when you clean the filters. Doing so may cause deformation or discolouration.
- Never use volatile substances when you clean the filters. Doing so may damage the surface of the appliance.
- Cleaning interval is set period assuming that 8 hours of daily use.
- If the filter is clogged with dust, the cooling/ heating efficiency will drop.
 - 6 % of the electricity will be wasted.

| Filter Type | Water Washing | Interval |
|--------------------------|---------------|----------|
| ① Air Filter | O | 2 Weeks |
| ② PM1.0 Filter*1 | O | 6 Months |
| ③ Deodorization Filter*1 | X | 6 Months |

Cleaning the Air Filter

⚠ WARNING


- Wear gloves during the work.
- Before cleaning or performing maintenance, disconnect the power supply and wait until the fan stops.

⚠ CAUTION


- When you remove the air filter, do not touch the metal parts of the indoor unit. Doing so may cause an injury.
- Do not bend the air filter, as it may break.
- Assemble the air filter properly to prevent dust and other substances from entering the product.

Removing the Filter


- 1** Push the front grille with both hands and rotate it counter clockwise.

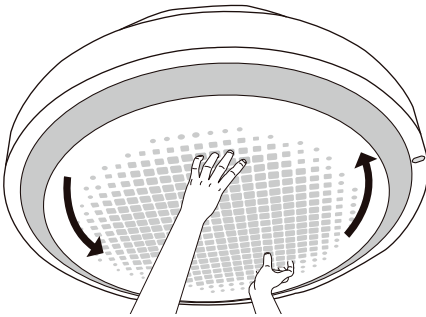


- 2** Press the clips on both sides of the front grille. And then, pull the air filter to the direction of arrow.

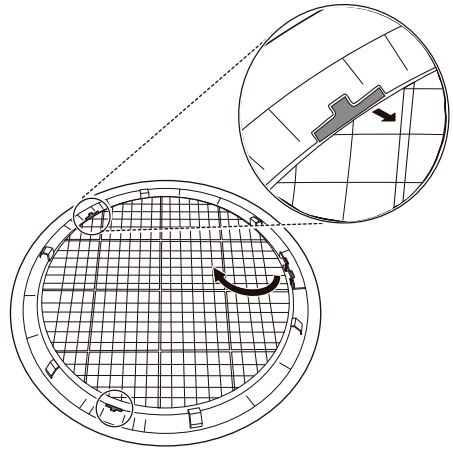

- 3** Press the fixing handle and pull down the upper side of PM1.0 filter. And then, remove the PM1.0 filter.

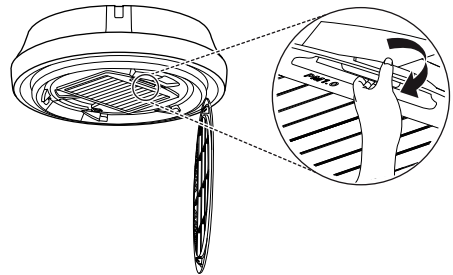


- 4 Remove the Deodorization Filter ① by pressing it up.

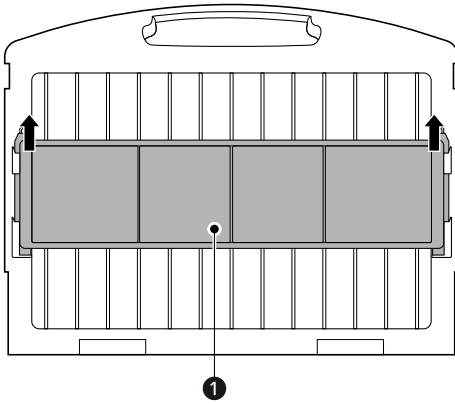


Cleaning the Air Filter

- 1 Clean the air filter with a vacuum cleaner or wash it with lukewarm water and a mild detergent.

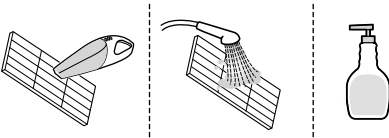


- 2 Dry the filter in the shade.

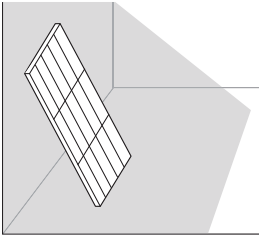


Mounting the Filter

- 1 Insert the Deodorization Filter ① into the PM1.0 Filter by pressing it down.

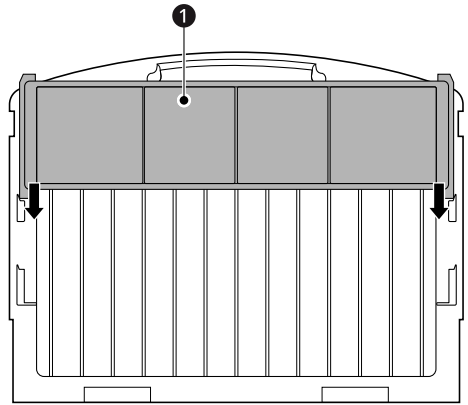


- 2 Mount PM1.0 Filter on the hooks.

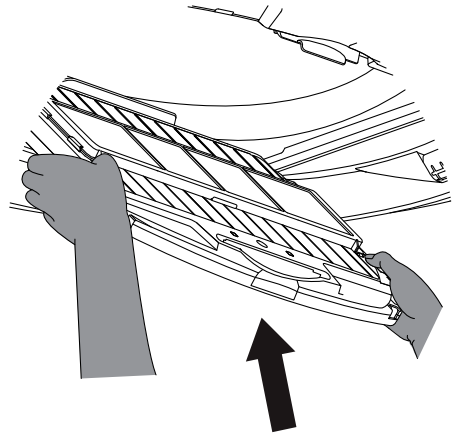


- 3 Insert the hooks on the upper side of the air filter into the holes. And then, insert the clips

20 MAINTENANCE

into the hooking holes on the bottom of front grille.

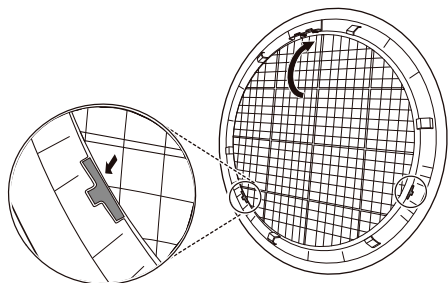

- 4** After close up the front grille, fix it to the appliance by rotating the front grille clockwise.
- If the WHISEN logo and LED lamp is positioned in a line, the front grille is completely combined.

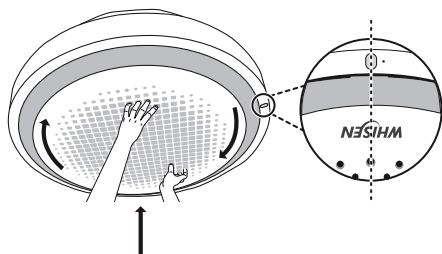

Cleaning the PM1.0 Sensor


NOTE

- This process is applicable only when the air purifying front panel is installed.
 - PM1.0 Sensor is only included with air purifying front panel.
- It is recommended to clean the PM1.0 sensor every 6 months.(assuming 8 hours of daily use)
 - Cleaning interval is set period assuming that 8 hours of daily use.

⚠ WARNING


- Turn off the power to the appliance before work.
- Be careful not to drop the product when removing the PM1.0 Sensor corner cover.
- Be careful of falling accidents when cleaning the PM1.0 sensor.

- 1 After opening the PM1.0 sensor cover ①, remove the rubber cover ②.

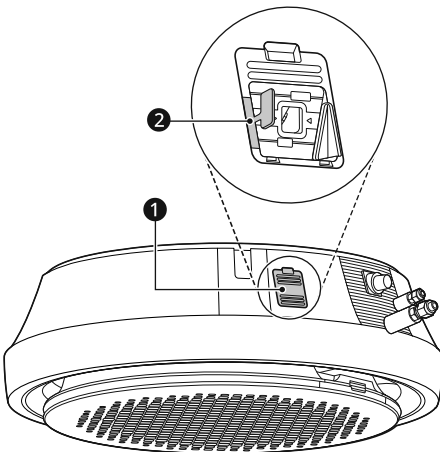

- 2 Wipe off any dust adhering to the lens using a cotton swab slightly moistened with water.

Then wipe again with a dry cotton swab to remove moisture.

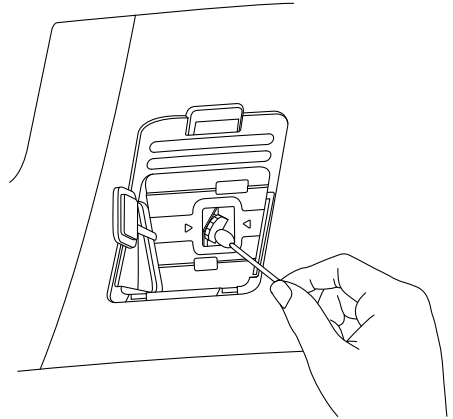

- 3 After inserting the rubber cover ②, assemble the PM1.0 sensor cover ①.

Tips for Maintenance

Before Long Periods of Disuse

- 1 Operate the air conditioner in the **Fan mode** for 2 to 3 hours.
 - This will dry the internal mechanisms.
- 2 Turn off the appliance.
- 3 Turn off the breaker.

NOTE

- In case of using wireless remote controller, remove the batteries from the wireless remote controller.

After Long Periods of Disuse

- 1** Clean the air filter and install it in the indoor unit.
- 2** Check that the air inlet and outlet of the indoor/outdoor unit are not blocked.
- 3** Check that the ground wire is connected correctly.
 - The ground wire may be connected to the side of the indoor unit.

TROUBLESHOOTING

Before Calling for Service

Please check the following before you contact the service centre. If the problem persists, contact your local service centre.

NOTE

- Some functions may not be supported, depending on the model.

Operation

| Symptoms | Possible Cause & Solution |
|--|---|
| The appliance does not work normally. | Burning smell and strange sounds are coming from the appliance. <ul style="list-style-type: none"> • Turn off the appliance, switch off or disconnect the power supply, and contact a service centre. |
| | Water leaks from the indoor unit even when the humidity level is low. <ul style="list-style-type: none"> • Turn off the appliance, switch off or disconnect the power supply, and contact a service centre. |
| | The power cable is damaged or it is generating excessive heat. <ul style="list-style-type: none"> • Turn off the appliance, switch off or disconnect the power supply, and contact a service centre. |
| | A switch, a circuit breaker (safety, ground) or a fuse is not operating properly. Has the fuse blown or has the circuit breaker been tripped? <ul style="list-style-type: none"> • Turn off the appliance, switch off or disconnect the power supply, and contact a service centre. |
| | The appliance generates an error code from its self-diagnosis. <ul style="list-style-type: none"> • Turn off the appliance, switch off or disconnect the power supply, and contact a service centre. |
| The fan speed cannot be adjusted. | The Jet mode or Auto Operation mode is selected. <ul style="list-style-type: none"> • In some operating modes, you cannot adjust the fan speed. Select an operating mode in which you can adjust the fan speed. |
| | The airflow generated by the air conditioner may be automatically adjusted during operation. <ul style="list-style-type: none"> • When the air conditioner reaches the set temperature, it reduces the airflow rate to avoid generating cool airflow when heating, or to minimize energy consumption and indoor humidity change when cooling. |
| The temperature cannot be adjusted. | The Fan mode or Jet mode is selected. <ul style="list-style-type: none"> • In some operating modes, you cannot adjust the temperature. Select an operating mode in which you can adjust the temperature. |

| Symptoms | Possible Cause & Solution |
|--|---|
| The appliance stops during operation. | The appliance is suddenly turned off. <ul style="list-style-type: none"> The Off Timer function may have timed out, which turns the appliance off. Check the timer settings. |
| | Have you made a mistake in timer operation? <ul style="list-style-type: none"> Set the timer correctly. |
| | A power failure has occurred during operation. <ul style="list-style-type: none"> Wait for the power to come back on. If you have the Auto Restart function enabled, your appliance will resume its last operation several minutes after power is restored. |
| The appliance does not work. | A fuse blew or the power supply is blocked. <ul style="list-style-type: none"> Replace the fuse or check if the circuit breaker has tripped. |
| | The appliance is unplugged. <ul style="list-style-type: none"> Check whether the power cord is plugged into the outlet or the power isolators are switched on. |
| | A power failure has occurred. <ul style="list-style-type: none"> Turn off the appliance when a power failure occurs. When the power is restored, wait 3 minutes, and then turn on the appliance. |
| | The voltage is too high or too low. <ul style="list-style-type: none"> Check if the circuit breaker has tripped. |
| | The appliance was turned off automatically at a preset time. <ul style="list-style-type: none"> Turn the appliance on. |
| | The battery orientation in the wireless remote control is incorrect. <ul style="list-style-type: none"> Make sure that the batteries are inserted correctly in your wireless remote control. If the batteries are placed correctly, but the appliance still does not operate, replace the batteries and try again. |
| | Are the indoor unit's air inlet or outlet vents obstructed? <ul style="list-style-type: none"> Remove the obstacles. |
| The appliance does not emit cool air. | Air is not circulating properly. <ul style="list-style-type: none"> Make sure that there are no curtains, blinds, or pieces of furniture blocking the front of the appliance. |
| | The air filter is dirty. <ul style="list-style-type: none"> Clean the air filter once every 2 weeks. See "Cleaning the Air Filter" for more information. |

| Symptoms | Possible Cause & Solution |
|---|---|
| <p>The appliance does not emit cool air.</p> | <p>The room temperature is too high.</p> <ul style="list-style-type: none"> In summer, cooling the indoor air fully may take some time. In this case, select the Jet mode to cool the indoor air quickly. |
| | <p>The room may have been very hot when the room air conditioner was first turned on.</p> <ul style="list-style-type: none"> Allow time for it to cool down. |
| | <p>Cold air is escaping from the room.</p> <ul style="list-style-type: none"> Make sure that no cold air is escaping through the ventilation points in the room. |
| | <p>The desired temperature is higher than the current temperature.</p> <ul style="list-style-type: none"> Set the desired temperature to a level lower than the current temperature. |
| | <p>There is a heating source nearby.</p> <ul style="list-style-type: none"> Avoid using heat generators like electric ovens or gas burners while the air conditioner is in operation. |
| | <p>Fan mode is selected.</p> <ul style="list-style-type: none"> During Fan mode, air blows from the appliance without cooling or heating the indoor air. Switch the operating mode to a cooling operation. |
| | <p>Outside temperature is too high.</p> <ul style="list-style-type: none"> The cooling effect may not be sufficient. |
| <p>The appliance does not emit warm air.</p> | <p>When the Heating mode starts, the vane is almost closed, and no air comes out, even though the outdoor unit is operating.</p> <ul style="list-style-type: none"> This is normal. Please wait until the appliance has generated enough warm air to blow through the indoor unit. |
| | <p>The outdoor unit is in Defrosting mode.</p> <ul style="list-style-type: none"> In Heating mode, ice and frost is built up on the coils when the outside temperature falls. The Defrosting mode reduces a layer of frost on the coil, and it should finish in approximately 15 minutes. |
| | <p>Outside temperature is too low.</p> <ul style="list-style-type: none"> The heating effect may not be sufficient. |
| <p>The air conditioner changes generated airflow during operation.</p> | <p>When the appliance reaches the desired temperature, the airflow rate reduces in order to avoid generating cool airflow during heating, or to minimize energy consumption and indoor humidity change during cooling.</p> <ul style="list-style-type: none"> This symptom is normal. |
| <p>It seems that condensation is leaking from the air conditioner.</p> | <p>Condensation occurs when the airflow from the air conditioner cools the warm room air.</p> <ul style="list-style-type: none"> This symptom is normal. |

Performance

Calling for Service

Situations in which Calling for Service is Necessary

If the appliance is in one of the following situations, please call the service.

- Anything abnormal, such as a burning smell, loud noises, etc., occur;
 - Turn off the appliance and circuit breaker.
 - Never try to repair or restart the appliance yourself.
- Main power cord is too hot or damaged.
- Error code is generated by self diagnosis.
- Water leaks from the appliance even if the humidity is low.
- Any switch, circuit breaker(safety, earth) or fuse fails to work properly.

NOTE

- The user is responsible for routine checks and cleaning to avoid poor appliance performance.
 - In cases involving unusual or special situations and circumstances servicing must be carried out only by trained service personnel.
-



LG Electronics Inc. Single Point of Contact (EU/UK) :
LG Electronics European Shared Service Center B.V.
Krijgsman 1, 1186 DM Amstelveen, The Netherlands

Manufacturer :
LG Electronics Inc.
84, Wanam-ro, Seongsan-gu, Changwon-si, Gyeongsangnam-do, KOREA

UK Importer: LG Electronics U.K. Ltd
Velocity 2, Brooklands Drive, Weybridge, KT13 0SL

Eco design requirement

• The information for Eco design is available on the following free access website.
<https://www.lg.com/global/support/cedoc/cedoc>