



Please read this manual carefully before operating your set and retain it for future reference. To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL 0J98



www.lg.com














Top panel

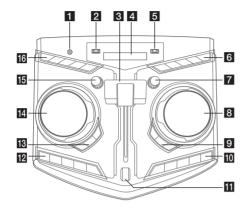

- 1 PORT(Portable). IN jack
- 2 USB 1 Port

You can play sound files by connecting the USB device.

3 PARTY THRUSTER lever

Slide the lever to create a party atmosphere.

- 4 Display window
- 5 USB 2 Port

You can play sound files by connecting the USB device.

6 F (Function)

Selects the function and input source.

R USB REC / DEMO

- Records to USB.
- In power off status, if you press USB REC / DEMO, show demo mode

LIGHTING MODE

Selects the lighting effects.

LIGHTING ON/OFF

Turns on/off the lighting effects.

PARTY I INK

Press and hold to select the PARTY LINK.

⊕ WIRELESS LINK

- Selects MASTER or SLAVE on WIRELESS PARTY LINK mode.
- Enable or disable WIRELESS PARTY LINK mode.

7 MASTER VOLUME

Adjust speaker volume

8 SCRATCH / SEARCH & MULTI JOG

- Turns clockwise or counterclockwise to make scratch sound.
- Searches a folder or a file
- Selects lighting mode.

9 SEARCH

Moves to folder or file in selection mode.

OK

Selects a folder when searching a file.

REGION EO / BASS BLAST

- Chooses region equalizer.
- Press and hold to select BASS effect directly.

10 **I**≪ (Skip/Search)

- Skips backward.
- Searches for a section within a track/file.
- Selects the radio stations.

>II (Play/Pause)

- Starts or pauses playback.
- Selects stereo/mono.

>> (Skip/Search)

- Skips forward.
- Searches for a section within a track/file.
- Selects the radio stations.

☐ (Stop)

Stops playback or cancels DELETE function.

△ (Open/Close)

Opens and closes the disc tray.

11 PARTY THRUSTER mode

Selects PARTY THRUSTER mode.

12 CLUB, DRUM, USER (DJ PRO)

Selects CLUB, DRUM or USER sound effect to mix.
(If you want to use USER, you have to register a source with
"Music Flow Bluetooth" app.)

1, 2, 3 (DJ PRO PAD)

Press a desired sound pad.

PARTY STARTER

- In power off state, this function turns on the unit with Party Kick Starter sound.
- In power on state, this function mixes the music with Party Kick Starter sound.

DJ LOOP

Selects DJ LOOP mode.

(DJ LOOP mode can use during CD/USB playback.)

13 USER EO

Selects the sound effect created by your own.

DJ EFFECT

Selects a desired DJ effect.

VOCAL EFFECTS

Selects VOCAL EFFECTS mode.

14 SCRATCH / LEVEL CONTROL

- Turns clockwise or counterclockwise to make scratch sound.
- Turns clockwise or counterclockwise to control the USER EQ level.
- Adjust DJ EFFECT level.
- Selects vocal effects mode.
- MIC (Microphone) VOLUME Adjust microphone volume.

16 (Standby)

Turns the power on or off.

VOICE CANCELLER

You can enjoy the function while playing the music, by reducing singer vocal of music in the various source.


KEY CHANGER (b /#)

Changes the key to suit your vocal range.


ECHO

Selects ECHO mode.

Front panel / Rear panel

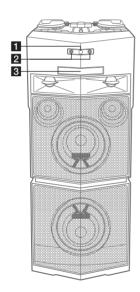

- 1 R (Remote sensor)
- 2 MIC(Microphone) 1/2 jack
- 3 Disc tray

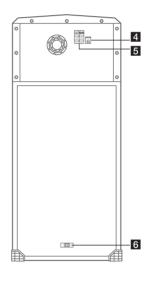

- 4 ANTENNA (FM)
- 5 AUX IN / OUT

Connect an auxiliary device.

6 AC in socket

Controller App





Download the **Music Flow Bluetooth** App to your device. (Android only)

LG Sound Sync (Wireless)



For more information, download the online owner's manual. http://www.lg.com

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 380 mm x 1099 mm x 400 mm
Bus Power Supply (USB)	5 V === 500 mA
Amplifier (Total RMS output power)	1,800 W RMS

Design and specifications are subject to change without notice.

Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

Replacement of battery

