


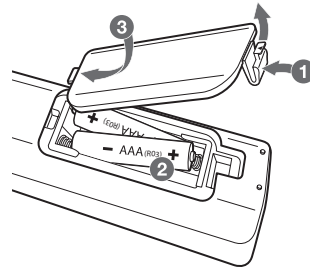 
Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 350 mm x 163 mm x 251 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	720 W RMS

 
Design and specifications are subject to change without notice.

Replacement of battery



POWER: This unit operates on a mains supply of 200 - 240 V - 50 / 60 Hz.

Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use a fuse of the same rating and approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



SIMPLE MANUAL

Mini Hi-Fi System

Please read this manual carefully before operating your set and retain it for future reference. To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
CJ45



MFL72144412
2407_Rev01



 
This product has no disc drive.

www.lg.com

Copyright © 2024 LG Electronics Inc. All Rights Reserved.




Front Panel

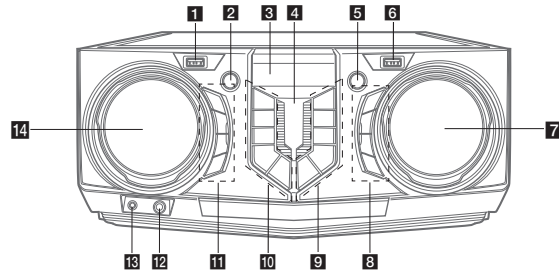


- 1** USB 1 Port
You can play sound files by connecting the USB device.
- 2** ⏻ (Standby)
Turns the power on or off.
- 3** Display window
- 4** 📡 (Remote sensor)
- 5** **WIRELESS LINK**
- Selects MAIN or OTHER on WIRELESS PARTY LINK mode.
- Enable or disable WIRELESS PARTY LINK mode.
- 6** USB 2 Port
You can play sound files by connecting the USB device.
- 7** **VOLUME** ▲▼
Adjust speaker volume.
- 8** **MIC** (Microphone) +/-
Adjust microphone volume.
VOICE CANCELLER
You can enjoy the function while playing the music, by reducing singer vocal of music in the various source.
ECHO
Selects ECHO mode.
- 9** **F** (Function)
Selects the function and input source.
▶|| (Play/Pause)
- Starts or pauses playback.
- Selects stereo/mono.
>>| (Skip/Search)
- Skips forward.
- Searches for a section within a file.
- Selects the radio stations.
KEY CHANGER (# / ♭)
Changes the key to suit your vocal range.
- 10** **USB REC / DEMO**
- Records to USB.
- In power off status, if you press **USB REC / DEMO**, show DEMO mode.
□ (Stop)
Stops playback or cancels DELETE function.
|◀◀ (Skip/Search)
- Skips backward.
- Searches for a section within a file.
- Selects the radio stations.
ⓘ (Information)
- Sees information about your music. An MP3 file often come with ID3 tag. The tag gives the Title, Artist, Album or Time information.
- Sees **Bluetooth** device name of the unit in BT READY.
- Sees the name of connected all **Bluetooth** device in **Bluetooth** mode.
- When these units are successfully connected each other in WIRELESS PARTY LINK mode, each of connected device names appears in the each unit.
AUTO DJ
Selects the AUTO DJ mode.
- 11** **EQ**
Chooses sound impressions.
SPECIAL EQ / BASS BLAST
- Chooses special equalizer.
- Press and hold to select BASS effect directly.
SEARCH
Moves to folder or file in selection mode.
OK
Selects a folder when searching a file.
- 12** **MIC** (Microphone) jack
- 13** **PORT.** (Portable) **IN** jack
- 14** **SEARCH** ▲▼
- Searches a folder or a file.
- Turns clockwise or counterclockwise to control the EQ, SPECIAL EQ mode.

 Rear Panel

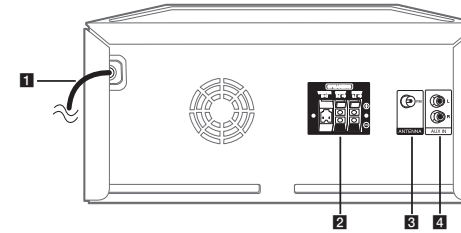

- 1** Power cord
- 2** **SPEAKERS** connector/terminals
- 3** **ANTENNA** (FM)
- 4** **AUX IN** (L/R)
Connect an auxiliary device.

 Speaker Connection

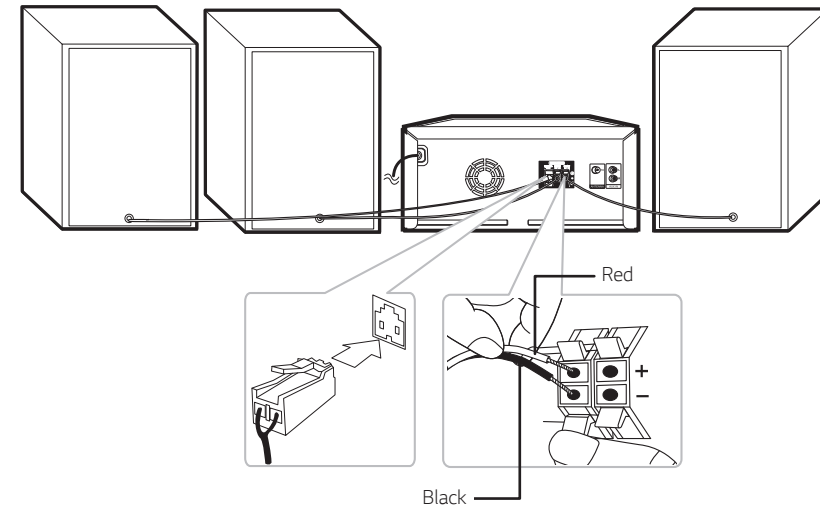

Controller App



Download the **LG XBOOM** App to your device.
(Android only)

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>