

INSTALLATION/ OWNER'S MANUAL **AIR CONDITIONER**

Please read this installation manual completely before installing the product.
Installation work must be performed in accordance with the national wiring
standards by authorized personnel only.
Please retain this installation manual for future reference after reading it
thoroughly.

PDI STANDARD
PPWRDB000



P/NO : MFL67982907

www.lg.com

ENGLISH

ITALIANO

ESPAÑOL

FRANÇAIS

DEUTSCH

PORTUGUÊS

TÜRKÇE

РУССКИЙ ЯЗЫК

TIPS FOR SAVING ENERGY

Here are some tips that will help you minimize the power consumption when you use the air conditioner. You can use your air conditioner more efficiently by referring to the instructions below:

- Do not cool excessively indoors. This may be harmful for your health and may consume more electricity.
- Block sunlight with blinds or curtains while you are operating the air conditioner.
- Keep doors or windows closed tightly while you are operating the air conditioner.
- Adjust the direction of the air flow vertically or horizontally to circulate indoor air.
- Speed up the fan to cool or warm indoor air quickly, in a short period of time.
- Open windows regularly for ventilation as the indoor air quality may deteriorate if the air conditioner is used for many hours.
- Clean the air filter once every 2 weeks. Dust and impurities collected in the air filter may block the air flow or weaken the cooling / dehumidifying functions.

For your records

Staple your receipt to this page in case you need it to prove the date of purchase or for warranty purposes. Write the model number and the serial number here:

Model number :

Serial number :

You can find them on a label on the side of each unit.

Dealer's name :

Date of purchase :

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.

Always comply with the following precautions to avoid dangerous situations and ensure peak performance of your product

WARNING

It can result in serious injury or death when the directions are ignored

CAUTION

It can result in minor injury or product damage when the directions are ignored

WARNING

- Installation or repairs made by unqualified persons can result in hazards to you and others.
- Installation work must be performed in accordance with the National Electric Code by qualified and authorized personnel only.
- The information contained in the manual is intended for use by a qualified service technician familiar with safety procedures and equipped with the proper tools and test instruments.
- Failure to carefully read and follow all instructions in this manual can result in equipment malfunction, property damage, personal injury and/or death.

WARNING

Installation

- Be sure to request to the service center or installation specialty store when installing products. It will cause fire or electric shock or explosion or injury.
- Request to the service center or installation specialty store when reinstalling the installed product. It will cause fire or electric shock or explosion or injury.
- Do not disassemble, fix, and modify products randomly.
It will cause fire or electric shock.

In-use

- Do not place flammable stuffs close to the product. It will cause fire.
- Do not allow water to run into the product.
It will cause electric shock or breakdown.
- Do not give the shock to the product.
It will cause breakdown when giving the shock to the product.

- Request to the service center or installation specialty store when the product becomes wet. It will cause fire or electric shock.
- Do not give the shock using sharp and pointed objects. It will cause breakdown by damaging parts.

CAUTION

In-use

- Do not clean using the powerful detergent like solvent but use soft cloths. It will cause fire or product deformation.
- Do not press the screen using powerful pressure or select two buttons. It will cause product breakdown or malfunction.
- Do not touch or pull the lead wire with wet hands. It will cause product breakdown or electric shock.



Disposal of your old appliance

- 1 When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4 For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

According to IEC 60335-1

This appliance is not intended for use by person (including children) with reduced physical, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

According to EN 60335-1

This appliance can be used by children aged from 8 years and above and person with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

TABLE OF CONTENTS

2 TIPS FOR SAVING ENERGY

3 IMPORTANT SAFETY INSTRUCTIONS

6 NAME OF EACH PART

7 COMPONENTS


8 INSTALLATION METHOD

- 8 Diagram of overall product configuration
- 12 How to wire the product (when EHP product is connected)
- 13 How to wire the product (when GHP product is connected)
- 14 Wiring

17 SETTING AND USING METHOD

- 17 Glossary
- 18 Setting
- 20 Setting up detailed functions (EHP products)
- 26 Setting detailed functions (GHP products)
- 32 How to Use Power Indicator (EHP products)
- 35 How to Use the Power Indicator (GHP products)
- 39 Operating condition display

NAME OF EACH PART

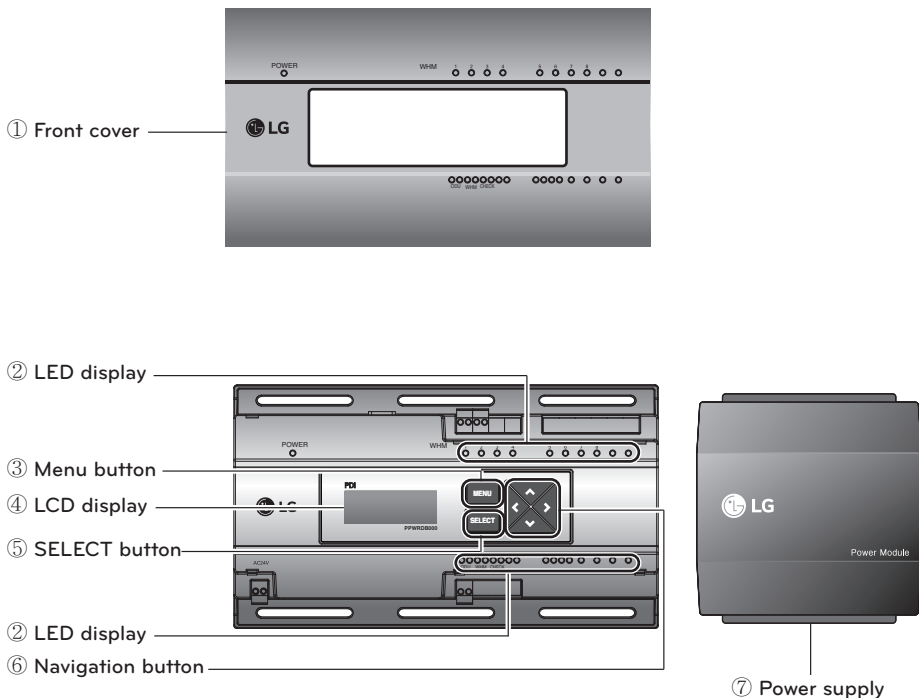

① Front cover

② LED display Displays current status of power indicator

③ Menu button Use for checking initial setting and electric power


④ LCD display Displays setting information and power usage

⑤ SELECT button Use for initial setting


⑥ Navigation button Use for checking initial setting and electric power

⑦ Power supply Supply power for power indicator


COMPONENTS

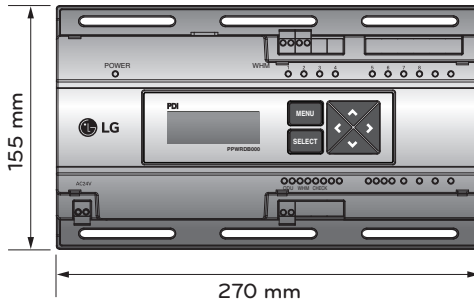


Power distribution indicator

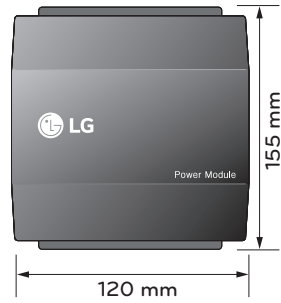

Power supply

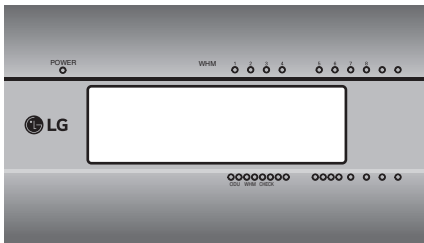


Front cover

 

Manual



1 core

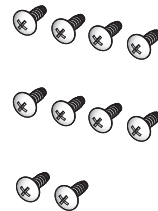

Screws



INSTALLATION METHOD

Diagram of overall product configuration

When interlocked to pulse type wattmeter


- When interlocked to EHP product

- Independent Operation of Power Indicator (interlocked to EHP products)

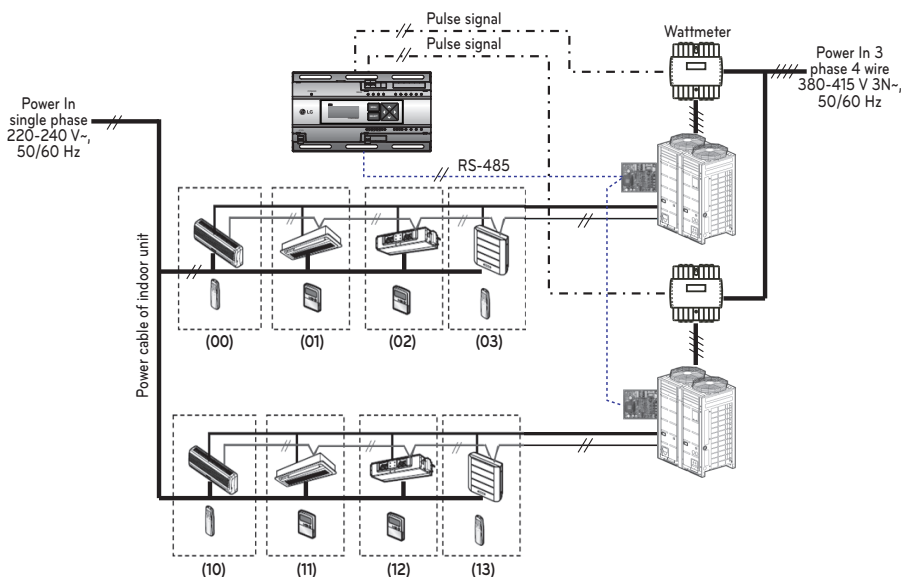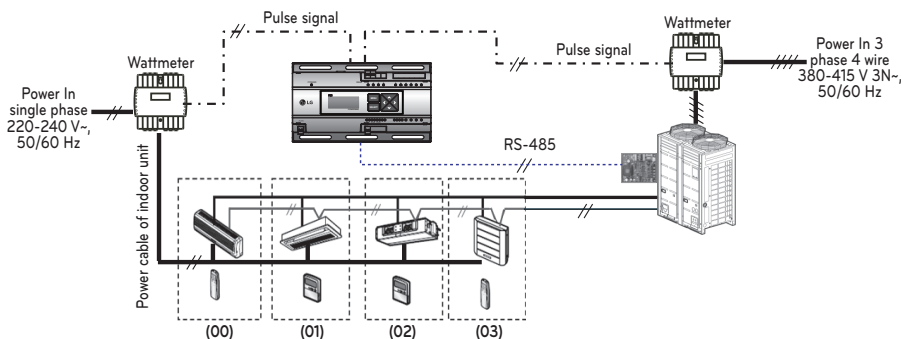

- //// : Power cable for 3 phase 4 wire
- // : Power cable for single phase
-//.... : Communication cable (2 wire shielded cable): Between outdoor unit and central controller
- // : Communication cable (2 wire shielded cable): Between indoor unit and outdoor unit
- /# . : Pulse signal wire
- : Refrigerant pipe

• Interlocked Operation with Central Controller (interlocked to EHP product)

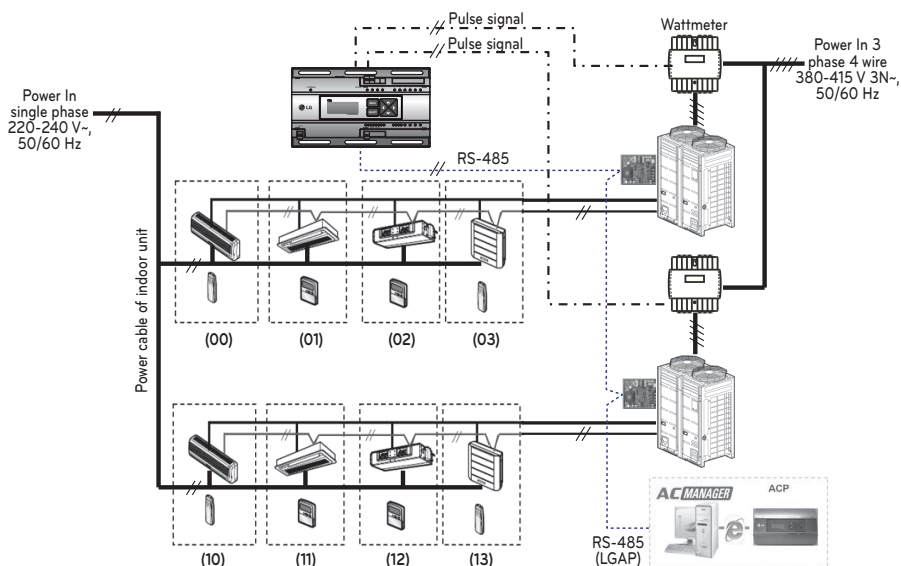

- : Power cable for 3 phase 4 wire
- : Power cable for single phase
-** : Communication cable (2 wire shielded cable): Between outdoor unit and central controller
- - - - -** : Communication cable (2 wire shielded cable): Between indoor unit and outdoor unit
- // -** : Pulse signal wire
- : Refrigerant pipe


CAUTION

- Depending on the electric power, use the wattmeter for remote reading by sending the pulse signal.
- Use the wattmeter with the pulse width of 50 ms ~ 400 ms.
- The wattmeter pulse must be able to sink at least 3 mA or more of current in the power indicator.
- Use the wattmeter of 1 W/Pulse, 2 W/Pulse, 4 W/Pulse, 6 W/Pulse, 8 W/Pulse, 10 W/Pulse, 100 W/Pulse, PT/CT (1 ~ 50 000).
- When setting the wattmeter, set it to Slave Mode.
- Maximum of 2 wattmeters can be installed.
- The distance between power indicator and wattmeter should be shorter than 10 m in normal circumstance.
- When electrical or mechanical noise is expected, more shorter wiring is needed.
- For watt-hour meter setting, inquire to the corresponding vendor

* EHP (Electric Heat Pump): It is an electric air conditioner to drive the compressor by electric power.

• When interlocked to GHP product

- Independent Operation of Power Indicator (interlocked to GHP product)

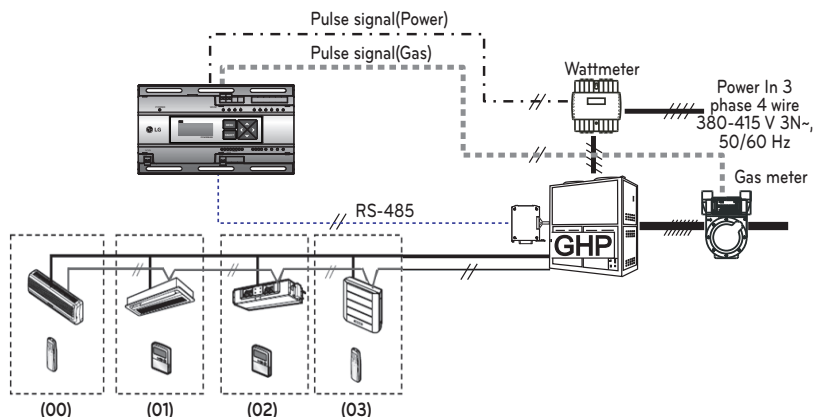


	: Power cable for 3 phase 4 wire
	: Power cable for single phase
	: Communication cable (2 wire shielded cable): Between outdoor unit and central controller
	: Communication cable (2 wire shielded cable): Between indoor unit and outdoor unit
	: Pulse signal wire
	: Refrigerant pipe
	: Gas pipe
	: Pulse signal wire(Gas)

CAUTION

- Use the wattmeter for remote reading to send pulse signal depending on wattage.
- Use the wattmeter with the pulse width of 50 ms ~ 400 ms.
- The wattmeter pulse must be able to sink at least 3 mA or more of current in the power indicator.
- Use the wattmeter of 1 W/Pulse, 2 W/Pulse, 4 W/Pulse, 6 W/Pulse, 8 W/Pulse, 10 W/Pulse, 100 W/Pulse, PT/CT(1 ~ 50 000).
- Use the gas meter for remote reading to send pulse signal depending on gas consumption.
- Use the gas meter with the pulse width of 50 ms or more.
- Use the gas meter containing the max. gas pressure of 0.2 m³/h ~ 10 m³/h.
- Gas meter pulse must be able to sink at least 3 mA of current or more in the power indicator.
- Use the gas meters for 1 l/Pulse, 2 l/Pulse, 4 l/Pulse, 6 l/Pulse, 8 l/Pulse, 10 l/Pulse, 100 l/Pulse, VT&Pr(1 ~ 50 000).
- Set to Master Mode when setting the wattmeter or gas meter.
- Wattmeter or gas meter can be installed up to 1.
- Connection cable for the power indicator and wattmeter (gas meter) must not exceed 10 m in normal circumstance.
- Reduce the length of connection cable if there is any electrical or mechanical noise on the site.
- For watt-hour meter and gas meter setting, inquire to the corresponding vendor

* GHP (Gas engine Heat Pump): It is a gas air-conditioner to drive the compressor with LNG or LPG as a heat source and the gas engine electric power.

- When linked with the GHP product, the central controller is linked only possible model of ACS IV series or later.

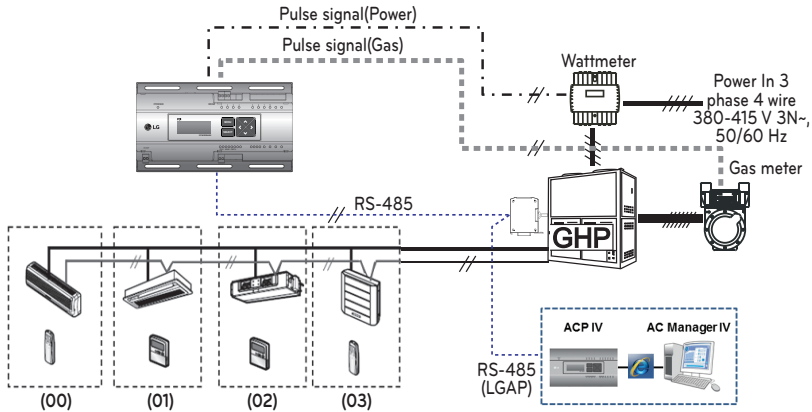


- : Power cable for 3 phase 4 wire
- : Power cable for single phase
- : Communication cable (2 wire shielded cable): Between outdoor unit and central controller
- : Communication cable (2 wire shielded cable): Between indoor unit and outdoor unit
- · / · - : Pulse signal wire
- : Refrigerant pipe
- : Gas pipe
- / ■ ■ : Pulse signal wire(Gas)

CAUTION


- Use the wattmeter for remote reading to send pulse signal depending on wattage.
- Use the wattmeter with the pulse width of 50 ms ~ 400 ms.
- The wattmeter pulse must be able to sink at least 3 mA or more of current in the power indicator.
- Use the wattmeter for 1 W/Pulse, 2 W/Pulse, 4 W/Pulse, 6 W/Pulse, 8 W/Pulse, 10 W/Pulse, 100 W/Pulse, PT/CT(1 ~ 50 000).
- Use the gas meter for remote reading to send pulse signal depending on gas consumption.
- Use the gas meter with the pulse width of 50 ms or more.
- Use the gas meter containing the max. gas pressure of 0.2 m³/h ~ 10 m³/h.
- Gas meter pulse must be able to sink at least 3 mA of current or more in the power indicator.
- Use the gas meters for 1 l/Pulse, 2 l/Pulse, 4 l/Pulse, 6 l/Pulse, 8 l/Pulse, 10 l/Pulse, 100 l/Pulse, VT&Pr(1 ~ 50 000).
- Set to Slave Mode when setting the wattmeter or gas meter.
- Wattmeter or gas meter can be installed up to 1.
- Connection cable for the power indicator and wattmeter (gas meter) must not exceed 10 m in normal circumstance.
- Reduce the length of connection cable if there is any electrical or mechanical noise on the site.
- For watt-hour meter and gas meter setting, inquire to the corresponding vendor

How to wire the product (when EHP product is connected)

Wiring Power Indicator

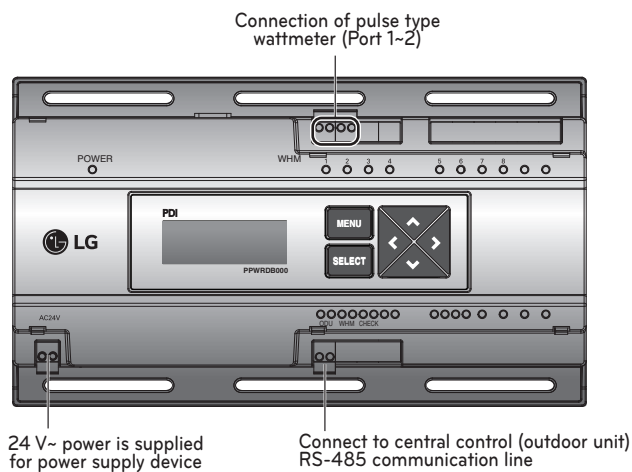

Wiring Power Supply

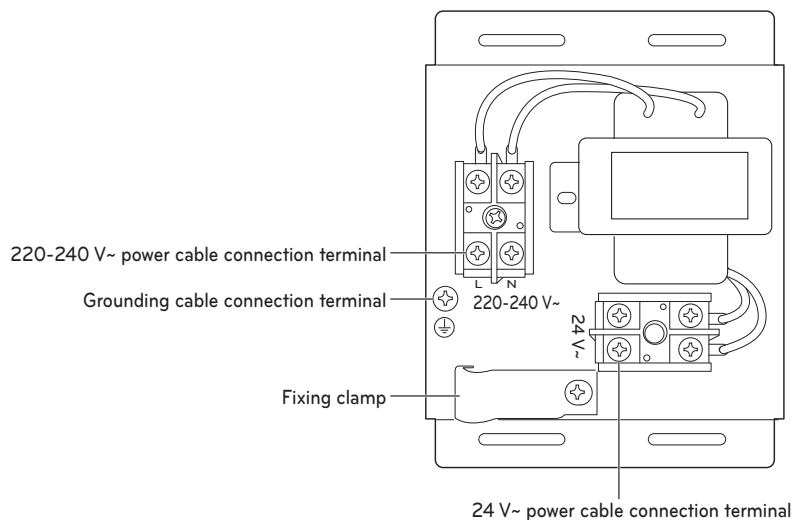


⚠ CAUTION


- Power must be turned on after the product is wired completely.

How to wire the product (when GHP product is connected)

Wiring Power Indicator

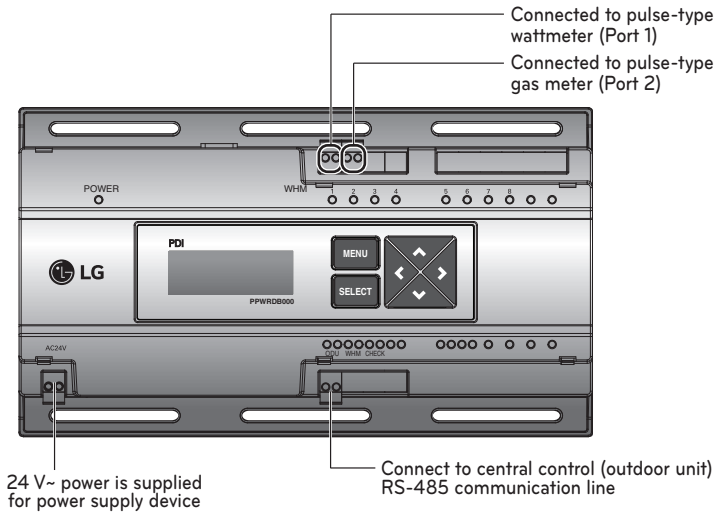

Wiring Power Supply

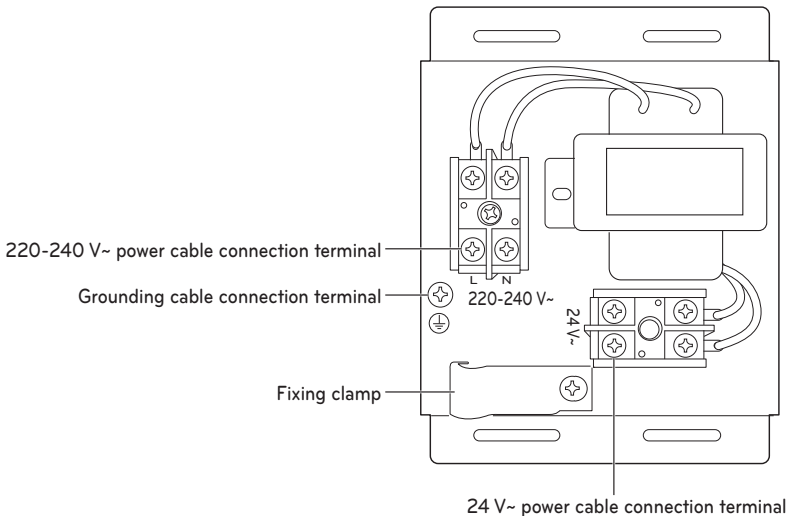


CAUTION

- Power supply must be applied after wiring the product is completed, if applicable.


Wiring

- Separate the power supply case.
- Loosen the clamp fixating the power supply.
- Connect the 220-240 V~ power cable to the black and grounding terminal.
- Connect the 24 V~ power cable to the yellow terminal.
- Use the clamp to fixate the 220-240 V~ and 24 V~ power cable.
- Use the screw to assemble the case.
- Use the included screws to fixate the power indicator and power supply at appropriate locations within the electric panel.
- Connect the 24 V~ power cable connected to the power supply to the power terminal of the power indicator.
- Wire wattmeter, gas meter, central controlled communication cable, and the repeater for remote reading.
- Install the included core to the 24 V~ power cable.

Power connection

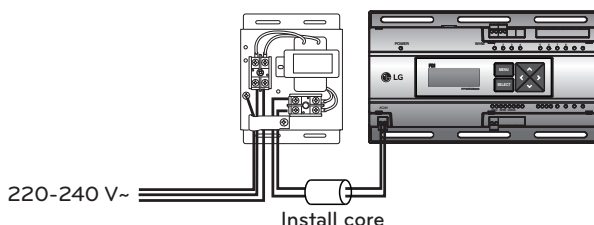


Mounting on wall

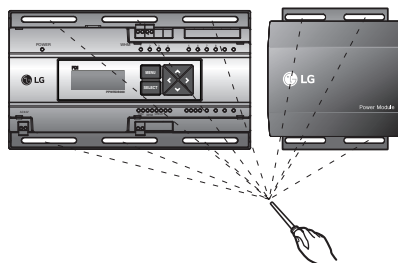

⚠ WARNING

- Always tighten the terminal screws so that they do not become loose.
- When connecting the power and communication cable, always use the terminal (O-Ring, Y-Ring).
- For 220-240 V~ power cable, use (CV) 1.5 mm² x 3 and for 24 V~ power cable, use the CV wire.

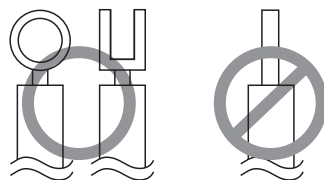


⚠ CAUTION

- Power must be turned on after the product is wired completely.

Connect the wattmeter and communication cable (EHP products)

When connecting the pulse-type wattmeter

- Independent Operation of Power Indicator (interlocked to EHP product)

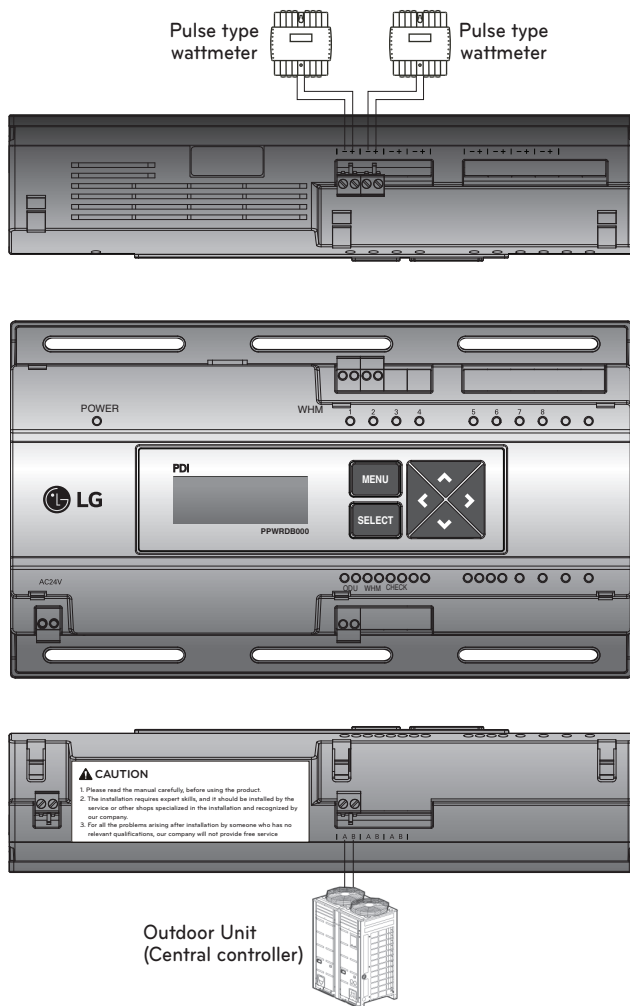


CAUTION

- The color and polarity of the signal wire may be different from the details indicated on the case depending on the manufacturer of wattmeter. [Black: (-), white: (+)]
- When connecting the 485 communication cable, make sure to check the A, B polarity.
- After connecting the wattmeter, check whether the signal is connected through the LED.
- Power indicator and Pulse Type wattmeter must be installed in same panel.

Connection of wattmeter, gas meter and communication cable (GHP products)

When connecting the pulse-type wattmeter / gas meter

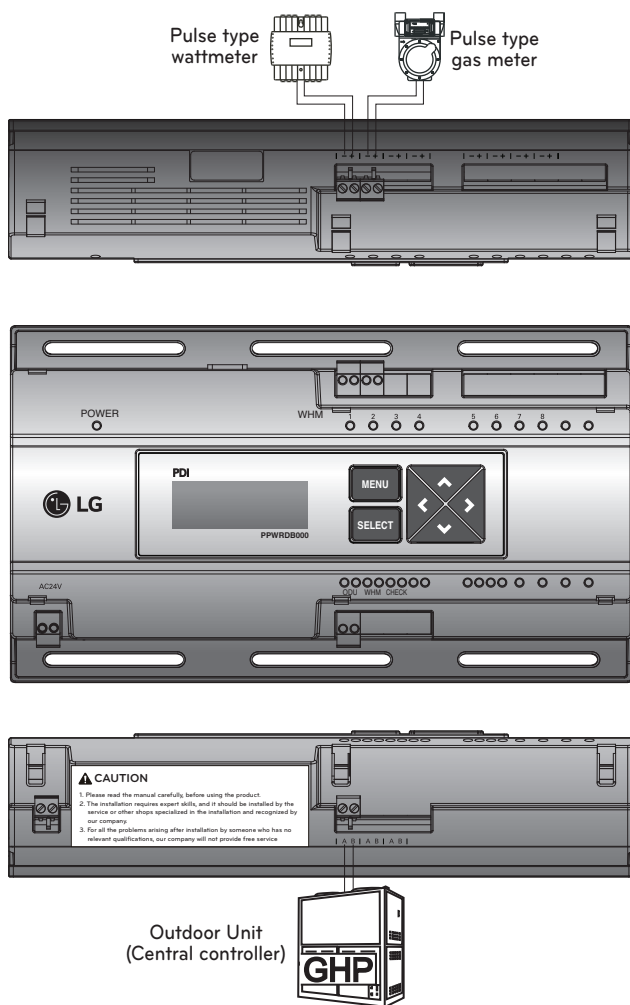

CAUTION

- The color and polarity of the signal wire may be different from the details indicated on the case depending on the manufacturer of wattmeter. [Black: (-), white: (+)]
- When connecting the 485 communication cable, make sure to check the A, B polarity.
- After connecting the wattmeter, check whether the signal is connected through the LED.
- Install the power indicator and the pulse-type wattmeter on the same panel.
- Make sure that the pulse lines of the wattmeter and gas meter are connected to the correct positions (wattmeter : port 1, gas meter : port 2)

SETTING AND USING METHOD

Glossary



- EHP (Electric Heat Pump)
It is an electric air conditioner to drive the compressor by electric power.
- GHP (Gas engine Heat Pump)
GHP is a gas air conditioner to drive the compressor with LNG and LPG gas as a heat source and power supply for gas engine.
- WHM: wattmeter
- LHM: gas meter
- ODU: Outdoor Unit
- IDU: Indoor Unit
- STANDBY P: Standby Power
- NOT USE: setting as disabled
- CT: deflector device
- PT: transforming equipment
- VT: volume adjustment device
- Pr: gauge integer

Setting

Description of button function

- MENU button: Move to standby screen after setting is completed. Use for reading wattmeter
- Direction button: Move to item to set
- SELECT button: Enter applicable setting window and set changed information


Enter function setting mode

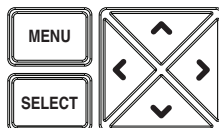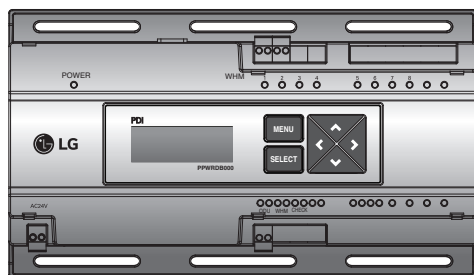


• If entering the setting screen for the first time.

- After turning power on, press the 'MENU' button and the 'SELECT' button at the same time and the screen will change to the screen where you can select the product connection type. Select the product type to connect, and then press the 'SELECT' button. Then, the selection of the product will be saved and the screen will be switched to the main standby screen.

According to the product ship-out date, standby screen version may be different

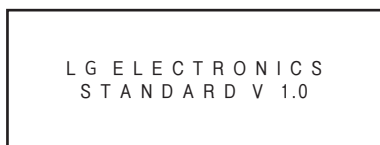

<Main standby screen>

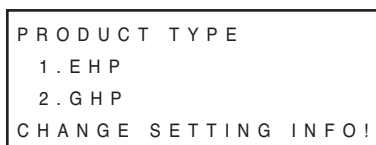


<Connection Product Type Setting Screen>


- If after selecting the connection product type at least once, you are entering the setting screen.

- After turning power on, press the 'MENU' button and the 'SELECT' button at the same time and then will be switched to the function setting screen.

- After selecting EHP product

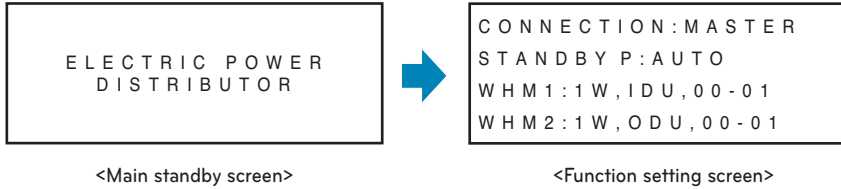

- After selecting GHP product

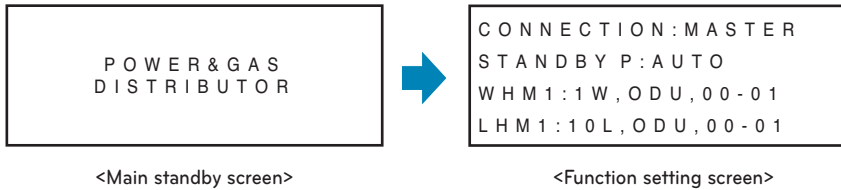

- The item with letters blinking is the current setting location on the function setting screen.

※ If you want to change the connection type of product

- On the function setting screen, press the (▲) button and (▼) button simultaneously, and then you can enter the connected product type setting screen.




CAUTION

- Power indicator setting only can be changed during the 20 minutes after turning on the power. 20 minutes later, if you need to change settings, turn the power indicator on again.

Setting up detailed functions (EHP products)


Flowchart for how to set up functions (EHP products)

While EHP product is selected, set the detailed functions of the power indicator with reference to the flowchart below

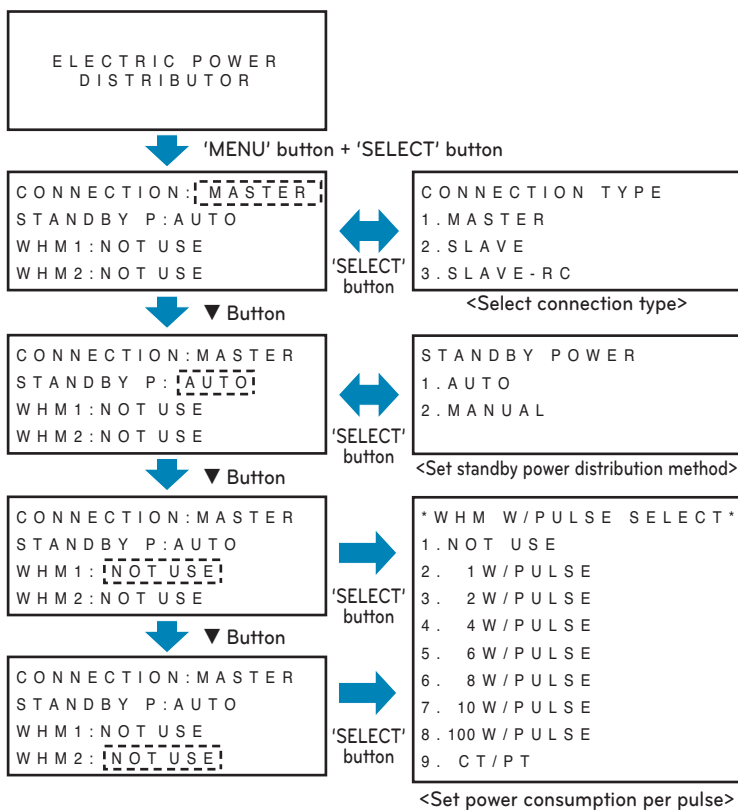

**CAUTION**


- Power indicator setting only can be changed during the 20 minutes after turning on the power. Twenty (20) minutes
20 minutes later, if you need to change settings, turn the power indicator on again.

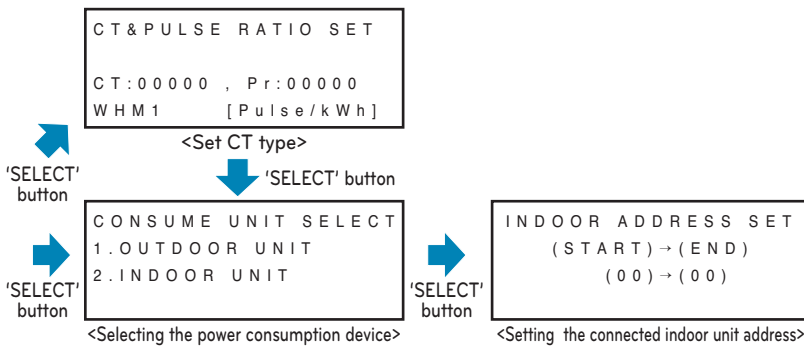

Setting functions (EHP products)

- **Connection type setting: Setting based on system configuration**

- In case of power indicator single composition: MASTER
- In case of central controller interface: SLAVE
 - ※ In 1.4 or higher version, SLAVE-RC setting is possible, and in case of central controller interface, if one unit of SLAVE is set as SLAVE-RC, protection logic for distribution error by central controller failure is operated.

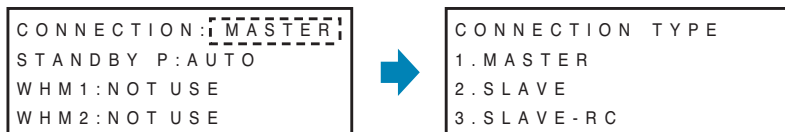

- When the CONNECTION item flashes, press the SELECT button to enter the setting window. Press the SELECT button at the item to set to save the setting and return to the initial setting screen.


! CAUTION

- When you set the connection type, you need to set only one unit as SLAVE RC Type.

- **Standby power distribution method setting**

Standby power: Power consumed by outdoor unit when all indoor units are turned off

- AUTO: Automatically distributes the standby power to all connected indoor units
- MANUAL: Does not distribute the standby power and saves separately

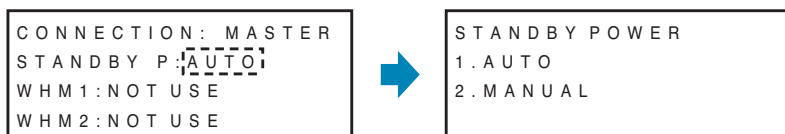

- When the STANDBY P item flashes, press the SELECT button to enter the setting window. Press the SELECT button at the item to set to save the setting and return to the initial setting window.

Setting detailed properties (EHP products)

- **Wattmeter property setting:** Based on the wattmeter type setting, it automatically switches to property setting screen.

- Pulse type: Set power consumption by pulse, set attached location (Indoor/Outdoor unit classification), set indoor unit address
- CT type: Set CT and device constant value, set attached location (Indoor/Outdoor unit classification), set indoor unit address

- **When setting pulse type**

```
CONNECTION : MASTER
STANDBY P : AUTO
WHM1 : NOT USE
WHM2 : NOT USE
```



```
CONNECTION : MASTER
STANDBY P : AUTO
WHM1 : NOT USE
WHM2 : NOT USE
```



```
* WHM W/PULSE SELECT *
1. NOT USE
2. 1 W/PULSE
3. 2 W/PULSE
```



```
CONSUME UNIT SELECT
1. OUTDOOR UNIT
2. INDOOR UNIT
```



```
INDOOR ADDRESS SET
(START) → (END)
(00) → (00)
```



```
CONNECTION : MASTER
STANDBY P : AUTO
WHM1 : 2 W, ODU, 00 - 00
WHM2 : NOT USE
```

Press the (▼) button at the initial setting screen to enter the wattmeter property setting screen.

When the wattmeter item to set flashes, press the SELECT button to change to detail setting window.

It proceeds in the order of Set power consumption by pulse → Set power consumption device → Set connected indoor address.

- Set power consumption by pulse (WHM W/PULSE SELECT)
 - : Enter the value displayed on the wattmeter as power consumption per pulse
- Set power consumption device (CONSUME UNIT SELECT)
 - : Check and set whether the product on which the wattmeter is installed is a indoor or outdoor unit.
 - ※ If one indoor unit is set to use both outdoor unit power distribution and indoor unit power distribution, wattage value is displayed as indoor unit wattage value by summing outdoor unit power distribution value and indoor unit power distribution value.
- Set connected indoor address (INDOOR ADDRESS SET)
 - : Enter the indoor address connected to applicable wattmeter.
 - ※ After the initial installation, address setting of indoor unit connected to each port shall not be changed. If it is changed, previous data cannot be used.

After setting the applicable item, press the SELECT button to save the setting and to move to the next stage.

Setting information is reflected to the detail setting window.

After setting all wattmeters, press the MENU button to save the setting and move to the initial screen.

• When setting CT type

WHM W/PULSE SELECT
1. NOT USE
2. 1 W/PULSE
3. 2 W/PULSE DOWN



WHM W/PULSE SELECT
7. 10 W/PULSE UP
8. 100 W/PULSE
9. CT/PT



CT&PULSE RATIO SET
CT : 00000 , Pr : 00000
WHM1 [Pulse/kWh]



CONSUME UNIT SELECT
1. OUTDOOR UNIT
2. INDOOR UNIT



INDOOR ADDRESS SET
(START) → (END)
(00) → (00)



CONNECTION: MASTER
STANDBY P: AUTO
WHM1: CT/PT, IDU, 00-00
WHM2: NOT USE

Press the (▼) button to set CT/PT from the power consumption setting screen per pulse.

When CT/PT item flashes, press the SELECT button to enter CT, Pr input window.

It proceeds in the order of Set CT, device constant → Set power consumption device → Set connected indoor address.

- CT, calibrating constant setting (CT&PULSE RATIO SET)

*CT: As the device to reduce the current so that the measuring device can take the measurement, enter the rate indicated on the product to the CT item.
Ex) when using 100:1 CT, enter 100 to the CT item.

*Pr: As the device constant value, it is displayed as ratio of output pulse per power consumption of wattmeter.
For the device constant value, enter the value displayed on wattmeter [Pulse/kWh]
Ex) when using 2 500 [Pulse/kWh] wattmeter, enter 2 500 to Pr item.

- Power consumption device setting (CONSUME UNIT SELECT)
: Check whether the product with watt-hour meter installed is outdoor unit or indoor unit first, and perform the setting.
※ If one indoor unit is set to use both outdoor unit power distribution and indoor unit power distribution, wattage value is displayed as indoor unit wattage value by summing outdoor unit power distribution value and indoor unit power distribution value.

- Connected indoor unit address setting (INDOOR ADDRESS SET)
: Input the address of the indoor unit connected to the corresponding watt-hour meter.
※ After the initial installation, address setting of indoor unit connected to each port shall not be changed. If it is changed, previous data cannot be used.

After setting the applicable item, press the SELECT button to save the setting and to move to the next stage.


Setting information is reflected to the detail setting window.

After setting all wattmeters, press the MENU button to save the setting and move to the initial screen.

Setting detailed functions (GHP products)


Function Setting Method Flowchart (GHP products)

While GHP product is selected, set the detailed functions of the power indicator with reference to the following flowchart.

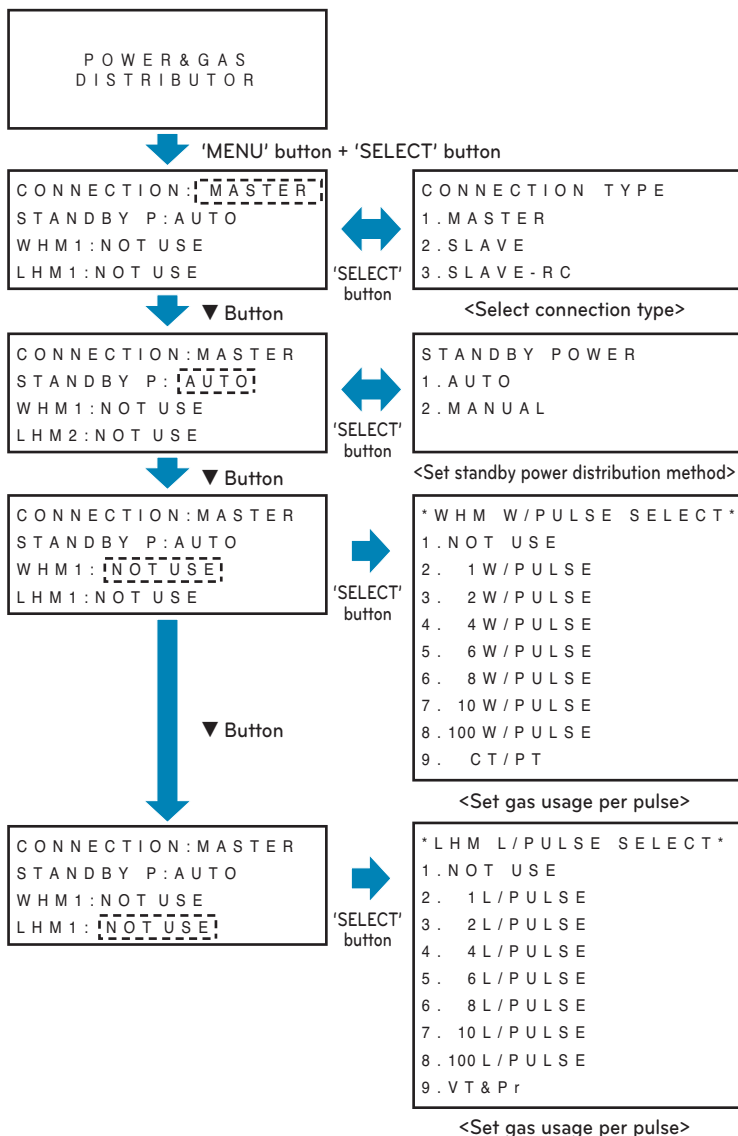

**CAUTION**

- Power indicator setting only can be changed during the 20 minutes after turning on the power.
20 minutes later, if you need to change settings, turn the power indicator on again.

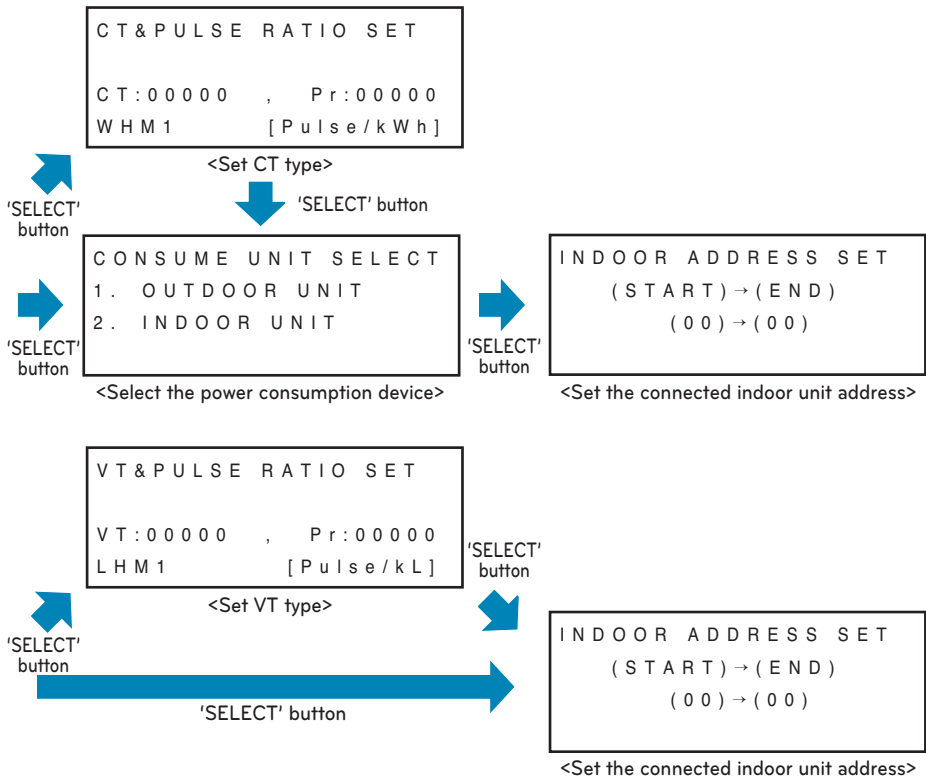

Setting functions (GHP products)

• Set the properties of the wattmeter and gas meter.

- Pulse type: Set power consumption per pulse / gas consumption, mounting location (divide indoor and outdoor unit), and the indoor unit address.
- CT (VT) type: Set CT (VT), the instrument integer value, mounting location (divide indoor and outdoor unit), and the indoor unit address.

WHM1: Mount the wattmeter.

LHM1 : Mount the gas meter.

• When setting the properties of the pulse-type wattmeter (WHM1).

```
CONNECTION : MASTER
STANDBY P: AUTO
WHM1: NOT USE
LHM1: NOT USE
```

On the Home screen, press the (▼) button and then the screen is switched to the wattmeter / gas meter property setting screen.

```
CONNECTION : MASTER
STANDBY P: AUTO
WHM1: NOT USE
LHM1: NOT USE
```

When the item of the wattmeter you want to set is blinking, press the SELECT button, and the screen will be switched to the detailed setting screen.

```
* WHM W / PULSE SELECT *
1. NOT USE
2. 1 W / PULSE
3. 2 W / PULSE DOWN
```

Set power consumption per pulse → set the power consumption device → set the connected indoor unit address in order.

- Set power consumption per pulse (WHM W / PULSE SELECT).
: Please enter a value shown in the wattmeter as the power consumption recognized per pulse.

- Set the power consumption device (CONSUME UNIT SELECT).
: Please set up after making sure that the wattmeter is installed, and checking whether the product installed is the indoor or outdoor unit.

※If one indoor unit is set to use both outdoor unit power distribution and indoor unit power distribution, wattage value is displayed as indoor unit wattage value by summing outdoor unit power distribution value and indoor unit power distribution value.

```
CONSUME UNIT SELECT
1. OUT DOOR UNIT
2. IN DOOR UNIT
```

- Set the connected indoor unit address (INDOOR ADDRESS SET).
: Enter the address of the indoor unit connected to the wattmeter.

※After the initial installation, address setting of indoor unit connected to each port shall not be changed. If it is changed, previous data cannot be used.

```
INDOOR ADDRESS SET
(START) → (END)
(00) → (00)
```

After setting the item, press the SELECT button to save the setting, and then move to the next step.

```
CONNECTION : MASTER
STANDBY P: AUTO
WHM1 : 2 W, ODU, 00 - 00
LHM1 : NOT USE
```

Configuration information is reflected on the detailed setting window.

After setting every wattmeter, press the menu button to save the settings and the screen will be switched to the initial screen.

• When setting the properties of the pulse-type gas meter (LHM1)

```
CONNECTION: MASTER
STANDBY P: AUTO
WHM1: NOT USE
LHM1: NOT USE
```



```
CONNECTION: MASTER
STANDBY P: AUTO
WHM1: NOT USE
LHM1: NOT USE
```



```
*LHML/PULSE SELECT*
1. NOT USE
2. 1L/PULSE
3. 2L/PULSE DOWN
```



```
INDOOR ADDRESS SET
(START) → (END)
(00) → (00)
```



```
CONNECTION: MASTER
STANDBY P: AUTO
WHM1: NOT USE
LHM1: 10L, ODU, 00-00
```

On the initial setting screen, press the (▼) button and the screen will be switched to the wattmeter / gas meter property setting screen.

When the item of the wattmeter you want to set is blinking, press the SELECT button, and the screen will be switched to the detailed setting screen.

Set gas consumption per pulse → Set the connected indoor unit address in order.

- Set gas consumption per pulse (LHM L / PULSE SELECT).
: Please enter a value shown in the gas meter as the gas consumption recognized per pulse.

- Set the connected indoor unit address (INDOOR ADDRESS SET).

: Enter the address of the indoor unit connected to the gas meter.

※After the initial installation, address setting of indoor unit connected to each port shall not be changed. If it is changed, previous data cannot be used.

- Set connected indoor address (INDOOR ADDRESS SET)
: Enter the indoor address connected to applicable wattmeter.

After setting the item, press the SELECT button to save the settings, and then move to the next step.

Configuration information is reflected in the detailed setting window.

After setting every gas meter, press the menu button to save the settings, and then move to the initial screen.

• When setting the properties of the CT-type wattmeter (WHM1)

CONNECTION : MASTER
STANDBY P: AUTO
WHM1: NOT USE
LHM1: NOT USE

On the initial setting screen, press the (▼) button and then will be switched to the wattmeter / gas meter property setting screen.

CONNECTION : MASTER
STANDBY P: AUTO
WHM1: NOT USE
LHM1: NOT USE

When the item of the wattmeter you want to set is blinking, press the SELECT button, and the screen will be switched to the detailed setting screen.

* WHM W / PULSE SELECT *
1. NOT USE
2. 1 W / PULSE
3. 2 W / PULSE DOWN

On the screen of the power consumption per pulse, press the (▼) button to select the item of CT/PT.

* WHM W / PULSE SELECT *
7. 10 W / PULSE
8. 100 W / PULSE
9. CT / PT

When the item of CT/PT is blinking, press the SELECT button, and the screen will be switched to the screen where CT&PULSE RATIO SET is entered.

CT & PULSE RATIO SET
CT : 00000 , Pr : 00000
WHM1 [Pulse / kWh]

It proceeds in the order of Set CT, device constant → Set power consumption device → Set connected indoor address.

- CT, calibrating constant setting (CT&PULSE RATIO SET)

*CT: As the device to reduce the current so that the measuring device can take the measurement, enter the rate indicated on the product to the CT item.

Ex) When using 100:1 CT, enter 100 to the CT item.

*Pr: As the device constant value, it is displayed as ratio of output pulse per power consumption of wattmeter. For the device constant value, enter the value displayed on wattmeter [Pulse/kWh]

Ex) When using 2 500 [Pulse/kWh] wattmeter, enter 2 500 to Pr item.

- Power consumption device setting (CONSUME UNIT SELECT)

: Check whether the product with watt-hour meter installed is outdoor unit or indoor unit first, and perform the setting.

* If one indoor unit is set to use both outdoor unit power distribution and indoor unit power distribution, wattage value is displayed as indoor unit wattage value by summing outdoor unit power distribution value and indoor unit power distribution value.

- Connected indoor unit address setting (INDOOR ADDRESS SET)
: Input the address of the indoor unit connected to the corresponding watt-hour meter.

* After the initial installation, address setting of indoor unit connected to each port shall not be changed. If it is changed, previous data cannot be used.

After setting the item, press the SELECT button to save the settings, and then move to the next step.

CONSUME UNIT SELECT
1. OUTDOOR UNIT
2. INDOOR UNIT

INDOOR ADDRESS SET
(START) → (END)
(00) → (00)

CONNECTION : MASTER
STANDBY P: AUTO
WHM1 : CT / PT, IDU, 00 - 00
LHM1: NOT USE

The set information is reflected on the detailed setting window.

After setting every Watt-hour meter, press the menu button to save the settings, and then move to the initial screen.

• When setting the properties of the VT & Pr gas meter (LHM1)

```
CONNECTION: MASTER
STANDBY P: AUTO
WHM1: NOT USE
LHM1: NOT USE
```

On the initial setting screen, press (▼) button, and the screen will be switched to the wattmeter/gas meter property setting screen.

```
CONNECTION: MASTER
STANDBY P: AUTO
WHM1: NOT USE
LHM1: NOT USE
```

When the item of gas meter you want to set is blinking, press the SELECT button, and the screen will be switched to the detailed setting window.

```
*LHM L/PULSE SELECT*
1. NOT USE
2. 1 L/PULSE
3. 2 L/PULSE DOWN
```

On the gas consumption setting screen, press (▼) button to select the item of VT & Pr.

```
*LHM L/PULSE SELECT*
7. 10 L/PULSE UP
8. 100 L/PULSE
9. VT & Pr
```

When the item of VT & Pr is blinking, press the SELECT button, and the screen will be switched to the screen where VT & PULSE RATIO SET is entered.

```
VT & PULSE RATIO SET

VT : 00000 , Pr : 00000
LHM1 [Pulse / kL]
```

Set VT & Pr → Set the connected indoor unit address in order.

- Set VT type (VT & PULSE SELECT).

: You may set a value of gas meter per pulse as VT & Pr is set.

If $VT = P_1$, $Pr = P_2$,

$$* \text{Gas consumption per pulse} = P_1 * \frac{1000}{P_2} (l / \text{Pulse})$$

Example) If you want to use 1 000 l / pulse gas meter, Pr is set to a 1 with VT: 1.

- Connected indoor unit address setting (INDOOR ADDRESS SET)

: Input the address of the indoor unit connected to the corresponding watt-hour meter.

※ After the initial installation, address setting of indoor unit connected to each port shall not be changed. If it is changed, previous data cannot be used.

After setting the item, press the SELECT button to save the settings, and then move to the next step.

```
INDOOR ADDRESS SET
(START) → (END)
(00) → (00)
```

Information on the set items and values is reflected in the detailed settings window.

```
CONNECTION: MASTER
STANDBY P: AUTO
WHM1: NOT USE
LHM1: VT & Pr, ODU, 00-00
```

After setting every gas meter, press the menu button to save the settings, and then move to the initial screen.

How to Use Power Indicator (EHP products)

Description of power indicator function

The power indicator is the product that provides the function of displaying the power consumed in the LG Electronics System Air Conditioner by distributing by each connected indoor unit.


- Wattmeter that can be interlocked: As the cumulative wattmeter, it can interlock with pulse output product.
- Number of units that can be interlocked: Maximum of 128 rooms (127 rooms if standby power is displayed)
- LCD power display function: Instant power, cumulative power and error are displayed through the LCD.
- Data save function during power outage: This function saves the data in an event of unexpected power outage.
- LED display function: When power, communication or pulse is connected, the applicable LED flashes so that the operation can be checked.

How to distribute electric energy

- Power consumption of 1 room indoor unit = Total power consumption of outdoor unit x (Weight of indoor unit / Weight of all indoor units)
- Weight of the indoor unit can be calculated based on the information including whether the product operates, product capacity and whether the compressor operates and indoor fan level etc.

Checking electric energy display

The electric energy can be checked by pressing the MENU button from the default screen to check in the order of instantaneous power and accumulative power.

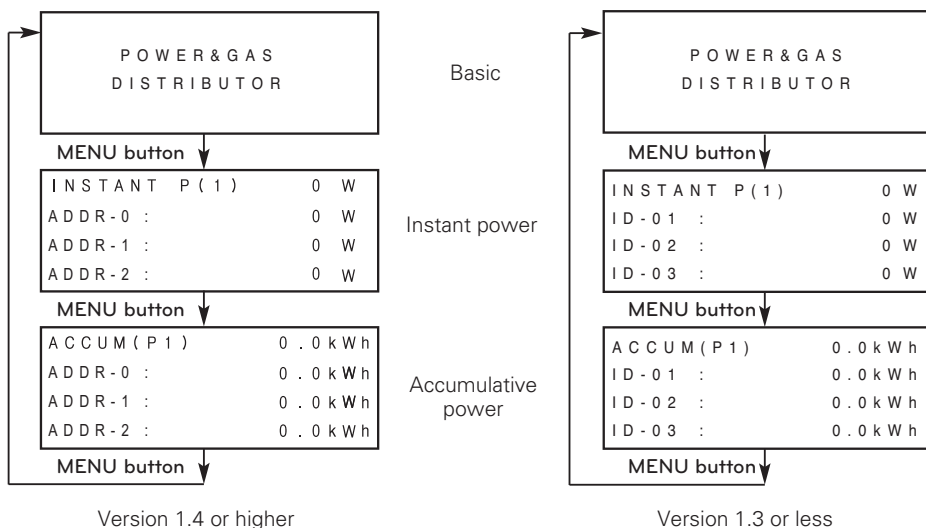

! CAUTION


- This measuring system uses a proprietary method unique to LG Electronics and has not legal basis.
- In 1.3 or less version, each indoor unit number increases sequentially according to the set number of units.
- In 1.4 or higher version, it displays the address of the indoor unit set for each indoor unit number

• Checking instantaneous power (Instantaneous Power)

Instantaneous power: As the power consumption per minute, it is refreshed every 1 minute.

- In 1.3 or less version, it displays the power amount consumed in 1 minute.
- In 1.4 or higher version, it displays instantaneous power consumption.
- *Example of instantaneous power consumption
: When 100 W is displayed, if it is used with the current power consumption for 1 hour, 100 Wh will be consumed.

- Screen Description

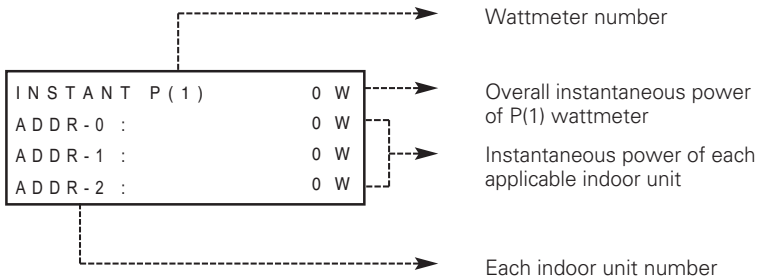

- Press the LEFT/RIGHT (◀, ▶) button to increase/decrease the wattmeter number.
- Press the UP/DOWN (▲, ▼) button to check the electric energy of all indoor units connected.
- In 1.3 or less version, each indoor unit number increases sequentially according to the set number of units.
- In 1.4 or higher version, it displays the address of the indoor unit set for each indoor unit number.

- If the standby power is set to MANUAL, the last page is displayed as follows.


INSTANT P (1)	0 W
STBP :	0 W
DOWN	

• Checking accumulative power

Accumulative power: After the power is initially connected to the power indicator, the values are accumulated.

If the displayed electric energy is 999 999 or above, it will return to 0.

• Screen Description

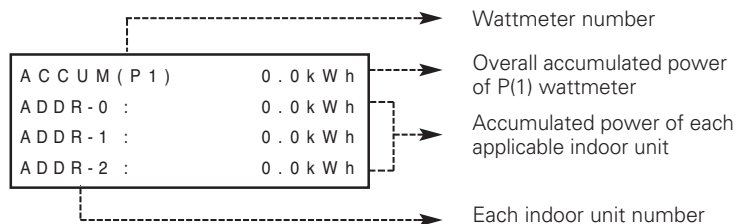

- Press the LEFT/RIGHT (◀, ▶) button to increase/decrease the wattmeter number.
- Press the UP/DOWN (▲, ▼) button to check the electric energy of all indoor units connected.
- In 1.3 or less version, each indoor unit number increases sequentially according to the set number of units.
- In 1.4 or higher version, it displays the address of the indoor unit set for each indoor unit number.
- If the standby power is set to MANUAL, the last page is displayed as follows.

ACCUM (P 1)	0 . 0 k W h
STBP :	0 . 0 k W h
DOWN	

- In 1.4 or higher version, if you press left/right button(◀, ▶), it is displayed as follows in the last page. You can check the entire indoor units' accumulated power for each address in this screen.

ACCUM (ALL)	
ADDR - 0 :	0 . 0 k W h
ADDR - 1 :	0 . 0 k W h
ADDR - 2 :	0 . 0 k W h

! CAUTION

- According to watt-hour meter and PDI installation time, the final accumulated value displayed by each may be different.
- During the ACP/Smart interface, if you set the e-mail, e-mail alarm is sent when wattage distribution cannot be made by special conditions.
- PDI accumulated power value is not initialized.
- When you change the indoor unit address, you can check the accumulated power amount of each indoor unit address that is not set to each port in ACCUM(ALL) screen.

How to Use the Power Indicator (GHP products)

Description of the Power Indicator Function

The power indicator is a product that provides the function of displaying the power consumed in the LG Electronics System Air Conditioner distributed to each connected indoor unit.

- Wattmeter that can be interlocked: As the cumulative wattmeter, it can interlock with pulse output product.
- Gas meter that can be interlocked: As the cumulative gas meter, it can interlock with pulse output product.
- Number of indoor units that can be interlocked: Maximum of 64 units
- LCD display function: Instant power/cumulative power and instant gas/cumulative gas and error are displayed through the LCD.
- Data save function during power outage: This function saves the data in an event of unexpected power outage.
- LED display function: When power, communication or pulse is connected, the applicable LED blinks so that the operation can be checked.


How to distribute electric energy or gas usage

- Power consumption of 1 room indoor unit(gas) = Total power consumption of outdoor unit(gas) × (Weight of indoor unit / Weight of all indoor units)
- Weight of each indoor unit can be calculated based on the information including whether the product operates, product capacity and whether the compressor operates and indoor fan level, etc.

Checking electric energy and gas consumption display

The electric energy and gas consumption can be checked by pressing the MENU button from the default screen to check in the order of instantaneous power and accumulative power.

On the screen of instantaneous power, accumulative power, press the (▶) button to check the instantaneous gas, and accumulative gas.

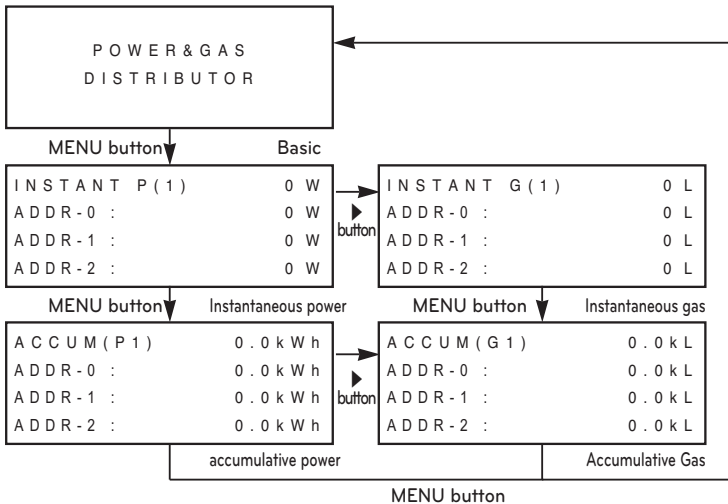

CAUTION

- This measuring system uses a proprietary method unique to LG Electronics without legal basis.

• Checking the instantaneous power


Instantaneous power: It is the power consumption value for one minute which is updated every 1 minute.

- In 1.3 or less version, it displays the power amount consumed in 1 minute.
- In 1.4 or higher version, it displays instantaneous power consumption.

*Example of instantaneous power consumption

: When 100 W is displayed, if it is used with the current power consumption for 1 hour, 100 Wh will be consumed.

- Screen Description

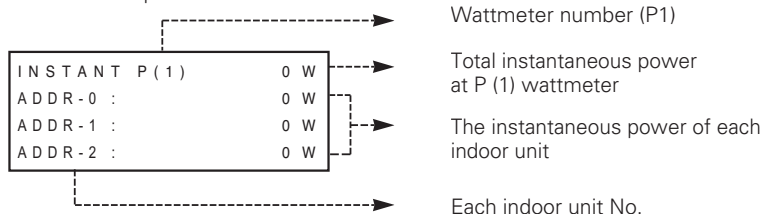


- Press the LEFT/RIGHT (◀, ▶) button to increase/decrease the wattmeter meter number.
- Press the UP/DOWN (▲, ▼) button to check the electric energy of all indoor units connected.
- In 1.3 or less version, each indoor unit number increases sequentially according to the set number of units.
- In 1.4 or higher version, it displays the address of the indoor unit set for each indoor unit number.
- When you set Standby power to MANUAL, the last page will display as below.

INSTANT P (1)	0 W
STBP	0 W
	DOWN

• Confirming the instantaneous gas consumption (Instantaneous Gas)

Instantaneous gas: It is a gas consumption value for 1 minute which is refreshed every 1 minute.

- Screen Description

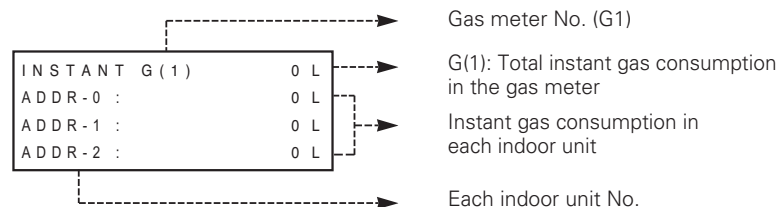


- Press the LEFT/RIGHT (◀, ▶) button to increase/decrease the gas meter number.
- Press the UP/DOWN (▲, ▼) button to check the gas energy of all indoor units connected.
- In 1.3 or less version, each indoor unit number increases sequentially according to the set number of units.
- In 1.4 or higher version, it displays the address of the indoor unit set for each indoor unit number.
- ※ In the case of gas on, standby gas usage is not displayed separately because there is no standby gas.

• Checking the accumulative power (Accum Power)

Accumulative power: Values have been continuously accumulated since the initial power is applied on the power indicator. When wattage is more than 999 999, it will return to "0".

- Screen Description

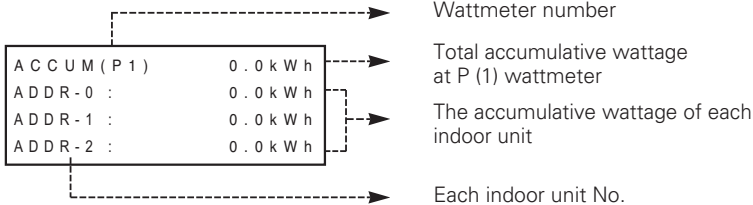


- Press the LEFT/RIGHT (◀, ▶) button to increase/decrease the wattmeter number.
- Press the UP/DOWN (▲, ▼) button to check the electric energy of all indoor units connected.
- In 1.3 or less version, each indoor unit number increases sequentially according to the set number of units.
- In 1.4 or higher version, it displays the address of the indoor unit set for each indoor unit number.
- If the standby power is set to MANUAL, the last page is displayed as follows.

ACCUM (P 1)	0 . 0 k W h
STBP :	0 . 0 k W h
DOWN	

• Checking the accumulative gas consumption (Accumulative Gas)

Instant gas: Values have been accumulated since the initial power is applied at the gas meter. When the displayed gas usage is more than 999 999, it will return to "0".

- Screen Description

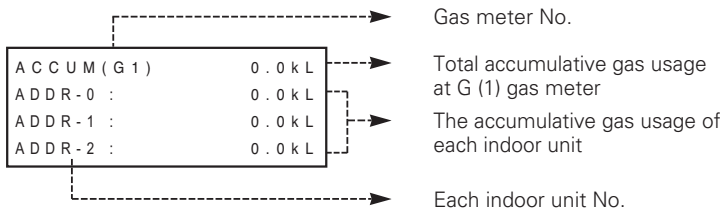

- Press the LEFT/RIGHT (◀, ▶) button to increase/decrease the wattmeter number.
- Press the UP/DOWN (▲, ▼) button to check the gas energy of all indoor units connected.
- In 1.3 or less version, each indoor unit number increases sequentially according to the set number of units.
- In 1.4 or higher version, it displays the address of the indoor unit set for each indoor unit number.
- * In the case of gas on, standby gas usage is not displayed separately because there is no standby gas.
- In 1.4 or higher version, if you press left/right button(◀, ▶), it is displayed as follows in the last page. In this screen, you can check the accumulated power amount (gas usage amount) of each address for the entire indoor units.

ACCUM (ALL)	
ADDR - 0 :	0 . 0 k W h
ADDR - 1 :	0 . 0 k W h
ADDR - 2 :	0 . 0 k W h

⚠ CAUTION

- According to watt-hour meter/gas meter and PDI installation time, the final accumulated value displayed by each may be different.
- During the ACP/Smart interface, if you set the e-mail, e-mail alarm is sent when wattage and gas usage amount distribution cannot be made by special conditions.
- PDI accumulated power value and accumulated gas usage value are not initialized.
- When you change the indoor unit address, you can check the accumulated power amount (gas usage amount) of each indoor unit address that is not set to each port in ACCUM(ALL) screen.

Error display

If the communication with the air conditioner is not smooth or if the pulse signal is not detected from the wattmeter, the error will be displayed on the LCD.

• Communication error display

- If there is no communication with the indoor unit product for 3 minutes, it displays an error.
- During communication error status, power consumption (gas consumption) is reflected on the accumulative power (accumulative gas).
- No power(gas) is distributed to each indoor unit. When communication is resumed, accumulative power (gas) is distributed to each indoor unit.

```

      ERROR - 01
NO COMMUNICATION
WITH AIRCONDITIONER
IDU ADDRESS  [00-07]
    
```

• No signal error in the wattmeter (gas meter)

- Error is displayed when there is no signal from the pulse detection in the option-set wattmeter (gas meter) (When no pulse is detected even when 1 or more unit doors are operating)

```

      ERROR - 02
NO SIGNAL FROM WHM1
    
```


⚠ CAUTION

- In the case of no signal error in the wattmeter (gas meter)
As outdoor unit power consumption (gas consumption) is low, if no pulse is displayed for a certain time, error may be displayed. As soon as pulse is applied, error indication disappears.

Operating condition display

LED condition display

- Power LED (Red): When on, it shows that the product is in operation.
- Communication LED (Green, Yellow)
- : Central controller, 485 communication condition are displayed.
 Green LED ON: Signal sent
 Yellow LED ON: Signal received
- The wattmeter (gas meter) receives pulse (yellow): The connected wattmeter (gas meter) displays the pulse signal reception status.
 When pulse signal is input, the LED blinks (once per pulse).

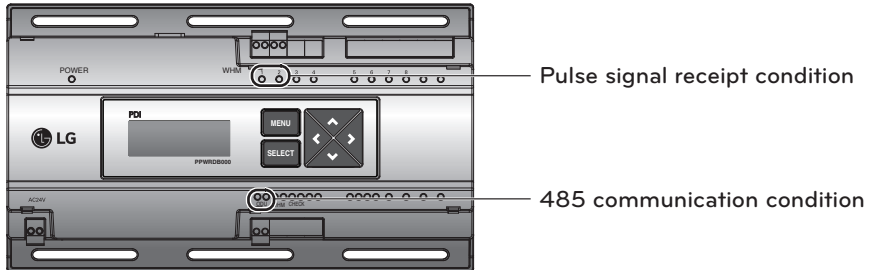

- When the power is connected initially, all LEDs are turned on.
- If the pulse signal receipt condition display LED is continuously ON, it could mean that there is a short circuit between the two terminals. Please check.

(If you are using a mechanical gas meter, depending on when operation is stopped, the LED may be on sometimes.)



[Representative] LG Electronics Inc. EU Representative
Krijgsman 1, 1186 DM Amstelveen, The Netherlands
[Manufacturer] LG Electronics Inc. Changwon 2nd factory
84, Wanam-ro, Seongsan-gu, Changwon-si, Gyeongsangnam-do, KOREA