


Additional Information

Specifications

 
Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit. Networked standby : 0.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 204.5 mm x 278 mm x 285.5 mm
Net Weight	Approx. 2.7 kg
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	230 W

Design and specifications are subject to change without notice.

How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

Replacement of battery

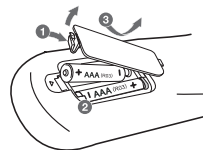

SIMPLE MANUAL

DVD MINI HI-FI SYSTEM

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

 
MODEL
DM5360



www.lg.com




Front Panel

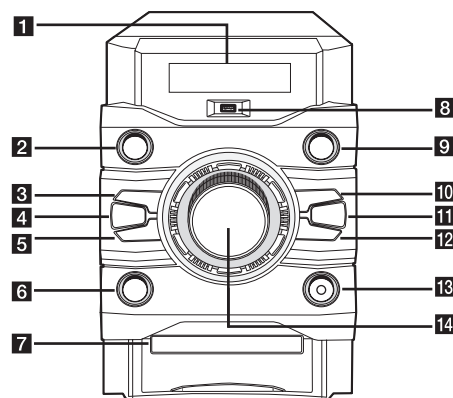

- 1** Display window
- 2** (Standby/On)
Turns the power on or off.
- 3** (Skip/Search)
- Skips to the next track/file/chapter.
- Tunes in the desired radio station.
- 4** **B. BLAST** (Bass Blast)
Press to select BASS effect directly.


- 5** (Skip/Search)
- Skips to the previous track/file/chapter.
- Tunes in the desired radio station.
- 6** **MIC VOLUME** (Microphone Volume)
Adjusts Mic volume.
- 7** Disc tray
- 8** USB Port
You can play sound files by connecting the USB device.
- 9** **FUNCTION**
Selects the function and input source.
- 10** (Play/Pause)
- Starts or pauses playback.
- Selects Stereo/Mono.
- 11** **REGION EQ**
Chooses region equalizer.
- 12** (Open/Close)
Opens and closes the disc tray.
- 13** **MIC** (Microphone) jack
Connects a microphone.
- 14** **MASTER VOLUME**
Adjusts speaker volume.

 Rear Panel

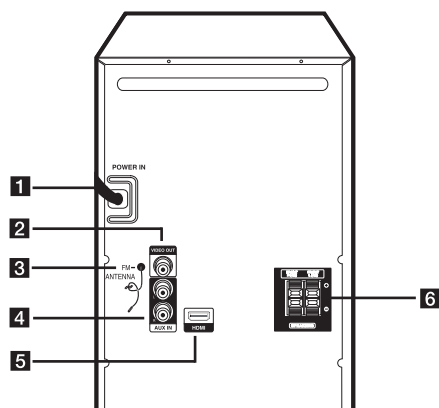

- 1** **POWER IN**
- 2** **VIDEO OUT**
Connects to TV.
- 3** **ANTENNA** (FM)
- 4** **AUX IN** (L/R)
Connects an auxiliary device.
- 5** **HDMI**
Connects to TV.
- 6** **SPEAKERS** Terminal

 Speaker Connection

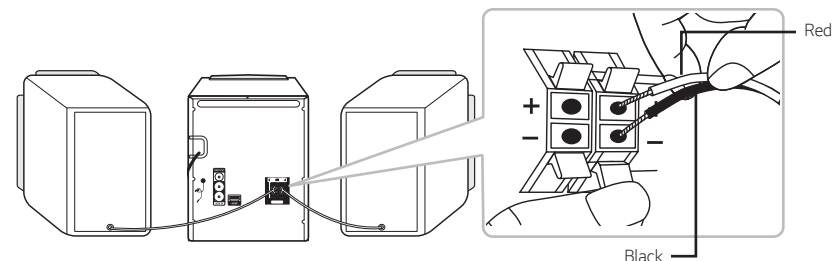


1 TV Connection

Connect with the unit and TV using HDMI.

- 1** Connect the unit to the TV using HDMI cable.
- 2** Set the input selector to HDMI on the TV.
- 3** Follow the instructions on the TV screen using remote control.

2 Home Menu

 Home menu appears on the TV screen. Enjoy various functions on the unit.

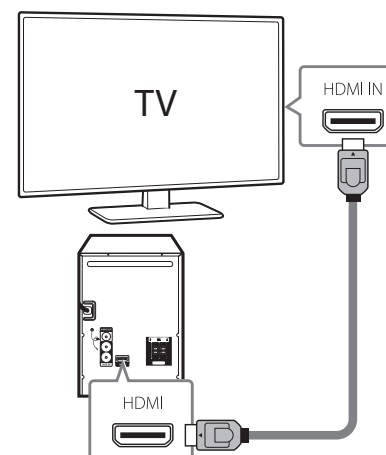

For more information, download the online owner's manual. <http://www.lg.com>